

SINAMICS G120D

Control Units CU240D-2

Control Units CU250D-2

List Manual · 01/2013



SINAMICS

SIEMENS

SIEMENS

SINAMICS

SINAMICS G120D

List Manual

Parameters

1

Function diagrams

2

Faults and alarms

3

Appendix

A

List of abbreviations

B

Index

C

Valid for	Firmware version
Control Units	
CU240D-2_DP	4.6
CU240D-2_DP_F	4.6
CU240D-2_PN	4.6
CU240D-2_PN_F	4.6
CU250D-2_DP_F	4.6
CU250D-2_PN_F	4.6

A5E01133914B AE

01/2013

Safety notices

This Manual contains information which you must observe to ensure your own personal safety as well as to avoid material damage. The notices referring to your personal safety are highlighted in the manual by a warning triangle; notices that relate to material damage only have no warning triangle. The notices shown below are graded according to the level of danger (from most to least hazardous):



Danger

Indicates that death or serious injury **will** result if proper precautions are not taken.



Warning

Indicates that death or serious injury **may** result if proper precautions are not taken.



Caution

With a warning triangle, indicates that minor injury **may** result if proper precautions are not taken.

Caution

Without a warning triangle, indicates that material damage may result if proper precautions are not taken.

Notice

Indicates that an undesirable result or state may occur if the corresponding instructions are not observed.

If more than one level of danger is simultaneously applicable, the warning notice for the highest level is used. A warning on a warning triangle indicating possible personal injury may also include a warning relating to material damage.

Qualified personnel

The associated device/system may only be installed and operated in conjunction with this documentation. The equipment/system may only be commissioned and operated by **qualified personnel**. For the purpose of the safety information in this documentation, a "qualified person" is someone who is authorized to energize, ground, and tag equipment, systems, and circuits in accordance with established safety procedures.

Proper Use of Siemens Products

Note the following:



Warning

Siemens products are only permitted to be used for the applications specified in the catalog and in the associated technical documentation. If third-party products and components are to be used, they must be recommended or approved by Siemens. To ensure proper and safe operation of these products, they must be correctly transported, stored, set up, mounted, installed, commissioned, operated, and maintained. The permissible environmental conditions must be maintained. Information in the associated documentation must be observed.

Trademarks

All names identified with © are registered trademarks of Siemens AG. Any other names used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Copyright Siemens AG 2012 - 2013 All Rights Reserved

The reproduction, transmission, or use of this document or its contents is not permitted without express written permission. Offenders will be liable for damages. All rights reserved, especially those relating to granting patents or GM registration.

Siemens AG
Industry Sector
Postfach 4848
90327 NUREMBERG
GERMANY

Liability Disclaimer

We have checked that the contents of this document correspond to the hardware and software described. Nevertheless, we cannot assume responsibility for any deviations that may arise. The data in this document is regularly checked and any necessary corrections included in subsequent editions.

© Siemens AG 2012 - 2013
Subject to change without prior notice.

Table of contents

1	Parameters	1-7
1.1	Overview of parameters	1-8
1.1.1	Explanation of the parameter list	1-8
1.1.2	Number ranges of parameters	1-19
1.2	List of parameters	1-22
1.3	Command and drive data sets - overview	1-541
1.3.1	Command data sets (CDS)	1-541
1.3.2	Drive data sets (DDS)	1-544
1.3.3	Motor data sets (MDS)	1-549
1.3.4	Power unit data sets (PDS)	1-551
1.3.5	Encoder Data Sets (EDS)	1-551
1.4	BICO parameters (connectors/binectors)	1-552
1.4.1	Binector inputs (BI)	1-552
1.4.2	Connector inputs (CI)	1-556
1.4.3	Binector outputs (BO)	1-558
1.4.4	Connector outputs (CO)	1-560
1.4.5	Connector/binector outputs (CO/BO)	1-565
1.5	Parameters for write protection and know-how protection	1-567
1.5.1	Parameters with "WRITE_NO_LOCK"	1-567
1.5.2	Parameters with "KHP_WRITE_NO_LOCK"	1-567
1.5.3	Parameters with "KHP_ACTIVE_READ"	1-568
1.6	Quick commissioning (p0010 = 1)	1-569
2	Function diagrams	2-571
2.1	Table of contents, function diagrams	2-572
2.2	Explanations on the function diagrams	2-578
2.3	Overviews	2-583
2.4	Input/output terminals	2-587
2.5	PROFenergy	2-593
2.6	PROFdrive communication (PROFIBUS/PROFINET)	2-596
2.7	Internal control/status words	2-613
2.8	Brake control	2-632
2.9	Safety Integrated Basic Functions	2-634
2.10	Safety Integrated Extended Functions	2-640
2.11	Safety Integrated PROFIsafe	2-652
2.12	Setpoint channel	2-655
2.13	Basic positioner (EPOS)	2-666

2.14	Position control	2-682
2.15	Encoder evaluation	2-687
2.16	Vector control	2-694
2.17	Free function blocks	2-715
2.18	Technology functions	2-736
2.19	Technology controller	2-739
2.20	Signals and monitoring functions	2-744
2.21	Faults and alarms	2-755
2.22	Data sets	2-761
3	Faults and alarms	3-767
3.1	Overview of faults and alarms	3-768
3.1.1	General information	3-768
3.1.2	Explanation of the list of faults and alarms	3-772
3.1.3	Number ranges of faults and alarms	3-775
3.2	List of faults and alarms	3-777
A	Appendix	A-891
A.1	ASCII table (excerpt)	A-892
A.2	Motor code list	A-892
B	List of abbreviations	B-893
C	Index	C-899

Parameters

1

Contents

1.1	Overview of parameters	1-8
1.2	List of parameters	1-22
1.3	Command and drive data sets - overview	1-541
1.4	BICO parameters (connectors/binectors)	1-552
1.5	Parameters for write protection and know-how protection	1-567
1.6	Quick commissioning (p0010 = 1)	1-569

1.1 Overview of parameters




1.1.1 Explanation of the parameter list

Basic structure of parameter descriptions

The data in the following example has been chosen at random. The table below contains all the information that can be included in a parameter description. Some of the information is optional.

The parameter list (See Chapter 1.2) is structured as follows:

----- **Start of example** -----

pxxxx[0...n]	BICO: Long parameter name / short parameter name			
CU/PM variants	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32	
	Can be changed: C(x), U, T	Scaling: p2002	Dyn. index: CDS, p0170	
	Unit group: 6_2	Unit selection: p0505	Function diagram: 8070	
	Min 0.00 [Nm]	Max 10.00 [Nm]	Factory setting 0.00 [Nm]	
Description:	Text			
Values:	0: Name and meaning of value 0 1: Name and meaning of value 1 2: Name and meaning of value 2 etc.			
Recommendation:	Text			
Index:	[0] = Name and meaning of index 0 [1] = Name and meaning of index 1 [2] = Name and meaning of index 2 etc.			
Bit array:	Bit	Signal name	1 signal	0 signal
	00	Name and meaning of bit 0	Yes	No
	01	Name and meaning of bit 1	Yes	No
	02	Name and meaning of bit 2 etc.	Yes	No
				FP
				8060
				-
				8052
Dependency:	Text See also: pxxxx, rxxxx See also: Fxxxx, Axxxx			
Danger:	Warning:	Caution:	Safety notices with a warning triangle	
				
Caution:	Notice:	Safety notices without a warning triangle		
Note:	Information which might be useful.			

----- **End of example** -----

The individual pieces of information are described in detail below.

pxxxx[0...n] Parameter number

The parameter number is made up of a "p" or "r", followed by the parameter number and the index or bit array (optional).

Examples of representation in the parameter list:

- p... Adjustable parameters (read and write)
- r... Display parameters (read-only)
- p0918 Adjustable parameter 918
- p2051[0...13] Adjustable parameter 2051, indices 0 to 13
- p1001[0...n] Adjustable parameter 1001, indices 0 to n (n = configurable)
- r0944 Display parameter 944
- r2129.0...15 Display parameter 2129 with bit array from bit 0 (smallest bit) to bit 15 (largest bit)

Other examples of the notation in the documentation:

- p1070[1] Adjustable parameter 1070, index 1
- p2098[1].3 Adjustable parameter 2098, index 1 bit 3
- p0795.4 Adjustable parameter 795, bit 4

The following applies to adjustable parameters:

The parameter value as delivered is specified under "Factory setting" with the relevant unit in square brackets. The value can be adjusted within the range defined by "Min" and "Max".

The term "linked parameterization" is used in cases where changes to adjustable parameters affect the settings of other parameters.

Linked parameterization can occur, for example, as a result of the following actions and parameters:

- Setting PROFIBUS telegram (BICO interconnections)
p0922
- Setting component lists
p0230, p0300, p0301, p0400
- Calculate and pre-assign automatically
p0340, p3900
- Restoring factory settings
p0970

The following applies to display parameters:

The fields "Min", "Max" and "Factory setting" are specified with a dash "-" and the relevant unit in square brackets.

Note:

The parameter list can contain parameters that are not visible in the expert lists of the respective commissioning software (e.g. parameters for trace functions).

BICO technology: Long parameter name / short parameter name

The following abbreviations can appear in front of the BICO parameter name:

- BI: Binector Input
This parameter is used for selecting the source of a digital signal.
- BO: Binector Output
This parameter is available as a digital signal for interconnection with other parameters.
- CI: Connector Input
This parameter is used for selecting the source of an "analog" signal.
- CO: Connector Output
This parameter is available as an "analog" signal for interconnection with other parameters.
- CO/BO: Connector/Binector Output
This parameter is available as an "analog" and digital signal for interconnection with other parameters.

Note:

A BICO input (BI/CI) cannot be interconnected with just any BICO output (BO/CO, signal source).

When interconnecting a BICO input using the commissioning software, only the corresponding possible signal sources are listed.

Function diagrams 1020 ... 1030 explain the symbols for BICO parameters and how to deal with BICO technology.

CU/PM variants

Indicates for which Control Units (CU) and/or Power Modules (PM) the parameter is valid. If no CU or PM is listed, then the parameter is valid for all variants.

The following information relating to "CU" and "PM" can be displayed under the parameter number:

Table 1-1 Information in the "CU/PM variants" field

CU/PM variants	Significance
	All Control Units have this parameter.
CU240D-2_DP	CU240D-2 with PROFIBUS interface
CU240D-2_DP_F	CU240D-2 with PROFIBUS interface and PROFIsafe
CU240D-2_PN	CU240D-2 with PROFINET interface
CU240D-2_PN_F	CU240D-2 with PROFINET interface and PROFIsafe
CU250D-2_DP	CU250D-2 with PROFIBUS interface
CU250D-2_DP_F	CU250D-2 with PROFIBUS interface and PROFIsafe
CU250D-2_PN	CU250D-2 with PROFINET interface
CU250D-2_PN_F	CU250D-2 with PROFINET interface and PROFIsafe

Access level

Specifies the minimum access level required to be able to display and change the relevant parameter. The required access level can be set using p0003.

The system uses the following access levels:

- 1: Standard (not adjustable, included in p0003 = 3)
- 2: Extended (not adjustable, included in p0003 = 3)
- 3: Expert
- 4: Service
Parameters with this access level are password protected.

Note:

Parameter p0003 is CU-specific (available on the Control Unit).

A higher access level will also include the functions of the lower levels.

Calculated

Specifies whether the parameter is influenced by automatic calculations.

p0340 determines which calculations are to be performed:

- p0340 = 1 includes the calculations from p0340 = 2, 3, 4, 5.
- p0340 = 2 calculates the motor parameters (p0350 ... p0360, p0625).
- p0340 = 3 includes the calculations from p0340 = 4, 5.
- p0340 = 4 only calculates the controller parameters.
- p0340 = 5 only calculates the controller limits.

Note:

For p3900 > 0, p0340 = 1 is also called automatically.

After p1900 = 1, 2, p0340 = 3 is also called automatically.

Parameters with a reference to p0340 after "Calculated", depend on the Power Module being used and the motor. In this case, the values at "Factory setting" do not correspond to the actual values because these values are calculated during the commissioning. This also applies to the motor parameters.

Data type

The information on the data type can consist of the following two items (separated by a slash):

- First item
Data type of the parameter.
- Second item (for binector or connector input only)
Data type of the signal source to be interconnected (binector/connector output).

Parameters can have the following data types:

- | | | |
|-------------------|-------|------------------------------|
| • Integer8 | I8 | 8-bit integer |
| • Integer16 | I16 | 16-bit integer |
| • Integer32 | I32 | 32-bit integer |
| • Unsigned8 | U8 | 8 bits without sign |
| • Unsigned16 | U16 | 16 bits without sign |
| • Unsigned32 | U32 | 32 bits without sign |
| • FloatingPoint32 | Float | 32-bit floating point number |

Depending on the data type of the BICO input parameter (signal sink) and BICO output parameter (signal source), the following combinations are possible when creating BICO interconnections:

Table 1-2 Possible combinations of BICO interconnections

BICO output parameter	BICO input parameter			
	CI parameter			BI parameter
	Unsigned32 / Integer16	Unsigned32 / Integer32	Unsigned32 / FloatingPoint32	Unsigned32 / Binary
CO: Unsigned8	x	x	–	–
CO: Unsigned16	x	x	–	–
CO: Unsigned32	x	x	–	–
CO: Integer16	x	x	r2050	–
CO: Integer32	x	x	–	–
CO: FloatingPoint32	x	x	x	–
BO: Unsigned8	–	–	–	x
BO: Unsigned16	–	–	–	x
BO: Unsigned32	–	–	–	x
BO: Integer16	–	–	–	x
BO: Integer32	–	–	–	x
BO: FloatingPoint32	–	–	–	–
Legend:				
	x: BICO interconnection permitted			
	–: BICO interconnection not permitted			

Changeable

The "-" sign indicates that the parameter can be changed in any object state and that the change will be effective immediately.

The information "C(x), T, U" ((x): optional) means that the parameter can be changed only in the specified drive unit state and that the change will not take effect until the unit switches to another state. One or more states are possible.

The following states may be specified:

- C(x) Commissioning C: **C**ommissioning

Drive commissioning is in progress (p0010 > 0).

Pulses cannot be enabled.

The parameter can only be changed in the following drive commissioning settings (p0010 > 0):

C: Changeable for all settings p0010 > 0.

C(x): Only changeable for the settings p0010 = x.

A modified parameter value does not take effect until the device commissioning mode is exited with p0010 = 0.

- U Operation U: Run
Pulses are enabled.
- T Ready T: Ready to run
The pulses are not enabled and the status "C(x)" is not active.

Scaling

Specification of the reference variable with which a signal value is automatically converted for a BICO interconnection.

The following reference variables are available:

- p2000 ... p2006: Reference speed, reference voltage, etc.
- PERCENT: 1.0 = 100 %
- 4000H: 4000 hex = 100 %

Dyn. index (dynamic index)

For parameters with a dynamic index [0...n], the following information is specified here:

- Data set (if available).
- Parameter for the number of indices (n = number - 1).

The following information can be contained in this field:

- "CDS, p0170" (Command Data Set, CDS count)

Example:

p1070[0] → main setpoint [command data set 0]

p1070[1] → main setpoint [command data set 1], etc.

- "DDS, p0180" (Drive Data Set, DDS count)
- "EDS, p0140" (Encoder Data Set, EDS count)
- "MDS, p0130" (Motor Data Set, MDS count)
- "PDS, p0120" (Power unit Data Set, PDS count)

Data sets can only be created and deleted when p0010 = 15.

Note:

Information on the data sets can be taken from the following references:

- *Operating Instructions* SINAMICS G120D Frequency Converter with CU240D-2 Control Units.
 - *Operating Instructions* SINAMICS G120D Frequency Converter with CU250D-2 Control Units.
-

Unit group and unit selection

The standard unit of a parameter is specified in square brackets after the values for "Min", "Max", and "Factory setting".

For parameters where the unit can be switched over, the specifications for "Unit group" and "Unit selection" determine the group to which this parameter belongs and with which parameter the unit can be changed over.

Example:

Unit group: 7_1, unit selection: p0505

The parameter belongs to unit group 7_1 and the unit can be switched over using p0505.

All the potential unit groups and possible unit selections are listed below.

Table 1-3 Unit group (p0100)

Unit group	Unit selection for p0100 =			Reference value for %
	0	1	2	
7_4	Nm	lbf ft	Nm	-
14_6	kW	hp	kW	-
25_1	kg m ²	lb ft ²	kg m ²	-
27_1	kg	lb	kg	-
28_1	Nm/A	lbf ft/A	Nm/A	-

Table 1-4 Unit group (p0505)

Unit group	Unit selection for p0505 =				Reference value for %
	1	2	3	4	
2_1	Hz	%	Hz	%	p2000
3_1	rpm	%	rpm	%	p2000
5_1	Vrms	%	Vrms	%	p2001
5_2	V	%	V	%	p2001
5_3	V	%	V	%	p2001
6_2	Arms	%	Arms	%	p2002
6_5	A	%	A	%	p2002
7_1	Nm	%	lbf ft	%	p2003
7_2	Nm	Nm	lbf ft	lbf ft	-
14_5	kW	%	hp	%	r2004
14_10	kW	kW	hp	hp	-
21_1	°C	°C	° F	° F	-
21_2	K	K	° F	° F	-
39_1	1/s ²	%	1/s ²	%	p2007

Table 1-5 Unit group (p0595)

Unit group	Unit selection for p0595 =		Reference value for %
	Value	Unit	
9_1	The values that can be set and the technological units are shown in p0595 (See Chapter 1.2).		

Function diagram

The parameter is included in this function diagram. The structure of the parameter function and its relationship with other parameters is shown in the specified function diagram.

Parameter values

Min	Minimum value of the parameter [unit]
Max	Maximum value of the parameter [unit]
Factory setting	Value when shipped [unit]
	In the case of a binector/connector input, the signal source of the default BICO interconnection is specified. A non-indexed connector output is assigned the index [0].
	A different value may be displayed for certain parameters (e.g. p1800) during first commissioning. Reason: The setting for these parameters is determined by the operating environment of the Control Unit (e.g. by the device type, or power unit).

Description

Explanation of the function of a parameter

Values

Lists the possible values of a parameter.

Recommendation

Information about recommended settings.

Index

The name and meaning of each individual index is specified for indexed parameters.

The following applies to the values (Min, Max, Factory setting) for indexed adjustable parameters:

- Min, Max:

The adjustment range and unit apply to all indices.

- Factory setting:

When all indices have the same factory setting, index 0 is specified with the unit to represent all indices.

When the indices have different factory settings, they are all listed individually with the unit.

Bit array

For parameters with bit arrays, the following information is provided about each bit:

- Bit number and signal name
- Meaning for signal states 1 and 0
- Function diagram (FP) (optional).
The signal is shown on this function diagram.

Dependency

Conditions that must be fulfilled in conjunction with this parameter. Also includes special effects that can occur between this parameter and others.

Where necessary, "See also:" indicates the following information:

- List of other relevant parameters to be considered.
- List of faults and alarms to be considered.

Safety notices

Important information that must be observed to avoid the risk of physical injury or material damage.

Information that must be observed to avoid any problems.

Information that the user may find useful.

Danger



The description of this safety notice can be found at the beginning of this manual (see **Safety notices**).

Warning



The description of this safety notice can be found at the beginning of this manual (see **Safety notices**).

Caution



The description of this safety notice can be found at the beginning of this manual (see **Safety notices**).

Caution

The description of this safety notice can be found at the beginning of this manual (see **Safety notices**).

Notice

The description of this safety notice can be found at the beginning of this manual (see **Safety notices**).

Note

Information that the user may find useful.

1.1.2 Number ranges of parameters

Note:

The following number ranges represent an overview for all of the parameters available for the SINAMICS drive family.

The parameters for the product described in this List Manual are described in detail in Chapter 1.2.

Parameters are grouped into the following number ranges:

Table 1-6 Number ranges for SINAMICS

Range		Description
from	to	
0000	0099	Display and operation
0100	0199	Commissioning
0200	0299	Power unit
0300	0399	Motor
0400	0499	Encoder
0500	0599	Technology and units, motor-specific data, probes
0600	0699	Thermal monitoring, maximum current, operating hours, motor data, central probe
0700	0799	Control Unit terminals, measuring sockets
0800	0839	CDS, DDS data sets, motor changeover
0840	0879	Sequence control (e.g. signal source for ON/OFF1)
0880	0899	ESR, parking, control and status words
0900	0999	PROFIBUS/PROFIdrive
1000	1199	Setpoint channel (e.g. ramp-function generator)
1200	1299	Functions (e.g. motor holding brake)
1300	1399	U/f control
1400	1799	Control modes
1800	1899	Gating unit
1900	1999	Power unit and motor identification
2000	2009	Reference values
2010	2099	Communication (fieldbus)
2100	2139	Faults and alarms
2140	2199	Signals and monitoring
2200	2359	Technology controller
2360	2399	Staging, hibernation

Table 1-6 Number ranges for SINAMICS, continued

Range		Description
from	to	
2500	2699	Position control (LR) and basic positioning (EPOS)
2700	2719	Reference values, display
2720	2729	Load gearbox
2800	2819	Logic operations
2900	2930	Fixed values (e.g. percentage, torque)
3000	3099	Motor identification results
3100	3109	Real time clock (RTC)
3110	3199	Faults and alarms
3200	3299	Signals and monitoring
3400	3659	Infeed closed-loop control
3660	3699	Voltage Sensing Module (VSM), Braking Module internal
3700	3779	Advanced Positioning Control (APC)
3780	3819	Synchronization
3820	3849	Friction characteristic curve
3850	3899	Functions (e.g. long stator)
3900	3999	Management
4000	4599	Terminal Board, Terminal Module (e.g. TB30, TM31)
4600	4699	Sensor Module
4700	4799	Trace
4800	4849	Function generator
4950	4999	OA application
5000	5169	Spindle diagnostics
5400	5499	System droop control (e.g. shaft generator)
5500	5599	Dynamic grid support (solar)
5600	5613	PROFlenergy
5900	6999	SINAMICS GM/SM/GL/SL
7000	7499	Parallel connection of power units
7500	7599	SINAMICS SM120
7700	7729	External signals
7770	7789	NVRAM, system parameters
7800	7839	EEPROM read/write parameters
7840	8399	Internal system parameters
8400	8449	Real time clock (RTC)
8500	8599	Data and macro management

Table 1-6 Number ranges for SINAMICS, continued

Range		Description
from	to	
8600	8799	CAN bus
8800	8899	Communication Board Ethernet (CBE), PROFIdrive
8900	8999	Industrial Ethernet, PROFINET, CBE20
9000	9299	Topology
9300	9399	Safety Integrated
9400	9499	Parameter consistency and storage
9500	9899	Safety Integrated
9900	9949	Topology
9950	9999	Diagnostics, internal
10000	10199	Safety Integrated
11000	11299	Free technology controller 0, 1, 2
20000	20999	Free function blocks (FBLOCKS)
21000	25999	Drive Control Chart (DCC)
50000	53999	SINAMICS DC MASTER (DC current control)
61000	61001	PROFINET

1.2 List of parameters

Product: SINAMICS G120D, Version: 4601800, Language: eng
 Objects: CU240D-2_DP, CU240D-2_DP_F, CU240D-2_PN, CU240D-2_PN_F, CU250D-2_DP_F, CU250D-2_PN_F

Parameter ID	Parameter Name	Access level	Calculated	Data type
r0002	Drive operating display / Drv op_display	Access level: 2	Calculated: -	Data type: Integer16
		Can be changed: -	Scaling: -	Dyn. index: -
		Units group: -	Unit selection: -	Func. diagram: -
		Min 0	Max 200	Factory setting -
Description:	Operating display for the drive.			
Value:	0: Operation - everything enabled 10: Operation - set "enable setpoint" = "1" (p1142) 12: Operation - RFG frozen, set "RFG start" = "1" (p1141) 13: Operation - set "enable RFG" = "1" (p1140) 14: Operation - MotID, excit. running 15: Operation - open brake (p1215) 16: Operation - withdraw braking with OFF1 using "ON/OFF1" = "1" 17: Operation - braking with OFF3 can only be interrupted with OFF2 18: Operation - brake on fault, remove fault, acknowledge 19: Operation - DC braking active (p1230, p1231) 21: Ready for operation - set "Operation enable" = "1" (p0852) 22: Ready for operation - de-magnetizing running (p0347) 31: Ready for switching on - set "ON/OFF1" = "0/1" (p0840) 35: Switching on inhibited - carry out first commissioning (p0010) 41: Switching on inhibited - set "ON/OFF1" = "0" (p0840) 42: Switching on inhibited - set "OC/OFF2" = "1" (p0844, p0845) 43: Switching on inhibited - set "OC/OFF3" = "1" (p0848, p0849) 45: Switching on inhibited - rectify fault, acknowledge fault, STO 46: Switching on inhibited - exit comm mode (p0010) 70: Initialization 200: Wait for booting/partial booting			
Dependency:	Refer to: r0046			
Notice:	For several missing enable signals, the corresponding value with the highest number is displayed.			
Note:	OC: Operating condition RFG: Ramp-function generator COMM: Commissioning MotID: Motor data identification			
p0003	Access level / Acc_level	Access level: 1	Calculated: -	Data type: Integer16
		Can be changed: C, U, T	Scaling: -	Dyn. index: -
		Units group: -	Unit selection: -	Func. diagram: -
		Min 3	Max 4	Factory setting 3
Description:	Sets the access level to read and write parameters.			
Value:	3: Expert 4: Service			
Note:	A higher set access level also includes the lower one. Access level 3 (experts): Expert know-how is required for these parameters (e.g. BICO parameterization). Access level 4 (service): For these parameters, it is necessary that authorized service personnel enter the appropriate password (p3950).			

p0010 Drive commissioning parameter filter / Drv comm. par_filt			
CU240D-2_DP	Access level: 1	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: C(1), T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2800, 2818
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	95	1
Description:	Sets the parameter filter to commission a drive. Setting this parameter filters out the parameters that can be written into in the various commissioning steps.		
Value:	0: Ready 1: Quick commissioning 2: Power unit commissioning 3: Motor commissioning 4: Encoder commissioning 5: Technological application/units 15: Data sets 29: Only Siemens int 30: Parameter reset 39: Only Siemens int 49: Only Siemens int 95: Safety Integrated commissioning		
Note:	The drive can only be powered up outside the drive commissioning (inverter enable). To realize this, this parameter must be set to 0. By setting p3900 to a value other than 0, the quick commissioning is completed, and this parameter is automatically reset to 0. Procedure for "Reset parameter": Set p0010 to 30 and p0970 to 1.		

p0010 Drive commissioning parameter filter / Drv comm. par_filt			
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer16
CU250D-2_PN_F	Can be changed: C(1), T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2800, 2818
	Min	Max	Factory setting
	0	95	1
Description:	Sets the parameter filter to commission a drive. Setting this parameter filters out the parameters that can be written into in the various commissioning steps.		
Value:	0: Ready 1: Quick commissioning 2: Power unit commissioning 3: Motor commissioning 4: Encoder commissioning 5: Technological application/units 15: Data sets 17: Basic positioner commissioning 25: Position control commissioning 29: Only Siemens int 30: Parameter reset 39: Only Siemens int 49: Only Siemens int 95: Safety Integrated commissioning		
Note:	The drive can only be powered up outside the drive commissioning (inverter enable). To realize this, this parameter must be set to 0. By setting p3900 to a value other than 0, the quick commissioning is completed, and this parameter is automatically reset to 0. Procedure for "Reset parameter": Set p0010 to 30 and p0970 to 1.		

p0014 Buffer memory mode / Buf mem mode			
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 2	Factory setting 0
Description:	Sets the mode for the buffer memory.		
Value:	0: Save in a non-volatile fashion (RAM) 1: Buffer memory active (non-volatile) 2: Clear buffer memory		
Dependency:	If p0014 = 1, changes in the same parameter, as well as in following parameters will not be copied to the buffer memory: Refer to: p0040, p0340, p0650, p0802, p0803, p0804, p0952, p0969, p0970, p0971, p0972, p1900, p1910, p1960, p2111, p3900, p3981 Refer to: A01066, A01067		
Notice:	For p0014 = 2, entries in the buffer memory are lost and cannot be retrieved. After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.		
Note:	The parameter is not influenced by setting the factory setting. Re p0014 = 0: Parameter changes are saved in the volatile memory (RAM). Non-volatile storage from RAM to ROM is carried out in the following cases: - p0971 = 1 - change from p0014 = 0 to 1 Re p0014 = 1: With this setting, alarm A01066 followed by alarm A01067 can occur if parameters are continually changed via a fieldbus system. Parameter changes are entered in the volatile memory (RAM) and also in the non-volatile buffer memory. In the following cases, the entries in the buffer memory are transferred into the ROM and then the buffer memory is cleared: - p0971 = 1 - power down/power up the Control Unit - change p0014 = 1 to 0 Re p0014 = 2: The procedure to clear the entries in the buffer memory is initiated. p0014 is automatically set to 0 after the entries have been cleared.		
p0015 Macro drive unit / Macro drv unit			
CU240D-2_DP	Access level: 1	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: C, C(1)	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -
CU240D-2_PN_F	Min 0	Max 999999	Factory setting 7
Description:	Runs the corresponding macro files.		
Notice:	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0. When executing a specific macro, the corresponding programmed settings are made and become active.		
Note:	Macros available as standard are described in the technical documentation of the particular product. The parameter is not influenced by setting the factory setting.		

p0015	Macro drive unit / Macro drv unit		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: C, C(1)	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 999999	Factory setting 26
Description:	Runs the corresponding macro files.		
Notice:	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0. When executing a specific macro, the corresponding programmed settings are made and become active.		
Note:	Macros available as standard are described in the technical documentation of the particular product. The parameter is not influenced by setting the factory setting.		
r0018	Control Unit firmware version / CU FW version		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 4294967295	Factory setting -
Description:	Displays the firmware version of the Control Unit.		
Dependency:	Refer to: r0197, r0198		
Note:	Example: The value 1010100 should be interpreted as V01.01.01.00.		
r0020	Speed setpoint smoothed / n_set smth		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 5020, 6799
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the currently smoothed speed setpoint at the input of the speed controller or U/f characteristic (after the interpolator).		
Dependency:	Refer to: r0060		
Note:	Smoothing time constant = 100 ms The signal is not suitable as a process quantity and may only be used as a display quantity. The speed setpoint is available smoothed (r0020) and unsmoothed (r0060).		
r0021	CO: Actual speed smoothed / n_act smooth		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 6799
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the smoothed actual value of the motor speed. For U/f control and when slip compensation is deactivated (see p1335), the synchronous speed to the output frequency is shown in r0021.		
Dependency:	Refer to: r0022, r0063		

Note: Smoothing time constant = 100 ms
 The signal is not suitable as a process quantity and may only be used as a display quantity.
 The speed actual value is available smoothed (r0021, r0022) and unsmoothed (r0063).
 For U/f control, the mechanical speed calculated from the output frequency and the slip is shown in r0063[2] even if slip compensation is deactivated.

r0022 Speed actual value rpm smoothed / n_act rpm smooth

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2000	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 6799
Min - [rpm]	Max - [rpm]	Factory setting - [rpm]

Description: Displays the smoothed actual value of the motor speed.
 r0022 is identical to r0021, however, it always has units of rpm and contrary to r0021 cannot be changed over.
 For U/f control and when slip compensation is deactivated (see p1335), the synchronous speed to the output frequency is shown in r0022.

Dependency: Refer to: r0021, r0063

Note: Smoothing time constant = 100 ms
 The signal is not suitable as a process quantity and may only be used as a display quantity.
 The speed actual value is available smoothed (r0021, r0022) and unsmoothed (r0063).
 For U/f control, the mechanical speed calculated from the output frequency and the slip is shown in r0063[2] even if slip compensation is deactivated.

r0024 Output frequency smoothed / f_outp smooth

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2000	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 1690, 5300, 5730, 6799
Min - [Hz]	Max - [Hz]	Factory setting - [Hz]

Description: Displays the smoothed converter frequency.

Dependency: Refer to: r0066

Note: Smoothing time constant = 100 ms
 The signal is not suitable as a process quantity and may only be used as a display quantity.
 The output frequency is available smoothed (r0024) and unsmoothed (r0066).

r0025 CO: Output voltage smoothed / U_outp smooth

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2001	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 1690, 5730, 6799
Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]

Description: Displays the smoothed output voltage of the power unit.

Dependency: Refer to: r0072

Note: Smoothing time constant = 100 ms
 The signal is not suitable as a process quantity and may only be used as a display quantity.
 The output voltage is available smoothed (r0025) and unsmoothed (r0072).

r0026	CO: DC link voltage smoothed / Vdc smooth		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 6799
	Min - [V]	Max - [V]	Factory setting - [V]
Description:	Displays the smoothed actual value of the DC link voltage.		
Dependency:	Refer to: r0070		
Notice:	When measuring a DC link voltage < 200 V, for the Power Module (e.g. PM240) a valid measured value is not supplied. In this case, when an external 24 V power supply is connected, a value of approx. 24 V is displayed in the display parameter.		
Note:	Smoothing time constant = 100 ms The signal is not suitable as a process quantity and may only be used as a display quantity. The DC link voltage is available smoothed (r0026) and unsmoothed (r0070). r0026 sets itself to the lower value of the pulsating DC link voltage.		
r0027	CO: Absolute actual current smoothed / I_act abs val smth		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 5730, 6799, 8850, 8950
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the smoothed absolute actual current value.		
Dependency:	Refer to: r0068		
Notice:	This smoothed signal is not suitable for diagnostics or evaluation of dynamic operations. In this case, the unsmoothed value should be used.		
Note:	Smoothing time constant = 300 ms The signal is not suitable as a process quantity and may only be used as a display quantity. The absolute current actual value is available smoothed (r0027) and unsmoothed (r0068).		
r0028	Modulation depth smoothed / Mod_depth smth		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 5730, 6799, 8950
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the smoothed actual value of the modulation depth.		
Dependency:	Refer to: r0074		
Note:	Smoothing time constant = 100 ms The signal is not suitable as a process quantity and may only be used as a display quantity. The modulation depth is available smoothed (r0028) and unsmoothed (r0074).		
r0029	Current actual value field-generating smoothed / Id_act smooth		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 6799
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the smoothed field-generating actual current.		
Dependency:	Refer to: r0076		

Note: Smoothing time constant = 300 ms
The signal is not suitable as a process quantity and may only be used as a display quantity.
The field-generating current actual value is available smoothed (r0029) and unsmoothed (r0076).

r0030 **Current actual value torque-generating smoothed / Iq_act smooth**

Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2002	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 6799
Min - [Arms]	Max - [Arms]	Factory setting - [Arms]

Description: Displays the smoothed torque-generating actual current.

Dependency: Refer to: r0078

Note: Smoothing time constant = 300 ms
The signal is not suitable as a process quantity and may only be used as a display quantity.
The torque-generating current actual value is available smoothed (r0030) and unsmoothed (r0078).

r0031 **Actual torque smoothed / M_act smooth**

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2003	Dyn. index: -
Units group: 7_1	Unit selection: p0505	Func. diagram: 5730, 6799
Min - [Nm]	Max - [Nm]	Factory setting - [Nm]

Description: Displays the smoothed torque actual value.

Dependency: Refer to: r0080

Note: Smoothing time constant = 100 ms
The signal is not suitable as a process quantity and may only be used as a display quantity.
The torque actual value is available smoothed (r0031) and unsmoothed (r0080).

r0032 **CO: Active power actual value smoothed / P_actv_act smth**

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: r2004	Dyn. index: -
Units group: 14_10	Unit selection: p0505	Func. diagram: 5730, 6799, 8750, 8850, 8950
Min - [kW]	Max - [kW]	Factory setting - [kW]

Description: Displays the smoothed actual value of the active power.

Dependency: Refer to: r0082

Notice: This smoothed signal is not suitable for diagnostics or evaluation of dynamic operations. In this case, the unsmoothed value should be used.

Note: Power delivered at the motor shaft.
The active power is available smoothed (r0032 with 100 ms) and unsmoothed (r0082).

r0033 **Torque utilization smoothed / M_util smooth**

Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: PERCENT	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 8012
Min - [%]	Max - [%]	Factory setting - [%]

Description: Displays the smoothed torque utilization as a percentage.

The torque utilization is obtained from the required smoothed torque in reference to the torque limit, scaled using p2196.

Dependency: This parameter is only available for vector control. For U/f control r0033 = 0 %.

Note: Smoothing time constant = 100 ms
 The signal is not suitable as a process quantity and may only be used as a display quantity.
 The torque utilization is available smoothed (r0033) and unsmoothed (r0081).
 For M_set total (r0079) > 0, the following applies:
 - Required torque = M_set total
 - Actual torque limit = M_max upper effective (r1538)
 For M_set total (r0079) <= 0, the following applies:
 - Required torque = - M_set total
 - Actual torque limit = - M_max lower effective (r1539)
 For the actual torque limit = 0, the following applies: r0033 = 100 %
 For the actual torque limit < 0, the following applies: r0033 = 0 %

r0034 **CO: Motor utilization / Motor utilization**

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: PERCENT	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 8017
Min - [%]	Max - [%]	Factory setting - [%]

Description: Displays the motor utilization from motor temperature model 1 (I2t) or 3.
Dependency: The motor utilization is only determined for permanent-magnet synchronous motors when the motor temperature model 1 (I2t) or 3 is activated.
 For motor temperature model 1 (I2t) (p0612.0 = 1), the following applies:
 - r0034 = (motor model temperature - 40 K) / (p0605 - 40 K) * 100 %
 For motor temperature model 3 (p0612.2 = 1), the following applies:
 - r0034 = (motor model temperature - p5397) / (p5398 - p5397) * 100 %
 Refer to: p0611, p0612, p0615

Notice: After the drive is switched on, the system starts to determine the motor temperature with an assumed model value. This means that the value for the motor utilization is only valid after a stabilization time.

Note: Smoothing time constant = 100 ms
 The signal is not suitable as a process quantity and may only be used as a display quantity.
 For r0034 = -200.0 %, the following applies:
 The value is invalid (e.g. the motor temperature model is not activated or has been incorrectly parameterized).

r0035 **CO: Motor temperature / Mot temp**

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2006	Dyn. index: -
Units group: 21_1	Unit selection: p0505	Func. diagram: 7008, 8016, 8017
Min - [°C]	Max - [°C]	Factory setting - [°C]

Description: Displays the actual temperature in the motor.
Note: For r0035 not equal to -200.0 °C, the following applies:
 - this temperature display is valid.
 - a KTY sensor is connected.
 - for induction motors, the thermal motor model is activated (p0601 = 0).
 For r0035 equal to -200.0 °C, the following applies:
 - this temperature display is not valid (temperature sensor error).
 - A PTC sensor or bimetallic NC contact is connected.
 - for synchronous motors, the thermal motor model is activated (p0601 = 0).

r0036	CO: Power unit overload I2t / PU overload I2t		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: PERCENT	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8014
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	<p>Displays the power unit overload determined using the I2t calculation.</p> <p>A current reference value is defined for the I2t monitoring of the power unit. It represents the current that can be conducted by the power unit without any influence of the switching losses (e.g. the continuously permissible current of the capacitors, inductances, busbars, etc.).</p> <p>If the I2t reference current of the power unit is not exceeded, then an overload (0 %) is not displayed.</p> <p>In the other case, the degree of thermal overload is calculated, whereby 100% results in a trip.</p>		
Dependency:	<p>Refer to: p0290, p0294</p> <p>Refer to: F30005</p>		
r0037[0...19]	CO: Power unit temperatures / PU temperatures		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2006	Dyn. index: -
	Units group: 21_1	Unit selection: p0505	Func. diagram: 8014
	Min - [°C]	Max - [°C]	Factory setting - [°C]
Description:	<p>Displays the temperatures in the power unit.</p>		
Index:	<p>[0] = Inverter maximum value [1] = Depletion layer maximum value [2] = Rectifier maximum value [3] = Air intake [4] = Interior of power unit [5] = Inverter 1 [6] = Inverter 2 [7...10] = Reserved [11] = Rectifier 1 [12] = Reserved [13] = Depletion layer 1 [14] = Depletion layer 2 [15] = Depletion layer 3 [16] = Depletion layer 4 [17] = Depletion layer 5 [18] = Depletion layer 6 [19] = Reserved</p>		
Notice:	<p>Only for internal Siemens troubleshooting.</p>		
Note:	<p>The value of -200 indicates that there is no measuring signal.</p> <p>r0037[0]: Maximum value of the inverter temperatures (r0037[5...10]).</p> <p>r0037[1]: Maximum value of the depletion layer temperatures (r0037[13...18]).</p> <p>r0037[2]: Maximum value of the rectifier temperatures (r0037[11...12]).</p> <p>The maximum value is the temperature of the hottest inverter, depletion layer, or rectifier.</p> <p>r0037[2, 3, 6, 11, 14...18] is only relevant for chassis power units.</p>		

r0038	Power factor smoothed / Cos phi smooth			
	Access level: 4	Calculated: -	Data type: FloatingPoint32	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: 6799, 8850, 8950	
	Min -	Max -	Factory setting -	
Description:	Displays the smoothed actual power factor. This refers to the electrical power of the basic fundamental signals at the converter output terminals.			
Notice:	For infeed units, the following applies: For active powers < 25 % of the rated power, this does not provide any useful information.			
Note:	Smoothing time constant = 300 ms The signal is not suitable as a process quantity and may only be used as a display quantity.			
r0039[0...2]	Energy display / Energy displ			
	Access level: 2	Calculated: -	Data type: FloatingPoint32	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min - [kWh]	Max - [kWh]	Factory setting - [kWh]	
Description:	Displays the energy values at the output terminals of the power unit.			
Index:	[0] = Energy balance (sum) [1] = Energy drawn [2] = Energy fed back			
Dependency:	Refer to: p0040			
Note:	Re index 0: Sum of the energy drawn and energy that is fed back.			
p0040	Reset energy consumption display / Energy cons reset			
	Access level: 3	Calculated: -	Data type: Unsigned8	
	Can be changed: U, T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min 0	Max 1	Factory setting 0	
Description:	Setting to reset the display in r0039 and r0041. Procedure: Set p0040 = 0 --> 1 The displays are reset and the parameter is automatically set to zero.			
Dependency:	Refer to: r0039			
r0041	Energy consumption saved / Energy cons saved			
	Access level: 2	Calculated: -	Data type: FloatingPoint32	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min - [kWh]	Max - [kWh]	Factory setting - [kWh]	
Description:	Displays the saved energy referred to 100 operating hours.			
Dependency:	Refer to: p0040			
Note:	This display is used for a fluid-flow machine. The flow characteristic is entered into p3320 ... p3329. For an operating time of below 100 hours, the display is interpolated up to 100 hours.			

p0045	Display values smoothing time constant / Disp_val T_smooth		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 6714, 8012
	Min 0.00 [ms]	Max 10000.00 [ms]	Factory setting 4.00 [ms]
Description:	Sets the smoothing time constant for the following display values: r0063[1], r0068[1], r0080[1], r0082[1].		

r0046.0...31	CO/BO: Missing enable sig / Missing enable sig		
	Access level: 1	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2634
	Min -	Max -	Factory setting -
Description:	Displays missing enable signals that are preventing the closed-loop drive control from being commissioned.		

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	OFF1 enable missing	Yes	No	-
	01	OFF2 enable missing	Yes	No	-
	02	OFF3 enable missing	Yes	No	-
	03	Operation enable missing	Yes	No	-
	04	DC braking enable missing	Yes	No	-
	10	Ramp-function generator enable missing	Yes	No	-
	11	Ramp-function generator start missing	Yes	No	-
	12	Setpoint enable missing	Yes	No	-
	16	OFF1 enable internal missing	Yes	No	-
	17	OFF2 enable internal missing	Yes	No	-
	18	OFF3 enable internal missing	Yes	No	-
	19	Pulse enable internal missing	Yes	No	-
	20	DC braking internal enable missing	Yes	No	-
	21	PU enab missing	Yes	No	-
	26	Drive inactive or not operational	Yes	No	-
	27	De-magnetizing not completed	Yes	No	-
	28	Brake open missing	Yes	No	-
	30	Speed controller inhibited	Yes	No	-
	31	Jog setpoint active	Yes	No	-

Dependency: Refer to: r0002

Note: The value r0046 = 0 indicates that all enable signals for this drive are present.

Bit 00 = 1 (enable signal missing), if:

- the signal source in p0840 is a 0 signal.

- there is a "switching on inhibited".

Bit 01 = 1 (enable signal missing), if:

- the signal source in p0844 or p0845 is a 0 signal.

Bit 02 = 1 (enable signal missing), if:

- the signal source in p0848 or p0849 is a 0 signal.

Bit 03 = 1 (enable signal missing), if:

- the signal source in p0852 is a 0 signal.

Bit 04 = 1 (DC brake active) when:

- the signal source in p1230 has a 1 signal

Bit 10 = 1 (enable signal missing), if:

- the signal source in p1140 is a 0 signal.

Bit 11 = 1 (enable signal missing) if the speed setpoint is frozen, because:

- the signal source in p1141 is a 0 signal.
- the speed setpoint is entered from jogging and the two signal sources for jogging, bit 0 (p1055) and bit 1 (p1056) have a 1 signal.

Bit 12 = 1 (enable signal missing), if:

- the signal source in p1142 is a 0 signal.

Bit 16 = 1 (enable signal missing), if:

- there is an OFF1 fault response. The system is only enabled if the fault is removed and was acknowledged and the "switching on inhibited" withdrawn with OFF1 = 0.

Bit 17 = 1 (enable signal missing), if:

- commissioning mode is selected (p0010 > 0).
- there is an OFF2 fault response.
- the drive is not operational.

Bit 18 = 1 (enable signal missing), if:

- OFF3 has still not been completed or an OFF3 fault response is present.

Bit 19 = 1 (internal pulse enable missing), if:

- sequence control does not have a finished message.

Bit 20 = 1 (internal DC brake active), if:

- the drive is not in the state "Operation" or in "OFF1/3".
- the internal pulse enable is missing (r0046.19 = 0).

Bit 21 = 1 (enable signal missing), if:

- the power unit does not issue an enable signal (e.g. because DC link voltage is too low).
- the holding brake opening time (p1216) has still not expired.
- hibernation is active.

Bit 26 = 1 (enable signal missing), if:

- the drive is not operational.

Bit 27 = 1 (enable signal missing), if:

- de-magnetization not completed.

Bit 28 = 1 (enable signal missing), if:

- the holding brake is closed or has still not been opened.

Bit 30 = 1 (speed controller inhibited), if one of the following reasons is present:

- the pole position identification is active.
- motor data identification is active (only certain steps).

Bit 31 = 1 (enable signal missing), if:

- the speed setpoint from jog 1 or 2 is entered.

r0047

Motor data identification and speed controller optimization / MotID and n_opt

Access level: 1	Calculated: -	Data type: Integer16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min 0	Max 300	Factory setting -

Description:

Displays the actual status for the motor data identification (stationary measurement) and the speed/velocity controller optimization (rotating measurement).

Value:

0:	No measurement
115:	Measurement q leakage inductance (part 2)
120:	Speed controller optimization (vibration test)
140:	Calculate speed controller setting
150:	Measurement moment of inertia
170:	Measurement magnetizing current and saturation characteristic
195:	Measurement q leakage inductance (part 1)
200:	Rotating measurement selected
220:	identification leakage inductance
230:	Identification rotor time constant
240:	Identification stator inductance

250: Identification stator inductance LQLD
 270: Identification stator resistance
 290: Identification valve lockout time
 300: Stationary measurement selected

Note: Re r0047 = 300:
 This value is also displayed if encoder calibration p1990 is selected.

r0050.0...1 **CO/BO: Command Data Set CDS effective / CDS effective**

Access level: 3	Calculated: -	Data type: Unsigned8
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 8560
Min	Max	Factory setting
-	-	-

Description: Displays the effective Command Data Set (CDS).

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	CDS eff. bit 0	ON	OFF	-
	01	CDS eff. bit 1	ON	OFF	-

Dependency: Refer to: p0810, p0811, r0836

Note: The Command Data Set selected using a binector input (e.g. p0810) is displayed using r0836.

r0051.0...1 **CO/BO: Drive Data Set DDS effective / DDS effective**

Access level: 2	Calculated: -	Data type: Unsigned8
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Displays the effective Drive Data Set (DDS).

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DDS eff. bit 0	ON	OFF	-
	01	DDS eff. bit 1	ON	OFF	-

Dependency: Refer to: p0820, p0821, r0837

Note: When selecting the motor data identification routine and the rotating measurement, the drive data set changeover is suppressed.

r0052.0...15 **CO/BO: Status word 1 / ZSW 1**

Access level: 2	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Display and connector output for status word 1.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Rdy for switch on	Yes	No	-
	01	Ready	Yes	No	-
	02	Operation enabled	Yes	No	-
	03	Fault present	Yes	No	-
	04	Coast down active (OFF2)	No	Yes	-
	05	Quick Stop active (OFF3)	No	Yes	-
	06	Switching on inhibited active	Yes	No	-
	07	Alarm present	Yes	No	-
	08	Deviation setpoint/actual speed	No	Yes	-
	09	Control request	Yes	No	-
	10	Maximum speed reached	Yes	No	-
	11	I, M, P limit reached	No	Yes	-
	12	Motor holding brake open	Yes	No	-

13	Alarm motor overtemperature	No	Yes	-
14	Motor rotates forwards	Yes	No	-
15	Alarm drive converter overload	No	Yes	-

Caution:

p2080 is used to define the signal sources of the PROFIdrive status word interconnection.

Note:

Re bit 03:

This signal is inverted if it is interconnected to a digital output.

Re r0052:

The status bits have the following sources:

Bit 00: r0899 Bit 0

Bit 01: r0899 Bit 1

Bit 02: r0899 Bit 2

Bit 03: r2139 Bit 3 (or r1214.10 for p1210 > 0)

Bit 04: r0899 Bit 4

Bit 05: r0899 Bit 5

Bit 06: r0899 Bit 6

Bit 07: r2139 Bit 7

Bit 08: r2197 Bit 7

Bit 09: r0899 Bit 7

Bit 10: r2197 Bit 6

Bit 11: r0056 Bit 13 (negated)

Bit 12: r0899 Bit 12

Bit 13: r2135 Bit 14 (negated)

Bit 14: r2197 Bit 3

Bit 15: r2135 Bit 15 (negated)

r0053.0...11**CO/BO: Status word 2 / ZSW 2**

Access level: 2

Calculated: -

Data type: Unsigned16

Can be changed: -

Scaling: -

Dyn. index: -

Units group: -

Unit selection: -

Func. diagram: -

Min

Max

Factory setting

-

-

-

Description:

Display and BICO output for status word 2.

Bit field:

Bit	Signal name	1 signal	0 signal	FP
00	DC braking active	Yes	No	-
01	n_act > p1226 (n_standstill)	Yes	No	-
02	n_act > p1080 (n_min)	Yes	No	-
03	I_act >= p2170	Yes	No	-
04	n_act > p2155	Yes	No	-
05	n_act <= p2155	Yes	No	-
06	n_act >= r1119 (n_set)	Yes	No	-
07	Vdc <= p2172	Yes	No	-
08	Vdc > p2172	Yes	No	-
09	Ramp-up/ramp-down completed	Yes	No	-
10	Technology controller output at the lower limit	Yes	No	-
11	Technology controller output at the upper limit	Yes	No	-

Caution:

p2081 is used to define the signal sources of the PROFIdrive status word interconnection.

Note:

The following status bits are displayed in r0053:

Bit 00: r1239 Bit 8

Bit 01: r2197 Bit 5 (negated)

Bit 02: r2197 Bit 0 (negated)

Bit 03: r2197 Bit 8

Bit 04: r2197 Bit 2

Bit 05: r2197 Bit 1

Bit 06: r2197 Bit 4
 Bit 07: r2197 Bit 9
 Bit 08: r2197 Bit 10
 Bit 09: r1199 Bit 2 (negated)
 Bit 10: r2349 Bit 10
 Bit 11: r2349 Bit 11

r0054.0...15**CO/BO: Control word 1 / STW 1**

Access level: 2 **Calculated:** - **Data type:** Unsigned16
Can be changed: - **Scaling:** - **Dyn. index:** -
Units group: - **Unit selection:** - **Func. diagram:** -
Min **Max** **Factory setting**
 - - -

Description: Displays control word 1.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	ON/OFF1	Yes	No	-
	01	OC / OFF2	Yes	No	-
	02	OC / OFF3	Yes	No	-
	03	Operation enable	Yes	No	-
	04	Ramp-function generator enable	Yes	No	-
	05	Continue ramp-function generator	Yes	No	-
	06	Speed setpoint enable	Yes	No	-
	07	Acknowledge fault	Yes	No	-
	08	Jog bit 0	Yes	No	3030
	09	Jog bit 1	Yes	No	3030
	10	Master ctrl by PLC	Yes	No	-
	11	Direction reversal (setpoint)	Yes	No	-
	13	Motorized potentiometer raise	Yes	No	-
	14	Motorized potentiometer lower	Yes	No	-
	15	CDS bit 0	Yes	No	-

Note: The following control bits are displayed in r0054:

Bit 00: r0898 Bit 0
 Bit 01: r0898 Bit 1
 Bit 02: r0898 Bit 2
 Bit 03: r0898 Bit 3
 Bit 04: r0898 Bit 4
 Bit 05: r0898 Bit 5
 Bit 06: r0898 Bit 6
 Bit 07: r2138 Bit 7
 Bit 08: r0898 Bit 8
 Bit 09: r0898 Bit 9
 Bit 10: r0898 Bit 10
 Bit 11: r1198 Bit 11
 Bit 13: r1198 Bit 13
 Bit 14: r1198 Bit 14
 Bit 15: r0836 Bit 0

r0055.0...15	CO/BO: Supplementary control word / Suppl STW		
Access level: 3	Calculated: -	Data type: Unsigned16	
Can be changed: -	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min	Max	Factory setting	
-	-	-	

Description: Displays supplementary control word.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Fixed setpoint bit 0	Yes	No	-
	01	Fixed setpoint bit 1	Yes	No	-
	02	Fixed setpoint bit 2	Yes	No	-
	03	Fixed setpoint bit 3	Yes	No	-
	04	DDS selection bit 0	Yes	No	-
	05	DDS selection bit 1	Yes	No	-
	08	Technology controller enable	Yes	No	-
	09	DC braking enable	Yes	No	-
	11	Droop enable	Yes	No	-
	12	Torque control active	Yes	No	-
	13	External fault 1 (F07860)	No	Yes	-
	15	CDS bit 1	Yes	No	-

Note: The following control bits are displayed in r0055:

Bit 00: r1198 Bit 0
 Bit 01: r1198 Bit 1
 Bit 02: r1198 Bit 2
 Bit 03: r1198 Bit 3
 Bit 04: r0837 Bit 0
 Bit 05: r0837 Bit 1
 Bit 08: r2349 Bit 0 (negated)
 Bit 09: r1239 Bit 11
 Bit 11: r1406 Bit 11
 Bit 12: r1406 Bit 12
 Bit 13: r2138 Bit 13 (negated)
 Bit 15: r0836 Bit 1

r0056.0...13	CO/BO: Status word, closed-loop control / ZSW cl-loop ctrl		
Access level: 3	Calculated: -	Data type: Unsigned16	
Can be changed: -	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min	Max	Factory setting	
-	-	-	

Description: Displays the status word of the closed-loop control.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Initialization completed	Yes	No	-
	01	De-magnetizing completed	Yes	No	-
	02	Pulse enable present	Yes	No	-
	03	Soft starting present	Yes	No	-
	04	Magnetizing completed	Yes	No	-
	05	Voltage boost when starting	Active	Inactive	6300
	06	Acceleration voltage	Active	Inactive	6300
	07	Frequency negative	Yes	No	-
	08	Field weakening active	Yes	No	-
	09	Voltage limit active	Yes	No	6714
	10	Slip limit active	Yes	No	6310

List of parameters

11	Frequency limit active	Yes	No	-
12	Current limiting controller voltage output active	Yes	No	-
13	Current/torque limiting	Active	Inactive	6060

r0060**CO: Speed setpoint before the setpoint filter / n_set before filt.**

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2000	Dyn. index: -
Units group: 3_1	Unit selection: p0505	Func. diagram: 2701, 2704, 5020, 6030, 6799

Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
-----------------------	-----------------------	-----------------------------------

Description: Displays the actual speed setpoint at the input of the speed controller or U/f characteristic (after the interpolator).

Dependency: Refer to: r0020

Note: The speed setpoint is available smoothed (r0020) and unsmoothed (r0060).

r0061[0...2]**CO: Actual speed unsmoothed / n_act unsmoothed**

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2000	Dyn. index: -
Units group: 3_1	Unit selection: p0505	Func. diagram: 4715

Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
-----------------------	-----------------------	-----------------------------------

Description: Displays the unsmoothed actual speed values sensed by the encoders.

Index:
[0] = Encoder 1
[1] = Encoder 2
[2] = Reserved

r0062**CO: Speed setpoint after the filter / n_set after filter**

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2000	Dyn. index: -
Units group: 3_1	Unit selection: p0505	Func. diagram: 1700, 6030, 6031

Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
-----------------------	-----------------------	-----------------------------------

Description: Display and connector output for the speed setpoint after the setpoint filters.

r0063[0...2]**CO: Speed actual value / n_act**

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2000	Dyn. index: -
Units group: 3_1	Unit selection: p0505	Func. diagram: 1680, 4715

Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
-----------------------	-----------------------	-----------------------------------

Description: Displays the actual speed of the closed-loop speed control and the U/f control.

For U/f control and when slip compensation is deactivated (see p1335), the synchronous speed to the output frequency is shown in r0063[0].

Index:
[0] = Unsmoothed
[1] = Smoothed with p0045
[2] = Calculated from f_set - f_slip

Dependency: Refer to: r0021, r0022

Note: The speed actual value r0063[0] is additionally displayed - smoothed with p0045 - in r0063[1].
The speed (r0063[2]) calculated from the output frequency and slip can only be compared with the speed actual value (r0063[0]) in the steady-state.

r0064	CO: Speed controller system deviation / n_ctrl system dev		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 5040, 6040
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the actual system deviation of the speed controller.		
r0065	Slip frequency / f_Slip		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 2_1	Unit selection: p0505	Func. diagram: 1710, 6310, 6727, 6730, 6732
	Min - [Hz]	Max - [Hz]	Factory setting - [Hz]
Description:	Displays the slip frequency for induction motors (ASM).		
r0066	CO: Output frequency / f_outp		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 2_1	Unit selection: p0505	Func. diagram: 1690, 6310, 6730, 6731, 6799
	Min - [Hz]	Max - [Hz]	Factory setting - [Hz]
Description:	Display and connector output for the output frequency of the power unit.		
Dependency:	Refer to: r0024		
Note:	The output frequency is available smoothed (r0024) and unsmoothed (r0066). For vector control and operation with encoder (p0400 > 0), the following applies: The parameter value corresponds to the actual encoder speed.		
r0067	CO: Output current maximum / I_outp max		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: 6_2	Unit selection: p0505	Func. diagram: 6300, 6640, 6724
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the maximum output current of the power unit.		
Dependency:	The maximum output current is determined by the parameterized current limit and the motor and converter thermal protection. Refer to: p0290, p0640		
r0068[0...1]	CO: Absolute current actual value / I_act abs val		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: 6_2	Unit selection: p0505	Func. diagram: 1690, 6714, 6799, 7017, 8014, 8017, 8018
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays actual absolute current.		
Index:	[0] = Unsmoothed [1] = Smoothed with p0045		

Dependency: Refer to: r0027
Notice: The value is updated with the current controller sampling time.
Note: Absolute current value = $\sqrt{I_q^2 + I_d^2}$
 The absolute value of the current actual value is available smoothed (r0027 with 300 ms, r0068[1] with p0045) and unsmoothed (r0068[0]).

r0069[0...6] CO: Phase current actual value / I_phase act value

Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2002	Dyn. index: -
Units group: 6_5	Unit selection: p0505	Func. diagram: 1630, 5730, 6714, 6730, 6731, 8850, 8950

Min - [A]	Max - [A]	Factory setting - [A]
---------------------	---------------------	---------------------------------

Description: Displays the measured actual phase currents as peak value.
Index: [0] = Phase U
 [1] = Phase V
 [2] = Phase W
 [3] = Phase U offset
 [4] = Phase V offset
 [5] = Phase W offset
 [6] = Total U, V, W
Note: In indices 3 ... 5, the offset currents of the 3 phases, which are added to correct the phase currents, are displayed. The sum of the 3 corrected phase currents is displayed in index 6.

r0070 CO: Actual DC link voltage / Vdc act val

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2001	Dyn. index: -
Units group: 5_2	Unit selection: p0505	Func. diagram: 6723, 6724, 6730, 6731, 6799

Min - [V]	Max - [V]	Factory setting - [V]
---------------------	---------------------	---------------------------------

Description: Displays the measured actual value of the DC link voltage.
Dependency: Refer to: r0026
Notice: When measuring a DC link voltage < 200 V, for the Power Module (e.g. PM240) a valid measured value is not supplied. In this case, when an external 24 V power supply is connected, a value of approx. 24 V is displayed in the display parameter.
Note: The DC link voltage is available smoothed (r0026) and unsmoothed (r0070).

r0071 Maximum output voltage / U_output max

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2001	Dyn. index: -
Units group: 5_1	Unit selection: p0505	Func. diagram: 1710, 6300, 6640, 6722, 6723, 6724, 6725, 6727

Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
------------------------	------------------------	------------------------------------

Description: Displays the maximum output voltage.
Dependency: The maximum output voltage depends on the actual DC link voltage (r0070) and the maximum modulation depth (p1803).
Note: As the (driven) motor load increases, the maximum output voltage drops as a result of the reduction in DC link voltage.

r0072	CO: Output voltage / U_output		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: 5_1	Unit selection: p0505	Func. diagram: 1630, 6730, 6731, 6799
	Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
Description:	Displays the actual output voltage of the power unit.		
Dependency:	Refer to: r0025		
Note:	The output voltage is available smoothed (r0025) and unsmoothed (r0072).		
r0073	Maximum modulation depth / Modulat_depth max		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: PERCENT	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 6723, 6724
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the maximum modulation depth.		
Dependency:	Refer to: p1803		
r0074	CO: Modulat_depth / Modulat_depth		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: PERCENT	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 5730, 6730, 6731, 6799, 8940, 8950
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the actual modulation depth.		
Dependency:	Refer to: r0028		
Note:	For space vector modulation, 100% corresponds to the maximum output voltage without overcontrol. Values above 100 % indicate an overcontrol condition - values below 100% have no overcontrol. The phase voltage (phase-to-phase, rms) is calculated as follows: $(r0074 \times r0070) / (\sqrt{2} \times 100 \%)$. The modulation depth is available smoothed (r0028) and unsmoothed (r0074).		
r0075	CO: Current setpoint field-generating / Id_set		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: 6_2	Unit selection: p0505	Func. diagram: 1630, 5714, 5722, 6714
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the field-generating current setpoint (Id_set).		
Note:	This value is irrelevant for the U/f control mode.		

r0076	CO: Current actual value field-generating / Id_act		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: 6_2	Unit selection: p0505	Func. diagram: 1630, 1710, 5714, 5730, 6714, 6799
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the field-generating current actual value (Id_act).		
Dependency:	Refer to: r0029		
Note:	This value is irrelevant for the U/f control mode. The field-generating current actual value is available smoothed (r0029) and unsmoothed (r0076).		
r0077	CO: Current setpoint torque-generating / Iq_set		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: 6_2	Unit selection: p0505	Func. diagram: 1630, 1774, 5714, 6710, 6714, 6719
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the torque/force generating current setpoint.		
Note:	This value is irrelevant for the U/f control mode.		
r0078	CO: Current actual value torque-generating / Iq_act		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: 6_2	Unit selection: p0505	Func. diagram: 1710, 6310, 6714, 6799
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the torque-generating current actual value (Iq_act).		
Dependency:	Refer to: r0030		
Note:	This value is irrelevant for the U/f control mode. The torque-generating current actual value is available smoothed (r0030 with 300 ms) and unsmoothed (r0078).		
r0079	CO: Torque setpoint / M_set		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2003	Dyn. index: -
	Units group: 7_1	Unit selection: p0505	Func. diagram: 1700, 1710, 6030, 6060, 6710, 8012
	Min - [Nm]	Max - [Nm]	Factory setting - [Nm]
Description:	Display and connector output for the torque setpoint at the output of the speed controller.		
r0080[0...1]	CO: Torque actual value / M_act		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2003	Dyn. index: -
	Units group: 7_1	Unit selection: p0505	Func. diagram: 6714, 6799
	Min - [Nm]	Max - [Nm]	Factory setting - [Nm]
Description:	Display and connector output for actual torque value.		

Index: [0] = Unsmoothed
[1] = Smoothed with p0045

Dependency: Refer to: r0031, p0045

Note: The value is available smoothed (r0031 with 100 ms, r0080[1] with p0045) and unsmoothed (r0080[0]).

r0081 **CO: Torque utilization / M_Utilization**

Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: PERCENT	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 8012
Min - [%]	Max - [%]	Factory setting - [%]

Description: Displays the torque utilization as a percentage.
The torque utilization is obtained from the required smoothed torque referred to the torque limit.

Dependency: This parameter is only available for vector control. For U/f control r0081 = 0 %.
Refer to: r0033

Note: The torque utilization is available smoothed (r0033) and unsmoothed (r0081).
The torque utilization is obtained from the required torque referred to the torque limit as follows:
- Positive torque: $r0081 = (r0079 / r1538) * 100 \%$
- Negative torque: $r0081 = (-r0079 / -r1539) * 100 \%$

r0082[0...2] **CO: Active power actual value / P_act**

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: r2004	Dyn. index: -
Units group: 14_5	Unit selection: p0505	Func. diagram: 6714, 6799
Min - [kW]	Max - [kW]	Factory setting - [kW]

Description: Displays the instantaneous active power.

Index: [0] = Unsmoothed
[1] = Smoothed with p0045
[2] = Electric power

Dependency: Refer to: r0032

Note: The mechanical active power is available smoothed (r0032 with 100 ms, r0082[1] with p0045) and unsmoothed (r0082[0]).

r0083 **CO: Flux setpoint / Flex setp**

Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: PERCENT	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 5722
Min - [%]	Max - [%]	Factory setting - [%]

Description: Displays the flux setpoint.

r0084[0...1] **CO: Flux actual value / Flux act val**

Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: PERCENT	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 6730, 6731
Min - [%]	Max - [%]	Factory setting - [%]

Description: Displays the flux actual value.

Index: [0] = Unsmoothed
[1] = Smoothed

r0087	CO: Actual power factor / Cos phi act		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting -
Description:	Displays the actual active power factor. This value refers to the electrical power of the basic fundamental signals at the output terminals of the converter.		
r0089[0...2]	Actual phase voltage / U_phase act val		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: 5_3	Unit selection: p0505	Func. diagram: 6719
	Min - [V]	Max - [V]	Factory setting - [V]
Description:	Displays the actual phase voltage.		
Index:	[0] = Phase U [1] = Phase V [2] = Phase W		
Note:	The values are determined from the transistor power-on duration.		
r0094	CO: Transformation angle / Transformat_angle		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2005	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [°]	Max - [°]	Factory setting - [°]
Description:	Displays the transformation angle.		
Dependency:	Refer to: r1778		
Note:	The transformation angle corresponds to the electrical commutation angle.		
p0100	IEC/NEMA mot stds / IEC/NEMA mot stds		
	Access level: 1	Calculated: -	Data type: Integer16
	Can be changed: C(1)	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 2	Factory setting 0
Description:	Defines whether the motor and drive converter power settings (e.g. rated motor power, p0307) are expressed in [kW] or [hp]. Depending on the selection, the rated motor frequency (p0310) is either set to 50 Hz or 60 Hz. For p0100 = 0, 2, the following applies: The power factor (p0308) should be parameterized. For p0100 = 1, the following applies: The efficiency (p0309) should be parameterized.		
Value:	0: IEC-Motor (50 Hz, SI units) 1: NEMA motor (60 Hz, US units) 2: NEMA motor (60 Hz, SI units)		
Dependency:	If p0100 is changed, all of the rated motor parameters are reset. Only then are possible unit changeovers made. The units of all motor parameters are changed that are involved in the selection of IEC or NEMA (e.g. r0206, p0307, r0333, r0334, p0341, p0344, r1969). Refer to: r0206, p0210, p0300, p0304, p0305, p0307, p0308, p0309, p0310, p0311, p0314, p0320, p0322, p0323, p0335, r0337, p1800		
Note:	The parameter value is not reset when the factory setting is restored (p0010 = 30, p0970).		


p0124[0...n]	CU detection via LED / CU detection LED			
	Access level: 3	Calculated: -	Data type: Unsigned8	
	Can be changed: U, T	Scaling: -	Dyn. index: PDS	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min 0	Max 1	Factory setting 0	
Description:	Identification of the Control Unit using an LED.			
Note:	While p0124 = 1, the READY LED flashes green/orange or red/orange with 2 Hz at the appropriate Control Unit.			
p0133[0...n]	Motor configuration / Motor config			
	Access level: 2	Calculated: -	Data type: Unsigned16	
	Can be changed: C(1, 3)	Scaling: -	Dyn. index: MDS	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min -	Max -	Factory setting 0000 bin	
Description:	Configuration of the motor when commissioning the motor.			
Bit field:	Bit	Signal name	1 signal	0 signal
	00	Motor connection type	Delta	Star
	01	Motor 87 Hz operation	Yes	No
Dependency:	For standard induction motors (p0301 > 10000), bit 0 is automatically preassigned the connection type of the selected data set. For p0100 > 0 (60 Hz rated motor frequency), it is not possible to select bit 1. Refer to: p0304, p0305, p1082			
Note:	Re bit 0: When changing the bits, the rated motor voltage p0304 and the rated motor current p0305 are automatically converted to the selected connection type (star or delta connection). Re bit 1: Operation with 87 Hz is only possible in the delta connection type. When selected, the maximum speed p1082 is automatically preassigned for a maximum output frequency of 87 Hz.			
p0170	Number of Command Data Sets (CDS) / CDS count			
	Access level: 2	Calculated: -	Data type: Unsigned8	
	Can be changed: C(15)	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: 8560	
	Min 2	Max 4	Factory setting 2	
Description:	Sets the number of Command Data Sets (CDS).			
Dependency:	Refer to: p0010, r3996			
Notice:	When the data sets are created, short-term communication interruptions may occur.			
Note:	It is possible to toggle between command parameters (BICO parameters) using this data set changeover.			
p0180	Number of Drive Data Sets (DDS) / DDS count			
	Access level: 3	Calculated: -	Data type: Unsigned8	
	Can be changed: C(15)	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: 8565	
	Min 1	Max 4	Factory setting 1	
Description:	Sets the number of Drive Data Sets (DDS).			
Dependency:	Refer to: p0010, r3996			
Notice:	When the data sets are created, short-term communication interruptions may occur.			

p0187[0...n]	Encoder 1 encoder data set number / Enc 1 EDS number		
	Access level: 3	Calculated: -	Data type: Unsigned8
	Can be changed: C(4)	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1580, 8570
	Min 0	Max 0	Factory setting 0
Description:	Assign a drive data set (= index) the corresponding encoder data set (EDS) for encoder 1. The value corresponds to the number of the assigned encoder data set. Example: Encoder data set 0 should be assigned to encoder 1 in drive data set 2. --> p0187[2] = 0		
Note:	A value of 99 means that no encoder has been assigned to this drive data set (not configured).		
p0188[0...n]	Encoder 2 encoder data set number / Enc 2 EDS number		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned8
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1580, 8570
	Min 1	Max 1	Factory setting 1
Description:	Assign a drive data set (= index) the corresponding encoder data set (EDS) for encoder 2. The value corresponds to the number of the assigned encoder data set. Example: Encoder data set 1 should be assigned to encoder 2 in drive data set 2. --> p0188[2] = 1		
Note:	A value of 99 means that no encoder has been assigned to this drive data set (not configured).		
r0197[0...1]	Bootloader version / Bootloader vers		
	Access level: 4	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting -
Description:	Displays the bootloader version. Index 0: Displays the bootloader version. Index 1: Displays the bootloader version 3 (for CU320-2 and CU310-2) Value 0 means that boot loader 3 is not available.		
Dependency:	Refer to: r0018, r0198		
Note:	Example: The value 1010100 should be interpreted as V01.01.01.00.		

r0198[0...1]	BIOS/EEPROM data version / BIOS/EEPROM vers		
	Access level: 4	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the BIOS and EEPROM data version. r0198[0]: BIOS version r0198[1]: EEPROM data version		
Dependency:	Refer to: r0018, r0197		
Note:	Example: The value 1010100 should be interpreted as V01.01.01.00.		
p0199[0...24]	Drive object name / DO name		
	Access level: 4	Calculated: -	Data type: Unsigned16
	Can be changed: C	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	65535	0
Description:	Freely assignable name for a drive object. In the commissioning software, this name cannot be entered using the expert list, but is specified in the configuration assistant. The object name can be subsequently modified in the Project Navigator using standard Windows resources.		
Note:	The parameter is not influenced by setting the factory setting.		
r0200[0...n]	Power unit code number actual / PU code no. act		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: PDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the unique code number of the power unit.		
Note:	r0200 = 0: No power unit data found		
p0201[0...n]	Power unit code number / PU code no		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: C(2)	Scaling: -	Dyn. index: PDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	65535	0
Description:	Sets the actual code number from r0200 to acknowledge the power unit being used. When commissioned for the first time, the code number is automatically transferred from r0200 into p0201.		
Note:	The parameter is used to identify when the drive is being commissioned for the first time. The power unit commissioning can only be exited (p0201 = r0200), if the actual and acknowledged code numbers are identical (p0010 = 2). When the code number is changed, the connection voltage (p0210) is checked and, if necessary, adjusted.		

r0203[0...n] Actual power unit type / PU actual type					
	Access level: 3	Calculated: -	Data type: Integer16		
	Can be changed: -	Scaling: -	Dyn. index: PDS		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	2	400	-		
Description:	Displays the type of power unit found.				
Value:	2: MICROMASTER 440 3: MICROMASTER 411 4: MICROMASTER 410 5: MICROMASTER 436 6: MICROMASTER 440 PX 7: MICROMASTER 430 100: SINAMICS S 101: SINAMICS S (value) 102: SINAMICS S (combi) 103: SINAMICS S120M (distributed) 112: PM220 (SINAMICS G120) 113: PM230 (SINAMICS G120) 114: PM240 (SINAMICS G120) 115: PM250 (SINAMICS G120 / S120) 116: PM260 (SINAMICS G120) 118: SINAMICS G120 Px 120: PM340 (SINAMICS S120) 130: PM250D (SINAMICS G120D) 133: SINAMICS G120C 135: SINAMICS PMV40 136: SINAMICS PMV60 137: SINAMICS PMV80 138: SINAMICS G110M 150: SINAMICS G 151: PM330 (SINAMICS G120) 200: SINAMICS GM 250: SINAMICS SM 260: SINAMICS MC 300: SINAMICS GL 350: SINAMICS SL 400: SINAMICS DCM				
Note:	For parallel circuit configurations, the parameter index is assigned to a power unit.				
r0204[0...n] Power unit hardware properties / PU HW property					
	Access level: 3	Calculated: -	Data type: Unsigned32		
	Can be changed: -	Scaling: -	Dyn. index: PDS		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the properties supported by the power unit hardware.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	01	RFI filter available	Yes	No	-
	07	F3E regenerative feedback into the line supply	Yes	No	-
	08	Internal Braking Module	Yes	No	-
	12	Safe Brake Control (SBC) supported	No	Yes	-
	13	Safety Integrated supported	Yes	No	-
	14	Internal LC output filter	Yes	No	-
	15	Line voltage	1-phase	3-phase	-

p0205	Power unit application / PU application		
	Access level: 1	Calculated: -	Data type: Integer16
	Can be changed: C(1, 2)	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 1	Factory setting 0
Description:	The duty cycles can be overloaded provided that the drive converter is operated with its base load current before and after the overload. This is based on a load duty cycle of 300 s.		
Value:	0: Load duty cycle with high overload for vector drives 1: Load duty cycle with low overload for vector drives		
Dependency:	Refer to: r3996		
Notice:	The parameter value is not reset when the factory setting is restored (see p0010 = 30, p0970). When the power unit use is changed, short-term communication interruptions may occur.		
Note:	When the parameter is changed, all of the motor parameters (p0305 ... p0311), the technological application (p0500) and the control mode (p1300) are pre-assigned according to the selected application. The parameter has no influence when calculating the thermal overload. p0205 can only be changed to the settings that are saved in the power unit EEPROM.		
r0206[0...4]	Rated power unit power / PU P_{rated}		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: 14_6	Unit selection: p0100	Func. diagram: -
	Min - [kW]	Max - [kW]	Factory setting - [kW]
Description:	Displays the rated power unit power for various load duty cycles.		
Index:	[0] = Rated value [1] = Load duty cycle with low overload [2] = Load duty cycle with high overload [3] = Reserved [4] = Reserved		
Dependency:	IECdrives (p0100 = 0): Units kW NEMA drives (p0100 = 1): Units hp Refer to: p0100, p0205		
r0207[0...4]	Rated power unit current / PU PI_{rated}		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8014
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the rated power unit power for various load duty cycles.		
Index:	[0] = Rated value [1] = Load duty cycle with low overload [2] = Load duty cycle with high overload [3] = Reserved [4] = Reserved		
Dependency:	Refer to: p0205		

r0208	Rated power unit line supply voltage / PU U_{rated}		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
Description:	Displays the rated line supply voltage of the power unit. r0208 = 400 : 380 - 480 V +/-10 % r0208 = 500 : 500 - 600 V +/-10 % r0208 = 690 : 660 - 690 V +/-10 %		
r0209[0...4]	Power unit maximum current / PU I_{max}		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8750, 8850, 8950
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the maximum output current of the power unit.		
Index:	[0] = Catalog [1] = Load duty cycle with low overload [2] = Load duty cycle with high overload [3] = Reserved [4] = Reserved		
Dependency:	Refer to: p0205		
p0210	Drive unit line supply voltage / V_{connect}		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: C(2), T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 1 [V]	Max 63000 [V]	Factory setting 400 [V]
Description:	Sets the drive unit supply voltage (rms value of the phase-to-phase line supply voltage).		
Dependency:	Set p1254, p1294 (automatic detection of the V _{dc} switch-on levels) = 0. The switch-in thresholds of the V _{dc} controller are then directly determined using p0210.		
Warning:	In the case of regenerative power units (PM250, PM260), the regenerative power limit for U/f control current limitation control is calculated as a proportion of the supply voltage p0210. Therefore, p0210 should not be set to a value higher than the actual line voltage.		
			
Caution:	If the line supply voltage is higher than the entered value, the V _{dc} controller may be automatically de-activated in some cases to prevent the motor from accelerating. In this case, an appropriate alarm is output.		
Note:	Setting ranges for p0210 as a function of the rated power unit voltage: U _{rated} = 230 V: - p0210 = 200 ... 240 V U _{rated} = 400 V: - p0210 = 380 ... 480 V U _{rated} = 500 V: - p0210 = 500 ... 600 V U _{rated} = 690 V: - p0210 = 660 ... 690 V The pre-charging switch-in threshold for the DC link voltage (V _{dc}) is calculated from p0210: V _{dc_pre} = p0210 * 0.82 * 1.35		

The undervoltage thresholds for the DC link voltage (Vdc) are calculated from p0210 as a function of the rated power unit voltage:

U_{rated} = 400 V:

- U_{min} = p0210 * 0.78 > 360 V

U_{rated} = 500 V:

- U_{min} = p0210 * 0.76

U_{rated} = 690 V:

- U_{min} = p0210 * 0.74 > 450 V

p0230		Drive filter type motor side / Drv filt type mot		
	Access level: 1	Calculated: -	Data type: Integer16	
	Can be changed: C(1, 2)	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min	Max	Factory setting	
	0	4	0	
Description:	Sets the type of the filter at the motor side.			
Value:	0: No filter 1: Motor reactor 2: dv/dt filter 4: Sine-wave filter third-party			
Dependency:	The following parameters are influenced using p0230: p0230 = 1: --> p0233 (power unit, motor reactor) = filter inductance p0230 = 4: --> p0290 (power unit overload response) = inhibit pulse frequency reduction --> p1802 (modulator modes) = space vector modulation without overcontrol The user must set the following parameters according to the data sheet of the sine-wave filter and also the user must check whether they are permitted. --> p0233 (power unit, motor reactor) = filter inductance --> p0234 (power unit sine-wave filter capacitance) = filter capacitance --> p1082 (maximum speed) = Fmax filter / pole pair number --> p1800 (pulse frequency) >= nominal pulse frequency of the filter Refer to: p0233, p0234, p0290, p1082, p1800, p1802			
Note:	if a filter type cannot be selected, then this filter type is not permitted for the Motor Module. p0230 = 1: Power units with output reactor are limited to output frequencies of 150 Hz.			

r0231[0...1]		Power cable length maximum / Cable length max		
	Access level: 3	Calculated: -	Data type: Unsigned16	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min	Max	Factory setting	
	- [m]	- [m]	- [m]	
Description:	Displays the maximum permissible cable lengths between the drive unit and motor.			
Index:	[0] = Unshielded [1] = Shielded			
Note:	The display value is used to provide information for service and maintenance.			

p0233	Power unit motor reactor / PU mot reactor		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(2), U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.000 [mH]	Max 1000.000 [mH]	Factory setting 0.000 [mH]
Description:	Enter the inductance of a filter connected at the power unit output.		
Dependency:	This parameter is automatically pre-set when you select a filter via p0230 if a SIEMENS filter is defined for the power unit. Refer to: p0230		
Note:	When exiting the quick commissioning using p3900 = 1, the parameter value is set to the value of the defined SIEMENS filter or to zero. For this reason, the parameter value of a third-party filter only has to be entered outside the commissioning phase (p0010 = 0) and then the controller calculation (p0340 = 3) is carried out. The parameter cannot be changed if the power unit (e.g. PM260) is equipped with an internal sine-wave filter.		
p0234	Power unit sine-wave filter capacitance / PU sine filter C		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(2), U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.000 [µF]	Max 1000.000 [µF]	Factory setting 0.000 [µF]
Description:	Enters the capacitance of a sine-wave filter connected at the power unit output.		
Dependency:	This parameter is automatically pre-set when you select a filter via p0230 if a SIEMENS filter is defined for the power unit. Refer to: p0230		
Note:	The parameter value includes the sum of all of the capacitances of a phase connected in series (phase - ground). When exiting the quick commissioning using p3900 = 1, the parameter value is set to the value of the defined SIEMENS filter or to zero. For this reason, the parameter value of a third-party filter only has to be entered outside the commissioning phase (p0010 = 0). The parameter cannot be changed if the power unit (e.g. PM260) is equipped with an internal sine-wave filter.		
r0238	Internal power unit resistance / PU R internal		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [ohm]	Max - [ohm]	Factory setting - [ohm]
Description:	Displays the internal resistance of the power unit (IGBT and line resistance).		
p0287[0...1]	Ground fault monitoring thresholds / Gnd flt threshold		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.0 [%]	Max 100.0 [%]	Factory setting [0] 6.0 [%] [1] 16.0 [%]
Description:	Sets the shutdown thresholds for the ground fault monitoring. The setting is made as a percentage of the maximum current of the power unit (r0209).		
Index:	[0] = Threshold at which pre-charging starts [1] = Threshold at which pre-charging stops		

Dependency: Refer to: p1901
Refer to: F30021

Note: This parameter is only relevant for chassis power units.

r0289 **CO: Maximum power unit output current / PU I_outp max**

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2002	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min - [Arms]	Max - [Arms]	Factory setting - [Arms]

Description: Displays the actual maximum output current of the power unit taking into account derating factors.

p0290 **Power unit overload response / PU overId response**

Access level: 3	Calculated: -	Data type: Integer16
Can be changed: T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 8014
Min 0	Max 3	Factory setting 2

Description: Sets the response to a thermal overload condition of the power unit.
The following quantities can result in a response to thermal overload:

- heat sink temperature (r0037.0)
- chip temperature (r0037.1)
- power unit overload I2T (r0036)

Possible measures to avoid thermal overload:

- reduce the output current limit r0289 and r0067 (for closed-loop speed or torque control) or the output frequency (for U/f control) indirectly via the output current limit and the intervention of the current limiting controller).
- reduce the pulse frequency.

A reduction, if parameterized, is always realized after an appropriate alarm is output.

Value:

- 0: Reduce output current or output frequency
- 1: No reduction shutdown when overload threshold is reached
- 2: Reduce I_output or f_output and f_pulse (not using I2t)
- 3: Reduce the pulse frequency (not using I2t)


Dependency: If a sine-wave filter is parameterized as output filter (p0230 = 3, 4), then only responses can be selected without pulse frequency reduction (p0290 = 0, 1).
For a thermal power unit overload, an appropriate alarm or fault is output, and r2135.15 or r2135.13 set.
Refer to: r0036, r0037, p0230, r2135
Refer to: A05000, A05001, A07805

Caution: If the thermal overload of the power unit is not sufficiently reduced by the actions taken, the drive is always shut down. This means that the power unit is always protected irrespective of the setting of this parameter.

Note: The setting p0290 = 0, 2 is only practical if the load decreases with decreasing speed (e.g. for applications with variable torque such as for pumps and fans).
Under overload conditions, the current and torque limit are reduced, and therefore the motor is braked and forbidden speed ranges (e.g. minimum speed p1080 and suppression [skip] speeds p1091 ... p1094) can be passed through.
For p0290 = 2, 3, the I2t overload detection of the power unit does not influence the responses.
When the motor data identification routine is selected, p0290 cannot be changed.

p0292[0...1]	Power unit temperature alarm threshold / PU T_alarm thresh		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [°C]	Max 25 [°C]	Factory setting [0] 5 [°C] [1] 15 [°C]
Description:	Sets the alarm threshold for power unit overtemperatures. The value is set as a difference to the tripping (shut-down) temperature. Drive: If this threshold is exceeded, an overload alarm is generated and the system responds as parameterized in p0290. Infeed: When the threshold value is exceeded, only an overload alarm is output.		
Index:	[0] = Heat sink temperature [1] = Power semiconductor (chip) temperature		
Dependency:	Refer to: r0037, p0290 Refer to: A05000		
p0294	Power unit alarm with I2t overload / PU I2t alarm thresh		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8014
	Min 10.0 [%]	Max 100.0 [%]	Factory setting 95.0 [%]
Description:	Sets the alarm threshold for the I2t power unit overload. If this threshold is exceeded, an overload alarm is generated and the system responds as parameterized in p0290.		
Dependency:	Refer to: r0036, p0290 Refer to: A07805		
Note:	The I2t fault threshold is 100 %. If this value is exceeded, fault F30005 is output.		
p0295	Fan run-on time / Fan run-on time		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [s]	Max 600 [s]	Factory setting 0 [s]
Description:	Sets the fan run-on time after the pulses for the power unit have been canceled.		
Note:	- Under certain circumstances, the fan can continue to run for longer than was set (e.g. as a result of the excessively high heat sink temperature). - For values less than 1 s, a 1 s run on time for the fan is active.		
r0296	DC link voltage undervoltage threshold / Vdc U_lower_thresh		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [V]	Max - [V]	Factory setting - [V]
Description:	Threshold to detect a DC link undervoltage. If the DC link voltage falls below this threshold, the drive unit is tripped due to a DC link undervoltage condition.		
Dependency:	Refer to: F30003		

r0297	DC link voltage overvoltage threshold / Vdc U_upper_thresh		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8750, 8760, 8850, 8864, 8950, 8964
	Min - [V]	Max - [V]	Factory setting - [V]
Description:	If the DC link voltage exceeds the threshold specified here, the drive unit is tripped due to DC link overvoltage.		
Dependency:	Refer to: F30002		
p0300[0...n]	Motor type selection / Mot type sel		
	Access level: 2	Calculated: -	Data type: Integer16
	Can be changed: C(1, 3)	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6310
	Min 0	Max 204	Factory setting 0
Description:	<p>Selecting the motor type.</p> <p>The first digit of the parameter value always defines the general motor type and corresponds to the third-party motor belonging to a motor list:</p> <p>1 = Rotating induction motor 2 = Rotating synchronous motor</p> <p>The type information must be entered to filter motor-specific parameters and to optimize the operating characteristics and behavior. For example, for synchronous motors, power factor (p0308) is neither used nor displayed (in the BOP/IOP).</p>		
Value:	<p>0: No motor 1: Induction motor (rotating) 2: Synchronous motor (rotating, permanent-magnet) 10: 1LE1 standard induction motor series 13: 1LG6 standard induction motor series 17: 1LA7 standard induction motor series 19: 1LA9 standard induction motor series 100: 1LE1 standard induction motor 204: 1LE4 synchronous motor</p>		
Dependency:	When selecting a motor type from the 1LA7 series, parameters p0335, p0626, p0627, and p0628 of the thermal motor model are pre-assigned as a function of p0307 and p0311.		
Note:	<p>Once the Control Unit has been powered up for the first time or if the factory settings have been defined accordingly, the motor type is pre-configured to induction motor (p0300 = 1).</p> <p>If a motor type has not been selected (p0300 = 0), then the drive commissioning routine cannot be exited.</p>		
p0301[0...n]	Motor code number selection / Mot code No. sel		
	Access level: 2	Calculated: -	Data type: Unsigned16
	Can be changed: C(1, 3)	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 65535	Factory setting 0
Description:	<p>The parameter is used to select a motor from a motor parameter list.</p> <p>When changing the code number (with the exception to the value 0), all of the motor parameters are pre-assigned from the internally available parameter lists.</p>		
Dependency:	Code numbers can only be selected for motor types that correspond to the motor type selected in p0300. Refer to: p0300		
Note:	<p>The motor code number can only be changed if the matching catalog motor was first selected in p0300.</p> <p>When selecting a catalog motor (p0300 >= 100), drive commissioning can only be exited if a code number is selected.</p>		

p0304[0...n]	Rated motor voltage / Mot U_{rated}		
	Access level: 1	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(1, 3)	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6300, 6724
	Min 0 [Vrms]	Max 20000 [Vrms]	Factory setting 0 [Vrms]
Description:	Sets the rated motor voltage (rating plate).		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	When the parameter value is entered the connection type of the motor (star-delta) must be taken into account. Once the Control Unit has booted for the first time or if the factory settings have been restored, the parameter is pre-assigned to match the power unit.		
p0305[0...n]	Rated motor current / Mot I_{rated}		
	Access level: 1	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(1, 3)	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6300
	Min 0.00 [Arms]	Max 10000.00 [Arms]	Factory setting 0.00 [Arms]
Description:	Sets the rated motor current (rating plate).		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Notice:	If p0305 is changed during quick commissioning (p0010 = 1), then the maximum current p0640 is pre-assigned accordingly.		
Note:	When the parameter value is entered the connection type of the motor (star-delta) must be taken into account. Once the Control Unit has booted for the first time or if the factory settings have been restored, the parameter is pre-assigned to match the power unit.		
p0306[0...n]	Number of motors connected in parallel / Motor qty		
	Access level: 1	Calculated: -	Data type: Unsigned8
	Can be changed: C(1, 3)	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 1	Max 50	Factory setting 1
Description:	Sets the number (count) of motors that can be operated in parallel using one motor data set. Depending on the motor number entered, internally an equivalent motor is calculated. The following should be observed in motors connected in parallel: The following rating plate data should only be entered for one motor: - resistances and inductances: p0350 ... p0361 - currents: p0305, p0320, p0323, p0325, p0329 - power ratings: p0307 - masses/moments of inertia: p0341, p0344 All other parameters take into account the replacement/equivalent motor (e.g. r0331, r0333). Refer to: r0331, r0370, r0373, r0374, r0376, r0377, r0382		
Dependency:	The motors to be connected in parallel must be of the same type and size (same order no. (MLFB)).		
Caution:	The mounting regulations when connecting motors in parallel must be carefully maintained! The number of motors set must correspond to the number of motors that are actually connected in parallel. After changing p0306, it is imperative that the control parameters are adapted (e.g. using automatic calculation with p0340 = 1, p3900 > 0). For synchronous motors connected in parallel with p1300 >= 20, the following applies: - the individual motors must be mechanically coupled with one another and the EMF must be aligned to one another.		
			

For induction motors that are connected in parallel, but which are not mechanically coupled with one another, then the following applies:

- an individual motor must not be loaded beyond its stall point.

Notice: If p0306 is changed during quick commissioning (p0010 = 1), then the maximum current p0640 is appropriately pre-assigned.

Note: Only operation with U/f characteristic makes sense if more than 10 identical motors are connected in parallel.

p0307[0...n]	Rated motor power / Mot P_{rated}		
	Access level: 1	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(1, 3)	Scaling: -	Dyn. index: MDS
	Units group: 14_6	Unit selection: p0100	Func. diagram: -
	Min 0.00 [kW]	Max 100000.00 [kW]	Factory setting 0.00 [kW]
Description:	Sets the rated motor power (rating plate).		
Dependency:	IECdrives (p0100 = 0): Units kW NEMA drives (p0100 = 1): Units hp NEMA drives (p0100 = 2): Unit kW Refer to: p0100		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	Once the Control Unit has booted for the first time or if the factory settings have been restored, the parameter is pre-assigned to match the power unit.		

p0308[0...n]	Rated motor power factor / Mot cos_{phi}_{rated}		
	Access level: 1	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(1, 3)	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.000	Max 1.000	Factory setting 0.000
Description:	Sets the rated motor power factor (cos phi, rating plate). For a parameter value of 0.000, the power factor is internally calculated and displayed in r0332.		
Dependency:	This parameter is only available for p0100 = 0, 2. Refer to: p0100, p0309, r0332		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	The parameter is not used for synchronous motors (p0300 = 2xx). Once the Control Unit has booted for the first time or if the factory settings have been restored, the parameter is pre-assigned to match the power unit.		

p0309[0...n]	Rated motor efficiency / Mot eta_{rated}		
	Access level: 1	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(1, 3)	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.0 [%]	Max 99.9 [%]	Factory setting 0.0 [%]
Description:	Sets the rated motor efficiency (rating plate). For a parameter value of 0.0, the power factor is internally calculated and displayed in r0332.		
Dependency:	This parameter is only available for NEMA motors (p0100 = 1). Refer to: p0100, p0308, r0332		
Note:	The parameter is not used for synchronous motors.		

p0310[0...n]	Rated motor frequency / Mot f_{rated}		
	Access level: 1	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(1, 3)	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6300
	Min 0.00 [Hz]	Max 650.00 [Hz]	Factory setting 0.00 [Hz]
Description:	Sets the rated motor frequency (rating plate).		
Dependency:	The number of pole pairs (r0313) is automatically re-calculated when the parameter is changed (together with p0311), if p0314 = 0. The rated frequency is restricted to values between 1.00 Hz and 650.00 Hz. Refer to: p0311, r0313, p0314		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Notice:	If p0310 is changed during quick commissioning (p0010 = 1), the maximum speed p1082, which is also associated with quick commissioning, is pre-assigned accordingly. This is not the case when commissioning the motor (p0010 = 3).		
Note:	Once the Control Unit has been booted up for the first time or if the factory settings have been defined accordingly, the parameter is defined in accordance with the power unit.		
p0311[0...n]	Rated motor speed / Mot n_{rated}		
	Access level: 1	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(1, 3)	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.0 [rpm]	Max 210000.0 [rpm]	Factory setting 0.0 [rpm]
Description:	Sets the rated motor speed (rating plate). For p0311 = 0, the rated motor slip of induction motors is internally calculated and displayed in r0330. It is especially important to correctly enter the rated motor speed for vector control and slip compensation for U/f control.		
Dependency:	If p0311 is changed and for p0314 = 0, the pole pair (r0313) is re-calculated automatically. Refer to: p0310, r0313, p0314		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Notice:	If p0311 is changed during quick commissioning (p0010 = 1), the maximum speed p1082, which is also associated with quick commissioning, is pre-assigned accordingly. This is not the case when commissioning the motor (p0010 = 3).		
Note:	Once the Control Unit has been booted up for the first time or if the factory settings have been defined accordingly, the parameter is defined in accordance with the power unit.		
p0312[0...n]	Rated motor torque / Mot M_{rated}		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3)	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00 [Nm]	Max 1000000.00 [Nm]	Factory setting 0.00 [Nm]
Description:	Sets the rated motor torque (rating plate).		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		

r0313[0...n]	Motor pole pair number, actual (or calculated) / Mot PolePairNo act		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 5300
	Min -	Max -	Factory setting -
Description:	Displays the number of motor pole pairs. The value is used for internal calculations. r0313 = 1: 2-pole motor r0313 = 2: 4-pole motor, etc.		
Dependency:	For p0314 > 0, the entered value is displayed in r0313. For p0314 = 0, the pole pair number (r0313) is automatically calculated from the rated power (p0307), rated frequency (p0310) and rated speed (p0311). Refer to: p0307, p0310, p0311, p0314		
Note:	For the automatic calculation, the pole pair number is set to the value of 2 if the rated speed or the rated frequency is zero.		
p0314[0...n]	Motor pole pair number / Mot pole pair No.		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: C(1, 3)	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 255	Factory setting 0
Description:	Sets the motor pole pair number. p0314 = 1: 2-pole motor p0314 = 2: 4-pole motor, etc.		
Dependency:	For p0314 = 0, the pole pair number is automatically calculated from the rated frequency (p0310) and the rated speed (p0311) and displayed in r0313.		
Notice:	If p0314 is changed during quick commissioning (p0010 = 1), the maximum speed p1082, which is also associated with quick commissioning, is pre-assigned accordingly. For induction motors, the value need only be input if the rated data of a generator is entered therefore resulting in a negative rated slip. In this case, the number of pole pairs in r0313 is too low by 1 and must be manually corrected.		
p0316[0...n]	Motor torque constant / Mot kT		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(1, 3), U, T	Scaling: -	Dyn. index: MDS
	Units group: 28_1	Unit selection: p0100	Func. diagram: -
	Min 0.00 [Nm/A]	Max 400.00 [Nm/A]	Factory setting 0.00 [Nm/A]
Description:	Sets the torque constant of the synchronous motor. p0316 = 0: The torque constant is calculated from the motor data. p0316 > 0: The selected value is used as torque constant.		
Dependency:	Refer to: r0334		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	This parameter is not used for induction motors (p0300 = 1xx).		

p0318[0...n]	Motor stall current / Mot I_standstill		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3)	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 8017
	Min 0.00 [Arms]	Max 10000.00 [Arms]	Factory setting 0.00 [Arms]
Description:	Sets the stall current for synchronous motors (p0300 = 2xx).		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	This parameter is not used for induction motors (p0300 = 1xx).		
p0320[0...n]	Motor rated magnetizing current/short-circuit current / Mot I_mag_rated		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 5722
	Min 0.000 [Arms]	Max 5000.000 [Arms]	Factory setting 0.000 [Arms]
Description:	Induction motors: Sets the rated motor magnetizing current. For p0320 = 0.000 the magnetizing current is internally calculated and displayed in r0331. Synchronous motors: Sets the rated motor short-circuit current.		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	The magnetizing current p0320 for induction motors is reset when quick commissioning is exited with p3900 > 0. If, for induction motors, the magnetizing current p0320 is changed outside the commissioning phase (p0010 > 0), then the magnetizing inductance p0360 is changed so that the EMF r0337 remains constant.		
p0322[0...n]	Maximum motor speed / Mot n_max		
	Access level: 1	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(1, 3)	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.0 [rpm]	Max 210000.0 [rpm]	Factory setting 0.0 [rpm]
Description:	Sets the maximum motor speed.		
Dependency:	Refer to: p1082		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Notice:	If p0322 is changed during quick commissioning (p0010 = 1), the maximum speed p1082, which is also associated with quick commissioning, is pre-assigned accordingly.		
p0323[0...n]	Maximum motor current / Mot I_max		
	Access level: 1	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(1, 3)	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 5722
	Min 0.00 [Arms]	Max 20000.00 [Arms]	Factory setting 0.00 [Arms]
Description:	Sets the maximum permissible motor current (e.g. de-magnetizing current for synchronous motors).		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Notice:	If p0323 is changed during quick commissioning (p0010 = 1), then the maximum current p0640 is pre-assigned accordingly.		

Note: The parameter has no effect for induction motors.
The parameter has not effect for synchronous motors if a value of 0.0 is entered. The user-selectable current limit is entered into p0640.

p0325[0...n]	Motor pole position identification current 1st phase / Mot PolID I 1st ph		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.000 [Arms]	Max 10000.000 [Arms]	Factory setting 0.000 [Arms]
Description:	Sets the current for the 1st phase of the two-stage technique for pole position identification routine. The current of the 2nd phase is set in p0329. The two-stage technique is selected with p1980 = 4.		
Dependency:	Refer to: p0329, p1980, r1984, r1985, r1987 Refer to: F07969		
Notice:	When the motor code (p0301) is changed, it is possible that p0325 is not pre-assigned. p0325 can be pre-assigned using p0340 = 3.		
Note:	The value is automatically pre-assigned for the following events: - For p0325 = 0 and automatic calculation of the closed-loop control parameters (p0340 = 1, 2, 3). - for quick commissioning (p3900 = 1, 2, 3).		

p0326[0...n]	Motor stall torque correction factor / Mot M_stall_corr		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 5 [%]	Max 300 [%]	Factory setting 100 [%]
Description:	Sets the correction factor for the stall torque/force at a 600 V DC link voltage.		
Notice:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		

p0327[0...n]	Optimum motor load angle / Mot phi_load opt		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 5722
	Min 0.0 [°]	Max 135.0 [°]	Factory setting 90.0 [°]
Description:	Sets the optimum load angle for synchronous motors with reluctance torque. The load angle is measured at the rated motor current.		
Notice:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	This parameter has no significance for induction motors. For synchronous motors without reluctance torque, a angle of 90 degrees must be set. When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		

p0328[0...n]	Motor reluctance torque constant / Mot kT_reluctance		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min -1000.00 [mH]	Max 1000.00 [mH]	Factory setting 0.00 [mH]
Description:	Sets the reluctance torque constant for synchronous motors with reluctance torque (e.g. 1FE ... motors). This parameter has no significance for induction motors.		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	For synchronous motors without reluctance torque, the value 0 must be set.		
p0329[0...n]	Motor pole position identification current / Mot PolID current		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00 [Arms]	Max 10000.00 [Arms]	Factory setting 0.00 [Arms]
Description:	Sets the current for the pole position identification routine (p1980 = 1). For a two-stage technique (p1980 = 4), the current is set for the 2nd phase. The current for the 1st phase is set in p0325.		
Dependency:	If a maximum current (p0323) was not parameterized, then p0329 is limited to the rated motor current. Refer to: p0325, p1980, r1984, r1985, r1987 Refer to: F07969		
Notice:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
r0330[0...n]	Rated motor slip / Mot slip_rated		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [Hz]	Max - [Hz]	Factory setting - [Hz]
Description:	Displays the rated motor slip.		
Dependency:	The rated slip is calculated from the rated frequency, rated speed and number of pole pairs. Refer to: p0310, p0311, r0313		
Note:	The parameter is not used for synchronous motors (p0300 = 2xx).		
r0331[0...n]	Actual motor magnetizing current/short-circuit current / Mot I_mag_rtd act		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 5722, 6722, 6724
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Induction motor: Displays the rated magnetizing current from p0320. For p0320 = 0, the internally calculated magnetizing current is displayed. Synchronous motor: Displays the rated short-circuit current from p0320.		
Dependency:	If p0320 was not entered, then the parameter is calculated from the rating plate parameters.		

r0332[0...n]	Rated motor power factor / Mot cos_phi_rated		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting -
Description:	Displays the rated power factor for induction motors. For IEC motors, the following applies (p0100 = 0): For p0308 = 0, the internally-calculated power factor is displayed. For p0308 > 0, this value is displayed. For NEMA motors, the following applies (p0100 = 1): For p0309 = 0, the internally-calculated power factor is displayed. For p0309 > 0, this value is converted into the power factor and displayed.		
Dependency:	If p0308 is not entered, the parameter is calculated from the rating plate parameters.		
Note:	The parameter is not used for synchronous motors (p0300 = 2xx).		

r0333[0...n]	Rated motor torque / Mot M_rated		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: 7_4	Unit selection: p0100	Func. diagram: -
	Min - [Nm]	Max - [Nm]	Factory setting - [Nm]
Description:	Displays the rated motor torque.		
Dependency:	IEC drives (p0100 = 0): unit Nm NEMA drives (p0100 = 1): unit lbf ft		
Note:	For induction motors, r0333 is calculated from p0307 and p0311. For synchronous motors, r0333 is calculated from p0305, p0316, p0327 and p0328.		

r0334[0...n]	Actual motor-torque constant / Mot kT act		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: 28_1	Unit selection: p0100	Func. diagram: -
	Min - [Nm/A]	Max - [Nm/A]	Factory setting - [Nm/A]
Description:	Displays the torque constant of the synchronous motor used.		
Dependency:	IEC drives (p0100 = 0): unit Nm / A NEMA drives (p0100 = 1): unit lbf ft / A		
Note:	This parameter is not used for induction motors (p0300 = 1xx). For synchronous motors, parameter r0334 is calculated from p0305, p0307 and p0311.		

p0335[0...n]	Motor cooling type / Mot cool type		
	Access level: 2	Calculated: -	Data type: Integer16
	Can be changed: C(1, 3), T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 128	Factory setting 0
Description:	Sets the motor cooling system used.		
Value:	0: Non-ventilated 1: Forced cooling 2: Liquid cooling 128: No fan		

List of parameters

Dependency:	For 1LA7 motors (p0300), the parameter is pre-set as a function of p0307 and p0311.
Notice:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.
Note:	The parameter influences the thermal 3-mass motor model. 1LA7 motors, frame size 56 are operated without fan.

r0337[0...n]	Rated motor EMF / Mot EMF_rated
Access level: 4	Calculated: -
Can be changed: -	Scaling: -
Units group: -	Unit selection: -
Min - [Vrms]	Max - [Vrms]
	Data type: FloatingPoint32
	Dyn. index: MDS
	Func. diagram: -
	Factory setting - [Vrms]
Description:	Displays the rated EMF of the motor.
Note:	EMF: Electromotive force

p0340[0...n]	Automatic calculation motor/control parameters / Calc auto par
Access level: 2	Calculated: -
Can be changed: C(3), T	Scaling: -
Units group: -	Unit selection: -
Min 0	Max 5
	Data type: Integer16
	Dyn. index: DDS, p0180
	Func. diagram: -
	Factory setting 0
Description:	Setting to automatically calculate motor parameters and U/f open-loop and closed-loop control parameters from the rating plate data.
Value:	0: No calculation 1: Complete calculation 2: Calculation of equivalent circuit diagram parameters 3: Calculation of closed-loop control parameters 4: Calculation of controller parameters 5: Calculation of technological limits and threshold values
Notice:	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0. The following parameters are influenced using p0340: p0340 = 1: --> All of the parameters influenced for p0340 = 2, 3, 4, 5 --> p0341, p0342, p0344, p0612, p0640, p1082, p1231, p1232, p1333, p1349, p1611, p1654, p1726, p1825, p1828 ... p1832, p1909, p1959, p2000, p2001, p2002, p2003, p3927, p3928 p0340 = 2: --> p0350, p0354 ... p0360 --> p0625 (matching p0350), p0626 ... p0628 p0340 = 3: --> All of the parameters influenced for p0340 = 4, 5 --> p0346, p0347, p0622, p1320 ... p1327, p1582, p1584, p1616, p1755, p1756, p2178 p0340 = 4: --> p1290, p1292, p1293, p1338, p1339, p1340, p1341, p1345, p1346, p1461, p1463, p1464, p1465, p1470, p1472, p1703, p1715, p1717, p1740, p1756, p1764, p1767, p1780, p1781, p1783, p1785, p1786, p1795 p0340 = 5: --> p1037, p1038, p1520, p1521, p1530, p1531, p1574, p1802, p1803, p2140, p2142, p2148, p2150, p2157, p2159, p2161, p2162, p2163, p2164, p2170, p2175, p2177, p2179, p2194
Note:	p0340 = 1 contains the calculations of p0340 = 2, 3, 4, 5. p0340 = 2 calculates the motor parameters (p0350 ... p0360). p0340 = 3 contains the calculations of p0340 = 4, 5.

p0340 = 4 only calculates the controller parameters.

p0340 = 5 only calculates the controller limits.

When quick commissioning is exited using p3900 > 0, p0340 is automatically set to 1.

At the end of the calculations, p0340 is automatically set to 0.

p0341[0...n]	Motor moment of inertia / Mot M_mom of inert		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: 25_1	Unit selection: p0100	Func. diagram: 1700, 5042, 5210, 6030, 6031
	Min 0.000000 [kgm ²]	Max 100000.000000 [kgm ²]	Factory setting 0.000000 [kgm ²]
Description:	Sets the motor moment of inertia (without load).		
Dependency:	IEC drives (p0100 = 0): unit kg m ² NEMA drives (p0100 = 1): unit lb ft ² The parameter value is included, together with p0342, in the rated starting time of the motor. Refer to: p0342, r0345		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	The product of p0341 * p0342 is used when the speed controller (p0340 = 4) is calculated automatically.		
p0342[0...n]	Ratio between the total and motor moment of inertia / Mot MomInert Ratio		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 1700, 5042, 5210, 6030, 6031
	Min 1.000	Max 10000.000	Factory setting 1.000
Description:	Sets the ratio between the total moment of inertia/mass (load + motor) and the intrinsic motor moment of inertia/mass (no load).		
Dependency:	This means that together with p0341, the rated starting (accelerating time) of the motor is calculated for a vector drive. Refer to: p0341, r0345		
Note:	The product of p0341 * p0342 is used when the speed controller (p0340 = 4) is calculated automatically.		
r0343[0...n]	Rated motor current identified / Mot I_rated ident		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00 [Arms]	Max 10000.00 [Arms]	Factory setting - [Arms]
Description:	Displays the identified rated motor current.		
p0344[0...n]	Motor weight (for the thermal motor model) / Mot weight th mod		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: C(3), T	Scaling: -	Dyn. index: MDS
	Units group: 27_1	Unit selection: p0100	Func. diagram: -
	Min 0.0 [kg]	Max 50000.0 [kg]	Factory setting 0.0 [kg]
Description:	Sets the motor weight.		
Dependency:	IEC drives (p0100 = 0): unit kg NEMA drives (p0100 = 1): unit lb		

- Caution:** When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.
- Note:** The parameter influences the thermal 3 mass model of the induction motor.
The parameter is not used for synchronous motors (p0300 = 2xx).

r0345[0...n]	Nominal motor starting time / Mot t_start_rated		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [s]	Max - [s]	Factory setting - [s]
Description:	Displays the rated motor starting time. This time corresponds to the time from standstill up to reaching the motor rated speed and the acceleration with motor rated torque (r0333).		
Dependency:	Refer to: r0313, r0333, p0341, p0342		

p0346[0...n]	Motor excitation build-up time / Mot t_excitation		
	Access level: 3	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.000 [s]	Max 20.000 [s]	Factory setting 0.000 [s]

Description: Sets the excitation build-up time of the motor.
This involves the delay time between enabling the pulses and enabling the ramp-function generator. The induction motor is magnetized during this time.

Caution: If there is insufficient magnetization under load or if the acceleration rate is too high, then an induction motor can stall (refer to the note).




Note: The parameter is calculated using p0340 = 1, 3.
For induction motors, the result depends on the rotor time constant (r0384). If this time is excessively reduced, this can result in an inadequate magnetizing of the induction motor. This is the case if the current limit is reached while building up magnetizing. For induction motors, the parameter cannot be set to 0 s (internal limit: 0.1 * r0384).
For permanent-magnet synchronous motors and vector control, the value depends on the stator time constant (r0386). Here, it defines the time to establish the current for encoderless operation immediately after the pulses have been enabled.

p0347[0...n]	Motor de-excitation time / Mot t_de-excitat.		
	Access level: 3	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.000 [s]	Max 20.000 [s]	Factory setting 0.000 [s]

Description: Sets the de-magnetizing time (for induction motors) after the inverter pulses have been canceled.
The inverter pulses cannot be switched in (enabled) within this delay time.

Note: The parameter is calculated using p0340 = 1, 3.
For induction motors, the result depends on the rotor time constant (r0384).
if this time is shortened too much, then this can result in an inadequate de-magnetizing of the induction motor and in an overcurrent condition when the pulses are subsequently enabled (only when the flying restart function is activated and the motor is rotating).

p0350[0...n]	Motor stator resistance cold / Mot R_stator cold		
	Access level: 3	Calculated: p0340 = 1,2	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00000 [ohm]	Max 2000.00000 [ohm]	Factory setting 0.00000 [ohm]
Description:	Sets the stator resistance of the motor at ambient temperature p0625 (phase value).		
Dependency:	Refer to: p0625, r1912		
Notice:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	The motor identification routine determines the stator resistance from the total stator resistance minus the cable resistance (p0352).		
p0352[0...n]	Cable resistance / R_cable		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00000 [ohm]	Max 120.00000 [ohm]	Factory setting 0.00000 [ohm]
Description:	Resistance of the power cable between the power unit and motor.		
Caution:	The cable resistance should be entered prior to motor data identification. If it is used subsequently, the difference by which p0352 was changed must be subtracted from the stator resistance p0350 or motor data identification must be repeated.		
			
Note:	The parameter influences the temperature adaptation of the stator resistance. The motor identification sets the cable resistance to 20% of the measured total resistance if p0352 is zero at the time that the measurement is made. If p0352 is not zero, then the value is subtracted from the measured total stator resistance to calculate stator resistance p0350. In this case, p0350 is a minimum of 10% of the measured value. The cable resistance is reset when quick commissioning is exited with p3900 > 0. If the stator resistance is available in a motor list, and if p0352 is still zero, then the cable resistance is generated from the difference between the measured value and list value.		
p0354[0...n]	Motor rotor resistance cold / Mot R_r cold		
	Access level: 3	Calculated: p0340 = 1,2	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6727
	Min 0.00000 [ohm]	Max 300.00000 [ohm]	Factory setting 0.00000 [ohm]
Description:	Sets the rotor/secondary section resistance of the motor at the ambient temperature p0625. This parameter value is automatically calculated using the motor model (p0340 = 1, 2) or using the motor data identification routine (p1910).		
Dependency:	Refer to: p0625		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	The parameter is not used for synchronous motors (p0300 = 2).		

p0356[0...n]	Motor stator leakage inductance / Mot L_stator leak.		
	Access level: 3	Calculated: p0340 = 1,2	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00000 [mH]	Max 1000.00000 [mH]	Factory setting 0.00000 [mH]
Description:	Induction machine: sets the stator leakage inductance of the motor. Synchronous motor: Sets the stator quadrature axis inductance of the motor. This parameter value is automatically calculated using the motor model (p0340 = 1, 2) or using the motor identification routine (p1910).		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	If the stator leakage inductance (p0356) for induction motors is changed outside the commissioning phase (p0010 > 0), the magnetizing inductance (p0360) is automatically adapted to the new EMF (r0337). You are then advised to repeat the measurement for the saturation characteristic (p1960). For permanent-magnet synchronous motors (p0300 = 2), this is the non-saturated value and is, therefore, ideal for a low current.		
p0357[0...n]	Motor stator inductance d axis / Mot L_stator d		
	Access level: 3	Calculated: p0340 = 1,2	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00000 [mH]	Max 1000.00000 [mH]	Factory setting 0.00000 [mH]
Description:	Sets the stator direct-axis inductance of the synchronous motor. This parameter value is automatically calculated using the motor model (p0340 = 1, 2) or using the motor identification routine (p1910).		
Note:	For permanent-magnet synchronous motors (p0300 = 2), this is the non-saturated value and is ideal for a low current.		
p0358[0...n]	Motor rotor leakage inductance / Mot L_rot leak		
	Access level: 3	Calculated: p0340 = 1,2	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6727
	Min 0.00000 [mH]	Max 1000.00000 [mH]	Factory setting 0.00000 [mH]
Description:	Sets the rotor/secondary section leakage inductance of the motor. The value is automatically calculated using the motor model (p0340 = 1, 2) or using the motor identification routine (p1910).		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	If the rotor leakage inductance (p0358) for induction motors is changed outside the commissioning phase (p0010 > 0), then the magnetizing inductance (p0360) is automatically adapted to the new EMF (r0337). You are then advised to repeat the measurement for the saturation characteristic (p1960).		

p0360[0...n]	Motor magnetizing inductance / Mot Lh		
	Access level: 3	Calculated: p0340 = 1,2	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6727
	Min 0.00000 [mH]	Max 10000.00000 [mH]	Factory setting 0.00000 [mH]
Description:	Sets the magnetizing inductance of the motor. This parameter value is automatically calculated using the motor model (p0340 = 1, 2) or using the motor identification routine (p1910).		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	The parameter is not used for synchronous motors (p0300 = 2).		
p0362[0...n]	Motor saturation characteristic flux 1 / Mot saturat.flux 1		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6723, 6726
	Min 10.0 [%]	Max 300.0 [%]	Factory setting 60.0 [%]
Description:	The saturation characteristics (flux as a function of the magnetizing current) is defined using 4 points. This parameter specifies the y coordinate (flux) for the 1st value pair of the characteristic. Sets the first flux value of the saturation characteristic as a [%] referred to the rated motor flux (100 %).		
Dependency:	The following applies for the flux values: p0362 < p0363 < p0364 < p0365 Refer to: p0366		
Note:	For induction motors, p0362 = 100 % corresponds to the rated motor flux. When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		
p0363[0...n]	Motor saturation characteristic flux 2 / Mot saturat.flux 2		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6723, 6726
	Min 10.0 [%]	Max 300.0 [%]	Factory setting 85.0 [%]
Description:	The saturation characteristics (flux as a function of the magnetizing current) is defined using 4 points. This parameter specifies the y coordinate (flux) for the 2nd value pair of the characteristic. Sets the second flux value of the saturation characteristic as a [%] referred to the rated motor flux (100 %).		
Dependency:	The following applies for the flux values: p0362 < p0363 < p0364 < p0365 Refer to: p0367		
Note:	For induction motors, p0363 = 100 % corresponds to the rated motor flux. When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		

p0364[0...n]	Motor saturation characteristic flux 3 / Mot saturat.flux 3		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6723, 6726
	Min 10.0 [%]	Max 300.0 [%]	Factory setting 115.0 [%]
Description:	The saturation characteristics (flux as a function of the magnetizing current) is defined using 4 points. This parameter specifies the y coordinate (flux) for the 3rd value pair of the characteristic. Sets the third flux value of the saturation characteristic as a [%] referred to the rated motor flux (100 %).		
Dependency:	The following applies for the flux values: p0362 < p0363 < p0364 < p0365 Refer to: p0368		
Note:	For induction motors, p0364 = 100 % corresponds to the rated motor flux. When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		
p0365[0...n]	Motor saturation characteristic flux 4 / Mot saturat.flux 4		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6723, 6726
	Min 10.0 [%]	Max 300.0 [%]	Factory setting 125.0 [%]
Description:	The saturation characteristics (flux as a function of the magnetizing current) is defined using 4 points. This parameter specifies the y coordinate (flux) for the 4th value pair of the characteristic. Sets the fourth flux value of the saturation characteristic as a [%] referred to the rated motor flux (100 %).		
Dependency:	The following applies for the flux values: p0362 < p0363 < p0364 < p0365 Refer to: p0369		
Note:	For induction motors, p0365 = 100 % corresponds to the rated motor flux. When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		
p0366[0...n]	Motor saturation characteristic I_mag 1 / Mot sat. I_mag 1		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6723, 6726
	Min 5.0 [%]	Max 800.0 [%]	Factory setting 50.0 [%]
Description:	The saturation characteristics (flux as a function of the magnetizing current) is defined using 4 points. This parameter specifies the x coordinate (magnetizing current) for the 1st value pair of the characteristic. Sets the first magnetization current of the saturation characteristic in [%] with reference to the rated magnetization current (r0331).		
Dependency:	The following applies for the magnetizing currents: p0366 < p0367 < p0368 < p0369 Refer to: p0362		
Note:	When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		

p0367[0...n]	Motor saturation characteristic I_mag 2 / Mot sat. I_mag 2		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6723, 6726
	Min 5.0 [%]	Max 800.0 [%]	Factory setting 75.0 [%]
Description:	The saturation characteristics (flux as a function of the magnetizing current) is defined using 4 points. This parameter specifies the x coordinate (magnetizing current) for the 2nd value pair of the characteristic. Sets the second magnetization current of the saturation characteristic in [%] with reference to the rated magnetization current (r0331).		
Dependency:	The following applies for the magnetizing currents: p0366 < p0367 < p0368 < p0369 Refer to: p0363		
Note:	When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		
p0368[0...n]	Motor saturation characteristic I_mag 3 / Mot sat. I_mag 3		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6723, 6726
	Min 5.0 [%]	Max 800.0 [%]	Factory setting 150.0 [%]
Description:	The saturation characteristics (flux as a function of the magnetizing current) is defined using 4 points. This parameter specifies the x coordinate (magnetizing current) for the 3rd value pair of the characteristic. Sets the third magnetization current of the saturation characteristic in [%] with reference to the rated magnetization current (r0331).		
Dependency:	The following applies for the magnetizing currents: p0366 < p0367 < p0368 < p0369 Refer to: p0364		
Note:	When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		
p0369[0...n]	Motor saturation characteristic I_mag 4 / Mot sat. I_mag 4		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6723, 6726
	Min 5.0 [%]	Max 800.0 [%]	Factory setting 210.0 [%]
Description:	The saturation characteristics (flux as a function of the magnetizing current) is defined using 4 points. This parameter specifies the x coordinate (magnetizing current) for the 4th value pair of the characteristic. Sets the fourth magnetization current of the saturation characteristic in [%] with reference to the rated magnetization current (r0331).		
Dependency:	The following applies for the magnetizing currents: p0366 < p0367 < p0368 < p0369 Refer to: p0365		
Note:	When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		

r0370[0...n]	Motor stator resistance cold / Mot R_stator cold		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [ohm]	Max - [ohm]	Factory setting - [ohm]
Description:	Displays the motor stator resistance at an ambient temperature (p0625). The value does not include the cable resistance.		
Dependency:	Refer to: p0625		
r0372[0...n]	Cable resistance / Mot R_cable		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [ohm]	Max - [ohm]	Factory setting - [ohm]
Description:	Displays the total cable resistance between power unit and motor, as well as the internal converter resistance.		
Dependency:	Refer to: r0238, p0352		
r0373[0...n]	Motor rated stator resistance / Mot R_stator rated		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [ohm]	Max - [ohm]	Factory setting - [ohm]
Description:	Displays the rated motor stator resistance at rated temperature (total of p0625 and p0627).		
Dependency:	Refer to: p0627		
Note:	The parameter is not used for synchronous motors (p0300 = 2xx).		
r0374[0...n]	Motor rotor resistance cold / Mot R_r cold		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [ohm]	Max - [ohm]	Factory setting - [ohm]
Description:	Displays the motor rotor resistance at an ambient temperature p0625.		
Dependency:	Refer to: p0625		
Note:	The parameter is not used for synchronous motors (p0300 = 2xx).		
r0376[0...n]	Rated motor rotor resistance / Mot R_rotor rated		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [ohm]	Max - [ohm]	Factory setting - [ohm]
Description:	Displays the nominal rotor resistance of the motor at the rated temperature. The value is the sum of p0625 and p0628.		
Dependency:	Refer to: p0628		
Note:	The parameter is not used for synchronous motors (p0300 = 2xx).		

r0377[0...n]	Motor leakage inductance total / Mot L_leak total		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [mH]	Max - [mH]	Factory setting - [mH]
Description:	Displays the stator leakage inductance of the motor including the motor reactor (p0233).		
r0378[0...n]	Motor stator inductance d axis / Mot L_stator d		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [mH]	Max - [mH]	Factory setting - [mH]
Description:	Displays the stator longitudinal inductance of the synchronous motor including the motor reactor (p0233).		
r0382[0...n]	Motor magnetizing inductance transformed / Mot L_magn transf		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [mH]	Max - [mH]	Factory setting - [mH]
Description:	Displays the magnetizing inductance of the motor.		
Note:	The parameter is not used for synchronous motors (p0300 = 2xx).		
r0384[0...n]	Motor rotor time constant / damping time constant d axis / Mot T_rotor/T_Dd		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6722
	Min - [ms]	Max - [ms]	Factory setting - [ms]
Description:	Displays the rotor time constant.		
Note:	The parameter is not used for synchronous motors. The value is calculated from the total of the inductances on the rotor side (p0358, p0360) divided by the rotor resistance (p0354). The temperature adaptation of the rotor resistance for induction motors is not taken into account.		
r0386[0...n]	Motor stator leakage time constant / Mot T_stator leak		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [ms]	Max - [ms]	Factory setting - [ms]
Description:	Displays the stator leakage time constant.		
Note:	The value is calculated from the total of all leakage inductances (p0233, p0356, p0358) divided by the total of all motor resistances (p0350, p0352, p0354). The temperature adaptation of the resistances is not taken into account.		

r0395[0...n]	Actual stator resistance / R_stator act		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [ohm]	Max - [ohm]	Factory setting - [ohm]
Description:	Displays the actual stator resistance (phase value). The parameter value also contains the temperature-independent cable resistance.		
Dependency:	In the case of induction motors the parameter is also affected by the motor temperature model. Refer to: p0350, p0352, p0620		
Note:	In each case, only the stator resistance of the active Motor Data Set is included with the stator temperature of the thermal motor model.		
r0396[0...n]	Actual rotor resistance / R_rotor act		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 6730
	Min - [ohm]	Max - [ohm]	Factory setting - [ohm]
Description:	Displays the actual rotor resistance (phase value). The parameter is affected by the motor temperature model.		
Dependency:	Refer to: p0354, p0620		
Note:	In each case, only the rotor resistance of the active Motor Data Set is included with the rotor temperature of the thermal motor model. This parameter is not used for synchronous motors (p0300 = 2xx).		
p0397[0...n]	Angle magnetic decoupling maximum angle / Magn decpl max_ang		
	Access level: 4	Calculated: p0340 = 1,2	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.0 [°]	Max 90.0 [°]	Factory setting 90.0 [°]
Description:	Maximum angle when calculating the polynomial function to decouple the magnetic flux axes for permanent-magnet synchronous motors (see p0398, p0399).		
p0400[0...n]	Encoder type selection / Enc_typ sel		
CU240D-2_DP	Access level: 1	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: C(1, 4)	Scaling: -	Dyn. index: EDS
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 1580, 4704
CU240D-2_PN_F	Min 0	Max 9999	Factory setting 0
Description:	Selects the encoder from the list of encoder types supported.		
Value:	0: No encoder 3001: 1024 HTL A/B R 3003: 2048 HTL A/B R 3005: 1024 HTL A/B 3007: 2048 HTL A/B 9999: User-defined		

- Caution:** An encoder type with p0400 < 9999 defines an encoder for which there is an encoder parameter list. When selecting a catalog encoder (p0400 < 9999) the parameters from the encoder parameter list cannot be changed (write protection). To remove write protection, the encoder type should be set to a third-party encoder (p0400 = 9999).
- Note:** The encoder data (e.g. pulse number p0408) can only be changed when p0400 = 9999.

p0400[0...n] Encoder type selection / Enc_type sel

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer16
CU250D-2_PN_F	Can be changed: C(1, 4)	Scaling: -	Dyn. index: EDS
	Units group: -	Unit selection: -	Func. diagram: 1580, 4704
	Min	Max	Factory setting
	0	9999	0

Description: Selects the encoder from the list of encoder types supported.

Value:

- 0: No encoder
- 3001: 1024 HTL A/B R
- 3003: 2048 HTL A/B R
- 3005: 1024 HTL A/B
- 3007: 2048 HTL A/B
- 3081: SSI, Singleturn, 24 V
- 3082: SSI, Multiturn 4096, 24 V
- 9999: User-defined

- Caution:** An encoder type with p0400 < 9999 defines an encoder for which there is an encoder parameter list. When selecting a catalog encoder (p0400 < 9999) the parameters from the encoder parameter list cannot be changed (write protection). To remove write protection, the encoder type should be set to a third-party encoder (p0400 = 9999).

Note: The encoder data (e.g. pulse number p0408) can only be changed when p0400 = 9999.

p0404[0...n] Encoder configuration effective / Enc_config eff

CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 4010, 4704
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0000 0000 0010 0000 0000 0000 0000 1000 bin

Description: Settings for the basic encoder properties.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Linear encoder	Yes	No	-
	03	Track A/B sq-wave	Yes	No	-
	12	Equidistant zero mark	Yes	No	-
	13	Irregular zero mark	Yes	No	-
	14	Distance-coded zero mark	Yes	No	-
	21	Voltage level 24 V	Yes	No	-

- Caution:** This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.

- Note:**
- ZM: Zero mark
- Re bit 12 (equidistant zero mark):
The zero marks occur at regular intervals (e.g. rotary encoder with 1 zero mark per revolution or linear encoder with constant zero mark distance).
The bit activates monitoring of the zero mark distance (p0424/p0425, linear/rotary) or in the case of the linear encoder with 1 zero mark and p0424 = 0 zero mark monitoring is activated.
- Re bit 13 (irregular zero mark):
The zero marks occur at irregular intervals (e.g. a linear scale with only 1 zero mark in the traversing range). The zero mark distance is not monitored.
- Re bit 14 (distance-coded zero mark):
The distance (clearance) between two or several consecutive zero marks allows the absolute position to be calculated.

p0404[0...n]		Encoder configuration effective / Enc_config eff		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32	
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS	
	Units group: -	Unit selection: -	Func. diagram: 4010, 4704	
	Min	Max	Factory setting	
	-	-	0000 0000 0010 0000 0000 0000 0000 0000 bin	

Description: Settings for the basic encoder properties.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Linear encoder	Yes	No	-
	01	Absolute encoder	Yes	No	-
	02	Multiturn encoder	Yes	No	-
	03	Track A/B sq-wave	Yes	No	-
	09	SSI encoder	Yes	No	-
	12	Equidistant zero mark	Yes	No	-
	13	Irregular zero mark	Yes	No	-
	14	Distance-coded zero mark	Yes	No	-
	21	Voltage level 24 V	Yes	No	-

Caution: This parameter is automatically pre-set for encoders from the encoder list (p0400).

When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.

Note: ZM: Zero mark

Re bit 12 (equidistant zero mark):

The zero marks occur at regular intervals (e.g. rotary encoder with 1 zero mark per revolution or linear encoder with constant zero mark distance).

The bit activates monitoring of the zero mark distance (p0424/p0425, linear/rotary) or in the case of the linear encoder with 1 zero mark and p0424 = 0 zero mark monitoring is activated.

Re bit 13 (irregular zero mark):

The zero marks occur at irregular intervals (e.g. a linear scale with only 1 zero mark in the traversing range). The zero mark distance is not monitored.

Re bit 14 (distance-coded zero mark):

The distance (clearance) between two or several consecutive zero marks allows the absolute position to be calculated.

p0405[0...n]		Square-wave encoder track A/B / Sq-wave enc A/B		
	Access level: 3	Calculated: -	Data type: Unsigned32	
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140	
	Units group: -	Unit selection: -	Func. diagram: 4704	
	Min	Max	Factory setting	
	-	-	0000 1001 bin	

Description: Settings for the track A/B in a square-wave encoder.

For square-wave encoders, p0404.3 must also be 1.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Signal	Bipolar	Unipolar	-
	01	Level	TTL	HTL	-
	02	Track monitoring	A/B <-> -A/B	None	-
	03	Zero pulse	Same as A/B track	24 V unipolar	-
	04	Switching threshold	High	Low	-

Caution: This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.

Note: Re bit 00:

For G120D, only "Bipolar" is supported.

Re bit 01:

For G120D, only "HTL" is supported.

Re bit 02:

When the function is activated, track monitoring can be de-activated by setting p0437.26.

Re bit 03:

For G120D, only "Same as track A/B" is supported.

Re bit 04:

For G120D, only "Low" is supported.

p0407[0...n]	Linear encoder grid division / Enc grid div			
	Access level: 3	Calculated: -	Data type: Unsigned32	
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS	
	Units group: -	Unit selection: -	Func. diagram: 4010, 4704	
	Min 0 [nm]	Max 250000000 [nm]	Factory setting 16000 [nm]	
Description:	Sets the grid division for a linear encoder.			
Caution:	This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.			
Note:	The lowest permissible value is 250 nm.			
p0408[0...n]	Rotary encoder pulse number / Rot enc pulse No.			
	Access level: 3	Calculated: -	Data type: Unsigned32	
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS	
	Units group: -	Unit selection: -	Func. diagram: 4010, 4704	
	Min 0	Max 16777215	Factory setting 2048	
Description:	Sets the number of pulses for a rotary encoder.			
Caution:	This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.			
Note:	The number of pole pairs for a resolver is entered here. The smallest permissible value is 1 pulse.			
p0410[0...n]	Encoder inversion actual value / Enc inv act value			
	Access level: 3	Calculated: -	Data type: Unsigned16	
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS	
	Units group: -	Unit selection: -	Func. diagram: 4704, 4710, 4711, 4715	
	Min -	Max -	Factory setting 0000 bin	
Description:	Setting to invert actual values.			
Bit field:	Bit	Signal name	1 signal	0 signal
	00	Invert speed actual value	Yes	No
	01	Invert position actual value	Yes	No
Note:	The inversion influences the following parameters: Bit 00: r0061, r0063 (exception: encoderless control), r0094 Bit 01: r0482, r0483			

p0418[0...n]	Fine resolution Gx_XIST1 (in bits) / Enc fine Gx_XIST1		
	Access level: 3	Calculated: -	Data type: Unsigned8
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS
	Units group: -	Unit selection: -	Func. diagram: 4010, 4704
	Min 2	Max 18	Factory setting 2
Description:	Sets the fine resolution in bits of the incremental position actual values.		
Note:	The parameter applies for the following process data: - Gx_XIST1 - Gx_XIST2 for reference mark or flying measurement The fine resolution specifies the fraction between two encoder pulses. Depending on the physical measurement principle, an encoder pulse can be broken down into a different number of fractions (e.g. squarewave encoder: 2 bit = resolution 4, sin/cos encoder: Typical 11 bit = resolution 2048). For a squarewave encoder, with the factory setting, the least significant bits have the value zero, i.e. they do not supply any useful information. For especially high quality measuring systems, the fine resolution must be increased corresponding to the available accuracy.		
p0419[0...n]	Fine resolution absolute value Gx_XIST2 (in bits) / Enc fine Gx_XIST2		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned8
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: 4704, 4710
	Min 2	Max 18	Factory setting 2
Description:	Sets the fine resolution in bits of the absolute position actual values.		
Dependency:	Refer to: p0418		
Note:	This parameter applies to process data Gx_XIST2 when reading the absolute value.		
p0421[0...n]	Absolute encoder rotary multiturn resolution / Enc abs multiturn		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: 4704
	Min 0	Max 65535	Factory setting 4096
Description:	Sets the number of rotations that can be resolved for a rotary absolute encoder.		
Caution:	This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
p0422[0...n]	Absolute encoder linear measuring step resolution / Enc abs meas step		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS
	Units group: -	Unit selection: -	Func. diagram: 4704
	Min 0 [nm]	Max 4294967295 [nm]	Factory setting 100 [nm]
Description:	Sets the resolution of the absolute position for a linear absolute encoder.		
Caution:	This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
Note:	The serial protocol of an absolute encoder provides the position with a certain resolution , e.g. 100 nm. This value must be entered here.		

p0423[0...n]	Absolute encoder rotary singleturn resolution / Enc abs singleturn		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: 4704
	Min 0	Max 1073741823	Factory setting 8192
Description:	Sets the number of measuring steps per revolution for a rotary absolute encoder. The resolution refers to the absolute position.		
Caution:	This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
p0425[0...n]	Encoder rotary zero mark distance / Enc rot dist ZM		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: 4704, 8570
	Min 0	Max 16777215	Factory setting 2048
Description:	Sets the distance in pulses between two zero marks for a rotary encoder. This information is used for zero mark monitoring.		
Caution:	This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
Note:	For distance-coded zero marks, this means the basic distance.		
p0426[0...n]	Encoder zero mark differential distance / Enc ZM Dif_dist		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 1	Max 65535	Factory setting 1
Description:	Sets the differential distance with distance-coded zero marks [signal periods]. The value corresponds to jump displacement of "zero mark with interference".		
Caution:	This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
p0427[0...n]	Encoder SSI baud rate / Enc SSI baud rate		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [kHz]	Max 65535 [kHz]	Factory setting 100 [kHz]
Description:	Sets the baud rate for an SSI encoder.		
Notice:	This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
Note:	SSI: Synchronous Serial Interface		

p0428[0...n]	Encoder SSI monoflop time / Enc SSI t_monoflop				
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16		
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min 0 [µs]	Max 65535 [µs]	Factory setting 30 [µs]		
Description:	Sets the minimum delay time between two data transfers of the absolute value for an SSI encoder.				
Notice:	This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.				
p0429[0...n]	Encoder SSI configuration / Enc SSI config				
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16		
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min -	Max -	Factory setting 0000 0000 bin		
Description:	Sets the configuration for an SSI encoder.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Transfer code	Binary code	Gray code	-
	02	Transfer absolute value twice	Yes	No	-
	06	Data line during the monoflop time	High level	Low level	-
Caution:	This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.				
Note:	Re bit 06: The quiescent signal level of the data line corresponds to the inverted, set level.				
p0430[0...n]	Sensor Module configuration / SM config				
	Access level: 3	Calculated: -	Data type: Unsigned32		
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min -	Max -	Factory setting 0000 0000 0000 0000 0000 0000 0000 0000 bin		
Description:	Sets the configuration of the Sensor Module.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	20	Speed calculation mode (only SMC30)	Incremental diff	Flank time meas	-
	21	Zero mark tolerance	Yes	No	-
	25	Switch off encoder voltage supply during parking	Yes	No	-
	27	Extrapolate position values	Yes	No	-
Notice:	A bit-wise configuration is only possible if the corresponding property is also present in r0458.				
Note:	Re bit 20 (speed calculation mode): - if bit = 1, the speed is calculated via incremental difference without extrapolation. - if bit = 0, the speed is calculated via edge time measurement with extrapolation. p0453 is effective in this mode. Re bit 21 (zero mark tolerance): - if bit = 1, a one-off zero mark distance error is tolerated. In the event of a defect, the fault F3x100/F3x101 does not appear, but alarm A3x400/A3x401 does.				

Re bit 25 (disconnect the encoder power supply on parking):

- if bit = 1, the encoder power supply is switched off on parking (0 V).

- if bit = 0, the encoder power supply is not switched off on parking, it is reduced from 24 V to 5 V.

Re bit 27 (extrapolate position values):

- if bit = 1, the extrapolation of the position values is activated.

p0434[0...n]	Encoder SSI error bit / Enc SSI error bit		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 65535	Factory setting 0
Description:	Sets the position and level of the error bit in the SSI protocol.		
Notice:	The bit may only be positioned before (p0446) or after (p0448) the absolute value in the SSI protocol.		
Note:	Value = dcba ba: Position of the error bit in the protocol (0 ... 63). c: Level (0: Low level, 1: High level). d: Status of the evaluation (0: Off, 1: On with 1 error bit, 2: On with 2 error bits ... 9: On with 9 error bits). For several error error bits, the following applies: - the position specified under ba and the additional bits are assigned increasing consecutively. - the level set under c applies to all error bits. Example: p0434 = 1013 --> The evaluation is switched in and the error bit is at position 13 with a low level. p0434 = 1113 --> The evaluation is switched in and the error bit is at position 13 with a high level.		

p0435[0...n]	Encoder SSI alarm bit / Enc SSI alarm bit		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 65535	Factory setting 0
Description:	Sets the position and level of the alarm bit in the SSI protocol.		
Notice:	The bit may only be positioned before (p0446) or after (p0448) the absolute value in the SSI protocol.		
Note:	Value = dcba ba: Position of the alarm bit in protocol (0 ... 63). c: Level (0: Low level, 1: High level). d: State of the evaluation (0: Off, 1: On). Example: p0435 = 1014 --> The evaluation is switched in and the alarm bit is at position 14 with a low level. p0435 = 1114 --> The evaluation is switched in and the alarm bit is at position 14 with a high level.		

p0436[0...n] Encoder SSI parity bit / Enc SSI parity bit

CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 65535	Factory setting 0

Description: Sets the position and parity of the parity bit in the SSI protocol.

Notice: The bit may only be positioned before (p0446) or after (p0448) the absolute value in the SSI protocol.

Note: Value = dcba
ba: Position of the parity bit in the protocol (0 ... 63).
c: Parity (0: even, 1: uneven).
d: State of the evaluation (0: Off, 1: On).
Example:
p0436 = 1015
--> The evaluation is switched in and the parity bit is at position 15 with even parity.
p0436 = 1115
--> The evaluation is switched in and the parity bit is at position 15 with uneven parity.

p0437[0...n] Sensor Module configuration extended / SM config ext

	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting 0000 0000 0000 0000 0000 1000 0000 0000 bin

Description: Sets the extended configuration of the Sensor Module.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Data logger	Yes	No	-
	01	Zero mark edge detection	Yes	No	-
	02	Correction position actual value XIST1	Yes	No	-
	04	Edge evaluation bit 0	Yes	No	-
	05	Edge evaluation bit 1	Yes	No	-
	06	Freeze the speed actual value for dn/dt errors	Yes	No	-
	11	Fault handling after PROFIdrive	Yes	No	-
	12	Activate additional messages	Yes	No	-
	13	Support absolute position for incremental encoder	Yes	No	4750
	26	Deselect track monitoring	Yes	No	-

Dependency: Refer to: p0430, r0459

Note: A value of zero is displayed if an encoder is not present.

Re bit 00:
When the data logger (trace) is activated, in the case of a fault, data before and after the event are recorded (traced) and saved in files on the non-volatile memory medium. Experts can then evaluate this data.

Re bit 01:
If bit = 0, the zero mark is evaluated by ANDing tracks A and B and the zero mark.
For bit = 1, the zero mark is evaluated depending on the direction of rotation detected. For a positive direction of rotation, the positive edge of the zero mark is considered and for a negative direction of rotation, the negative edge of the zero mark.

Re bit 02:
If the bit is set, in the event of a deviation less than the tolerance window for the zero mark (p4681, p4682), the pulses per revolution are corrected. If the bit is not set, encoder fault F3x131 is triggered.

Re Bit 04 and Bit 05:

The actual hardware only supports 1x or 4x signal evaluation.

Bit 5/4 = 0/0: Signal evaluation per period, 4x.

Bit 5/4 = 1/0: Illegal setting.

Bit 5/4 = 0/1: Signal evaluation per period, 1x.

Bit 5/4 = 1/1: Illegal setting.

Re bit 06:

If the function is active, when dn/dt monitoring responds, the speed actual value is internally frozen for a time equivalent to two current controller clock cycles. The rotor position continues to be integrated. The actual value is then re-enabled after this time has expired.

Re bit 11:

If the bit is set, the Sensor Module checks within a certain time grid whether the fault cause is still present. This enables the Sensor Module to switch from the fault state to the operating state and provide valid actual values automatically. The faults are displayed until the user acknowledges them.

Re bit 12:

Additional fault messages can be activated for extended fault diagnostics.

Re bit 13:

When the bit is set, for an incremental encoder with zero mark, the absolute value in Gn_XIST2 can be requested via Gn_STW.13.

Re bit 26:

Track monitoring is de-activated for the square-wave encoders when the bit is set, even if the monitoring function is selected in p0405.2.

p0438[0...n]	Squarewave encoder filter time / Enc t_filt		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00 [µs]	Max 100.00 [µs]	Factory setting 0.64 [µs]
Description:	Sets the filter time for a squarewave encoder. The hardware of the squarewave encoder only supports the following values: 0: No filtering 0.04 µs 0.64 µs 2.56 µs 10.24 µs 20.48 µs		
Dependency:	Refer to: r0452		
Notice:	If the filter time is too long, the track signals A/B/R may be suppressed and the appropriate messages output.		
Note:	The most suitable filter time depends on the number of pulses and maximum speed of the square-wave encoder. The filter time is automatically corrected to the next value when entering a non-specified value. In this case, no message is output. The effective filter time is displayed in r0452.		

p0439[0...n]	Encoder ramp-up time / Enc ramp-up time		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [ms]	Max 65535 [ms]	Factory setting 0 [ms]
Description:	Sets the ramp-up time for the encoder. The encoder supplies stable track signals once this time has elapsed.		
Notice:	This parameter is automatically pre-set for encoders from the encoder list (p0400).		

p0446[0...n]	Encoder SSI number of bits before the absolute value / Enc SSI bit before		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 65535	Factory setting 0
Description:	Sets the number of bits before the absolute value in the SSI protocol.		
Caution:	This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
Note:	For example, error bit, alarm bit or parity bit can be positioned at these bits.		
p0447[0...n]	Encoder SSI number of bits absolute value / Enc SSI bit val		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 65535	Factory setting 25
Description:	Sets the number of bits for the absolute value in the SSI protocol.		
Caution:	This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
p0448[0...n]	Encoder SSI number of bits after the absolute value / Enc SSI bit after		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 65535	Factory setting 0
Description:	Sets the number of bits after the absolute value in the SSI protocol.		
Caution:	This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
Note:	For example, error bit, alarm bit or parity bit can be positioned at these bits.		
p0449[0...n]	Encoder SSI number of bits filler bits / Enc SSI fill bits		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 65535	Factory setting 1
Description:	Sets the number of filler bits for double absolute value transfer in the SSI protocol.		
Dependency:	Refer to: p0429		
Caution:	This parameter is automatically pre-set for encoders from the encoder list (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
Note:	This parameter is only of significance for p0429.2 = 1.		

r0452[0...2]	Squarewave encoder filter time display / Enc t_filt displ				
	Access level: 3	Calculated: -	Data type: FloatingPoint32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min - [µs]	Max - [µs]	Factory setting - [µs]		
Description:	Displays the effective filter time for a squarewave encoder. The filter time is set using p0438.				
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3				
Dependency:	Refer to: p0438				
Note:	A value of zero is displayed if an encoder is not present.				
p0453[0...n]	Pulse encoder evaluation zero speed measuring time / Enc_ev n_0 t_meas				
	Access level: 3	Calculated: -	Data type: FloatingPoint32		
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min 0.10 [ms]	Max 10000.00 [ms]	Factory setting 1000.00 [ms]		
Description:	Sets the measuring time for evaluating zero speed. If no pulses are detected from track A/B during this time, a speed actual value of zero is output.				
Dependency:	Refer to: r0452				
Note:	This function is required for slow-running motors so that actual speeds close to zero can be output correctly.				
r0456[0...2]	Encoder configuration supported / Enc_config supp				
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32		
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -		
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -		
CU240D-2_PN_F	Min -	Max -	Factory setting -		
Description:	Displays the encoder configuration supported by the Sensor Module.				
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Linear encoder	Yes	No	-
	03	Track A/B sq-wave	Yes	No	-
	12	Equidistant zero mark	Yes	No	-
	13	Irregular zero mark	Yes	No	-
	14	Distance-coded zero mark	Yes	No	-
	21	Voltage level 24 V	Yes	No	-
Dependency:	Refer to: p0404				
Note:	ZM: Zero mark This parameter is only used for diagnostics. A value of zero is displayed if an encoder is not present.				

r0456[0...2]		Encoder configuration supported / Enc_config supp			
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32		
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the encoder configuration supported by the Sensor Module.				
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Linear encoder	Yes	No	-
	01	Absolute encoder	Yes	No	-
	02	Multiturn encoder	Yes	No	-
	03	Track A/B sq-wave	Yes	No	-
	09	SSI encoder	Yes	No	-
	12	Equidistant zero mark	Yes	No	-
	13	Irregular zero mark	Yes	No	-
	14	Distance-coded zero mark	Yes	No	-
	21	Voltage level 24 V	Yes	No	-
Dependency:	Refer to: p0404				
Note:	ZM: Zero mark This parameter is only used for diagnostics. A value of zero is displayed if an encoder is not present.				

r0458[0...2]		Sensor Module properties / SM properties			
	Access level: 3	Calculated: -	Data type: Unsigned32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 4704		
	Min	Max	Factory setting		
	-	-	-		
Description:	Sets the Sensor Module configuration.				
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Reserved				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	05	Absolute encoder p0408/p0421 no power of 2	Yes	No	-
	06	Sensor Module permits parking/unparking	Yes	No	-
	09	Encoder fault and its associated information available	Yes	No	-
	10	Speed diagnostics in the Sensor Module	Yes	No	-
	11	Configuring without park state possible	Yes	No	-
	12	Extended functions available	Yes	No	-
	13	Extended encoder fault handling	Yes	No	-
	14	Extended singleturn/multiturn information available	Yes	No	-
	15	Valuation figures available	Yes	No	-
	16	Pole position identification	Yes	No	-
	20	Extended speed calculation being used (only SMC30)	Yes	No	-
	21	Zero mark tolerance	Yes	No	-
	25	Disconnection of encoder power supply on parking supported	Yes	No	-
	26	Parking with temperature evaluation	Yes	No	-
	27	SSI position value extrapolation	Yes	No	-

Dependency: Refer to: p0437, p0601

Note: A value of zero is displayed if an encoder is not present.

Re bit 11:

When the property is set, the following parameters can be changed without the actual value in the encoder interface becoming invalid (state r0481.14 = 1 "parking encoder active"):

p0314, p0315, p0430, p0431, p0441, p0442, p0443, p0444, p0445

Re bit 12:

The extended functions can be configured using p0437.

Re bit 13:

Encoder faults can be acknowledged via Gn_STW.15.

Re bit 14:

Only for internal Siemens use.

r0459[0...2] **Sensor Module properties extended / SM prop ext**

Access level: 3

Calculated: -

Data type: Unsigned32

Can be changed: -

Scaling: -

Dyn. index: -

Units group: -

Unit selection: -

Func. diagram: -

Min

Max

Factory setting

-

-

-

Description: Displays the extended properties supported by the Sensor Module.

Index:

[0] = Encoder 1

[1] = Encoder 2

[2] = Encoder 3

Bit field:


Bit	Signal name	1 signal	0 signal	FP
00	Data logger	Yes	No	-
01	Zero mark edge detection	Yes	No	-
02	Correction position actual value XIST1	Yes	No	-
04	Edge evaluation bit 0	Yes	No	-
05	Edge evaluation bit 1	Yes	No	-
06	Freeze the speed actual value for dn/dt errors	Yes	No	-
07	Accumulate uncorrected encoder pulses	Yes	No	-
09	Function p0426, p0439 supported	Yes	No	-
10	Pulse/direction interface	Yes	No	-
11	Fault handling after PROFIdrive	Yes	No	-
12	Activate additional messages	Yes	No	-
13	Absolute position for incremental encoder supported	Yes	No	-
14	Spindle functionality	Yes	No	-
15	Additional temperature sensor available	Yes	No	-
16	Internal encoder temperature available	Yes	No	-
25	Deselect monitoring multiturn representation in Gx_XIST2	Yes	No	-
26	Track monitoring de-selection	Yes	No	-
28	EnDat linear encoder monitoring incremental/absolute	Yes	No	-
29	EnDat encoder initialization with high accuracy	Yes	No	-
31	Analog unipolar track monitoring	Yes	No	-

Dependency: Refer to: p0437

Note: A value of zero is displayed if an encoder is not present.

Re bit 09:

Parameter p0426 or p0439 has been modified. These functions are not supported by the connected Sensor Module.

r0479[0...2]	CO: Diagnostics encoder position actual value Gn_XIST1 / Diag Gn_XIST1		
	Access level: 3	Calculated: -	Data type: Integer32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4704
	Min	Max	Factory setting
	-	-	-
Description:	Displays the encoder actual position value Gn_XIST1 according to PROFIdrive for diagnostics. In contrast to r0482, the value is updated in each DRIVE-CLiQ basic clock cycle and displayed with sign.		
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
Caution:	Following ramping-up or after a data set changeover, the new value is present at connector inputs which are inter-connected to connector output r0479 and under certain circumstances take 100 ms to become available. Reason: These interconnections are updated in the background, unlike interconnections involving other connector outputs (e.g. CO: r0482). The value is immediately available when non-cyclically reading r0479 (e.g. via the expert list).		
			
p0480[0...2]	CI: Encoder control word Gn_STW signal source / Enc Gn_STW S_src		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 4720, 4750
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	[0] 0 [1] 0 [2] 0
Description:	Sets the signal source for the encoder control word Gn_STW according to PROFIdrive.		
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
p0480[0...2]	CI: Encoder control word Gn_STW signal source / Enc Gn_STW S_src		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Integer16
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4720, 4750
	Min	Max	Factory setting
	-	-	[0] 2520[0] [1] 2520[1] [2] 2520[2]
Description:	Sets the signal source for the encoder control word Gn_STW according to PROFIdrive.		
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		

r0481[0...2]		CO: Encoder status word Gn_ZSW / Enc Gn_ZSW			
	Access level: 3	Calculated: -	Data type: Unsigned16		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 4010, 4704, 4730, 4750		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the encoder status word Gn_ZSW according to PROFIdrive.				
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Function 1 active	Yes	No	-
	01	Function 2 active	Yes	No	-
	02	Function 3 active	Yes	No	-
	03	Function 4 active	Yes	No	-
	04	Value 1	Displayed in r0483	Not present	-
	05	Value 2	Displayed in r0483	Not present	-
	06	Value 3	Displayed in r0483	Not present	-
	07	Value 4	Displayed in r0483	Not present	-
	08	Measuring probe 1 deflected	Yes	No	-
	09	Measuring probe 2 deflected	Yes	No	-
	11	Encoder fault acknowledge active	Yes	No	9676
	13	Absolute value cyclically	Displayed in r0483	No	-
	14	Parking encoder active	Yes	No	-
	15	Encoder fault	Displayed in r0483	None	-
Notice:	Information on Gn_STW/Gn_ZSW can, e.g. be found in the following literature: SINAMICS S120 Function Manual Drive Functions				
Note:	Re bit 14: Displays the acknowledgement for "activate parking encoder" (Gn_STW.14 = 1) or encoder position actual value (Gn_XIST1) invalid. Re bit 14, 15: r0481.14 = 1 and r0481.15 = 0 can have one of the following causes: - the encoder is parked. - the encoder is de-activated. - the encoder is being commissioned. - no parameterized encoder available. - encoder data set is being changed over. r0481.14 = 1 and r0481.15 = 1 has the following significance: An encoder error has occurred and the encoder position actual value (Gn_XIST1) is invalid.				
r0482[0...2]		CO: Encoder actual position value Gn_XIST1 / Enc Gn_XIST1			
	Access level: 3	Calculated: -	Data type: Unsigned32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 1580, 1680, 4704, 4735, 4740, 4750		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the encoder actual position value Gn_XIST1 according to PROFIdrive.				
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3				
Note:	- this value is reset if necessary when the "parking encoder" (r0481.14) function is de-selected. - in this value, the measuring gear (p0432, p0433) is only taken into account when the position tracking is activated (p0411.0 = 1).				

- The update time for the position control (EPOS) corresponds to the position controller clock cycle p0115[4].
- The update time in isochronous operation corresponds to the bus cycle time r2064[1].
- The update time in isochronous operation and with position control (EPOS) corresponds to the position controller clock cycle p0115[4].
- The update time in non-isochronous operation or without position control (EPOS) comprises the following:
Update time = 4 * least common multiple (LCM) of all current controller clock cycles (p0115[0]) in the drive group (infeed + drives). The minimum update time is 1 ms.
Example 1: infeed, servo
Update time = 4 * LCM(250 µs, 125 µs) = 4 * 250 µs = 1 ms
Example 2: infeed, servo, vector
Update time = 4 * LCM(250 µs, 125 µs, 500 µs) = 4 * 500 µs = 2 ms

r0483[0...2]	CO: Encoder actual position value Gn_XIST2 / Enc Gn_XIST2		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1580, 1680, 4704, 4750
	Min	Max	Factory setting
	-	-	-
Description:	Displays the encoder actual position value Gn_XIST2 according to PROFIdrive.		
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
Notice:	The encoder position actual value must be requested using the encoder control word Gn_STW.13.		
Note:	<ul style="list-style-type: none"> - in this value, the measuring gear (p0432, p0433) is only taken into account when the position tracking is activated (p0411.0 = 1). - if GxZSW.15 = 1 (r0481), then an error code with the following significance is located in Gx_XIST2 (r0483): <ol style="list-style-type: none"> 1: Encoder fault. 2: Possible position shift in Gx_XIST1. 3: Encoder parking not possible. 4: Cancellation, reference block search (e.g. reference mark not available or input terminal for external zero mark not set). 5: Cancellation, fetch reference value (e.g. illegal change from reference mark search to flying measurement). 6: Cancellation, flying measurement (e.g. input terminal for probe not set). 7: Cancellation, fetch measured value (e.g. illegal change from flying measurement to reference mark search). 8: Abort, absolute value transfer. 3841: Function not supported. 4097: Abort, reference mark search due to an initialization error. 4098: Abort, flying measurement due to an initialization error. 4099: Abort, reference mark search due to a measuring error. 4100: Abort, flying measurement due to a measuring error. 		

r0487[0...2]	Diagnostic encoder control word Gn_STW / Enc Gn_STW		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1580, 4704, 4720, 4740
	Min	Max	Factory setting
	-	-	-
Description:	Displays the encoder control word Gn_STW according to PROFIdrive for diagnostics.		
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Request function 1	Yes	No	-
	01	Request function 2	Yes	No	-
	02	Request function 3	Yes	No	-
	03	Request function 4	Yes	No	-
	04	Request command bit 0	Yes	No	-
	05	Request command bit 1	Yes	No	-
	06	Request command bit 2	Yes	No	-
	07	Flying measurement mode/search for reference mark	Flying measurement	Reference marks	-
	13	Request absolute value cyclic	Yes	No	-
	14	Request parking encoder	Yes	No	-
	15	Request acknowledge encoder fault	Yes	No	-

Notice: Information on Gn_STW/Gn_ZSW should be taken from the corresponding product documentation.

Note: The signal source for the encoder control word is set with p0480.

p0488[0...2] Measuring probe 1 input terminal / Meas probe 1 inp

Access level: 3	Calculated: -	Data type: Integer16
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min 0	Max 23	Factory setting 0

Description: Sets the input terminal to connect probe 1.

Value:
0: No meas probe
21: DI 1 (X07.2)
23: DI 3 (X08.2)

Index:
[0] = Encoder 1
[1] = Encoder 2
[2] = Reserved

Dependency: Refer to: p0489, p0490

Note: DI: Digital Input

p0489[0...2] Measuring probe 2 input terminal / Meas probe 2 inp

Access level: 3	Calculated: -	Data type: Integer16
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min 0	Max 23	Factory setting 0

Description: Sets the input terminal to connect probe 2.

Value:
0: No meas probe
21: DI 1 (X07.2)
23: DI 3 (X08.2)

Index:
[0] = Encoder 1
[1] = Encoder 2
[2] = Reserved

Dependency: Refer to: p0488, p0490

Note: DI: Digital Input

p0490 Invert measuring probe or equivalent zero mark / Pr or ZM_equiv inv

Access level: 3	Calculated: -	Data type: Unsigned32
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 4740
Min -	Max -	Factory setting 0000 bin

Description: Setting to invert the digital input signals to connect a measuring probe or an equivalent zero mark.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	01	DI 1 (X07.2)	Inverted	Not inverted	-
	03	DI 3 (X08.2)	Inverted	Not inverted	-
Dependency:	Refer to: p0488, p0489, p0493				
Note:	The terminal must be set as input. When the measuring probe or the equivalent zero mark is inverted, this has no effect on the status displays of the digital inputs (r0721, r0722, r0723). DI: Digital Input				

p0491**Motor encoder fault response ENCODER / Fault resp ENCODER**

Access level: 3	Calculated: -	Data type: Integer16
Can be changed: T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min 0	Max 5	Factory setting 0

Description:	Sets the behavior for the ENCODER fault response (motor encoder). This means, for example, if an encoder fault occurs, encoderless operation can be automatically selected with a shutdown behavior that can be selected.
Value:	0: Encoder fault results in OFF2 1: Enc fault results in encoderless oper. and oper. continues 2: Encoder fault results in encoderless operation and OFF1 3: Encoder fault results in encoderless operation and OFF3 4: Encoder fault results in DC braking 5: Enc fault results in encoderless op, operation continues, alarm
Dependency:	The following parameters are relevant for encoderless operation.
Caution:	For a value = 1, 2, 3, 5 the following applies: - encoderless operation must have been started. For a value = 1, the following applies: - in spite of the motor encoder fault that has occurred, the motor continues to operate.
Note:	For a value = 1, 2, 3, 5 the following applies: - Refer to the status signal "encoderless operation due to a fault" (BO: r1407.13). - If, when setting r1407.13, a different drive data set is selected (e.g. interconnection from p0820), then the open-loop or closed-loop control type p1300 of this data set must match that of the original data set (e.g. p1300 = 21). Encoderless closed-loop controlled operation is kept when changing over. For a value = 4, the following applies: - the value can only be set for all data sets when p1231 = 4 - DC braking must be commissioned (p1232, p1233, p1234). For a value = 5, the following applies: Same function as for value = 1. However, encoder faults are output as alarm and the message bit "Fault active" (r2139.3) is not set. The encoder fault has to be acknowledged via the encoder interface in order to resume operation with encoder.

**p0492****Maximum speed difference per sampling cycle / n_dif max/samp_cyc**

Access level: 3	Calculated: p0340 = 1,3	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 0.00 [rpm]

Description:	Sets the maximum permissible speed difference within the current controller sampling time.
Dependency:	Refer to: r1408 Refer to: F07902, F31118, A31418
Note:	For a value of 0.0, the speed change monitoring is disabled. If the speed difference exceeds the threshold value p0492, depending on p0491, either encoderless closed-loop speed/torque control is selected or the drive is powered down with fault F3x118.

p0493[0...n]	Zero mark selection input terminal / ZM_sel inp_term		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 23	Factory setting 0
Description:	Sets the input terminal for selecting the reference mark via BERO/switching signal when performing referencing with several zero marks. The encoder interface supplies the position of the reference mark, which was detected immediately after the positive edge of the BERO signal.		
Value:	0: No selection via BERO 21: DI 1 (X07.2) 23: DI 3 (X08.2)		
Dependency:	Refer to: p0490		
Note:	Refer to the encoder interface for PROFIdrive. The terminal must be set as input (p0728). For p0493 = 0 (factory setting) the following applies: - there is no logic operation between the reference mark search and an input signal. For p0493 > 0, the following applies: - the positive edge of the input signal is evaluated. If the negative edge is to be evaluated, signal inversion must be parameterized via p0490. - if a parameter change is rejected, a check should be performed as to whether the input terminal is already being used in p0580, p0680, p2517, or p2518.		
p0494[0...n]	Equivalent zero mark input terminal / ZM_equiv input		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 23	Factory setting 0
Description:	Selects the input terminal for connecting an equivalent zero mark (external encoder zero mark).		
Value:	0: No selection via BERO 21: DI 1 (X07.2) 23: DI 3 (X08.2)		
Dependency:	Refer to: p0490		
Note:	Refer to the encoder interface for PROFIdrive. The terminal must be set as input.		
p0496[0...2]	Encoder diagnostic signal selection / Enc diag select		
	Access level: 4	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 52	Factory setting 0
Description:	Selects the trace signal to be output in r0497, r0498 and r0499 for encoder diagnostics.		
Value:	0: Inactive 1: r0497: Mechanical revolution 12: r0498: Fine position Phi, r0499: - 23: r0497: Zero mark status 30: r0497: Absolute position serial 31: r0497: Absolute position incremental 32: r0497: Zero mark position 33: r0497: Correction absolute position difference		

	51: r0497: Absolute speed difference (dn/dt)
	52: r0497: Xact1 corrected quadrants
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3
Dependency:	Refer to: r0497, r0498, r0499
Notice:	The setting option depends on the following properties: Sensor Module type, hardware version, firmware version (Sensor Module and Control Units), order number (last digit). Not all combinations are supported.
Note:	Re p0496 = 1: 360 ° <--> 2^32 Re p0496 = 12: 180 ° fine position <--> 32768 dec Re p0496 = 23: r0497.31 (r0499.15) set for at least 1 current controller cycle when encoder zero mark detected Re p0496 = 30: Rotary: 1 singleturn measuring step <--> 1 dec, linear: 1 measuring step <--> 1 dec Re p0496 = 31: Absolute position, incremental in 1/4 encoder pulses Re p0496 = 32: Zero mark position in 1/4 encoder pulses Re p0496 = 33: counter offset absolute value in 1/4 encoder pulses Re p0496 = 51: 1 rpm <--> 1000 dec Re p0496 = 52: In 1/4 encoder pulses

r0497[0...2]	CO: Encoder diagnostic signal double word / Enc diag DW		
	Access level: 4	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the trace signal for encoder diagnostics (double word). The signal to be output is selected in p0496.		
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
Dependency:	Refer to: p0496, r0498, r0499		

r0498[0...2]	CO: Encoder diagnostic signal low word / Enc diag low word		
	Access level: 4	Calculated: -	Data type: Integer16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the trace signal for encoder diagnostics (low component). The signal to be output is selected in p0496.		
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
Dependency:	Refer to: p0496, r0497, r0499		

r0499[0...2]	CO: Encoder diagnostic signal high word / Enc diag high word		
	Access level: 4	Calculated: -	Data type: Integer16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the trace signal for encoder diagnostics (high component). The signal to be output is selected in p0496.		
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
Dependency:	Refer to: p0496, r0497, r0498		
p0500	Technology application / Tec application		
	Access level: 2	Calculated: -	Data type: Integer16
	Can be changed: C(1, 5), T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	2	0
Description:	Sets the technology application. The parameter influences the calculation of open-loop and closed-loop control parameters that is e.g. initiated using p0340 = 5.		
Value:	0: Standard drive 2: Sensorless closed-loop control down to f = 0 (passive loads)		
Notice:	If the technological application is set to p0500 = 0, 2 during commissioning (p0010 = 1, 5, 30), the operating mode (p1300) is pre-set accordingly.		
Note:	The calculation of parameters dependent on the technology application can be called up as follows: - when exiting quick commissioning using p3900 > 0 - when writing p0340 = 1, 3, 5 For p0500 = 0 and when the calculation is initiated, the following parameters are set: - p1574 = 10 V - p1750.2 = 0 - p1802 = 4 (SVM/FLB without overcontrol) - p1803 = 106 % For p0500 = 2 and when the calculation is initiated, the following parameters are set: - p1574 = 2 V (separately-excited synchronous motor: 4 V) - p1750.2 = 1 - p1802 = 4 (SVM/FLB without overcontrol) - p1803 = 106 % Re p1750: The setting of p1750 is only relevant for induction motors. p1750.2 = 1: Encoderless control of the induction motor is effective down to zero frequency. This operating mode is possible for passive loads. These include applications where the load does not generate regenerative torque when breaking away and the motor comes to a standstill (zero speed) itself when the pulses are inhibited. Re p1802 / p1803: p1802 and p1803 are only changed, in all cases, if a sine-wave output filter (p0230 = 3, 4) has not been selected.		

p0505 Selecting the system of units / Unit sys select

Access level: 1	Calculated: -	Data type: Integer16
Can be changed: C(5)	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min 1	Max 4	Factory setting 1

Description: Sets the actual system of units.

Value:
 1: SI system of units
 2: System of units referred/SI
 3: US system of units
 4: System of units referred/US

Dependency: The parameter cannot be changed when master control is active.

Caution: If a per unit representation is selected and if the reference parameters (e.g. p2000) are subsequently changed, then the physical significance of several control parameters is also adapted at the same time. As a consequence, the control behavior can change (see p1576, p1621, p1744, p1752, p1755 and p1609, p1612, p1619, p1620).



Note: Reference parameter for the unit system % are, for example, p2000 ... p2004. Depending on what has been selected, these are displayed using either SI or US units.

p0573 Inhibit automatic reference value calculation / Inhibit calc

Access level: 3	Calculated: -	Data type: Integer16
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min 0	Max 1	Factory setting 0

Description: Setting to inhibit the calculation of reference parameters (e.g. p2000) when automatically calculating the motor and closed-loop control parameters (p0340, p3900).

Value:
 0: No
 1: Yes

Notice: The inhibit for the reference value calculation is canceled when new motor parameters (e.g. p0305) are entered and only one drive data set exists (p0180 = 1). This is the case during initial commissioning. Once the motor and control parameters have been calculated (p0340, p3900), the inhibit for the reference value calculation is automatically re-activated.

Note: If value = 0:
 The automatic calculation (p0340, p3900) overwrites the reference parameters.
 If value = 1:
 The automatic calculation (p0340, p3900) does not overwrite the reference parameters.

p0580 Measuring probe input terminal / MT input terminal

Access level: 3	Calculated: -	Data type: Integer16
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min 0	Max 23	Factory setting 0

Description: Sets the input terminal for the measuring probe for speed actual value measurement.

Value:
 0: No meas probe
 21: DI 1 (X07.2)
 23: DI 3 (X08.2)

Dependency: Refer to: p0581
 Refer to: A07498

Note: DI: Digital Input

p0581	Measuring probe edge / MT edge		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 1	Factory setting 0
Description:	Sets the edge to evaluate the measuring probe signal for speed actual value measurement. 0: 0/1 edge 1: 1/0 edge		
Dependency:	Refer to: p0580		
p0582	Measuring probe pulses per revolution / MT pulses per rev		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 1	Max 12	Factory setting 1
Description:	Sets the number of pulses per revolution (e.g. for disks with holes).		
p0583	Measuring probe maximum measuring time / MT t_meas max		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.040 [s]	Max 10.000 [s]	Factory setting 10.000 [s]
Description:	Sets the maximum measuring time for the measuring probe. If a new pulse is not received before the maximum measuring time has expired, then the speed actual value in r0586 is set to zero. This timer is re-started with the next pulse.		
Dependency:	Refer to: r0586		
p0585	Measuring probe gear factor / Probe gear factor		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00000	Max 1000.00000	Factory setting 1.00000
Description:	Sets the BERO gear factor. The measured speed is multiplied by the BERO gear factor and is displayed in r0586.		
r0586	CO: Measuring probe speed actual value / MT n_act		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: -
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the speed actual value measured using the BERO.		
Dependency:	Refer to: p0580, p0583		
Note:	For p0580 = 0 (no measuring probe), a value of zero is displayed here.		

r0587	CO: Measuring probe measuring time measured / MT t_meas measured		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the time between the last two BERO pulses. The measuring time is specified as 32-bit value with a resolution of 1/48 µs. If a new pulse is not received before the maximum measured time in p0583 expires, then r0587 is set to the maximum measuring time.		
Dependency:	Refer to: p0580		
Note:	For p0580 = 0 (no measuring probe), a value of zero is displayed here.		
r0588	CO: Measuring probe pulse counter / MT pulse counter		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the number of measuring pulses that have occurred (been received) up until now.		
Dependency:	Refer to: p0580		
Note:	After reaching 4294967295 ($2^{32} - 1$), the counter starts again at 0.		
r0589	Measuring probe delay time / MT t_delay		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the time since the last measuring pulse was detected. The delay time is specified as 32-bit value with a resolution of 1/48 µs. When a measuring pulse occurs (is received) the delay time is reset and is limited to the maximum measuring time in p0583.		
Dependency:	Refer to: p0580		
Note:	For p0580 = 0 (no measuring probe), a value of zero is displayed here.		
p0595	Technological unit selection / Tech unit select		
CU240D-2_DP	Access level: 1	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: C(5)	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	46	1
Description:	Selects the units for the parameters of the technology controller. For p0595 = 1, 2, the reference quantity set in p0596 is not active.		
Value:	1: % 2: 1 referred no dimensions 3: bar 4: °C 5: Pa 6: ltr/s 7: m³/s		

8:	ltr/min
9:	m ³ /min
10:	ltr/h
11:	m ³ /h
12:	kg/s
13:	kg/min
14:	kg/h
15:	t/min
16:	t/h
17:	N
18:	kN
19:	Nm
20:	psi
21:	°F
22:	gallon/s
23:	inch ³ /s
24:	gallon/min
25:	inch ³ /min
26:	gallon/h
27:	inch ³ /h
28:	lb/s
29:	lb/min
30:	lb/h
31:	lbf
32:	lbf ft
33:	K
34:	rpm
35:	parts/min
36:	m/s
37:	ft ³ /s
38:	ft ³ /min
39:	BTU/min
40:	BTU/h
41:	mbar
42:	inch wg
43:	ft wg
44:	m wg
45:	% r.h.
46:	g/kg

Dependency: Only the unit of the technology controller parameters are switched over (unit group 9_1).
Refer to: p0596

Note: When switching over from % into another unit, the following sequence applies:
- set p0596
- set p0595 to the required unit


p0596 Technological unit reference quantity / Tech unit ref qty

CU240D-2_DP	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -
CU240D-2_PN_F			
	Min	Max	Factory setting
	0.01	340.28235E36	1.00

Description: Sets the reference quantity for the technological units.
When changing over using changeover parameter p0595 to absolute units, all of the parameters involved refer to the reference quantity.

Dependency: Refer to: p0595

Notice: When changing over from one technological unit into another, or when changing the reference parameter, a changeover is not made.

p0601[0...n]	Motor temperature sensor type / Mot_temp_sens type		
	Access level: 2	Calculated: -	Data type: Integer16
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: 8016
	Min 0	Max 4	Factory setting 0
Description:	Sets the sensor type for the motor temperature monitoring.		
Value:	0: No sensor 1: PTC alarm & timer 2: KTY84 4: Bimetallic NC contact alarm & timer		
Dependency:	A thermal motor model is calculated corresponding to p0612.		
Caution:	Re p0601 = 2: If the motor temperature sensor is not connected but another encoder, then the temperature adaptation of the motor resistances must be switched out (p0620 = 0). Otherwise, in controlled-loop operation, torque errors will occur that will mean that the motor will not be able to be stopped.		
			
Note:	Re p0601 = 1: Tripping resistance = 1650 Ohm. Wire breakage and short-circuit monitoring.		
p0604[0...n]	Mot_temp_mod 2/KTY alarm threshold / Mod 2/KTY A thresh		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: 21_1	Unit selection: p0505	Func. diagram: 8016
	Min 0.0 [°C]	Max 240.0 [°C]	Factory setting 130.0 [°C]
Description:	Sets the alarm threshold for monitoring the motor temperature for motor temperature model 2 or KTY. After the alarm threshold is exceeded, alarm A07910 is output and timer (p0606) is started. If the delay time has expired and the alarm threshold has, in the meantime, not been fallen below, then fault F07011 is output.		
Dependency:	Refer to: p0606, p0612 Refer to: F07011, A07910		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	The hysteresis is 2 K. When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		
p0605[0...n]	Mot_temp_mod 1/2 threshold / Mod 1/2 threshold		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: 21_1	Unit selection: p0505	Func. diagram: 8016, 8017
	Min 0.0 [°C]	Max 240.0 [°C]	Factory setting 145.0 [°C]
Description:	Sets the threshold for monitoring the motor temperature for motor temperature model 1/2 or KTY. Motor temperature model 1 (p0612.0 = 1): alarm threshold - Alarm A07012 is output after the alarm threshold is exceeded. Motor temperature model 2 (p0612.1 = 1) or KTY: fault threshold - Fault F07011 is output after the fault threshold is exceeded.		
Dependency:	Refer to: p0606, p0611, p0612 Refer to: F07011, A07012		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		

Notice: Motor temperature model 1:
p0605 also defines the target temperature of the model for r0034 = 100 %. Therefore, p0605 has no influence on the time up to alarm A07012 being issued. The time is only determined by time constant p0611, the actual current and the reference value p0305.

Note: The hysteresis is 2 K.
When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).

p0606[0...n] Mot_temp_mod 2/KTY timer / Mod 2/KTY t_timer

Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
Units group: -	Unit selection: -	Func. diagram: 8016
Min 0.000 [s]	Max 600.000 [s]	Factory setting 0.000 [s]

Description: Sets the timer for monitoring the motor temperature for motor temperature model 2 or KTY.
This timer is started when the temperature alarm threshold (p0604) is exceeded.
If the timer has expired and the alarm threshold has, in the meantime, not been fallen below, then fault F07011 is output.
If the temperature fault threshold (p0605) is prematurely exceeded before the timer has expired, then fault F07011 is immediately output.

Dependency: Refer to: p0604, p0605
Refer to: F07011, A07910

Note: With p0606 = 0 s, the timer is de-activated and only the fault threshold is effective.
KTY sensor: When setting the minimum value, the timer is disabled and a fault is not output until p0605 is exceeded.
PTC sensor, bimetallic NC contact: The timer minimum value has no special significance.

p0607[0...n] Temperature sensor fault timer / Sensor fault time

Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
Units group: -	Unit selection: -	Func. diagram: -
Min 0.000 [s]	Max 600.000 [s]	Factory setting 0.100 [s]

Description: Sets the timer between the output of alarm and fault for a temperature sensor fault.
If there is a sensor fault, this timer is started.
If the sensor fault is still present after the timer has expired, a corresponding fault is output.

Notice: The parameterized time is internally rounded-off to an integer multiple of 48 ms.

Note: If the motor is an induction motor, the timer is switched off when setting the minimum value and no alarm is output. Temperature monitoring is then based on the thermal model.

p0610[0...n] Motor overtemperature response / Mot temp response

Access level: 2	Calculated: -	Data type: Integer16
Can be changed: C(3), T	Scaling: -	Dyn. index: MDS
Units group: -	Unit selection: -	Func. diagram: 8016
Min 0	Max 12	Factory setting 12

Description: Sets the system response when the motor temperature reaches the alarm threshold.

Value:
0: No response only alarm no reduction of I_max
1: Messages, reduction of I_max
2: Messages, no reduction of I_max
12: Messages, no reduction of I_max, temperature storage

Dependency: Refer to: p0601, p0604, p0605, p0614, p0615
Refer to: F07011, A07012, A07910

Note: The I_{max} reduction is not executed for PTC (p0601 = 1) or bimetallic NC contact (p0601 = 4).
 The I_{max} reduction results in a lower output frequency.
 If value = 0:
 An alarm is output and I_{max} is not reduced.
 If value = 1:
 An alarm is output and a timer is started. A fault is output if the alarm is still active after this timer has expired.
 - for KTY84, the following applies: I_{max} is reduced
 - for PTC, the following is valid: I_{max} is not reduced
 If value = 2:
 An alarm is output and a timer is started. A fault is output if the alarm is still active after this timer has expired.
 If value = 12:
 Behavior is always the same as for value 2.
 For motor temperature monitoring without temperature sensor, when switching off, the model temperature is saved in a non-volatile fashion. When switching on, the same value (reduced by p0614) is taken into account in the model calculation. As a consequence, the UL508C specification is fulfilled.

p0611[0...n]		I2t motor model thermal time constant / I2t mot_mod T		
	Access level: 3	Calculated: -	Data type: FloatingPoint32	
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS	
	Units group: -	Unit selection: -	Func. diagram: 8017	
	Min 0 [s]	Max 20000 [s]	Factory setting 0 [s]	
Description:	Sets the winding time constant. The time constant specifies the warm-up time of the cold stator winding when loaded with the motor standstill current (rated motor current, if the motor standstill current is not parameterized) up until a temperature rise of 63 % of the continuously permissible winding temperature has been reached.			
Dependency:	This parameter is only used for synchronous motors (p0300 = 2xx). Refer to: r0034, p0612, p0615 Refer to: F07011, A07012, A07910			
Caution:	This parameter is automatically pre-set from the motor database for motors from the motor list (p0301). When selecting a catalog motor, this parameter cannot be changed (write protection). Information in p0300 should be carefully observed when removing write protection.			
Note:	When parameter p0611 is reset to 0, then this switches out the thermal I2t motor model (refer to p0612). If no temperature sensor is parameterized, then the ambient temperature for the thermal motor model is referred to p0625.			

p0612[0...n]		Mot_temp_mod activation / Mot_temp_mod act			
	Access level: 3	Calculated: p0340 = 1	Data type: Unsigned16		
	Can be changed: U, T	Scaling: -	Dyn. index: MDS		
	Units group: -	Unit selection: -	Func. diagram: 8017		
	Min -	Max -	Factory setting 0010 bin		
Description:	Setting to activate the motor temperature model.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Activating motor temperature model 1 (I2t)	Yes	No	-
	01	Activate motor temperature model 2	Yes	No	-
Dependency:	Refer to: r0034, p0604, p0605, p0611, p0615, p0625, p0626, p0627, p0628 Refer to: F07011, A07012, A07910				
Notice:	Re bit 00: This bit is only automatically activated for permanent-magnet 1FT7 synchronous motors. For other permanent-magnet synchronous motors, the user himself must activate motor temperature model 1 (I2t). It is only possible to activate this motor temperature model (I2t) for a time constant greater than zero (p0611 > 0).				

Note: Mot_temp_mod: motor temperature model
 Re bit 00:
 This bit is used to activate/deactivate the motor temperature model for permanent-magnet synchronous motors.
 Re bit 01:
 This bit is used to activate/deactivate the motor temperature model for induction motors.

p0614[0...n]	Thermal resistance adaptation reduction factor / Therm R_adapt red		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [%]	Max 100 [%]	Factory setting 30 [%]
Description:	Sets the reduction factor for the overtemperature of the thermal adaptation of the stator/rotor resistance. The value is a starting value when switching on. Internally, after switch-on, the reduction factor has no effect corresponding to the thermal time constant.		
Dependency:	Refer to: p0610		
Note:	The reduction factor is only effective for p0610 = 12, and refers to the overtemperature.		

p0615[0...n]	Mot_temp_mod 1 (I2t) fault threshold / I2t F thresh		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: 21_1	Unit selection: p0505	Func. diagram: 8017
	Min 0.0 [°C]	Max 220.0 [°C]	Factory setting 180.0 [°C]
Description:	Sets the fault threshold for monitoring the motor temperature for motor temperature model 1 (I2t). - Fault F07011 is output after the fault threshold is exceeded. - fault threshold for r0034 = 100 % * (p0615 - 40) / (p0605 - 40).		
Dependency:	The parameter is only used for permanent-magnet synchronous motors (p0300 = 2xx). Refer to: r0034, p0611, p0612 Refer to: F07011, A07012		
Caution:	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	The hysteresis is 2 K.		

p0620[0...n]	Thermal adaptation, stator and rotor resistance / Mot therm_adapt R		
	Access level: 4	Calculated: p0340 = 1	Data type: Integer16
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 2	Factory setting 1
Description:	Sets the thermal adaptation of the stator/primary section resistance and rotor/secondary section resistance according to r0395 and r0396.		
Value:	0: No thermal adaptation of stator and rotor resistances 1: Resistances adapted to the temperatures of the thermal model 2: Resistances adapted to the measured stator winding temperature		
Note:	For p0620 = 1, the following applies: The stator resistance is adapted using the temperature in r0035 and the rotor resistance together with the model temperature in r0633. For p0620 = 2, the following applies: The stator resistance is adapted using the temperature in r0035. If applicable, the rotor temperature for adapting the rotor resistance is calculated from the stator temperature (r0035) as follows: $\text{theta_R} = (\text{r0628} + \text{r0625}) / (\text{r0627} + \text{r0625}) * \text{r0035}$		

p0621[0...n]	Identification stator resistance after restart / Rst_ident Restart		
	Access level: 2	Calculated: -	Data type: Integer16
	Can be changed: C(3), T	Scaling: -	Dyn. index: MDS, p0130
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	2	0
Description:	Selects the identification of the stator resistance after booting the Control Unit (only for vector control).		
	The identification is used to measure the actual stator resistance and from the ratio of the result of motor data identification (p0350) to the matching ambient temperature (p0625) the actual mean temperature of the stator winding is calculated. The result is used to initialize the thermal motor model.		
	p0621 = 1:		
	Identification of the stator resistance only when the drive is powered up for the first time (pulse enable) after booting the Control Unit.		
	p0621 = 2:		
	Identification of the stator resistance every time the drive is powered up (pulse enable).		
Value:	0: No Rs identification		
	1: Rs identification after switching-on again		
	2: Rs identification after switching-on each time		
Dependency:	- perform motor data identification (see p1910) with cold motor.		
	- enter ambient temperature at time of motor data identification in p0625.		
	Refer to: p0622, r0623		
Notice:	The calculated stator temperature can only be compared with the measured value of a temperature sensor (KTY) to a certain extent, as the sensor is usually the warmest point of the stator winding, whereas the measured value of identification reflects the mean value of the stator winding.		
	Furthermore this is a short-time measurement with limited accuracy that is performed during the magnetizing phase of the induction motor.		
Note:	The measurement is carried out:		
	- For induction motors		
	- When vector control is active (see p1300)		
	- If a temperature sensor (KTY) has not been connected		
	- When the motor is at a standstill when switched on		
	When a flying restart is performed on a rotating motor, the temperatures of the thermal motor model are set to a third of the overtemperatures. This occurs only once, however, when the CU is booted (e.g. after a power failure).		
	If identification is activated, the magnetizing time is determined via p0622 and not via p0346. Quick magnetizing (p1401.6) is de-energized internally and alarm A07416 is displayed. The speed is enabled after completion of the measurement.		
p0622[0...n]	Motor excitation time for Rs_ident after powering up again / t_excit Rs_id		
	Access level: 3	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS, p0130
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0.000 [s]	20.000 [s]	0.000 [s]
Description:	Sets the excitation time of the motor for the stator resistance identification after powering up again (restart).		
Dependency:	Refer to: p0621, r0623		
Note:	For p0622 < p0346 the following applies:		
	If identification is activated, the magnetizing time is influenced by p0622. The speed is enabled after measurement is complete, but not before the time in p0346 has elapsed (see r0056 bit 4). The time taken for measurement also depends on the settling time of the measured current.		
	For p0622 >= p0346 the following applies:		
	Parameter p0622 is internally limited to the magnetizing time p0346, so that p0346 represents the maximum possible magnetizing time during identification. The entire measurement period (magnetizing plus measurement settling time plus measuring time) will always be greater than p0346.		

r0623	Rs identification stator resistance after switch on again / Rs-id Rs aft sw-on		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [ohm]	Max - [ohm]	Factory setting - [ohm]
Description:	Displays the stator resistance determined using the Rs identification after switching on again.		
Dependency:	Refer to: p0621, p0622		
p0625[0...n]	Motor ambient temperature / Mot T_ambient		
	Access level: 3	Calculated: p0340 = 1,2	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: 21_1	Unit selection: p0505	Func. diagram: 8016
	Min -40 [°C]	Max 80 [°C]	Factory setting 20 [°C]
Description:	Defines the ambient temperature of the motor for calculating the motor temperature model.		
Note:	The parameters for stator and rotor resistance (p0350, p0354) refer to this temperature. If the thermal I2t motor model is activated for permanent-magnet synchronous motors (refer to p0611), p0625 is included in the model calculation if a temperature sensor is not being used (see p0601).		
p0626[0...n]	Motor overtemperature, stator core / Mot T_over core		
	Access level: 4	Calculated: p0340 = 1,2	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: 21_2	Unit selection: p0505	Func. diagram: 8016
	Min 20 [K]	Max 200 [K]	Factory setting 50 [K]
Description:	Defines the rated overtemperature of the stator core referred to the ambient temperature.		
Dependency:	For 1LA7 motors (p0300), the parameter is pre-set as a function of p0307 and p0311. Refer to: p0625		
Caution:	When selecting a standard induction motor listed in the catalog (p0300 > 100, p0301 > 10000), this parameter is automatically preassigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		
p0627[0...n]	Motor overtemperature, stator winding / Mot T_over stator		
	Access level: 4	Calculated: p0340 = 1,2	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: 21_2	Unit selection: p0505	Func. diagram: 8016
	Min 20 [K]	Max 200 [K]	Factory setting 80 [K]
Description:	Defines the rated overtemperature of the stator winding referred to the ambient temperature.		
Dependency:	For 1LA7 motors (p0300), the parameter is pre-set as a function of p0307 and p0311. Refer to: p0625		
Caution:	When selecting a standard induction motor listed in the catalog (p0300 > 100, p0301 > 10000), this parameter is automatically preassigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		

p0628[0...n]	Motor overtemperature rotor winding / Mot T_over rotor		
	Access level: 4	Calculated: p0340 = 1,2	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: 21_2	Unit selection: p0505	Func. diagram: 8016
	Min 20 [K]	Max 200 [K]	Factory setting 100 [K]
Description:	Defines the rated overtemperature of the squirrel cage rotor referred to ambient temperature.		
Dependency:	For 1LA7 motors (p0300), the parameter is pre-set as a function of p0307 and p0311. Refer to: p0625		
Caution:	When selecting a standard induction motor listed in the catalog (p0300 > 100, p0301 > 10000), this parameter is automatically preassigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
Note:	When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		
r0630[0...n]	Mot_temp_mod ambient temperature / Mod T_ambient		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2006	Dyn. index: MDS
	Units group: 21_1	Unit selection: p0505	Func. diagram: 8016
	Min - [°C]	Max - [°C]	Factory setting - [°C]
Description:	Displays the ambient temperature of the motor temperature model.		
r0631[0...n]	Mot_temp_mod stator iron temperature / Mod T_stator		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2006	Dyn. index: MDS
	Units group: 21_1	Unit selection: p0505	Func. diagram: 8016
	Min - [°C]	Max - [°C]	Factory setting - [°C]
Description:	Displays the stator core temperature of the motor temperature model.		
r0632[0...n]	Mot_temp_mod stator winding temperature / Mod T_winding		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2006	Dyn. index: MDS
	Units group: 21_1	Unit selection: p0505	Func. diagram: 8016
	Min - [°C]	Max - [°C]	Factory setting - [°C]
Description:	Displays the stator winding temperature of the motor temperature model.		
r0633[0...n]	Mot_temp_mod rotor temperature / Mod T_rotor		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2006	Dyn. index: MDS
	Units group: 21_1	Unit selection: p0505	Func. diagram: 8016
	Min - [°C]	Max - [°C]	Factory setting - [°C]
Description:	Displays the rotor temperature of the motor temperature model.		
Note:	For motor temperature model 3 (p0612.2 = 1), this parameter is not valid:		

p0634[0...n]	Q flux flux constant unsaturated / PSIQ KPSI UNSAT		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.000 [Vsrms]	Max 100.000 [Vsrms]	Factory setting 0.000 [Vsrms]
Description:	The non-linear and cross-coupled quadrature axis flux functions are defined using 4 coefficients. The parameter weights the unsaturated component of the quadrature axis flux function.		
p0635[0...n]	Q flux quadrature axis current constant unsaturated / PSIQ KIQ UNSAT		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00 [Arms]	Max 10000.00 [Arms]	Factory setting 0.00 [Arms]
Description:	The non-linear and cross-coupled quadrature axis flux functions are defined using 4 coefficients. This parameter describes the interdependency of the unsaturated component of the quadrature axis current.		
Dependency:	Refer to: p0634		
p0636[0...n]	Q flux direct axis current constant unsaturated / PSIQ KID UNSAT		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00 [Arms]	Max 10000.00 [Arms]	Factory setting 0.00 [Arms]
Description:	The non-linear and cross-coupled quadrature axis flux functions are defined using 4 coefficients. This parameter describes the interdependency of the unsaturated component of the direct axis current.		
Dependency:	Refer to: p0634		
p0637[0...n]	Q flux flux gradient saturated / PSIQ Grad SAT		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(3), U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00 [mH]	Max 10000.00 [mH]	Factory setting 0.00 [mH]
Description:	The non-linear and cross-coupled quadrature axis flux functions are defined using 4 coefficients. This parameter describes the gradients of the saturated component over the quadrature axis current.		
Dependency:	Refer to: p0634, p0635, p0636		
p0640[0...n]	Current limit / Current limit		
	Access level: 2	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: C(1, 3), U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 5722, 6640
	Min 0.00 [Arms]	Max 10000.00 [Arms]	Factory setting 0.00 [Arms]
Description:	Sets the current limit.		
Dependency:	Refer to: r0209, p0323		
Note:	The parameter is part of the quick commissioning (p0010 = 1); this means that it is appropriately pre-assigned when changing p0305. The current limit p0640 is limited to r0209.		

The resulting current limit is displayed in r0067 and if required, r0067 is reduced by the thermal model of the power unit.

The torque and power limits (p1520, p1521, p1530, p1531) matching the current limit are automatically calculated when exiting the quick commissioning using p3900 > 0 or using the automatic parameterization with p0340 = 3, 5. p0640 is limited to 4.0 x p0305.

p0640 is pre-assigned for the automatic self commissioning routine (e.g. to 1.5 x p0305, with p0305 = r0207[1]).

p0640 must be entered when commissioning the system. This is the reason that p0640 is not calculated by the automatic parameterization when exiting the quick commissioning (p3900 > 0).

p0641[0...n]	CI: Current limit variable / Curr lim var		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 6640
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for the variable current limit. The value is referred to p0640.		

p0650[0...n]	Actual motor operating hours / Mot t_oper act		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [h]	Max 4294967295 [h]	Factory setting 0 [h]
Description:	Displays the operating hours for the corresponding motor. The motor operating time counter continues to run when the pulses are enabled. When the pulse enable is withdrawn, the counter is held and the value saved.		
Dependency:	Refer to: p0651 Refer to: A01590		
Note:	The operating hours counter in p0650 can only be reset to 0. The operating hours counter only runs with drive data set 0 and 1 (DDS).		

p0651[0...n]	Motor operating hours maintenance interval / Mot t_op maint		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [h]	Max 150000 [h]	Factory setting 0 [h]
Description:	Sets the service/maintenance intervals in hours for the appropriate motor. An appropriate fault is output when the operating hours set here are reached.		
Dependency:	Refer to: p0650 Refer to: A01590		
Note:	For p0651 = 0, the operating hours counter is disabled. When setting p0651 to 0, then p0650 is automatically set to 0. The operating hours counter only runs with drive data set 0 and 1 (DDS). If there is no temperature monitor, then interconnect to a fixed value. Re index 3: When the binector input is interconnected, pre-charging is switched-on independent of the magnitude of the pre-charging threshold.		

r0720[0...4] CU number of inputs and outputs / CU I/O count

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 1510
Min	Max	Factory setting
-	-	-

Description: Displays the number of inputs and outputs

Index:
 [0] = Number of digital inputs
 [1] = Number of digital outputs
 [2] = Number of digital input/outputs bidirectional
 [3] = Number of analog inputs
 [4] = Number of analog outputs

r0721 CU digital inputs terminal actual value / CU DI actual value

CU240D-2_DP	Access level: 2	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 1508, 2218, 2222
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	-

Description: Displays the actual value at the digital inputs.

This means that the actual input signal can be checked at terminal DI x prior to switching from the simulation mode (p0795.x = 1) to the terminal mode (p0795.x = 0).

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DI 0 (X07.4)	High	Low	-
	01	DI 1 (X07.2)	High	Low	-
	02	DI 2 (X08.4)	High	Low	-
	03	DI 3 (X08.2)	High	Low	-
	04	DI 4 (X09.4)	High	Low	-
	05	DI 5 (X09.2)	High	Low	-
	11	DI 11 (X10.3) AI 0	High	Low	-
	12	DI 12 (X10.4) AI 1	High	Low	-

Note:
 AI: Analog Input
 DI: Digital Input

r0721 CU digital inputs terminal actual value / CU DI actual value

CU250D-2_DP_F	Access level: 2	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1508, 2218, 2222

Min	Max	Factory setting
-	-	-

Description: Displays the actual value at the digital inputs.

This means that the actual input signal can be checked at terminal DI x prior to switching from the simulation mode (p0795.x = 1) to the terminal mode (p0795.x = 0).

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DI 0 (X07.4)	High	Low	-
	01	DI 1 (X07.2)	High	Low	-
	02	DI 2 (X08.4)	High	Low	-
	03	DI 3 (X08.2)	High	Low	-
	04	DI 4 (X09.4)	High	Low	-
	05	DI 5 (X09.2)	High	Low	-

Note:
 DI: Digital Input

r0722.0...12		CO/BO: CU digital inputs status / CU DI status			
CU240D-2_DP	Access level: 2	Calculated: -	Data type: Unsigned32		
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -		
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 1510, 2020, 2030, 2031, 2100, 2120, 2130, 2131, 2132, 2133		
CU240D-2_PN_F					
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the status of the digital inputs.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DI 0 (X07.4)	High	Low	-
	01	DI 1 (X07.2)	High	Low	-
	02	DI 2 (X08.4)	High	Low	-
	03	DI 3 (X08.2)	High	Low	-
	04	DI 4 (X09.4)	High	Low	-
	05	DI 5 (X09.2)	High	Low	-
	11	DI 11 (X10.3) AI 0	High	Low	-
	12	DI 12 (X10.4) AI 1	High	Low	-
Dependency:	Refer to: r0723				
Note:	AI: Analog Input DI: Digital Input				

r0722.0...5		CO/BO: CU digital inputs status / CU DI status			
CU250D-2_DP_F	Access level: 2	Calculated: -	Data type: Unsigned32		
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 1510, 2020, 2030, 2031, 2100, 2120, 2130, 2131, 2132, 2133		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the status of the digital inputs.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DI 0 (X07.4)	High	Low	-
	01	DI 1 (X07.2)	High	Low	-
	02	DI 2 (X08.4)	High	Low	-
	03	DI 3 (X08.2)	High	Low	-
	04	DI 4 (X09.4)	High	Low	-
	05	DI 5 (X09.2)	High	Low	-
Dependency:	Refer to: r0723				
Note:	DI: Digital Input				

r0723.0...12		CO/BO: CU digital inputs status inverted / CU DI status inv			
CU240D-2_DP	Access level: 2	Calculated: -	Data type: Unsigned32		
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -		
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 1510, 2020, 2030, 2031, 2100, 2120, 2130, 2131, 2132, 2133		
CU240D-2_PN_F					
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the inverted status of the digital inputs.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DI 0 (X07.4)	High	Low	-
	01	DI 1 (X07.2)	High	Low	-
	02	DI 2 (X08.4)	High	Low	-

03	DI 3 (X08.2)	High	Low	-
04	DI 4 (X09.4)	High	Low	-
05	DI 5 (X09.2)	High	Low	-
11	DI 11 (X10.3) AI 0	High	Low	-
12	DI 12 (X10.4) AI 1	High	Low	-

Dependency: Refer to: r0722

Note: AI: Analog Input

DI: Digital Input

r0723.0...5 CO/BO: CU digital inputs status inverted / CU DI status inv

CU250D-2_DP_F	Access level: 2	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1510, 2020, 2030, 2031, 2100, 2120, 2130, 2131, 2132, 2133

Min	Max	Factory setting
-	-	-

Description: Displays the inverted status of the digital inputs.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DI 0 (X07.4)	High	Low	-
	01	DI 1 (X07.2)	High	Low	-
	02	DI 2 (X08.4)	High	Low	-
	03	DI 3 (X08.2)	High	Low	-
	04	DI 4 (X09.4)	High	Low	-
	05	DI 5 (X09.2)	High	Low	-

Dependency: Refer to: r0722

Note: DI: Digital Input

p0724 CU digital inputs debounce time / CU DI t_debounce

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -

Min	Max	Factory setting
0.000 [ms]	20.000 [ms]	4.000 [ms]

Description: Sets the debounce time for digital inputs.

Note: The digital inputs are read in cyclically every 2 ms (DI 11, DI 12 every 4 ms).

To debounce the signals, the set debounce time is converted into integer multiple debounce clock cycles T_p ($T_p = p0724 / 2$ ms).

DI: Digital Input

p0730 BI: CU signal source for terminal DO 0 / CU S_src DO 0

Access level: 2	Calculated: -	Data type: U32 / Binary
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 1510, 2030, 2130

Min	Max	Factory setting
-	-	52.3

Description: Sets the signal source for terminal DO 0 (X05.4)

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: DO: Digital Output

p0731	BI: CU signal source for terminal DO 1 / CU S_src DO 1		
	Access level: 2	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1510, 2030, 2130
	Min	Max	Factory setting
	-	-	52.7
Description:	Sets the signal source for terminal DO 1 (X05.2)		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
Note:	DO: Digital Output		

r0747	CU digital outputs status / CU DO status				
	Access level: 3	Calculated: -	Data type: Unsigned32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 2130, 2131, 2132, 2133		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the status of digital outputs.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DO 0 (NO: X05.4)	High	Low	-
	01	DO 1 (NO: X05.2)	High	Low	-
Note:	DO: Digital Output				
	T: Terminal				
	Relay output: NO = normally open, NC = normally closed				
	Inversion using p0748 has been taken into account.				

p0748	CU invert digital outputs / CU DO inv				
	Access level: 3	Calculated: -	Data type: Unsigned32		
	Can be changed: U, T	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 2030, 2031, 2130, 2131, 2132, 2133		
	Min	Max	Factory setting		
	-	-	0000 bin		
Description:	Setting to invert the signals at the digital outputs.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DO 0 (NO: X05.4)	Inverted	Not inverted	-
	01	DO 1 (NO: X05.2)	Inverted	Not inverted	-
Note:	DO: Digital Output				
	T: Terminal				
	Relay output: NO = normally open, NC = normally closed				

r0751.0...9	BO: CU analog inputs status word / CU AI status word				
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16		
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -		
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 9566, 9568		
CU240D-2_PN_F	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the status of analog inputs.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Analog input AI0 wire breakage	Yes	No	-

01	Analog input AI1 wire breakage	Yes	No	-
08	Analog input AI0 no wire breakage	Yes	No	-
09	Analog input AI1 no wire breakage	Yes	No	-

Note: AI: Analog Input

r0752[0...1]	CO: CO: CU analog inputs input voltage/current actual / CU AI U/I_inp act			
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32	
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -	
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 9566, 9568, 9576	
CU240D-2_PN_F				

Min	Max	Factory setting
-	-	-

Description: Displays the actual input voltage in V.

Index:
[0] = AI0 (X10.3)
[1] = AI1 (X10.4)

Dependency: The type of analog input AIx is set using p0756.
Refer to: p0756

Note: AI: Analog Input

p0753[0...1]	CU analog inputs smoothing time constant / CU AI T_smooth			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32	
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -	
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 9566, 9568, 9576	
CU240D-2_PN_F				

Min	Max	Factory setting
0.0 [ms]	1000.0 [ms]	0.0 [ms]

Description: Sets the smoothing time constant of the 1st-order low pass filter for the analog inputs.

Index:
[0] = AI0 (X10.3)
[1] = AI1 (X10.4)

Note: AI: Analog Input

r0755[0...1]	CO: CO: CU analog inputs actual value in percent / CU AI value in %			
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32	
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -	
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 9566, 9568, 9576	
CU240D-2_PN_F				

Min	Max	Factory setting
- [%]	- [%]	- [%]

Description: Displays the currently referred input value of the analog inputs.
When interconnected, the signals are referred to the reference quantities p200x and p205x.

Index:
[0] = AI0 (X10.3)
[1] = AI1 (X10.4)

Note: AI: Analog Input

p0756[0...1]	CU analog inputs type / CU AI type			
CU240D-2_DP	Access level: 2	Calculated: -	Data type: Integer16	
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -	
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 9566, 9568, 9576	
CU240D-2_PN_F				

Min	Max	Factory setting
0	8	0

Description: Sets the type of analog inputs.
p0756[0...1] = 0 corresponds to a voltage input (r0752, p0757, p0759 are displayed in V).

List of parameters

Value: 0: Unipolar voltage input (0 V ... +10 V)
8: No sensor connected

Index: [0] = AI0 (X10.3)
[1] = AI1 (X10.4)

Warning: The maximum voltage difference between analog input terminals AI+, AI-, and the ground must not exceed 35 V.



p0757[0...1] CU analog inputs characteristic value x1 / CU AI char x1

CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 9566, 9568, 9576
CU240D-2_PN_F			

Min	Max	Factory setting
-50.000	160.000	0.000

Description: Sets the scaling characteristic for the analog inputs.
The scaling characteristic for the analog inputs is defined using 2 points.
This parameter specifies the x coordinate (V) of the 1st value pair of the characteristic.

Index: [0] = AI0 (X10.3)
[1] = AI1 (X10.4)

Note: The parameters for the characteristic do not have a limiting effect.

p0758[0...1] CU analog inputs characteristic value y1 / CU AI char y1

CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 9566, 9568, 9576
CU240D-2_PN_F			

Min	Max	Factory setting
-1000.00 [%]	1000.00 [%]	0.00 [%]

Description: Sets the scaling characteristic for the analog inputs.
The scaling characteristic for the analog inputs is defined using 2 points.
This parameter specifies the y coordinate (percentage) of the 1st value pair of the characteristic.

Index: [0] = AI0 (X10.3)
[1] = AI1 (X10.4)

Note: The parameters for the characteristic do not have a limiting effect.

p0759[0...1] CU analog inputs characteristic value x2 / CU AI char x2

CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 9566, 9568, 9576
CU240D-2_PN_F			

Min	Max	Factory setting
-50.000	160.000	10.000

Description: Sets the scaling characteristic for the analog inputs.
The scaling characteristic for the analog inputs is defined using 2 points.
This parameter specifies the x coordinate (V) of the 2nd value pair of the characteristic.

Index: [0] = AI0 (X10.3)
[1] = AI1 (X10.4)

Note: The parameters for the characteristic do not have a limiting effect.

p0760[0...1] CU analog inputs characteristic value y2 / CU AI char y2			
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 9566, 9568, 9576
CU240D-2_PN_F			
	Min -1000.00 [%]	Max 1000.00 [%]	Factory setting 100.00 [%]
Description:	Sets the scaling characteristic for the analog inputs. The scaling characteristic for the analog inputs is defined using 2 points. This parameter specifies the y coordinate (percentage) of the 2nd value pair of the characteristic.		
Index:	[0] = AI0 (X10.3) [1] = AI1 (X10.4)		
Note:	The parameters for the characteristic do not have a limiting effect.		
p0761[0...1] CU analog inputs wire breakage monitoring response threshold / CU WireBrkThresh			
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 9566, 9568
CU240D-2_PN_F			
	Min 0.00	Max 20.00	Factory setting 2.00
Description:	Sets the response threshold for the wire breakage monitoring of the analog inputs. The unit for the parameter value depends on the set analog input type.		
Index:	[0] = AI0 (X10.3) [1] = AI1 (X10.4)		
Dependency:	For the following analog input type, the wire breakage monitoring is active: p0756[0...1] = 1 (unipolar voltage input monitored (+2 V ... +10 V)), unit [V] Refer to: p0756		
Note:	AI: Analog Input When p0761 = 0, wire breakage monitoring is not carried out.		
p0762[0...1] CU analog inputs wire breakage monitoring delay time / CU wire brk t_del			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 9566, 9568
CU240D-2_PN_F			
	Min 0 [ms]	Max 1000 [ms]	Factory setting 100 [ms]
Description:	Sets the delay time for the wire breakage monitoring of the analog inputs.		
Index:	[0] = AI0 (X10.3) [1] = AI1 (X10.4)		
Note:	AI: Analog Input		

p0764[0...1] CU analog inputs dead zone / CU AI dead zone		
Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 2251
Min 0.000 [V]	Max 20.000 [V]	Factory setting 0.000 [V]
Description:	Determines the width of the dead zone at the analog input. Analog input type unipolar (e.g. 0 ... +10 V): The dead zone starts with the characteristic value x1/y1 (p0757/p0758). Analog input type bipolar (e.g. -10 V ... +10 V): The dead zone is located at the symmetrical center between characteristic value x1/y1 (p0757/p0758) and x2/y2 (p0759/p0760). The set value doubles the dead zone.	
Index:	[0] = AI0 (X10.3) [1] = AI1 (X10.4)	
Note:	AI: Analog Input T: Terminal	

p0795 CU digital inputs simulation mode / CU DI simulation					
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32		
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -		
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 1510, 2020, 2030, 2031, 2100, 2120, 2130, 2131, 2132, 2133		
CU240D-2_PN_F	Min -	Max -	Factory setting 0000 0000 0000 0000 bin		
Description:	Sets the simulation mode for digital inputs.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DI0 (X07.1)	Simulation	Terminal eval	-
	01	DI1 (X07.2)	Simulation	Terminal eval	-
	02	DI2 (X08.1)	Simulation	Terminal eval	-
	03	DI3 (X08.2)	Simulation	Terminal eval	-
	04	DI4 (X09.1)	Simulation	Terminal eval	-
	05	DI5 (X09.2)	Simulation	Terminal eval	-
	11	DI11 (X10.3, 7) AI0	Simulation	Terminal eval	-
	12	DI12 (X10.4, 7) AI1	Simulation	Terminal eval	-
Dependency:	The setpoint for the input signals is specified using p0796. Refer to: p0796				
Note:	This parameter is not saved when data is backed up (p0971). AI: Analog Input DI: Digital Input				

p0795 CU digital inputs simulation mode / CU DI simulation					
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32		
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 1510, 2020, 2030, 2031, 2100, 2120, 2130, 2131, 2132, 2133		
	Min -	Max -	Factory setting 0000 0000 bin		
Description:	Sets the simulation mode for digital inputs.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DI0 (X07.1)	Simulation	Terminal eval	-
	01	DI1 (X07.2)	Simulation	Terminal eval	-

02	DI2 (X08.1)	Simulation	Terminal eval	-
03	DI3 (X08.2)	Simulation	Terminal eval	-
04	DI4 (X09.1)	Simulation	Terminal eval	-
05	DI5 (X09.2)	Simulation	Terminal eval	-

Dependency: The setpoint for the input signals is specified using p0796.
Refer to: p0796

Note: This parameter is not saved when data is backed up (p0971).
DI: Digital Input

p0796 CU digital inputs simulation mode setpoint / CU DI simul setp

CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 1510, 2020, 2030, 2031, 2100, 2120, 2130, 2131, 2132, 2133
CU240D-2_PN_F			Factory setting 0000 0000 0000 0000 bin
	Min -	Max -	

Description: Sets the setpoint for the input signals in the digital input simulation mode.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DI 0 (X07.4)	High	Low	-
	01	DI 1 (X07.2)	High	Low	-
	02	DI 2 (X08.4)	High	Low	-
	03	DI 3 (X08.2)	High	Low	-
	04	DI 4 (X09.4)	High	Low	-
	05	DI 5 (X09.2)	High	Low	-
	11	DI 11 (X10.3) AI 0	High	Low	-
	12	DI 12 (X10.4) AI 1	High	Low	-

Dependency: The simulation of a digital input is selected using p0795.
Refer to: p0795

Note: This parameter is not saved when data is backed up (p0971).
AI: Analog Input
DI: Digital Input

p0796 CU digital inputs simulation mode setpoint / CU DI simul setp

CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1510, 2020, 2030, 2031, 2100, 2120, 2130, 2131, 2132, 2133
	Min -	Max -	Factory setting 0000 0000 bin

Description: Sets the setpoint for the input signals in the digital input simulation mode.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DI 0 (X07.4)	High	Low	-
	01	DI 1 (X07.2)	High	Low	-
	02	DI 2 (X08.4)	High	Low	-
	03	DI 3 (X08.2)	High	Low	-
	04	DI 4 (X09.4)	High	Low	-
	05	DI 5 (X09.2)	High	Low	-

Dependency: The simulation of a digital input is selected using p0795.
Refer to: p0795

Note: This parameter is not saved when data is backed up (p0971).
DI: Digital Input

p0797[0...1]	CU analog inputs simulation mode / CU AI sim_mode		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 1	Factory setting 0
Description:	Sets the simulation mode for the analog inputs.		
Value:	0: Terminal evaluation for analog input x 1: Simulation for analog input x		
Index:	[0] = AI0 (X10.3) [1] = AI1 (X10.4)		
Dependency:	The setpoint for the input voltage is specified via p0798. Refer to: p0798		
Note:	This parameter is not saved when data is backed up (p0971). AI: Analog Input		
p0798[0...1]	CU analog inputs simulation mode setpoint / CU AI sim setp		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min -50.000	Max 2000.000	Factory setting 0.000
Description:	Sets the setpoint for the input value in the simulation mode of the analog inputs.		
Index:	[0] = AI0 (X10.3) [1] = AI1 (X10.4)		
Dependency:	The simulation of an analog input is selected using p0797. If AI x is parameterized as a voltage input (p0756), the setpoint is a voltage in V. Refer to: p0756, p0797		
Note:	This parameter is not saved when data is backed up (p0971). AI: Analog Input		
p0802	Data transfer: memory card as source/target / mem_card src/targ		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 100	Factory setting 0
Description:	Sets the number for data transfer of a parameter backup from/to memory card. Transfer from memory card to device memory (p0804 = 1): - Sets the source of parameter backup (e.g. p0802 = 48 --> PS048xxx.ACX is the source). Transfer from non-volatile device memory to memory card (p0804 = 2): - Sets the target of parameter backup (e.g. p0802 = 23 --> PS023xxx.ACX is the target).		
Dependency:	Refer to: p0803, p0804		
Notice:	If the data between the volatile and non-volatile device memories differ, then it may be necessary to save the data on the memory card in a non-volatile fashion prior to the transfer (e.g. p0971 = 1).		

p0803	Data transfer: device memory as source/target / Dev_mem src/targ		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 12	Factory setting 0
Description:	Sets the number for data transfer of a parameter backup from/to device memory. Transfer from memory card to device memory (p0804 = 1): - Sets the target of the parameter backup (e.g. p0803 = 10 --> PS010xxx.ACX is the target). Transfer from non-volatile device memory to memory card (p0804 = 2): - Sets the source of the parameter backup (e.g. p0803 = 11 --> PS011xxx.ACX is the source).		
Value:	0: Source/target standard 10: Source/target with setting 10 11: Source/target with setting 11 12: Source/target with setting 12		
Dependency:	Refer to: p0802, p0804		
Notice:	If the data between the volatile and non-volatile device memories differ, then it may be necessary to save the data on the memory card in a non-volatile fashion prior to the transfer (e.g. p0971 = 1).		
p0804	Data transfer start / Data transf start		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 1100	Factory setting 0
Description:	Sets the transfer direction and start of data transfer between the memory card and non-volatile device memory. Example 1: The parameter backup is to be transferred from the device memory to the memory card with setting 0. The parameter backup is to be stored on the memory card with setting 22. p0802 = 22 (parameter backup stored on memory card as target with setting 22) p0803 = 0 (parameter backup stored in device memory as source with setting 0) p0804 = 2 (start data transfer from device memory to memory card) --> PS000xxx.ACX is transferred from device memory to memory card and stored as PS022xxx.ACX. Example 2: The parameter backup is to be transferred from the memory card to the device memory with setting 22. The parameter backup is to be stored in the device memory as setting 0. p0802 = 22 (parameter backup stored on memory card as source with setting 22) p0803 = 0 (parameter backup stored in device memory as target with setting 0) p0804 = 1 (start data transfer from memory card to device memory) --> PS022xxx.ACX is transferred from memory card to device memory and stored as PS000xxx.ACX. Example 3 (only supported for PROFIBUS/PROFINET): The PROFIBUS or PROFINET device master data (GSD) should be transferred from the device memory to the memory card. p0802 = (not relevant) p0803 = (not relevant) p0804 = 12 (start transferring the GSD files to the memory card) --> The GSD files are transferred from the device memory to the memory card and stored in the /SIEMENS/SINAMICS/DATA/CFG directory.		
Value:	0: Inactive 1: Memory card to device memory 2: Device memory to memory card 12: Device memory (GSD files) to memory card 1001: File on memory card cannot be opened		

1002: File in device memory cannot be opened
 1003: Memory card not found
 1100: File cannot be transferred

Dependency: Refer to: p0802, p0803

Notice: The memory card must not be removed while data is being transferred.
 For p0014 = 1, the following applies:

After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.

Note: If a parameter backup with setting 0 is detected on the memory card when the Control Unit is switched on (PS000xxx.ACX), this is transferred automatically to the device memory.
 When the memory card is inserted, a parameter backup with setting 0 (PS000xxx.ACX) is automatically written to the memory card when the parameters are saved in a non-volatile memory (e.g. by means of "Copy RAM to ROM").
 Once the data has been successfully transferred, this parameter is automatically reset to 0. If an error occurs, the parameter is set to a value > 1000. Possible fault causes:

p0804 = 1001:

The parameter backup set in p0802 as the source on the memory card does not exist or there is not sufficient memory space available on the memory card.

p0804 = 1002:

The parameter backup set in p0803 as the source in the device memory does not exist or there is not sufficient memory space available in the device memory.

p0804 = 1003:

No memory card has been inserted.

p0806 **BI: Inhibit master control / PcCtrl inhibit**

Access level: 3	Calculated: -	Data type: U32 / Binary
Can be changed: T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	0

Description: Sets the signal source to block the master control.

Dependency: Refer to: r0807

Note: The commissioning software (drive control panel) uses the master control, for example.

r0807.0 **BO: Master control active / PcCtrl active**

Access level: 3	Calculated: -	Data type: Unsigned8
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Displays what has the master control.

The drive can be controlled via the BICO interconnection or from external (e.g. the commissioning software).

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Master control active	Yes	No	5030, 6031

Dependency: Refer to: p0806

Notice: The master control only influences control word 1 and speed setpoint 1. Other control words/setpoints can be transferred from another automation device.

Note: Bit 0 = 0: BICO interconnection active

Bit 0 = 1: Master control for PC/AOP

The commissioning software (drive control panel) uses the master control, for example.

p0809[0...2] Copy Command Data Set CDS / Copy CDS			
Access level: 2	Calculated: -	Data type: Unsigned8	
Can be changed: T	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: 8560	
Min 0	Max 3	Factory setting 0	
Description:	Copies one Command Data Set (CDS) into another.		
Index:	[0] = Source Command Data Set [1] = Target Command Data Set [2] = Start copying procedure		
Dependency:	Refer to: r3996		
Notice:	When the command data sets are copied, short-term communication interruptions may occur.		
Note:	Procedure: 1. In Index 0, enter which command data set should be copied. 2. In Index 1, enter the command data set that is to be copied into. 3. Start copying: Set index 2 from 0 to 1. p0809[2] is automatically set to 0 when copying is completed.		

p0810 BI: Command data set selection CDS bit 0 / CDS select bit 0			
CU240D-2_DP	Access level: 2	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 8560
CU240D-2_PN_F	Min -	Max -	Factory setting 722.3
Description:	Sets the signal source to select the Command Data Set bit 0 (CDS bit 0).		
Dependency:	Refer to: r0050, p0811, r0836		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
Note:	The Command Data Set selected using the binector inputs is displayed in r0836. The currently effective command data set is displayed in r0050. A Command Data Set can be copied using p0809.		


p0810 BI: Command data set selection CDS bit 0 / CDS select bit 0			
CU250D-2_DP_F	Access level: 2	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8560
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to select the Command Data Set bit 0 (CDS bit 0).		
Dependency:	Refer to: r0050, p0811, r0836		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
Note:	The Command Data Set selected using the binector inputs is displayed in r0836. The currently effective command data set is displayed in r0050. A Command Data Set can be copied using p0809.		

p0811	BI: Command data set selection CDS bit 1 / CDS select bit 1		
	Access level: 2	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8560
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to select the Command Data Set bit 1 (CDS bit 1).		
Dependency:	Refer to: r0050, p0810, r0836		
Note:	The Command Data Set selected using the binector inputs is displayed in r0836. The currently effective command data set is displayed in r0050. A Command Data Set can be copied using p0809.		
p0819[0...2]	Copy Drive Data Set DDS / Copy DDS		
	Access level: 2	Calculated: -	Data type: Unsigned8
	Can be changed: C(15)	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8565
	Min	Max	Factory setting
	0	3	0
Description:	Copies one Drive Data Set (DDS) into another.		
Index:	[0] = Source Drive Data Set [1] = Target Drive Data Set [2] = Start copying procedure		
Dependency:	Refer to: r3996		
Notice:	When the drive data sets are copied, short-term communication interruptions may occur.		
Note:	Procedure: 1. In Index 0, enter which drive data set is to be copied. 2. In Index 1, enter the drive data set data that is to be copied into. 3. Start copying: Set index 2 from 0 to 1. p0819[2] is automatically set to 0 when copying is completed.		
p0820[0...n]	BI: Drive Data Set selection DDS bit 0 / DDS select bit 0		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: C(15), T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 8565, 8575
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to select the Drive Data Set, bit 0 (DDS, bit 0).		
Dependency:	Refer to: r0051, r0837		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
p0821[0...n]	BI: Drive Data Set selection DDS bit 1 / DDS select bit 1		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: C(15), T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 8565
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to select the Drive Data Set, bit 1 (DDS, bit 1).		
Dependency:	Refer to: r0051, r0837		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		

p0826[0...n]	Motor changeover motor number / Mot_chng mot No.			
	Access level: 3	Calculated: -	Data type: Unsigned16	
	Can be changed: C(3), T	Scaling: -	Dyn. index: MDS	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min 0	Max 3	Factory setting 0	
Description:	Sets the freely-assignable motor number for the drive data set changeover. If the same motor is driven by different drive data sets, the same motor number must also be entered in these data sets. If the motor is also switched with the drive data set, different motor numbers must be used. In this case, the data set can only be switched when the pulse inhibit is set.			
Note:	If the motor numbers are identical, the same thermal motor model is used for calculation after data set changeover. If different motor numbers are used, different models are also used for calculating (the inactive motor cools down in each case). For the same motor number, the correction values of the Rs, Lh or kT adaptation are applied for the data set changeover (refer to r1782, r1787, r1797).			
r0835.2...8	CO/BO: Data set changeover status word / DDS_ZSW			
	Access level: 2	Calculated: -	Data type: Unsigned16	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: 8575	
	Min -	Max -	Factory setting -	
Description:	Displays the status word for the drive data set changeover.			
Bit field:	Bit	Signal name	1 signal	0 signal
	02	Internal parameter calculation active	Yes	No
	04	Armature short circuit active	Yes	No
	05	Identification running	Yes	No
	07	Rotating measurement running	Yes	No
	08	Motor data identification running	Yes	No
Note:	Re bit 02: A data set changeover is delayed by the time required for the internal parameter calculation. Re bit 04: A data set changeover is only carried out when the armature short circuit is not activated. Re bit 05: A data set changeover is only carried out when pole position identification is not running. Re bit 07: A data set changeover is only carried out when rotating measurement is not running. Re bit 08: A data set changeover is only carried out when motor data identification is not running.			
r0836.0...1	CO/BO: Command Data Set CDS selected / CDS selected			
	Access level: 3	Calculated: -	Data type: Unsigned8	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: 1530, 8560	
	Min -	Max -	Factory setting -	
Description:	Displays the command data set (CDS) selected via the binector input.			
Bit field:	Bit	Signal name	1 signal	0 signal
	00	CDS selection bit 0	ON	OFF
	01	CDS selection bit 1	ON	OFF
Dependency:	Refer to: r0050, p0810, p0811			

Note: Command data sets are selected via binector input p0810 and following.
The currently effective command data set is displayed in r0050.

r0837.0...1 CO/BO: Drive Data Set DDS selected / DDS selected				
	Access level: 3		Calculated: -	Data type: Unsigned8
	Can be changed: -		Scaling: -	Dyn. index: -
	Units group: -		Unit selection: -	Func. diagram: 8565
	Min		Max	Factory setting
	-		-	-
Description:	Displays the drive data set (DDS) selected via the binector input.			
Bit field:	Bit	Signal name	1 signal	0 signal
	00	DDS selection bit 0	ON	OFF
	01	DDS selection bit 1	ON	OFF
Dependency:	Refer to: r0051, p0820, p0821			
Note:	Drive data sets are selected via binector input p0820 and following. The currently effective drive data set is displayed in r0051. If there is only one data set, then a value of 0 is displayed in this parameter and not the selection via binector inputs.			

p0840[0...n] BI: ON / OFF (OFF1) / ON / OFF (OFF1)				
CU240D-2_DP	Access level: 3		Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T		Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -		Unit selection: -	Func. diagram: 2501, 2610, 8720, 8820, 8920
CU240D-2_PN_F				
	Min		Max	Factory setting
	-		-	[0] 2090.0
				[1] 0
				[2] 0
				[3] 0
Description:	Sets the signal source for the command "ON/OFF (OFF1)". For the PROFIdrive profile, this command corresponds to control word 1 bit 0 (STW1.0).			
Dependency:	Refer to: p1055, p1056			
Caution:	When "master control from PC" is activated, this binector input is ineffective.			
				
Notice:	For binector input p0840 = 0 signal, the motor can be moved, jogging using binector input p1055 or p1056. The command "ON/OFF (OFF1)" can be issued using binector input p0840 or p1055/p1056. For binector input p0840 = 0 signal, the switch-on inhibit is acknowledged. Only the signal source that originally powered up can also power down again. The parameter may be protected as a result of p0922 or p2079 and cannot be changed.			
Note:	For drives with closed-loop speed control (p1300 = 20, 21), the following applies: - BI: p0840 = 0 signal: OFF1 (braking with the ramp-function generator, then pulse suppression) For drives with closed-loop torque control (p1300 = 22, 23), the following applies: - BI: p0840 = 0 signal: immediate pulse suppression For drives with closed-loop torque control (activated using p1501), the following applies: - BI: p0840 = 0 signal: No dedicated braking response, but pulse cancelation when standstill is detected (p1226, p1227) For drives with closed-loop speed/torque control, the following applies: - BI: p0840 = 0/1 signal: ON (pulses can be enabled) For active infeeds (Active Line Module and Smart Line Module) the following applies: - BI: p0840 = 0 signal: OFF1 (reduce Vdc along the ramp, then pulse suppression and pre-charging contactor/line contactor open)			

- BI: p0840 = 0/1 signal: ON (pre-charging contactor/line contactor close, pulses can be enabled)

For passive infeeds (Basic Line Module) the following applies:

- BI: p0840 = 0 signal: OFF1 (pre-charging contactor/line contactor open)

- BI: p0840 = 0/1 signal: ON (pre-charging contactor/line contactor close)

r0863.1 of a drive can also be selected as signal source.

p0840[0...n]			
CU250D-2_DP_F	BI: ON / OFF (OFF1) / ON / OFF (OFF1)		
CU250D-2_PN_F	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2501, 2610, 8720, 8820, 8920
	Min	Max	Factory setting
	-	-	[0] 722.0
			[1] 0
			[2] 0
			[3] 0

Description: Sets the signal source for the command "ON/OFF (OFF1)".

For the PROFIdrive profile, this command corresponds to control word 1 bit 0 (STW1.0).

Dependency: Refer to: p1055, p1056

Caution: When "master control from PC" is activated, this binector input is ineffective.



Notice:

For binector input p0840 = 0 signal, the motor can be moved, jogging using binector input p1055 or p1056.

The command "ON/OFF (OFF1)" can be issued using binector input p0840 or p1055/p1056.

For binector input p0840 = 0 signal, the switch-on inhibit is acknowledged.

Only the signal source that originally powered up can also power down again.

The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note:

For drives with closed-loop speed control (p1300 = 20, 21), the following applies:

- BI: p0840 = 0 signal: OFF1 (braking with the ramp-function generator, then pulse suppression)

For drives with closed-loop torque control (p1300 = 22, 23), the following applies:

- BI: p0840 = 0 signal: immediate pulse suppression

For drives with closed-loop torque control (activated using p1501), the following applies:

- BI: p0840 = 0 signal: No dedicated braking response, but pulse cancelation when standstill is detected (p1226, p1227)

For drives with closed-loop speed/torque control, the following applies:

- BI: p0840 = 0/1 signal: ON (pulses can be enabled)

For active infeeds (Active Line Module and Smart Line Module) the following applies:

- BI: p0840 = 0 signal: OFF1 (reduce V_{dc} along the ramp, then pulse suppression and pre-charging contactor/line contactor open)

- BI: p0840 = 0/1 signal: ON (pre-charging contactor/line contactor close, pulses can be enabled)

For passive infeeds (Basic Line Module) the following applies:

- BI: p0840 = 0 signal: OFF1 (pre-charging contactor/line contactor open)

- BI: p0840 = 0/1 signal: ON (pre-charging contactor/line contactor close)

r0863.1 of a drive can also be selected as signal source.

p0844[0...n]	BI: No coast-down / coast-down (OFF2) signal source 1 / OFF2 S_src 1		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2501, 8720, 8820, 8920
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	[0] 2090.1
		[1] 1
		[2] 2090.1
		[3] 2090.1

Description: Sets the first signal source for the command "No coast down/coast down (OFF2)".
The following signals are AND'ed:
- BI: p0844 "No coast-down / coast-down (OFF2) signal source 1"
- BI: p0845 "No coast-down / coast-down (OFF2) signal source 2"
For the PROFIdrive profile, the result of the AND logic operation corresponds to control word 1 bit 1 (STW1.1).
BI: p0844 = 0 signal or BI: p0845 = 0 signal
- OFF2 (immediate pulse suppression and switch on inhibit)
BI: p0844 = 1 signal and BI: p0845 = 1 signal
- No OFF2 (enable is possible)

Caution: When "master control from PC" is activated, this binector input is ineffective.



Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: For Active Line Modules, Smart Line Modules and binector input p0844 = 0 signal or p0845 = 0 signal, the following applies:
- pre-charging contactor/line contactor is additionally opened.

p0844[0...n]	BI: No coast-down / coast-down (OFF2) signal source 1 / OFF2 S_src 1		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2501, 8720, 8820, 8920

Min	Max	Factory setting
-	-	1

Description: Sets the first signal source for the command "No coast down/coast down (OFF2)".
The following signals are AND'ed:
- BI: p0844 "No coast-down / coast-down (OFF2) signal source 1"
- BI: p0845 "No coast-down / coast-down (OFF2) signal source 2"
For the PROFIdrive profile, the result of the AND logic operation corresponds to control word 1 bit 1 (STW1.1).
BI: p0844 = 0 signal or BI: p0845 = 0 signal
- OFF2 (immediate pulse suppression and switch on inhibit)
BI: p0844 = 1 signal and BI: p0845 = 1 signal
- No OFF2 (enable is possible)

Caution: When "master control from PC" is activated, this binector input is ineffective.



Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: For Active Line Modules, Smart Line Modules and binector input p0844 = 0 signal or p0845 = 0 signal, the following applies:
- pre-charging contactor/line contactor is additionally opened.

p0845[0...n]	BI: No coast-down / coast-down (OFF2) signal source 2 / OFF2 S_src 2		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2501, 8720, 8820, 8920

Min	Max	Factory setting
-	-	1

Description: Sets the second signal source for the command "No coast down/coast down (OFF2)".
The following signals are AND'ed:

- BI: p0844 "No coast-down / coast-down (OFF2) signal source 1"
- BI: p0845 "No coast-down / coast-down (OFF2) signal source 2"

For the PROFIdrive profile, the result of the AND logic operation corresponds to control word 1 bit 1 (STW1.1).
BI: p0844 = 0 signal or BI: p0845 = 0 signal

- OFF2 (immediate pulse suppression and switch on inhibit)

BI: p0844 = 1 signal and BI: p0845 = 1 signal

- No OFF2 (enable is possible)

Caution: When "master control from PC" is activated, this binector input is effective.



p0848[0...n]	BI: No Quick Stop / Quick Stop (OFF3) signal source 1 / OFF3 S_src 1		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2501
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	[0] 2090.2
		[1] 1
		[2] 2090.2
		[3] 2090.2

Description: Sets the first signal source for the command "No quick stop/quick stop (OFF3)".
The following signals are AND'ed:

- BI: p0848 "No quick stop / quick stop (OFF3) signal source 1"
- BI: p0849 "No quick stop / quick stop (OFF3) signal source 2"

For the PROFIdrive profile, the result of the AND logic operation corresponds to control word 1 bit 2 (STW1.2).
BI: p0848 = 0 signal or BI: p0849 = 0 signal

- OFF3 (braking along the OFF3 ramp (p1135), then pulse suppression and switch on inhibit)

BI: p0848 = 1 signal and BI: p0849 = 1 signal

- No OFF3 (enable is possible)

Caution: When "master control from PC" is activated, this binector input is ineffective.



Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: For drives with closed-loop torque control (activated using p1501), the following applies:

BI: p0848 = 0 signal:

- No dedicated braking response, but pulse suppression when standstill is detected (p1226, p1227).

p0848[0...n]	BI: No Quick Stop / Quick Stop (OFF3) signal source 1 / OFF3 S_src 1		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2501
	Min	Max	Factory setting
	-	-	1

Description: Sets the first signal source for the command "No quick stop/quick stop (OFF3)".
The following signals are AND'ed:
- BI: p0848 "No quick stop / quick stop (OFF3) signal source 1"
- BI: p0849 "No quick stop / quick stop (OFF3) signal source 2"
For the PROFIdrive profile, the result of the AND logic operation corresponds to control word 1 bit 2 (STW1.2).
BI: p0848 = 0 signal or BI: p0849 = 0 signal
- OFF3 (braking along the OFF3 ramp (p1135), then pulse suppression and switch on inhibit)
BI: p0848 = 1 signal and BI: p0849 = 1 signal
- No OFF3 (enable is possible)
Caution: When "master control from PC" is activated, this binector input is ineffective.



Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.
Note: For drives with closed-loop torque control (activated using p1501), the following applies:
BI: p0848 = 0 signal:
- No dedicated braking response, but pulse suppression when standstill is detected (p1226, p1227).

p0849[0...n]	BI: No Quick Stop / Quick Stop (OFF3) signal source 2 / OFF3 S_src 2		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2501
	Min	Max	Factory setting
	-	-	1

Description: Sets the second signal source for the command "No quick stop/quick stop (OFF3)".
The following signals are AND'ed:
- BI: p0848 "No quick stop / quick stop (OFF3) signal source 1"
- BI: p0849 "No quick stop / quick stop (OFF3) signal source 2"
For the PROFIdrive profile, the result of the AND logic operation corresponds to control word 1 bit 2 (STW1.2).
BI: p0848 = 0 signal or BI: p0849 = 0 signal
- OFF3 (braking along the OFF3 ramp (p1135), then pulse suppression and switch on inhibit)
BI: p0848 = 1 signal and BI: p0849 = 1 signal
- No OFF3 (enable is possible)
Caution: When "master control from PC" is activated, this binector input is effective.



Note: For drives with closed-loop torque control (activated using p1501), the following applies:
BI: p0849 = 0 signal:
- No dedicated braking response, but pulse suppression when standstill is detected (p1226, p1227).

p0852[0...n]	BI: Enable operation/inhibit operation / Operation enable		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2501, 8820, 8920
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	[0] 2090.3
		[1] 1
		[2] 2090.3
		[3] 2090.3

Description: Sets the signal source for the command "enable operation/inhibit operation".
For the PROFIdrive profile, this command corresponds to control word 1 bit 3 (STW1.3).
BI: p0852 = 0 signal
Inhibit operation (suppress pulses).
BI: p0852 = 1 signal
Enable operation (pulses can be enabled).

Caution: When "master control from PC" is activated, this binector input is ineffective.



Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

p0852[0...n]	BI: Enable operation/inhibit operation / Operation enable		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2501, 8820, 8920

Min	Max	Factory setting
-	-	1

Description: Sets the signal source for the command "enable operation/inhibit operation".
For the PROFIdrive profile, this command corresponds to control word 1 bit 3 (STW1.3).
BI: p0852 = 0 signal
Inhibit operation (suppress pulses).
BI: p0852 = 1 signal
Enable operation (pulses can be enabled).

Caution: When "master control from PC" is activated, this binector input is ineffective.



Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

p0854[0...n]	BI: Control by PLC/no control by PLC / Master ctrl by PLC		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2501, 8720, 8820, 8920
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	[0] 2090.10
		[1] 1
		[2] 2090.10
		[3] 2090.10

Description: Sets the signal source for the command "control by PLC/no control by PLC".
For the PROFIdrive profile, this command corresponds to control word 1 bit 10 (STW1.10).

BI: p0854 = 0 signal

No control by PLC

BI: p0854 = 1 signal

Master ctrl by PLC.

Caution:

When "master control from PC" is activated, this binector input is ineffective.

Notice:

The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note:

This bit is used to initiate a response for the drives when the control fails (F07220). If there is no control available, then binector input p0854 should be set to 1.

If a control is available, then STW1.10 must be set to 1 (PZD1) so that the received data is updated. This applies regardless of the setting in p0854 and even in the case of free telegram configuration (p0922 = 999).

p0854[0...n]**BI: Control by PLC/no control by PLC / Master ctrl by PLC**

CU250D-2_DP_F

Access level: 3

Calculated: -

Data type: U32 / Binary

CU250D-2_PN_F

Can be changed: T

Scaling: -

Dyn. index: CDS, p0170

Units group: -

Unit selection: -

Func. diagram: 2501, 8720, 8820, 8920

Min

Max

Factory setting

-

-

1

Description:

Sets the signal source for the command "control by PLC/no control by PLC".

For the PROFIdrive profile, this command corresponds to control word 1 bit 10 (STW1.10).

BI: p0854 = 0 signal

No control by PLC

BI: p0854 = 1 signal

Master ctrl by PLC.

Caution:

When "master control from PC" is activated, this binector input is ineffective.

Notice:

The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note:

This bit is used to initiate a response for the drives when the control fails (F07220). If there is no control available, then binector input p0854 should be set to 1.

If a control is available, then STW1.10 must be set to 1 (PZD1) so that the received data is updated. This applies regardless of the setting in p0854 and even in the case of free telegram configuration (p0922 = 999).

p0855[0...n]**BI: Unconditionally open holding brake / Uncond open brake**

Access level: 3

Calculated: -

Data type: U32 / Binary

Can be changed: T

Scaling: -

Dyn. index: CDS, p0170

Units group: -

Unit selection: -

Func. diagram: 2501, 2701

Min

Max

Factory setting

-

-

0

Description:

Sets the signal source for the command "unconditionally open holding brake".

Dependency:

Refer to: p0858

Notice:

The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note:

The signal via BI: p0858 (unconditionally close holding brake) has a higher priority than via BI: p0855 (unconditionally open holding brake).

p0856[0...n]	BI: Speed controller enable / n_ctrl enable		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2501, 2701
	Min	Max	Factory setting
	-	-	1
Description:	Sets the signal source for the command "enable speed controller" (r0898.12). 0 signal: Set the I component and speed controller output to zero. 1 signal: Enable speed controller.		
Dependency:	Refer to: r0898		
Note:	If "enable speed controller" is withdrawn, then an existing brake will be closed. If "speed controller enable" is withdrawn, the pulses are not suppressed.		
p0857	Power unit monitoring time / PU t_monit		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8760, 8864, 8964
	Min	Max	Factory setting
	100.0 [ms]	60000.0 [ms]	10000.0 [ms]
Description:	Sets the monitoring time for the power unit. The monitoring time is started after an 0/1 edge of the ON/OFF1 command. If the power unit does not return a READY signal within the monitoring time, fault F07802 is output.		
Dependency:	Refer to: F07802, F30027		
Notice:	The maximum time to pre-charge the DC link is monitored in the power unit and cannot be changed. The maximum pre-charging duration depends on the power unit. The monitoring time for the pre-charging is started after the ON command (BI: p0840 = 0/1 signal). Fault F30027 is output when the maximum pre-charging duration is exceeded.		
Note:	The factory setting for p0857 depends on the power unit. The monitoring time for the ready signal of the power unit includes the time to pre-charge the DC link and, if relevant, the de-bounce time of the contactors. If an excessively low value is entered into p0857, then after enable, this results in the corresponding fault.		
p0858[0...n]	BI: Unconditionally close holding brake / Uncond close brake		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2501, 2701
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for the command "unconditionally close holding brake".		
Dependency:	Refer to: p0855		
Note:	The signal via BI: p0858 (unconditionally close holding brake) has a higher priority than via BI: p0855 (unconditionally open holding brake). For a 1 signal via BI: p0858, the command "unconditionally close the holding brake" is executed and internally a zero setpoint is entered.		

p0860	BI: Line contactor feedback signal / Line contact feedb			
	Access level: 3	Calculated: -	Data type: U32 / Binary	
	Can be changed: T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min	Max	Factory setting	
	-	-	863.1	
Description:	Sets the signal source for the feedback signal from the line contactor.			
Dependency:	Refer to: p0861, r0863 Refer to: F07300			
Notice:	The line contactor monitoring is de-activated if the control signal of the particular drive object is set as the signal source for the feedback signal of the line contactor (BI: p0860 = r0863.1).			
Note:	The state of the line contactor is monitored depending on signal BO: r0863.1. When the monitoring is activated (BI: p0860 not equal to r0863.1), fault F07300 is then also output if the contactor is closed before it is controlled using r0863.1.			
p0861	Line contactor monitoring time / LineContact t_mon			
	Access level: 3	Calculated: -	Data type: FloatingPoint32	
	Can be changed: T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min	Max	Factory setting	
	0 [ms]	5000 [ms]	100 [ms]	
Description:	Sets the monitoring time of the line contactor. This time starts each time that the line contactor switches (r0863.1). If a feedback signal is not received from the line contactor within the time, a message is output.			
Dependency:	Refer to: p0860, r0863 Refer to: F07300			
Note:	The monitoring function is disabled for the factory setting of p0860.			
r0863.1	CO/BO: Drive coupling status word/control word / CoupleZSW/STW			
	Access level: 3	Calculated: -	Data type: Unsigned16	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min	Max	Factory setting	
	-	-	-	
Description:	Displays the status and control words of the drive coupling.			
Bit field:	Bit	Signal name	1 signal	0 signal
	01	Energize contactor	Yes	No
Note:	Re bit 01: Bit 1 is used to control an external line contactor.			
p0897	BI: Parking axis selection / Parking axis sel			
	Access level: 2	Calculated: -	Data type: U32 / Binary	
	Can be changed: T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min	Max	Factory setting	
	-	-	0	
Description:	Sets the signal source to select the "parking axis" function.			
Dependency:	BI: p0897 = 0 signal The function "parking axis" is not selected. BI: p0897 = 1 signal The function "parking axis" is selected.			

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: After it has been selected the "parking axis" function only becomes active when the pulses are suppressed.

r0898.0...14 CO/BO: Control word sequence control / STW seq_ctrl

Access level: 2	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 1530, 2501
Min	Max	Factory setting
-	-	-

Description: Displays the control word of the sequence control.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	ON/OFF1	Yes	No	-
	01	OC / OFF2	Yes	No	-
	02	OC / OFF3	Yes	No	-
	03	Operation enable	Yes	No	-
	04	Ramp-function generator enable	Yes	No	-
	05	Continue ramp-function generator	Yes	No	-
	06	Speed setpoint enable	Yes	No	-
	07	Command open brake	Yes	No	-
	08	Jog 1	Yes	No	-
	09	Jog 2	Yes	No	-
	10	Master ctrl by PLC	Yes	No	-
	12	Speed controller enable	Yes	No	-
	14	Command close brake	Yes	No	-

Note: OC: Operating condition

Re bit 10:

If p0700 = 2 is set, bit 10 always shows "1".

r0899.0...13 CO/BO: Status word sequence control / ZSW seq_ctrl

Access level: 2	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 1530, 2503
Min	Max	Factory setting
-	-	-

Description: Displays the status word of the sequence control.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Rdy for switch on	Yes	No	-
	01	Ready	Yes	No	-
	02	Operation enabled	Yes	No	-
	03	Jog active	Yes	No	-
	04	No coasting active	OFF2 inactive	OFF2 active	-
	05	No Quick Stop active	OFF3 inactive	OFF3 active	-
	06	Switching on inhibited active	Yes	No	-
	07	Drive ready	Yes	No	-
	08	Controller enable	Yes	No	-
	09	Control request	Yes	No	-
	11	Pulses enabled	Yes	No	-
	12	Open holding brake	Yes	No	-
	13	Command close holding brake	Yes	No	-

Note: Re bits 00, 01, 02, 04, 05, 06, 09:

For PROFIdrive, these signals are used for status word 1.

p0918		PROFIBUS address / PB address	
CU240D-2_DP	Access level: 2	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 1520, 2410
	Min	Max	Factory setting
	1	126	126
Description:	Displays or sets the PROFIBUS address for PROFIBUS interface on the Control Unit. The address can be set as follows: 1) Using the DIP switch on the Control Unit. --> p0918 can then only be read and displays the selected address. --> A change only becomes effective after a POWER ON. 2) Using p0918 --> Only if all of the DIP switches are set to ON or OFF. --> The address is saved in a non-volatile fashion using the function "copy from RAM to ROM". --> A change only becomes effective after a POWER ON.		
Notice:	For p0014 = 1, the following applies: After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0. For p0014 = 0, the following applies: Before a changed setting becomes permanently effective, a non-volatile RAM to ROM data save is required. To do this, set p0971 = 1 or p0014 = 1.		
Note:	Permissible PROFIBUS addresses: 1 ... 126 Address 126 is used for commissioning. Every PROFIBUS address change only becomes effective after a POWER ON.		

p0922		PROFIdrive PZD telegram selection / PZD telegr_sel	
CU240D-2_DP	Access level: 1	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: C(1), T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 1520, 2415, 2416, 2419, 2420, 2421, 2422, 2423
CU240D-2_PN_F	Min	Max	Factory setting
	1	999	1
Description:	Sets the send and receive telegram.		
Value:	1: Standard telegram 1, PZD-2/2 20: Standard telegram 20, PZD-2/6 350: SIEMENS telegram 350, PZD-4/4 352: SIEMENS telegram 352, PZD-6/6 353: SIEMENS telegram 353, PZD-2/2, PKW-4/4 354: SIEMENS telegram 354, PZD-6/6, PKW-4/4 999: Free telegram configuration with BICO		
Dependency:	Refer to: F01505		
Note:	If a value is not equal to 999, a telegram is set and the automatically set interconnections in the telegram are inhibited. The inhibited interconnections can only be changed again after setting value 999.		

p0922		PROFIdrive PZD telegram selection / PZD telegr_sel	
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: C(1), T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1520, 2415, 2416, 2419, 2420, 2421, 2422, 2423
	Min	Max	Factory setting
	7	999	999
Description:	Sets the send and receive telegram.		

Value:	7: Standard telegram 7, PZD-2/2 9: Standard telegram 9, PZD-10/5 110: SIEMENS telegram 110, PZD-12/7 111: SIEMENS telegram 111, PZD-12/12 999: Free telegram configuration with BICO
Dependency:	Refer to: F01505
Note:	If a value is not equal to 999, a telegram is set and the automatically set interconnections in the telegram are inhibited. The inhibited interconnections can only be changed again after setting value 999.

r0930	PROFIdrive operating mode / PD operating mode		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-

Description: Displays the operating mode.
1: Closed-loop speed controlled operation with ramp-function generator
2: Closed-loop position controlled operation
3: Closed-loop speed controlled operation without ramp-function generator

r0944	CO: Counter for fault buffer changes / Fault buff change		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8060
	Min	Max	Factory setting
	-	-	-

Description: Displays fault buffer changes. This counter is incremented every time the fault buffer changes.

Dependency: Refer to: r0945, r0947, r0948, r0949, r2109

r0945[0...63]	Fault code / Fault code		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1750, 8060
	Min	Max	Factory setting
	-	-	-

Description: Displays the numbers of faults that have occurred.

Dependency: Refer to: r0947, r0948, r0949, r2109, r2130, r2133, r2136

Notice: The properties of the fault buffer should be taken from the corresponding product documentation.

Note: The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

Fault buffer structure (general principle):

r0945[0], r0949[0], r0948[0], r2109[0] --> actual fault case, fault 1

...

r0945[7], r0949[7], r0948[7], r2109[7] --> actual fault case, fault 8

r0945[8], r0949[8], r0948[8], r2109[8] --> 1st acknowledged fault case, fault 1

...

r0945[15], r0949[15], r0948[15], r2109[15] --> 1st acknowledged fault case, fault 8

...

r0945[56], r0949[56], r0948[56], r2109[56] --> 7th acknowledged fault case, fault 1

...

r0945[63], r0949[63], r0948[63], r2109[63] --> 7th acknowledged fault case, fault 8

r0946[0...65534] Fault code list / Fault code list

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 8060
Min	Max	Factory setting
-	-	-

Description: Lists the fault codes stored in the drive unit.
The indices can only be accessed with a valid fault code.

Dependency: The parameter assigned to the fault code is entered in r0951 under the same index.

r0947[0...63] Fault number / Fault number

Access level: 2	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 1750, 8060
Min	Max	Factory setting
-	-	-

Description: This parameter is identical to r0945.

r0948[0...63] Fault time received in milliseconds / t_fault rcv ms

Access level: 3	Calculated: -	Data type: Unsigned32
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 1750, 8060
Min	Max	Factory setting
- [ms]	- [ms]	- [ms]

Description: Displays the system runtime in milliseconds when the fault occurred.

Dependency: Refer to: r0945, r0947, r0949, r2109, r2130, r2133, r2136

Notice: The time comprises r2130 (days) and r0948 (milliseconds).

Note: The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

The structure of the fault buffer and the assignment of the indices is shown in r0945.

When the parameter is read via PROFIdrive, the TimeDifference data type applies.

r0949[0...63] Fault value / Fault value

Access level: 3	Calculated: -	Data type: Integer32
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 1750, 8060
Min	Max	Factory setting
-	-	-

Description: Displays additional information about the fault that occurred (as integer number).

Dependency: Refer to: r0945, r0947, r0948, r2109, r2130, r2133, r2136

Note: The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

The structure of the fault buffer and the assignment of the indices is shown in r0945.

p0952 Fault cases counter / Fault cases qty

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 1710, 8060
Min	Max	Factory setting
0	65535	0

Description: Number of fault situations that have occurred since the last reset.

Dependency: The fault buffer is deleted (cleared) by setting p0952 to 0.
Refer to: r0945, r0947, r0948, r0949, r2109, r2130, r2133, r2136

r0963	PROFIBUS baud rate / PB baud rate		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	255	-
Description:	Displays the corresponding value for the PROFIBUS baud rate.		
Value:	0: 9.6 kbit/s 1: 19.2 kbit/s 2: 93.75 kbit/s 3: 187.5 kbit/s 4: 500 kbit/s 6: 1.5 Mbit/s 7: 3 Mbit/s 8: 6 Mbit/s 9: 12 Mbit/s 10: 31.25 kbit/s 11: 45.45 kbit/s 255: Unknown		

r0964[0...6]	Device identification / Device ident.		
	Access level: 2	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the device identification.		
Index:	[0] = Company (Siemens = 42) [1] = Device type [2] = Firmware version [3] = Firmware date (year) [4] = Firmware date (day/month) [5] = Number of drive objects [6] = Firmware patch/hot fix		
Note:	Example: r0964[0] = 42 --> SIEMENS r0964[1] = device type, see below r0964[2] = 403 --> first part of the firmware version V04.03 (for second part, refer to index 6) r0964[3] = 2010 --> year 2010 r0964[4] = 1705 --> 17th of May r0964[5] = 2 --> 2 drive objects r0964[6] = 200 --> second part, firmware version (complete version: V04.03.02.00) Device type: r0964[1] = 6410 --> SINAMICS G120 CU240D-2_DP r0964[1] = 6420 --> SINAMICS G120 CU240D-2_DP_F r0964[1] = 6411 --> SINAMICS G120 CU240D-2_PN r0964[1] = 6421 --> SINAMICS G120 CU240D-2_PN_F r0964[1] = 6460 --> SINAMICS G120 CU250D-2_DP_F r0964[1] = 6461 --> SINAMICS G120 CU250D-2_PN_F		

r0965	PROFdrive profile number / PD profile number		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the PROFdrive profile number and profile version. Constant value = 0329 hex. Byte 1: Profile number = 03 hex = PROFdrive profile Byte 2: Profile version = 29 hex = Version 4.1		
Note:	When the parameter is read via PROFdrive, the Octet String 2 data type applies.		
p0969	System runtime relative / t_System relative		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1750, 8060
	Min	Max	Factory setting
	0 [ms]	4294967295 [ms]	0 [ms]
Description:	Displays the system runtime in ms since the last POWER ON.		
Note:	The value in p0969 can only be reset to 0. The value overflows after approx. 49 days. When the parameter is read via PROFdrive, the TimeDifference data type applies.		
p0970	Reset drive parameters / Drive par reset		
	Access level: 1	Calculated: -	Data type: Unsigned16
	Can be changed: C(1, 30)	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	300	0
Description:	The parameter is used to initiate the reset of the drive parameters. Parameters p0100, p0205 are not reset. The following motor parameters are defined in accordance with the power unit: p0300 ... p0311. When downloading settings 10, 11, 12, the buffer memory mode is automatically deactivated (p0014 = 0).		
Value:	0: Inactive 1: Start a parameter reset 3: Start download of volatile parameters from RAM 5: Starts a safety parameter reset 10: Starts to download setting 10 11: Starts to download setting 11 12: Starts to download setting 12 100: Start a BICO interconnection reset 300: Only Siemens int		
Dependency:	Refer to: F01659		
Caution:	When the buffer memory is active (see p0014), the actual parameters are backed up from RAM to ROM when a parameter set is loaded (p0970 = 10, 11, 12).		
Notice:	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0. Peculiarities of communication via PROFIBUS DP: - Communication with Class 1 masters (e.g. S7 controllers) is interrupted. - Communication with Class 2 masters (e.g. STARTER) is retained.		
Note:	A factory setting run can only be started if p0010 was first set to 30 (parameter reset). At the end of the calculations, p0970 is automatically set to 0.		

Parameter reset is completed with p0970 = 0 and r3996[0] = 0.

For p0970 = 5 the following applies:

The password for Safety Integrated must be set.

When Safety Integrated is enabled, this can result in messages, which then require an acceptance test to be performed.

Then save the parameters and carry out a POWER ON.

For p0970 = 1 the following applies:

If a Safety Integrated function is parameterized (p9601), then the safety parameters are not reset. In this case, an fault (F01659) is output with fault value 2.

The following generally applies:

One index of parameters p2100, p2101, p2118, p2119, p2126, p2127 is not reset, if a parameterized message is precisely active in this index.

p0971**Save parameters / Save par**

Access level: 1	Calculated: -	Data type: Unsigned16
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
0	12	0

Description:

Setting to save parameters in the non-volatile memory.

When saving, only the adjustable parameters intended to be saved are taken into account.

Value:

- 0: Inactive
- 1: Save drive object
- 10: Save in non-volatile memory as setting 10
- 11: Save in non-volatile memory as setting 11
- 12: Save in non-volatile memory as setting 12

Dependency:

Refer to: p1960, r3996

Caution:

If a memory card (optional) is inserted, the following applies:

The parameters are also saved on the card and therefore overwrite any existing data!

**Notice:**

The Control Unit power supply may only be powered down after data has been saved (i.e. after data save has been started, wait until the parameter again has the value 0).

Writing to parameters is inhibited while saving.

The progress while saving is displayed in r3996.

p0972**Drive unit reset / Drv_unit reset**

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
0	3	0

Description:

Sets the required procedure to execute a hardware reset for the drive unit.

Value:

- 0: Inactive
- 1: Hardware-Reset immediate
- 2: Hardware reset preparation
- 3: Hardware reset after cyclic communication has failed

Danger:

It must be absolutely ensured that the system is in a safe condition.

The memory card/device memory of the Control Unit must not be accessed.

**Note:**

If value = 1:

Reset is immediately executed and communications interrupted.

After communications have been established, check the reset operation (refer below).

If value = 2:

Help to check the reset operation.

Firstly, set p0972 = 2 and then read back. Secondly, set p0972 = 1 (it is possible that this request is possibly no longer acknowledged). The communication is then interrupted.

After communications have been established, check the reset operation (refer below).

If value = 3:

The reset is executed after interrupting cyclic communication. This setting is used to implement a synchronized reset by a control for several drive units.

If cyclic communication is not active, then the reset is immediately executed.

After communications have been established, check the reset operation (refer below).

To check the reset operation:

After the drive unit has been restarted and communications have been established, read p0972 and check the following:

p0972 = 0? --> The reset was successfully executed.

p0972 > 0? --> The reset was not executed.

r0979[0...30]	PROFIdrive encoder format / PD encoder format		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4704
	Min	Max	Factory setting
	-	-	-
Description:	Displays the actual position encoder used according to PROFIdrive.		
Index:	[0] = Header [1] = Type encoder 1 [2] = Resolution enc 1 [3] = Shift factor G1_XIST1 [4] = Shift factor G1_XIST2 [5] = Distinguishable revolutions encoder 1 [6...10] = Reserved [11] = Type encoder 2 [12] = Resolution enc 2 [13] = Shift factor G2_XIST1 [14] = Shift factor G2_XIST2 [15] = Distinguishable revolutions encoder 2 [16...20] = Reserved [21] = Type encoder 3 [22] = Resolution enc 3 [23] = Shift factor G3_XIST1 [24] = Shift factor G3_XIST2 [25] = Distinguishable revolutions encoder 3 [26...30] = Reserved		
Note:	Information about the individual indices can be taken from the following literature: PROFIdrive Profile Drive Technology		

r0980[0...299]	List of existing parameters 1 / List avail par 1		
	Access level: 4	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the parameters that exist for this drive.		
Dependency:	Refer to: r0981, r0989		
Note:	The existing parameters are displayed in indices 0 to 298. If an index contains the value 0, then the list ends here. In a long list, index 299 contains the parameter number at which position the list continues.		

This list consists solely of the following parameters:

r0980[0...299], r0981[0...299] ... r0989[0...299]

The parameters in this list are not displayed in the expert list of the commissioning software. However, they can be read from a higher-level control system (e.g. PROFIBUS master).

r0981[0...299]	List of existing parameters 2 / List avail par 2		
	Access level: 4	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the parameters that exist for this drive.		
Dependency:	Refer to: r0980, r0989		
Note:	The existing parameters are displayed in indices 0 to 298. If an index contains the value 0, then the list ends here. In a long list, index 299 contains the parameter number at which position the list continues. This list consists solely of the following parameters: r0980[0...299], r0981[0...299] ... r0989[0...299] The parameters in this list are not displayed in the expert list of the commissioning software. However, they can be read from a higher-level control system (e.g. PROFIBUS master).		

r0989[0...299]	List of existing parameters 10 / List avail par 10		
	Access level: 4	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the parameters that exist for this drive.		
Dependency:	Refer to: r0980, r0981		
Note:	The existing parameters are displayed in indices 0 to 298. If an index contains the value 0, then the list ends here. This list consists solely of the following parameters: r0980[0...299], r0981[0...299] ... r0989[0...299] The parameters in this list are not displayed in the expert list of the commissioning software. However, they can be read from a higher-level control system (e.g. PROFIBUS master).		

r0990[0...99]	List of modified parameters 1 / List chang. par 1		
	Access level: 4	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays those parameters with a value other than the factory setting for this drive.		
Dependency:	Refer to: r0991, r0999		
Note:	Modified parameters are displayed in indices 0 to 98. If an index contains the value 0, then the list ends here. In a long list, index 99 contains the parameter number at which position the list continues. This list consists solely of the following parameters: r0990[0...99], r0991[0...99] ... r0999[0...99] The parameters in this list are not displayed in the expert list of the commissioning software. However, they can be read from a higher-level control system (e.g. PROFIBUS master).		

r0991[0...99] List of modified parameters 2 / List chang. par 2			
	Access level: 4	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays those parameters with a value other than the factory setting for this drive.		
Dependency:	Refer to: r0990, r0999		
Note:	Modified parameters are displayed in indices 0 to 98. If an index contains the value 0, then the list ends here. In a long list, index 99 contains the parameter number at which position the list continues. This list consists solely of the following parameters: r0990[0...99], r0991[0...99] ... r0999[0...99] The parameters in this list are not displayed in the expert list of the commissioning software. However, they can be read from a higher-level control system (e.g. PROFIBUS master).		
r0999[0...99] List of modified parameters 10 / List chang. par 10			
	Access level: 4	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays those parameters with a value other than the factory setting for this drive.		
Dependency:	Refer to: r0990, r0991		
Note:	Modified parameters are displayed in indices 0 to 98. If an index contains the value 0, then the list ends here. This list consists solely of the following parameters: r0990[0...99], r0991[0...99] ... r0999[0...99] The parameters in this list are not displayed in the expert list of the commissioning software. However, they can be read from a higher-level control system (e.g. PROFIBUS master).		
p1000[0...n] Speed setpoint selection / n_set sel			
CU240D-2_DP	Access level: 1	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	77	6
Description:	Sets the source for the speed setpoint. For single-digit values, the following applies: The value specifies the main setpoint. For double-digit values, the following applies: The left-hand digit specifies the supplementary setpoint, the right-hand digit the main setpoint. Example: Value = 26 --> The analog setpoint (2) supplies the supplementary setpoint. --> The fieldbus (6) supplies the main setpoint.		
Value:	0: No main setpoint 1: Motorized potentiometer 2: Analog setpoint 3: Fixed speed setpoint 6: Fieldbus 7: Analog setpoint 2 10: Motor potentiometer + no main setpoint 11: Motor potentiometer + motor potentiometer		

- 12: Motor potentiometer + analog setpoint
- 13: Motor potentiometer + fixed speed setpoint
- 16: Motor potentiometer + fieldbus
- 17: Motor potentiometer + analog setpoint 2
- 20: Analog setpoint + no main setpoint
- 21: Analog setpoint + motor potentiometer
- 22: Analog setpoint + analog setpoint
- 23: Analog setpoint + fixed speed setpoint
- 26: Analog setpoint + fieldbus
- 27: Analog setpoint + analog setpoint 2
- 30: Fixed speed setpoint + no main setpoint
- 31: Fixed speed setpoint + motor potentiometer
- 32: Fixed speed setpoint + analog setpoint
- 33: Fixed speed setpoint + fixed speed setpoint
- 36: Fixed speed setpoint + fieldbus
- 37: Fixed speed setpoint + analog setpoint 2
- 60: Fieldbus + no main setpoint
- 61: Fieldbus + motor potentiometer
- 62: Fieldbus + analog setpoint
- 63: Fieldbus + fixed speed setpoint
- 66: Fieldbus+fieldbus
- 67: Fieldbus + analog setpoint 2
- 70: Analog setpoint 2 + no main setpoint
- 71: Analog setpoint 2 + motor potentiometer
- 72: Analog setpoint 2 + analog setpoint
- 73: Analog setpoint 2 + fixed speed setpoint
- 76: Analog setpoint 2 + fieldbus
- 77: Analog setpoint 2 + analog setpoint 2

Dependency:

When changing this parameter, the following settings are influenced:

Refer to: p1070, p1071, p1075, p1076

Caution:

If p1000 is selected as the main setpoint of the fieldbus, the following BICO interconnection is set automatically:
p2051[1] = r0063

Caution:

When executing a specific macro, the corresponding programmed settings are made and become active.

Notice:

The parameter is possibly protected as a result of p0922.

For PROFIBUS/PROFINET Control Units, the following applies: The parameter can be freely set by setting p0922 = 999.

p1000[0...n]**Speed setpoint selection / n_set sel**

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer16
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	66	0

Description:

Sets the source for the speed setpoint.

For single-digit values, the following applies:

The value specifies the main setpoint.

For double-digit values, the following applies:

The left-hand digit specifies the supplementary setpoint, the right-hand digit the main setpoint.

Example:

Value = 26

--> The analog setpoint (2) supplies the supplementary setpoint.

--> The fieldbus (6) supplies the main setpoint.

Value:

- 0: No main setpoint
- 1: Motorized potentiometer
- 3: Fixed speed setpoint
- 6: Fieldbus
- 10: Motor potentiometer + no main setpoint

- 11: Motor potentiometer + motor potentiometer
- 13: Motor potentiometer + fixed speed setpoint
- 16: Motor potentiometer + fieldbus
- 30: Fixed speed setpoint + no main setpoint
- 31: Fixed speed setpoint + motor potentiometer
- 33: Fixed speed setpoint + fixed speed setpoint
- 36: Fixed speed setpoint + fieldbus
- 60: Fieldbus + no main setpoint
- 61: Fieldbus + motor potentiometer
- 63: Fieldbus + fixed speed setpoint
- 66: Fieldbus+fieldbus

Dependency: When changing this parameter, the following settings are influenced:
Refer to: p1070, p1071, p1075, p1076

Caution: If p1000 is selected as the main setpoint of the fieldbus, the following BICO interconnection is set automatically:
p2051[1] = r0063



Caution: When executing a specific macro, the corresponding programmed settings are made and become active.

Notice: The parameter is possibly protected as a result of p0922.

For PROFIBUS/PROFINET Control Units, the following applies: The parameter can be freely set by setting p0922 = 999.

p1001[0...n] CO: Fixed speed setpoint 1 / n_set_fixed 1

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
Units group: 3_1	Unit selection: p0505	Func. diagram: 1021, 3010
Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]

Description: Sets a value for the fixed speed / velocity setpoint 1.

Dependency: Refer to: p1020, p1021, p1022, p1023, r1024, r1197

Notice: A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.

p1002[0...n] CO: Fixed speed setpoint 2 / n_set_fixed 2

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
Units group: 3_1	Unit selection: p0505	Func. diagram: 3010
Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]

Description: Sets a value for the fixed speed / velocity setpoint 2.

Dependency: Refer to: p1020, p1021, p1022, p1023, r1024, r1197

Notice: A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.

p1003[0...n] CO: Fixed speed setpoint 3 / n_set_fixed 3

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
Units group: 3_1	Unit selection: p0505	Func. diagram: 3010
Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]

Description: Sets a value for the fixed speed / velocity setpoint 3.

Dependency: Refer to: p1020, p1021, p1022, p1023, r1024, r1197

Notice: A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.

p1004[0...n]	CO: Fixed speed setpoint 4 / n_set_fixed 4		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3010
	Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets a value for the fixed speed / velocity setpoint 4.		
Dependency:	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p1005[0...n]	CO: Fixed speed setpoint 5 / n_set_fixed 5		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3010
	Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets a value for the fixed speed / velocity setpoint 5.		
Dependency:	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p1006[0...n]	CO: Fixed speed setpoint 6 / n_set_fixed 6		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3010
	Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets a value for the fixed speed / velocity setpoint 6.		
Dependency:	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p1007[0...n]	CO: Fixed speed setpoint 7 / n_set_fixed 7		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3010
	Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets a value for the fixed speed / velocity setpoint 7.		
Dependency:	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p1008[0...n]	CO: Fixed speed setpoint 8 / n_set_fixed 8		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3010
	Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets a value for the fixed speed / velocity setpoint 8.		
Dependency:	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

p1009[0...n]	CO: Fixed speed setpoint 9 / n_set_fixed 9		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3010
	Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets a value for the fixed speed / velocity setpoint 9.		
Dependency:	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p1010[0...n]	CO: Fixed speed setpoint 10 / n_set_fixed 10		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3010
	Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets a value for the fixed speed / velocity setpoint 10.		
Dependency:	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p1011[0...n]	CO: Fixed speed setpoint 11 / n_set_fixed 11		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3010
	Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets a value for the fixed speed / velocity setpoint 11.		
Dependency:	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p1012[0...n]	CO: Fixed speed setpoint 12 / n_set_fixed 12		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3010
	Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets a value for the fixed speed / velocity setpoint 12.		
Dependency:	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p1013[0...n]	CO: Fixed speed setpoint 13 / n_set_fixed 13		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3010
	Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets a value for the fixed speed / velocity setpoint 13.		
Dependency:	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

p1014[0...n]	CO: Fixed speed setpoint 14 / n_set_fixed 14		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3010
	Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets a value for the fixed speed / velocity setpoint 14.		
Dependency:	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p1015[0...n]	CO: Fixed speed setpoint 15 / n_set_fixed 15		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 1021, 3010
	Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets a value for the fixed speed / velocity setpoint 15.		
Dependency:	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p1016	Fixed speed setpoint mode / n_setp_fixed mode		
	Access level: 2	Calculated: -	Data type: Integer16
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 1	Max 2	Factory setting 1
Description:	Sets the mode to select the fixed speed setpoint.		
Value:	1: Direct selection 2: Selection binary coded		
Note:	Re p1016 = 1: In this mode, the fixed speed setpoint is entered using p1001 ... p1004. Re p1016 = 2: In this mode, the fixed speed setpoint is entered using p1001 ... p1015.		
p1020[0...n]	BI: Fixed speed setpoint selection Bit 0 / n_set_fixed Bit 0		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2505
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for selecting the fixed speed setpoint.		
Dependency:	Selects the required fixed speed setpoint using p1020 ... p1023. Displays the number of the actual fixed speed setpoint in r1197. Sets the values for the fixed speed setpoints 1 ... 15 using p1001 ... p1015. Refer to: p1021, p1022, p1023, r1197		
Note:	If a fixed speed setpoint has not been selected (p1020 ... p1023 = 0, r1197 = 0), then r1024 = 0 (setpoint = 0).		

p1021[0...n]	BI: Fixed speed setpoint selection Bit 1 / n_set_fixed Bit 1		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2505
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for selecting the fixed speed setpoint.		
Dependency:	Selects the required fixed speed setpoint using p1020 ... p1023. Displays the number of the actual fixed speed setpoint in r1197. Sets the values for the fixed speed setpoints 1 ... 15 using p1001 ... p1015. Refer to: p1020, p1022, p1023, r1197		
Note:	If a fixed speed setpoint has not been selected (p1020 ... p1023 = 0, r1197 = 0), then r1024 = 0 (setpoint = 0).		
p1022[0...n]	BI: Fixed speed setpoint selection Bit 2 / n_set_fixed Bit 2		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2505
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for selecting the fixed speed setpoint.		
Dependency:	Selects the required fixed speed setpoint using p1020 ... p1023. Displays the number of the actual fixed speed setpoint in r1197. Sets the values for the fixed speed setpoints 1 ... 15 using p1001 ... p1015. Refer to: p1020, p1021, p1023, r1197		
Note:	If a fixed speed setpoint has not been selected (p1020 ... p1023 = 0, r1197 = 0), then r1024 = 0 (setpoint = 0).		
p1023[0...n]	BI: Fixed speed setpoint selection Bit 3 / n_set_fixed Bit 3		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2505
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for selecting the fixed speed setpoint.		
Dependency:	Selects the required fixed speed setpoint using p1020 ... p1023. Displays the number of the actual fixed speed setpoint in r1197. Sets the values for the fixed speed setpoints 1 ... 15 using p1001 ... p1015. Refer to: p1020, p1021, p1022, r1197		
Note:	If a fixed speed setpoint has not been selected (p1020 ... p1023 = 0, r1197 = 0), then r1024 = 0 (setpoint = 0).		
r1024	CO: Fixed speed setpoint effective / n_set_fixed eff		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 1550, 3010
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the selected and effective fixed speed setpoint. This setpoint is the output value for the fixed speed setpoints and must be appropriately interconnected (e.g. with the main setpoint).		
Dependency:	Selects the required fixed speed setpoint using p1020 ... p1023. Displays the number of the actual fixed speed setpoint in r1197.		

Sets the values for the fixed speed setpoints 1 ... 15 using p1001 ... p1015.

Refer to: p1070, r1197

Note: If a fixed speed setpoint has not been selected (p1020 ... p1023 = 0, r1197 = 0), then r1024 = 0 (setpoint = 0).

r1025.0**BO: Fixed speed setpoint status / n_setp_fix status**

Access level: 3	Calculated: -	Data type: Unsigned8
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Displays the status when selecting the fixed speed setpoints.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Fixed speed setpoint selected	Yes	No	-

Dependency: Refer to: p1016

Note: Re bit 00:

When the fixed speed setpoints are directly selected (p1016 = 1), this bit is set if at least 1 fixed speed setpoint is selected.

p1030[0...n]**Motorized potentiometer configuration / Mop configuration**

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: 3020
Min	Max	Factory setting
-	-	0000 0110 bin

Description: Sets the configuration for the motorized potentiometer.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Data save active	Yes	No	-
	01	Automatic mode ramp-function generator active	Yes	No	-
	02	Initial rounding-off active	Yes	No	-
	03	Save in NVRAM active	Yes	No	-
	04	Ramp-function generator always active	Yes	No	-

Notice: For p0014 = 1, the following applies:

After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.

Note: Re bit 00:

0: The setpoint for the motorized potentiometer is not saved and after ON is entered using p1040.

1: The setpoint for the motorized potentiometer is saved after OFF and after ON set to the saved value. In order to save in a non-volatile fashion, bit 03 should be set to 1.

Re bit 01:

0: Without ramp-function generator in the automatic mode (ramp-up/ramp-down time = 0).

1: With ramp-function generator in the automatic mode.

For manual operation (0 signal via BI: p1041), the ramp-function generator is always active.

Re bit 02:

0: Without initial rounding-off

1: With initial rounding-off. The selected ramp-up/down time is correspondingly exceeded. The initial rounding-off is a sensitive way of specifying small changes (progressive reaction when keys are pressed).

The jerk for the initial rounding-off is independent of the ramp-up time and only depends on the selected maximum speed (p1082). It is calculated as follows:

$$r = 0.01 \% * p1082 [1/s] / 0.13^2 [s^2]$$

The jerk acts up until the maximum acceleration is reached ($a_{max} = p1082 [1/s] / p1047 [s]$), and then the drive continues to run linearly with a constant rate of acceleration. The higher the maximum acceleration (the lower that p1047 is), the longer the ramp-up time increases with respect to the set ramp-up time.

Re bit 03:

0: Non-volatile data save de-activated.

1: The setpoint for the motorized potentiometer is saved in a non-volatile fashion (for bit 00 = 1).

Re bit 04:

When the bit is set, the ramp-function generator is computed independent of the pulse enable. The actual output value of the motorized potentiometer is always in r1050.

p1035[0...n]			
BI: Motorized potentiometer setpoint raise / Mop raise			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2505, 3020
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	[0] 2090.13
			[1] 0
			[2] 0
			[3] 0
Description:	Sets the signal source to continually increase the setpoint for the motorized potentiometer. The setpoint change (CO: r1050) depends on the set ramp-up time (p1047) and the duration of the signal that is present (BI: p1035).		
Dependency:	Refer to: p1036		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
p1035[0...n]			
BI: Motorized potentiometer setpoint raise / Mop raise			
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2505, 3020
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to continually increase the setpoint for the motorized potentiometer. The setpoint change (CO: r1050) depends on the set ramp-up time (p1047) and the duration of the signal that is present (BI: p1035).		
Dependency:	Refer to: p1036		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
p1036[0...n]			
BI: Motorized potentiometer lower setpoint / Mop lower			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2505, 3020
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	[0] 2090.14
			[1] 0
			[2] 0
			[3] 0
Description:	Sets the signal source to continuously lower the setpoint for the motorized potentiometer. The setpoint change (CO: r1050) depends on the set ramp-down time (p1048) and the duration of the signal that is present (BI: p1036).		
Dependency:	Refer to: p1035		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		

p1036[0...n]	BI: Motorized potentiometer lower setpoint / Mop lower		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2505, 3020
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to continuously lower the setpoint for the motorized potentiometer. The setpoint change (CO: r1050) depends on the set ramp-down time (p1048) and the duration of the signal that is present (BI: p1036).		
Dependency:	Refer to: p1035		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
p1037[0...n]	Motorized potentiometer maximum speed / MotP n_max		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3020
	Min	Max	Factory setting
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
Description:	Sets the maximum speed/velocity for the motorized potentiometer.		
Note:	This parameter is automatically pre-assigned in the commissioning phase. The setpoint output from the motorized potentiometer is limited to this value (see function diagram 3020).		
p1038[0...n]	Motorized potentiometer minimum speed / MotP n_min		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3020
	Min	Max	Factory setting
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
Description:	Sets the minimum speed/velocity for the motorized potentiometer.		
Note:	This parameter is automatically pre-assigned in the commissioning phase. The setpoint output from the motorized potentiometer is limited to this value (see function diagram 3020).		
p1039[0...n]	BI: Motorized potentiometer inversion / MotP inv		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 3020
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to invert the minimum speed/velocity or the maximum speed/velocity for the motorized potentiometer.		
Dependency:	Refer to: p1037, p1038		
Note:	The inversion is only active during "motorized potentiometer raise" or "motorized potentiometer lower".		

p1040[0...n]	Motorized potentiometer starting value / Mop start value		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3020
	Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets the starting value for the motorized potentiometer. This starting value becomes effective after the drive has been powered up.		
Dependency:	Only effective if p1030.0 = 0. Refer to: p1030		
p1041[0...n]	BI: Motorized potentiometer manual/automatic / Mop manual/auto		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 3020
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to change over from manual to automatic when using a motorized potentiometer. In the manual mode, the setpoint is changed using two signals - raise and lower. In the automatic mode, the setpoint must be interconnected via a connector input.		
Dependency:	Refer to: p1030, p1035, p1036, p1042		
Note:	The effectiveness of the internal ramp-function generator can be set in automatic mode.		
p1042[0...n]	CI: Motorized potentiometer automatic setpoint / Mop auto setpoint		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 3020
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the setpoint of the motorized potentiometer in the automatic mode.		
Dependency:	Refer to: p1041		
p1043[0...n]	BI: Motorized potentiometer accept setting value / MotP acc set val		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 3020
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to accept the setting value for the motorized potentiometer.		
Dependency:	Refer to: p1044		
Note:	The setting value (CI: p1044) becomes effective for a 0/1 edge of the setting command (BI: p1043).		
p1044[0...n]	CI: Motorized potentiometer setting value / Mop set val		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 3020
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the setting value for the motorized potentiometer.		
Dependency:	Refer to: p1043		

Note: The setting value (CI: p1044) becomes effective for a 0/1 edge of the setting command (BI: p1043).

r1045 CO: Mot. potentiometer speed setp. in front of ramp-fct. gen. / Mop n_set bef RFG

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2000	Dyn. index: -
Units group: 3_1	Unit selection: p0505	Func. diagram: 3020
Min - [rpm]	Max - [rpm]	Factory setting - [rpm]

Description: Sets the effective setpoint in front of the internal motorized potentiometer ramp-function generator.

p1047[0...n] Motorized potentiometer ramp-up time / Mop ramp-up time

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: 3020
Min 0.000 [s]	Max 1000.000 [s]	Factory setting 10.000 [s]

Description: Sets the ramp-up time for the internal ramp-function generator for the motorized potentiometer. The setpoint is changed from zero up to the speed/velocity limit (p1082) within this time (if no initial rounding-off has been activated).

Dependency: Refer to: p1030, p1048, p1082

Note: When the initial rounding-off is activated (p1030.2) the ramp-up time is correspondingly extended.

p1048[0...n] Motorized potentiometer ramp-down time / Mop ramp-down time

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: 3020
Min 0.000 [s]	Max 1000.000 [s]	Factory setting 10.000 [s]

Description: Sets the ramp-down time for the internal ramp-function generator for the motorized potentiometer. The setpoint is changed from the speed/velocity limit (p1082) to zero within this time (if no initial rounding-off has been activated).

Dependency: Refer to: p1030, p1047, p1082

Note: The deceleration time is extended corresponding to the activated initial rounding-off (p1030.2).

r1050 CO: Motor. potentiometer setpoint after the ramp-function generator / Mop setp after RFG

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2000	Dyn. index: -
Units group: 3_1	Unit selection: p0505	Func. diagram: 1550, 3020
Min - [rpm]	Max - [rpm]	Factory setting - [rpm]

Description: Sets the effective setpoint after the internal motorized potentiometer ramp-function generator. This setpoint is the output value of the motorized potentiometer and must be appropriately interconnected onwards (e.g. with the main setpoint).

Dependency: Refer to: p1070

Note: For "With ramp-function generator", after an OFF1, OFF2, OFF3 or for a 0 signal via BI: p0852 (inhibit operation, suppress pulses) the ramp-function generator output (r1050) is set to the starting value (configuration via p1030.0).

p1051[0...n]			
CI: Speed limit RFG positive direction of rotation / n_limit RFG pos			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_PN_F	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 3050
CU250D-2_PN_F			
	Min	Max	Factory setting
	-	-	9733[0]
Description:	Sets the signal source for the speed limit of the positive direction on the ramp-function generator input.		
Note:	The OFF3 ramp-down time (p1135) is effective when the limit is reduced.		

p1051[0...n]			
CI: Speed limit RFG positive direction of rotation / n_limit RFG pos			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_PN	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 3050
	Min	Max	Factory setting
	-	-	1083[0]
Description:	Sets the signal source for the speed limit of the positive direction on the ramp-function generator input.		
Note:	The OFF3 ramp-down time (p1135) is effective when the limit is reduced.		

p1052[0...n]			
CI: Speed limit RFG negative direction of rotation / n_limit RFG neg			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_PN_F	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 3050
CU250D-2_PN_F			
	Min	Max	Factory setting
	-	-	9733[1]
Description:	Sets the signal source for the speed limit of the negative direction on the ramp-function generator input.		
Note:	The OFF3 ramp-down time (p1135) is effective when the limit is reduced.		

p1052[0...n]			
CI: Speed limit RFG negative direction of rotation / n_limit RFG neg			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_PN	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 3050
	Min	Max	Factory setting
	-	-	1086[0]
Description:	Sets the signal source for the speed limit of the negative direction on the ramp-function generator input.		
Note:	The OFF3 ramp-down time (p1135) is effective when the limit is reduced.		

p1055[0...n]			
BI: Jog bit 0 / Jog bit 0			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2501, 3030
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	[0] 0
			[1] 722.0
			[2] 0
			[3] 0
Description:	Sets the signal source for jog 1.		
Dependency:	Refer to: p0840, p1058		

Notice: The drive is enabled for jogging using BI: p1055 or BI: p1056.
The command "ON/OFF1" can be issued using BI: p0840 or using BI: p1055/p1056.
Only the signal source that was used to power up can also be used to power down again.

p1055[0...n]	BI: Jog bit 0 / Jog bit 0		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2501, 3030
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source for jog 1.

Dependency: Refer to: p0840, p1058

Notice: The drive is enabled for jogging using BI: p1055 or BI: p1056.
The command "ON/OFF1" can be issued using BI: p0840 or using BI: p1055/p1056.
Only the signal source that was used to power up can also be used to power down again.

p1056[0...n]	BI: Jog bit 1 / Jog bit 1		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2501, 3030
CU240D-2_PN_F	Min	Max	Factory setting
	-	-	[0] 0
			[1] 722.1
			[2] 0
			[3] 0

Description: Sets the signal source for jog 2.

Dependency: Refer to: p0840, p1059

Notice: The drive is enabled for jogging using BI: p1055 or BI: p1056.
The command "ON/OFF1" can be issued using BI: p0840 or using BI: p1055/p1056.
Only the signal source that was used to power up can also be used to power down again.

p1056[0...n]	BI: Jog bit 1 / Jog bit 1		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2501, 3030
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source for jog 2.

Dependency: Refer to: p0840, p1059

Notice: The drive is enabled for jogging using BI: p1055 or BI: p1056.
The command "ON/OFF1" can be issued using BI: p0840 or using BI: p1055/p1056.
Only the signal source that was used to power up can also be used to power down again.

p1058[0...n]	Jog 1 speed setpoint / Jog 1 n_set		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 1550, 3030
	Min	Max	Factory setting
	-210000.000 [rpm]	210000.000 [rpm]	150.000 [rpm]

Description: Sets the speed/velocity for jog 1. Jogging is level-triggered and allows the motor to be incrementally moved.

Dependency: Refer to: p1055, p1056

p1059[0...n]	Jog 2 speed setpoint / Jog 2 n_set		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 1550, 3030
	Min -210000.000 [rpm]	Max 210000.000 [rpm]	Factory setting -150.000 [rpm]
Description:	Sets the speed/velocity for jog 2. Jogging is level-triggered and allows the motor to be incrementally moved.		
Dependency:	Refer to: p1055, p1056		
p1063[0...n]	Speed limit setpoint channel / n_limit setp		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3040
	Min 0.000 [rpm]	Max 210000.000 [rpm]	Factory setting 210000.000 [rpm]
Description:	Sets the speed limit/velocity limit effective in the setpoint channel.		
Dependency:	Refer to: p1082, p1083, p1085, p1086, p1088		
p1070[0...n]	CI: Main setpoint / Main setpoint		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 1550, 3030
CU240D-2_PN_F			
	Min -	Max -	Factory setting [0] 2050[1] [1] 0 [2] 0 [3] 0
Description:	Sets the signal source for the main setpoint. Examples: r1024: Fixed speed setpoint effective r1050: Motor. potentiometer setpoint after the ramp-function generator		
Dependency:	Refer to: p1071, r1073, r1078		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
p1070[0...n]	CI: Main setpoint / Main setpoint		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU250D-2_PN_F	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 1550, 3030
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the main setpoint. Examples: r1024: Fixed speed setpoint effective r1050: Motor. potentiometer setpoint after the ramp-function generator		
Dependency:	Refer to: p1071, r1073, r1078		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		

p1071[0...n]	CI: Main setpoint scaling / Main setp scal		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 1550, 3030
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for scaling the main setpoint.		
r1073	CO: Main setpoint effective / Main setpoint eff		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3030
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the effective main setpoint. The value shown is the main setpoint after scaling.		
p1075[0...n]	CI: Supplementary setpoint / Suppl setp		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 1550, 3030
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the supplementary setpoint.		
Dependency:	Refer to: p1076, r1077, r1078		
p1076[0...n]	CI: Supplementary setpoint scaling / Suppl setp scal		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 1550, 3030
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for scaling the supplementary setpoint.		
r1077	CO: Supplementary setpoint effective / Suppl setpoint eff		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3030
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the effective supplementary setpoint. The value shown is the additional setpoint after scaling.		
r1078	CO: Total setpoint effective / Total setpoint eff		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3030
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the total effective setpoint. The value indicates the sum of the effective main setpoint and supplementary setpoint.		

p1080[0...n]	Minimum speed / n_min		
	Access level: 1	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(1), T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3050
	Min 0.000 [rpm]	Max 19500.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets the lowest possible motor speed. This value is not undershot in operation.		
Dependency:	Refer to: p1106		
Notice:	The effective minimum speed is formed from p1080 and p1106.		
Note:	The parameter value applies for both motor directions. In exceptional cases, the motor can operate below this value (e.g. when reversing).		
p1082[0...n]	Maximum speed / n_max		
	Access level: 1	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: C(1), T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3020, 3050, 3060, 3070, 3095
	Min 0.000 [rpm]	Max 210000.000 [rpm]	Factory setting 1500.000 [rpm]
Description:	Sets the highest possible speed. Example: Induction motor p0310 = 50 / 60 Hz without output filter and Blocksize power unit p1082 <= 60 x 240 Hz / r0313 (vector control) p1082 <= 60 x 650 Hz / r0313 (U/f control)		
Dependency:	For vector control, the maximum speed is restricted to 60.0 / (8.333 x 500 μs x r0313). This can be identified by a reduction in r1084. p1082 is not changed in this process due to the fact that the operating mode p1300 can be changed over. If a sine-wave filter (p0230 = 3) is parameterized as output filter, then the maximum speed is limited corresponding to the maximum permissible filter output frequency (refer to the filter data sheet). When using sine-wave filters (p0230 = 3, 4), the maximum speed r1084 is limited to 70% of the resonant frequency of the filter capacitance and the motor leakage inductance. For reactors and dU/dt filters, it is limited to 120 Hz / r0313. Refer to: p0230, r0313, p0322		
Notice:	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.		
Note:	The parameter applies for both motor directions. The parameter has a limiting effect and is the reference quantity for all ramp-up and ramp-down times (e.g. down ramps, ramp-function generator, motor potentiometer). The parameter is part of the quick commissioning (p0010 = 1); this means that it is appropriately pre-assigned when changing p0310, p0311, p0322. The following limits are always effective for p1082: p1082 <= 60 x minimum (15 x r0310, 650 Hz) / r0313 p1082 <= 60 x maximum power unit pulse frequency / (k x r0313), with k = 12 (vector control), k = 6.5 (U/f control) During automatic calculation (p0340 = 1, p3900 > 0), the parameter value is assigned the maximum motor speed (p0322). For p0322 = 0 the rated motor speed (p0311) is used as default (pre-assignment) value. For induction motors, the synchronous no-load speed is used as the default value (p0310 x 60 / r0313). For synchronous motors, the following additionally applies: During automatic calculation (p0340, p3900), p1082 is limited to speeds where the EMF does not exceed the DC link voltage. p1082 is also available in the quick commissioning (p0010 = 1); this means that when exiting via p3900 > 0, the value is not changed.		

p1083[0...n]	CO: Speed limit in positive direction of rotation / n_limit pos		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3050
	Min 0.000 [rpm]	Max 210000.000 [rpm]	Factory setting 210000.000 [rpm]
Description:	Sets the maximum speed for the positive direction.		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
r1084	CO: Speed limit positive effective / n_limit pos eff		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3050, 3095
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the effective positive speed limit.		
Dependency:	Refer to: p1082, p1083, p1085		
p1085[0...n]	CI: Speed limit in positive direction of rotation / n_limit pos		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 3050
	Min -	Max -	Factory setting 1083[0]
Description:	Sets the signal source for the speed limit of the positive direction.		
p1086[0...n]	CO: Speed limit in negative direction of rotation / n_limit neg		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3050
	Min -210000.000 [rpm]	Max 0.000 [rpm]	Factory setting -210000.000 [rpm]
Description:	Sets the speed limit for the negative direction.		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
r1087	CO: Speed limit negative effective / n_limit neg eff		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3050, 3095
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the effective negative speed limit.		
Dependency:	Refer to: p1082, p1086, p1088		

p1088[0...n]	Cl: Speed limit in negative direction of rotation / n_limit neg		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 3050
	Min -	Max -	Factory setting 1086[0]
Description:	Sets the signal source for the speed/velocity limit of the negative direction.		

p1091[0...n]	Skip speed 1 / n_skip 1		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3050
	Min 0.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets skip speed 1.		
Dependency:	Refer to: p1092, p1093, p1094, p1101		
Notice:	Skip bandwidths can also become ineffective as a result of the downstream limits in the setpoint channel.		
Note:	The skip (suppression) speeds can be used to prevent the effects of mechanical resonance.		

p1092[0...n]	Skip speed 2 / n_skip 2		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3050
	Min 0.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets skip speed 2.		
Dependency:	Refer to: p1091, p1093, p1094, p1101		
Notice:	Skip bandwidths can also become ineffective as a result of the downstream limits in the setpoint channel.		

p1093[0...n]	Skip speed 3 / n_skip 3		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3050
	Min 0.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets skip speed 3.		
Dependency:	Refer to: p1091, p1092, p1094, p1101		
Notice:	Skip bandwidths can also become ineffective as a result of the downstream limits in the setpoint channel.		

p1094[0...n]	Skip speed 4 / n_skip 4		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3050
	Min 0.000 [rpm]	Max 210000.000 [rpm]	Factory setting 0.000 [rpm]
Description:	Sets skip speed 4.		
Dependency:	Refer to: p1091, p1092, p1093, p1101		
Notice:	Skip bandwidths can also become ineffective as a result of the downstream limits in the setpoint channel.		

p1098[0...n]	CI: Skip speed scaling / n_skip scal			
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32	
	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170	
	Units group: -	Unit selection: -	Func. diagram: 3050	
	Min	Max	Factory setting	
	-	-	1	
Description:	Sets the signal source for scaling the skip speeds.			
Dependency:	Refer to: p1091, p1092, p1093, p1094			
r1099.0	CO/BO: Skip band status word / Skip band ZSW			
	Access level: 3	Calculated: -	Data type: Unsigned32	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min	Max	Factory setting	
	-	-	-	
Description:	Display and BICO output for the skip bands.			
Bit field:	Bit	Signal name	1 signal	0 signal
	00	r1170 within the skip band	Yes	No
				FP 3050
Dependency:	Refer to: r1170			
Note:	Re bit 00: With the bit set, the setpoint speed is within the skip band after the ramp-function generator (r1170). The signal can be used to switch over the drive data set (DDS).			
p1101[0...n]	Skip speed bandwidth / n_skip bandwidth			
	Access level: 3	Calculated: -	Data type: FloatingPoint32	
	Can be changed: U, T	Scaling: p2000	Dyn. index: DDS, p0180	
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3050	
	Min	Max	Factory setting	
	0.000 [rpm]	210000.000 [rpm]	0.000 [rpm]	
Description:	Sets the bandwidth for the skip speeds/velocities 1 to 4.			
Dependency:	Refer to: p1091, p1092, p1093, p1094			
Note:	The setpoint (reference) speeds are skipped (suppressed) in the range of the skip speed +/-p1101. Steady-state operation is not possible in the skipped (suppressed) speed range. The skip (suppression) range is skipped. Example: p1091 = 600 and p1101 = 20 --> setpoint speeds between 580 and 620 [rpm] are skipped. For the skip bandwidths, the following hysteresis behavior applies: For a setpoint speed coming from below, the following applies: r1170 < 580 [rpm] and 580 [rpm] <= r1114 <= 620 [rpm] --> r1119 = 580 [rpm] For a setpoint speed coming from above, the following applies: r1170 > 620 [rpm] and 580 [rpm] <= r1114 <= 620 [rpm] --> r1119 = 620 [rpm]			
p1106[0...n]	CI: Minimum speed signal source / n_min s_src			
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32	
	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170	
	Units group: -	Unit selection: -	Func. diagram: 3050	
	Min	Max	Factory setting	
	-	-	0	
Description:	Sets the signal source for lowest possible motor speed.			

Dependency: Refer to: p1080
Notice: The effective minimum speed is formed from p1080 and p1106.

p1108[0...n] **BI: Total setpoint selection / Total setp sel**

Access level: 4	Calculated: -	Data type: U32 / Binary
Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
Units group: -	Unit selection: -	Func. diagram: 3030
Min	Max	Factory setting
-	-	0

Description: Sets the signal source to select the total setpoint.

Dependency: The selection of the total speed setpoint is automatically interconnected to the status word of the technology controller (r2349.4) if the technology controller is selected (p2200 > 0) and operated in the mode p2251 = 0.
Refer to: p1109

Caution: If the technology controller is to supply the total setpoint using p1109, then it is not permissible to withdraw the inter-connection to its status word (r2349.4).



p1109[0...n] **CI: Total setpoint / Total setp**

Access level: 4	Calculated: -	Data type: U32 / FloatingPoint32
Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
Units group: -	Unit selection: -	Func. diagram: 3030
Min	Max	Factory setting
-	-	0

Description: Sets the signal source for the total setpoint.

For p1108 = 1 signal, the total setpoint is read in via p1109.

Dependency: The signal source of the total setpoint is automatically interconnected to the output of the technology controller (r2294) if the technology controller is selected (p2200 > 0) and operated in the mode p2251 = 0.
Refer to: p1108

Caution: If the technology controller is to supply the total setpoint using p1109, then it is not permissible to disable the inter-connection to its output (r2294).



p1110[0...n] **BI: Inhibit negative direction / Inhib neg dir**

Access level: 3	Calculated: -	Data type: U32 / Binary
Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
Units group: -	Unit selection: -	Func. diagram: 2505, 3040
Min	Max	Factory setting
-	-	0

Description: Sets the signal source to disable the negative direction.

Dependency: Refer to: p1111

p1111[0...n] **BI: Inhibit positive direction / Inhib pos dir**


Access level: 3	Calculated: -	Data type: U32 / Binary
Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
Units group: -	Unit selection: -	Func. diagram: 2505, 3040
Min	Max	Factory setting
-	-	0

Description: Sets the signal source to disable the positive direction.

Dependency: Refer to: p1110

r1112	CO: Speed setpoint after minimum limiting / n_set aft min_lim		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3050
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the speed setpoint after the minimum limiting.		
Dependency:	Refer to: p1091, p1092, p1093, p1094, p1101		
p1113[0...n]	BI: Setpoint inversion / Setp inv		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2441, 2442, 2505, 3040
CU240D-2_PN_F			
	Min -	Max -	Factory setting [0] 2090.11 [1] 0 [2] 0 [3] 0
Description:	Sets the signal source to invert the setpoint.		
Dependency:	Refer to: r1198		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
p1113[0...n]	BI: Setpoint inversion / Setp inv		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2441, 2442, 2505, 3040
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to invert the setpoint.		
Dependency:	Refer to: r1198		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
r1114	CO: Setpoint after the direction limiting / Setp after limit		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 1550, 3040, 3050
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the speed/velocity setpoint after the changeover and limiting the direction.		

p1115	Ramp-function generator selection / RFG selection		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 1550, 3080
CU240D-2_PN_F			
CU250D-2_PN_F			
	Min 0	Max 1	Factory setting 0
Description:	Sets the ramp-function generator type.		
Value:	0: Basic ramp-function generator 1: Extended ramp-function generator		
Note:	Another ramp-function generator type can only be selected when the motor is at a standstill.		
p1115	Ramp-function generator selection / RFG selection		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1550, 3080
	Min 0	Max 1	Factory setting 1
Description:	Sets the ramp-function generator type.		
Value:	0: Basic ramp-function generator 1: Extended ramp-function generator		
Note:	Another ramp-function generator type can only be selected when the motor is at a standstill.		
r1119	CO: Ramp-function generator setpoint at the input / RFG setp at inp		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 1550, 1690, 3050, 3060, 3070
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the setpoint at the input of the ramp-function generator.		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
Note:	The setpoint is influenced by other functions, e.g. skip (suppressed) speeds, minimum and maximum limits.		
p1120[0...n]	Ramp-function generator ramp-up time / RFG ramp-up time		
	Access level: 1	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(1), U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 3060, 3070
	Min 0.000 [s]	Max 999999.000 [s]	Factory setting 10.000 [s]
Description:	The ramp-function generator ramps-up the speed setpoint from standstill (setpoint = 0) up to the maximum speed (p1082) in this time.		
Dependency:	Refer to: p1082, p1123		
Note:	The ramp-up time can be scaled via connector input p1138. The parameter is adapted during the rotating measurement (p1960 > 0). This is the reason that during the rotating measurement, the motor can accelerate faster than was originally parameterized. For U/f control and sensorless vector control (see p1300), ramp-up times of 0 s are not expedient. The setting should be based on the startup times (r0345) of the motor.		

p1121[0...n]	Ramp-function generator ramp-down time / RFG ramp-down time		
	Access level: 1	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(1), U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 3060, 3070
	Min 0.000 [s]	Max 999999.000 [s]	Factory setting 10.000 [s]
Description:	Sets the ramp-down time for the ramp-function generator. The ramp-function generator ramps-down the speed setpoint from the maximum speed (p1082) down to standstill (setpoint = 0) in this time. Further, the ramp-down time is always effective for OFF1.		
Dependency:	Refer to: p1082, p1123		
Note:	For U/f control and sensorless vector control (see p1300), ramp-down times of 0 s are not recommended. The setting should be based on the startup times (r0345) of the motor.		
p1122[0...n]	BI: Bypass ramp-function generator / Bypass RFG		
	Access level: 4	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2505
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for bypassing the ramp generator (ramp-up and ramp-down times = 0).		
Caution:	If the technology controller is operated in mode p2251 = 0 (technology controller as main speed setpoint), then it is not permissible to disable the interconnection to its status word (r2349).		
			
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
Note:	In the case of sensorless vector control, the ramp-function generator must not be bypassed, other than indirectly by means of interconnection with r2349.		
p1123[0...n]	Ramp-function generator minimum ramp-up time / RFG t_RU min		
	Access level: 4	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.000 [s]	Max 999999.000 [s]	Factory setting 0.000 [s]
Description:	Sets the minimum ramp-up time. The ramp-up time (p1120) is limited internally to this minimum value.		
Dependency:	Refer to: p1082		
Note:	The setting should be based on the startup times (r0345) of the motor. If the maximum speed p1082 changes, p1123 is re-calculated.		
p1127[0...n]	Ramp-function generator minimum ramp-down time / RFG t_RD min		
	Access level: 4	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.000 [s]	Max 999999.000 [s]	Factory setting 0.000 [s]
Description:	Sets the minimum ramp-down time. The ramp-down time (p1121) is limited internally to this minimum value.		
Dependency:	Refer to: p1082		

Note: For U/f control and sensorless vector control (see p1300), ramp-down times of 0 s are not recommended. The setting should be based on the startup times (r0345) of the motor.
If the maximum speed p1082 changes, p1127 is re-calculated.

p1130[0...n]	Ramp-function generator initial rounding-off time / RFG t_start_round		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 3070
	Min 0.000 [s]	Max 30.000 [s]	Factory setting 0.000 [s]

Description: Sets the initial rounding-off time for the extended ramp generator. The value applies to ramp-up and ramp-down.

Note: Rounding-off times avoid an abrupt response and prevent damage to the mechanical system.

p1131[0...n]	Ramp-function generator final rounding-off time / RFG t_end_delay		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 3070
	Min 0.000 [s]	Max 30.000 [s]	Factory setting 0.000 [s]

Description: Sets the final rounding-off time for the extended ramp generator.

The value applies to ramp-up and ramp-down.

Note: Rounding-off times avoid an abrupt response and prevent damage to the mechanical system.

p1134[0...n]	Ramp-function generator rounding-off type / RFG round-off type		
	Access level: 2	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 3070
	Min 0	Max 1	Factory setting 0

Description: Sets the smoothed response to the OFF1 command or the reduced setpoint for the extended ramp-function generator.

Value:
0: Cont. smoothing
1: Discont smoothing

Dependency: No effect up to initial rounding-off time (p1130) > 0 s.

Note: p1134 = 0 (continuous smoothing)

If the setpoint is reduced while ramping-up, initially a final rounding-off is carried out and then the ramp-up completed. During the final rounding-off, the output of the ramp-function generator continues to go in the direction of the previous setpoint (overshoot). After the final rounding-off has been completed, the output goes toward the new setpoint.

p1134 = 1 (discontinuous smoothing)

If the setpoint is reduced while ramping-up, then the output goes immediately in the direction of the new setpoint. For the setpoint change there is no rounding-off.

p1135[0...n]	OFF3 ramp-down time / OFF3 t_RD		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(1), U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 3060, 3070
	Min 0.000 [s]	Max 5400.000 [s]	Factory setting 0.000 [s]

Description: Sets the ramp-down time from the maximum speed down to zero speed for the OFF3 command.

Note: This time can be exceeded if the DC link voltage reaches its maximum value.

p1136[0...n]	OFF3 initial rounding-off time / RFGOFF3 t_strt_rnd		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 3070
	Min 0.000 [s]	Max 30.000 [s]	Factory setting 0.000 [s]
Description:	Sets the initial rounding-off time for OFF3 for the extended ramp generator.		
p1137[0...n]	OFF3 final rounding-off time / RFG OFF3 t_end_del		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 3070
	Min 0.000 [s]	Max 30.000 [s]	Factory setting 0.000 [s]
Description:	Sets the final rounding-off time for OFF3 for the extended ramp generator.		
p1138[0...n]	CI: Up ramp scaling / Up ramp scaling		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 3060, 3070
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for scaling the up ramp.		
Dependency:	Refer to: p1120		
Note:	The ramp-up time is set in p1120.		
p1139[0...n]	CI: Down ramp scaling / Down ramp scaling		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 3060, 3070
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for scaling the down ramp.		
Dependency:	Refer to: p1121		
Note:	The ramp-down time is set in p1121.		
p1140[0...n]	BI: Enable ramp-function generator/inhibit ramp-function generator / RFG enable		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2501
CU240D-2_PN_F	Min -	Max -	Factory setting [0] 2090.4 [1] 1 [2] 2090.4 [3] 2090.4
Description:	Sets the signal source for the command "enable ramp-function generator/inhibit ramp-function generator". For the PROFIdrive profile, this command corresponds to control word 1 bit 4 (STW1.4). BI: p1140 = 0 signal: Inhibits the ramp-function generator (the ramp-function generator output is set to zero).		

BI: p1140 = 1 signal:
Ramp-function generator enable.

Dependency: Refer to: r0054, p1141, p1142

Caution: When "master control from PC" is activated, this binector input is ineffective.



Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

p1140[0...n] **BI: Enable ramp-function generator/inhibit ramp-function generator / RFG enable**

CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2501
	Min	Max	Factory setting
	-	-	1

Description: Sets the signal source for the command "enable ramp-function generator/inhibit ramp-function generator".
For the PROFdrive profile, this command corresponds to control word 1 bit 4 (STW1.4).

BI: p1140 = 0 signal:
Inhibits the ramp-function generator (the ramp-function generator output is set to zero).
BI: p1140 = 1 signal:
Ramp-function generator enable.

Dependency: Refer to: r0054, p1141, p1142

Caution: When "master control from PC" is activated, this binector input is ineffective.



Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

p1141[0...n] **BI: Continue ramp-function generator/freeze ramp-function generator / Continue RFG**

CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2501
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	[0] 2090.5
			[1] 1
			[2] 2090.5
			[3] 2090.5

Description: Sets the signal source for the command "continue ramp-function generator/freeze ramp-function generator".
For the PROFdrive profile, this command corresponds to control word 1 bit 5 (STW1.5).

BI: p1141 = 0 signal:
Freezes the ramp-function generator.
BI: p1141 = 1 signal:
Continue ramp-function generator.

Dependency: Refer to: r0054, p1140, p1142

Caution: When "master control from PC" is activated, this binector input is ineffective.



Notice: The ramp-function generator is, independent of the state of the signal source, active in the following cases:
- OFF1/OFF3.
- ramp-function generator output within the suppression bandwidth.
- ramp-function generator output below the minimum speed.

p1141[0...n] BI: Continue ramp-function generator/freeze ramp-function generator / Continue RFG

CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2501
	Min	Max	Factory setting
	-	-	1

Description: Sets the signal source for the command "continue ramp-function generator/freeze ramp-function generator".
For the PROFIdrive profile, this command corresponds to control word 1 bit 5 (STW1.5).

BI: p1141 = 0 signal:
Freezes the ramp-function generator.

BI: p1141 = 1 signal:
Continue ramp-function generator.

Dependency: Refer to: r0054, p1140, p1142

Caution: When "master control from PC" is activated, this binector input is ineffective.



Notice: The ramp-function generator is, independent of the state of the signal source, active in the following cases:
- OFF1/OFF3.
- ramp-function generator output within the suppression bandwidth.
- ramp-function generator output below the minimum speed.

p1142[0...n] BI: Enable setpoint/inhibit setpoint / Setpoint enable

CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2501
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	[0] 2090.6
			[1] 1
			[2] 2090.6
			[3] 2090.6

Description: Sets the signal source for the command "enable setpoint/inhibit setpoint".
For the PROFIdrive profile, this command corresponds to control word 1 bit 6 (STW1.6).

BI: p1142 = 0 signal
Inhibits the setpoint (the ramp-function generator input is set to zero).

BI: p1142 = 1 signal
Setpoint enable.

Dependency: Refer to: p1140, p1141


Caution: When "master control from PC" is activated, this binector input is ineffective.




Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: When the function module "position control" (r0108.3 = 1) is activated, this binector input is interconnected as follows as standard:

BI: p1142 = 0 signal



p1142[0...n]	BI: Enable setpoint/inhibit setpoint / Setpoint enable		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2501
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for the command "enable setpoint/inhibit setpoint". For the PROFIdrive profile, this command corresponds to control word 1 bit 6 (STW1.6). BI: p1142 = 0 signal Inhibits the setpoint (the ramp-function generator input is set to zero). BI: p1142 = 1 signal Setpoint enable.		
Dependency:	Refer to: p1140, p1141		
Caution:	When "master control from PC" is activated, this binector input is ineffective.		
			
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
Note:	When the function module "position control" (r0108.3 = 1) is activated, this binector input is interconnected as follows as standard: BI: p1142 = 0 signal		
p1143[0...n]	BI: Ramp-function generator, accept setting value / RFG accept set v		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 3060, 3070
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for accepting the setting value of the ramp-function generator.		
Dependency:	The signal source for the ramp-function generator setting value is set using parameters. Refer to: p1144		
Note:	0/1 signal: The ramp-function generator output is immediately (without delay) set to the setting value of the ramp-function generator. 1 signal: The setting value of the ramp-function generator is effective. 1/0 signal: The input value of the ramp-function generator is effective. The ramp-function generator output is adapted to the input value using the ramp-up time or the ramp-down time. 0 signal: The input value of the ramp-function generator is effective.		
p1144[0...n]	CI: Ramp-function generator setting value / RFG setting value		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: U, T	Scaling: p2000	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 3060, 3070
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for the ramp-function generator setting value.		
Dependency:	The signal source for accepting the setting value is set using parameters. Refer to: p1143		

p1145[0...n]	Ramp-function generator tracking intensity. / RFG track intens		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 3080
	Min 0.0	Max 50.0	Factory setting 0.0
Description:	Sets the ramp-function generator tracking. The output value of the ramp-function generator is tracked (corrected) corresponding to the maximum possible drive acceleration. The reference value is the deviation at the speed/velocity controller input that is necessary to ensure that the motor accelerates at the torque/force limit.		
Notice:	If ramp-function generator tracking is activated and the ramp time is set too short, this can cause unsteady acceleration. Remedy: - switch off ramp-function generator tracking (p1145 = 0). - increase the ramp-up/ramp-down time (p1120, p1121).		
Note:	In the U/f mode, ramp-function generator tracking is not active.		
p1148[0...n]	Ramp-function gen. tolerance for ramp-up and ramp-down active / RFG tol HL/RL act		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3060, 3070
	Min 0.000 [rpm]	Max 1000.000 [rpm]	Factory setting 19.800 [rpm]
Description:	Sets the tolerance value for the status of the ramp-function generator (ramp-up active, ramp-down active). If the input of the ramp-function generator does not change in comparison to the output by more than the entered tolerance time, then the status bits "ramp-up active" and "ramp-down active" are not influenced.		
Dependency:	Refer to: r1199		
r1149	CO: Ramp-function generator acceleration / RFG acceleration		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2007	Dyn. index: -
	Units group: 39_1	Unit selection: p0505	Func. diagram: 3060, 3070
	Min - [rev/s ²]	Max - [rev/s ²]	Factory setting - [rev/s ²]
Description:	Displays the acceleration of the ramp-function generator.		
Dependency:	Refer to: p1145		
r1150	CO: Ramp-function generator speed setpoint at the output / RFG n_set at outp		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 1550, 3080
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the setpoint at the output of the ramp-function generator.		

p1155[0...n]	CI: Speed controller speed setpoint 1 / n_ctrl n_set 1		
	Access level: 4	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 1550, 3080, 5030, 6031
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for speed setpoint 1 of the speed controller.		
Dependency:	The effectiveness of this setpoint depends on, e.g. STW1.4 and STW1.6. The signal source of the total setpoint is automatically interconnected to the output of the technology controller (r2294) if the technology controller is selected (p2200 > 0) and operated in the mode p2251 = 1. Refer to: r0002, p0840, p0844, p0848, p0852, p0854, r0898, p1140, p1142, p1160, r1170		
Caution:	If the technology controller is activated, then it is not permissible to withdraw the parameter interconnection.		
			
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
p1160[0...n]	CI: Speed controller speed setpoint 2 / n_ctrl n_set 2		
CU240D-2_DP	Access level: 4	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 1550, 3080
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for speed setpoint 2 of the speed controller.		
Dependency:	Refer to: p1155, r1170		
Note:	For OFF1/OFF3, the ramp-function generator ramp is effective. The ramp-function generator is set (to the setpoint (r1170)) and stops the drive corresponding to the ramp-down time (p1121 or p1135). While stopping via the ramp-function generator, STW1.4 is effective (enable ramp-function generator).		
p1160[0...n]	CI: Speed controller speed setpoint 2 / n_ctrl n_set 2		
CU250D-2_DP_F	Access level: 4	Calculated: -	Data type: U32 / FloatingPoint32
CU250D-2_PN_F	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 1550, 3080
	Min -	Max -	Factory setting 2562[0]
Description:	Sets the signal source for speed setpoint 2 of the speed controller.		
Dependency:	Refer to: p1155, r1170		
Note:	For OFF1/OFF3, the ramp-function generator ramp is effective. The ramp-function generator is set (to the setpoint (r1170)) and stops the drive corresponding to the ramp-down time (p1121 or p1135). While stopping via the ramp-function generator, STW1.4 is effective (enable ramp-function generator). When the function module "position control" (r0108.3 = 1) is activated, this connector input is interconnected as follows as standard: CI: p1160 = r2562		

r1169	CO: Speed controller speed setpoints 1 and 2 / n_ctrl n_set 1/2				
	Access level: 4	Calculated: -	Data type: FloatingPoint32		
	Can be changed: -	Scaling: p2000	Dyn. index: -		
	Units group: 3_1	Unit selection: p0505	Func. diagram: 3080		
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]		
Description:	Displays the speed setpoint after the addition of the speed setpoint 1 (p1155) and speed setpoint 2 (p1160).				
Dependency:	Refer to: p1155, p1160				
Note:	The value is only correctly displayed at r0899.2 = 1 (operation enabled).				
r1170	CO: Speed controller setpoint sum / n_ctrl setp sum				
	Access level: 3	Calculated: -	Data type: FloatingPoint32		
	Can be changed: -	Scaling: p2000	Dyn. index: -		
	Units group: 3_1	Unit selection: p0505	Func. diagram: 1550, 1590, 1690, 1700, 1750, 3080, 5020, 6030		
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]		
Description:	Displays the speed setpoint after selecting the ramp-function generator and adding the speed setpoint 1 (p1155) and speed setpoint 2 (p1160).				
Dependency:	Refer to: r1150, p1155, p1160				
r1197	Fixed speed setpoint number actual / n_set_fixed No act				
	Access level: 4	Calculated: -	Data type: Unsigned32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 3010		
	Min -	Max -	Factory setting -		
Description:	Displays the number of the selected fixed speed/velocity setpoint.				
Dependency:	Refer to: p1020, p1021, p1022, p1023				
Note:	If a fixed speed setpoint has not been selected (p1020 ... p1023 = 0, r1197 = 0), then r1024 = 0 (setpoint = 0).				
r1198.0...15	CO/BO: Control word setpoint channel / STW setpoint chan				
	Access level: 3	Calculated: -	Data type: Unsigned16		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 1530, 2505		
	Min -	Max -	Factory setting -		
Description:	Displays the control word for the setpoint channel.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Fixed setpoint bit 0	Yes	No	3010
	01	Fixed setpoint bit 1	Yes	No	3010
	02	Fixed setpoint bit 2	Yes	No	3010
	03	Fixed setpoint bit 3	Yes	No	3010
	05	Inhibit negative direction	Yes	No	3040
	06	Inhibit positive direction	Yes	No	3040
	11	Setpoint inversion	Yes	No	3040
	13	Motorized potentiometer raise	Yes	No	3020
	14	Motorized potentiometer lower	Yes	No	3020
	15	Bypass ramp-function generator	Yes	No	3060, 3070

r1199.0...8		CO/BO: Ramp-function generator status word / RFG ZSW			
	Access level: 4	Calculated: -	Data type: Unsigned16		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 1550, 3080, 8010		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the status word for the ramp-function generator (RFG).				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Ramp-up active	Yes	No	-
	01	Ramp-down active	Yes	No	-
	02	RFG active	Yes	No	-
	03	Ramp-function generator set	Yes	No	-
	04	Ramp-function generator held	Yes	No	-
	05	Ramp-function generator tracking active	Yes	No	-
	06	Maximum limit active	Yes	No	-
	07	Ramp-function generator acceleration positive	Yes	No	-
	08	Ramp-function generator acceleration negative	Yes	No	-
Note:	Re bit 02: The bit is an OR logic operation - bit 00 and bit 01.				
p1200[0...n]		Flying restart operating mode / FlyRest op_mode			
	Access level: 2	Calculated: -	Data type: Integer16		
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180		
	Units group: -	Unit selection: -	Func. diagram: 1690		
	Min	Max	Factory setting		
	0	4	0		
Description:	Sets the operating mode for flying restart. The flying restart allows the drive converter to be powered up while the motor is still rotating. In so doing, the drive converter output frequency is changed until the actual motor speed/velocity is found. The motor then accelerates up to the setpoint at the ramp-function generator setting.				
Value:	0: Flying restart inactive 1: Flying restart always active (start in setpoint direction) 4: Flying restart always active (start only in setpoint direction)				
Dependency:	A differentiation is made between flying restart for U/f control and for vector control (p1300). Flying restart, U/f control: p1202, p1203, r1204 Flying restart, vector control: p1202, p1203, r1205 For synchronous motors, flying restart cannot be activated. Refer to: p1201 Refer to: F07330, F07331				
Notice:	The "flying restart" function must be used in cases where the motor may still be running (e.g. after a brief line supply interruption) or is being driven by the load. The system might otherwise shut down as a result of overcurrent.				
Note:	When p1200 = 1, 4: Flying restart is active after faults, OFF1, OFF2, OFF3. When p1200 = 1: The search is made in both directions. When p1200 = 4: The search is only made in the setpoint direction. For U/f control (p1300 < 20), the following applies: The speed can only be sensed for values above approx. 5 % of the rated motor speed. For lower speeds, it is assumed that the motor is at a standstill. If p1200 is changed during commissioning (p0010 > 0), then it is possible that the old value will no longer be able to be set. The reason for this is that the dynamic limits of p1200 have been changed by a parameter that was set when the drive was commissioned (e.g. p0300).				

p1201[0...n]	BI: Flying restart enable signal source / Fly_res enab S_src		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting 1
Description:	Sets the signal source to enable the "flying restart" function.		
Dependency:	Refer to: p1200		
Note:	Withdrawing the enable signal has the same effect as setting p1200 = 0.		
p1202[0...n]	Flying restart search current / FlyRest I_srch		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 10 [%]	Max 400 [%]	Factory setting 100 [%]
Description:	Sets the search current for the "flying restart" function. The value is referred to the motor magnetizing current.		
Dependency:	Refer to: r0331		
Caution:	An unfavorable parameter value can result in the motor behaving in an uncontrollable fashion.		
			
Note:	In U/f control mode, the parameter serves as a threshold value for establishing the current at the beginning of the flying restart function. When the threshold value is reached, the prevailing search current is set dependent upon the frequency on the basis of voltage inputs. Reducing the search current can also improve flying restart performance (if the system moment of inertia is not very high, for example).		
p1203[0...n]	Flying restart search rate factor / FlyRst v_Srch Fact		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 10 [%]	Max 4000 [%]	Factory setting 100 [%]
Description:	Sets the factor for the search speed for flying restart. The value influences the rate at which the output frequency is changed during a flying restart . A higher value results in a longer search time.		
Caution:	An unfavorable parameter value can result in the motor behaving in an uncontrollable fashion. For vector control, a value that is too low or too high can cause flying restart to become unstable.		
			
Note:	The parameter factory setting is selected so that standard induction motors that are rotating can be found and restarted as quickly as possible (fast flying restart). With this pre-setting, if the motor is not found (e.g. for motors that are accelerated as a result of active loads or with U/f control and low speeds), we recommend that the search rate is reduced (by increasing p1203).		

r1204.0...13		CO/BO: Flying restart U/f control status / FlyRest Uf st			
Access level: 4		Calculated: -	Data type: Unsigned16		
Can be changed: -		Scaling: -	Dyn. index: -		
Units group: -		Unit selection: -	Func. diagram: -		
Min		Max	Factory setting		
-		-	-		
Description:	Displays the status for checking and monitoring flying restart states in the U/f control mode.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Current impressed	Yes	No	-
	01	No current flow	Yes	No	-
	02	Voltage input	Yes	No	-
	03	Voltage reduced	Yes	No	-
	04	Start ramp-function generator	Yes	No	-
	05	Wait for execution	Yes	No	-
	06	Slope filter act	Yes	No	-
	07	Positive gradient	Yes	No	-
	08	Current < thresh	Yes	No	-
	09	Current minimum	Yes	No	-
	10	Search in the positive direction	Yes	No	-
	11	Stop after positive direction	Yes	No	-
	12	Stop after negative direction	Yes	No	-
	13	No result	Yes	No	-

r1205.0...15		CO/BO: Flying restart vector control status / FlyRest vector st			
Access level: 4		Calculated: -	Data type: Unsigned32		
Can be changed: -		Scaling: -	Dyn. index: -		
Units group: -		Unit selection: -	Func. diagram: -		
Min		Max	Factory setting		
-		-	-		
Description:	Displays the status for checking and monitoring flying restart states in the vector control mode.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Speed adaptation circuit record angle	Yes	No	-
	01	Speed adaptation circuit set gain to 0	Yes	No	-
	02	Isd channel enable	Yes	No	-
	03	Speed control switched out	Yes	No	-
	04	Quadrature arm switched in	Yes	No	-
	05	Special transformation active	Yes	No	-
	06	Speed adaptation circuit set I comp to 0	Yes	No	-
	07	Current control on	Yes	No	-
	08	Isd_set = 0 A	Yes	No	-
	09	Frequency held	Yes	No	-
	10	Search in the positive direction	Yes	No	-
	11	Search Started	Yes	No	-
	12	Current impressed	Yes	No	-
	13	Search interrupted	Yes	No	-
	14	Speed adaptation circuit deviation = 0	Yes	No	-
	15	Speed control activated	Yes	No	-

Note: Re bit 00 ... 09:
Used to control internal sequences during the flying restart.
Depending on the motor type (p0300), the number of active bits differs.

Re bits 10 ... 15:
Are used to monitor the flying restart sequence.

p1206[0...9] Faults without automatic restart / F w/out auto AR			
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 65535	Factory setting 0
Description:	Sets faults for which automatic restart should not be effective.		
Dependency:	The setting is only effective for p1210 = 6, 16. Refer to: p1210		
p1210 Automatic restart mode / AR mode			
	Access level: 2	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 26	Factory setting 0
Description:	Sets the automatic restart mode (AR). The parameters must be saved in the non-volatile memory p0971 = 1 in order that the setting becomes effective.		
Value:	0: Inhibit automatic restart 1: Acknowledge all faults without restarting 4: Restart after line supply failure w/o additional start attempts 6: Restart after fault with additional start attempts 14: Restart after line supply failure following man. acknowledgment 16: Restart after fault following manual acknowledgment 26: Acknowledging all faults and reclosing for an ON command		
Dependency:	The automatic restart requires an active ON command (e.g., via a digital input). If, for p1210 > 1, there is no active ON command, then the automatic restart is interrupted. When using an Operator Panel in the LOCAL mode, then there is no automatic start. For p1210 = 14, 16, a manual acknowledgement is required for an automatic restart. Refer to: p0840, p0857 Refer to: F30003		
Danger:	If the automatic restart is activated (p1210 > 1) if there is an ON command (refer to p0840), the drive is powered up as soon as any fault messages that are present can be acknowledged. This also occurs after the line supply returns or the Control Unit boots if the DC link voltage is present again. This automatic power-up sequence can only be interrupted by withdrawing the ON command.		
			
Caution:	A change is only accepted and made in the state "initialization" (r1214.0) and "wait for alarm" (r1214.1). When faults are present, therefore, the parameter cannot be changed. For p1210 > 1, the motor is automatically started.		
Note:	Re p1210 = 1: Faults that are present are automatically acknowledged. If new faults occur after a successful fault acknowledgment, then these are also automatically acknowledged again. p1211 has no influence on the number of acknowledgment attempts. Re p1210 = 4: An automatic restart is only performed if fault F30003 has occurred on the power unit. If additional faults are present, then these faults are also acknowledged and when successful, starting continues. If the 24 V Control Unit power supply fails, then this is interpreted as a line supply failure. Re p1210 = 6: An automatic restart is carried out if any fault has occurred. Re p1210 = 14: As for p1210 = 4. However, faults that are present must be manually acknowledged. Re p1210 = 16: As for p1210 = 6. However, faults that are present must be manually acknowledged.		

Re p1210 = 26:

The same as for p1210 = 6. For this mode, the switch-on command can be entered with a delay. The restart is interrupted with either OFF2 or OFF3.

p1211 Automatic restart start attempts / AR start attempts			
Access level: 3	Calculated: -	Data type: Unsigned16	
Can be changed: U, T	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min 0	Max 10	Factory setting 3	
Description:	Sets the start attempts of the automatic restart function for p1210 = 4, 6, 14, 16, 26.		
Dependency:	Refer to: p1210, r1214 Refer to: F07320		
Caution:	A change is only accepted and made in the state "initialization" (r1214.0) and "wait for alarm" (r1214.1).		
Notice:	After fault F07320 occurs, the power-on command must be withdrawn and all of the faults acknowledged so that the automatic restart function is re-activated. After a complete power failure the start counter always starts with the counter value that applied before the power failure, and decrements this start attempt by 1. If a further attempt to acknowledge is started by the automatic restart function prior to power failure, e.g. when the CU remains active on power failure longer than the time p1212 / 2, the fault counter will already have been decremented once. In this case, the start counter is thus decreased by the value 2.		
Note:	A start attempt starts immediately when a fault occurs. The start attempt is considered to be completed if the motor was magnetized (r0056.4 = 1) and an additional delay time of 1 s has expired. As long as a fault is present, an acknowledge command is generated in the time intervals of p1212 / 2. When successfully acknowledged, the start counter is decremented. If, after this, a fault re-occurs before a restart has been completed, then acknowledgement starts again from the beginning. Fault F07320 is output if, after several faults occur, the number of parameterized start attempts has been reached. After a successful start attempt, i.e. a fault/error has no longer occurred up to the end of the magnetizing phase, the start counter is again reset to the parameter value after 1 s. If a fault re-occurs - the parameterized number of start attempts is again available. At least one start attempt is always carried out. After a line supply failure, acknowledgement is immediate and when the line supply returns, the system is powered up. If, between successfully acknowledging the line fault and the line supply returning, another fault occurs, then its acknowledgement also causes the start counter to be decremented. For p1210 = 26, the start counter is decremented if after a successful fault acknowledgement, the on command is present.		
p1212 Automatic restart delay time start attempts / AR t_wait start			
Access level: 3	Calculated: -	Data type: FloatingPoint32	
Can be changed: U, T	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min 0.1 [s]	Max 1000.0 [s]	Factory setting 1.0 [s]	
Description:	Sets the delay time up to restart.		
Dependency:	This parameter setting is active for p1210 = 4, 6, 26. For p1210 = 1, the following applies: Faults are only automatically acknowledged in half of the waiting time, no restart. Refer to: p1210, r1214		
Notice:	A change is only accepted and made in the state "initialization" (r1214.0) and "wait for alarm" (r1214.1).		
Note:	The faults are automatically acknowledged after half of the delay time has expired and the full delay time. If the cause of a fault is not removed in the first half of the delay time, then it is no longer possible to acknowledge in the delay time.		

p1213[0...1]		Automatic restart monitoring time / AR t_monit		
Access level:	3	Calculated:	-	
Can be changed:	U, T	Scaling:	-	
Units group:	-	Unit selection:	-	
Min	0.0 [s]	Max	10000.0 [s]	Factory setting
				[0] 60.0 [s] [1] 0.0 [s]
Description:	Sets the monitoring time of the automatic restart (AR).			
Index:	[0] = Restart [1] = Reset start counter			
Dependency:	Refer to: p1210, r1214			
Caution:	A change is only accepted and made in the state "initialization" (r1214.0) and "wait for alarm" (r1214.1).			
Notice:	After fault F07320 occurs, the power-on command must be withdrawn and all of the faults acknowledged so that the automatic restart function is re-activated.			
Note:	<p>Re index 0:</p> <p>The monitoring time starts when the faults are detected. If the automatic acknowledgements are not successful, the monitoring time runs again. If, after the monitoring time has expired, the drive has still not successfully started again (flying restart and magnetizing of the motor must have been completed: r0056.4 = 1), then fault F07320 is output. The monitoring is de-activated with p1213 = 0. If p1213 is set lower than the sum of p1212, the magnetizing time p0346 and the additional delay time due to the flying restart, then fault F07320 is generated at each restart. If, for p1210 = 1, the time in p1213 is set lower than in p1212, then fault F07320 is also generated at each restart. The monitoring time must be extended if the faults that occur cannot be immediately and successfully acknowledged (e.g. for faults that are permanently present). In the case of p1210 = 14, 16, the faults which are present must be acknowledged manually within the time in p1213[0]. Otherwise, fault F07320 is generated after the set time.</p> <p>Re index 1:</p> <p>The start counter (refer to r1214) is only set back to the starting value p1211 if, after successful restart, the time in p1213[1] has expired. The delay time is not effective for fault acknowledgement without automatic restart (p1210 = 1). After a power failure (blackout) the delay time only starts after the line supply returns and the Control Unit boots. The start counter is set to p1211, if F07320 occurred, the power-on command is withdrawn and the fault is acknowledged. The start counter is immediately updated if the starting value p1211 or the mode p1210 is changed. For p1210 = 26, the fault must have been successfully acknowledged and the switch-on command issued within the time in p1213[0]. Otherwise, fault F07320 is generated after the set time.</p>			

r1214.0...15		CO/BO: Automatic restart status / AR status			
Access level:	4	Calculated:	-		
Can be changed:	-	Scaling:	-		
Units group:	-	Unit selection:	-		
Min	-	Max	-	Factory setting	
				-	
Description:	Displays the status of the automatic restart (AR).				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Initialization	Yes	No	-
	01	Wait for alarm	Yes	No	-
	02	Auto restart act	Yes	No	-
	03	Setting the acknowledgement command	Yes	No	-
	04	Acknowledge alarms	Yes	No	-
	05	Restart	Yes	No	-
	06	Delay time running after automatic power-up	Yes	No	-
	07	Fault	Yes	No	-
	10	Effective fault	Yes	No	-
	12	Start count. bit 0	ON	OFF	-

List of parameters

13	Start count. bit 1	ON	OFF	-
14	Start count. bit 2	ON	OFF	-
15	Start count. bit 3	ON	OFF	-

Note:

Re bit 00:

State to display the single initialization after POWER ON.

Re bit 01:

State in which the automatic restart function waits for faults (initial state).

Re bit 02:

General display that a fault has been identified and that the restart or acknowledgement has been initiated.

Re bit 03:

Displays the acknowledge command within the "acknowledge alarms" state (bit 4 = 1). For bit 5 = 1 or bit 6 = 1, the acknowledge command is continually displayed.

Re bit 04:

State in which the faults that are present are acknowledged. The state is exited again after successful acknowledgement. A change is only made into the next state if it is signaled that a fault is no longer present after an acknowledgement command (bit 3 = 1).

Re bit 05:

State in which the drive is automatically powered up (only for p1210 = 4, 6).

Re bit 06:

State in which the system waits after having been powered up, to the end of the start attempt (to the end of the magnetizing process).

For p1210 = 1, this signal is directly set after the faults have been successfully acknowledged.

Re bit 07:

State which is assumed after a fault occurs within the automatic restart function. This is only reset after acknowledging the fault and withdrawing the power-on command.

Re bit 10:

When the automatic restart function is active, r1214.7 is displayed, otherwise the active fault r2139.3.

Re bits 12 ... 15:

Actual state of the start counter (binary coded).

Re bit 04 in addition:

For p1210 = 26, the system waits in this state until the switch-on command is available.

p1215**Motor holding brake configuration / Brake config**

Access level: 2

Calculated: -

Data type: Integer16

Can be changed: T

Scaling: -

Dyn. index: -

Units group: -

Unit selection: -

Func. diagram: 2701

Min

Max

Factory setting

0

3

0

Description:

Sets the holding brake configuration.

Value:

- 0: No motor holding brake available
- 1: Motor holding brake acc. to sequence control
- 2: Motor holding brake always open
- 3: Motor holding brake like sequence control connection via BICO

Dependency:

Refer to: p1216, p1217, p1226, p1227, p1228

Caution:

For the setting p1215 = 0, if a brake is used, it remains closed. If the motor moves, this will destroy the brake.


Notice:

If p1215 was set to 1 or if p1215 was set to 3, then when the pulses are suppressed, the brake is closed even if the motor is still rotating. Pulse suppression can either be caused by a 0 signal at p0844, p0845 or p0852 or as a result of a fault with OFF2 response. If this is not desirable (e.g. for a flying restart), then the brake can be kept open using a 1 signal at p0855.

Note:

If a holding brake integrated in the motor is used, then it is not permissible that p1215 is set to 3. If an external motor holding brake is being used, then p1215 should be set to 3 and r0899.12 should be interconnected as control signal.

The parameter can only be set to zero when the pulses are inhibited.

p1216	Motor holding brake opening time / Brake t_{open}		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2701
	Min 0 [ms]	Max 10000 [ms]	Factory setting 100 [ms]
Description:	Sets the time to open the motor holding brake. After the holding brake has been controlled (opened), the speed setpoint remains at zero for this time. After this, the speed setpoint is enabled.		
Dependency:	Refer to: p1215, p1217		
Note:	For a motor with DRIVE-CLiQ and integrated brake, for p0300 = 10000, this time is pre-assigned the value saved in the motor.		
p1217	Motor holding brake closing time / Brake t_{close}		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2701
	Min 0 [ms]	Max 10000 [ms]	Factory setting 100 [ms]
Description:	Sets the time to apply the motor holding brake. After OFF1 or OFF3 and the controlling (closing) of the holding brake, the drive remains stationary under closed-loop control for this time with a speed setpoint of zero. The pulses are suppressed when the time expires.		
Dependency:	Refer to: p1215, p1216		
Notice:	If the selected closing time is too short with respect to the actual closing time of the brake, then the load can sag. If the closing time is selected to be too long with respect to the actual closing time of the brake, the control works against the brake and therefore reduces its lifetime.		
Note:	For a motor with DRIVE-CLiQ and integrated brake, for p0300 = 10000, this time is pre-assigned the value saved in the motor.		
p1226[0...n]	Threshold for zero speed detection / n_standst n_thresh		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 2701
	Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 20.00 [rpm]
Description:	Sets the speed threshold for the standstill identification. Acts on the actual value and setpoint monitoring. When braking with OFF1 or OFF3, when the threshold is undershot, standstill is identified.		
Dependency:	Refer to: p1227		
Caution:	For closed-loop speed and torque control without encoder, the following applies: If p1226 is set to values under approx. 1 % of the rated motor speed, then the model switchover limits of the vector control must be increased in order to guarantee reliable shutdown (see p1755, p1750 bit 7).		
			
Note:	Standstill is identified in the following cases: - the speed actual value falls below the speed threshold in p1226 and the time started after this in p1228 has expired. - the speed setpoint falls below the speed threshold in p1226 and the time started after this in p1227 has expired. The actual value sensing is subject to measuring noise. For this reason, standstill cannot be detected if the speed threshold is too low.		

p1227	Zero speed detection monitoring time / n_standst t_monit		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2701
	Min 0.000 [s]	Max 300.000 [s]	Factory setting 300.000 [s]
Description:	Sets the monitoring time for the standstill identification. When braking with OFF1 or OFF3, standstill is identified after this time has expired, after the setpoint speed has fallen below p1226 (also refer to p1145).		
Dependency:	The parameter is pre-assigned depending on the size of the power unit. Refer to: p1226		
Notice:	For p1145 > 0.0 (RFG tracking) the setpoint is not equal to zero dependent on the selected value. This can therefore cause the monitoring time in p1227 to be exceeded. In this case, for a driven motor, the pulses are not suppressed.		
Note:	Standstill is identified in the following cases: - the speed actual value falls below the speed threshold in p1226 and the time started after this in p1228 has expired. - the speed setpoint falls below the speed threshold in p1226 and the time started after this in p1227 has expired. For p1227 = 300.000 s, the following applies: Monitoring is de-activated. For p1227 = 0.000 s, the following applies: With OFF1 or OFF3 and a ramp-down time = 0, the pulses are immediately suppressed and the motor "coasts" down. Once the Control Unit has been booted up for the first time or if the factory settings have been defined accordingly, the parameter is defined in accordance with the power unit.		
p1228	Pulse suppression delay time / Pulse suppr t_del		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2701
	Min 0.000 [s]	Max 299.000 [s]	Factory setting 0.010 [s]
Description:	Sets the delay time for pulse suppression. After OFF1 or OFF3, the pulses are canceled, if at least one of the following conditions is fulfilled: - the speed actual value falls below the threshold in p1226 and the time started after this in p1228 has expired. - the speed setpoint falls below the threshold in p1226 and the time started after this in p1227 has expired.		
Dependency:	Refer to: p1226, p1227		
Notice:	When the motor holding brake is activated, pulse cancellation is additionally delayed by the brake closing time (p1217).		
p1230[0...n]	BI: DC braking activation / DC brake act		
	Access level: 2	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 7017
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to activate DC braking.		
Dependency:	Refer to: p1231, p1232, p1233, p1234, r1239		
Note:	1 signal: DC braking activated. 0 signal: DC braking de-activated.		

p1231[0...n] DC braking configuration / DCBRK config			
Access level: 2	Calculated: -	Data type: Integer16	
Can be changed: U, T	Scaling: -	Dyn. index: MDS, p0130	
Units group: -	Unit selection: -	Func. diagram: 7014, 7016, 7017	
Min 0	Max 14	Factory setting 0	
Description:	Setting to activate DC braking.		
Value:	0: No function 4: DC braking 5: DC braking for OFF1/OFF3 14: DC braking below starting speed		
Dependency:	Refer to: p0300, p1232, p1233, p1234, r1239		
Note:	<p>The function can only be used for induction motors (p0300 = 1). Re p1231 = 4: The function is activated as soon as the activation criterion is fulfilled. - the function can be superseded by an OFF2 response. Activation criterion (one of the following criteria is fulfilled): - binector input p1230 = 1 signal (DC braking activation, depending on the operating mode). - the drive is not in the state "S4: Operation" or in "S5x". - the internal pulse enable is missing (r0046.19 = 0). DC braking can only be withdrawn (p1231 = 0) if it is not being used as a fault response in p2101. Re p1231 = 5: DC braking is activated if the OFF1 or OFF3 command is present. Binector input p1230 is ineffective. If the drive speed still lies above the speed threshold p1234, then initially, the drive is ramped-down to this threshold, demagnetized (see p0347) and is then switched into DC braking for the time set in p1233. After this, the drive is switched-off. If, at OFF1, the drive speed is below p1234, then it is immediately demagnetized and switched into DC braking. A change is made into normal operation if the OFF1 command is withdrawn prematurely. Flying restart must be activated if the motor is still rotating. DC braking by means of fault response continues to be possible. Re p1231 = 14: In addition to the function for p1231 = 5, binector input p1230 is evaluated. DC braking is only automatically activated when the speed threshold p1234 is fallen below if at binector input p1230 = 1 signal. This is also the case, if no OFF command is present. After demagnetization and after the time in p1233 has expired, the drive changes back into normal operation or is switched-off (for OFF1/OFF3). If a 0 signal is applied to binector input p1230, for OFF1 and OFF3 no DC braking is executed. Note: DCBRK: DC Braking</p>		
p1232[0...n] DC braking braking current / DCBRK I_brake			
Access level: 2	Calculated: p0340 = 1	Data type: FloatingPoint32	
Can be changed: U, T	Scaling: -	Dyn. index: MDS, p0130	
Units group: -	Unit selection: -	Func. diagram: 7017	
Min 0.00 [Arms]	Max 10000.00 [Arms]	Factory setting 0.00 [Arms]	
Description:	Sets the braking current for DC braking.		
Dependency:	Refer to: p1230, p1231, p1233, p1234, r1239, p1345, p1346		
Note:	<p>A change to the braking current becomes effective the next time that DC braking is switched on. The value for p1232 is specified as an rms value in the 3-phase system. The magnitude of the braking current is the same as that of an identical output current at frequency zero (see r0067, r0068, p0640). The braking current is internally limited to r0067. For the current controller, the settings of parameters p1345 and p1346 (I_max limiting controller) are used.</p>		

p1233[0...n]	DC braking time / DCBRK time		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: MDS, p0130
	Units group: -	Unit selection: -	Func. diagram: 7017
	Min 0.0 [s]	Max 3600.0 [s]	Factory setting 1.0 [s]
Description:	Sets the DC braking time (as fault response).		
Dependency:	Refer to: p1230, p1231, p1232, p1234, r1239		
Note:	If a speed encoder is being used, DC braking is ended as soon as the drive falls below the standstill threshold (p1226).		

p1234[0...n]	Speed at the start of DC braking / DCBRK n_start		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: MDS, p0130
	Units group: -	Unit selection: -	Func. diagram: 7017
	Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 210000.00 [rpm]
Description:	Sets the starting speed for DC braking. If the actual speed falls below this threshold, then DC braking is activated.		
Dependency:	Refer to: p1230, p1231, p1232, p1233, r1239		

r1239.8...13	CO/BO: DC braking status word / DCBRK ZSW				
	Access level: 2	Calculated: -	Data type: Unsigned32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min -	Max -	Factory setting -		
Description:	Status word of the DC braking.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	08	DC braking active	Yes	No	7017
	10	DC braking ready	Yes	No	7017
	11	DC braking selected	Yes	No	-
	12	DC braking selection internally inhibited	Yes	No	-
	13	DC braking for OFF1/OFF3	Yes	No	-
Dependency:	Refer to: p1231, p1232, p1233, p1234				
Note:	Re bit 12, 13: Only effective for p1231 = 14.				

p1300[0...n]	Open-loop/closed-loop control operating mode / Op/cl-lp ctrl_mode		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: C(1), T	Scaling: -	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 1590, 1690, 5060, 6300
CU240D-2_PN_F	Min 0	Max 23	Factory setting 0
Description:	Sets the open and closed-loop control mode of a drive.		
Value:	0: U/f control with linear characteristic 1: U/f control with linear characteristic and FCC 2: U/f control with parabolic characteristic 3: U/f control with parameterizable characteristic 4: U/f control with linear characteristic and ECO 5: U/f control for drives requiring a precise freq. (e.g. textiles)		

- 6: U/f control for drives requiring a precise frequency and FCC
 7: U/f control for a parabolic characteristic and ECO
 19: U/f control with independent voltage setpoint
 20: Speed control (encoderless)
 21: Speed control (with encoder)
 22: Torque control (encoderless)
 23: Torque control (with encoder)

Dependency: Closed-loop speed or torque control (with encoder) cannot be selected if the encoder type is not entered (p0400). Operation with speed controller is not possible for permanent-magnet synchronous motors.

Refer to: p0300, p0311, p0400, p1501

Notice: Active slip compensation is required in the U/f control types with Eco mode (p1300 = 4, 7). The scaling of the slip compensation (p1335) should be set so that the slip is completely compensated (generally 100%).
 The Eco mode is only effective in steady-state operation and when the ramp-function generator is not bypassed. In the case of analog setpoints, if required the tolerance for ramp-up and ramp-down should be actively increased for the ramp-function generator using p1148 in order to reliably signal a steady-state condition.

Note: The closed-loop torque control can only be changed over in operation (p1300 = 20, 21) by selecting the closed-loop speed control (p1501). At the changeover, the setting of p1300 does not change. In this case, the actual state is displayed in r1407, bit 2 and bit 3.

p1300[0...n] Open-loop/closed-loop control operating mode / Op/cl-lp ctrl_mode

CU250D-2_DP_F	Access level: 2	Calculated: -	Data type: Integer16
CU250D-2_PN_F	Can be changed: C(1), T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1590, 1690, 5060, 6300

Min	Max	Factory setting
0	21	20

Description: Sets the open and closed-loop control mode of a drive.

Value:
 0: U/f control with linear characteristic
 1: U/f control with linear characteristic and FCC
 20: Speed control (encoderless)
 21: Speed control (with encoder)

Dependency: Closed-loop speed or torque control (with encoder) cannot be selected if the encoder type is not entered (p0400). Operation with speed controller is not possible for permanent-magnet synchronous motors.

Refer to: p0300, p0311, p0400, p1501

Notice: Active slip compensation is required in the U/f control types with Eco mode (p1300 = 4, 7). The scaling of the slip compensation (p1335) should be set so that the slip is completely compensated (generally 100%).
 The Eco mode is only effective in steady-state operation and when the ramp-function generator is not bypassed. In the case of analog setpoints, if required the tolerance for ramp-up and ramp-down should be actively increased for the ramp-function generator using p1148 in order to reliably signal a steady-state condition.

Note: The closed-loop torque control can only be changed over in operation (p1300 = 20, 21) by selecting the closed-loop speed control (p1501). At the changeover, the setting of p1300 does not change. In this case, the actual state is displayed in r1407, bit 2 and bit 3.

p1302[0...n] U/f control configuration / U/f config

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: -

Min	Max	Factory setting
-	-	0000 bin

Description: Sets the configuration for the U/f control.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	03	Motor holding brake with constant stop frequency	Yes	No	-

Note: Re bit 03:
 When the bit is set, when the drive stops, the starting frequency of the motor holding brake is also not fallen below when the actual slip frequency is less than the starting frequency.

p1310[0...n]	Voltage boost permanent / U_boost perm		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1690, 6300
	Min 0.0 [%]	Max 250.0 [%]	Factory setting 50.0 [%]
Description:	<p>Defines the voltage boost as a [%] referred to the rated motor current (p0305). The magnitude of the permanent voltage boost is reduced with increasing frequency so that at the rated motor frequency, the rated motor voltage is present. The magnitude of the boost in Volt at a frequency of zero is defined as follows: Voltage boost [V] = 1.732 x p0305 (rated motor current [A]) x r0395 (stator/primary section resistance [ohm]) x p1310 (permanent voltage boost [%]) / 100 % At low output frequencies, there is only a low output voltage in order to maintain the motor flux. However, the output voltage can be too low in order to achieve the following:</p> <ul style="list-style-type: none"> - magnetize the induction motor. - hold the load. - compensate for losses in the system. <p>This is the reason that the output voltage can be increased using p1310. The voltage boost can be used for both linear as well as square-law U/f characteristics.</p>		
Dependency:	<p>The current limit p0640 limits the boost. For vector control, the permanent voltage boost (p1310) has no effect as the drive converter automatically sets the optimum operating conditions. Refer to: p1300, p1311, p1312, r1315</p>		
Notice:	<p>The voltage boost increases the motor temperature (particularly at zero speed).</p>		
Note:	<p>The voltage boost is only effective for U/f control (p1300). The boost values are combined with one another if the permanent voltage boost (p1310) is used in conjunction with other boost parameters (acceleration boost (p1311), voltage boost for starting (p1312)). However, these parameters are assigned the following priorities: p1310 > p1311, p1312</p>		
p1311[0...n]	Voltage boost at acceleration / U_boost accelerate		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1690, 6300
	Min 0.0 [%]	Max 250.0 [%]	Factory setting 0.0 [%]
Description:	<p>p1311 only results in a voltage boost when accelerating and generates a supplementary torque to accelerate the load. The voltage boost becomes effective for a positive setpoint increase and disappears as soon as the setpoint has been reached. The build-up and withdrawal of the voltage boost are smoothed. The magnitude of the boost in Volt at a frequency of zero is defined as follows: Voltage boost [V] = 1.732 * p0305 (rated motor current [A]) x r0395 (stator/primary section resistance [ohm]) x p1311 (voltage boost when accelerating [%]) / 100 %</p>		
Dependency:	<p>The current limit p0640 limits the boost. Refer to: p1300, p1310, p1312, r1315</p>		
Notice:	<p>The voltage boost results in a higher motor temperature increase.</p>		
Note:	<p>The voltage boost when accelerating can improve the response to small, positive setpoint changes. Assigning priorities for the voltage boosts: refer to p1310</p>		

p1312[0...n]	Voltage boost when starting / U_boost starting		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1690, 6300
	Min 0.0 [%]	Max 250.0 [%]	Factory setting 0.0 [%]
Description:	Setting for an additional voltage boost when powering-up, however, only for the first acceleration phase. The voltage boost becomes effective for a positive setpoint increase and disappears as soon as the setpoint has been reached. The build-up and withdrawal of the voltage boost are smoothed.		
Dependency:	The current limit p0640 limits the boost. Refer to: p1300, p1310, p1311, r1315		
Notice:	The voltage boost results in a higher motor temperature increase.		
Note:	The voltage boost when accelerating can improve the response to small, positive setpoint changes. Assigning priorities for the voltage boosts: refer to p1310		
r1315	Voltage boost total / U_boost total		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 6300
	Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
Description:	Displays the total resulting voltage boost in volt. $r1315 = p1310 + p1311 + p1312$		
Dependency:	Refer to: p1310, p1311, p1312		
p1320[0...n]	U/f control programmable characteristic frequency 1 / Uf char f1		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6300
	Min 0.00 [Hz]	Max 3000.00 [Hz]	Factory setting 0.00 [Hz]
Description:	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the voltage of the first point along the characteristic.		
Dependency:	Selects the freely programmable characteristic using p1300 = 3. The following applies to the frequency values: $p1320 \leq p1322 \leq p1324 \leq p1326$. Otherwise, a standard characteristic is used that contains the rated motor operating point. Refer to: p1300, p1310, p1311, p1321, p1322, p1323, p1324, p1325, p1326, p1327		
Note:	Linear interpolation is carried out between the points 0 Hz/p1310, p1320/p1321 ... p1326/p1327. The voltage boost when accelerating (p1311) is also applied to the freely programmable U/f characteristic.		
p1321[0...n]	U/f control programmable characteristic voltage 1 / Uf char U1		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6300
	Min 0.0 [Vrms]	Max 10000.0 [Vrms]	Factory setting 0.0 [Vrms]
Description:	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the voltage of the first point along the characteristic.		
Dependency:	Selects the freely programmable characteristic using p1300 = 3. Refer to: p1310, p1311, p1320, p1322, p1323, p1324, p1325, p1326, p1327		

Note: Linear interpolation is carried out between the points 0 Hz/p1310, p1320/p1321 ... p1326/p1327.
The voltage boost when accelerating (p1311) is also applied to the freely programmable U/f characteristic.

p1322[0...n]	U/f control programmable characteristic frequency 2 / Uf char f2		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6300
	Min 0.00 [Hz]	Max 3000.00 [Hz]	Factory setting 0.00 [Hz]
Description:	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the voltage of the second point along the characteristic.		
Dependency:	The following applies to the frequency values: p1320 <= p1322 <= p1324 <= p1326. Otherwise, a standard characteristic is used that contains the rated motor operating point. Refer to: p1310, p1311, p1320, p1321, p1323, p1324, p1325, p1326, p1327		
p1323[0...n]	U/f control programmable characteristic voltage 2 / Uf char U2		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6300
	Min 0.0 [Vrms]	Max 10000.0 [Vrms]	Factory setting 0.0 [Vrms]
Description:	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the voltage of the second point along the characteristic.		
Dependency:	Refer to: p1310, p1311, p1320, p1321, p1322, p1324, p1325, p1326, p1327		
p1324[0...n]	U/f control programmable characteristic frequency 3 / Uf char f3		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6300
	Min 0.00 [Hz]	Max 3000.00 [Hz]	Factory setting 0.00 [Hz]
Description:	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the voltage of the third point along the characteristic.		
Dependency:	The following applies to the frequency values: p1320 <= p1322 <= p1324 <= p1326. Otherwise, a standard characteristic is used that contains the rated motor operating point. Refer to: p1310, p1311, p1320, p1321, p1322, p1323, p1325, p1326, p1327		
p1325[0...n]	U/f control programmable characteristic voltage 3 / Uf char U3		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6300
	Min 0.0 [Vrms]	Max 10000.0 [Vrms]	Factory setting 0.0 [Vrms]
Description:	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the voltage of the third point along the characteristic.		
Dependency:	Refer to: p1310, p1311, p1320, p1321, p1322, p1323, p1324, p1326, p1327		

p1326[0...n]	U/f control programmable characteristic frequency 4 / Uf char f4		
	Access level: 3	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6300
	Min 0.00 [Hz]	Max 10000.00 [Hz]	Factory setting 0.00 [Hz]
Description:	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the frequency of the fourth point along the characteristic.		
Dependency:	Selects the freely programmable characteristic using p1300 = 3. The following applies for the frequency values: p1320 <= p1322 <= p1324 <= p1326 Otherwise, a standard characteristic is used that contains the rated motor operating point. Refer to: p1310, p1311, p1320, p1321, p1322, p1323, p1324, p1325, p1327		
Note:	Linear interpolation is carried out between the points 0 Hz/p1310, p1320/p1321 ... p1326/p1327. For output frequencies above p1326, the characteristic is extrapolated with the gradient between the characteristic points p1324/p1325 and p1326/p1327. The voltage boost when accelerating (p1311) is also applied to the freely programmable U/f characteristic.		
p1327[0...n]	U/f control programmable characteristic voltage 4 / Uf char U4		
	Access level: 3	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6300
	Min 0.0 [Vrms]	Max 10000.0 [Vrms]	Factory setting 0.0 [Vrms]
Description:	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the voltage of the fourth point along the characteristic.		
Dependency:	Selects the freely programmable characteristic using p1300 = 3. Refer to: p1310, p1311, p1320, p1321, p1322, p1323, p1324, p1325, p1326		
Note:	Linear interpolation is carried out between the points 0 Hz/p1310, p1320/p1321 ... p1326/p1327. The voltage boost when accelerating (p1311) is also applied to the freely programmable U/f characteristic.		
p1330[0...n]	CI: U/f control independent voltage setpoint / Uf U_set independ.		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2001	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 6300
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the voltage setpoint for U/f control with an independent voltage setpoint (p1300 = 19).		
Dependency:	Selects the U/f control with independent voltage setpoint via p1300 = 19. Refer to: p1300		
p1333[0...n]	U/f control FCC starting frequency / Uf FCC f_start		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6300
	Min 0.00 [Hz]	Max 3000.00 [Hz]	Factory setting 0.00 [Hz]
Description:	Sets the starting frequency at which FCC (Flux Current Control) is activated.		
Dependency:	The correct operating mode must be set (p1300 = 1, 6).		

Warning: An excessively low value can result in instability.



Note: For p1333 = 0 Hz, the FCC starting frequency is automatically set to 6 % of the rated motor frequency.

p1334[0...n]	U/f control slip compensation starting frequency / Slip comp start		
Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32	
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180	
Units group: -	Unit selection: -	Func. diagram: 6310	
Min 0.00 [Hz]	Max 3000.00 [Hz]	Factory setting 0.00 [Hz]	

Description: Sets the starting frequency of the slip compensation.

Note: For p1334 = 0, the starting frequency of the slip compensation is automatically set to 6 % of the rated motor frequency.

p1335[0...n]	Slip compensation scaling / Slip comp scal		
Access level: 3	Calculated: -	Data type: FloatingPoint32	
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180	
Units group: -	Unit selection: -	Func. diagram: 1690, 6310	
Min 0.0 [%]	Max 600.0 [%]	Factory setting 0.0 [%]	

Description: Sets the setpoint for slip compensation in [%] referred to r0330 (motor rated slip).

p1335 = 0.0 %: Slip compensation de-activated.

p1335 = 100.0 %: The slip is completely compensated.

Dependency: Prerequisite for a precise slip compensation for p1335 = 100 % are the precise motor parameters (p0350 ... p0360). If the parameters are not precisely known, a precise compensation can be achieved by varying p1335.

For U/f control types with Eco optimization (4 and 7), the slip compensation must be activated in order to guarantee correct operation.

Note: The purpose of slip compensation is to maintain a constant motor speed regardless of the applied load. The fact that the motor speed decreases with increasing load is a typical characteristic of induction motors.

For synchronous motors, this effect does not occur and the parameter has no effect in this case.

For the open-loop control modes p1300 = 5 and 6 (textile sector), the slip compensation is internally disabled in order to be able to precisely set the output frequency.

If p1335 is changed during commissioning (p0010 > 0), then it is possible that the old value will no longer be able to be set. The reason for this is that the dynamic limits of p1335 have been changed by a parameter that was set when the drive was commissioned (e.g. p0300).

p1336[0...n]	Slip compensation limit value / Slip comp lim val		
Access level: 3	Calculated: -	Data type: FloatingPoint32	
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180	
Units group: -	Unit selection: -	Func. diagram: 6310	
Min 0.00 [%]	Max 600.00 [%]	Factory setting 250.00 [%]	

Description: Sets the limit value for slip compensation in [%] referred to r0330 (motor rated slip).

r1337	CO: Actual slip compensation / Slip comp act val		
Access level: 3	Calculated: -	Data type: FloatingPoint32	
Can be changed: -	Scaling: PERCENT	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: 6310	
Min - [%]	Max - [%]	Factory setting - [%]	

Description: Displays the actual compensated slip [%] referred to r0330 (rated motor slip).

Dependency: p1335 > 0 %: Slip compensation active.
Refer to: p1335

p1338[0...n]	U/f mode resonance damping gain / Uf Res_damp gain		
Access level: 3	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32	
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180	
Units group: -	Unit selection: -	Func. diagram: 1690, 6310	
Min 0.00	Max 100.00	Factory setting 0.00	

Description: Sets the gain for resonance damping for U/f control.

Dependency: Refer to: p1300, p1339, p1349

Note: The resonance damping function dampens active current oscillations that frequency occur under no-load conditions.

The resonance damping is active in a range from approximately 6 % of the rated motor frequency (p0310). The shutoff frequency is determined by p1349.

For the open-loop control modes p1300 = 5 and 6 (textile sectors), the resonance damping is internally disabled in order that the output frequency can be precisely set.

p1339[0...n]	U/f mode resonance damping filter time constant / Uf Res_damp T		
Access level: 4	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32	
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180	
Units group: -	Unit selection: -	Func. diagram: 6310	
Min 1.00 [ms]	Max 1000.00 [ms]	Factory setting 20.00 [ms]	

Description: Sets the filter time constant for resonance damping for U/f control.

Dependency: Refer to: p1300, p1338, p1349

p1340[0...n]	I_max frequency controller proportional gain / I_max_ctrl Kp		
Access level: 3	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32	
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180	
Units group: -	Unit selection: -	Func. diagram: 1690	
Min 0.000	Max 0.500	Factory setting 0.000	

Description: Sets the proportional gain of the I_max frequency controller.

The I_max controller reduces the drive converter output current if the maximum current (r0067) is exceeded.

In the U/f operating modes (p1300) for the I_max control, one controller is used that acts on the output frequency and one controller that acts on the output voltage. The frequency controller reduces the current by decreasing the converter output frequency. The frequency is reduced down to a minimum value (equaling twice rated slip). If the overcurrent condition cannot be successfully resolved using this measure, then the drive converter output voltage is reduced using the I_max voltage controller. Once the overcurrent condition has been resolved, the drive is accelerated along the ramp set in p1120 (ramp-up time).

Dependency: In the U/f modes (p1300) for textile applications and for external voltage setpoints, only the I_max voltage controller is used.

Notice: When de-activating the I_max controller, the following must be carefully observed:

When the maximum current (r0067) is exceeded, the output current is no longer reduced, however, overcurrent alarm messages are generated. The drive is shut down if the overcurrent limit (r0209) is exceeded.

Note: The I_max limiting controller becomes ineffective if the ramp-function generator is de-activated with p1122 = 1.
p1341 = 0: I_max frequency controller de-activated and I_max voltage controller activated over the complete speed range.

p1341[0...n]	I_max frequency controller integral time / I_max_ctrl Tn		
	Access level: 3	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1690
	Min 0.000 [s]	Max 50.000 [s]	Factory setting 0.300 [s]
Description:	Sets the integral time for the I_max frequency controller.		
Dependency:	Refer to: p1340		
Note:	When p1341 = 0, the current limiting controller influencing the frequency is de-activated and only the current limiting controller influencing the output voltage remains active (p1345, p1346). In the case of power units with regenerative feedback (PM250, PM260), current limitation control for a regenerative load is always implemented by influencing the frequency. This current limiting function is de-activated with p1340 = p1341 = 0.		
r1343	CO: I_max controller frequency output / I_max_ctrl f_outp		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 1690
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the effective frequency limit.		
Dependency:	Refer to: p1340		
r1344	I_max controller voltage output / I_max_ctrl U_outp		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: 5_1	Unit selection: p0505	Func. diagram: 1690
	Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
Description:	Displays the amount by which the converter output voltage is reduced.		
Dependency:	Refer to: p1340		
p1345[0...n]	I_max voltage controller proportional gain / I_max_U_ctrl Kp		
	Access level: 3	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1690
	Min 0.000	Max 100000.000	Factory setting 0.000
Description:	Sets the proportional gain for the I_max voltage controller.		
Dependency:	Refer to: p1340		
Note:	The controller settings are also used in the current controller of the DC braking (refer to p1232).		
p1346[0...n]	I_max voltage controller integral time / I_max_U_ctrl Tn		
	Access level: 3	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1690
	Min 0.000 [s]	Max 50.000 [s]	Factory setting 0.030 [s]
Description:	Sets the integral time for the I_max voltage controller.		
Dependency:	Refer to: p1340		

Note: The controller settings are also used in the current controller of the DC braking (refer to p1232).
For p1346 = 0, the following applies:
The integral time of the I_max voltage controller is de-activated.

r1348	CO: U/f control Eco factor actual value / U/f Eco fac act v		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: PERCENT	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 6300
	Min - [%]	Max - [%]	Factory setting - [%]

Description: Displays the economic factor determined for optimizing motor consumption.

Dependency: Refer to: p1335

Note: The value is only determined for operating modes with Economic (p1300 = 4, 7).

p1349[0...n]	U/f mode resonance damping maximum frequency / Uf res_damp f_max		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6310
	Min 0.00 [Hz]	Max 3000.00 [Hz]	Factory setting 0.00 [Hz]

Description: Sets the maximum output frequency for resonance damping for U/f control.
Resonance damping is inactive above this output frequency.

Dependency: Refer to: p1338, p1339

Note: For p1349 = 0, the changeover limit is automatically set to 95 % of the rated motor frequency - however, to a max. of 45 Hz.

p1350[0...n]	Soft starting / Soft starting		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1690
	Min 0	Max 1	Factory setting 0

Description: Sets whether the voltage is continuously increased during the magnetizing phase (p1350 = 1, On) or whether it jumps directly to the voltage boost (p1350 = 0, Off).

Value:
0: OFF
1: ON

Note: The settings for this parameter have the following advantages and disadvantages:
0 = off (jump directly to voltage boost)
Advantage: Flux is established quickly -> torque is quickly available
Disadvantage: The motor can move while it is being magnetized
1 = on (voltage is continually established)
Advantage: The motor is unlikely to rotate
Disadvantage: The flux is established slower -> torque is available later

p1351[0...n]	CO: Motor holding brake starting frequency / Brake f_start		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6310
	Min -300.00 [%]	Max 300.00 [%]	Factory setting 0.00 [%]

Description: Sets the frequency setting value at the slip compensation output for starting up with motor holding brake.

Dependency: When setting p1351 > 0, then slip compensation is automatically activated (p1335 = 100 %).
Refer to: p1302, p1352

Notice: A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.

Note: Connected with p1352 a value of 100% corresponds to the motor rated slip (r0330).

p1352[0...n]	CI: Motor holding brake starting frequency signal source / Brake f_start		
Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32	
Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170	
Units group: -	Unit selection: -	Func. diagram: 6310	
Min	Max	Factory setting	
-	-	1351[0]	

Description: Sets the signal source for the frequency setting value at the slip compensation output for starting up with motor holding brake.

Dependency: Refer to: p1216

Note: A value of 100% corresponds to the motor rated slip (r0330).

The setting of the starting frequency begins after magnetizing (see p0346, r0056.4) and ends once the brake opening time (p1216) has elapsed and the starting frequency (p1334) has been reached.

A setting value of zero means that no setting procedure will take place.

p1400[0...n]	Speed control configuration / n_ctrl config		
Access level: 3	Calculated: -	Data type: Unsigned32	
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180	
Units group: -	Unit selection: -	Func. diagram: 6490	
Min	Max	Factory setting	
-	-	1000 0000 0010 0001 bin	

Description: Sets the configuration for the closed-loop speed control.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Automatic Kp/Tn adaptation active	Yes	No	6040
	01	Sensorless vector control freeze I comp	Yes	No	6040
	05	Kp/Tn adaptation active	Yes	No	6040
	06	Free Tn adaptation active	Yes	No	6050
	14	Torque pre-control	Always active	For n_ctrl enab	6060
	15	Sensorless vector control speed pre-control	Yes	No	6030

Note: Re bit 01:

When the bit is set, the I component of the speed controller is kept when changing into the open-loop controlled mode.

p1401[0...n]	Flux control configuration / Flux ctrl config		
Access level: 4	Calculated: -	Data type: Unsigned16	
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180	
Units group: -	Unit selection: -	Func. diagram: 6491	
Min	Max	Factory setting	
-	-	0000 0110 bin	

Description: Sets the configuration for flux setpoint control

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Flux setpoint soft starting active	Yes	No	6722
	01	Flux setpoint differentiation active	Yes	No	6723
	02	Flux build-up control active	Yes	No	6722, 6723
	06	Quick magnetizing	Yes	No	6722
	07	Pre-control speed limitation	Yes	No	6640

Note: Re bit 00 (not for permanent-magnet synchronous motors):

Initially, the flux is only established with a low rate of rise when magnetizing the induction motor. The flux setpoint p1570 is reached again at the end of the magnetizing time p0346.

Re bit 01 (not for permanent-magnet synchronous motors):

Initially, the flux is only established with a low rate of rise when magnetizing the induction motor. The flux setpoint p1570 is reached again at the end of the magnetizing time p0346. When quick magnetizing (p1401.6 = 1) is selected, soft starting is internally de-activated and alarm A07416 is displayed.

The flux differentiation can be switched out if a significant ripple occurs in the field-generating current setpoint (r0075) when entering the field weakening range. However, this is not suitable for fast acceleration operations because then, the flux decays more slowly and the voltage limiting responds.

Re bit 02 (not for permanent-magnet synchronous motors):

The flux build-up control operates during the magnetizing phase p0346 of the induction motor. If it is switched out, a constant current setpoint is injected and the flux is built up corresponding to the rotor time constant. When quick magnetizing (p1401.6 = 1) is selected and when flux build-up control is de-energized alarm A07416 is displayed.

Re bit 06 (not for induction motors):

Magnetizing is performed with maximum current ($0.9 * r0067$). With active identification of the stator resistance (see p0621) quick magnetizing is internally de-activated and alarm A07416 is displayed. During a flying restart of a rotating motor (see p1200) no quick magnetizing takes place.

Re bit 07:

if the speed of the drive exceeds the effective speed limit of the speed limiting controller, the torque limit is reduced linearly to zero as the deviation becomes greater. This reduces the integral component of the speed controller and, in turn, the overshoot during load shedding (see also F07901 and p2162).

p1402[0...n]	Closed-loop current control and motor model configuration / I_ctrl config			
Access level: 4	Calculated: p0340 = 1,3	Data type: Unsigned16		
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180		
Units group: -	Unit selection: -	Func. diagram: -		
Min	Max	Factory setting		
-	-	0000 bin		

Description: Sets the configuration for the closed-loop control and the motor model.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	02	Current controller adaptation active	Yes	No	-

r1406.4...15	CO/BO: Control word speed controller / STW n_ctrl			
Access level: 3	Calculated: -	Data type: Unsigned16		
Can be changed: -	Scaling: -	Dyn. index: -		
Units group: -	Unit selection: -	Func. diagram: -		
Min	Max	Factory setting		
-	-	-		

Description: Displays the control word of the speed controller.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	04	Hold speed controller I component	Yes	No	6040
	05	Set speed controller I component	Yes	No	6040
	08	Travel to fixed stop	Yes	No	8012
	11	Droop enable	Yes	No	6030
	12	Torque control active	Yes	No	6060
	15	Set speed adaptation controller I component	Yes	No	-

r1407.0...17	CO/BO: Status word speed controller / ZSW n_ctrl			
Access level: 3	Calculated: -	Data type: Unsigned32		
Can be changed: -	Scaling: -	Dyn. index: -		
Units group: -	Unit selection: -	Func. diagram: 1530, 2522		
Min	Max	Factory setting		
-	-	-		

Description: Displays the status word of the speed controller.

List of parameters

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	U/f control active	Yes	No	-
	01	Encoderless operation active	Yes	No	-
	02	Torque control active	Yes	No	6030, 6060, 8010
	03	Speed control active	Yes	No	6040
	05	Speed controller I component frozen	Yes	No	6040
	06	Speed controller I component set	Yes	No	6040
	07	Torque limit reached	Yes	No	6060
	08	Upper torque limit active	Yes	No	6060
	09	Lower torque limit active	Yes	No	6060
	10	Droop enabled	Yes	No	6030
	11	Speed setpoint limited	Yes	No	6030
	12	Ramp-function generator set	Yes	No	-
	13	Encoderless operation due to a fault	Yes	No	-
	14	I/f control active	Yes	No	-
	15	Torque limit reached (without pre-control)	Yes	No	6060
	16	Encoderless open-loop controlled operation not active	Yes	No	-
	17	Speed limiting control active	Yes	No	6640

Note: Re bit 16 = 1:
Encoderless open-loop controlled operation not active.
Re bit 16 = 0:
Encoderless open-loop controlled operation active.

r1408.0...14	CO/BO: Status word current controller / ZSW I_ctrl	
Access level: 4	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 2530
Min	Max	Factory setting
-	-	-

Description: Displays the current controller status word.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Current controller act	Active	Not active	-
	01	Id control I component limiting	Active	Not active	6714
	03	Voltage limiting	Active	Not active	6714
	10	Speed adaptation limiting	Active	Not active	-
	11	Speed adaptation speed deviation	Out tolerance	In tolerance	6719
	12	Motor stalled	Yes	No	-
	13	Separately excited synchronous motor is excited	Yes	No	-
	14	Current model FEM: magnetizing excitation current limited to 0	Yes	No	-

p1416[0...n]	Speed setpoint filter 1 time constant / n_set_filt 1 T	
Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: 1700, 6030
Min	Max	Factory setting
0.00 [ms]	5000.00 [ms]	0.00 [ms]

Description: Sets the time constant for the speed setpoint filter 1 (PT1).

r1438	CO: Speed controller speed setpoint / n_ctrl n_set		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 1550, 1590, 1700, 5030, 5040, 5042, 5210, 5300, 5620, 6031, 6040
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Display and connector output of the speed setpoint after setpoint limiting for the P component of the speed controller. For U/f operation, the value that is displayed is of no relevance.		
Dependency:	Refer to: r1439		
Note:	In the standard state (the reference model is de-activated), r1438 = r1439.		
r1439	Speed setpoint I component / n_set I_comp		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 5030, 5040, 6031
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the speed setpoint for the I component of the speed controller (output of the reference model after the setpoint limiting).		
Dependency:	Refer to: r1438		
Note:	In the standard state (the reference model is de-activated), r1438 = r1439.		
p1441[0...n]	Actual speed smoothing time / n_act T_smooth		
	Access level: 3	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 4715
	Min 0.00 [ms]	Max 50.00 [ms]	Factory setting 0.00 [ms]
Description:	Sets the smoothing time constant (PT1) for the speed actual value.		
Dependency:	Refer to: r0063		
Note:	The speed actual value should be smoothed for encoders with a low pulse number or for resolvers. After this parameter has been changed, we recommend that the speed controller is adapted and/or the speed controller settings checked Kp (p1460) and Tn (p1462).		
p1442[0...n]	Speed controller speed actual value smoothing time / n_ctr n_act T_smth		
	Access level: 2	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1700, 6040
	Min 0.00 [ms]	Max 32000.00 [ms]	Factory setting 4.00 [ms]
Description:	Sets the smoothing time for the actual speed value of the speed controller for closed-loop control with encoder.		
Note:	The smoothing must be increased if there is gear backlash. For longer smoothing times, the integral time of the speed controller must also be increased (e.g. using p0340 = 4).		

r1444	Speed controller speed setpoint steady-state (static) / n_ctrl n_set stat		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 5030
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the sum of all speed setpoints that are present. The following sources are available for the displayed setpoint: - setpoint at the ramp-function generator input (r1119). - speed setpoint 1 (p1155). - speed setpoint 2 (p1160). - speed setpoint for the speed pre-control (p1430). - setpoint from DSC (for DSC active). - setpoint via PC (for master control active).		
Dependency:	Refer to: r1119, p1155, p1160		
r1445	CO: Actual speed smoothed / n_act smooth		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 6040
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the actual smoothed actual speed for speed control.		
p1452[0...n]	Speed controller speed actual value smoothing time (SLVC) / n_C n_act T_s SLVC		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1700, 6040
	Min 0.00 [ms]	Max 32000.00 [ms]	Factory setting 10.00 [ms]
Description:	Sets the smoothing time for the actual speed of the speed controller for encoderless closed-loop speed control.		
Note:	The smoothing must be increased if there is gear backlash. For longer smoothing times, the integral time of the speed controller must also be increased (e.g. using p0340 = 4).		
r1454	CO: Speed controller system deviation I component / n_ctrl sys dev Tn		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 6040
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the system deviation of the I component of the speed controller.		
p1455[0...n]	CI: Speed controller P gain adaptation signal / n_ctr adapt_sig Kp		
	Access level: 4	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 6050
	Min -	Max -	Factory setting 0
Description:	Sets the source for the adaptation signal to additionally adapt the P gain of the speed controller.		
Dependency:	Refer to: p1456, p1457, p1458, p1459		


p1456[0...n]	Speed controller P gain adaptation lower starting point / n_ctrl AdaptKpLow		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6050
	Min 0.00 [%]	Max 400.00 [%]	Factory setting 0.00 [%]
Description:	Sets the lower starting point of the adaptation range for the additional adaptation of the P gain of the speed controller. The values are in % and refer to the set source of the adaptation signal.		
Dependency:	Refer to: p1455, p1457, p1458, p1459		
Note:	If the upper transition point p1457 of the speed controller adaptation is set to lower values than the lower transition p1456, then the controller gain below p1457 is adapted with p1459 and above p1456, with p1458.		
p1457[0...n]	Speed controller P gain adaptation upper starting point / n_ctrl AdaptKp up		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6050
	Min 0.00 [%]	Max 400.00 [%]	Factory setting 0.00 [%]
Description:	Sets the upper starting point of the adaptation range for the additional adaptation of the P gain of the speed controller. The values are in % and refer to the set source of the adaptation signal.		
Dependency:	Refer to: p1455, p1456, p1458, p1459		
Note:	If the upper transition point p1457 of the speed controller adaptation is set to lower values than the lower transition p1456, then the controller gain below p1457 is adapted with p1459 and above p1456, with p1458.		
p1458[0...n]	Adaptation factor lower / Adapt_factor lower		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6050
	Min 0.0 [%]	Max 200000.0 [%]	Factory setting 100.0 [%]
Description:	Sets the adaptation factor before the adaptation range (0 % ... p1456) to additionally adapt the P gain of the speed/velocity controller.		
Dependency:	Refer to: p1455, p1456, p1457, p1459		
Note:	If the upper transition point p1457 of the speed controller adaptation is set to lower values than the lower transition p1456, then the controller gain below p1457 is adapted with p1459 and above p1456, with p1458.		
p1459[0...n]	Adaptation factor upper / Adapt_factor upper		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6050
	Min 0.0 [%]	Max 200000.0 [%]	Factory setting 100.0 [%]
Description:	Sets the adaptation factor after the adaptation range (> p1457) to additionally adapt the P gain of the speed/velocity controller.		
Dependency:	Refer to: p1455, p1456, p1457, p1458		
Note:	If the upper transition point p1457 of the speed controller adaptation is set to lower values than the lower transition p1456, then the controller gain below p1457 is adapted with p1459 and above p1456, with p1458.		

p1460[0...n]	Speed controller P gain adaptation speed lower / n_ctrl Kp n lower		
	Access level: 2	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1700, 6040
	Min 0.000	Max 999999.000	Factory setting 0.300
Description:	Sets the P gain of the speed controller before the adaptation speed range (0 ... p1464). This value corresponds to the basic setting of the P gain of the speed controller without adaptation (p1461 = 100 %).		
Dependency:	Refer to: p1461, p1464, p1465		
p1461[0...n]	Speed controller Kp adaptation speed upper scaling / n_ctr Kp n up scal		
	Access level: 3	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6050
	Min 0.0 [%]	Max 200000.0 [%]	Factory setting 100.0 [%]
Description:	Sets the P gain of the speed controller for the upper adaptation speed range (> p1465). The entry is made referred to the P gain for the lower adaptation speed range of the speed controller (% referred to p1470).		
Dependency:	Refer to: p1460, p1464, p1465		
Note:	If the upper transition point p1465 of the speed controller adaptation is set to lower values than the lower transition point p1464, then the controller gain below p1465 is adapted with p1461. This means that an adaptation can be implemented for low speeds without having to change the controller parameters.		
p1462[0...n]	Speed controller integral time adaptation speed lower / n_ctrl Tn n lower		
	Access level: 2	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1700, 6040
	Min 0.00 [ms]	Max 100000.00 [ms]	Factory setting 20.00 [ms]
Description:	Sets the integration time of the speed controller before the adaptation speed range (0 ... p1464). This value corresponds to the basic setting of the integral time of the speed controller without adaptation (p1461 = 100 %).		
Dependency:	Refer to: p1463, p1464, p1465		
Note:	The integral component is stopped if the complete controller output or the sum of controller output and torque pre-control reach the torque limit.		
p1463[0...n]	Speed controller Tn adaptation speed upper scaling / n_ctr Tn n up scal		
	Access level: 3	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6050
	Min 0.0 [%]	Max 200000.0 [%]	Factory setting 100.0 [%]
Description:	Sets the integral time of the speed controller after the adaptation speed range (> p1465). The entry is made referred to the integral time for the lower adaptation speed range of the speed controller (% referred to p1472).		
Dependency:	Refer to: p1462, p1464, p1465		
Note:	If the upper transition point p1465 of the speed controller adaptation is set to lower values than the lower transition point p1464, then the controller integral time below p1465 is adapted with p1463. This means that an adaptation can be implemented for low speeds without having to change the controller parameters.		

p1464[0...n]	Speed controller adaptation speed lower / n_ctrl n lower		
	Access level: 3	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 6050
	Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 0.00 [rpm]
Description:	Sets the lower adaptation speed of the speed controller. No adaptation is effective below this speed.		
Dependency:	Refer to: p1460, p1461, p1462, p1463, p1465		
Note:	If the upper transition point p1465 of the speed controller adaptation is set to lower values than the lower transition point p1464, then the controller below p1465 is adapted with p1461 or p1463. This means that an adaptation can be implemented for low speeds without having to change the controller parameters.		
p1465[0...n]	Speed controller adaptation speed upper / n_ctrl n upper		
	Access level: 3	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 6050
	Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 210000.00 [rpm]
Description:	Sets the upper adaptation speed of the speed controller. No adaptation is effective above this speed. For P gain, p1470 x p1461 is effective. For the integral time, p1472 x p1463 is effective.		
Dependency:	Refer to: p1460, p1461, p1462, p1463, p1464		
Note:	If the upper transition point p1465 of the speed controller adaptation is set to lower values than the lower transition point p1464, then the controller below p1465 is adapted with p1461 or p1463. This means that an adaptation can be implemented for low speeds without having to change the controller parameters.		
p1466[0...n]	CI: Speed controller P-gain scaling / n_ctrl Kp scal		
	Access level: 4	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 6050
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for the scaling of the P gain of the speed controller. This also makes the effective P gain (including adaptations) scalable.		
r1468	CO: Speed controller P-gain effective / n_ctr Kp eff		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 6040
	Min -	Max -	Factory setting -
Description:	Displays the effective P gain of the speed controller.		
r1469	Speed controller integral time effective / n_ctr Tn eff		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 5040, 5042, 6040
	Min - [ms]	Max - [ms]	Factory setting - [ms]
Description:	Displays the effective integral time of the speed controller.		

p1470[0...n]	Speed controller encoderless operation P-gain / n_ctrl SLVC Kp		
	Access level: 2	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6040, 6050
	Min 0.000	Max 999999.000	Factory setting 0.300
Description:	Sets the P gain for encoderless operation for the speed controller.		
Note:	The product p0341 x p0342 is taken into account when automatically calculating the speed controller (p0340 = 1, 3, 4).		
p1472[0...n]	Speed controller encoderless operation integral time / n_ctrl SLVC Tn		
	Access level: 2	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6040, 6050
	Min 0.0 [ms]	Max 100000.0 [ms]	Factory setting 20.0 [ms]
Description:	Set the integral time for encoderless operation for the speed controller.		
Note:	The integral component is stopped if the complete controller output or the sum of controller output and torque pre-control reach the torque limit.		
p1475[0...n]	CI: Speed controller torque setting value for motor holding brake / n_ctrl M_sv MHB		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2003	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 6040
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the torque setting value when starting up with motor holding brake.		
Dependency:	The switching in of the torque setting value for the motor holding brake has a higher priority than the setting of the integrator value using p1477 and p1478.		
Note:	The setting of the integral output of the speed controller begins after magnetizing (see p0346, r0056 bit 4) and ends at the end of the brake control opening time p1216. A setting value of zero means that no setting procedure will take place. If p1351 is used as a signal source for the torque setting value, the percentage value is interpreted in relation to the rated torque (p2003).		
p1476[0...n]	BI: Speed controller hold integrator / n_ctrl integ stop		
	Access level: 4	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2520, 5040, 5042, 5210, 6040
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to hold the integrator for the speed controller.		

p1477[0...n]	BI: Speed controller set integrator value / n_ctrl integ set		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2520, 5040, 5042, 5210, 6040
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to set the integrator setting value (p1478).		
Dependency:	Refer to: p1478, p1479		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
p1478[0...n]	CI: Speed controller integrator setting value / n_ctr integ_setVal		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2003	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 6040
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the integrator setting value for the velocity controller. The signal to set this integrator setting value is interconnected via p1477.		
Dependency:	The setting value of the speed controller integrator is weighted with the scaling factor of the signal source in p1479. If p1478 is interconnected to the integral output of the speed controller (r1482), then after the magnetizing time (r0346) and if the speed controller is enabled, the integral component of the controller is set to the last value before the pulse inhibit. This value is set if no setting command (p1477) is interconnected or, at the instant that the pulses were inhibited, a setting command is available, which is not de-activated up to the next time that the pulses are inhibited. For sensorless vector control, in addition p1400.1 should be set to 1 so that when the drive is stopped, the integral component of the speed controller is not controlled down to zero. In order that when setting the integrator output, only the static torque is detected, we recommend that the accelerating torque is completely pre-controlled (e.g. p1496). If p1478 is interconnected to another output other than r1482, then after magnetizing and speed controller enable, the integral output is set once if the setting command is not interconnected (p1477 = 0). Refer to: p1477, p1479		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
p1479[0...n]	CI: Speed controller integrator setting value scaling / n_ctrl I_val scal		
	Access level: 4	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 6040
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for scaling the integrator setting value (p1478) of the speed controller.		
Dependency:	Refer to: p1477, p1478		
r1482	CO: Speed controller I torque output / n_ctrl I-M_outp		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2003	Dyn. index: -
	Units group: 7_1	Unit selection: p0505	Func. diagram: 5040, 5042, 5210, 6030, 6040
	Min - [Nm]	Max - [Nm]	Factory setting - [Nm]
Description:	Display and connector output for the torque setpoint at the output of the I speed controller.		

p1486[0...n]	Cl: Droop compensation torque / Droop M_comp		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2003	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 6030
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the compensation torque to be output within the droop calculation. This parameter should be interconnected with the torque setpoint of the drive (corresponding to the selection p1488), with which load equalization should be performed.		
p1487[0...n]	Droop compensation torque scaling / Droop M_comp scal		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6030
	Min -2000.0 [%]	Max 2000.0 [%]	Factory setting 100.0 [%]
Description:	Sets the scaling for the compensation torque within the droop calculation.		
p1488[0...n]	Droop input source / Droop input source		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6030
	Min 0	Max 3	Factory setting 0
Description:	Sets the source for droop feedback. With increasing torque, the speed setpoint is reduced (enabled using p1492), so that for mechanically coupled drives a load equalization (load compensation) is obtained. A load difference compensation is also possible, if p1486 is interconnected with the torque setpoint of the other drive.		
Value:	0: Droop feedback not connected 1: Droop from torque setpoint 2: Droop from speed controller output 3: Droop from integral output speed controller		
Dependency:	Refer to: p1486, p1487, p1489, r1490, p1492		
Caution:	For active acceleration precontrol of the speed controller (refer to p1496), it is not recommended that p1488 is set to 1, as this could result in positive coupling effects. Instead of this, as source of the droop feedback, the output signal of the speed controller should be used, which generally sets the load torque.		
			
p1489[0...n]	Droop feedback scaling / Droop scaling		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6030
	Min 0.000	Max 0.500	Factory setting 0.050
Description:	Sets the scaling for the droop feedback		
Dependency:	Refer to: p1486, p1487, p1488, r1490, p1492		
Note:	Example: A value of 0.05 means that for a torque equal to the rated motor torque, the rated motor speed is reduced by 5 %.		

r1490	CO: Droop feedback speed reduction / Droop n_reduction		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 6030
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the output signal of the droop calculation. The droop feedback result is subtracted from the speed setpoint when activated (p1492).		
Dependency:	Refer to: p1486, p1487, p1488, p1489, p1492		
p1492[0...n]	BI: Droop feedback enable / Droop enable		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2520, 6030
	Min -	Max -	Factory setting 0
Description:	Enables the droop to be applied to the speed/velocity setpoint.		
Dependency:	Refer to: p1486, p1487, p1488, p1489, r1490		
Note:	Even when not enabled, the droop speed is calculated but not subtracted from the setpoint speed. This makes it possible to subtract the result of this calculation from the speed of another drive.		
r1493	CO: Moment of inertia total / M_inertia total		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: 25_1	Unit selection: p0100	Func. diagram: 6031
	Min - [kgm ²]	Max - [kgm ²]	Factory setting - [kgm ²]
Description:	Displays the parameterized total moment of inertia ((p0341 * p0342) * p1496).		
p1496[0...n]	Acceleration pre-control scaling / a_prectrl scal		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1700, 6031
	Min 0.0 [%]	Max 10000.0 [%]	Factory setting 0.0 [%]
Description:	Sets the scaling for the acceleration pre-control of the speed/velocity controller.		
Dependency:	Refer to: p0341, p0342		
Warning:	The acceleration precontrol r1518 is kept at the old value if the ramp-function generator tracking (r1199.5) is active or the ramp-function generator output is set (r1199.3). This is used to avoid torque peaks. Depending on the application, it may therefore be necessary to disable the ramp-function generator tracking (p1145 = 0) or the acceleration precontrol (p1496 = 0).		
	The acceleration precontrol is set to zero, if the Vdc control is active (r0056.14/15).		
Note:	The parameter is set to 100% by the rotating measurement (refer to p1960).		
	The acceleration pre-control may not be used if the speed setpoint manifests significant ripple (e.g. analog setpoint) and the rounding-off in the speed ramp-function generator is disabled.		
	We also recommend that the pre-control mode is not used if there is gearbox backlash.		



p1499[0...n]	Accelerating for torque control scaling / a for M_ctrl scal		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6030
	Min 0.0 [%]	Max 400.0 [%]	Factory setting 100.0 [%]
Description:	Sets the scaling for the acceleration integrator at low speeds (only for encoderless torque control).		
Dependency:	Refer to: p0341, p0342		
p1500[0...n]	Torque setpoint selection / M_set sel		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: C(1), T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -
CU240D-2_PN_F			
	Min 0	Max 77	Factory setting 6
Description:	Sets the source for the torque setpoint. For single-digit values, the following applies: The value specifies the main setpoint. For double-digit values, the following applies: The left-hand digit specifies the supplementary setpoint, the right-hand digit the main setpoint. Example: Value = 26 --> The analog setpoint (2) supplies the supplementary setpoint. --> The fieldbus (6) supplies the main setpoint.		
Value:	0: No main setpoint 2: Analog setpoint 6: Fieldbus 7: Analog setpoint 2 20: Analog setpoint + no main setpoint 22: Analog setpoint + analog setpoint 26: Analog setpoint + fieldbus 27: Analog setpoint + analog setpoint 2 60: Fieldbus + no main setpoint 62: Fieldbus + analog setpoint 66: Fieldbus+fieldbus 67: Fieldbus + analog setpoint 2 70: Analog setpoint 2 + no main setpoint 72: Analog setpoint 2 + analog setpoint 76: Analog setpoint 2 + fieldbus 77: Analog setpoint 2 + analog setpoint 2		
Dependency:	When changing this parameter, the following settings are influenced: Refer to: p1503, p1511		
p1501[0...n]	BI: Change over between closed-loop speed/torque control / Changeov n/M_ctrl		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 1700, 2520, 5060, 6060
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for toggling between speed and torque control.		
Dependency:	The input connectors to enter the torque are provided using p1511, p1512 and p1513. Refer to: p1300		

- Caution:** If the closed-loop torque control is not activated (p1300) and a change is made to closed-loop torque control (p1501), OFF1 (p0840) does not have its own braking response but pulse suppression when standstill is detected (p1226, p1227).
- Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.
- Note:** 0 signal: Closed-loop speed control
1 signal: Closed-loop torque control

p1503[0...n]	CI: Torque setpoint / M_set		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2003	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 1700, 6060
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source for the torque setpoint for torque control.

Note: A change is made to closed-loop torque control if, in p1300, closed-loop torque control was selected or if the selection was made using the changeover source in p1501.
it is also possible to change over in operation using p1501.

r1508	CO: Torque setpoint before supplementary torque / M_set bef. M_suppl		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2003	Dyn. index: -
	Units group: 7_1	Unit selection: p0505	Func. diagram: 6030, 6060, 6722
	Min	Max	Factory setting
	- [Nm]	- [Nm]	- [Nm]

Description: Displays the torque setpoint before entering the supplementary torque.

For closed-loop speed control, r1508 corresponds to the speed controller output; for closed-loop torque control, r1508 corresponds to the torque setpoint of the signal source assigned in p1503.

p1511[0...n]	CI: Supplementary torque 1 / M_suppl 1		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2003	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 5060, 6060
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source for supplementary torque 1.


p1512[0...n]	CI: Supplementary torque 1 scaling / M_suppl 1 scal		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 5060, 6060
	Min	Max	Factory setting
	-	-	0


Description: Sets the signal source for scaling the supplementary torque 1.


p1513[0...n]	CI: Supplementary torque 2 / M_suppl 2		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2003	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 5060, 6060
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source for supplementary torque 2.

p1514[0...n]	Supplementary torque 2 scaling / M_suppl 2 scal		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1700, 6060
	Min -2000.0 [%]	Max 2000.0 [%]	Factory setting 100.0 [%]
Description:	Sets the scaling for supplementary torque 2.		
r1515	Supplementary torque total / M_suppl total		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2003	Dyn. index: -
	Units group: 7_1	Unit selection: p0505	Func. diagram: 5040, 5060
	Min - [Nm]	Max - [Nm]	Factory setting - [Nm]
Description:	Displays the total supplementary torque. The displayed value is the total of supplementary torque values 1 and 2 (p1511, p1512, p1513, p1514).		
r1516	CO: Supplementary torque and acceleration torque / M_suppl + M_accel		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2003	Dyn. index: -
	Units group: 7_1	Unit selection: p0505	Func. diagram: 6060
	Min - [Nm]	Max - [Nm]	Factory setting - [Nm]
Description:	Displays the total supplementary torque and the accelerating torque. The displayed value is the total of the smoothed supplementary torque and the accelerating torque (p1516 = p1518[1] + r1515).		
p1517[0...n]	Accelerating torque smoothing time constant / M_accel T_smooth		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6060
	Min 0.00 [ms]	Max 100.00 [ms]	Factory setting 4.00 [ms]
Description:	Sets the smoothing time constant of the accelerating torque.		
Note:	The acceleration pre-control is inhibited if the smoothing is set to the maximum value.		
r1518[0...1]	CO: Accelerating torque / M_accel		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2003	Dyn. index: -
	Units group: 7_1	Unit selection: p0505	Func. diagram: 6060
	Min - [Nm]	Max - [Nm]	Factory setting - [Nm]
Description:	Displays the accelerating torque for pre-control of the speed controller.		
Index:	[0] = Unsmoothed [1] = Smoothed		
Dependency:	Refer to: p0341, p0342, p1496		

p1520[0...n]	CO: Torque limit upper / M_max upper		
	Access level: 2	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2003	Dyn. index: DDS, p0180
	Units group: 7_1	Unit selection: p0505	Func. diagram: 1700, 6630
	Min -1000000.00 [Nm]	Max 2000000.00 [Nm]	Factory setting 0.00 [Nm]
Description:	Sets the fixed, upper torque limit.		
Dependency:	Refer to: p1521, p1522, p1523, r1538, r1539		
Danger:	Negative values when setting the upper torque limit (p1520 < 0) can result in the motor accelerating in an uncontrollable fashion.		
			
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
Note:	The torque limit is limited to 400% of the rated motor torque. When automatically calculating the motor/closed-loop control parameters (p0340), the torque limit is set to match the current limit (p0640).		

p1521[0...n]	CO: Torque limit lower / M_max lower		
	Access level: 2	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2003	Dyn. index: DDS, p0180
	Units group: 7_1	Unit selection: p0505	Func. diagram: 1700, 6630
	Min -20000000.00 [Nm]	Max 1000000.00 [Nm]	Factory setting 0.00 [Nm]
Description:	Sets the fixed, lower torque limit.		
Dependency:	Refer to: p1520, p1522, p1523		
Danger:	Positive values when setting the lower torque limit (p1521 > 0) can result in the motor accelerating in an uncontrollable fashion.		
			
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
Note:	The torque limit is limited to 400% of the rated motor torque. When automatically calculating the motor/closed-loop control parameters (p0340), the torque limit is set to match the current limit (p0640).		





p1522[0...n]	CI: Torque limit upper / M_max upper		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2003	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 6630
	Min -	Max -	Factory setting 1520[0]
Description:	Sets the signal source for the upper torque limit.		
Dependency:	Refer to: p1520, p1521, p1523		
Danger:	Negative values resulting from the signal source and scaling can cause the motor to accelerate in an uncontrolled manner.		
			

p1523[0...n]	CI: Torque limit lower / M_max lower		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2003	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 1700, 6630
	Min -	Max -	Factory setting 1521[0]
Description:	Sets the signal source for the lower torque limit.		
Dependency:	Refer to: p1520, p1521, p1522		

Danger:

Positive values resulting from the signal source and scaling can cause the motor to accelerate in an uncontrolled manner.


p1524[0...n]	CO: Torque limit upper/motoring scaling / M_max up/mot scal		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 5620, 5630
	Min -2000.0 [%]	Max 2000.0 [%]	Factory setting 100.0 [%]
Description:	Sets the scaling for the upper torque limit or the torque limit when motoring.		
Dependency:	p1400.4 = 0: upper/lower p1400.4 = 1: motoring / regenerating		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
Note:	This parameter can be freely interconnected. The value has the meaning stated above if it is interconnected from connector input p1528.		
p1525[0...n]	CO: Torque limit lower scaling / M_max lower scal		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6630
	Min -2000.0 [%]	Max 2000.0 [%]	Factory setting 100.0 [%]
Description:	Sets the scaling for the lower torque limit.		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
Note:	This parameter can be freely interconnected. The value has the meaning stated above if it is interconnected from connector input p1528.		
r1526	CO: Torque limit upper without offset / M_max up w/o offs		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2003	Dyn. index: -
	Units group: 7_1	Unit selection: p0505	Func. diagram: 6060, 6630, 6640
	Min - [Nm]	Max - [Nm]	Factory setting - [Nm]
Description:	Displays the upper torque limit of all torque limits without offset.		
Dependency:	Refer to: p1520, p1521, p1522, p1523, p1528, p1529		
r1527	CO: Torque limit lower without offset / M_max low w/o offs		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2003	Dyn. index: -
	Units group: 7_1	Unit selection: p0505	Func. diagram: 6060, 6630, 6640
	Min - [Nm]	Max - [Nm]	Factory setting - [Nm]
Description:	Displays the lower torque limit of all torque limits without offset.		
Dependency:	Refer to: p1520, p1521, p1522, p1523, p1528, p1529		

p1528[0...n]	Cl: Torque limit upper scaling / M_max upper scal		
CU240D-2_DP	Access level: 4	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 6630
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	1524[0]
Description:	Sets the signal source for the scaling of the upper torque limit in p1522.		
Danger:	For p1400.4 = 0 (torque limiting, upper/lower) the following applies: Negative values resulting from the signal source and scaling can cause the motor to accelerate in an uncontrolled manner.		
			
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
p1528[0...n]	Cl: Torque limit upper scaling / M_max upper scal		
CU250D-2_DP_F	Access level: 4	Calculated: -	Data type: U32 / FloatingPoint32
CU250D-2_PN_F	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 6630
	Min	Max	Factory setting
	-	-	2686[0]
Description:	Sets the signal source for the scaling of the upper torque limit in p1522.		
Danger:	For p1400.4 = 0 (torque limiting, upper/lower) the following applies: Negative values resulting from the signal source and scaling can cause the motor to accelerate in an uncontrolled manner.		
			
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
p1529[0...n]	Cl: Torque limit lower scaling / M_max lower scal		
CU240D-2_DP	Access level: 4	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 6630
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	1525[0]
Description:	Sets the signal source for the scaling of the lower torque limit in p1523.		
Danger:	For p1400.4 = 0 (torque limiting, upper/lower) the following applies: Positive values resulting from the signal source and scaling can cause the motor to accelerate in an uncontrolled manner.		
			
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
p1529[0...n]	Cl: Torque limit lower scaling / M_max lower scal		
CU250D-2_DP_F	Access level: 4	Calculated: -	Data type: U32 / FloatingPoint32
CU250D-2_PN_F	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 6630
	Min	Max	Factory setting
	-	-	2686[1]
Description:	Sets the signal source for the scaling of the lower torque limit in p1523.		
Danger:	For p1400.4 = 0 (torque limiting, upper/lower) the following applies: Positive values resulting from the signal source and scaling can cause the motor to accelerate in an uncontrolled manner.		
			
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		

p1530[0...n]	Power limit motoring / P_max mot		
	Access level: 2	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 14_5	Unit selection: p0505	Func. diagram: 6640
	Min 0.00 [kW]	Max 100000.00 [kW]	Factory setting 0.00 [kW]
Description:	Sets the power limit when motoring.		
Dependency:	Refer to: p0500, p1531		
Note:	The power limit is limited to 300% of the rated motor power.		
p1531[0...n]	Power limit regenerative / P_max gen		
	Access level: 2	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 14_5	Unit selection: p0505	Func. diagram: 6640
	Min -100000.00 [kW]	Max -0.01 [kW]	Factory setting -0.01 [kW]
Description:	Sets the regenerative power limit.		
Dependency:	Refer to: r0206, p0500, p1530		
Note:	The power limit is limited to 300% of the rated motor power. For power units without energy recovery capability, the regenerative power limit is preset to 30 % of the power r0206[0]. For a braking resistor connected to the DC link (p0219 > 0), the power limit when generating is automatically adapted. For power units with energy recovery, the parameter is limited to the negative value of r0206[2].		
r1533	Current limit torque-generating total / Iq_max total		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: 6_2	Unit selection: p0505	Func. diagram: 5640, 5722, 6640
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the maximum torque/force generating current as a result if all current limits.		
r1536[0...1]	Current limit maximum torque-generating current / Isq_max		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: 6_2	Unit selection: p0505	Func. diagram: 6640, 6710
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the maximum limit for the torque-generating current component. Index 0 indicates the signal limited by the Vdc controller.		
Index:	[0] = Limited [1] = Unlimited		
r1537[0...1]	Current limit minimum torque-generating current / Isq_min		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: 6_2	Unit selection: p0505	Func. diagram: 6640, 6710
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the minimum limit for the torque-generating current component. Index 0 indicates the signal limited by the Vdc controller.		

Index: [0] = Limited
[1] = Unlimited

r1538	CO: Upper effective torque limit / M_max upper eff		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2003	Dyn. index: -
	Units group: 7_1	Unit selection: p0505	Func. diagram: 1610, 1700, 5610, 5650, 6060, 6640
	Min - [Nm]	Max - [Nm]	Factory setting - [Nm]
Description:	Displays the currently effective upper torque limit.		
Note:	The effective upper torque limit is reduced with respect to the selected upper torque limit p1520, if the current limit p0640 is reduced or the rated magnetizing current of the induction motor p0320 is increased. This may be the case for rotating measurements (see p1960). The torque limit p1520 can be re-calculated using p0340 = 1, 3 or 5.		
r1539	CO: Lower effective torque limit / M_max lower eff		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2003	Dyn. index: -
	Units group: 7_1	Unit selection: p0505	Func. diagram: 1610, 1700, 5610, 5650, 6060, 6640
	Min - [Nm]	Max - [Nm]	Factory setting - [Nm]
Description:	Displays the currently effective lower torque limit.		
Note:	The effective lower torque limit is reduced with respect to the selected lower torque limit p1521, if the current limit p0640 is reduced or the rated magnetizing current of the induction motor p0320 is increased. This may be the case for rotating measurements (see p1960). The torque limit p1520 can be re-calculated using p0340 = 1, 3 or 5.		
p1545[0...n]	BI: Activates travel to a fixed stop / TfS activation		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2520, 3617, 8012
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to activate/de-activate the "travel to fixed stop" function 1: Travel to fixed stop is active 0: Travel to fixed stop is inactive		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
p1545[0...n]	BI: Activates travel to a fixed stop / TfS activation		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2520, 8012
	Min -	Max -	Factory setting 2683.14
Description:	Sets the signal source to activate/de-activate the "travel to fixed stop" function 1: Travel to fixed stop is active 0: Travel to fixed stop is inactive		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
Note:	When traveling to fixed stop, the fault F07900 "motor blocked" is suppressed.		

r1547[0...1]	CO: Torque limit for speed controller output / M_max outp n_ctrl		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2003	Dyn. index: -
	Units group: 7_1	Unit selection: p0505	Func. diagram: 6060
	Min - [Nm]	Max - [Nm]	Factory setting - [Nm]
Description:	Displays the torque limit to limit the speed controller output.		
Index:	[0] = Upper limit [1] = Lower limit		
r1548[0...1]	CO: Stall current limit torque-generating maximum / Isq_max stall		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: 6_2	Unit selection: p0505	Func. diagram: -
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the limit for the torque-generating current component using the stall calculation, the current limit of the power unit as well as the parameterization in p0640.		
Index:	[0] = Upper limit [1] = Lower limit		
p1552[0...n]	CI: Torque limit upper scaling without offset / M_max up w/o offs		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 6060
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for the scaling of the upper torque limiting to limit the speed controller output without taking into account the current and power limits.		
p1553[0...n]	Stall limit scaling / Stall limit scal		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 80.0 [%]	Max 130.0 [%]	Factory setting 100.0 [%]
Description:	Sets the scaling of the stall limit for the start of field weakening.		
Danger:	If the stall current limit is increased, then the q current setpoint can exceed the stall limit; as a consequence, a hysteresis effect can occur when loading and unloading.		
			
p1554[0...n]	CI: Torque limit lower scaling without offset / M_max low w/o offs		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: PERCENT	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 6060
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for the scaling of the lower torque limiting to limit the speed controller output without taking into account the current and power limits.		

p1570[0...n]	CO: Flux setpoint / Flex setp		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6722
	Min 50.0 [%]	Max 200.0 [%]	Factory setting 100.0 [%]
Description:	Sets the flux setpoint referred to rated motor flux.		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
Note:	For p1570 > 100%, the flux setpoint increases as a function of the load from 100% (no-load operation) to the setting in p1570 (above rated motor torque), if p1580 > 0% has been set.		
p1573[0...n]	Flux threshold value magnetizing / Flux thresh magnet		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6722
	Min 10.0 [%]	Max 200.0 [%]	Factory setting 100.0 [%]
Description:	Sets the flux threshold value for enabling the speed setpoint and the end of magnetizing (r0056.4).		
Note:	The parameter only has an influence if the flux actual value reaches the threshold value p1573 more quickly during magnetizing than the time set in p0346. The parameter has no influence for flying restart (see p1200) and after DC braking (see p1231).		
p1574[0...n]	Voltage reserve dynamic / U_reserve dyn		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 5_1	Unit selection: p0505	Func. diagram: 6723, 6724
	Min 0.0 [Vrms]	Max 150.0 [Vrms]	Factory setting 10.0 [Vrms]
Description:	Sets a dynamic voltage reserve.		
Dependency:	Refer to: p0500		
Note:	In the field weakening range, it must be expected that the control dynamic performance is somewhat restricted due to the limited possibilities of controlling/adjusting the voltage. This can be improved by increasing the voltage reserve. Increasing the reserve reduces the steady-state maximum output voltage (r0071).		
p1580[0...n]	Efficiency optimization / Efficiency opt.		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6722
	Min 0 [%]	Max 100 [%]	Factory setting 0 [%]
Description:	Sets the efficiency optimization. When optimizing the efficiency, the flux setpoint of the closed-loop control is adapted as a function of the load. For p1580 = 100 %, under no-load operating conditions, the flux setpoint is reduced to 50 % of the rated motor flux.		
Note:	It only makes sense to activate this function if the dynamic response requirements of the speed controller are low. In order to avoid oscillations, if required, the speed controller parameters should be adapted (increase Tn, reduce Kp). Further, the smoothing time of the flux setpoint filter (p1582) should be increased.		

p1582[0...n]	Flux setpoint smoothing time / Flux setp T_smth		
	Access level: 3	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6722, 6724
	Min 4 [ms]	Max 5000 [ms]	Factory setting 15 [ms]
Description:	Sets the smoothing time for the flux setpoint.		
r1583	Flux setpoint smoothed / Flux setp smooth		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: PERCENT	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 6722, 6723, 6724
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the smoothed flux setpoint. The value is referred to the rated motor flux.		
p1584[0...n]	Field weakening operation flux setpoint smoothing time / Field weak T_smth		
	Access level: 4	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6722
	Min 0 [ms]	Max 20000 [ms]	Factory setting 0 [ms]
Description:	Sets the smoothing time for the flux setpoint in the field-weakening range		
Note:	Only the flux setpoint rise is smoothed		
r1589	Field-weakening current pre-control value / I_FieldWeak prectr		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: 6_2	Unit selection: p0505	Func. diagram: 6724
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the pre-control value for the field weakening current.		
r1593[0...1]	CO: Field weakening controller / flux controller output / Field/FI_ctrl outp		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: 6_2	Unit selection: p0505	Func. diagram: 6724
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Display and connector output for the output of the field weakening controller (synchronous motor).		
Index:	[0] = PI output [1] = I output		

p1594[0...n]	Field-weakening controller P gain / Field_ctrl Kp		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6724
	Min 0.00	Max 1000.00	Factory setting 0.00
Description:	Sets the P gain of the field-weakening controller.		
p1596[0...n]	Field weakening controller integral-action time / Field_ctrl Tn		
	Access level: 3	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6723, 6724
	Min 10 [ms]	Max 10000 [ms]	Factory setting 300 [ms]
Description:	Sets the integral-action time of the field-weakening controller.		
r1597	CO: Field weakening controller output / Field_ctrl outp		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: PERCENT	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 6723
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the output of the field weakening controller. The value is referred to the rated motor flux.		
r1598	CO: Total flux setpoint / Flux setp total		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: PERCENT	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 6714, 6723, 6724, 6725, 6726, 8018
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the effective flux setpoint. The value is referred to the rated motor flux.		
p1610[0...n]	Torque setpoint static (SLVC) / M_set static		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1710, 6721, 6722, 6726
	Min -200.0 [%]	Max 200.0 [%]	Factory setting 50.0 [%]
Description:	Sets the static torque setpoint for sensorless vector control (SLVC). This parameter is entered as a percentage referred to the rated motor torque (r0333). For sensorless vector control, when the motor model is shut down, an absolute current is impressed. p1610 represents the maximum load that occurs at a constant setpoint speed.		
Notice:	p1610 should always be set to at least 10 % higher than the maximum steady-state load that can occur.		


Note: For p1610 = 0%, a current setpoint is calculated that corresponds to the no-load case (ASM: rated magnetizing current).
 For p1610 = 100 %, a current setpoint is calculated that corresponds to the rated motor torque.
 Negative values are converted into positive setpoints in the case of induction and permanent-magnet synchronous motors.

p1611[0...n]	Supplementary accelerating torque (SLVC) / M_suppl_accel		
	Access level: 2	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1710, 6721, 6722, 6726
	Min 0.0 [%]	Max 200.0 [%]	Factory setting 30.0 [%]
Description:	Enters the dynamic torque setpoint for the low-speed range for sensorless vector control (SLVC). This parameter is entered as a percentage referred to the rated motor torque (r0333).		
Note:	When accelerating and braking p1611 is added to p1610 and the resulting total torque is converted into an appropriate current setpoint and controlled. For pure accelerating torques, it is always favorable to use the torque pre-control of the speed controller (p1496).		
r1614	EMF maximum / EMF max		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: 5_1	Unit selection: p0505	Func. diagram: 6725
	Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
Description:	Displays the actual maximum possible electromotive force (EMF) of the separately-excited synchronous motor.		
Dependency:	The value is the basis for the flux setpoint. The maximum possible EMF depends on the following factors: - Actual DC link voltage (r0070). - Maximum modulation depth (p1803). - Field-generating and torque-generating current setpoint.		
p1616[0...n]	Current setpoint smoothing time / I_set T_smooth		
	Access level: 4	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6721, 6722
	Min 4 [ms]	Max 10000 [ms]	Factory setting 40 [ms]
Description:	Sets the smoothing time for the current setpoint. The current setpoint is generated from p1610 and p1611.		
Note:	This parameter is only effective in the range where current is injected for sensorless vector control.		
r1623[0...1]	Field-generating current setpoint (steady-state) / Id_set stationary		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: 6_2	Unit selection: p0505	Func. diagram: 6723, 6726, 6727
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the steady-state field generating current setpoint (Id_set).		
Note:	Re index 1: Displays the stationary field-generating current on the stator side in the case of separately excited synchronous motors without the excitation current monitoring component (r1644).		

r1624	Field-generating current setpoint total / Id_setp total		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2002	Dyn. index: -
	Units group: 6_2	Unit selection: p0505	Func. diagram: 6640, 6721, 6723, 6727
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the limited field-generating current setpoint (Id_set). This value comprises the steady-state field-generating current setpoint r1623 and a dynamic component that is only set when changes are made to the flux setpoint.		
p1654[0...n]	Curr. setpoint torque-gen. smoothing time field weakening range / Isq_s T_smth FW		
	Access level: 4	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6710
	Min 0.1 [ms]	Max 50.0 [ms]	Factory setting 4.8 [ms]
Description:	Sets the smoothing time constant for the setpoint of the torque-generating current components.		
Note:	The smoothing time does not become effective until the field-weakening range is reached.		
p1702[0...n]	Isd current controller pre-control scaling / Isd_ctr_prectrScal		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6714
	Min 0.0 [%]	Max 200.0 [%]	Factory setting 70.0 [%]
Description:	Sets the scaling of the dynamic current controller pre-control for the flux-generating current component Isd.		
Note:	The parameter is effective for permanent-magnet synchronous motors.		
p1703[0...n]	Isq current controller pre-control scaling / Isq_ctr_prectrScal		
	Access level: 4	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6714
	Min 0.0 [%]	Max 200.0 [%]	Factory setting 60.0 [%]
Description:	Sets the scaling of the dynamic current controller pre-control for the torque/force-generating current component Isq.		
p1715[0...n]	Current controller P gain / I_ctrl Kp		
	Access level: 4	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6714
	Min 0.000	Max 100000.000	Factory setting 0.000
Description:	Sets the proportional gain of the current controller. This value is automatically pre-set using p3900 or p0340 when commissioning has been completed.		

p1717[0...n]	Current controller integral-action time / I_ctrl Tn		
	Access level: 4	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1710, 5714, 6714, 7017
	Min 0.00 [ms]	Max 1000.00 [ms]	Factory setting 2.00 [ms]
Description:	Sets the integral-action time of the current controller.		
Dependency:	Refer to: p1715		
r1718	CO: Isq controller output / Isq_ctrl outp		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: 5_1	Unit selection: p0505	Func. diagram: 6714
	Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
Description:	Displays the actual output of the Isq current controller (torque/force generating current, PI controller). The value contains the proportional and integral components of the PI controller.		
r1719	Isq controller integral component / Isq_ctrl I_comp		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: 5_1	Unit selection: p0505	Func. diagram: 6714
	Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
Description:	Displays the integral component of the Isq current controller (torque/force-generating current, PI controller).		
r1723	CO: Isd controller output / Isd_ctrl outp		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: 5_1	Unit selection: p0505	Func. diagram: 6714
	Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
Description:	Displays the actual output of the Isd current controller (flux-generating current, PI controller). The value contains the proportional and integral components of the PI controller.		
r1724	Isd controller integral component / Isd_ctrl I_comp		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: 5_1	Unit selection: p0505	Func. diagram: 6714
	Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
Description:	Displays the integral component of the Isd current controller (flux-generating current, PI controller).		

r1725	Isd controller integral component limit / Isd_ctrl I_limit		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: 5_1	Unit selection: p0505	Func. diagram: 6714
	Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
Description:	Displays the limit value for the integral component of the Isd current controller.		
p1726[0...n]	Quadrature arm decoupling scaling / Transv_decpl scal		
	Access level: 4	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6714
	Min 0.0 [%]	Max 200.0 [%]	Factory setting 75.0 [%]
Description:	Sets the scaling of the quadrature arm decoupling		
Note:	This parameter is ineffective for sensorless vector control. In this case, p1727 is always used. If p1726 is set to 0, then the quadrature de-coupling is de-activated. The integral component of the Isd current controller remains effective in the complete speed control range. For the closed-loop control of synchronous motors, this parameter is used to scale the current controller de-coupling.		
p1727[0...n]	Quadrature arm decoupling at voltage limit scaling / TrnsvDecplVmaxScal		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6714
	Min 0.0 [%]	Max 200.0 [%]	Factory setting 50.0 [%]
Description:	Sets the scaling of quadrature arm decoupling when the voltage limit is reached.		
r1728	De-coupling voltage in-line axis / U_dir-axis_decoupl		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: 5_1	Unit selection: p0505	Func. diagram: -
	Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
Description:	Displays the actual output of the quadrature channel de-coupling for the d axis.		
r1729	De-coupling voltage quadrature axis / U_quad_decoupl		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: 5_1	Unit selection: p0505	Func. diagram: -
	Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
Description:	Displays the actual output of the quadrature channel de-coupling for the q axis.		

p1730[0...n]	Isd controller integral component shutdown threshold / Isd_ctr I_compDeac		
	Access level: 4	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 30 [%]	Max 150 [%]	Factory setting 30 [%]
Description:	Sets the speed threshold for deactivating the integral component of the Isd controller. The d current controller is only effective as P controller for speeds greater than the threshold value. Instead of the integral component, the quadrature arm decoupling is effective.		
Warning:	For settings above 80%, the d current controller is active up to the field weakening limit. When operated at the voltage limit, this can result in an unstable behavior. In order to avoid this, the dynamic voltage reserve p1574 should be increased.		
			
Note:	The parameter value is referred to the synchronous rated motor speed.		
p1731[0...n]	Isd controller combination current time component / Isd ctrl iCombi T1		
	Access level: 4	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00 [ms]	Max 10000.00 [ms]	Factory setting 0.00 [ms]
Description:	Sets the time constant to calculate the d current DC component difference (combination current) to add to the d current controller actual value. The additional input is de-activated with p1731 = 0.		
r1732[0...1]	CO: Direct-axis voltage setpoint / Direct U set		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: 5_1	Unit selection: p0505	Func. diagram: 1630, 5714, 6714, 5718
	Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
Description:	Displays the direct-axis voltage setpoint Ud.		
Index:	[0] = Unsmoothed [1] = Smoothed with p0045		
r1733[0...1]	CO: Quadrature-axis voltage setpoint / Quad U set		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2001	Dyn. index: -
	Units group: 5_1	Unit selection: p0505	Func. diagram: 1630, 5714, 5718, 6714, 6719
	Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]
Description:	Displays the quadrature-axis component of voltage setpoint Uq.		
Index:	[0] = Unsmoothed [1] = Smoothed with p0045		

p1740[0...n]	Gain resonance damping for encoderless closed-loop control / Gain res_damp		
	Access level: 3	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.000	Max 10.000	Factory setting 0.025
Description:	Defines the gain of the controller for resonance damping for operation with sensorless vector control in the range that current is injected.		
p1744[0...n]	Motor model speed threshold stall detection / MotMod n_thr stall		
	Access level: 4	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: -
	Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 100.00 [rpm]
Description:	Sets the speed threshold value to detect a stalled motor. If the adaptation controller output exceeds the parameterized speed difference, then bit 11 in status word p1408 is set.		
Dependency:	If a stalled drive is detected (p1408.11 set), fault 7902 is output after the delay time in p2178. Refer to: p2178		
Note:	Speed monitoring is only effective in operation with a speed encoder (refer to p1300). Stalling is also identified if steps/jumps occur in the speed signal, which exceed the value in p0492.		
p1745[0...n]	Motor model error threshold stall detection / MotMod ThreshStall		
	Access level: 3	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.0 [%]	Max 1000.0 [%]	Factory setting 5.0 [%]
Description:	Sets the fault threshold in order to detect a motor that has stalled. If the error signal (r1746) exceeds the parameterized error threshold, then status signal r1408.12 is set to 1.		
Dependency:	If a stalled drive is detected (r1408.12 = 1), fault F07902 is output after the delay time set in p2178. Refer to: p2178		
Note:	Monitoring is only effective in the low-speed range (below p1755 * (100% - p1756)).		
r1746	Motor model error signal stall detection / MotMod sig stall		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Signal to initiate stall detection		
Note:	The signal is not calculated while magnetizing and only in the low speed range (below p1755 * (100 % - p1756)).		

p1749[0...n]	Motor model increase changeover speed encoderless operation / Incr n_chng no enc		
	Access level: 4	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.0 [%]	Max 99.0 [%]	Factory setting 50.0 [%]
Description:	Minimum operating frequency for rugged operation. If the minimum value is greater than the lower changeover limit parameterized with p1755 * (1 - 2 * p1756), then the difference is displayed using p1749 * p1755. The parameter value cannot be changed.		
Dependency:	Refer to: p1752, p1755, p1756		

p1750[0...n]	Motor model configuration / MotMod config		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: Unsigned8
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting 0000 0000 bin
Description:	Sets the configuration for the motor model. Bit 0 = 1: Forces open-loop speed-controlled starting (ASM). Bit 1 = 1: Forces the system to pass through frequency zero, open-loop-controlled (ASM). Bit 2 = 1: Drive remains in full closed-loop control mode, even at zero frequency (ASM). Bit 3 = 1: Motor model evaluates the saturation characteristic (ASM). Bit 6 = 1: If the motor is blocked, sensorless vector control remains speed-controlled (ASM). Bit 7 = 1: Use rugged switchover limits to switchover the model (open-loop/closed-loop controlled) for regenerative operation (ASM).		

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Controlled start	Yes	No	-
	01	Controlled through 0 Hz	Yes	No	-
	02	Closed-loop ctrl oper. down to zero freq. for passive loads	Yes	No	-
	03	Motor model Lh_pre = f(PsiEst)	Yes	No	-
	06	Closed-loop/open-loop controlled (PEM) for blocked motor	Yes	No	-
	07	Use rugged changeover limits	Yes	No	-

Dependency:

Refer to: p0500

Caution:

Do not use bit 6 = 1 if the motor can be slowly reversed by the load at the torque limit. Long delay times due to blocking (p2177 > p1758) can cause the motor to stall. In this case you should de-activate the function or use closed-loop control throughout the speed range (note the information re bit 2 = 1).

Note:

Bits 0 ... 2 only have an influence for encoderless vector control, bit 2 is pre-assigned depending on p0500.

Re bit 2 = 1:

The sensorless vector control is effective down to zero frequency. A change is not made into the open-loop speed controlled mode.

This operating mode is possible for passive loads. These include applications where the load itself does not generate any active torque and therefore only acts reactively to the drive torque of the induction motor.

If bit 2 = 1, then bit 3 is automatically set to 1. Manual de-selection is possible and may be sensible if the saturation characteristic (p1960) was not measured for third-party motors. Generally, for standard SIEMENS motors, the already pre-assigned (default value) saturation characteristic is adequate.

When the bit is set, the selection of bits 0 and 1 is ignored.

Re bit 2 = 0:

Bit 3 is also automatically deactivated.

Re bit 6 = 1:

The following applies for encoderless vector control of induction motors:

For a blocked motor (see p2175, p2177) the time condition in p1758 is bypassed and a change is not made into open-loop controlled operation.

Re bit 7 = 1:

The following applies for encoderless vector control of induction motors:

If the changeover limits are parameterized too low (p1755, p1756), then they are automatically increased to rugged values by the absolute amount $p1749 * p1755$.

The effective time condition for changing over into open-controlled operation is given by $\text{Min}(p1758, 0.5 * r0384)$.

Activation can make sense for applications that demand a high torque at low frequencies and therefore low speed gradients.

Adequate parameterization must be ensured (p1610, p1611).

r1751

Motor model status / MotMod status

Access level: 3	Calculated: -	Data type: Unsigned32
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description:

Displays the status of the motor model.

Bit field:

Bit	Signal name	1 signal	0 signal	FP
00	Controlled operation	Active	Inactive	6721
01	Set ramp-function generator	Active	Inactive	-
02	Stop RsLh adaptation	Yes	No	-
03	Feedback	Active	Inactive	-
04	Encoder operation	Active	Inactive	-
05	Holding angle	Yes	No	-
06	Acceleration criterion	Active	Inactive	-
07	Set angular integrator PEM	No	Yes	-
08	Stop Kt adaptation PEM	No	Yes	-
09	PollD active PEM SLVC	No	Yes	-
10	I injection PEM	No	Yes	-
11	Speed controller output cannot be set to zero	Yes	No	-
12	Rs adapt waits	Yes	No	-
13	Motor operation	Yes	No	-
14	Stator frequency sign	Positive	Negative	-
15	Torque sign	Motor mode	Regenerative mode	-
16	Pulse injection active PEM	Yes	No	-
17	Operation with rugged model feedback	Enabled	Inhibited	-
18	Operation of the current model with current feedback	Enabled	Inhibited	-
19	Current feedback in the current model	Active	Inactive	-
20	Rugged increase of the changeover limits	Active	Inactive	-
21	Motor blocked (RFG stop) PEM	No	Yes	-

Note:

Re bit 17:

Displays the status when enabling the rugged model feedback (p1784) for operation with and without encoder.

The feedback is used to increase the parameter ruggedness of the motor model and is effective in the operating range of the two-component closed loop current control.

Re bit 18:

Displays the status when enabling the differential current feedback in the current model for operation with encoder.

The function is automatically enabled with $p1784 > 0$ or $p1731 > 0$. The feedback is used for a rugged change between the current model and complete machine model with active rugged model feedback and combination current.

Re bit 19:

Displays the currently active stator circuit feedback in current model operation.

Re bit 20:

Displays the currently effective increase of the changeover limits by the value p1749 * p1755.

Re bit 21:

For a blocked synchronous motor, the speed ramp-function generator is held in the open-loop speed controlled operating range if the torque setpoint reaches the torque limit and the speed is less than the threshold value in p2175.

p1752[0...n]	Motor model changeover speed operation with encoder / MotMod n_chgov enc		
	Access level: 3	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: -
	Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 210000.00 [rpm]
Description:	Sets the speed to change over the motor model for operation with encoder.		
Dependency:	Refer to: p1756		
p1753[0...n]	Motor model changeover speed hysteresis operation with encoder / MotMod n_chgovHysE		
	Access level: 3	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.0 [%]	Max 90.0 [%]	Factory setting 0.0 [%]
Description:	Sets the hysteresis for the changeover speed of the motor model for operation with speed encoder.		
Dependency:	Refer to: p1752		
Note:	The value refers to p1752.		
p1755[0...n]	Motor model changeover speed encoderless operation / MotMod n_chgSnsorl		
	Access level: 3	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: -
	Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 210000.00 [rpm]
Description:	Sets the speed to change over the motor model to encoderless operation.		
Dependency:	Refer to: p1749, p1756		
Notice:	The changeover speed represents the steady-state minimum speed up to which the motor model can be used in sensorless steady-state operation. If the stability is not adequate close to the changeover speed, it may make sense to increase the parameter value. On the other hand, very low changeover speeds can negatively impact the stability.		
Note:	The changeover speed applies for the changeover between open-loop and closed-loop control mode.		
p1756	Motor model changeover speed hysteresis encoderless operation / MotMod n_chgov hys		
	Access level: 3	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 6730, 6731
	Min 0.0 [%]	Max 95.0 [%]	Factory setting 50.0 [%]
Description:	Sets the hysteresis for the changeover speed of the motor model for encoderless operation.		
Dependency:	Refer to: p1755		
Note:	The parameter value refers to p1755. Extremely small hystereses can have a negative impact on the stability in the changeover speed range, and very high hystereses in the standstill range.		

p1758[0...n]	Motor model changeover delay time closed/open-loop control / MotMod t cl_op		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 100 [ms]	Max 10000 [ms]	Factory setting 500 [ms]
Description:	Sets the minimum time for falling below the changeover speed when changing from closed-loop controlled operation to open-loop controlled operation.		
Dependency:	Refer to: p1755, p1756		
p1759[0...n]	Motor model changeover delay time open/closed-loop control / MotMod t op_cl		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [ms]	Max 2000 [ms]	Factory setting 0 [ms]
Description:	Sets the minimum time for a transition from open-loop controlled to closed-loop controlled operation after the lower changeover speed $p1755 * (1 - p1756 / 100 \%)$ has been exceeded.		
Dependency:	Refer to: p1755, p1756		
Note:	With $p1759 = 2000$ ms, the delay time becomes ineffective and the model changeover is determined by the output frequency only (changeover for p1755).		
p1760[0...n]	Motor model with encoder speed adaptation Kp / MotMod wE n_ada Kp		
	Access level: 3	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.000	Max 100000.000	Factory setting 1000.000
Description:	Sets the proportional gain of the controller for speed adaptation with encoder		
p1761[0...n]	Motor model with encoder speed adaptation Tn / MotMod wE n_ada Tn		
	Access level: 3	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [ms]	Max 1000 [ms]	Factory setting 4 [ms]
Description:	Sets the integral-action time of the controller for speed adaptation with encoder		
r1762[0...1]	Motor model deviation component 1 / MotMod dev comp 1		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 6721, 6730, 6731
	Min -	Max -	Factory setting -
Description:	Induction motor (ASM): Displays the referred imaginary system deviation for the adaptation circuit of the motor model. Permanent magnet synchronous motor (PEM): Displays the system deviation for speed adaptation. r1762[0]: Angular deviation [rad-el] of the estimated EMF. r1762[1]: Angular deviation [rad-el] of the low-level signal response for pulse technique.		

Index: [0] = Deviation model 1
[1] = Deviation model 2

r1763	Motor model deviation component 2 / MotMod dev comp 2		
Access level: 4	Calculated: -	Data type: FloatingPoint32	
Can be changed: -	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min	Max	Factory setting	
-	-	-	

Description: Induction motor (ASM):
Displays the referred real system deviation for the adaptation circuit of the motor model.
Permanent magnet synchronous motor (PEM):
Not used.

p1764[0...n]	Motor model without encoder speed adaptation Kp / MotMod woE n_adaKp		
Access level: 4	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32	
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180	
Units group: -	Unit selection: -	Func. diagram: 6730	
Min	Max	Factory setting	
0.000	100000.000	1000.000	

Description: Sets the proportional gain of the controller for speed adaptation without encoder.

r1765	Motor model speed adaptation Kp effective / MotM n_ada Kp act		
Access level: 4	Calculated: -	Data type: FloatingPoint32	
Can be changed: -	Scaling: p2001	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min	Max	Factory setting	
-	-	-	

Description: Displays the effective proportional gain of the controller for the speed adaptation.

p1767[0...n]	Motor model without encoder speed adaptation Tn / MotMod woE n_adaTn		
Access level: 4	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32	
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180	
Units group: -	Unit selection: -	Func. diagram: 6730	
Min	Max	Factory setting	
1 [ms]	200 [ms]	4 [ms]	

Description: Sets the integral time of the controller for speed adaptation without encoder

r1768	Motor model speed adaptation Vi effective / MotM n_ada Vi act		
Access level: 4	Calculated: -	Data type: FloatingPoint32	
Can be changed: -	Scaling: p2001	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min	Max	Factory setting	
-	-	-	

Description: Displays the effective gain of the integral component of the controller for speed adaptation.

r1770	CO: Motor model speed adaptation proportional component / MotMod n_adapt Kp		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 6730
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the P component of the controller for speed adaptation.		
r1771	CO: Motor model speed adaptation I comp. / MotMod n_adapt Tn		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 6730
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the I component of the controller for speed adaptation.		
r1773[0...1]	Motor model slip speed / MotMod slip		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: -
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays estimated (speed) signals of the motor model. r1773[0]: Displays the estimated (mechanical) slip of the motor model. r1773[1]: Displays the estimated input speed of the motor model.		
Index:	[0] = Slip speed estimated [1] = Speed estimated		
p1774[0...n]	Motor model offset voltage compensation alpha / MotMod offs comp A		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min -5.000 [V]	Max 5.000 [V]	Factory setting 0.000 [V]
Description:	Sets the offset voltage in the alpha direction; this compensates the offset voltages of the drive converter/inverter at low speeds. The value is valid for the rated (nominal) pulse frequency of the power unit.		
Note:	The value is pre-set during the rotating measurement.		
p1775[0...n]	Motor model offset voltage compensation beta / MotMod offs comp B		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min -5.000 [V]	Max 5.000 [V]	Factory setting 0.000 [V]
Description:	Sets the offset voltage in the beta direction; this compensates the offset voltages of the drive converter/inverter at low speeds. The value is valid for the rated (nominal) pulse frequency of the power unit.		
Note:	The value is pre-set during the rotating measurement.		

r1776[0...6]	Motor model status signals / MotMod status sig				
	Access level: 4	Calculated: -	Data type: FloatingPoint32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the internal status signals of the motor model: Index 0: Changeover ramp between current and voltage models Index 1: Changeover ramp for model tracking (encoderless induction motors only) Index 2: Changeover ramp for zero frequency range (encoderless induction motors only) Index 3: Transition ramp actual speed from speed setpoint to model value (encoderless FEM) Index 4: Speed controller enable (encoderless FEM) Index 5: Transition ramp between current and voltage models (encoderless FEM) Index 6: Transition ramp for EMF deviation at PLL input (encoderless PESM)				
Index:	[0] = Changeover ramp motor model [1] = Changeover ramp model tracking [2] = Changeover ramp zero frequency encoderless ASM [3] = Changeover ramp actual speed encoderless FEM [4] = Enable speed controller encoderless FEM [5] = Changeover ramp motor model encoderless FEM [6] = Changeover ramp motor model encoderless PESM				
Note:	Indices 3 through 5 are only relevant in the case of encoderless control of separately excited synchronous motors.				
r1778	Motor model flux angle difference / MotMod ang. diff.				
	Access level: 4	Calculated: -	Data type: FloatingPoint32		
	Can be changed: -	Scaling: p2005	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	- [°]	- [°]	- [°]		
Description:	Displays the difference between the motor model flux angle and the transformation angle.				
Dependency:	A setting for smoothing the display can be made using p1754.				
p1780[0...n]	Motor model adaptation configuration / MotMod adapt conf				
	Access level: 4	Calculated: p0340 = 1,3,4	Data type: Unsigned16		
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	-	-	0000 0000 0111 1100 bin		
Description:	Sets the configuration for the adaptation circuit of the motor model. Induction motor (ASM): Rs, Lh, and offset compensation. Permanent magnet synchronous motor (PEM): kT				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	01	Select motor model ASM Rs adaptation	Yes	No	-
	02	Select motor model ASM Lh adaptation	Yes	No	-
	03	Select motor model PEM kT adaptation	Yes	No	-
	04	Select motor model offset adaptation	Yes	No	-
	05	Select ASM Rr adaptation (only with encoder)	Yes	No	-
	06	Select pole position identification PEM encoderless	Yes	No	-
	07	Select T(valve) with Rs adaptation	Yes	No	-
	10	Filter time combination current like current ctrl integral time	Yes	No	-

Dependency: In U/f characteristic operating mode only bit 7 is relevant.
For active motor model feedback (see p1784), the Lh adaptation is internally deactivated automatically.

Note: ASM: Induction motor
PEM: Permanent magnet synchronous motor
When selecting the compensation of the valve interlocking via Rs (bit 7), the compensation in the gating unit is deactivated and is instead taken into account in the motor model.
In order that the correction values of the Rs, Lh and kT adaptation (selected using Bit 0 ... Bit 2) are correctly accepted when changing over the drive data set, a dedicated motor number must be entered into p0826 for each different motor.

p1784[0...n] Motor model feedback scaling / MotMod fdbk scal

Access level: 4	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: -
Min 0.0 [%]	Max 1000.0 [%]	Factory setting 0.0 [%]

Description: Sets the scaling for model fault feedback.

Note: Feeding back the measured model fault to the model states increases the control stability and makes the motor model rugged against parameter errors.

When feedback is selected (p1784 > 0), Lh adaptation is not effective.

p1785[0...n] Motor model Lh adaptation Kp / MotMod Lh Kp

Access level: 4	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: -
Min 0.000	Max 10.000	Factory setting 0.100

Description: Sets the proportional gain for the Lh adaptation of the motor model for an induction motor (ASM).

p1786[0...n] Motor model Lh adaptation integral time / MotMod Lh Tn

Access level: 4	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: -
Min 10 [ms]	Max 10000 [ms]	Factory setting 100 [ms]

Description: Sets the integral time for the Lh adaptation of the motor model for an induction motor (ASM).

r1787[0...n] Motor model Lh adaptation corrective value / MotMod Lh corr

Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: -
Min - [mH]	Max - [mH]	Factory setting - [mH]

Description: Displays the corrective value for the Lh adaptation of the motor model for an induction motor (ASM).

Dependency: Refer to: p0826, p1780

Note: The adaptation result is reset if the magnetizing inductance of the induction motor is changed (p0360, r0382). This also happens when changing over the data set if a different motor is not being used (p0826).

The display of the inactive data sets is only updated when changing over the data set.

r1791	Motor model Lh adaptation power-on frequency / MotMod Lh f_on		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [Hz]	Max - [Hz]	Factory setting - [Hz]
Description:	Displays the power-on stator frequency/ primary section frequency for the Lh adaptation for the induction motor (ASM).		
r1792	Motor model Lh adaptation power-on slip / MotMod Lh fslip		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [Hz]	Max - [Hz]	Factory setting - [Hz]
Description:	Displays the power-on slip frequency for the Lh adaptation for the induction motor (ASM).		
p1795[0...n]	Motor model kT adaptation integral time / MotMod kT Tn		
	Access level: 4	Calculated: p0340 = 1,3,4	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6731
	Min 10 [ms]	Max 10000 [ms]	Factory setting 100 [ms]
Description:	Sets the integral time of the kT adaptation of the motor model for a permanent-magnet synchronous motor (PEM).		
r1797[0...n]	Motor model kT adaptation corrective value / MotMod kT corr		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6731
	Min - [Nm/A]	Max - [Nm/A]	Factory setting - [Nm/A]
Description:	Displays the corrective value of the kT adaptation of the motor model for a permanent-magnet synchronous motor (PEM).		
Dependency:	Refer to: p0826, p1780		
Note:	The display of the inactive data sets is only updated when changing over the data set.		
p1800[0...n]	Pulse frequency setpoint / Pulse freq setp		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 2.000 [kHz]	Max 16.000 [kHz]	Factory setting 4.000 [kHz]
Description:	Sets the pulse frequency for the converter. This parameter is pre-set to the rated converter value when the drive is first commissioned.		
Dependency:	Refer to: p0230		
Note:	The maximum possible pulse frequency is also determined by the power unit being used. When the pulse frequency is increased, depending on the particular power unit, the maximum output current can be reduced (derating, refer to r0067). If a sine-wave filter is parameterized as output filter (p0230 = 3), then the pulse frequency cannot be set below the minimum value required for the filter. For operation with output reactors, the pulse frequency is limited to 4 kHz (see p0230).		

If p1800 is changed during commissioning (p0010 > 0), then it is possible that the old value will no longer be able to be set. The reason for this is that the dynamic limits of p1800 have been changed by a parameter that was set when the drive was commissioned (e.g. p1082).

r1801[0...1]	CO: Pulse frequency / Pulse frequency		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [kHz]	Max - [kHz]	Factory setting - [kHz]
Description:	Display and connector output for the actual converter switching frequency.		
Index:	[0] = Actual [1] = Modulator minimum value		
Note:	The selected pulse frequency (p1800) may be reduced if the drive converter has an overload condition (p0290).		
p1802[0...n]	Modulator mode / Modulator mode		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: Integer16
	Can be changed: T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 4	Factory setting 4
Description:	Sets the modulator mode.		
Value:	0: Automatic changeover SVM/FLB 2: Space vector modulation (SVM) 3: SVM without overcontrol 4: SVM/FLB without overcontrol		
Dependency:	If a sine-wave filter is parameterized as output filter (p0230 = 3, 4), then only space vector modulation without overcontrol can be selected as modulation type (p1802 = 3). Refer to: p0230, p0500		
Note:	When modulation modes are enabled that could lead to overmodulation (p1802 = 0, 2), the modulation depth must be limited using p1803 (default p1803 < 100 %). The higher the overmodulation, the greater the current ripple and torque ripple. When changing p1802[x], the values for all of the other existing indices are also changed.		
p1803[0...n]	Maximum modulation depth / Modulat depth max		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 6723
	Min 20.0 [%]	Max 150.0 [%]	Factory setting 106.0 [%]
Description:	Defines the maximum modulation depth.		
Dependency:	Default setting PM260: 103 %. Refer to: p0500		
Note:	p1803 = 100% is the overcontrol limit for space vector modulation (for an ideal drive converter without any switching delay).		
p1806[0...n]	Filter time constant Vdc correction / T_filt Vdc_corr		
	Access level: 4	Calculated: p0340 = 1,3	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.0 [ms]	Max 10000.0 [ms]	Factory setting 0.0 [ms]
Description:	Sets the filter time constant of the DC link voltage used to calculate the modulation depth.		

r1808	DC link voltage actual value for U_max calculation / Vdc act val U_max			
	Access level: 4	Calculated: -	Data type: FloatingPoint32	
	Can be changed: -	Scaling: p2001	Dyn. index: -	
	Units group: 5_2	Unit selection: p0505	Func. diagram: -	
	Min - [V]	Max - [V]	Factory setting - [V]	
Description:	DC link voltage used to determine the maximum possible output voltage.			
r1809	CO: Modulator mode actual / Modulator mode act			
	Access level: 4	Calculated: -	Data type: Integer16	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min 1	Max 9	Factory setting -	
Description:	Displays the effective modulator mode.			
Value:	1: Flat top modulation (FLB) 2: Space vector modulation (SVM) 9: Optimized pulse pattern			
p1810	Modulator configuration / Modulator config			
	Access level: 3	Calculated: -	Data type: Unsigned16	
	Can be changed: U, T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min -	Max -	Factory setting 0000 bin	
Description:	Sets the configuration for the modulator.			
Bit field:	Bit	Signal name	1 signal	0 signal
	00	Avg value filter for U_lim (only for Vdc_comp. in modulator)	Yes	No
	01	DC link voltage compensation in the current control	Yes	No
Notice:	Bit 1 = 1 can only be set under a pulse inhibit and for r0192.14 = 1.			
Note:	Re bit 00 = 0: Voltage limitation from the minimum of the DC link voltage (lower ripple in the output current, reduced output voltage). Re bit 00 = 1: Voltage limitation from averaged DC link voltage (higher output voltage with increased ripple in the output current). The selection is only valid if the DC link compensation is not performed in the Control Unit (bit 1 = 0). Re bit 01 = 0: DC link voltage compensation in the modulator. Re bit 01 = 1: DC link voltage compensation in the current control.			
p1820[0...n]	Reverse the output phase sequence / Outp_ph_seq rev			
	Access level: 2	Calculated: -	Data type: Integer16	
	Can be changed: C(2), T	Scaling: -	Dyn. index: DDS, p0180	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min 0	Max 1	Factory setting 0	
Description:	Sets the phase sequence reversal for the motor without setpoint change. If the motor does not rotate in the required direction, then the output phase sequence can be reversed using this parameter. This means that the direction of the motor is reversed without the setpoint being changed.			

Value:
0: OFF
1: ON

Caution:

For operation with encoder, if the output phase sequence is changed, under certain circumstances it may be necessary to change the direction of rotation for the encoder (see p0410).

The encoder polarity is also checked for the rotating measurement (see p1959).

Note:

This setting can only be changed when the pulses are inhibited.

p1822**Power unit line phases monitoring tolerance time / PU ph monit t_tol**

Access level: 4	Calculated: -	Data type: Unsigned32
Can be changed: T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min 500 [ms]	Max 540000 [ms]	Factory setting 500 [ms]

Description:

Sets the tolerance time for line phase monitoring for blocksize power units.

If a line phase fault is present for longer than this tolerance time, then a corresponding fault is output.

Dependency:

Refer to: F30011

Notice:

When operating with a failed line phase, depending on the active power, values higher than the default value can either immediately damage the power unit or damage it over the long term.

Note:

For the setting p1822 = maximum value, line phase monitoring is deactivated.

p1825**Converter valve threshold voltage / Threshold voltage**

Access level: 4	Calculated: p0340 = 1	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min 0.0 [Vrms]	Max 100.0 [Vrms]	Factory setting 0.6 [Vrms]

Description:

Sets the threshold voltage drop of the valves (power semiconductor devices) to be compensated.

Note:

The value is automatically calculated in the motor data identification routine.

p1828**Compensation valve lockout time phase U / Comp t_lock ph U**

Access level: 4	Calculated: p0340 = 1	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min 0.00 [µs]	Max 3.99 [µs]	Factory setting 0.00 [µs]

Description:

Sets the valve lockout time to compensate for phase U.

Note:

The value is automatically calculated in the motor data identification routine.

p1829**Compensation valve lockout time phase V / Comp t_lock ph V**

Access level: 4	Calculated: p0340 = 1	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min 0.00 [µs]	Max 3.99 [µs]	Factory setting 0.00 [µs]

Description:

Sets the valve lockout time to compensate for phase V.

p1830	Compensation valve lockout time phase W / Comp t_lock ph W		
	Access level: 4	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00 [µs]	Max 3.99 [µs]	Factory setting 0.00 [µs]
Description:	Sets the valve lockout time to compensate for phase W.		
p1832	Dead time compensation current level / t_dead_comp I_lev		
	Access level: 4	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.0 [Arms]	Max 10000.0 [Arms]	Factory setting 0.0 [Arms]
Description:	Sets the current level for the dead time compensation. Above the current level, the dead time - resulting from the converter switching delays - is compensated by a previously calculated constant value. If the relevant phase current setpoint falls below the absolute value defined by p1832, the corrective value for this phase is continuously reduced.		
Dependency:	The factory setting of p1832 is automatically set to 0.02 * rated drive converter current (r0207).		
p1900	Motor data identification and rotating measurement / MotID and rot meas		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: C(1), T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -
CU240D-2_PN_F			
	Min 0	Max 3	Factory setting 0
Description:	Sets the motor data identification and speed controller optimization. The motor identification should first be performed with the motor stationary (p1900 = 1, 2; also refer to p1910). Based on this, additional motor and control parameters can be determined using the motor data identification with the motor rotating (p1900 = 1, 3; also refer to p1960). p1900 = 0: Function inhibited. p1900 = 1: Sets p1910 = 1 and p1960 = 0, 1 depending on p1300 When the drive enable signals are present, a motor data identification routine is carried out at standstill with the next power-on command. Current flows through the motor which means that it can align itself by up to a quarter of a revolution. With the following power-on command, a rotating motor data identification routine is carried out - and in addition, a speed controller optimization by making measurements at different motor speeds. p1900 = 2: Sets p1910 = 1 and p1960 = 0 When the drive enable signals are present, a motor data identification routine is carried out at standstill with the next power-on command. Current flows through the motor which means that it can align itself by up to a quarter of a revolution. p1900 = 3: Sets p1960 = 0, 1 depending on p1300 This setting should only be selected if the motor data identification was already carried out at standstill. When the drive enable signals are present, with the next power-on command, a rotating motor data identification routine is carried out - and in addition, speed controller optimization by taking measurements at different motor speeds.		

Value:	0: Inhibited 1: Identify motor data at standstill and with motor rotating 2: Identify motor data at standstill 3: Identify motor data with motor rotating
Dependency:	Refer to: p1300, p1910, p1960 Refer to: A07980, A07981, F07983, F07984, F07985, F07986, F07988, F07990, A07991
Notice:	p1900 = 3: This setting should only be selected if the motor data identification was already carried out at standstill. If there is a motor holding brake, it must be open (p1215 = 2). To permanently accept the determined settings they must be saved in a non-volatile fashion (p0971). During the rotating measurement it is not possible to save the parameter (p0971). For p0014 = 1, the following applies: After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.
Note:	The motor and control parameters are only optimally set when both measurements are carried out (initially at standstill, and then with the motor rotating). An appropriate alarm is output when the parameter is set. The power-on command must remain set during a measurement and after the measurement has been completed, the drive automatically resets it. The duration of the measurements can lie between 0.3 s and several minutes. This time is, for example, influenced by the motor size and the mechanical conditions. p1900 is automatically set to 0 after the motor data identification routine has been completed.

p1900		Motor data identification and rotating measurement / MotID and rot meas	
CU250D-2_DP_F	Access level: 2	Calculated: -	Data type: Integer16
CU250D-2_PN_F	Can be changed: C(1), T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 3	Factory setting 2
Description:	<p>Sets the motor data identification and speed controller optimization.</p> <p>The motor identification should first be performed with the motor stationary (p1900 = 1, 2; also refer to p1910). Based on this, additional motor and control parameters can be determined using the motor data identification with the motor rotating (p1900 = 1, 3; also refer to p1960).</p> <p>p1900 = 0: Function inhibited.</p> <p>p1900 = 1: Sets p1910 = 1 and p1960 = 0, 1 depending on p1300 When the drive enable signals are present, a motor data identification routine is carried out at standstill with the next power-on command. Current flows through the motor which means that it can align itself by up to a quarter of a revolution. With the following power-on command, a rotating motor data identification routine is carried out - and in addition, a speed controller optimization by making measurements at different motor speeds.</p> <p>p1900 = 2: Sets p1910 = 1 and p1960 = 0 When the drive enable signals are present, a motor data identification routine is carried out at standstill with the next power-on command. Current flows through the motor which means that it can align itself by up to a quarter of a revolution.</p> <p>p1900 = 3: Sets p1960 = 0, 1 depending on p1300 This setting should only be selected if the motor data identification was already carried out at standstill. When the drive enable signals are present, with the next power-on command, a rotating motor data identification routine is carried out - and in addition, speed controller optimization by taking measurements at different motor speeds.</p>		
Value:	0: Inhibited 1: Identify motor data at standstill and with motor rotating		

- 2: Identify motor data at standstill
 3: Identify motor data with motor rotating

Dependency: Refer to: p1300, p1910, p1960
 Refer to: A07980, A07981, F07983, F07984, F07985, F07986, F07988, F07990, A07991

Notice: p1900 = 3:
 This setting should only be selected if the motor data identification was already carried out at standstill.
 If there is a motor holding brake, it must be open (p1215 = 2).
 To permanently accept the determined settings they must be saved in a non-volatile fashion (p0971).
 During the rotating measurement it is not possible to save the parameter (p0971).

For p0014 = 1, the following applies:

After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.

Note: The motor and control parameters are only optimally set when both measurements are carried out (initially at standstill, and then with the motor rotating).

An appropriate alarm is output when the parameter is set.

The power-on command must remain set during a measurement and after the measurement has been completed, the drive automatically resets it.

The duration of the measurements can lie between 0.3 s and several minutes. This time is, for example, influenced by the motor size and the mechanical conditions.

p1900 is automatically set to 0 after the motor data identification routine has been completed.

p1901 Test pulse evaluation configuration / Test puls config

Access level: 3 **Calculated:** p0340 = 1 **Data type:** Unsigned32

Can be changed: T **Scaling:** - **Dyn. index:** -

Units group: - **Unit selection:** - **Func. diagram:** -

Min **Max** **Factory setting**
 - - 0000 bin

Description: Sets the configuration for the test pulse evaluation.
 Bit 00: Check for conductor-to-conductor short circuit once/always when the pulses are enabled.
 Bit 01: Check for ground fault once/always when the pulses are enabled.
 Bit 02: Activation of the tests selected using bit 00 and/or bit 01 each time the pulses are enabled

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Phase short-circuit test pulse active	Yes	No	-
	01	Ground fault detection test pulse active	Yes	No	-
	02	Test pulse at each pulse enable	Yes	No	-

Dependency: Refer to: p0287

Note: Re bit 02=0:
 If the test was successful once after POWER ON (see r1902.0), it is not repeated.
 Re bit 02=1:
 The test is not only performed after POWER ON, but also each time the pulses are enabled.
 If a conductor-to-conductor short-circuit is detected during the test, this is displayed in r1902.1.
 If a ground fault is detected during the test, this is displayed in r1902.2.

r1902 Test pulse evaluation status / Test puls ev stat

Access level: 4 **Calculated:** - **Data type:** Unsigned32

Can be changed: - **Scaling:** - **Dyn. index:** -

Units group: - **Unit selection:** - **Func. diagram:** -

Min **Max** **Factory setting**
 - - -

Description: Displays the status of the test pulse evaluation.
 Short-circuit test:
 Bit 0: The short-circuit test was executed without any fault.
 Bit 1: A phase short circuit has been detected.

Bit 2: A ground fault test was successfully performed.

Bit 3: A ground fault was detected.

Bit 4: A test pulse longer than one sampling time has occurred

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Short-circuit test executed	Yes	No	-
	01	Phase short-circuit detected	Yes	No	-
	02	Ground fault test successfully performed	Yes	No	-
	03	Ground fault detected	Yes	No	-
	04	Identification pulse width greater than the minimum pulse width	Yes	No	-

Note: If the ground fault test was selected, but not successfully performed, then sufficient current will not be able to be established during the test pulse.

p1909[0...n] Motor data identification control word / MotID STW

Access level: 3	Calculated: p0340 = 1	Data type: Unsigned32
Can be changed: T	Scaling: -	Dyn. index: MDS
Units group: -	Unit selection: -	Func. diagram: -
Min -	Max -	Factory setting 0000 0000 0000 0000 0000 0000 0000 0000 bin

Description: Sets the configuration for the motor data identification.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Stator inductance estimate no measurement	Yes	No	-
	02	Rotor time constant estimate no measurement	Yes	No	-
	03	Leakage inductance estimate no measurement	Yes	No	-
	05	Determine Tr and Lsig evaluation in the time range	Yes	No	-
	06	Activate vibration damping	Yes	No	-
	07	De-activate vibration detection	Yes	No	-
	11	De-activate pulse measurement Lq Ld	Yes	No	-
	12	De-activate rotor resistance Rr measurement	Yes	No	-
	14	De-activate valve interlocking time measurement	Yes	No	-
	15	Determine only stator resistance, valve voltage fault, dead time	Yes	No	-
	16	Short motor identification (lower quality)	Yes	No	-
	17	Measurement without control parameter calculation	Yes	No	-

Note: The following applies to permanent-magnet synchronous motors:
 Without de-selection in bit 11, in the closed-loop control mode, the direct inductance LD and the quadrature inductance Lq are measured at a low current.
 When de-selecting with bit 11 or in the U/f mode, the stator inductance is measured at half the rated motor current.
 If the stator inductance is not measured but is to be estimated, then bit 0 should be set and bit 11 should be de-selected.

p1910		Motor data identification selection / MotID selection	
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	26	0
Description:	Sets the motor data identification routine. The motor data identification routine is carried out after the next power-on command. p1910 = 1: All motor data and the drive converter characteristics are identified and then transferred to the following parameters: p0350, p0354, p0356, p0357, p0358, p0360, p1825, p1828, p1829, p1830 After this, the control parameter p0340 = 3 is automatically calculated. p1910 = 20: Only for internal SIEMENS use.		
Value:	0: Inhibited 1: Complete identification (ID) and acceptance of motor data 2: Complete identification (ID) of motor data without acceptance 20: Voltage vector input 21: Voltage vector input without filter 22: Rectangular voltage vector input without filter 23: Triangular voltage vector input without filter 24: Rectangular voltage vector input with filter 25: Triangular voltage vector input with filter 26: Enter voltage vector with DTC correction		
Dependency:	"Quick commissioning" must be carried out (p0010 = 1, p3900 > 0) before executing the motor data identification routine! When selecting the motor data identification routine, the drive data set changeover is suppressed. Refer to: p1900 Refer to: F07990, A07991		
Caution:	After the motor data identification (p1910 > 0) has been selected, alarm A07991 is output and a motor data identification routine is carried out as follows at the next power-on command: - current flows through the motor and a voltage is present at the drive converter output terminals. - during the identification routine, the motor shaft can rotate through a maximum of half a revolution. - however, no torque torque is generated.		
Notice:	If there is a motor holding brake, it must be open (p1215 = 2). To permanently accept the determined settings they must be saved in a non-volatile fashion (p0971).		
Note:	When setting p1910, the following should be observed: 1. "With acceptance" means: The parameters specified in the description are overwritten with the identified values and therefore have an influence on the controller setting. 2. "Without acceptance" means: The identified parameters are only displayed in the range r1912 ... r1926 (service parameters). The controller settings remain unchanged.		

p1910		Motor data identification selection / MotID selection	
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	26	1
Description:	Sets the motor data identification routine. The motor data identification routine is carried out after the next power-on command.		

p1910 = 1:

All motor data and the drive converter characteristics are identified and then transferred to the following parameters:

p0350, p0354, p0356, p0357, p0358, p0360, p1825, p1828, p1829, p1830

After this, the control parameter p0340 = 3 is automatically calculated.

p1910 = 20:

Only for internal SIEMENS use.

Value:	0:	Inhibited
	1:	Complete identification (ID) and acceptance of motor data
	2:	Complete identification (ID) of motor data without acceptance
	20:	Voltage vector input
	21:	Voltage vector input without filter
	22:	Rectangular voltage vector input without filter
	23:	Triangular voltage vector input without filter
	24:	Rectangular voltage vector input with filter
	25:	Triangular voltage vector input with filter
	26:	Enter voltage vector with DTC correction

Dependency: "Quick commissioning" must be carried out (p0010 = 1, p3900 > 0) before executing the motor data identification routine!

When selecting the motor data identification routine, the drive data set changeover is suppressed.

Refer to: p1900

Refer to: F07990, A07991

Caution: After the motor data identification (p1910 > 0) has been selected, alarm A07991 is output and a motor data identification routine is carried out as follows at the next power-on command:

- current flows through the motor and a voltage is present at the drive converter output terminals.
- during the identification routine, the motor shaft can rotate through a maximum of half a revolution.
- however, no torque is generated.

Notice: If there is a motor holding brake, it must be open (p1215 = 2).

To permanently accept the determined settings they must be saved in a non-volatile fashion (p0971).

Note: When setting p1910, the following should be observed:

1. "With acceptance" means:

The parameters specified in the description are overwritten with the identified values and therefore have an influence on the controller setting.

2. "Without acceptance" means:

The identified parameters are only displayed in the range r1912 ... r1926 (service parameters). The controller settings remain unchanged.

p1911 Phases to be identified number / Ph to ident qty			
Access level: 4	Calculated: -	Data type: Integer16	
Can be changed: T	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min	Max	Factory setting	
1	3	1	

Description: Sets the number of phases to be identified.

Value:	1:	1 phase U
	2:	2 phases U, V
	3:	3 phases U, V, W

Note: When identifying with several phases, the accuracy increases and also the time it takes to make the measurement.

r1912[0...2]	Identified stator resistance / R_stator ident		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [ohm]	Max - [ohm]	Factory setting - [ohm]
Description:	Displays the identified stator resistance.		
Index:	[0] = Phase U [1] = Phase V [2] = Phase W		
r1913[0...2]	Identified rotor time constant / T_rotor ident		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [ms]	Max - [ms]	Factory setting - [ms]
Description:	Displays the identified rotor time constant.		
Index:	[0] = Phase U [1] = Phase V [2] = Phase W		
r1914[0...2]	Identified total leakage inductance / L_total_leak ident		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [mH]	Max - [mH]	Factory setting - [mH]
Description:	Displays the identified total leakage inductance.		
Index:	[0] = Phase U [1] = Phase V [2] = Phase W		
r1915[0...2]	Identified nominal stator inductance / L_stator ident		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [mH]	Max - [mH]	Factory setting - [mH]
Description:	Displays the nominal stator inductance identified.		
Index:	[0] = Phase U [1] = Phase V [2] = Phase W		
r1916[0...2]	Identified stator inductance 1 / L_stator 1 ident		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [mH]	Max - [mH]	Factory setting - [mH]
Description:	Displays the nominal stator inductance identified for the 1st point of the saturation characteristic.		

Index:
 [0] = Phase U
 [1] = Phase V
 [2] = Phase W

r1917[0...2] Identified stator inductance 2 / L_stator 2 ident

Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min - [mH]	Max - [mH]	Factory setting - [mH]

Description: Displays the nominal stator inductance identified for the 2nd point of the saturation characteristic.

Index:
 [0] = Phase U
 [1] = Phase V
 [2] = Phase W

r1918[0...2] Identified stator inductance 3 / L_stator 3 ident

Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min - [mH]	Max - [mH]	Factory setting - [mH]

Description: Displays the nominal stator inductance identified for the 3rd point of the saturation characteristic.

Index:
 [0] = Phase U
 [1] = Phase V
 [2] = Phase W

r1919[0...2] Identified stator inductance 4 / L_stator 4 ident

Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min - [mH]	Max - [mH]	Factory setting - [mH]

Description: Displays the nominal stator inductance identified for the 4th point of the saturation characteristic.

Index:
 [0] = Phase U
 [1] = Phase V
 [2] = Phase W


r1925[0...2] Identified threshold voltage / U_threshold ident

Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min - [Vrms]	Max - [Vrms]	Factory setting - [Vrms]

Description: Displays the identified IGBT threshold voltage.

Index:
 [0] = Phase U
 [1] = Phase V
 [2] = Phase W

r1926[0...2]	Identified effective valve lockout time / t_lock_valve id				
	Access level: 4	Calculated: -	Data type: FloatingPoint32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min - [µs]	Max - [µs]	Factory setting - [µs]		
Description:	Displays the identified effective valve lockout time.				
Index:	[0] = Phase U [1] = Phase V [2] = Phase W				
r1927[0...2]	Identified rotor resistance / R_rotor ident				
	Access level: 4	Calculated: -	Data type: FloatingPoint32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min - [ohm]	Max - [ohm]	Factory setting - [ohm]		
Description:	Displays identified rotor resistance (on separately excited synchronous motors: damping resistance).				
Index:	[0] = Phase U [1] = Phase V [2] = Phase W				
p1959[0...n]	Rotating measurement configuration / Rot meas config				
	Access level: 3	Calculated: p0340 = 1	Data type: Unsigned16		
	Can be changed: T	Scaling: -	Dyn. index: DDS, p0180		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min -	Max -	Factory setting 0001 1111 bin		
Description:	Sets the configuration of the rotating measurement.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Encoder test active	Yes	No	-
	01	Saturation characteristic identification	Yes	No	-
	02	Moment of inertia identification	Yes	No	-
	03	Re-calculates the speed controller parameters	Yes	No	-
	04	Speed controller optimization (vibration test)	Yes	No	-
Dependency:	Refer to: F07988				
Note:	The encoder is only tested if the rotating measurement with encoder is selected (p1960 = 2). The following parameters are influenced for the individual optimization steps: Bit 00: None Bit 01: p0320, p0360, p0362 ... p0369 Bit 02: p0341, p0342 Bit 03: p1400.0, p1458, p1459, p1460, p1462, p1463, p1470, p1472, p1496 Bit 04: Dependent on p1960 Bit 05: p0391, p0392, p0393, p1402.2 only for induction motors p1960 = 1, 3: p1458, p1459, p1470, p1472, p1496, p1400.0 p1960 = 2, 4: p1458, p1459, p1460, p1462, p1496, p1461, p1463 The identification of the q leakage inductance can only be carried out for unloaded motors or motors with a low load (load approx. 30% below the rated motor torque). Only then is a current controller adaptation (p0391 ... p0393) parameterized if the q-leakage inductance under no-load conditions is at least 30 % higher than the total leakage inductance (p0356, p0358).				

p1960 Rotating measurement selection / Rot meas sel			
Access level: 2	Calculated: -	Data type: Integer16	
Can be changed: T	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min 0	Max 4	Factory setting 0	
Description:	Sets the rotating measurement. The rotating measurement is carried out after the next power-on command. The setting possibilities of the parameter depend on the open-loop/closed-loop control mode (p1300). p1300 < 20 (U/f open-loop control): It is not possible to select rotating measurement or speed controller optimization. p1300 = 20, 22 (encoderless operation): Only rotating measurement or speed controller optimization can be selected in the encoderless mode. p1300 = 21, 23 (operation with encoder): Both versions (encoderless and with encoder) of the rotating measurement and speed controller optimization can be selected.		
Value:	0: Inhibited 1: Rotating measurement in encoderless operation 2: Rotating measurement with encoder 3: Speed controller optimization in encoderless operation 4: Speed controller optimization with encoder		
Dependency:	Before the rotating measurement is carried out, the motor data identification routine (p1900, p1910, r3925) should have already been done. When selecting the rotating measurement, the drive data set changeover is suppressed. Refer to: p1300, p1900, p1959		
Danger:	For drives with a mechanical system that limits the distance moved, it must be ensured that this is not reached during the rotating measurement. If this is not the case, then it is not permissible that the measurement is carried out.		
			
Notice:	If there is a motor holding brake, it must be open (p1215 = 2). To permanently accept the determined settings they must be saved in a non-volatile fashion (p0971). During the rotating measurement it is not possible to save the parameter (p0971).		
Note:	When the rotating measurement is activated, it is not possible to save the parameters (p0971). Parameter changes are automatically made for the rotating measurement (e.g. p1120); this is the reason that up to the end of the measurement, and if no faults are present, no manual changes should be made. The ramp-up and ramp-down times (p1120, p1121) are limited, for the rotating measurement, to 900 s. For speed controller optimization with encoder (p1960 = 2, 4), the speed controller for encoderless operation is also pre-assigned (p1470, p1472). Depending on whether the speed controller optimization is carried out with or without encoder, different Kp/Tn adaptations of the speed controller are set (p1464, p1465). If the drive should be controlled with as well as without speed encoder, then we recommend the use of two drive data sets (p0180). These can then be executed with different speed controller adaptations.		

p1961 Saturation characteristic speed to determine / Sat_char n determ			
Access level: 3	Calculated: -	Data type: FloatingPoint32	
Can be changed: U, T	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min 26 [%]	Max 75 [%]	Factory setting 40 [%]	
Description:	Sets the speed to determine the saturation characteristic. The percentage value is referred to p0310 (rated motor frequency).		
Dependency:	Refer to: p0310, p1959 Refer to: F07983		
Note:	The saturation characteristics should be determined at an operating point with the lowest possible load.		

p1965	Speed_ctrl_opt speed / n_opt speed		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 10 [%]	Max 75 [%]	Factory setting 40 [%]
Description:	Sets the speed for the identification of the moment of inertia and the vibration test. Induction motor: The percentage value is referred to p0310 (rated motor frequency). Synchronous motor: The percentage value is referred to the minimum from p0310 (rated motor frequency) and p1082 (maximum speed).		
Dependency:	Refer to: p0310, p1959 Refer to: F07984, F07985		
Note:	In order to calculate the inertia, sudden speed changes are carried out - the specified value corresponds to the lower speed setpoint. This value is increased by 20 % for the upper speed value. The q leakage inductance (refer to p1959.5) is determined at zero speed and at 50 % of p1965 - however, with a maximum output frequency of 15 Hz and at a minimum of 10% of the rated motor speed.		
p1967	Speed_ctrl_opt dynamic factor / n_opt dyn_factor		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 1 [%]	Max 400 [%]	Factory setting 100 [%]
Description:	Sets the dynamic response factor for speed controller optimization.		
Dependency:	Refer to: p1959 Refer to: F07985		
Note:	For a rotating measurement, this parameter can be used to optimize the speed controller. p1967 = 100 % --> speed controller optimization according to a symmetric optimum. p1967 > 100 % --> optimization with a higher dynamic response (Kp higher, Tn lower).		
r1968	Speed_ctrl_opt dynamic factor actual / n_opt dyn_fact act		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the dynamic factor which is actually achieved for the vibration test		
Dependency:	Refer to: p1959, p1967 Refer to: F07985		
Note:	This dynamic factor only refers to the control mode of the speed controller set in p1960.		
r1969	Speed_ctrl_opt moment of inertia determined / n_opt M_inert det		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: 25_1	Unit selection: p0100	Func. diagram: -
	Min - [kgm ²]	Max - [kgm ²]	Factory setting - [kgm ²]
Description:	Displays the determined moment of inertia of the drive. After it has been determined, the value is transferred to p0341, p0342.		

Dependency: IEC drives (p0100 = 0): unit kg m²
 NEMA drives (p0100 = 1): unit lb ft²
 Refer to: p0341, p0342, p1959
 Refer to: F07984

r1970[0...1] Speed_ctrl_opt vibration test vibration frequency determined / n_opt f_vib det

Access level: 4	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min - [Hz]	Max - [Hz]	Factory setting - [Hz]

Description: Displays the vibration frequencies determined by the vibration test.

Index: [0] = Frequency low
 [1] = Frequency high

Dependency: Refer to: p1959
 Refer to: F07985

r1973 Rotating measurement encoder test pulse number determined / n_opt puls no. det

Access level: 3	Calculated: -	Data type: Integer32
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min -	Max -	Factory setting -

Description: Displays the number of pulses determined during the vibration test.

Note: A negative signal indicates an incorrect polarity of the encoder signal.

p1974 Speed_ctrl_opt saturation characteristic maximum rotor flux / n_opt rotflux_max

Access level: 4	Calculated: p0340 = 1	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min 104 [%]	Max 120 [%]	Factory setting 120 [%]

Description: Sets the maximum flux setpoint to measure the saturation characteristic.

r1979.0...11 BO: Speed_ctrl_opt status / n_opt status

Access level: 4	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min -	Max -	Factory setting -

Description: Displays the status to check and monitor the states of speed controller optimization.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Speed controller optimization activated	Yes	No	-
	01	Speed controller optimization completed	Yes	No	-
	02	Speed controller optimization interrupted	Yes	No	-
	04	Encoder test active	Yes	No	-
	05	Saturation char. identification active	Yes	No	-
	06	Moment of inertia identification active	Yes	No	-
	07	Recalc. speed controller parameters active	Yes	No	-
	08	Speed controller vibration test active	Yes	No	-


List of parameters

09	Magnetizing inductance adapt. active	Yes	No	-
10	Operation with encoder after encoderless operation	Yes	No	-
11	q-leakage inductance identification	Yes	No	-

p1980[0...n]	PoIID technique / PoIID technique		
	Access level: 3	Calculated: p0340 = 1,3	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: MDS
	Units group: -	Unit selection: -	Func. diagram: -
	Min 1	Max 10	Factory setting 4
Description:	Sets the pole position identification technique. p1980 = 1: The current magnitude is set using P0329. p1980 = 4, 6: The current magnitude of the first measurement section is set using p0325, the second using p0329. p1980 = 10: The rated motor current is impressed to align. The current magnitudes are limited to the rated power unit values.		
Value:	1: Voltage pulsing 1st harmonics 4: Voltage pulsing 2-stage 6: Voltage pulsing 2-stage inverse 10: DC current injection		
Dependency:	When commissioning a catalog motor, the technique is automatically selected depending on the motor type being used. Refer to: p0325, p0329, p1780 Refer to: F07969		
Note:	Voltage pulse technique (p1980 = 1, 4) cannot be applied to operation with sine-wave output filters (p0230).		

r1984	PoIID angular difference / PoIID ang diff		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [°]	Max - [°]	Factory setting - [°]
Description:	Displays the angular difference between the actual electrical commutation angle and the angle determined by the pole position identification.		
Dependency:	Refer to: p0325, p0329, p1980, r1985, r1987		
Note:	When the pole position identification routine is executed several times, the spread of the measured values can be determined using this value. At the same position, the spread should be less than 2 degrees electrical.		

r1985	PoIID saturation curve / PoIID sat_char		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [Arms]	Max - [Arms]	Factory setting - [Arms]
Description:	Displays the saturation characteristic of the pole position identification routine (saturation technique). Displays the current characteristic of the pole position identification routine (elasticity technique).		
Dependency:	Refer to: p0325, p0329, p1980, r1984, r1987		
Note:	PoIID: Pole position identification Regarding the saturation technique: The values for the characteristic of the last saturation-based pole position identification routine are output every 1 ms in order to record signals (e.g. trace).		

r1987	PolID trigger characteristic / PolID trig_char		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the trigger characteristic of the pole position identification routine. The values for the characteristic of the last pole position identification routine are output every 1 ms in order to record signals (e.g. trace). The values for trigger characteristic and saturation characteristic are always output in synchronism from a time perspective.		
Dependency:	Refer to: p0325, p0329, p1980, r1984, r1985		
Note:	PolID: Pole position identification The following information and data can be taken from the trigger characteristic. - the value -100% marks the angle at the start of the measurement. - the value +100 % marks the commutation angle determined from the pole position identification routine.		
p1999[0...n]	Ang. commutation offset calibr. and PolID scaling / Com_ang_offs scal		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: MDS, p0130
	Units group: -	Unit selection: -	Func. diagram: -
	Min 10 [%]	Max 5000 [%]	Factory setting 100 [%]
Description:	Sets the scaling for the runtime of the pole position identification technique in which the current is injected.		
Dependency:	Refer to: p0341, p0342		
Caution:	For p1999 > 100 % (setting large moments of inertia) the following applies: There is no locked rotor monitoring (F07970 fault value 2).		
			
Note:	For high moments of inertia, it is practical to scale the runtime of the calibration higher.		
p2000	Reference speed reference frequency / n_ref f_ref		
	Access level: 2	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 6.00 [rpm]	Max 210000.00 [rpm]	Factory setting 1500.00 [rpm]
Description:	Sets the reference quantity for speed and frequency. All speeds or frequencies specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word). The following applies: Reference frequency (in Hz) = reference speed (in ((rpm) / 60) x pole pair number)		
Dependency:	This parameter is only updated during the automatic calculation (p0340 = 1, p3900 > 0) if motor commissioning was carried out beforehand for drive data set zero. This means that the parameter is not locked against overwriting using p0573 = 1. Refer to: p2001, p2002, p2003, r2004, r3996		
Notice:	When the reference speed / reference frequency is changed, short-term communication interruptions may occur.		
Note:	If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor. Example 1: The signal of an analog input (e.g. r0755[0]) is connected to a speed setpoint (e.g. p1070[0]). The actual percentage input value is cyclically converted into the absolute speed setpoint using the reference speed (p2000).		

Example 2:

The setpoint from PROFIBUS (r2050[1]) is connected to a speed setpoint (e.g. p1070[0]). The actual input value is cyclically converted into a percentage value via the pre-specified scaling 4000 hex. This percentage value is converted to the absolute speed setpoint via reference speed (p2000).

p2001	Reference voltage / Reference voltage		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 10 [Vrms]	Max 100000 [Vrms]	Factory setting 100 [Vrms]
Description:	<p>Sets the reference quantity for voltages.</p> <p>All voltages specified as relative value are referred to this reference quantity. This also applies for direct voltage values (= rms value) like the DC-link voltage.</p> <p>The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).</p> <p>Note:</p> <p>This reference quantity also applies to direct voltage values. It is not interpreted as rms value, but as DC voltage value.</p>		
Dependency:	<p>p2001 is only updated during automatic calculation (p0340 = 1, p3900 > 0) if motor commissioning has been carried out first for drive data set zero and as a result overwriting of the parameter has not been blocked by setting p0573 = 1.</p> <p>Refer to: r3996</p>		
Notice:	<p>When the reference voltage is changed, short-term communication interruptions may occur.</p>		
Note:	<p>If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor.</p> <p>For infeed units, the parameterized device supply voltage (p0210) is pre-assigned as the reference quantity.</p> <p>Example:</p> <p>The actual value of the DC link voltage (r0070) is connected to a test socket (e.g. p0771[0]). The actual voltage value is cyclically converted into a percentage of the reference voltage (p2001) and output according to the parameterized scaling.</p>		
p2002	Reference current / I_ref		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.10 [Arms]	Max 100000.00 [Arms]	Factory setting 100.00 [Arms]
Description:	<p>Sets the reference quantity for currents.</p> <p>All currents specified as relative value are referred to this reference quantity.</p> <p>The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).</p>		
Dependency:	<p>This parameter is only updated during the automatic calculation (p0340 = 1, p3900 > 0) if motor commissioning was carried out beforehand for drive data set zero. This means that the parameter is not locked against overwriting using p0573 = 1.</p> <p>Refer to: r3996</p>		
Notice:	<p>If various DDS are used with different motor data, then the reference quantities remain the same as these are not changed over with the DDS. The resulting conversion factor must be taken into account.</p> <p>Example:</p> <p>p2002 = 100 A Reference quantity 100 A corresponds to 100 %</p> <p>p0305[0] = 100 A Rated motor current 100 A for MDS0 in DDS0 --> 100 % corresponds to 100 % of the rated motor current</p> <p>p0305[1] = 50 A Rated motor current 50 A for MDS1 in DDS1 --> 100 % corresponds to 200 % of the rated motor current</p> <p>When the reference current is changed, short-term communication interruptions may occur.</p>		

Note: Preassigned value is p0640.
 If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor.
 For infeed units, the rated line current, which is obtained from the rated power and parameterized rated line supply voltage ($p2002 = r0206 / p0210 / 1.73$) is pre-assigned as the reference quantity.
 Example:
 The actual value of a phase current (r0069[0]) is connected to a test socket (e.g. p0771[0]). The actual current value is cyclically converted into a percentage of the reference current (p2002) and output according to the parameterized scaling.

p2003 **Reference torque / M_ref**

Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
Can be changed: T	Scaling: -	Dyn. index: -
Units group: 7_2	Unit selection: p0505	Func. diagram: -
Min 0.01 [Nm]	Max 20000000.00 [Nm]	Factory setting 1.00 [Nm]

Description: Sets the reference quantity for torque.
 All torques specified as relative value are referred to this reference quantity.
 The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).

Dependency: This parameter is only updated during the automatic calculation ($p0340 = 1$, $p3900 > 0$) if motor commissioning was carried out beforehand for drive data set zero. This means that the parameter is not locked against overwriting using $p0573 = 1$.
 Refer to: r3996

Notice: When the reference torque is changed, short-term communication interruptions may occur.

Note: Preassigned value is $2 * p0333$.
 If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor.
 Example:
 The actual value of the total torque (r0079) is connected to a test socket (e.g. p0771[0]). The actual torque is cyclically converted into a percentage of the reference torque (p2003) and output according to the parameterized scaling.

r2004 **Reference power / P_ref**

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: -	Dyn. index: -
Units group: 14_10	Unit selection: p0505	Func. diagram: -
Min - [kW]	Max - [kW]	Factory setting - [kW]

Description: Displays the reference quantity for power.
 All power ratings specified as relative value are referred to this reference quantity.
 The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).

Dependency: This value is calculated as follows:
 Infeed: Calculated from voltage times current.
 Closed-loop control: Calculated from torque times speed.
 Refer to: p2000, p2001, p2002, p2003

Note: If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor.
 The reference power is calculated as follows:
 - $2 * Pi * \text{reference speed} / 60 * \text{reference torque}$ (motor)
 - $\text{reference voltage} * \text{reference current} * \text{root}(3)$ (infeed)

p2005	Reference angle / Reference angle		
	Access level: 4	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 90.00 [°]	Max 180.00 [°]	Factory setting 90.00 [°]
Description:	Sets the reference quantity for angle. All angles specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
Dependency:	This parameter is only updated during the automatic calculation (p0340 = 1, p3900 > 0) if motor commissioning was carried out beforehand for drive data set zero. This means that the parameter is not locked against overwriting using p0573 = 1.		
Note:	If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor.		
p2006	Reference temp / Ref temp		
	Access level: 3	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 50.00 [°C]	Max 300.00 [°C]	Factory setting 100.00 [°C]
Description:	Sets the reference quantity for temperature. All temperatures specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
p2007	Reference acceleration / a_ref		
	Access level: 4	Calculated: p0340 = 1	Data type: FloatingPoint32
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.01 [rev/s ²]	Max 500000.00 [rev/s ²]	Factory setting 0.01 [rev/s ²]
Description:	Sets the reference quantity for acceleration rates. All acceleration rates specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
Dependency:	This parameter is only updated during the automatic calculation (p0340 = 1, p3900 > 0) if motor commissioning was carried out beforehand for drive data set zero. This means that the parameter is not locked against overwriting using p0573 = 1.		
Note:	If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor. The reference acceleration is calculated as follows: $p2007 = p2000 / 1 [s]$		
p2010	Comm IF baud rate / Comm baud		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 4	Max 12	Factory setting 12
Description:	Sets the baud rate for the commissioning interface (USS, RS232).		
Value:	4: 2400 baud 5: 4800 baud 6: 9600 baud		

7: 19200 baud
 8: 38400 baud
 9: 57600 baud
 10: 76800 baud
 11: 93750 baud
 12: 115200 baud

Note: COMM-IF: Commissioning interface
 The parameter is not influenced by setting the factory setting.

p2011	Comm IF address / Comm add		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	31	2

Description: Sets the address for the commissioning interface (USS, RS232).

Note: The parameter is not influenced by setting the factory setting.

p2016[0...3]	CI: Comm IF USS PZD send word / Comm USS send word		
	Access level: 3	Calculated: -	Data type: U32 / Integer16
	Can be changed: U, T	Scaling: 4000H	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	0

Description: Selects the PZD (actual values) to be sent via the commissioning interface USS.
 The actual values are displayed on an intelligent operator panel (IOP).

Index:
 [0] = PZD 1
 [1] = PZD 2
 [2] = PZD 3
 [3] = PZD 4

r2019[0...7]	Comm IF error statistics / Comm err		
	Access level: 4	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-

Description: Displays the receive errors at the commissioning interface (USS, RS232).

Index:
 [0] = Number of error-free telegrams
 [1] = Number of rejected telegrams
 [2] = Number of framing errors
 [3] = Number of overrun errors
 [4] = Number of parity errors
 [5] = Number of starting character errors
 [6] = Number of checksum errors
 [7] = Number of length errors

p2030	Field bus int protocol selection / Field bus protocol		
CU240D-2_DP	Access level: 1	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	3	3

Description: Sets the communication protocol for the field bus interface.

Value: 0: No protocol
3: PROFIBUS

Notice: For p0014 = 1, the following applies:
After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.

Note: Changes only become effective after POWER ON.
The parameter is not influenced by setting the factory setting.

p2030 Field bus int protocol selection / Field bus protocol

CU240D-2_PN	Access level: 1	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	10	7

Description: Sets the communication protocol for the field bus interface.

Value: 0: No protocol
7: PROFINET
10: Ethernet/IP

Notice: For p0014 = 1, the following applies:
After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.

Note: Changes only become effective after POWER ON.
The parameter is not influenced by setting the factory setting.

r2032 Master control control word effective / PcCtrl STW eff

	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-

Description: Displays the effective control word 1 (STW1) of the drive for the master control.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	ON/OFF1	Yes	No	-
	01	OC / OFF2	Yes	No	-
	02	OC / OFF3	Yes	No	-
	03	Operation enable	Yes	No	-
	04	Ramp-function generator enable	Yes	No	-
	05	Start ramp-function generator	Yes	No	-
	06	Speed setpoint enable	Yes	No	-
	07	Acknowledge fault	Yes	No	-
	08	Jog bit 0	Yes	No	3030
	09	Jog bit 1	Yes	No	3030
	10	Master ctrl by PLC	Yes	No	-

Notice: The master control only influences control word 1 and speed setpoint 1. Other control words/setpoints can be transferred from another automation device.

Note: OC: Operating condition

p2037	PROFdrive STW1.10 = 0 mode / PD STW1.10=0		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 2	Factory setting 0
Description:	Sets the processing mode for PROFdrive STW1.10 "master control by PLC". Generally, control world 1 is received with the first receive word (PZD1) (this is in conformance to the PROFdrive profile). The behavior of STW1.10 = 0 corresponds to that of the PROFdrive profile. For other applications that deviate from this, the behavior can be adapted using this particular parameter.		
Value:	0: Freeze setpoints and continue to process sign-of-life 1: Freeze setpoints and sign-of-life 2: Do not freeze setpoints		
Note:	If the STW1 is not transferred according to the PROFdrive with PZD1 (with bit 10 "master control by PLC"), then p2037 should be set to 2.		
p2038	PROFdrive STW/ZSW interface mode / PD STW/ZSW IF mode		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 2	Factory setting 0
Description:	Sets the interface mode of the PROFdrive control words and status words. When selecting a telegram via p0922 (p2079), this parameter influences the device-specific assignment of the bits in the control and status words.		
Value:	0: SINAMICS 2: VIK-NAMUR		
Dependency:	Refer to: p0922, p2079		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
Note:	- For p0922 (p2079) = 1, 350 ... 999, p2038 is automatically set to 0. - For p0922 (p2079) = 20, p2038 is automatically set to 2. It is not then possible to change p2038.		
p2039	Select debug monitor interface / Debug monit select		
	Access level: 4	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 3	Factory setting 0
Description:	The serial interface for the debug monitor is COM1 (commissioning interface, RS232) or COM2 (fieldbus interface, RS485). Value = 0: De-activated Value = 1: COM1, commissioning protocol is de-activated Value = 2: COM2, field bus is de-activated Value = 3: Reserved		
Note:	Value = 2 is only possible for Control Units with RS485 as a field bus interface.		

p2040	Fieldbus interface monitoring time / Fieldbus t_monit			
CU240D-2_PN	Access level: 3	Calculated: -	Data type: FloatingPoint32	
CU240D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -	
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -	
	Min 0 [ms]	Max 1999999 [ms]	Factory setting 100 [ms]	
Description:	Sets the monitoring time to monitor the process data received via the fieldbus interface. If no process data is received within this time, then an appropriate message is output.			
Dependency:	Refer to: F01910			
Note:	0: The monitoring is de-activated.			
p2042	PROFIBUS Ident Number / PB Ident No.			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16	
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min 0	Max 1	Factory setting 0	
Description:	Sets the PROFIBUS Ident Number (PNO-ID). SINAMICS can be operated with various identities on PROFIBUS. This allows the use of a PROFIBUS GSD that is independent of the device (e.g. PROFIdrive VIK-NAMUR with Ident Number 3AA0 hex).			
Value:	0: SINAMICS 1: VIK-NAMUR			
Notice:	For p0014 = 1, the following applies: After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.			
Note:	Every change only becomes effective after a POWER ON.			
r2043.0...2	BO: PROFIdrive PZD state / PD PZD state			
	Access level: 3	Calculated: -	Data type: Unsigned8	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: 2410	
	Min -	Max -	Factory setting -	
Description:	Displays the PROFIdrive PZD state.			
Bit field:	Bit	Signal name	1 signal	0 signal
	00	Setpoint failure	Yes	No
	02	Fieldbus oper	Yes	No
Dependency:	Refer to: p2044			
Note:	When using the "setpoint failure" signal, the bus can be monitored and an application-specific response triggered when the setpoint fails.			
p2044	PROFIdrive fault delay / PD fault delay			
	Access level: 3	Calculated: -	Data type: FloatingPoint32	
	Can be changed: U, T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: 2410	
	Min 0 [s]	Max 100 [s]	Factory setting 0 [s]	
Description:	Sets the delay time to initiate fault F01910 after a setpoint failure. The time until the fault is initiated can be used by the application. This means that it is possible to respond to the failure while the drive is still operational (e.g. emergency retraction).			

Dependency: Refer to: r2043
Refer to: F01910

p2047	PROFIBUS additional monitoring time / PB suppl t_monit		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2410
	Min 0 [ms]	Max 20000 [ms]	Factory setting 0 [ms]

Description: Sets the additional monitoring time to monitor the process data received via PROFIBUS. The additional monitoring time enables short bus faults to be compensated. If no process data is received within this time, then an appropriate message is output.

Dependency: Refer to: F01910

Note: For controller STOP, the additional monitoring time is not effective.

r2050[0...11]	CO: PROFIBUS PZD receive word / PZD rcv word		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: -	Scaling: 4000H	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting -

Description: Connector output to interconnect PZD (setpoints) with word format received from the fieldbus controller.

Index:
[0] = PZD 1
[1] = PZD 2
[2] = PZD 3
[3] = PZD 4
[4] = PZD 5
[5] = PZD 6
[6] = PZD 7
[7] = PZD 8
[8] = PZD 9
[9] = PZD 10
[10] = PZD 11
[11] = PZD 12

p2051[0...13]	CI: PROFIdrive PZD send word / PZD send word		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Integer16
CU240D-2_DP_F	Can be changed: U, T	Scaling: 4000H	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -
CU240D-2_PN_F			
	Min -	Max -	Factory setting [0] 2089[0] [1] 63[0] [2...13] 0

Description: Selects the PZD (actual values) with word format to be sent to the fieldbus controller.

Index:
[0] = PZD 1
[1] = PZD 2
[2] = PZD 3
[3] = PZD 4
[4] = PZD 5
[5] = PZD 6
[6] = PZD 7
[7] = PZD 8
[8] = PZD 9
[9] = PZD 10
[10] = PZD 11

List of parameters

[11] = PZD 12
 [12] = PZD 13
 [13] = PZD 14

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

p2051[0...13] CI: PROFdrive PZD send word / PZD send word

CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Integer16
CU250D-2_PN_F	Can be changed: U, T	Scaling: 4000H	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	0

Description: Selects the PZD (actual values) with word format to be sent to the fieldbus controller.

Index:
 [0] = PZD 1
 [1] = PZD 2
 [2] = PZD 3
 [3] = PZD 4
 [4] = PZD 5
 [5] = PZD 6
 [6] = PZD 7
 [7] = PZD 8
 [8] = PZD 9
 [9] = PZD 10
 [10] = PZD 11
 [11] = PZD 12
 [12] = PZD 13
 [13] = PZD 14

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

r2053[0...13] PROFdrive diagnostics send PZD word / Diag send word

	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-

Description: Displays the PZD (actual values) with word format sent to the fieldbus controller.

Index:
 [0] = PZD 1
 [1] = PZD 2
 [2] = PZD 3
 [3] = PZD 4
 [4] = PZD 5
 [5] = PZD 6
 [6] = PZD 7
 [7] = PZD 8
 [8] = PZD 9
 [9] = PZD 10
 [10] = PZD 11
 [11] = PZD 12
 [12] = PZD 13
 [13] = PZD 14

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-

08	Bit 8	ON	OFF	-
09	Bit 9	ON	OFF	-
10	Bit 10	ON	OFF	-
11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-

r2054 PROFIBUS status / PB status

CU240D-2_DP **Access level:** 3 **Calculated:** - **Data type:** Integer16
 CU240D-2_DP_F **Can be changed:** - **Scaling:** - **Dyn. index:** -
 CU250D-2_DP_F **Units group:** - **Unit selection:** - **Func. diagram:** 2410

Min	Max	Factory setting
0	4	-

Description: Status display for the PROFIBUS interface.

Value:
 0: OFF
 1: No connection (search for baud rate)
 2: Connection OK (baud rate found)
 3: Cyclic connection with master (data exchange)
 4: Cyclic data OK

r2055[0...2] PROFIBUS diagnostics standard / PB diag standard

CU240D-2_DP **Access level:** 3 **Calculated:** - **Data type:** Unsigned16
 CU240D-2_DP_F **Can be changed:** - **Scaling:** - **Dyn. index:** -
 CU250D-2_DP_F **Units group:** - **Unit selection:** - **Func. diagram:** 2410

Min	Max	Factory setting
-	-	-

Description: Diagnostics display for the PROFIBUS interface.

Index:
 [0] = Master bus address
 [1] = Master input total length bytes
 [2] = Master output total length bytes

r2057 PROFIBUS address switch diagnostics / PB addr_sw diag

CU240D-2_DP **Access level:** 3 **Calculated:** - **Data type:** Unsigned16
 CU240D-2_DP_F **Can be changed:** - **Scaling:** - **Dyn. index:** -
 CU250D-2_DP_F **Units group:** - **Unit selection:** - **Func. diagram:** 2410

Min	Max	Factory setting
-	-	-

Description: Displays the setting of the PROFIBUS address switch "DP ADDRESS" on the Control Unit.

Dependency: Refer to: p0918

r2060[0...10] CO: PROFIdrive PZD receive double word / PZD rcv DW

Access level: 3 **Calculated:** - **Data type:** Integer32
Can be changed: - **Scaling:** 4000H **Dyn. index:** -
Units group: - **Unit selection:** - **Func. diagram:** 2440, 2468

Min	Max	Factory setting
-	-	-

Description: Connector output to interconnect PZD (setpoints) with double word format received from the fieldbus controller.

Index:
 [0] = PZD 1 + 2
 [1] = PZD 2 + 3
 [2] = PZD 3 + 4
 [3] = PZD 4 + 5
 [4] = PZD 5 + 6
 [5] = PZD 6 + 7

[6] = PZD 7 + 8
 [7] = PZD 8 + 9
 [8] = PZD 9 + 10
 [9] = PZD 10 + 11
 [10] = PZD 11 + 12

Dependency:

Refer to: r2050

Notice:

Where there is a multiple interconnection of a connector output, all the connector inputs must either have Integer or FloatingPoint data types.

A BICO interconnection for a single PZD can only take place either on r2050 or r2060.

p2061[0...12] CI: PROFIBUS PZD send double word / PZD send DW**Access level:** 3**Calculated:** -**Data type:** U32 / Integer32**Can be changed:** U, T**Scaling:** 4000H**Dyn. index:** -**Units group:** -**Unit selection:** -**Func. diagram:** 2470**Min****Max****Factory setting**

-

-

0

Description:

Selects the PZD (actual values) with double word format to be sent to the fieldbus controller.

Index:

[0] = PZD 1 + 2
 [1] = PZD 2 + 3
 [2] = PZD 3 + 4
 [3] = PZD 4 + 5
 [4] = PZD 5 + 6
 [5] = PZD 6 + 7
 [6] = PZD 7 + 8
 [7] = PZD 8 + 9
 [8] = PZD 9 + 10
 [9] = PZD 10 + 11
 [10] = PZD 11 + 12
 [11] = PZD 12 + 13
 [12] = PZD 13 + 14

Dependency:

Refer to: p2051

Notice:

A BICO interconnection for a single PZD can only take place either on p2051 or p2061.

The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

r2063[0...12] PROFIdrive diagnostics PZD send double word / Diag send DW**Access level:** 3**Calculated:** -**Data type:** Unsigned32**Can be changed:** -**Scaling:** -**Dyn. index:** -**Units group:** -**Unit selection:** -**Func. diagram:** 2450, 2470**Min****Max****Factory setting**

-

-

-

Description:

Displays the PZD (actual values) with double word format sent to the fieldbus controller.

Index:

[0] = PZD 1 + 2
 [1] = PZD 2 + 3
 [2] = PZD 3 + 4
 [3] = PZD 4 + 5
 [4] = PZD 5 + 6
 [5] = PZD 6 + 7
 [6] = PZD 7 + 8
 [7] = PZD 8 + 9
 [8] = PZD 9 + 10
 [9] = PZD 10 + 11
 [10] = PZD 11 + 12
 [11] = PZD 12 + 13
 [12] = PZD 13 + 14

Bit field:

Bit	Signal name
00	Bit 0
01	Bit 1

1 signal
ON
ON

0 signal
OFF
OFF

FP
-
-

02	Bit 2	ON	OFF	-
03	Bit 3	ON	OFF	-
04	Bit 4	ON	OFF	-
05	Bit 5	ON	OFF	-
06	Bit 6	ON	OFF	-
07	Bit 7	ON	OFF	-
08	Bit 8	ON	OFF	-
09	Bit 9	ON	OFF	-
10	Bit 10	ON	OFF	-
11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-
16	Bit 16	ON	OFF	-
17	Bit 17	ON	OFF	-
18	Bit 18	ON	OFF	-
19	Bit 19	ON	OFF	-
20	Bit 20	ON	OFF	-
21	Bit 21	ON	OFF	-
22	Bit 22	ON	OFF	-
23	Bit 23	ON	OFF	-
24	Bit 24	ON	OFF	-
25	Bit 25	ON	OFF	-
26	Bit 26	ON	OFF	-
27	Bit 27	ON	OFF	-
28	Bit 28	ON	OFF	-
29	Bit 29	ON	OFF	-
30	Bit 30	ON	OFF	-
31	Bit 31	ON	OFF	-

Notice: A maximum of 4 indices of the "trace" function can be used.

r2067[0...1] PZD maximum interconnected / PZDmaxIntercon

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Display for the maximum interconnected PZD in the receive/send direction
Index 0: receive (r2050, r2060)
Index 1: send (p2051, p2061)

p2071 PROFIdrive SIC start send / SIC start send

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2423
CU250D-2_PN_F			
	Min	Max	Factory setting
	0	12	0

Description: Sets the start for the SIC telegram (p60122) in the send words (r2051, r2061).

Dependency: Refer to: p0922, p2079, p60122

Note: For setting p0922/p2079, the value is preset to the end of the PZD telegram.
For p0922 equal to 999 and p2079 not equal to 999, the preset value can be increased.
The value must be set again after changing p0922/p2079.

r2074[0...11]	PROFIdrive diagnostics bus address PZD receive / Diag addr rcv		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the PROFIBUS address of the sender from which the process data (PZD) is received.		
Index:	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12		
Note:	Value range: 0 - 125: Bus address of the sender 65535: not assigned		

r2075[0...11]	PROFIdrive diagnostics telegram offset PZD receive / Diag offs rcv		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the PZD byte offset in the PROFIdrive receive telegram (controller output).		
Index:	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12		
Note:	Value range: 0 - 242: Byte offset 65535: not assigned		

r2076[0...13]	PROFIdrive diagnostics telegram offset PZD send / Diag offs send		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the PZD byte offset in the PROFIdrive send telegram (controller input).		

Index:	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14
Note:	Value range: 0 - 242: Byte offset 65535: not assigned

r2077[0...15] PROFIBUS diagnostics peer-to-peer data transfer addresses / PB diag peer addr

Access level: 3	Calculated: -	Data type: Unsigned8
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Displays the addresses of the slaves (peers) where peer-to-peer data transfer has been configured via PROFIBUS.

p2079 PROFIdrive PZD telegram selection extended / PZD telegr ext

CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	999	1

Description: Sets the send and receive telegram.

Contrary to p0922, a telegram can be selected using p2079 and subsequently expanded.

Value:

- 1: Standard telegram 1, PZD-2/2
- 20: Standard telegram 20, PZD-2/6
- 350: SIEMENS telegram 350, PZD-4/4
- 352: SIEMENS telegram 352, PZD-6/6
- 353: SIEMENS telegram 353, PZD-2/2, PKW-4/4
- 354: SIEMENS telegram 354, PZD-6/6, PKW-4/4
- 999: Free telegram configuration with BICO

Dependency: Refer to: p0922

Note: For p0922 < 999 the following applies:

p2079 has the same value and is inhibited. All of the interconnections and extensions contained in the telegram are inhibited.

For p0922 = 999 the following applies:

p2079 can be freely set. If p2079 is also set to 999, then all of the interconnections can be set.

For p0922 = 999 and p2079 < 999 the following applies:

The interconnections contained in the telegram are inhibited. However, the telegram can be extended.

p2079		PROFIdrive PZD telegram selection extended / PZD telegr ext		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16	
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min	Max	Factory setting	
	7	999	999	
Description:	Sets the send and receive telegram. Contrary to p0922, a telegram can be selected using p2079 and subsequently expanded.			
Value:	7: Standard telegram 7, PZD-2/2 9: Standard telegram 9, PZD-10/5 110: SIEMENS telegram 110, PZD-12/7 111: SIEMENS telegram 111, PZD-12/12 999: Free telegram configuration with BICO			
Dependency:	Refer to: p0922			
Note:	For p0922 < 999 the following applies: p2079 has the same value and is inhibited. All of the interconnections and extensions contained in the telegram are inhibited. For p0922 = 999 the following applies: p2079 can be freely set. If p2079 is also set to 999, then all of the interconnections can be set. For p0922 = 999 and p2079 < 999 the following applies: The interconnections contained in the telegram are inhibited. However, the telegram can be extended.			

p2080[0...15]		BI: Binector-connector converter status word 1 / Bin/con ZSW1		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary	
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -	
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2472	
CU240D-2_PN_F				
	Min	Max	Factory setting	
	-	-	[0] 899.0 [1] 899.1 [2] 899.2 [3] 2139.3 [4] 899.4 [5] 899.5 [6] 899.6 [7] 2139.7 [8] 2197.7 [9] 899.9 [10] 2199.1 [11] 1407.7 [12] 899.12 [13] 2135.14 [14] 2197.3 [15] 2135.15	
Description:	Selects bits to be sent to the PROFIdrive controller. The individual bits are combined to form status word 1.			
Index:	[0] = Bit 0 [1] = Bit 1 [2] = Bit 2 [3] = Bit 3 [4] = Bit 4 [5] = Bit 5 [6] = Bit 6			

[7] = Bit 7
 [8] = Bit 8
 [9] = Bit 9
 [10] = Bit 10
 [11] = Bit 11
 [12] = Bit 12
 [13] = Bit 13
 [14] = Bit 14
 [15] = Bit 15

Dependency: Refer to: p2088, r2089

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

p2080[0...15] **BI: Binector-connector converter status word 1 / Bin/con ZSW1**

CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2472
	Min	Max	Factory setting
	-	-	0

Description: Selects bits to be sent to the PROFIdrive controller.
 The individual bits are combined to form status word 1.

Index:

[0] = Bit 0
 [1] = Bit 1
 [2] = Bit 2
 [3] = Bit 3
 [4] = Bit 4
 [5] = Bit 5
 [6] = Bit 6
 [7] = Bit 7
 [8] = Bit 8
 [9] = Bit 9
 [10] = Bit 10
 [11] = Bit 11
 [12] = Bit 12
 [13] = Bit 13
 [14] = Bit 14
 [15] = Bit 15

Dependency: Refer to: p2088, r2089

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

p2081[0...15] **BI: Binector-connector converter status word 2 / Bin/con ZSW2**

	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2472
	Min	Max	Factory setting
	-	-	0

Description: Selects bits to be sent to the PROFIdrive controller.
 The individual bits are combined to form status word 2.

Index:

[0] = Bit 0
 [1] = Bit 1
 [2] = Bit 2
 [3] = Bit 3
 [4] = Bit 4
 [5] = Bit 5
 [6] = Bit 6
 [7] = Bit 7
 [8] = Bit 8
 [9] = Bit 9
 [10] = Bit 10

[11] = Bit 11
 [12] = Bit 12
 [13] = Bit 13
 [14] = Bit 14
 [15] = Bit 15

Dependency: Refer to: p2088, r2089

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: For clock synchronous operation, bit 12 to 15 to transfer the sign-of-life are reserved in status word 2 - and may not be freely interconnected.

p2082[0...15] BI: Binector-connector converter status word 3 / Bin/con ZSW3

Access level: 3	Calculated: -	Data type: U32 / Binary
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 2472
Min	Max	Factory setting
-	-	0

Description: Selects bits to be sent to the PROFIdrive controller.
 The individual bits are combined to form free status word 3.

Index: [0] = Bit 0
 [1] = Bit 1
 [2] = Bit 2
 [3] = Bit 3
 [4] = Bit 4
 [5] = Bit 5
 [6] = Bit 6
 [7] = Bit 7
 [8] = Bit 8
 [9] = Bit 9
 [10] = Bit 10
 [11] = Bit 11
 [12] = Bit 12
 [13] = Bit 13
 [14] = Bit 14
 [15] = Bit 15

Dependency: Refer to: p2088, r2089

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

p2083[0...15] BI: Binector-connector converter status word 4 / Bin/con ZSW4

Access level: 3	Calculated: -	Data type: U32 / Binary
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 2472
Min	Max	Factory setting
-	-	0

Description: Selects bits to be sent to the PROFIdrive controller.
 The individual bits are combined to form free status word 4.

Index: [0] = Bit 0
 [1] = Bit 1
 [2] = Bit 2
 [3] = Bit 3
 [4] = Bit 4
 [5] = Bit 5
 [6] = Bit 6
 [7] = Bit 7
 [8] = Bit 8
 [9] = Bit 9
 [10] = Bit 10
 [11] = Bit 11
 [12] = Bit 12

[13] = Bit 13
 [14] = Bit 14
 [15] = Bit 15

Dependency: Refer to: p2088, r2089

p2084[0...15] **BI: Binector-connector converter status word 5 / Bin/con ZSW5**

Access level: 3	Calculated: -	Data type: U32 / Binary
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 2472
Min	Max	Factory setting
-	-	0

Description: Selects bits to be sent to the PROFIdrive controller.
 The individual bits are combined to form free status word 5.

Index: [0] = Bit 0
 [1] = Bit 1
 [2] = Bit 2
 [3] = Bit 3
 [4] = Bit 4
 [5] = Bit 5
 [6] = Bit 6
 [7] = Bit 7
 [8] = Bit 8
 [9] = Bit 9
 [10] = Bit 10
 [11] = Bit 11
 [12] = Bit 12
 [13] = Bit 13
 [14] = Bit 14
 [15] = Bit 15

Dependency: Refer to: p2088, r2089

p2088[0...4] **Invert binector-connector converter status word / Bin/con ZSW inv**

CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2472
CU240D-2_PN_F	Min	Max	Factory setting
	-	-	[0] 1010 1000 0000 0000 bin [1...4] 0000 0000 0000 0000 bin

Description: Setting to invert the individual binector inputs of the binector connector converter.

Index: [0] = Status word 1
 [1] = Status word 2
 [2] = Free status word 3
 [3] = Free status word 4
 [4] = Free status word 5

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	Inverted	Not inverted	-
	01	Bit 1	Inverted	Not inverted	-
	02	Bit 2	Inverted	Not inverted	-
	03	Bit 3	Inverted	Not inverted	-
	04	Bit 4	Inverted	Not inverted	-
	05	Bit 5	Inverted	Not inverted	-
	06	Bit 6	Inverted	Not inverted	-
	07	Bit 7	Inverted	Not inverted	-
	08	Bit 8	Inverted	Not inverted	-
	09	Bit 9	Inverted	Not inverted	-
	10	Bit 10	Inverted	Not inverted	-
	11	Bit 11	Inverted	Not inverted	-

List of parameters

12	Bit 12	Inverted	Not inverted	-
13	Bit 13	Inverted	Not inverted	-
14	Bit 14	Inverted	Not inverted	-
15	Bit 15	Inverted	Not inverted	-

Dependency: Refer to: p2080, p2081, p2082, p2083, r2089

p2088[0...4] Invert binector-connector converter status word / Bin/con ZSW inv

CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2472
	Min	Max	Factory setting
	-	-	0000 0000 0000 0000 bin

Description: Setting to invert the individual binector inputs of the binector connector converter.

Index:
 [0] = Status word 1
 [1] = Status word 2
 [2] = Free status word 3
 [3] = Free status word 4
 [4] = Free status word 5

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	Inverted	Not inverted	-
	01	Bit 1	Inverted	Not inverted	-
	02	Bit 2	Inverted	Not inverted	-
	03	Bit 3	Inverted	Not inverted	-
	04	Bit 4	Inverted	Not inverted	-
	05	Bit 5	Inverted	Not inverted	-
	06	Bit 6	Inverted	Not inverted	-
	07	Bit 7	Inverted	Not inverted	-
	08	Bit 8	Inverted	Not inverted	-
	09	Bit 9	Inverted	Not inverted	-
	10	Bit 10	Inverted	Not inverted	-
	11	Bit 11	Inverted	Not inverted	-
	12	Bit 12	Inverted	Not inverted	-
	13	Bit 13	Inverted	Not inverted	-
	14	Bit 14	Inverted	Not inverted	-
	15	Bit 15	Inverted	Not inverted	-

Dependency: Refer to: p2080, p2081, p2082, p2083, r2089

r2089[0...4] CO: Send binector-connector converter status word / Bin/con ZSW send

	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2472
	Min	Max	Factory setting
	-	-	-

Description: Connector output to interconnect the status words to a PZD send word.

Index:
 [0] = Status word 1
 [1] = Status word 2
 [2] = Free status word 3
 [3] = Free status word 4
 [4] = Free status word 5

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-

07	Bit 7	ON	OFF	-
08	Bit 8	ON	OFF	-
09	Bit 9	ON	OFF	-
10	Bit 10	ON	OFF	-
11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-

Dependency: Refer to: p2051, p2080, p2081, p2082, p2083

Note: r2089 together with p2080 to p2084 forms five binector-connector converters.

r2090.0...15 BO: PROFIdrive PZD1 receive bit-serial / PZD1 recv bitw

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 2468
Min	Max	Factory setting
-	-	-

Description: Binector output for bit-serial interconnection of PZD1 (normally control word 1) received from the PROFIdrive controller.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

r2091.0...15 BO: PROFIdrive PZD2 receive bit-serial / PZD2 recv bitw

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 2468
Min	Max	Factory setting
-	-	-

Description: Binector output for bit-serial interconnection of PZD2 received from the PROFIdrive controller.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-

List of parameters

12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-

r2092.0...15 BO: PROFIdrive PZD3 receive bit-serial / PZD3 recv bitw

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 2468
Min	Max	Factory setting
-	-	-

Description: Binector output for bit-serial interconnection of PZD3 received from the PROFIdrive controller.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

r2093.0...15 BO: PROFIdrive PZD4 receive bit-serial / PZD4 recv bitw

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 2468
Min	Max	Factory setting
-	-	-

Description: Binector output for bit-serial interconnection of PZD4 (normally control word 2) received from the PROFIdrive controller.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

r2094.0...15	BO: Connector-binector converter binector output / Con/bin outp		
Access level: 3	Calculated: -	Data type: Unsigned16	
Can be changed: -	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: 2468	
Min	Max	Factory setting	
-	-	-	

Description: Binector output for bit-serial onward interconnection of a PZD word received from the PROFIdrive controller. The PZD is selected via p2099[0].

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

Dependency: Refer to: p2099

r2095.0...15	BO: Connector-binector converter binector output / Con/bin outp		
Access level: 3	Calculated: -	Data type: Unsigned16	
Can be changed: -	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: 2468	
Min	Max	Factory setting	
-	-	-	

Description: Binector output for bit-serial interconnection of a PZD word received from the PROFIdrive controller. The PZD is selected via p2099[1].

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

Dependency: Refer to: p2099

p2098[0...1]	Inverter connector-binector converter binector output / Con/bin outp inv				
	Access level: 3	Calculated: -	Data type: Unsigned16		
	Can be changed: U, T	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 2468		
	Min	Max	Factory setting		
	-	-	0000 0000 0000 0000 bin		
Description:	Setting to invert the individual binector outputs of the connector-binector converter. Using p2098[0], the signals of CI: p2099[0] are influenced. Using p2098[1], the signals of CI: p2099[1] are influenced.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	Inverted	Not inverted	-
	01	Bit 1	Inverted	Not inverted	-
	02	Bit 2	Inverted	Not inverted	-
	03	Bit 3	Inverted	Not inverted	-
	04	Bit 4	Inverted	Not inverted	-
	05	Bit 5	Inverted	Not inverted	-
	06	Bit 6	Inverted	Not inverted	-
	07	Bit 7	Inverted	Not inverted	-
	08	Bit 8	Inverted	Not inverted	-
	09	Bit 9	Inverted	Not inverted	-
	10	Bit 10	Inverted	Not inverted	-
	11	Bit 11	Inverted	Not inverted	-
	12	Bit 12	Inverted	Not inverted	-
	13	Bit 13	Inverted	Not inverted	-
	14	Bit 14	Inverted	Not inverted	-
	15	Bit 15	Inverted	Not inverted	-
Dependency:	Refer to: r2094, r2095, p2099				
p2099[0...1]	CI: Connector-binector converter signal source / Con/bin S_src				
	Access level: 3	Calculated: -	Data type: U32 / Integer16		
	Can be changed: U, T	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 2468		
	Min	Max	Factory setting		
	-	-	0		
Description:	Sets the signal source for the connector-binector converter. A PZD receive word can be selected as signal source. The signals are available to be serially passed-on (interconnection).				
Dependency:	Refer to: r2094, r2095				
Note:	From the signal source set via the connector input, the corresponding lower 16 bits are converted. p2099[0...1] together with r2094.0...15 and r2095.0...15 forms two connector-binector converters: Connector input p2099[0] to binector output in r2094.0...15 Connector input p2099[1] to binector output in r2095.0...15				
p2100[0...19]	Setting the fault number for fault response / F_no F response				
	Access level: 3	Calculated: -	Data type: Unsigned16		
	Can be changed: U, T	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 1750, 8075		
	Min	Max	Factory setting		
	0	65535	0		
Description:	Selects the faults for which the fault response should be changed				
Dependency:	The fault is selected and the required response is set under the same index. Refer to: p2101				

- Notice:** For the following cases, it is not possible to re-parameterize the fault response to a fault:
- if there is no existing fault number.
 - the message type is not "fault" (F).
- Note:** Re-parameterization is also possible if a fault is present. The change only becomes effective after the fault has been resolved.

p2101[0...19] Setting the fault response / Fault response

Access level: 3	Calculated: -	Data type: Integer16
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 1750, 8075
Min	Max	Factory setting
0	6	0

Description: Sets the fault response for the selected fault.

Value:

- 0: NONE
- 1: OFF1
- 2: OFF2
- 3: OFF3
- 5: STOP2
- 6: Internal armature short-circuit / DC braking

Dependency: The fault is selected and the required response is set under the same index.
Refer to: p2100

Note: Re-parameterization is also possible if a fault is present. The change only becomes effective after the fault has been resolved.

The fault response can only be changed for faults with the appropriate identification.

Example:

F12345 and fault response = NONE (OFF1, OFF2)

--> The fault response NONE can be changed to OFF1 or OFF2.

Re value = 1 (OFF1):

Braking along the ramp-function generator down ramp followed by a pulse inhibit.

Re value = 2 (OFF2):

Internal/external pulse inhibit.

Re value = 3 (OFF3):

Braking along the OFF3 down ramp followed by a pulse inhibit.

Re value = 5 (STOP2):

n_set = 0

Re value = 6 (armature short-circuit, internal/DC braking):

This value can only be set for all drive data sets when p1231 = 4.

a) DC braking is not possible for synchronous motors.

b) DC braking is possible for induction motors.

p2103[0...n] BI: 1. Acknowledge faults / 1. Acknowledge

CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2441, 2442, 2443, 2447, 2475, 2546, 9220, 9677, 9678
CU240D-2_PN_F	Min	Max	Factory setting
	-	-	[0] 2090.7
			[1] 722.2
			[2] 2090.7
			[3] 2090.7

Description: Sets the first signal source to acknowledge faults.

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: A fault acknowledgement is triggered with a 0/1 signal.

p2103[0...n]	BI: 1. Acknowledge faults / 1. Acknowledge		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2441, 2442, 2443, 2447, 2475, 2546, 9220, 9677, 9678
	Min	Max	Factory setting
	-	-	[0] 722.2
			[1] 0
			[2] 0
			[3] 0
Description:	Sets the first signal source to acknowledge faults.		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
Note:	A fault acknowledgement is triggered with a 0/1 signal.		
p2104[0...n]	BI: 2. Acknowledge faults / 2. Acknowledge		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2546, 8060
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	[0] 722.2
			[1] 0
			[2] 0
			[3] 0
Description:	Sets the second signal source to acknowledge faults.		
Note:	A fault acknowledgement is triggered with a 0/1 signal.		
p2104[0...n]	BI: 2. Acknowledge faults / 2. Acknowledge		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2546, 8060
	Min	Max	Factory setting
	-	-	0
Description:	Sets the second signal source to acknowledge faults.		
Note:	A fault acknowledgement is triggered with a 0/1 signal.		
p2105[0...n]	BI: 3. Acknowledge faults / 3. Acknowledge		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2546, 8060
	Min	Max	Factory setting
	-	-	0
Description:	Sets the third signal source to acknowledge faults.		
Note:	A fault acknowledgement is triggered with a 0/1 signal.		

p2106[0...n]	BI: External fault 1 / External fault 1		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2546
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for external fault 1.		
Dependency:	Refer to: F07860		
Note:	An external fault is triggered with a 1/0 signal.		
p2107[0...n]	BI: External fault 2 / External fault 2		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2546
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for external fault 2.		
Dependency:	Refer to: F07861		
Note:	An external fault is triggered with a 1/0 signal.		
p2108[0...n]	BI: External fault 3 / External fault 3		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2546
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for external fault 3. External fault 3 is initiated by the following AND logic operation: - BI: p2108 negated - BI: p3111 - BI: p3112 negated		
Dependency:	Refer to: p3110, p3111, p3112 Refer to: F07862		
Note:	An external fault is triggered with a 1/0 signal.		
r2109[0...63]	Fault time removed in milliseconds / tflt resolved ms		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1750, 8060
	Min - [ms]	Max - [ms]	Factory setting - [ms]
Description:	Displays the system runtime in milliseconds when the fault was removed.		
Dependency:	Refer to: r0945, r0947, r0948, r0949, r2130, r2133, r2136		
Notice:	The time comprises r2136 (days) and r2109 (milliseconds).		
Note:	The buffer parameters are cyclically updated in the background (refer to status signal in r2139). The structure of the fault buffer and the assignment of the indices is shown in r0945.		

r2110[0...63]	Alarm number / Alarm number		
	Access level: 2	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8065
	Min	Max	Factory setting
	-	-	-
Description:	This parameter is identical to r2122.		
p2111	Alarm counter / Alarm counter		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1750, 8065
	Min	Max	Factory setting
	0	65535	0
Description:	Number of alarms that have occurred after the last reset.		
Dependency:	When p2111 is set to 0, the following is initiated: - all of the alarms of the alarm buffer that have gone [0...7] are transferred into the alarm history [8...63]. - the alarm buffer [0...7] is deleted.		
	Refer to: r2110, r2122, r2123, r2124, r2125		
Note:	The parameter is reset to 0 at POWER ON.		
p2112[0...n]	BI: External alarm 1 / External alarm 1		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2546
	Min	Max	Factory setting
	-	-	1
Description:	Sets the signal source for external alarm 1.		
Dependency:	Refer to: A07850		
Note:	An external alarm is triggered with a 1/0 signal.		
r2114[0...1]	System runtime total / Sys runtime tot		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the total system runtime for the drive unit. The time comprises r2114[0] (milliseconds) and r2114[1] (days). After r2114[0] has reached a value of 86.400.000 ms (24 hours) this value is reset and r2114[1] is incremented.		
Index:	[0] = Milliseconds [1] = Days		
Dependency:	Refer to: r0948, r2109, r2123, r2125, r2130, r2136, r2145, r2146		
Note:	When the electronic power supply is switched out, the counter values are saved. After the drive unit is powered up, the counter continues to run with the last value that was saved.		

p2116[0...n]	BI: External alarm 2 / External alarm 2		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2546
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for external alarm 2.		
Dependency:	Refer to: A07851		
Note:	An external alarm is triggered with a 1/0 signal.		
p2117[0...n]	BI: External alarm 3 / External alarm 3		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 2546
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for external alarm 3.		
Dependency:	Refer to: A07852		
Note:	An external alarm is triggered with a 1/0 signal.		
p2118[0...19]	Sets the message number for message type. / Msg_no Msg_type		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1750, 8075
	Min 0	Max 65535	Factory setting 0
Description:	Selects faults or alarms for which the message type should be changed.		
Dependency:	Selects the fault or alarm selection and sets the required type of message realized under the same index. Refer to: p2119		
Notice:	It is not possible to re-parameterize the message type in the following cases: - if there is no existing message number.		
Note:	Re-parameterization is also possible if a message is present. The change only becomes effective after the message has gone.		
p2119[0...19]	Setting the message type / Message type		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1750, 8075
	Min 1	Max 3	Factory setting 1
Description:	Sets the message type for the selected fault or alarm.		
Value:	1: Fault (F) 2: Alarm (A) 3: No message (N)		
Dependency:	Selects the fault or alarm selection and sets the required type of message realized under the same index. Refer to: p2118		
Note:	Re-parameterization is also possible if a message is present. The change only becomes effective after the message has gone. The message type can only be changed for messages with the appropriate identification.		

Example:

F12345(A) --> Fault F12345 can be changed to alarm A12345.

In this case, the message number that may be possibly entered in p2100[0...19] and p2126[0...19] is automatically removed.

r2120	CO: Sum of fault and alarm buffer changes / Sum buffer changed		
	Access level: 4	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8065
	Min -	Max -	Factory setting -
Description:	Displays the sum of all of the fault and alarm buffer changes in the drive unit.		
Dependency:	Refer to: r0944, r2121		
r2121	CO: Counter alarm buffer changes / Alrm buff changed		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8065
	Min -	Max -	Factory setting -
Description:	This counter is incremented every time the alarm buffer changes.		
Dependency:	Refer to: r2110, r2122, r2123, r2124, r2125		
r2122[0...63]	Alarm code / Alarm code		
	Access level: 2	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1750, 8065
	Min -	Max -	Factory setting -
Description:	Displays the number of alarms that have occurred.		
Dependency:	Refer to: r2110, r2123, r2124, r2125, r2134, r2145, r2146		
Notice:	The properties of the alarm buffer should be taken from the corresponding product documentation.		
Note:	The buffer parameters are cyclically updated in the background (refer to status signal in r2139). Alarm buffer structure (general principle): r2122[0], r2124[0], r2123[0], r2125[0] --> alarm 1 (the oldest) ... r2122[7], r2124[7], r2123[7], r2125[7] --> Alarm 8 (the latest) When the alarm buffer is full, the alarms that have gone are entered into the alarm history: r2122[8], r2124[8], r2123[8], r2125[8] --> Alarm 1 (the latest) ... r2122[63], r2124[63], r2123[63], r2125[63] --> alarm 56 (the oldest)		
r2123[0...63]	Alarm time received in milliseconds / t_alarm rcv ms		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1750, 8065
	Min - [ms]	Max - [ms]	Factory setting - [ms]
Description:	Displays the system runtime in milliseconds when the alarm occurred.		
Dependency:	Refer to: r2110, r2122, r2124, r2125, r2134, r2145, r2146		
Notice:	The time comprises r2145 (days) and r2123 (milliseconds).		

Note: The buffer parameters are cyclically updated in the background (refer to status signal in r2139).
The structure of the alarm buffer and the assignment of the indices is shown in r2122.

r2124[0...63]	Alarm value / Alarm value		
	Access level: 3	Calculated: -	Data type: Integer32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1750, 8065
	Min	Max	Factory setting
	-	-	-

Description: Displays additional information about the active alarm (as integer number).
Dependency: Refer to: r2110, r2122, r2123, r2125, r2134, r2145, r2146
Note: The buffer parameters are cyclically updated in the background (refer to status signal in r2139).
The structure of the alarm buffer and the assignment of the indices is shown in r2122.

r2125[0...63]	Alarm time removed in milliseconds / t_alarm res ms		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1750, 8065
	Min	Max	Factory setting
	- [ms]	- [ms]	- [ms]

Description: Displays the system runtime in milliseconds when the alarm was cleared.
Dependency: Refer to: r2110, r2122, r2123, r2124, r2134, r2145, r2146
Notice: The time comprises r2146 (days) and r2125 (milliseconds).
Note: The buffer parameters are cyclically updated in the background (refer to status signal in r2139).
The structure of the alarm buffer and the assignment of the indices is shown in r2122.

p2126[0...19]	Setting fault number for acknowledge mode / Fault_no ackn_mode		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1750, 8075
	Min	Max	Factory setting
	0	65535	0

Description: Selects the faults for which the acknowledge mode is to be changed
Dependency: Selects the faults and sets the required acknowledge mode realized under the same index
Refer to: p2127
Notice: It is not possible to re-parameterize the acknowledge mode of a fault in the following cases:
- Fault number does not exist.
- Message type is not "fault" (F).
Note: Re-parameterization is also possible if a fault is present. The change only becomes effective after the fault has been resolved.

p2127[0...19]	Sets acknowledgement mode / Acknowledge mode		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1750, 8075
	Min	Max	Factory setting
	1	2	1

Description: Sets the acknowledge mode for selected fault.
Value: 1: Acknowledgment only using POWER ON
2: Ack IMMEDIATELY after the fault cause has been removed
Dependency: Selects the faults and sets the required acknowledge mode realized under the same index
Refer to: p2126

- Notice:** It is not possible to re-parameterize the acknowledge mode of a fault in the following cases:
 - if there is no existing fault number.
 - the message type is not "fault" (F).
- Note:** Re-parameterization is also possible if a fault is present. The change only becomes effective after the fault has been resolved.
 The acknowledge mode can only be changed for faults with the appropriate identification.
 Example:
 F12345 and acknowledge mode = IMMEDIATELY (POWER ON)
 --> The acknowledge mode can be changed from IMMEDIATELY to POWER ON.

p2128[0...15]	Selecting fault/alarm code for trigger / Message trigger		
Access level: 3	Calculated: -	Data type: Unsigned16	
Can be changed: U, T	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: 1750, 8070	
Min 0	Max 65535	Factory setting 0	
Description:	Selects faults or alarms which can be used as trigger.		
Dependency:	Refer to: r2129		

r2129.0...15	CO/BO: Trigger word for faults and alarms / Trigger word		
Access level: 3	Calculated: -	Data type: Unsigned16	
Can be changed: -	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: 1530, 8070	
Min -	Max -	Factory setting -	

Description: Trigger signal for the selected faults and alarms

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Trigger signal p2128[0]	ON	OFF	-
	01	Trigger signal p2128[1]	ON	OFF	-
	02	Trigger signal p2128[2]	ON	OFF	-
	03	Trigger signal p2128[3]	ON	OFF	-
	04	Trigger signal p2128[4]	ON	OFF	-
	05	Trigger signal p2128[5]	ON	OFF	-
	06	Trigger signal p2128[6]	ON	OFF	-
	07	Trigger signal p2128[7]	ON	OFF	-
	08	Trigger signal p2128[8]	ON	OFF	-
	09	Trigger signal p2128[9]	ON	OFF	-
	10	Trigger signal p2128[10]	ON	OFF	-
	11	Trigger signal p2128[11]	ON	OFF	-
	12	Trigger signal p2128[12]	ON	OFF	-
	13	Trigger signal p2128[13]	ON	OFF	-
	14	Trigger signal p2128[14]	ON	OFF	-
	15	Trigger signal p2128[15]	ON	OFF	-

Dependency: If one of the faults or alarms selected in p2128[n] occurs, then the particular bit of this binector output is set.
 Refer to: p2128

Note: CO: r2129 = 0 --> None of the selected messages has occurred.
 CO: r2129 > 0 --> At least one of the selected messages has occurred.

r2130[0...63]	Fault time received in days / t_fault recv days		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8060
	Min	Max	Factory setting
	-	-	-
Description:	Displays the system runtime in days when the fault occurred.		
Dependency:	Refer to: r0945, r0947, r0948, r0949, r2109, r2133, r2136		
Notice:	The time comprises r2130 (days) and r0948 (milliseconds). The value displayed in p2130 refers to 01.01.1970.		
Note:	The buffer parameters are cyclically updated in the background (refer to status signal in r2139).		
r2131	CO: Actual fault code / Actual fault code		
	Access level: 2	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8060
	Min	Max	Factory setting
	-	-	-
Description:	Displays the code of the oldest active fault.		
Dependency:	Refer to: r3131, r3132		
Note:	0: No fault present.		
r2132	CO: Actual alarm code / Actual alarm code		
	Access level: 2	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8065
	Min	Max	Factory setting
	-	-	-
Description:	Displays the code of the last alarm that occurred.		
Note:	0: No alarm present.		
r2133[0...63]	Fault value for float values / Fault val float		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8060
	Min	Max	Factory setting
	-	-	-
Description:	Displays additional information about the fault that occurred for float values.		
Dependency:	Refer to: r0945, r0947, r0948, r0949, r2109, r2130, r2136		
Note:	The buffer parameters are cyclically updated in the background (refer to status signal in r2139).		
r2134[0...63]	Alarm value for float values / Alarm value float		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8065
	Min	Max	Factory setting
	-	-	-
Description:	Displays additional information about the active alarm for float values.		
Dependency:	Refer to: r2110, r2122, r2123, r2124, r2125, r2145, r2146		
Note:	The buffer parameters are cyclically updated in the background (refer to status signal in r2139).		

r2135.12...15	CO/BO: Status word faults/alarms 2 / ZSW fault/alarm 2				
	Access level: 2	Calculated: -	Data type: Unsigned16		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 1530, 2548		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the second status word of faults and alarms.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	12	Fault motor overtemperature	Yes	No	-
	13	Fault power unit thermal overload	Yes	No	-
	14	Alarm motor overtemperature	Yes	No	-
	15	Alarm power unit thermal overload	Yes	No	-

r2136[0...63]	Fault time removed in days / t_flt resolv. days			
	Access level: 3	Calculated: -	Data type: Unsigned16	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: 8060	
	Min	Max	Factory setting	
	-	-	-	
Description:	Displays the system runtime in days when the fault was removed.			
Dependency:	Refer to: r0945, r0947, r0948, r0949, r2109, r2130, r2133			
Notice:	The time comprises r2136 (days) and r2109 (milliseconds).			
Note:	The buffer parameters are cyclically updated in the background (refer to status signal in r2139).			

r2138.7...15	CO/BO: Control word faults/alarms / STW fault/alarm				
	Access level: 2	Calculated: -	Data type: Unsigned16		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 1530, 2546		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the control word of the faults and alarms.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	07	Acknowledge fault	Yes	No	-
	10	External alarm 1 (A07850) effective	Yes	No	-
	11	External alarm 2 (A07851) effective	Yes	No	-
	12	External alarm 3 (A07852) effective	Yes	No	-
	13	External fault 1 (F07860) effective	Yes	No	-
	14	External fault 2 (F07861) effective	Yes	No	-
	15	External fault 3 (F07862) effective	Yes	No	-
Dependency:	Refer to: p2103, p2104, p2105, p2106, p2107, p2108, p2112, p2116, p2117, p3110, p3111, p3112				

r2139.0...12	CO/BO: Status word faults/alarms 1 / ZSW fault/alarm 1				
	Access level: 2	Calculated: -	Data type: Unsigned16		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 1530, 2548		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the first status word of faults and alarms.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Being acknowledged	Yes	No	-
	01	Acknowledgment required	Yes	No	-
	03	Fault present	Yes	No	-

06	Internal message 1 present	Yes	No	-
07	Alarm present	Yes	No	-
08	Internal message 2 present	Yes	No	-
11	Alarm class bit 0	High	Low	-
12	Alarm class bit 1	High	Low	-

Note:

Re bit 03, 07:

These bits are set if at least one fault/alarm occurs. Data is entered into the fault/alarm buffer with delay. This is the reason that the fault/alarm buffer should only be read if, after "fault present"/"alarm present" has occurred, a change in the buffer was also detected (r0944, r9744, r2121).

Re bit 06, 08:

These status bits are used for internal diagnostic purposes only.

Re bit 11, 12:

These status bits are used for the classification of internal alarm classes and are intended for diagnostic purposes only on certain automation systems with integrated SINAMICS functionality.

p2140[0...n]**Hysteresis speed 2 / n_hysteresis 2**

Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: 3_1	Unit selection: p0505	Func. diagram: 8010
Min 0.00 [rpm]	Max 300.00 [rpm]	Factory setting 90.00 [rpm]

Description:

Sets the hysteresis speed (bandwidth) for the following signals:

"|n_act| <= speed threshold value 2" (BO: r2197.1)

"|n_act| > speed threshold value 2" (BO: r2197.2)

Dependency:

Refer to: p2155, r2197

p2141[0...n]**Speed threshold 1 / n_thresh val 1**

Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: 3_1	Unit selection: p0505	Func. diagram: 8010
Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 5.00 [rpm]

Description:

Sets the speed threshold value for the signal "f or n comparison value reached or exceeded" (BO: r2199.1).

Dependency:

Refer to: p2142, r2199

p2142[0...n]**Hysteresis speed 1 / n_hysteresis 1**

Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: 3_1	Unit selection: p0505	Func. diagram: 8010
Min 0.00 [rpm]	Max 300.00 [rpm]	Factory setting 2.00 [rpm]

Description:

Sets the hysteresis speed (bandwidth) for the signal "f or n / v comparison value reached or exceeded" (BO: r2199.1).

Dependency:

Refer to: p2141, r2199

p2144[0...n]**BI: Motor stall monitoring enable (negated) / Mot stall enab neg**

Access level: 4	Calculated: -	Data type: U32 / Binary
Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
Units group: -	Unit selection: -	Func. diagram: 8012
Min -	Max -	Factory setting 0

Description:

Sets the signal source for the negated enable (0 = enable) of the motor stall monitoring.

List of parameters

Dependency: Refer to: p2163, p2164, p2166, r2197, r2198
Refer to: F07900

Note: When interconnecting the enable signal with r2197.7 then the stall signal is suppressed if there is no speed setpoint - actual value deviation.

r2145[0...63] Alarm time received in days / t_alarm rcv days

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 8065
Min	Max	Factory setting
-	-	-

Description: Displays the system runtime in days when the alarm occurred.

Dependency: Refer to: r2110, r2122, r2123, r2124, r2125, r2134, r2146

Notice: The time comprises r2145 (days) and r2123 (milliseconds).

Note: The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

r2146[0...63] Alarm time removed in days / t_alarm res days

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 8065
Min	Max	Factory setting
-	-	-

Description: Displays the system runtime in days when the alarm was cleared.

Dependency: Refer to: r2110, r2122, r2123, r2124, r2125, r2134, r2145

Notice: The time comprises r2146 (days) and r2125 (milliseconds).

Note: The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

p2148[0...n] BI: RFG active / RFG active

Access level: 3	Calculated: p0340 = 1,3,5	Data type: U32 / Binary
Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
Units group: -	Unit selection: -	Func. diagram: 8011
Min	Max	Factory setting
-	-	0

Description: Sets the signal source for the signal "ramp-function generator active" for the following signals/messages:
"Speed setpoint - actual value deviation within tolerance t_on" (BO: r2199.4)
"Ramp-up/ramp-down completed" (BO: r2199.5)

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: The binector input is automatically interconnected to r1199.2 as a default setting.

p2149[0...n] Monitoring configuration / Monit config

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: 8010, 8013
Min	Max	Factory setting
-	-	0000 1001 bin

Description: Sets the configuration for messages and monitoring functions.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Enable alarm A07903	Yes	No	8010
	01	Load monitoring only in the 1st quadrant	Yes	No	8013
	03	n_act > p2155 own hysteresis	Yes	No	8010
	05	Stall monitoring for encoderless speed control	Yes	No	8010

Dependency: Refer to: r2197
Refer to: A07903

Note: Re bit 00:
Alarm A07903 is output when the bit is set with $r2197.7 = 0$ ($n_set \lt n_act$).
Re bit 01:
When the bit is set, load monitoring is only carried out in the 1st quadrant as a result of the positive characteristic parameters (p2182 ... p2190).
Re bit 03:
When the bit is set, r2197 bit 1 and bit 2 are determined via separate hystereses.
Re bit 05: only for synchronous motors
When this bit is set, a change to open-loop speed controlled operation is only possible when the motor is stationary.

p2150[0...n] Hysteresis speed 3 / n_hysteresis 3

Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: 3_1	Unit selection: p0505	Func. diagram: 8010
Min 0.00 [rpm]	Max 300.00 [rpm]	Factory setting 2.00 [rpm]

Description: Sets the hysteresis speed (bandwidth) for the following signals:
"|n_act| < speed threshold value 3" (BO: r2199.0)
"n_set >= 0" (BO: r2198.5)
"n_act >= 0" (BO: r2197.3)

Dependency: Refer to: p2161, r2197, r2199

p2151[0...n] CI: Speed setpoint for messages/signals / n_set for msg

Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
Units group: -	Unit selection: -	Func. diagram: 8010
Min -	Max -	Factory setting 1170[0]

Description: Sets the signal source for the speed setpoint for the following messages:
"Speed setpoint - actual value deviation within tolerance t_off" (BO: r2197.7)
"Ramp-up/ramp-down completed" (BO: r2199.5)
"|n_set| < p2161" (BO: r2198.4)
"n_set > 0" (BO: r2198.5)

Dependency: Refer to: r2197, r2198, r2199

p2152[0...n] Delay for comparison n > n_max / Del n > n_max

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: -
Min 0 [ms]	Max 10000 [ms]	Factory setting 200 [ms]

Description: Delay time for the comparison of the speed with the maximum speed.

Dependency: Refer to: p1082, r1084, r1087, p2162

p2153[0...n]	Speed actual value filter time constant / n_act_filt T		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 8010
	Min 0 [ms]	Max 1000000 [ms]	Factory setting 0 [ms]
Description:	Sets the time constant of the PT1 element to smooth the speed / velocity actual value. The smoothed actual speed/velocity is compared with the threshold values and is only used for messages and signals.		
Dependency:	Refer to: r2169		
p2155[0...n]	Speed threshold 2 / n_thresh val 2		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 8010
	Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 900.00 [rpm]
Description:	Sets the speed threshold value for the following messages: " n_act <= speed threshold value 2" (BO: r2197.1) " n_act > speed threshold value 2" (BO: r2197.2)		
Dependency:	Refer to: p2140, r2197		
p2156[0...n]	On delay comparison value reached / t_on cmpr val rchd		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 8010
	Min 0.0 [ms]	Max 10000.0 [ms]	Factory setting 0.0 [ms]
Description:	Sets the switch-in delay time for the signal "comparison value reached" (BO: r2199.1).		
Dependency:	Refer to: p2141, p2142, r2199		
p2157[0...n]	Speed threshold 5 / n_thresh val 5		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: -
	Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 900.00 [rpm]
Description:	Sets the speed threshold value for the following messages: " n_act <= speed threshold value 5" (BO: r2198.0) " n_act > speed threshold value 5" (BO: r2198.1)		
Dependency:	Refer to: p2150, p2158		
p2158[0...n]	Delay for n_act comparison with speed threshold value 5 / Del compar n_5		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [ms]	Max 10000 [ms]	Factory setting 10 [ms]
Description:	Delay time for the comparison of the speed with the speed threshold value 5 (P2157).		
Dependency:	Refer to: p2150, p2157		

p2159[0...n]	Speed threshold 6 / n_thresh val 6		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: -
	Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 900.00 [rpm]
Description:	Sets the speed threshold value for the following messages: " n_act <= speed threshold value 6" (BO: r2198.2) " n_act > speed threshold value 6" (BO: r2198.3)		
Dependency:	Refer to: p2150, p2160		
p2160[0...n]	Delay for n_act comparison with speed threshold value 6 / Del compar n_6		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [ms]	Max 10000 [ms]	Factory setting 10 [ms]
Description:	Sets the delay time for the comparison of the speed with the speed threshold value 6 (p2159).		
Dependency:	Refer to: p2150, p2159		
p2161[0...n]	Speed threshold 3 / n_thresh val 3		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 8010
	Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 5.00 [rpm]
Description:	Sets the speed threshold value for the signal " n_act < speed threshold value 3" (BO: r2199.0).		
Dependency:	Refer to: p2150, r2199		
p2162[0...n]	Hysteresis speed n_act > n_max / Hyst n_act>n_max		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 8010
	Min 0.00 [rpm]	Max 60000.00 [rpm]	Factory setting 0.00 [rpm]
Description:	Sets the hysteresis speed (bandwidth) for the signal "n_act > n_max" (BO: r2197.6).		
Dependency:	Refer to: r1084, r1087, r2197		
Notice:	For p0322 = 0, the following applies: p2162 <= 0.1 * p0311 For p0322 > 0, the following applies: p2162 <= 1.02 * p0322 - p1082 If one of the conditions is violated, p2162 is appropriately and automatically reduced when exiting the commissioning mode.		
Note:	For a negative speed limit (r1087) the hysteresis is effective below the limit value and for a positive speed limit (r1084) above the limit value. If significant overshoot occurs in the maximum speed range (e.g. due to load shedding), you are advised to increase the dynamic response of the speed controller (if possible). If this is insufficient, the hysteresis p2162 can only be increased by more than 10% of the rated speed when the maximum speed (p0322) of the motor is sufficiently greater than the speed limit p1082.		

p2163[0...n]	Speed threshold 4 / n_thresh val 4		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 8010
	Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 90.00 [rpm]
Description:	Sets the speed threshold value for the "speed setpoint - actual value deviation in tolerance t_off" signal/message (BO: r2197.7).		
Dependency:	Refer to: p2164, p2166, r2197		
p2164[0...n]	Hysteresis speed 4 / n_hysteresis 4		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 8010
	Min 0.00 [rpm]	Max 200.00 [rpm]	Factory setting 2.00 [rpm]
Description:	Sets the hysteresis speed (bandwidth) for the "speed setpoint - actual value deviation in tolerance t_off" signal/message (BO: r2197.7).		
Dependency:	Refer to: p2163, p2166, r2197		
p2166[0...n]	Off delay n_act = n_set / t_del_off n_i=n_so		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 8010
	Min 0.0 [ms]	Max 10000.0 [ms]	Factory setting 200.0 [ms]
Description:	Sets the switch-off delay time for the "speed setpoint - actual value deviation in tolerance t_off" signal/message (BO: r2197.7).		
Dependency:	Refer to: p2163, p2164, r2197		
p2167[0...n]	Switch-on delay n_act = n_set / t_on n_act=n_set		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 8010
	Min 0.0 [ms]	Max 10000.0 [ms]	Factory setting 200.0 [ms]
Description:	Sets the switch-on delay for the "speed setpoint - actual value deviation in tolerance t_on" signal/message (BO: r2199.4).		
r2169	CO: Actual speed smoothed signals / n_act smth message		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 1750, 8010, 8012, 8013
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the smoothed actual speed for messages/signals.		
Dependency:	Refer to: p2153		

p2170[0...n]	Current threshold value / I_thres		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2002	Dyn. index: DDS, p0180
	Units group: 6_2	Unit selection: p0505	Func. diagram: -
	Min 0.00 [Arms]	Max 10000.00 [Arms]	Factory setting 0.00 [Arms]
Description:	Sets the absolute current threshold for the messages. "I_act >= I_threshold p2170" (BO: r2197.8) "I_act < I_threshold p2170" (BO: r2198.8)		
Dependency:	Refer to: p2171		
p2171[0...n]	Current threshold value reached delay time / t_del I_thres rch		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [ms]	Max 10000 [ms]	Factory setting 10 [ms]
Description:	Sets the delay time for the comparison of the current actual value (r0068) with the current threshold value (p2170).		
Dependency:	Refer to: p2170		
p2172[0...n]	DC link voltage threshold value / Vdc thresh val		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2001	Dyn. index: DDS, p0180
	Units group: 5_2	Unit selection: p0505	Func. diagram: -
	Min 0 [V]	Max 2000 [V]	Factory setting 800 [V]
Description:	Sets the DC link voltage threshold value for the following messages: "Vdc_act <= Vdc_threshold p2172" (BO: r2197.9) "Vdc_act > Vdc_threshold p2172" (BO: r2197.10)		
Dependency:	Refer to: p2173		
p2173[0...n]	DC link voltage comparison delay time / t_del Vdc		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [ms]	Max 10000 [ms]	Factory setting 10 [ms]
Description:	Sets the delay time for the comparison of the DC link voltage r0070 with the threshold value p2172.		
Dependency:	Refer to: p2172		
p2174[0...n]	Torque threshold value 1 / M_thresh val 1		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 7_1	Unit selection: p0505	Func. diagram: 8012
	Min 0.00 [Nm]	Max 20000000.00 [Nm]	Factory setting 5.13 [Nm]
Description:	Sets the torque threshold value for the messages: "Torque setpoint < torque threshold value 1 and n_set reached" (BO: r2198.9) "Torque setpoint < torque threshold value 1" (BO: r2198.10) "Torque setpoint > torque threshold value 1" (BO: r2198.13)		

Dependency: Refer to: p2195, r2198

p2175[0...n] Motor blocked speed threshold / Mot lock n_thresh

Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: 3_1	Unit selection: p0505	Func. diagram: 8012
Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 120.00 [rpm]

Description: Sets the speed threshold for the message "Motor blocked" (BO: r2198.6).

Dependency: Refer to: p0500, p2177, r2198

Note: The following applies for encoderless vector control for induction motors:
At low speeds in open-loop speed controlled operation (see p1755, p1756), a blocked motor cannot be detected.
The following applies for encoderless vector control for permanent magnet synchronous motors:
At low speeds in open-loop speed controlled operation (see p1755, p1756), a blocked motor can only be detected if p2175 = p1755, and p1750 bit 6 is set to 1.

p2176[0...n] Torque threshold value comparison delay time / M_thrsh comp T_del

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: -
Min 0 [ms]	Max 10000 [ms]	Factory setting 200 [ms]

Description: Sets the delay time for the comparison of the torque actual value (r0080) with torque threshold value 1 (p2174).

Dependency: Refer to: p2174

p2177[0...n] Motor blocked delay time / Mot lock t_del

Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: 8012
Min 0.000 [s]	Max 65.000 [s]	Factory setting 3.000 [s]

Description: Sets the delay time for the message "Motor blocked" (BO: r2198.6).

Dependency: Refer to: p0500, p2175, r2198

Note: The following applies for sensorless vector control:
At low speeds a locked motor can only be detected if no change is made to open-loop speed controlled operation. If this is the case, the value in p2177 must be reduced accordingly (p2177 < p1758) before time p2177 has elapsed in order to detect the locked state reliably.
As countermeasure, it is generally also possible to set p1750.6. This is only not permitted if the drive is slowly reversed by the load at the torque limit (speed below p1755 for longer than p1758).

p2178[0...n] Motor stalled delay time / Mot stall t_del

Access level: 3	Calculated: p0340 = 1,3	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: 8012
Min 0.000 [s]	Max 10.000 [s]	Factory setting 0.010 [s]

Description: Sets the delay time for the message "Motor stalled" (BO: r2198.7).

Dependency: Refer to: r2198

Note: In the open-loop speed controlled operating range (see p1755, p1756), vector control stall monitoring depends on threshold p1745.
At higher speeds, the difference between flux setpoint r0083 and flux actual value r0084 is monitored.

p2179[0...n]	Output load identification current limit / Outp_Id iden I_lim		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2002	Dyn. index: DDS, p0180
	Units group: 6_2	Unit selection: p0505	Func. diagram: -
	Min 0.00 [Arms]	Max 1000.00 [Arms]	Factory setting 0.00 [Arms]
Description:	Sets the current limit for output load identification.		
Dependency:	Refer to: p2180		
Notice:	For synchronous motors the output current can be almost zero under no load conditions.		
Note:	A missing output load condition exists if the motor is either not connected or a phase has failed.		
p2180[0...n]	Missing output load delay time / No load t_delay		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [ms]	Max 10000 [ms]	Factory setting 2000 [ms]
Description:	Sets the delay time to detect a missing output load.		
Dependency:	Refer to: p2179		
p2181[0...n]	Load monitoring response / Load monit resp		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 8013
	Min 0	Max 6	Factory setting 0
Description:	Sets the response when evaluating the load monitoring.		
Value:	0: Load monitoring disabled 1: A07920 for torque/speed too low 2: A07921 for torque/speed too high 3: A07922 for torque/speed out of tolerance 4: F07923 for torque/speed too low 5: F07924 for torque/speed too high 6: F07925 for torque/speed out of tolerance		
Dependency:	Refer to: p2182, p2183, p2184, p2185, p2186, p2187, p2188, p2189, p2190, p2192, p2193, r2198, p3230, p3231 Refer to: A07920, A07921, A07922, F07923, F07924, F07925		
Note:	The response to the faults F07923 ... F07925 can be set. F07926 is evaluated only if p2181 is not zero. This parameter setting has no effect on the production of fault F07936.		
p2182[0...n]	Load monitoring speed threshold value 1 / n_thresh 1		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 8013
	Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 150.00 [rpm]
Description:	Sets the speed/torque envelope curve for load monitoring. The envelope curve (upper and lower envelope curve) is defined as follows based on 3 speed thresholds: p2182 (n_threshold 1) --> p2185 (M_threshold 1, upper), p2186 (M_threshold 1, lower) p2183 (n_threshold 2) --> p2187 (M_threshold 2, upper), p2188 (M_threshold 2, lower) p2184 (n_threshold 3) --> p2189 (M_threshold 3, upper), p2190 (M_threshold 3, lower)		

Dependency: The following applies: p2182 < p2183 < p2184
Refer to: p2183, p2184, p2185, p2186

Note: In order that the load monitoring can reliably respond, the speed threshold p2182 should always be set lower than the minimum motor speed to be monitored.

p2183[0...n] Load monitoring speed threshold value 2 / n_thresh 2

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: 3_1	Unit selection: p0505	Func. diagram: 8013
Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 900.00 [rpm]

Description: Sets the speed/torque envelope curve for load monitoring.
The envelope curve (upper and lower envelope curve) is defined as follows based on 3 speed thresholds:
p2182 (n_threshold 1) --> p2185 (M_threshold 1, upper), p2186 (M_threshold 1, lower)
p2183 (n_threshold 2) --> p2187 (M_threshold 2, upper), p2188 (M_threshold 2, lower)
p2184 (n_threshold 3) --> p2189 (M_threshold 3, upper), p2190 (M_threshold 3, lower)

Dependency: The following applies: p2182 < p2183 < p2184
Refer to: p2182, p2184, p2187, p2188

p2184[0...n] Load monitoring speed threshold value 3 / n_thresh 3

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: 3_1	Unit selection: p0505	Func. diagram: 8013
Min 0.00 [rpm]	Max 210000.00 [rpm]	Factory setting 1500.00 [rpm]

Description: Sets the speed/torque envelope curve for load monitoring.
The envelope curve (upper and lower envelope curve) is defined as follows based on 3 speed thresholds:
p2182 (n_threshold 1) --> p2185 (M_threshold 1, upper), p2186 (M_threshold 1, lower)
p2183 (n_threshold 2) --> p2187 (M_threshold 2, upper), p2188 (M_threshold 2, lower)
p2184 (n_threshold 3) --> p2189 (M_threshold 3, upper), p2190 (M_threshold 3, lower)

Dependency: The following applies: p2182 < p2183 < p2184
Refer to: p2182, p2183, p2189, p2190

Note: In order that the load monitoring can reliably respond, the speed threshold p2184 should always be set higher than the maximum motor speed to be monitored.

p2185[0...n] Load monitoring torque threshold 1 upper / M_thresh 1 upper

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: 7_1	Unit selection: p0505	Func. diagram: 8013
Min 0.00 [Nm]	Max 20000000.00 [Nm]	Factory setting 10000000.00 [Nm]

Description: Sets the speed/torque envelope curve for load monitoring.

Dependency: The following applies: p2185 > p2186
Refer to: p2182, p2186

Note: The upper envelope curve is defined by p2185, p2187 and p2189.

p2186[0...n]	Load monitoring torque threshold 1 lower / M_thresh 1 lower		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 7_1	Unit selection: p0505	Func. diagram: 8013
	Min 0.00 [Nm]	Max 20000000.00 [Nm]	Factory setting 0.00 [Nm]
Description:	Sets the speed/torque envelope curve for load monitoring.		
Dependency:	The following applies: p2186 < p2185 Refer to: p2182, p2185		
Note:	The lower envelope curve is defined by p2186, p2188 and p2190.		
p2187[0...n]	Load monitoring torque threshold 2 upper / M_thresh 2 upper		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 7_1	Unit selection: p0505	Func. diagram: 8013
	Min 0.00 [Nm]	Max 20000000.00 [Nm]	Factory setting 10000000.00 [Nm]
Description:	Sets the speed/torque envelope curve for load monitoring.		
Dependency:	The following applies: p2187 > p2188 Refer to: p2183, p2188		
Note:	The upper envelope curve is defined by p2185, p2187 and p2189.		
p2188[0...n]	Load monitoring torque threshold 2 lower / M_thresh 2 lower		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 7_1	Unit selection: p0505	Func. diagram: 8013
	Min 0.00 [Nm]	Max 20000000.00 [Nm]	Factory setting 0.00 [Nm]
Description:	Sets the speed/torque envelope curve for load monitoring.		
Dependency:	The following applies: p2188 < p2187 Refer to: p2183, p2187		
Note:	The lower envelope curve is defined by p2186, p2188 and p2190.		
p2189[0...n]	Load monitoring torque threshold 3 upper / M_thresh 3 upper		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 7_1	Unit selection: p0505	Func. diagram: 8013
	Min 0.00 [Nm]	Max 20000000.00 [Nm]	Factory setting 10000000.00 [Nm]
Description:	Sets the speed/torque envelope curve for load monitoring.		
Dependency:	The following applies: p2189 > p2190 Refer to: p2184, p2190		
Note:	The upper envelope curve is defined by p2185, p2187 and p2189.		

p2190[0...n]	Load monitoring torque threshold 3 lower / M_thresh 3 lower		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 7_1	Unit selection: p0505	Func. diagram: 8013
	Min 0.00 [Nm]	Max 20000000.00 [Nm]	Factory setting 0.00 [Nm]
Description:	Sets the speed/torque envelope curve for load monitoring.		
Dependency:	The following applies: p2190 < p2189 Refer to: p2184, p2189		
Note:	The lower envelope curve is defined by p2186, p2188 and p2190.		
p2192[0...n]	Load monitoring delay time / Load monit t_del		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 8013
	Min 0.00 [s]	Max 65.00 [s]	Factory setting 10.00 [s]
Description:	Sets the delay time to evaluate the load monitoring.		
p2193[0...n]	Load monitoring configuration / Load monit config		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 8013
	Min 0	Max 3	Factory setting 1
Description:	Sets the load monitoring configuration.		
Value:	0: Monitoring switched out 1: Monitoring torque and load drop 2: Monitoring speed and load drop 3: Monitoring load drop		
Dependency:	Refer to: p2182, p2183, p2184, p2185, p2186, p2187, p2188, p2189, p2190, p2192, r2198, p3230, p3231, p3232 Refer to: A07920, A07921, A07922, F07923, F07924, F07925, F07936		
p2194[0...n]	Torque threshold value 2 / M_thresh val 2		
	Access level: 3	Calculated: p0340 = 1,3,5	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 8012
	Min 0.00 [%]	Max 100.00 [%]	Factory setting 90.00 [%]
Description:	Sets the torque threshold value for the message "Torque utilization < torque threshold value 2" (BO: r2199.11). The message "torque setpoint < p2174" (BO: r2198.10) and "torque utilization < p2194" (BO: r2199.11) are only evaluated after the run-up and the delay time has expired.		
Dependency:	Refer to: r0033, p2195, r2199		

p2195[0...n]	Torque utilization switch-off delay / M_util t_off				
	Access level: 3	Calculated: -	Data type: FloatingPoint32		
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180		
	Units group: -	Unit selection: -	Func. diagram: 8012		
	Min 0.0 [ms]	Max 1000.0 [ms]	Factory setting 800.0 [ms]		
Description:	Sets the switch-off delay time for the negated signal "run-up completed". The message "torque setpoint < p2174" (BO: r2198.10) and "torque utilization < p2194" (BO: r2199.11) are only evaluated after the run-up and the delay time has expired.				
Dependency:	Refer to: p2174, p2194				
p2196[0...n]	Torque utilization scaling / M_util scal				
	Access level: 1	Calculated: -	Data type: FloatingPoint32		
	Can be changed: C(1, 3), U, T	Scaling: -	Dyn. index: DDS, p0180		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min 0.00 [%]	Max 1000.00 [%]	Factory setting 100.00 [%]		
Description:	Sets the scaling factor for torque utilization (r0033).				
r2197.0...13	CO/BO: Status word monitoring 1 / ZSW monitor 1				
	Access level: 3	Calculated: -	Data type: Unsigned16		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 1530, 2534		
	Min -	Max -	Factory setting -		
Description:	Displays the first status word for monitoring functions.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	n_act <= n_min p1080	Yes	No	8020
	01	n_act <= speed threshold value 2 p2155	Yes	No	8010
	02	n_act > speed threshold value 2 p2155	Yes	No	8010
	03	n_act >= 0	Yes	No	8011
	04	n_act >= n_set	Yes	No	8020
	05	n_act <= n_standstill p1226	Yes	No	8020
	06	n_act > n_max	Yes	No	8010
	07	Speed setp - act val deviation in tolerance t_off	Yes	No	8011
	08	I_act >= I_threshold value p2170	Yes	No	8020
	09	Vdc_act <= Vdc_threshold value p2172	Yes	No	8020
	10	Vdc_act > Vdc_threshold value p2172	Yes	No	8020
	11	Output load is not present	Yes	No	8020
	12	n_act > n_max (delayed)	Yes	No	8021
	13	n_act > n_max (F07901)	Yes	No	-
Notice:	Re bit 06: When the overspeed is reached, this bit is set and F07901 output immediately following this. The bit is canceled again as soon as the next pulse inhibit is present.				
Note:	Re bit 00: The threshold value is set in p1080 and the hysteresis in p2150. Re bit 01, 02: The threshold value is set in p2155 and the hysteresis in p2140. Re bit 03: 1 signal direction of rotation positive. 0 signal: direction of rotation negative. The hysteresis is set in p2150.				

Re bit 04:

The threshold value is set in r1119 and the hysteresis in p2150.

Re bit 05:

The threshold value is set in p1266 and the delay time in p1228.

Re bit 06:

The hysteresis is set in p2162.

Re bit 07:

The threshold value is set in p2163 and the hysteresis is set in p2164.

Re bit 08:

The threshold value is set in p2170 and the delay time in p2171.

Re bit 09, 10:

The threshold value is set in p2172 and the delay time in p2173.

Re bit 11:

The threshold value is set in p2179 and the delay time in p2180.

Re bit 12:

The threshold value is set in p2182, the hysteresis in p2162, and the delay time (for canceling the signal) in p2152.

Re bit 13:

Only for internal Siemens use.

r2198.0...13**CO/BO: Status word monitoring 2 / ZSW monitor 2**

Access level: 3

Calculated: -

Data type: Unsigned16

Can be changed: -

Scaling: -

Dyn. index: -

Units group: -

Unit selection: -

Func. diagram: 1530, 2536

Min

Max

Factory setting

-

-

-

Description:

Displays the second status word for monitoring functions.

Bit field:

Bit	Signal name	1 signal	0 signal	FP
00	n_act <= speed threshold value 5	Yes	No	8021
01	n_act > speed threshold value 5	Yes	No	8021
02	n_act <= speed threshold value 6	Yes	No	8021
03	n_act > speed threshold value 6	Yes	No	8021
04	n_set < p2161	Yes	No	8011
05	n_set > 0	Yes	No	8011
06	Motor blocked	Yes	No	8012
07	Motor stalled	Yes	No	8012
08	I_act < I_threshold value p2170	Yes	No	8020
09	M_act > torque threshold value 1 and n_set reached	Yes	No	8021
10	M_set < torque threshold value 1	Yes	No	8012
11	Load monitoring signals an alarm	Yes	No	8013
12	Load monitoring signals a fault condition	Yes	No	8013
13	M_act > torque threshold value 1	Yes	No	8021

Note:

Re bit 10:

The torque threshold value 1 is set in p2174.

Re bit 12:

This bit is reset after the fault cause disappears, even if the fault itself is still present.

r2199.0...11**CO/BO: Status word monitoring 3 / ZSW monitor 3**

Access level: 3

Calculated: -

Data type: Unsigned16

Can be changed: -

Scaling: -

Dyn. index: -

Units group: -

Unit selection: -

Func. diagram: 1530, 2537

Min

Max

Factory setting

-

-

-

Description:

Displays the third status word for monitoring functions.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	n_act < speed threshold value 3	Yes	No	8010
	01	f or n comparison value reached or exceeded	Yes	No	8010
	04	Speed setp - act val deviation in tolerance t_on	Yes	No	8011
	05	Ramp-up/ramp-down completed	Yes	No	8011
	11	Torque utilization < torque threshold value 2	Yes	No	8012

Note:

Re bit 00:
The speed threshold value 3 is set in p2161.

Re bit 01:
The comparison value is set in p2141. We recommend setting the hysteresis (p2142) for canceling the bit to a value lower than that in p2141. Otherwise, the bit is not reset.

Re bit 11:
The torque threshold value 2 is set in p2194.

p2200[0...n]	BI: Technology controller enable / Tec_ctrl enable		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source to switch in/switch out the technology controller.
The technology controller is switched in with a 1 signal.

p2201[0...n]	CO: Technology controller fixed value 1 / Tec_ctrl fix val1		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min	Max	Factory setting
	-200.00 [%]	200.00 [%]	10.00 [%]

Description: Sets the value for fixed value 1 of the technology controller.

Dependency: Refer to: p2220, p2221, p2222, p2223, r2224, r2229

Notice: A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.

p2202[0...n]	CO: Technology controller fixed value 2 / Tec_ctr fix val 2		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min	Max	Factory setting
	-200.00 [%]	200.00 [%]	20.00 [%]

Description: Sets the value for fixed value 2 of the technology controller.

Dependency: Refer to: p2220, p2221, p2222, p2223, r2224, r2229

Notice: A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.

p2203[0...n]	CO: Technology controller fixed value 3 / Tec_ctr fix val 3		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min -200.00 [%]	Max 200.00 [%]	Factory setting 30.00 [%]
Description:	Sets the value for fixed value 3 of the technology controller.		
Dependency:	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p2204[0...n]	CO: Technology controller fixed value 4 / Tec_ctr fix val 4		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min -200.00 [%]	Max 200.00 [%]	Factory setting 40.00 [%]
Description:	Sets the value for fixed value 4 of the technology controller.		
Dependency:	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p2205[0...n]	CO: Technology controller fixed value 5 / Tec_ctr fix val 5		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min -200.00 [%]	Max 200.00 [%]	Factory setting 50.00 [%]
Description:	Sets the value for fixed value 5 of the technology controller.		
Dependency:	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p2206[0...n]	CO: Technology controller fixed value 6 / Tec_ctr fix val 6		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min -200.00 [%]	Max 200.00 [%]	Factory setting 60.00 [%]
Description:	Sets the value for fixed value 6 of the technology controller.		
Dependency:	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

p2207[0...n]	CO: Technology controller fixed value 7 / Tec_ctr fix val 7		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min -200.00 [%]	Max 200.00 [%]	Factory setting 70.00 [%]
Description:	Sets the value for fixed value 7 of the technology controller.		
Dependency:	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

p2208[0...n]	CO: Technology controller fixed value 8 / Tec_ctr fix val 8		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min -200.00 [%]	Max 200.00 [%]	Factory setting 80.00 [%]
Description:	Sets the value for fixed value 8 of the technology controller.		
Dependency:	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

p2209[0...n]	CO: Technology controller fixed value 9 / Tec_ctr fix val 9		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min -200.00 [%]	Max 200.00 [%]	Factory setting 90.00 [%]
Description:	Sets the value for fixed value 9 of the technology controller.		
Dependency:	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

p2210[0...n]	CO: Technology controller fixed value 10 / Tec_ctr fix val 10		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min -200.00 [%]	Max 200.00 [%]	Factory setting 100.00 [%]
Description:	Sets the value for fixed value 10 of the technology controller.		
Dependency:	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

p2211[0...n]	CO: Technology controller fixed value 11 / Tec_ctr fix val 11		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min -200.00 [%]	Max 200.00 [%]	Factory setting 110.00 [%]
Description:	Sets the value for fixed value 11 of the technology controller.		
Dependency:	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p2212[0...n]	CO: Technology controller fixed value 12 / Tec_ctr fix val 12		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min -200.00 [%]	Max 200.00 [%]	Factory setting 120.00 [%]
Description:	Sets the value for fixed value 12 of the technology controller.		
Dependency:	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p2213[0...n]	CO: Technology controller fixed value 13 / Tec_ctr fix val 13		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min -200.00 [%]	Max 200.00 [%]	Factory setting 130.00 [%]
Description:	Sets the value for fixed value 13 of the technology controller.		
Dependency:	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
p2214[0...n]	CO: Technology controller fixed value 14 / Tec_ctr fix val 14		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min -200.00 [%]	Max 200.00 [%]	Factory setting 140.00 [%]
Description:	Sets the value for fixed value 14 of the technology controller.		
Dependency:	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

p2215[0...n]	CO: Technology controller fixed value 15 / Tec_ctr fix val 15		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950
CU240D-2_PN_F			
	Min -200.00 [%]	Max 200.00 [%]	Factory setting 150.00 [%]
Description:	Sets the value for fixed value 15 of the technology controller.		
Dependency:	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

p2216[0...n]	Technology controller fixed value selection method / Tec_ctr FixVal sel		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -
CU240D-2_PN_F			
	Min 1	Max 2	Factory setting 1
Description:	Sets the method to select the fixed setpoints.		
Value:	1: Direct selection 2: Binary selection		

p2220[0...n]	BI: Technology controller fixed value selection bit 0 / Tec_ctrl sel bit 0		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7950
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to select the fixed value of the technology controller.		
Dependency:	Refer to: p2221, p2222, p2223		

p2221[0...n]	BI: Technology controller fixed value selection bit 1 / Tec_ctrl sel bit 1		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7950
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to select the fixed value of the technology controller.		
Dependency:	Refer to: p2220, p2222, p2223		

p2222[0...n]	BI: Technology controller fixed value selection bit 2 / Tec_ctrl sel bit 2		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7950
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to select the fixed value of the technology controller.		
Dependency:	Refer to: p2220, p2221, p2223		

p2223[0...n]	BI: Technology controller fixed value selection bit 3 / Tec_ctrl sel bit 3			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary	
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170	
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7950	
CU240D-2_PN_F				
	Min	Max	Factory setting	
	-	-	0	
Description:	Sets the signal source to select the fixed value of the technology controller.			
Dependency:	Refer to: p2220, p2221, p2222			
r2224	CO: Technology controller fixed value effective / Tec_ctr FixVal eff			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32	
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -	
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7950	
CU240D-2_PN_F				
	Min	Max	Factory setting	
	- [%]	- [%]	- [%]	
Description:	Displays the selected and effective fixed value of the technology controller.			
Dependency:	Refer to: r2229			
r2225.0	CO/BO: Technology controller fixed value selection status word / Tec_ctr FixVal ZSW			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16	
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -	
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -	
CU240D-2_PN_F				
	Min	Max	Factory setting	
	-	-	-	
Description:	Displays the status word for the fixed value selection of the technology controller.			
Bit field:	Bit	Signal name	1 signal	0 signal
	00	Technology controller fixed value selected	Yes	No
				FP
				7950,
				7951
r2229	Technology controller number actual / Tec_ctrl No. act			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32	
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -	
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7950	
CU240D-2_PN_F				
	Min	Max	Factory setting	
	-	-	-	
Description:	Displays the number of the selected fixed setpoint of the technology controller.			
Dependency:	Refer to: r2224			

p2230[0...n]		Technology controller motorized potentiometer configuration / Tec_ctr mop config			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32		
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180		
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7954		
CU240D-2_PN_F					
	Min	Max	Factory setting		
	-	-	0000 0100 bin		
Description:	Sets the configuration for the motorized potentiometer of the technology controller.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Data save active	Yes	No	-
	02	Initial rounding-off active	Yes	No	-
	03	Non-volatile data save active for p2230.0 = 1	Yes	No	-
	04	Ramp-function generator always active	Yes	No	-
Dependency:	Refer to: r2231, p2240				
Notice:	For p0014 = 1, the following applies: After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.				
Note:	<p>Re bit 00: 0: The setpoint for the motorized potentiometer is not saved and after ON is entered using p2240. 1: The setpoint for the motorized potentiometer is saved and after ON is entered using r2231. In order to save in a non-volatile fashion, bit 03 should be set to 1.</p> <p>Re bit 02: 0: Without initial rounding-off 1: With initial rounding-off. The selected ramp-up/down time is correspondingly exceeded. The initial rounding-off is a sensitive way of specifying small changes (progressive reaction when keys are pressed). The jerk for initial rounding is independent of the ramp-up time and only depends on the selected maximum value (p2237). It is calculated as follows: $r = 0.0001 \times \max(p2237, p2238) [\%] / 0.13^2 [s^2]$ The jerk is effective until the maximum acceleration is reached ($a_{max} = p2237 [\%] / p2247 [s]$ or $a_{max} = p2238 [\%] / p2248 [s]$), after which the drive continues to run linearly with constant acceleration. The higher the maximum acceleration (the lower that p2247 is), the longer the ramp-up time increases with respect to the set ramp-up time.</p> <p>Re bit 03: 0: Non-volatile data save de-activated. 1. The setpoint for the motorized potentiometer is saved in a non-volatile fashion (for p2230.0 = 1).</p> <p>Re bit 04: When the bit is set, the ramp-function generator is computed independent of the pulse enable. The actual output value of the motorized potentiometer is always in r2250.</p>				

r2231		Technology controller motorized potentiometer setpoint memory / Tec_ctrl mop mem			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32		
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -		
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7954		
CU240D-2_PN_F					
	Min	Max	Factory setting		
	- [%]	- [%]	- [%]		
Description:	Displays the setpoint memory for the motorized potentiometer of the technology controller. For p2230.0 = 1, the last setpoint that was saved is entered after ON.				
Dependency:	Refer to: p2230				

p2235[0...n]	BI: Technology controller motorized potentiometer raise setpoint / Tec_ctrl mop raise		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7954
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to continually increase the setpoint for the motorized potentiometer of the technology controller. The setpoint change (CO: r2250) depends on the set ramp-up time (p2247) and the duration of the signal that is present (BI: p2235).		
Dependency:	Refer to: p2236		
p2236[0...n]	BI: Technology controller motorized potentiometer lower setpoint / Tec_ctrl mop lower		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7954
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to continually reduce the setpoint for the motorized potentiometer of the technology controller. The setpoint change (CO: r2250) depends on the set ramp-down time (p2248) and the duration of the signal that is present (BI: p2236).		
Dependency:	Refer to: p2235		
p2237[0...n]	Technology controller motorized potentiometer maximum value / Tec_ctrl mop max		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7954
CU240D-2_PN_F			
	Min	Max	Factory setting
	-200.00 [%]	200.00 [%]	100.00 [%]
Description:	Sets the maximum value for the motorized potentiometer of the technology controller.		
Dependency:	Refer to: p2238		
p2238[0...n]	Technology controller motorized potentiometer minimum value / Tec_ctrl mop min		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7954
CU240D-2_PN_F			
	Min	Max	Factory setting
	-200.00 [%]	200.00 [%]	-100.00 [%]
Description:	Sets the minimum value for the motorized potentiometer of the technology controller.		
Dependency:	Refer to: p2237		

p2240[0...n]	Technology controller motorized potentiometer starting value / Tec_ctrl mop start		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7954
CU240D-2_PN_F			
	Min -200.00 [%]	Max 200.00 [%]	Factory setting 0.00 [%]
Description:	Sets the starting value for the motorized potentiometer of the technology controller. For p2230.0 = 0, this setpoint is entered after ON.		
Dependency:	Refer to: p2230		
r2245	CO: Technology controller mot. potentiometer setpoint before RFG / Tec_ctr mop befRFG		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7954
CU240D-2_PN_F			
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Sets the effective setpoint in front of the internal motorized potentiometer ramp-function generator of the technology controller.		
Dependency:	Refer to: r2250		
p2247[0...n]	Technology controller motorized potentiometer ramp-up time / Tec_ctr mop t_r-up		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7954
CU240D-2_PN_F			
	Min 0.0 [s]	Max 1000.0 [s]	Factory setting 10.0 [s]
Description:	Sets the ramp-up time for the internal ramp-function generator for the motorized potentiometer of the technology controller.		
Dependency:	Refer to: p2248		
Note:	The time is referred to 100 %. When the initial rounding-off is activated (p2230.2 = 1) the ramp-up is correspondingly extended.		
p2248[0...n]	Technology controller motorized potentiometer ramp-down time / Tec_ctrMop t_rdown		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7954
CU240D-2_PN_F			
	Min 0.0 [s]	Max 1000.0 [s]	Factory setting 10.0 [s]
Description:	Sets the ramp-down time for the internal ramp-function generator for the motorized potentiometer of the technology controller.		
Dependency:	Refer to: p2247		
Note:	The time is referred to 100 %. When the initial rounding-off is activated (p2230.2 = 1) the ramp-down is correspondingly extended.		

r2250	CO: Technology controller motorized potentiometer setpoint after RFG / Tec_ctr mop aftRFG		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7954
CU240D-2_PN_F			
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the effective setpoint after the internal ramp-function generator for the motorized potentiometer of the technology controller.		
Dependency:	Refer to: r2245		
p2251	Technology controller mode / Tec_ctrl mode		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min 0	Max 1	Factory setting 0
Description:	Sets the mode for using the technology controller output.		
Value:	0: Technology controller as main speed setpoint 1: Technology controller as supplementary speed setpoint		
Dependency:	p2251 = 0, 1 is only effective if the enable signal of the technology controller is interconnected (p2200 > 0).		
p2253[0...n]	CI: Technology controller setpoint 1 / Tec_ctrl setp 1		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the setpoint 1 of the technology controller.		
Dependency:	Refer to: p2254, p2255		
p2254[0...n]	CI: Technology controller setpoint 2 / Tec_ctrl setp 2		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the setpoint 2 of the technology controller.		
Dependency:	Refer to: p2253, p2256		

p2255	Technology controller setpoint 1 scaling / Tec_ctrl set1 scal		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min 0.00 [%]	Max 100.00 [%]	Factory setting 100.00 [%]
Description:	Sets the scaling for the setpoint 1 of the technology controller.		
Dependency:	Refer to: p2253		

p2256	Technology controller setpoint 2 scaling / Tec_ctrl set2 scal		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min 0.00 [%]	Max 100.00 [%]	Factory setting 100.00 [%]
Description:	Sets the scaling for the setpoint 2 of the technology controller.		
Dependency:	Refer to: p2254		

p2257	Technology controller ramp-up time / Tec_ctrl t_ramp-up		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min 0.00 [s]	Max 650.00 [s]	Factory setting 1.00 [s]
Description:	Sets the ramp-up time of the technology controller.		
Dependency:	Refer to: p2258		
Note:	The ramp-up time is referred to 100 %.		

p2258	Technology controller ramp-down time / Tec_ctrl t_ramp-dn		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min 0.00 [s]	Max 650.00 [s]	Factory setting 1.00 [s]
Description:	Sets the ramp-down time of the technology controller.		
Dependency:	Refer to: p2257		
Note:	The ramp-down time is referred to 100 %.		

r2260	CO: Technology controller setpoint after ramp-function generator / Tec_ctr set aftRFG		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7958
CU240D-2_PN_F			
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Sets the setpoint after the ramp-function generator of the technology controller.		

p2261	Technology controller setpoint filter time constant / Tec_ctrl set T		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min 0.000 [s]	Max 60.000 [s]	Factory setting 0.000 [s]
Description:	Sets the time constant for the setpoint filter (PT1) of the technology controller.		

r2262	CO: Technology controller setpoint after filter / Tec_ctr set aftFit		
CU240D-2_DP	Access level: 4	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7958
CU240D-2_PN_F			
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the smoothed setpoint after the setpoint filter (PT1) of the technology controller.		

p2263	Technology controller type / Tec_ctrl type		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min 0	Max 1	Factory setting 0
Description:	Sets the technology controller type.		
Value:	0: D component in the actual value signal 1: D component in the fault signal		

p2264[0...n]	CI: Technology controller actual value / Tec_ctrl act val		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the actual value of the technology controller.		

p2265	Technology controller actual value filter time constant / Tec_ctrl act T		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min 0.000 [s]	Max 60.000 [s]	Factory setting 0.000 [s]
Description:	Sets the time constant for the actual value filter (PT1) of the technology controller.		

r2266	CO: Technology controller actual value after filter / Tec_ctr act aftFlt		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7958
CU240D-2_PN_F			

Min	Max	Factory setting
- [%]	- [%]	- [%]

Description: Displays the smoothed actual value after the filter (PT1) of the technology controller

p2267	Technology controller upper limit actual value / Tec_ctrl u_lim act		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7958
CU240D-2_PN_F			

Min	Max	Factory setting
-200.00 [%]	200.00 [%]	100.00 [%]

Description: Sets the upper limit for the actual value signal of the technology controller.

Dependency: Refer to: p2264, p2265, p2271
Refer to: F07426

Notice: If the actual value exceeds this upper limit, this results in fault F07426.

p2268	Technology controller lower limit actual value / Tec_ctrl l_lim act		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7958
CU240D-2_PN_F			

Min	Max	Factory setting
-200.00 [%]	200.00 [%]	-100.00 [%]

Description: Sets the lower limit for the actual value signal of the technology controller.

Dependency: Refer to: p2264, p2265, p2271
Refer to: F07426

Notice: If the actual value falls below this lower limit, this results in fault F07426.


p2269	Technology controller gain actual value / Tech_ctrl gain act		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			

Min	Max	Factory setting
0.00 [%]	500.00 [%]	100.00 [%]

Description: Sets the scaling factor for the actual value of the technology controller.

Dependency: Refer to: p2264, p2265, p2267, p2268, p2271

Note: For 100%, the actual value is not changed.

p2270 Technology controller actual value function / Tec_ctr ActVal fct			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min 0	Max 3	Factory setting 0
Description:	Setting to use an arithmetic function for the actual value signal of the technology controller.		
Value:	0: No function 1: Root function (root from x) 2: Square function (x * x) 3: Cube function (x * x * x)		
Dependency:	Refer to: p2264, p2265, p2267, p2268, p2269, p2271		
p2271 Technology controller actual value inversion (sensor type) / Tech_ctrl act inv			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -
CU240D-2_PN_F			
	Min 0	Max 1	Factory setting 0
Description:	Setting to invert the actual value signal of the technology controller. The inversion depends on the sensor type for the actual value signal.		
Value:	0: No inversion 1: Inversion actual value signal		
Caution:	If the actual value inversion is incorrectly selected, then the closed-loop control with the technology controller can become unstable and can oscillate!		
			
Note:	The correct setting can be determined as follows: - inhibit the technology controller (p2200 = 0). - increase the motor speed and in so doing, measure the actual value signal of the technology controller. --> If the actual value increases as the motor speed increases, then p2271 should be set to 0 (no inversion). --> If the actual value decreases as the motor speed increases, then p2271 should be set to 1 (the actual value signal is inverted).		
r2272 CO: Technology controller actual value scaled / Tech_ctrl act scal			
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7958
CU240D-2_PN_F			
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the scaled actual value signal of the technology controller.		
Dependency:	Refer to: p2264, p2265, r2266, p2267, p2268, p2269, p2270, p2271		

r2273	CO: Technology controller error / Tec_ctrl error		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: 9_1	Unit selection: p0595	Func. diagram: 7958
CU240D-2_PN_F			
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the error (system deviation) between the setpoint and actual value of the technology controller.		
Dependency:	Refer to: p2263		
p2274	Technology controller differentiation time constant / Tec_ctrl D comp T		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min 0.000 [s]	Max 60.000 [s]	Factory setting 0.000 [s]
Description:	Sets the time constant for the differentiation (D component) of the technology controller.		
Note:	p2274 = 0: Differentiation is disabled.		
p2280	Technology controller proportional gain / Tec_ctrl Kp		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min 0.000	Max 1000.000	Factory setting 1.000
Description:	Sets the proportional gain (P component) of the technology controller.		
Note:	p2280 = 0: The proportional gain is disabled.		
p2285	Technology controller integral time / Tec_ctrl Tn		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min 0.000 [s]	Max 10000.000 [s]	Factory setting 30.000 [s]
Description:	Sets the integral time (I component, integrating time constant) of the technology controller.		
Notice:	The following applies for p2251 = 0: If the output of the technology controller lies within the range of a suppression (skip) bandwidth (p1091 ... p1094, p1101) or below the minimum speed (p1080), the integral component of the controller is held so that the controller temporarily works as a P controller. This is necessary in order to prevent the controller from behaving in an unstable manner, as the ramp-function generator switches to the parameterized up and down ramps (p1120, p1121) at the same time in order to avoid setpoint steps. This state can be exited or avoided by changing the controller setpoint or by using the start speed (= minimum speed).		
Note:	When the controller output reaches the limit, the I component of the controller is held. p2285 = 0: The integral time is disabled and the I component of the controller is reset.		

p2286[0...n]	BI: Hold technology controller integrator / Tec_ctr integ stop		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	56.13
Description:	Sets the signal source to hold the integrator for the technology controller.		

p2289[0...n]	CI: Technology controller pre-control signal / Tec_ctrl prectrl		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for the pre-control signal of the technology controller.		

p2291	CO: Technology controller maximum limiting / Tec_ctrl max_lim		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min	Max	Factory setting
	-200.00 [%]	200.00 [%]	100.00 [%]
Description:	Sets the maximum limit of the technology controller.		
Dependency:	Refer to: p2292		
Caution:	The maximum limit must always be greater than the minimum limit (p2291 > p2292).		



p2292	CO: Technology controller minimum limiting / Tec_ctrl min_lim		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min	Max	Factory setting
	-200.00 [%]	200.00 [%]	0.00 [%]
Description:	Sets the minimum limit of the technology controller.		
Dependency:	Refer to: p2291		
Caution:	The maximum limit must always be greater than the minimum limit (p2291 > p2292).		



p2293	Technology controller ramp-up/ramp-down time / Tec_ctr ramp up/dn		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min 0.00 [s]	Max 100.00 [s]	Factory setting 1.00 [s]
Description:	Sets the ramping time for the output signal of the technology controller.		
Dependency:	Refer to: p2291, p2292		
Note:	The time refers to the set maximum and minimum limits (p2291, p2292).		
r2294	CO: Technology controller output signal / Tec_ctrl outp_sig		
CU240D-2_DP	Access level: 2	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the output signal of the technology controller.		
Dependency:	Refer to: p2295		
p2295	CO: Technology controller output scaling / Tec_ctrl outp scal		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min -100.00 [%]	Max 100.00 [%]	Factory setting 100.00 [%]
Description:	Sets the scaling for the output signal of the technology controller.		
p2296[0...n]	CI: Technology controller output scaling / Tec_ctrl outp scal		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min -	Max -	Factory setting 2295[0]
Description:	Sets the signal source for the scaling value of the technology controller.		
Dependency:	Refer to: p2295		
p2297[0...n]	CI: Technology controller maximum limit signal source / Tec_ctrMaxLimS_src		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min -	Max -	Factory setting 1084[0]
Description:	Sets the signal source for the maximum limiting of the technology controller.		
Dependency:	Refer to: p2291		

Note: In order that the output of the technology controller does not exceed the maximum speed limit, its upper limit p2297 should be connected to the actual maximum speed r1084.
In mode p2251 = 1, p2299 must also be connected to the output of the ramp-function generator r1150.

p2298[0...n]	CI: Technology controller minimum limit signal source / Tec_ctrl min_l s_s		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	1087[0]

Description: Sets the signal source for the minimum limiting of the technology controller.

Dependency: Refer to: p2292

Note: If the technology controller is rotated in a negative direction in mode p2251 = 0, its lower limit p2298 should be connected to the actual minimum speed r1087.
In mode p2251 = 1, p2299 must also be connected to the output of the ramp-function generator r1150.

p2299[0...n]	CI: Technology controller limit offset / Tech_ctrl lim offs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: PERCENT	Dyn. index: CDS, p0170
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source for the offset of the output limiting of the technology controller.

Note: In mode p2251 = 1, p2299 must be connected to the output of ramp-function generator r1150 so that the technology controller stops when the speed limits are reached (see also p2297, p2298).

p2302	Technology controller output signal starting value / Tec_ctr start val		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min	Max	Factory setting
	0.00 [%]	200.00 [%]	0.00 [%]

Description: Sets the start value for the output of the technology controller.


If the drive is switched on and the technology controller is already enabled (see p2200, r0056.3), then its output signal r2294 first goes to the start value p2302, before the controller starts to operate.

Dependency: The starting value is only effective in the mode "technology controller as main speed setpoint" (p2251 = 0).

If the technology controller is first enabled when the drive is switched on, a start speed remains ineffective, and the controller output starts with the actual setpoint speed of the ramp-function generator.

Note: If the technology controller operates on the speed/setpoint channel (p2251 = 0), then the starting value is interpreted as the starting speed and when operation is enabled, is connected to the output of the technology controller (r2294).

If fault F07426 "technology controller actual value limited" occurs while ramping up to the starting value and if the associated reaction has been set to "NONE" (see p2100, p2101), the starting value is kept as the speed setpoint instead of a switch to closed-loop control operation.

p2306 Technology controller fault signal inversion / Tec_ctrl fault inv			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -
CU240D-2_PN_F			
	Min 0	Max 1	Factory setting 0
Description:	Setting to invert the fault signal of the technology controller. The setting depends on the type of control loop.		
Value:	0: No inversion 1: Inversion		
Caution:	If the actual value inversion is incorrectly selected, then the closed-loop control with the technology controller can become unstable and can oscillate!		
			
Note:	The correct setting can be determined as follows: - inhibit the technology controller (p2200 = 0). - increase the motor speed and in so doing, measure the actual value signal (of the technology controller). - if the actual value increases with increasing motor speed, then the inversion should be switched out. - if the actual value decreases with increasing motor speed, then the inversion should be set. If value = 0: The drive reduces the output speed when the actual value rises (e.g. for heating fans, intake pump, compressor). If value = 1: The drive increases the output speed when the actual value increases (e.g. for cooling fans, discharge pumps).		
r2344 CO: Technology controller last speed setpoint (smoothed) / Tec_ctrl n_setp_sm			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the smoothed speed setpoint of the technology controller prior to switching to operation with fault response (see p2345).		
Dependency:	Refer to: p2345		
Note:	Smoothing time = 10 s		
p2345 Technology controller fault response / Tech_ctrl flt resp			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			
	Min 0	Max 2	Factory setting 0
Description:	Sets the response of the technology controller to the occurrence of fault F07426 (technology controller actual value limited). The fault response is executed if status bit 8 or 9 in the technology controller status word r2349 is set. If both status bits are zero, a switch back to technology controller operation will follow.		
Value:	0: Function inhibited 1: On fault: Changeover to r2344 (or p2302) 2: On fault: Changeover to p2215		

List of parameters

- Dependency:** The parameterized fault response is only effective if the technology controller mode is set to p2251 = 0 (technology controller as main setpoint).
Refer to: p2267, p2268, r2344
Refer to: F07426
- Notice:** Dependent upon the application, the changing over of the setpoint when fault F07426 occurs can lead to the fault condition disappearing and the re-activation of the technology controller. This can repeat itself and cause limit oscillations. In this case, a different fault response or a different fixed setpoint 15 for the fault response p2345 = 2 should be selected.
- Note:** The parameterized fault response can only be achieved if the default fault response of the technology controller fault F07426 is set to "NONE" (see p2100, p2101). If a fault response other than "NONE" is entered in p2101 for F07426, p2345 must be set to zero.
If the fault occurs during ramping up to the starting setpoint p2302, this starting setpoint is retained as the final value (there is no changeover to the fault response setpoint).

r2349.0...12	CO/BO: Technology controller status word / Tec_ctrl status		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7958
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	-

Description: Displays the status word of the technology controller.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Technology controller de-activated	Yes	No	-
	01	Technology controller limited	Yes	No	-
	02	Technology controller motorized potentiometer limited max.	Yes	No	-
	03	Technology controller motorized potentiometer limited min.	Yes	No	-
	04	Technology controller speed setpoint total in setpoint channel	Yes	No	-
	05	Technology controller RFG bypassed in the setpoint channel	Yes	No	-
	06	Technology controller starting value at the current limit	No	Yes	-
	08	Technology controller actual value at the minimum	Yes	No	-
	09	Technology controller actual value at the maximum	Yes	No	-
	10	Technology controller output at the minimum	Yes	No	-
	11	Technology controller output at the maximum	Yes	No	-
	12	Fault response active	Yes	No	-

p2502[0...n]	LR encoder assignment / Encoder assignment		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer16
CU250D-2_PN_F	Can be changed: C(25)	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 4010
	Min	Max	Factory setting
	0	2	1

Description: Sets the assigned encoder.

The actual value preprocessing and the closed-loop position control are carried out using the assigned encoder.

Value:

0:	No encoder
1:	Encoder 1
2:	Encoder 2

Dependency: Refer to: p0187, p0188

Notice: For the setting p2502 = 0 (no encoder), closed-loop position control is not possible. This setting is only practical as supportive measure to implement encoderless closed-loop speed control (e.g. if the motor encoder is defective).

Note: The assigned encoder (p2502 = 1, 2) must be allocated an encoder data set (p0187, p0188).

p2503[0...n]		LR length unit LU per 10 mm / LU per 10 mm		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32	
CU250D-2_PN_F	Can be changed: C(25)	Scaling: -	Dyn. index: DDS, p0180	
	Units group: -	Unit selection: -	Func. diagram: 4010	
	Min 1 [LU]	Max 2147483647 [LU]	Factory setting 10000 [LU]	
Description:	Sets the neutral length units LU per 10 mm. Therefore, for a linear scale, a reference is established between the physical arrangement and the neutral length units LU used in the drive. Example: Linear scale, 10 mm should be broken down to units of μm (i.e. 1 LU = 1 μm). --> p2503 = 10000			
Note:	The assignment to the grid spacing can be achieved using this for a rotary axis with linear encoder. LU: Length Unit			

p2504[0...n]		LR motor/load motor revolutions / Mot/load motor rev		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32	
CU250D-2_PN_F	Can be changed: C(25)	Scaling: -	Dyn. index: DDS, p0180	
	Units group: -	Unit selection: -	Func. diagram: 4010, 4704, 4711	
	Min 1	Max 1048576	Factory setting 1	
Description:	Sets the motor revolutions for the gearbox factor between the motor shaft and load shaft. Gearbox factor = motor revolutions (p2504) / load revolutions (p2505)			
Dependency:	Refer to: p2505			
Note:	The gearbox factor between the encoder shaft and the motor shaft is set using p0432 and p0433.			

p2505[0...n]		LR motor/load load revolutions / Mot/load load rev		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32	
CU250D-2_PN_F	Can be changed: C(25)	Scaling: -	Dyn. index: DDS, p0180	
	Units group: -	Unit selection: -	Func. diagram: 4010, 4704, 4711	
	Min -1048576	Max 1048576	Factory setting 1	
Description:	Sets the load revolutions for the gearbox factor between the motor shaft and load shaft. Gearbox factor = motor revolutions (p2504) / load revolutions (p2505)			
Dependency:	Refer to: p2504			
Note:	The gearbox factor between the encoder shaft and the motor shaft is set using p0432 and p0433.			

p2506[0...n]		LR length unit LU per load revolution / LU per load rev		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32	
CU250D-2_PN_F	Can be changed: C(25)	Scaling: -	Dyn. index: DDS, p0180	
	Units group: -	Unit selection: -	Func. diagram: 4010	
	Min 1 [LU]	Max 2147483647 [LU]	Factory setting 10000 [LU]	
Description:	Sets the neutral length units LU per load revolution. Therefore, for a rotary encoder, a reference is established between the physical arrangement and the neutral length units LU used in the drive.			

Example:

Rotary encoder, ballscrew with 10 mm/revolution, 10 mm should be broken down to units of μm (i.e. 1 LU = 1 μm).

--> One load revolution corresponds to 10000 LU

--> p2506 = 10000

Note:

The position controller can only process position setpoints in the interpolator clock cycle (IPO clock cycle) in integer length units (LU, Length Unit). This is the reason that speed setpoints that are not a multiple integer of 1 LU per IPO clock cycle can only be realized as an average. The result speed setpoint steps are especially noticeable for a high loop gain or when the pre-control is active. Increasing p2506 counteracts this behavior.

p2507[0...n]**LR absolute encoder adjustment status / Abs_enc_adj stat**

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer16
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: 4010
	Min	Max	Factory setting
	0	3	1

Description:

Activating the adjustment and display of the status of the adjustment for absolute encoders.

Value:

0: Error occurred while adjusting
 1: Absolute encoder not adjusted
 2: Absolute encoder not adjusted and encoder adjustment initiated
 3: Absolute encoder adjusted

Dependency:

Refer to: p2525, p2598, p2599

Caution:

For rotating absolute encoders, when adjusting, a range is set up symmetrically around zero with half of the encoder range, within which the position must be re-established after powering down/powering up. In this range, it is only permissible that the encoder overflows.

After the adjustment has been completed, it must be guaranteed that the range is not exited. The reason for this is that outside the range, there is no clear reference any longer between the encoder actual value and mechanical system.

If the reference point (CI: p2598) lies in this range, then the position actual value is set when adjusting to the reference point. Otherwise, adjustment is canceled with F07443.

There is no overflow for linear absolute encoders. This means that after the adjustment, the position can be re-established in the complete traversing range after powering down/powering up. When adjusting, the position actual value is set to the reference point.

Note:

The encoder adjustment is initiated with p2507 = 2. The status is displayed using the other values.

In order to permanently save the determined position offset (p2525) it must be saved in a non-volatile fashion (p0971, p0977).

This adjustment can only be initiated for an absolute encoder.

p2508[0...3]**BI: LR activate reference mark search / Ref_mark act**

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4010
	Min	Max	Factory setting
	-	-	[0] 2684.0
			[1] 0
			[2] 0
			[3] 0

Description:

Sets the signal source for the function "activate reference mark search".

Index:

[0] = CI-loop pos ctrl
 [1] = Encoder 1
 [2] = Encoder 2
 [3] = Reserved

Dependency:

Refer to: p0490, p2502, p2509, r2684

Refer to: A07495

Notice:

When activating the function "set position actual value" while the function "reference mark search" is activated, then the function "reference mark search" is automatically de-activated.

Note: The function can only be activated using a 0/1 signal if no reference function is active (r2526.2).
If "reference mark search" and "measuring probe evaluation" are simultaneously activated, then no function is activated and the actual function is interrupted.

p2509[0...3]	BI: LR activating measuring probe evaluation / MT_eval act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4010
	Min	Max	Factory setting
	-	-	[0] 2684.1
			[1] 0
			[2] 0
			[3] 0

Description: Sets the signal source for the function "activating the measuring probe evaluation".
0/1 signal: The function "activate measuring probe evaluation" is started.

Index: [0] = CI-loop pos ctrl
[1] = Encoder 1
[2] = Encoder 2
[3] = Reserved

Dependency: Refer to: p0488, p0489, p0490, p2502, p2508, p2510, p2511, p2517, p2518
Refer to: A07495

Notice: When the "set position actual value" is activated while the function "measuring probe evaluation" is activated, then the function "measuring probe evaluation" is automatically de-activated.

Note: The function can only be activated using a 0/1 signal if no reference function is active (r2526.2).
If "reference mark search" and "measuring probe evaluation" are simultaneously activated, then no function is activated and the actual function is interrupted.

p2510[0...3]	BI: LR selecting measuring probe evaluation / MT_eval select		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3615, 4010
	Min	Max	Factory setting
	-	-	0


Description: Sets the signal source to select the measuring probe.
1 signal = measuring probe 2 is activated for BI: p2509 = 0/1 edge.
0 signal = measuring probe 1 is activated for BI: p2509 = 0/1 edge.

Index: [0] = CI-loop pos ctrl
[1] = Encoder 1
[2] = Encoder 2
[3] = Reserved

Dependency: Refer to: p2502, p2509, p2511

Note: The following BICO interconnection is established as standard:
BI: p2509[0] = r2684.1
The measuring probe is selected at the 0/1 signal transition at r2684.1 (flying referencing active).

p2511[0...3]	BI: LR measuring probe evaluation edge / MT_eval edge		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3615, 4010
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for the edge evaluation of the measuring probe. 1 signal = falling edge of the measuring probe (p2510) is activated for BI: p2509 = 0/1 edge. 0 signal = rising edge of the measuring probe (p2510) is activated for BI: p2509 = 0/1 edge.		
Index:	[0] = CI-loop pos ctrl [1] = Encoder 1 [2] = Encoder 2 [3] = Reserved		
Dependency:	Refer to: p2502, p2509, p2510		
p2512[0...3]	BI: LR pos. actual value preprocessing activate corr. value (edge) / ActVal_prepCorrAct		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4010, 4015
	Min	Max	Factory setting
	-	-	[0] 2684.7 [1] 0 [2] 0 [3] 0
Description:	Sets the signal source for the function "activate position actual value preprocessing, corrective value (edge)". 0/1 signal: The corrective value available through CI: p2513 is activated.		
Index:	[0] = CI-loop pos ctrl [1] = Encoder 1 [2] = Encoder 2 [3] = Reserved		
Dependency:	Refer to: p2502, p2513, r2684		
p2513[0...3]	CI: LR Position actual value preprocessing corrective value / Act val_prep corr		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Integer32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4010, 4015
	Min	Max	Factory setting
	-	-	[0] 2685[0] [1] 0 [2] 0 [3] 0
Description:	Sets the signal source for the corrective value for position actual value preprocessing.		
Index:	[0] = CI-loop pos ctrl [1] = Encoder 1 [2] = Encoder 2 [3] = Reserved		
Dependency:	Refer to: p2502, p2512, r2521, r2685		
Note:	For BI: p2512[0] = 0/1 signal, the position actual value (CO: r2521[0]) is corrected corresponding to the value via CI: p2513[0]. In so doing, the sign of the corrective value present is taken into account.		

p2514[0...3]	BI: LR activate position actual value setting / s_act setting act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4010
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to activate the function "set position actual value".		
Index:	[0] = CI-loop pos ctrl [1] = Encoder 1 [2] = Encoder 2 [3] = Reserved		
Dependency:	Refer to: p2502, p2515 Refer to: A07495, A07497		
Warning:	As long as the position actual value is set, encoder increments that are received are not evaluated. In this state, any position difference cannot be corrected!		
			
Notice:	When the function "set position actual value" is activated while the function "reference mark search" or "measuring probe evaluation" is activated, then the corresponding function is de-activated.		
Note:	BI: p2514 = 1 signal: The position actual value is set to the setting value in CI: p2515. Alarm A07497 "position setting value activated" is output. Encoder increments that are received in the meantime, are not taken into account. BI: p2514 = 1/0 signal: The position actual value preprocessing is activated and is based on the setting value.		
p2515[0...3]	CI: LR position actual setting setting value / s_act set setVal		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Integer32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4010
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for the setting value of the function "setting position actual value".		
Index:	[0] = CI-loop pos ctrl [1] = Encoder 1 [2] = Encoder 2 [3] = Reserved		
Dependency:	Refer to: p2502, p2514		
p2516[0...3]	CI: LR position offset / Position offset		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Integer32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4010
	Min	Max	Factory setting
	-	-	[0] 2667[0] [1] 0 [2] 0 [3] 0
Description:	Sets the signal source for the position offset.		
Index:	[0] = CI-loop pos ctrl [1] = Encoder 1 [2] = Encoder 2 [3] = Reserved		
Dependency:	Refer to: p2502, r2667		

p2517[0...2] LR direct measuring probe 1 / Direct MT 1			
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4010
	Min 0	Max 23	Factory setting 0
Description:	<p>Sets the input terminal for direct measuring probe 1.</p> <p>After it has been activated via binector input: p2509 = 0/1 signal, the direct measuring probe measures once and can be used with EPOS.</p> <p>In order to process signals faster, the direct measuring probe bypasses the handshake technique via the encoder control word and encoder status word.</p>		
Value:	<p>0: No meas probe 21: DI 1 (X07.2) 23: DI 3 (X08.2)</p>		
Index:	<p>[0] = Encoder 1 [1] = Encoder 2 [2] = Reserved</p>		
Dependency:	Refer to: p0490, p2509, p2510, p2511		
Note:	<p>DI: Digital Input</p> <p>If parameter change is rejected, it should be checked whether the input terminal is not already being used in p0488, p0489, p0493, p0494 or p0580.</p> <p>Direct measurement via p2517 has a higher priority than measurements via p0488.</p>		
p2518[0...2] LR direct measuring probe 2 / Direct MT 2			
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4010
	Min 0	Max 23	Factory setting 0
Description:	<p>Sets the input terminal for direct measuring probe 2.</p> <p>After it has been activated via binector input: p2509 = 0/1 signal, the direct measuring probe measures once and can be used with EPOS.</p> <p>In order to process signals faster, the direct measuring probe bypasses the handshake technique via the encoder control word and encoder status word.</p>		
Value:	<p>0: No meas probe 21: DI 1 (X07.2) 23: DI 3 (X08.2)</p>		
Index:	<p>[0] = Encoder 1 [1] = Encoder 2 [2] = Reserved</p>		
Dependency:	Refer to: p0490, p2509, p2510, p2511		
Note:	<p>DI: Digital Input</p> <p>If parameter change is rejected, it should be checked whether the input terminal is not already being used in p0488, p0489, p0493, p0494 or p0580.</p> <p>Direct measurement via p2518 has a higher priority than measurements via p0489.</p>		

p2519[0...n]		LR position actual value preprocessing config. DDS changeover / s_act config DDS			
CU250D-2_DP_F	Access level: 4	Calculated: -	Data type: Integer16		
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min 0	Max 5	Factory setting 1		
Description:	Sets the behavior of the position actual value preprocessing for the position controller for a DDS changeover. Re p2519 = 1: In the following cases, for a DDS changeover, the actual position actual value becomes invalid and the reference point is reset: - the EDS effective for the closed-loop position control changes. - the encoder assignment changes (p2502). - the mechanical relationships change (p2503 ... p2506). - the direction of rotation changes (p1821). For absolute encoders, the status of the adjustment (p2507) is also reset if the same absolute encoder remains selected for the closed-loop position control, but the mechanical relationships or the direction of rotation have changed. In the operation state, in addition, a fault (F07494) is generated.				
Notice:	The remaining setting values are intended for expanded functionality.				
Note:	The behavior for a DDS changeover is determined using the value of p2519 in the target data set.				
r2520[0...2]		CO: LR Position actual value preprocessing encoder control word / ActVal_prep STW			
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned16		
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 4010		
	Min -	Max -	Factory setting -		
Description:	Displays the encoder control word generated by the position actual value preprocessing.				
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Reserved				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Request function 1	Yes	No	-
	01	Request function 2	Yes	No	-
	02	Request function 3	Yes	No	-
	03	Request function 4	Yes	No	-
	04	Request command bit 0	Yes	No	-
	05	Request command bit 1	Yes	No	-
	06	Request command bit 2	Yes	No	-
	07	Flying measurement mode/search for reference mark	Flying measurement	Reference marks	-
	13	Request absolute value cyclic	Yes	No	-
	14	Request parking encoder	Yes	No	-
	15	Request acknowledge encoder fault	Yes	No	-
Dependency:	Refer to: p0480				
r2521[0...3]		CO: LR position actual value / s_act			
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32		
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 4010		
	Min - [LU]	Max - [LU]	Factory setting - [LU]		
Description:	Displays the actual position actual value determined by the position actual value preprocessing.				

List of parameters

Index:	[0] = CI-loop pos ctrl [1] = Encoder 1 [2] = Encoder 2 [3] = Reserved
Dependency:	Refer to: p2502, r2526
Note:	r2526.0 = 1 --> The position actual value in r2521[0] for the position control is valid. r2527.0 = 1 --> The position actual value in r2521[1] for encoder 1 is valid. r2528.0 = 1 --> The position actual value in r2521[2] for encoder 2 is valid.

r2522[0...3]	CO: LR velocity actual value / v_act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4010
	Min - [1000 LU/min]	Max - [1000 LU/min]	Factory setting - [1000 LU/min]
Description:	Displays the velocity actual value determined by the position actual value preprocessing.		
Index:	[0] = CI-loop pos ctrl [1] = Encoder 1 [2] = Encoder 2 [3] = Reserved		
Dependency:	Refer to: p2502, r2526		
Note:	r2526.0 = 1 --> The velocity actual value in r2522[0] for the position control is valid. r2527.0 = 1 --> The velocity actual value in r2522[1] for encoder 1 is valid. r2528.0 = 1 --> The velocity actual value in r2522[2] for encoder 2 is valid.		

r2523[0...3]	CO: LR measured value / Measured value		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4010
	Min - [LU]	Max - [LU]	Factory setting - [LU]
Description:	Displays the value determined by the function "reference mark search" and "measuring probe evaluation".		
Index:	[0] = CI-loop pos ctrl [1] = Encoder 1 [2] = Encoder 2 [3] = Reserved		
Dependency:	Refer to: p2502, r2526		
Note:	r2526.2 = 1 --> The measured value in r2523[0] for the position control is valid. r2527.2 = 1 --> The measured value in r2523[1] for encoder 1 is valid. r2528.2 = 1 --> The measured value in r2523[2] for encoder 2 is valid.		

r2524	CO: LR LU/revolution / LU/revolution		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3630, 4010
	Min - [LU]	Max - [LU]	Factory setting - [LU]
Description:	Displays the internal length units LU/motor revolution.		
Dependency:	Refer to: p0404		

p2525[0...n]		CO: LR encoder adjustment offset / Enc_adj offset		
CU250D-2_DP_F	Access level: 4	Calculated: -	Data type: Unsigned32	
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: EDS, p0140	
	Units group: -	Unit selection: -	Func. diagram: 4010	
	Min 0 [LU]	Max 4294967295 [LU]	Factory setting 0 [LU]	
Description:	For the absolute encoder adjustment, a drive determines the position offset.			
Dependency:	Refer to: p0404			
Note:	The position offset is only relevant for absolute encoders. The drive determines it when making the adjustment and the user should not change it.			

r2526.0...9		CO/BO: LR status word / ZSW			
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned16		
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min -	Max -	Factory setting -		
Description:	Displays the status word of the position controller.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Position actual value valid	Yes	No	4010, 4015
	01	Referencing active	Yes	No	4010
	02	Measured value valid	Yes	No	3615, 4010
	03	Closed-loop position control active	Yes	No	4015
	04	Fixed stop reached	Yes	No	3617, 4025
	05	Fixed stop outside window	Yes	No	3617, 4025
	06	Position controller output limited	Yes	No	4015
	07	Request tracking mode	Yes	No	-
	08	Clamping active when traveling to fixed stop	Yes	No	4025
	09	Setting value for adjustment valid	Yes	No	-
Dependency:	Refer to: r2521, r2522, r2523				
Note:	Re bit 04: The signal is influenced via p2634. Re bit 05: The signal is influenced via p2635.				

r2527.0...2		CO/BO: LR actual value sensing status word encoder 1 / ActValSensZSW enc1			
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned16		
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min -	Max -	Factory setting -		
Description:	Displays the status word of the position actual value sensing for encoder 1.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Position actual value valid	Yes	No	-
	01	Referencing active	Yes	No	-
	02	Measured value valid	Yes	No	-

r2528.0...2 CO/BO: LR actual value sensing status word encoder 2 / ActValSensZSW enc2

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -

Min	Max	Factory setting
-	-	-

Description: Displays the status word of the position actual value sensing for encoder 2.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Position actual value valid	Yes	No	-
	01	Referencing active	Yes	No	-
	02	Measured value valid	Yes	No	-

p2530 CI: LR position setpoint / s_set

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Integer32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4015, 4020

Min	Max	Factory setting
-	-	2665[0]

Description: Sets the signal source for the position setpoint of the position controller.

Dependency: Refer to: r2665

p2531 CI: LR velocity setpoint / v_set

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Integer32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4015

Min	Max	Factory setting
-	-	2666[0]

Description: Sets the signal source for the velocity setpoint of the position controller.

Dependency: Refer to: r2666

p2532 CI: LR position actual value / s_act

CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Integer32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4015, 4020, 4025

Min	Max	Factory setting
-	-	2521[0]

Description: Sets the signal source for the position actual value of the position controller.

Dependency: Refer to: r2521

p2533[0...n] LR position setpoint filter time constant / s_set_filt T

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 4015

Min	Max	Factory setting
0.00 [ms]	1000.00 [ms]	0.00 [ms]

Description: Sets the time constant for the position setpoint filter (PT1).

Note: The effective Kv factor (position loop gain) is reduced with the filter. This allows a softer control behavior with improved tolerance with respect to noise/disturbances.

Applications:

- reduces the pre-control dynamic response.
- jerk limiting.

p2534[0...n]	LR speed pre-control factor / n_prectrl fact		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 4015, 4025
	Min 0.00 [%]	Max 200.00 [%]	Factory setting 0.00 [%]
Description:	Setting to activate and weight the speed pre-control value. Value = 0 % --> The pre-control is de-activated.		
Dependency:	Refer to: p2535, p2536, r2563		
Note:	When the axis control loop is optimally set as well as a precisely determined equivalent time constant of the speed control loop, the pre-control factor is 100%.		


p2535[0...n]	LR speed pre-control balancing filter dead time / n_prectrl t_dead		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 4015
	Min 0.00	Max 2.00	Factory setting 0.00
Description:	Sets the "fractional" dead time to emulate the timing behavior of the speed control loop. The selected multiplier refers to the position controller clock cycle (deadtime= p2535 * p0115[4]).		
Dependency:	Refer to: p2536		
Notice:	When speed pre-control is active (p2534 > 0 %), the following applies: In addition to the set dead time (p2535), internally two position controller clock cycles are effective. When speed pre-control is inactive (p2534 = 0 %), the following applies: No dead time is effective (p2535 and internal).		
Note:	Together with p2536, the timing behavior of the closed-loop control loop can be emulated.		

p2536[0...n]	LR speed pre-control symmetrizing filter PT1 / n_prectrl filt PT1		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 4015
	Min 0.00 [ms]	Max 100.00 [ms]	Factory setting 0.00 [ms]
Description:	Sets a PT1 filter to emulate the timing behavior of the closed-speed control loop.		
Dependency:	Refer to: p2535		
Notice:	When speed pre-control is inactive (p2534 = 0 %), the following applies: If a PT1 filter has been set, it is not effective.		
Note:	Together with p2535, the timing behavior of the closed-loop control loop can be emulated.		

p2537	CI: LR position controller adaptation / Adaptation		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / FloatingPoint32
CU250D-2_PN_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4015
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for the adaptation of the proportional gain of the position controller.		
Dependency:	Refer to: p2538		

p2538[0...n]	LR proportional gain / Kp		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 4015
	Min 0.000 [1000/min]	Max 300.000 [1000/min]	Factory setting 1.000 [1000/min]
Description:	Sets the proportional gain (P gain, position loop gain, Kv factor) of the position controller.		
Dependency:	Refer to: p2537, p2539, p2555, r2557, r2558		
Note:	The proportional gain is used define at which traversing velocity which following error is obtained (without pre-control)		
	Low proportional gain:		
	Slow response to a setpoint - actual value difference, the following error becomes large.		
	High proportional gain:		
	Fast response to the setpoint - actual value difference, the following error becomes small.		
p2539[0...n]	LR integral time / Tn		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 4015
	Min 0.00 [ms]	Max 100000.00 [ms]	Factory setting 0.00 [ms]
Description:	Setting to activate the integral time of the position controller.		
	Value = 0 ms --> The I component of the position controller is de-activated.		
Dependency:	Refer to: p2538, r2559		
p2540	CO: LR position controller output speed limit / LR_outp limit		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: U, T	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 4015
	Min 0.000 [rpm]	Max 210000.000 [rpm]	Factory setting 210000.000 [rpm]
Description:	Sets the speed limit of the position controller output.		
Dependency:	Refer to: p2541		
p2541	CI: LR position controller output speed limit signal source / LR_outp lim S_src		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / FloatingPoint32
CU250D-2_PN_F	Can be changed: T	Scaling: p2000	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4015
	Min -	Max -	Factory setting 2540[0]
Description:	Sets the signal source for the position controller output limit.		
Dependency:	Refer to: p2540		

p2542	LR standstill window / Standstill window		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4020
	Min 0 [LU]	Max 2147483647 [LU]	Factory setting 200 [LU]
Description:	Sets the standstill window for the standstill monitoring function. After the standstill monitoring time expires, it is cyclically checked whether the difference between the setpoint and actual position is located within the standstill window and, if required, an appropriate fault is output. Value = 0 --> The standstill monitoring is de-activated.		
Dependency:	Refer to: p2543, p2544 Refer to: F07450		
Note:	The following applies for the setting of the standstill and positioning window: Standstill window (p2542) >= positioning window (p2544)		
p2543	LR standstill monitoring time / t_standstill monit		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4020
	Min 0.00 [ms]	Max 100000.00 [ms]	Factory setting 200.00 [ms]
Description:	Sets the standstill monitoring time for the standstill monitoring function. After the standstill monitoring time expires, it is cyclically checked whether the difference between the setpoint and actual position is located within the standstill window and, if required, an appropriate fault is output.		
Dependency:	Refer to: p2542, p2545 Refer to: F07450		
Note:	The following applies for the setting of the standstill and positioning monitoring time: Standstill monitoring time (p2543) <= positioning monitoring time (p2545)		
p2544	LR positioning window / Pos_window		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4020
	Min 0 [LU]	Max 2147483647 [LU]	Factory setting 40 [LU]
Description:	Sets the positioning window for the positioning monitoring function. After the positioning monitoring time expires, it is checked once as to whether the difference between the setpoint and actual position lies within the positioning window and if required an appropriate fault is output. Value = 0 --> The positioning monitoring function is de-activated.		
Dependency:	Refer to: p2542, p2545, r2684 Refer to: F07451		
Note:	The following applies for the setting of the standstill and positioning window: Standstill window (p2542) >= positioning window (p2544)		

p2545	LR positioning monitoring time / t_pos_monit		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4020
	Min 0.00 [ms]	Max 100000.00 [ms]	Factory setting 1000.00 [ms]
Description:	Sets the positioning monitoring time for the positioning monitoring. After the positioning monitoring time expires, it is checked once as to whether the difference between the setpoint and actual position lies within the positioning window and if required an appropriate fault is output.		
Dependency:	Refer to: p2543, p2544, r2684 Refer to: F07451		
Note:	The following applies for the setting of the standstill and positioning monitoring time: Standstill monitoring time (p2543) <= positioning monitoring time (p2545)		
p2546[0...n]	LR dynamic following error monitoring tolerance / s_delta_monit tol		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 4025
	Min 0 [LU]	Max 2147483647 [LU]	Factory setting 1000 [LU]
Description:	Sets the tolerance for the dynamic following error monitoring. If the dynamic following error (r2563) exceeds the selected tolerance, then an appropriate fault is output. Value = 0 --> The dynamic following error monitoring is de-activated.		
Dependency:	Refer to: r2563, r2684 Refer to: F07452		
Note:	The tolerance bandwidth is intended to prevent the dynamic following error monitoring incorrectly responding due to operational control sequences (e.g. during load surges).		
p2547	LR cam switching position 1 / Cam position 1		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4025
	Min -2147483648 [LU]	Max 2147483647 [LU]	Factory setting 0 [LU]
Description:	Sets the cam switching position 1.		
Dependency:	Refer to: p2548, r2683		
Caution:	Only after the axis has been referenced can it be guaranteed that the cam switching signals when output have a "true" position reference.		
			
Note:	Position actual value <= cam switching position 1 --> r2683.8 = 1 signal Position actual value > cam switching position 1 --> r2683.8 = 0 signal		
p2548	LR cam switching position 2 / Cam position 2		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4025
	Min -2147483648 [LU]	Max 2147483647 [LU]	Factory setting 0 [LU]
Description:	Sets the cam switching position 2.		
Dependency:	Refer to: p2547, r2683		

Caution:

Only after the axis has been referenced can it be guaranteed that the cam switching signals when output have a "true" position reference.

Note:

Position actual value <= cam switching position 2 --> r2683.9 = 1 signal
Position actual value > cam switching position 2 --> r2683.9 = 0 signal

p2549**BI: LR enable 1 / Enable 1**

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4015
	Min	Max	Factory setting
	-	-	899.2

Description: Sets the signal source for the position controller enable 1.

Dependency: Refer to: r0899, p2550

Note: The position controller is enabled by the following AND logic operation:
- BI: p2549
- BI: p2550

p2550**BI: LR enable 2 / Enable 2**

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4015
	Min	Max	Factory setting
	-	-	1

Description: Sets the signal source for the position controller enable 2.

Dependency: Refer to: p2549

Note: The position controller is enabled by the following AND logic operation:
- BI: p2549
- BI: p2550

p2551**BI: LR setpoint signal present / Mess setp pres**

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4020
	Min	Max	Factory setting
	-	-	2683.2

Description: Sets the signal source for the "setpoint present" signal.

BI: p2551 = 1 signal:

The end of the positioning operation on the setpoint side is signaled and the positioning and standstill monitoring activated.

BI: p2551 = 0 signal:


The start of a positioning operation or tracking mode on the setpoint side is signaled and the positioning and standstill monitoring de-activated.

Dependency: Refer to: p2554, r2683

p2552	BI: LR signal travel to fixed stop active / Signal TfS act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4025
	Min	Max	Factory setting
	-	-	2683.14
Description:	Sets the signal source for the signal "travel to fixed stop active". BI: p2552 = 1 signal: The activity associated with travel to fixed stop is signaled and the detection of the fixed stop is started via the maximum following error (p2634).		
Dependency:	Refer to: r2683		
p2553	BI: LR signal fixed stop reached / Signal fixed stop		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4025
	Min	Max	Factory setting
	-	-	2683.12
Description:	Sets the signal source for the signal "fixed stop reached". BI: p2553 = 1 signal: When the fixed stop is reached, this is signaled and the fixed stop monitoring window is activated.		
Dependency:	Refer to: r2683		
p2554	BI: LR signal traversing command active / Sig trav_cmnd act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4020
	Min	Max	Factory setting
	-	-	2684.15
Description:	Sets the signal source for the signal "traversing command active". BI: p2554 = 1 signal: It is signaled that positioning is active and therefore the positioning monitoring is not activated with the signal "set-point present" (p2551).		
Dependency:	Refer to: p2551, r2684		
p2555	CI: LR LU/revolution LU/mm / LU/rev LU/mm		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4015
	Min	Max	Factory setting
	-	-	2524[0]
Description:	Sets the signal source for the reference of the internal length units LU to motor revolution for rotary encoders and to mm for linear encoders.		
Dependency:	Refer to: p0404, r2524		
Note:	The signal value is used to convert the length unit to the speed or velocity setpoint.		

r2556	CO: LR position setpoint after setpoint smoothing / s_set after interp		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4015
	Min - [LU]	Max - [LU]	Factory setting - [LU]
Description:	Displays the position setpoint after the setpoint smoothing.		
r2557	CO: LR position controller input system deviation / LR_inp sys dev		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4015
	Min - [LU]	Max - [LU]	Factory setting - [LU]
Description:	Displays the difference between the position setpoint and the position actual value at the position controller input.		
r2558	CO: LR position controller output P component / LR_outp P comp		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 4015
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the P component at the output of the position controller for the speed setpoint.		
r2559	CO: LR position controller output I component / LR_outp I comp		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 4015
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the I component at the output of the position controller for the speed setpoint.		
r2560	CO: LR speed setpoint / n_set		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 4015
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the speed setpoint after limiting (CI: p2541).		
r2561	CO: LR speed pre-control value / n_prectrl val		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 4015
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the speed setpoint due to the pre-control.		


r2562	CO: LR total speed setpoint / n_set total		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 4015
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the total speed setpoint This value is obtained from the sum of the speed pre-control and position controller output.		
Dependency:	Refer to: r2560, r2561		
r2563	CO: LR following error dynamic model / Follow error dyn		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4025
	Min - [LU]	Max - [LU]	Factory setting - [LU]
Description:	Displays the dynamic following error. This value is the deviation, corrected by the velocity-dependent component, between the position setpoint and the position actual value.		
Note:	For p2534 >= 100 % (pre-control activated) the following applies: The dynamic following error (r2563) corresponds to the system deviation (r2557) at the position controller input. For 0 % < p2534 < 100 % (pre-control activated) or p2534 = 0 % (pre-control de-activated) the following applies: The dynamic following error (r2563) is the deviation between the measured position actual value and a value that is calculated from the position setpoint via a PT1 model. This compensates the system-related velocity-dependent system deviation for a P controller.		
r2564	CO: LR torque pre-control value / M_prectrl val		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: -	Scaling: p2003	Dyn. index: -
	Units group: 7_1	Unit selection: p0505	Func. diagram: 4015
	Min - [Nm]	Max - [Nm]	Factory setting - [Nm]
Description:	Displays the torque pre-control value.		
Dependency:	Refer to: p1511, p1512		
Note:	The torque pre-control value is the derivation over time of the speed pre-control value and is referred to a moment of inertia of 1 kgm ² /2 PI. When using the pre-control, then this should be evaluated corresponding to the actual moment of inertia.		
r2565	CO: LR following error actual / Following err act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4015
	Min - [LU]	Max - [LU]	Factory setting - [LU]
Description:	Displays the actual following error. This value is the deviation between the position setpoint - after fine interpolation - and the position actual value.		
Notice:	When speed pre-control is active (p2534 > 0 %), the following applies: To calculate this value, the position setpoint is delayed by two position controller clock cycles. When speed pre-control is inactive (p2534 = 0 %), the following applies: To calculate this value, the position setpoint is delayed by two position controller clock cycles.		

r2566	LR speed input pre-control / n inp prectrl		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: -	Scaling: p2000	Dyn. index: -
	Units group: 3_1	Unit selection: p0505	Func. diagram: 4015
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the speed at the input of the pre-control channel.		
Note:	This display parameter is used for diagnostics even when the pre-control is inactive (p2534 = 0%).		
p2567[0...n]	LR torque pre-control moment of inertia / M_prectr M_inertia		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 25_1	Unit selection: p0100	Func. diagram: 4015
	Min 0.000000 [kgm ²]	Max 100000.000000 [kgm ²]	Factory setting 0.159155 [kgm ²]
Description:	Sets the moment of inertia for the torque pre-control.		
Dependency:	Refer to: p2534, r2564		
Note:	When calculating the torque pre-control value (r2654), the time derivation of the speed pre-control value is multiplied by 2 PI * p2567. For reasons associated with the compatibility to earlier firmware versions, the factory setting for p2567 = 1 kgm ² /2 PI. This means that CO: r2564 remains as standard the derivation over time of the speed pre-control value and is referred, as before, to a moment of inertia of 1 kgm ² /2 PI. For torque pre-control, the moment of inertia can now be directly entered into p2567 (instead of subsequently evaluating the pre-control value).		
p2568	BI: EPOS STOP cam activation / STOP cam act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3630
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to activate the function "STOP cam". BI: p2568 = 1 signal --> The evaluation of the STOP cam minus (BI: p2569) and STOP cam plus (BI: p2570) is active.		
Dependency:	Refer to: p2569, p2570		
Note:	The traversing range can also be limited using software limit switches.		
p2569	BI: EPOS STOP cam minus / STOP cam minus		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3630
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for the STOP cam in the negative direction of travel.		
Dependency:	Refer to: p1135, p2568, p2570, p2573, r2684 Refer to: F07491		
Caution:	The STOP cams are low active. Sets message 07491 as fault (F07491): For a 0 signal, the axis is stopped with the OFF3 ramp-down time (p1135), status signal r2684.13 is set to 1, saved and the appropriate fault is output. After the fault has been acknowledged, only motion moving away from the STOP cam is permitted. For a 0/1 signal and valid travel direction, when the STOP cam is exited, this is detected and the status signal r2684.13 is set to 0.		
			

Sets message 07491 as alarm (A07491):

For a 0 signal, the axis is stopped with the maximum deceleration (p2573), status signal r2684.13 is set to 1, saved and the appropriate alarm is output. Only motion away from the STOP cam is permitted.

For a 0/1 signal and valid travel direction, when the STOP cam is exited, this is detected and the status signal r2684.13 is set to 0 and the alarm is deleted.

p2570		BI: EPOS STOP cam plus / STOP cam plus		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary	
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: 3630	
	Min	Max	Factory setting	
	-	-	1	
Description:	Sets the signal source for the STOP cam in the positive direction of travel.			
Dependency:	Refer to: p1135, p2568, p2569, p2573, r2684 Refer to: F07492			
Caution:	The STOP cams are low active.			
	Sets message 07492 as fault (F07492):			
	For a 0 signal, the axis is stopped with the OFF3 ramp-down time (p1135), status signal r2684.14 is set to 1, saved and the appropriate fault is output. After the fault has been acknowledged, only motion moving away from the STOP cam is permitted.			
	For a 0/1 signal and valid travel direction, when the STOP cam is exited, this is detected and the status signal r2684.14 is set to 0.			
	Sets message 07492 as alarm (A07492):			
	For a 0 signal, the axis is stopped with the maximum deceleration (p2573), status signal r2684.14 is set to 1, saved and the appropriate alarm is output. Only motion away from the STOP cam is permitted.			
	For a 0/1 signal and valid travel direction, when the STOP cam is exited, this is detected and the status signal r2684.14 is set to 0 and the alarm is deleted.			

p2571		EPOS maximum velocity / v_max		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32	
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: 3630	
	Min	Max	Factory setting	
	1 [1000 LU/min]	40000000 [1000 LU/min]	30000 [1000 LU/min]	
Description:	Sets the maximum velocity for the "basic positioner" function (EPOS).			
Dependency:	Refer to: r1084, r1087, p2503, p2504, p2505, p2506			
Note:	The maximum velocity is active in all of the operating modes of the basic positioner.			
	The maximum velocity for the basic positioner should be aligned with the maximum speed/velocity of the speed/velocity controller:			
	Rotary encoders:			
	$p2571[1000 \text{ LU/min}] = \min(r1084 , r1087)[\text{rpm}] \times p2505/p2504 \times p2506/1000$			
	Linear encoders:			
	$p2571[1000 \text{ LU/min}] = \min(r1084 , r1087)[\text{m/min}] \times p2503/10[\text{m}]$			

p2572		EPOS maximum acceleration / a_max		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32	
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: 3630	
	Min	Max	Factory setting	
	1 [1000 LU/s ²]	2000000 [1000 LU/s ²]	100 [1000 LU/s ²]	
Description:	Sets the maximum acceleration for the "basic positioner" function (EPOS).			
Dependency:	Refer to: p2619, p2644			

Note: The maximum acceleration appears to exhibit jumps (without jerk).
 "Traversing blocks" operating mode:
 The programmed acceleration override (p2619) acts on the maximum acceleration.
 "Direct setpoint input/MDI" mode:
 The acceleration override is effective (p2644, 4000 hex = 100 %).
 "Jog" and "search for reference" modes
 No acceleration override is active. The axis starts with the maximum acceleration.

p2573	EPOS maximum deceleration / -a_max		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3630
	Min 1 [1000 LU/s ²]	Max 2000000 [1000 LU/s ²]	Factory setting 100 [1000 LU/s ²]

Description: Sets the maximum deceleration for the "basic positioner" function (EPOS).

Dependency: Refer to: p2620, p2645

Note: The maximum deceleration appears to exhibit jumps (without jerk).
 "Traversing blocks" operating mode:
 The programmed deceleration override (p2620) acts on the maximum deceleration.
 "Direct setpoint input/MDI" mode:
 The deceleration override is effective (p2645, 4000 hex = 100 %).
 "Jog" and "search for reference" modes
 No deceleration override is effective. The axis breaks with the maximum deceleration.

p2574	EPOS jerk limiting / Jerk lim		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3635
	Min 1 [1000 LU/s ³]	Max 100000000 [1000 LU/s ³]	Factory setting 10000 [1000 LU/s ³]


Description: Sets the jerk limiting

Dependency: Refer to: p2572, p2573, p2575

Note: The jerk limiting is internally converted into a jerk time as follows:

$$\text{Jerk time } Tr = \max(p2572, p2573) / p2574$$
 The jerk time is internally limited to 1000 ms and is rounded-off to an integer multiple of the sampling time positioning (p0115[5]).
 The jerk time is valid for the acceleration and deceleration phases also for unequal maximum acceleration (p2572) and maximum deceleration (p2573).
 For unequal maximum acceleration and maximum deceleration, the motion is not optimal from a time perspective as the jerk limit cannot be used for the lower of the two values.
 If, in the traversing profile, the acceleration time without jerk limiting is less than the jerk time Tr , then the motion with jerk limiting is not optimum from a time perspective.
 For traversing motion with a direct transition between acceleration and deceleration (i.e. jerk time is greater than the constant velocity phase), jerk can increase up to twice the parameterized jerk.
 CONTINUE_FLYING with direction reversal acts internally just like a CONTINUE_WITH_STOP without the "position reached" being set. Without jerk limiting, this behavior can hardly be noticed as, when reversing, the position setpoint is only kept at zero for one interpolator clock cycle.
 For block change enable CONTINUE_WITH_STOP, jerk limiting results in a longer delay time.

p2575	BI: EPOS jerk limiting activation / Jerk limit act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3635
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to activate the jerk limiting. Activating/de-activating: - using BI: p2575 = 1 signal or 0 signal. - using the command JERK in the traversing block (only for BI: p2575 = 0 signal).		
Dependency:	Refer to: p2574		
Note:	A change of the signal state at the binector input is only accepted at zero speed.		
p2576	EPOS modulo correction modulo range / Modulo corr range		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3635
	Min	Max	Factory setting
	1 [LU]	2147482647 [LU]	360000 [LU]
Description:	Sets the modulo range for axes with modulo correction.		
Dependency:	Refer to: p2577		
p2577	BI: EPOS modulo correction activation / Modulo corr act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3630, 3635
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to activate modulo correction.		
Dependency:	Refer to: p2576		
Note:	When the signal state changes at the binector input, this only becomes effective in the "ready for switching on" state. Selecting modulo correction: The actual position setpoint in the modulo range is corrected. The position actual value differs from the position setpoint by the following error and can also leave the modulo range. De-selecting modulo correction: It is based on the actual position actual value.		
p2578	CI: EPOS software limit switch minus signal source / SW limSw Min S_src		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Integer32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3630
	Min	Max	Factory setting
	-	-	2580[0]
Description:	Sets the signal source for the software limit switch minus.		
Dependency:	Refer to: p2579, p2580, p2581, p2582 Refer to: A07469, A07477, A07479, F07481		
Notice:	A change to the software limit switch becomes immediately effective. If the software limit switch is changed, then this results in the positions in the traversing blocks being checked.		
Note:	The following applies for the setting of the software limit switch: Software limit switch minus < software limit switch plus		

p2579	CI: EPOS software limit switch plus signal source / SW limSwPlus S_src		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Integer32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3630
	Min	Max	Factory setting
	-	-	2581[0]
Description:	Sets the signal source for the software limit switch plus.		
Dependency:	Refer to: p2578, p2580, p2581, p2582 Refer to: A07470, A07478, A07480, F07482		
Notice:	A change to the software limit switch becomes immediately effective. If the software limit switch is changed, then this results in the positions in the traversing blocks being checked.		
Note:	The following applies for the setting of the software limit switch: Software limit switch minus < software limit switch plus		
p2580	CO: EPOS software limit switch minus / SW limSwitch minus		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3630
	Min	Max	Factory setting
	-2147482648 [LU]	2147482647 [LU]	-2147482648 [LU]
Description:	Sets the software limit switch in the negative direction of travel.		
Dependency:	Refer to: p2578, p2579, p2581, p2582		
p2581	CO: EPOS software limit switch plus / SW lim switch plus		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3630
	Min	Max	Factory setting
	-2147482648 [LU]	2147482647 [LU]	2147482647 [LU]
Description:	Sets the software limit switch in the positive direction of travel.		
Dependency:	Refer to: p2578, p2579, p2580, p2582		
p2582	BI: EPOS software limit switch activation / SW lim sw act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3630
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to activate the "software limit switch".		
Dependency:	Refer to: p2578, p2579, p2580, p2581		
Caution:	Software limit switch effective: - axis is referenced (r2684.11 = 1) and BI: p2582 = 1 signal. Software limit switch ineffective: - modulo correction active (BI: p2577 = 1 signal). - search for reference is executed.		
			
Notice:	Target position for relative positioning outside software limit switch: The traversing block is started and the axis comes to a standstill at the software limit switch. An appropriate alarm is output and the traversing block is interrupted. Traversing blocks with valid position can be activated. Target position for absolute positioning outside software limit switch: In the "traversing blocks" mode, the traversing block is not started and an appropriate fault is output.		

Axis outside the valid traversing range:

If the axis is already outside the valid traversing range, then an appropriate fault is output. The fault can be acknowledged at standstill. Traversing blocks with valid position can be activated.

Note: The traversing range can also be limited using STOP cams.

p2583	EPOS backlash compensation / Backlash comp		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3635
	Min -200000 [LU]	Max 200000 [LU]	Factory setting 0 [LU]
Description:	Sets the amount of play (backlash) for positive or negative play. 0: The backlash compensation is de-activated. > 0: Positive backlash (normal case) When the direction is reversed, the encoder actual value leads the actual value. < 0: Negative backlash When the direction is reversed, the actual value leads the encoder actual value.		
Dependency:	If a stationary axis is referenced by setting the reference point, or an adjusted with absolute encoder is powered up, then the setting of p2604 is relevant for entering the compensation value. p2604 = 1: Traveling in the positive direction -> A compensation value is immediately entered. Traveling in the negative direction -> A compensation value is not entered p2604 = 0: Traveling in the positive direction -> A compensation value is not entered Traveling in the negative direction -> A compensation value is immediately entered. When again setting the reference point (a referenced axis) or for "flying referencing", p2604 is not relevant but instead the history of the axis. Refer to: p2604, r2667		
p2585	EPOS jog 1 setpoint velocity / Jog 1 v_set		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3610
	Min -40000000 [1000 LU/min]	Max 40000000 [1000 LU/min]	Factory setting -300 [1000 LU/min]
Description:	Sets the setpoint velocity for jog 1.		
Dependency:	Refer to: p2587, p2589, p2591		
p2586	EPOS jog 2 setpoint velocity / Jog 2 v_set		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3610
	Min -40000000 [1000 LU/min]	Max 40000000 [1000 LU/min]	Factory setting 300 [1000 LU/min]
Description:	Sets the setpoint velocity for jog 2.		
Dependency:	Refer to: p2588, p2590, p2591		

p2587	EPOS jog 1 traversing distance / Jog 1 distance		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3610
	Min 0 [LU]	Max 2147482647 [LU]	Factory setting 1000 [LU]
Description:	Sets the traversing distance for incremental jog 1.		
Dependency:	Refer to: p2585, p2589, p2591		
Note:	Incremental jog 1 is started with BI: p2591 = 1 signal and BI: p2589 = 0/1 signal. With BI: p2589 = 0 signal, incremental jog is interrupted.		
p2588	EPOS jog 2 traversing distance / Jog 2 distance		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3610
	Min 0 [LU]	Max 2147482647 [LU]	Factory setting 1000 [LU]
Description:	Sets the traversing distance for incremental jog 2.		
Dependency:	Refer to: p2586, p2590, p2591		
Note:	Incremental jog 2 is started with BI: p2591 = 1 signal and BI: p2590 = 0/1 signal. With BI: p2590 = 0 signal, incremental jogging is interrupted.		
p2589	BI: EPOS jog 1 signal source / Jog 1 S_src		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3610, 3625
	Min -	Max -	Factory setting 722.3
Description:	Sets the signal source for jog 1.		
Dependency:	When jogging, the axis is accelerated or braked with the maximum acceleration/deceleration (p2572/p2573). BI: p2591 = 0 signal The axis endlessly moves with the setpoint velocity, jog 1 (p2585). BI: p2591 = 1 signal The axis traverses through a parameterized distance (p2585) with the setpoint velocity, jog 1 (p2587). Refer to: p2572, p2573, p2585, p2587, p2591		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
p2590	BI: EPOS jog 2 signal source / Jog 2 S_src		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3610, 3625
	Min -	Max -	Factory setting 722.4
Description:	Sets the signal source for jog 2.		
Dependency:	When jogging, the axis is accelerated or braked with the maximum acceleration/deceleration (p2572/p2573). BI: p2591 = 0 signal The axis endlessly moves with the setpoint velocity, jog 2 (p2586). BI: p2591 = 1 signal The axis traverses through a parameterized distance (p2586) with the setpoint velocity, jog 2 (p2588). Refer to: p2572, p2573, p2586, p2588, p2591		

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

p2591	BI: EPOS jogging incremental / Jog incr		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3610
	Min	Max	Factory setting
	-	-	722.5

Description: Sets the signal source for jogging incremental.
Dependency: Refer to: p2585, p2586, p2587, p2588, p2589, p2590

p2593	CI: EPOS LU/revolution LU/mm / LU/rev LU/mm		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3630
	Min	Max	Factory setting
	-	-	2524[0]

Description: Sets the signal source for the reference of the internal length units LU to motor revolution for rotary encoders and to mm for linear encoders.
Dependency: Refer to: p0404, r2524, p2594
Note: The signal value is used to convert the length unit to the speed or velocity setpoint.

p2594[0...2]	CI: EPOS Maximum velocity externally limited / v_Max ext lim		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU250D-2_PN_F	Can be changed: T	Scaling: p2000	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3630
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source for the externally limited maximum velocity.
Index: [0] = Setpoint limit absolute
[1] = Setpoint limiting positive
[2] = Setpoint limiting negative
Dependency: Refer to: r2524, p2571, p2593
Warning: In order that the externally limited velocity can be effective for the EPOS operating modes, connector input p2593 must be correctly interconnected.



p2595	BI: EPOS referencing start / Ref start		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612, 3625, 3614
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source to start the "search for reference" or "flying referencing".
BI: p2595 = 0/1 signal
Referencing is started.
BI: p2595 = 1/0 signal
Referencing is interrupted.
Dependency: Refer to: p2597, p2598, p2599, r2684
Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: Search for reference (BI: p2597 = 0 signal):
 The reference point approach can only be activated (0/1 edge) after traversing motion that is being processed has been completed.
 With the start, where relevant, the state signal "reference point set" (r2684.11) is reset.
 Flying referencing (BI: p2597 = 1 signal):
 With the start, the state signal "reference point set" (r2684.11) is not reset.

p2596	BI: EPOS set reference point / Set ref_pt		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source for the "set reference point".

Dependency: Refer to: p2598, p2599, r2684

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: Reference point setting is effective in the following operating states:
 - in the basic state.
 - for FIXED STOP with progress condition END (corresponds to the initial state).
 - for traversing block interrupted via BI: p2640 = 0 signal (intermediate stop).
 - for EPOS not enabled (BI: p2656 = 0 signal) and position actual value valid (BI: p2658 = 1 signal).

p2597	BI: EPOS referencing type selection / Ref_typ select		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612, 3614, 3625
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source to select referencing type.

1 signal: Flying referencing

0 signal: Search for reference

Dependency: Refer to: p2595

Note: Referencing is activated as follows:
 - Select the referencing type (BI: p2597)
 - Start referencing (BI: p2595 = 0/1 signal)

p2598[0...3]	CI: EPOS reference point coordinate signal source / Ref_pt coord S_src		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Integer32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612, 3614
	Min	Max	Factory setting
	-	-	[0] 2599[0]
			[1] 0
			[2] 0
			[3] 0

Description: Sets the signal source for the reference point coordinate.

This value is used as reference for the following referencing operations:

- search for reference
- set reference point
- flying referencing
- absolute value adjustment

List of parameters

Index: [0] = CI-loop pos ctrl
[1] = Encoder 1
[2] = Encoder 2
[3] = Reserved

Dependency: Refer to: p2502, p2507, p2595, p2596, p2597, p2599

Note: Incremental measuring system:

After the reference point is reached, the drive accepts the actual axis position from the position received via the connector input p2598[0].

Absolute encoder:

When adjusting the encoder, the position received via the connector input is set as the actual axis position. The position offset to the actual encoder value is displayed in p2525.

p2599**CO: EPOS reference point coordinate value / Ref_pt coord val**

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min -2147482648 [LU]	Max 2147482647 [LU]	Factory setting 0 [LU]

Description: Sets the position value for the reference point coordinate.

This value is set as the actual axis position after referencing or adjustment.

Dependency: Refer to: p2507, p2525, p2595, p2596, p2597, p2598

p2600**EPOS search for reference reference point offset / Ref_pt offset**

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min -2147482648 [LU]	Max 2147482647 [LU]	Factory setting 0 [LU]

Description: Sets the reference point offset for search for reference.

Dependency: Refer to: p2598

p2601**EPOS flying referencing inner window / Inner window**

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3614
	Min 0 [LU]	Max 2147482647 [LU]	Factory setting 0 [LU]

Description: Sets the inner window for flying referencing.

Value = 0:

The evaluation of the inner window is de-activated.

Dependency: Refer to: p2597, p2602, r2684

Notice: The inner window must be set so that it is smaller than the outer window.

Note: If the difference between the reference point coordinate and detected actual position is less than the inner window, then no correction is executed for a referenced axis.

If the difference between the reference point coordinate and detected actual position is greater than the inner window and less than the outer window (p2602), then a correction is executed for a referenced axis.

p2602	EPOS flying referencing outer window / Outer window		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3614
	Min 0 [LU]	Max 2147482647 [LU]	Factory setting 0 [LU]
Description:	Sets the outer window for flying referencing. Value = 0: The evaluation of the outer window is de-activated.		
Dependency:	Refer to: p2597, r2684 Refer to: A07489		
Notice:	The inner window must be set so that it is smaller than the outer window.		
Note:	If the difference between the reference point coordinate and detected actual position is greater than the outer window, then no correction is executed for the referenced axis. Further, an appropriate message is output and r2684.3 is set to 1.		
p2603	EPOS flying referencing, positioning mode relative / Pos_mode relative		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3635
	Min 0	Max 1	Factory setting 1
Description:	Sets the relative positioning mode for flying referencing. Value = 1: The corrected setpoint is not calculated into the traversing distance. Value = 0: The corrected setpoint is calculated into the traversing distance.		
Dependency:	Refer to: p2597, p2623, p2648		
Caution:	For p2603 = 0 the direction can change.		
p2604	BI: EPOS search for reference start direction / Srch for ref dir		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min -	Max -	Factory setting 0
Description:	Sets the signal sources for the start direction of the search for reference. 1 signal: Start in the negative direction. 0 signal: Start in the positive direction.		
Dependency:	Refer to: p2583, p2595, p2597		
p2605	EPOS search for reference approach velocity reference cam / v_appr ref_cam		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min 1 [1000 LU/min]	Max 4000000 [1000 LU/min]	Factory setting 5000 [1000 LU/min]
Description:	Sets the approach velocity to the reference cam for the search for reference.		
Dependency:	The search for reference only starts with the approach velocity to the reference cam when there is a reference cam (p2607 = 1). Refer to: p2595, p2597, p2604, p2606, p2607		

Note: When traversing to the reference cam, the velocity override is effective.
If, at the start of the search for reference, the axis is already at the reference cam, then the axis immediately starts to traverse to the zero mark.

p2606 EPOS search for reference reference cam maximum distance / Ref_cam max s

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min 0 [LU]	Max 2147482647 [LU]	Factory setting 2147482647 [LU]

Description: Sets the maximum distance after the start of the search for reference when traversing to the reference cam.

Dependency: Refer to: p2595, p2597, p2604, p2605, p2607

Refer to: F07458

Note: When using a reversing cam, the maximum distance must be set appropriately long.

p2607 EPOS search for reference reference cam present / Ref_cam pres

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned8
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min 0	Max 1	Factory setting 1

Description: Sets whether or not a reference cam is present for the search for reference.

Value = 1: Reference cam present.

Value = 0: No reference cam present.

Dependency: Refer to: p2595, p2597, p2604, p2605, p2606

p2608 EPOS search for reference approach velocity zero mark / v_appr ref_ZM

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min 1 [1000 LU/min]	Max 40000000 [1000 LU/min]	Factory setting 300 [1000 LU/min]

Description: Sets the approach velocity after detecting the reference cam to search for the zero mark for the search for reference.

Dependency: If there is no reference cam (p2607 = 0), the search for reference immediately starts with the axis traversing to the zero mark.

Refer to: p2595, p2597, p2604, p2607, p2609, p2610

Caution:



If the reference cam is not adjusted so that at each search for reference the same zero mark for synchronization is detected, then an "incorrect" axis reference point is obtained.

After the reference cam has been left, the search for the zero mark is activated with a time delay due to internal factors. This is the reason that the reference cam should be adjusted in this center between two zero marks and the approach velocity should be adapted to the distance between two zero marks.

Note: The velocity override is not effective when traversing to the zero mark.

p2609 EPOS search for reference max. distance ref. cam and zero mark / Max s ref_cam ZM

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min 0 [LU]	Max 2147482647 [LU]	Factory setting 20000 [LU]

Description: Sets the maximum distance after leaving the reference cam when traversing to the zero mark.

Dependency: Refer to: p2595, p2597, p2604, p2607, p2608, p2610
Refer to: F07459

p2610 EPOS search for ref. tol. bandwidth for distance to zero mark / Tol_band to ZM

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min 0 [LU]	Max 2147482647 [LU]	Factory setting 2147482647 [LU]

Description: Sets the tolerance bandwidth for the distance to the zero mark
The zero mark is evaluated within the maximum distance between the reference cam and zero mark (p2609) minus the tolerance bandwidth for the distance to the zero mark (p2610).

Dependency: Refer to: p2609

p2611 EPOS search for reference approach velocity reference point / v_appr ref_pt

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min 1 [1000 LU/min]	Max 40000000 [1000 LU/min]	Factory setting 300 [1000 LU/min]

Description: Sets the approach velocity after detecting the zero mark to approach the reference point.

Dependency: Refer to: p2595, p2597, p2604, p2607, p2609, p2610

Note: When traversing to the reference point, the velocity override is not effective.

p2612 BI: EPOS search for reference reference cam / Ref_cam

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min -	Max -	Factory setting 0

Description: Sets the signal source for the reference cam.

Dependency: Refer to: p2607

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

p2613 BI: EPOS search for reference reversing cam minus / Rev minus

CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min -	Max -	Factory setting 1

Description: Sets the signal source for the reversing cam in the negative direction of travel.

1 signal: Reversing cam not reached.

0 signal: Reversing cam reached.

Dependency: Refer to: p2614

Note: If, during the search for reference from the reversing cam minus and plus, a 0 signal is detected, then the axis remains stationary (at standstill).

p2614	BI: EPOS search for reference reversing cam plus / Rev plus		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min	Max	Factory setting
	-	-	1
Description:	Sets the signal source for the reversing cam in the negative direction of travel. 1 signal: Reversing cam not reached. 0 signal: Reversing cam reached.		
Dependency:	Refer to: p2613		
Note:	If, during the search for reference from the reversing cam minus and plus, a 0 signal is detected, then the axis remains stationary (at standstill).		
p2615	EPOS maximum number of traversing blocks / Trav_block qty max		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned8
CU250D-2_PN_F	Can be changed: C(17)	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616
	Min	Max	Factory setting
	1	16	16
Description:	Sets the maximum number of traversing blocks that are available.		
Dependency:	Refer to: p2616, p2617, p2618, p2619, p2620, p2621, p2622, p2623, p2624		
p2616[0...n]	EPOS traversing block block number / Trav_blk, blkNo.		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer16
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: p2615
	Units group: -	Unit selection: -	Func. diagram: 3616
	Min	Max	Factory setting
	-1	15	-1
Description:	Sets a block number. -1: Invalid block number. These blocks are not taken into account. 0 ... 15: Valid block number.		
Dependency:	The number of indices depends on p2615. Refer to: p2615, p2617, p2618, p2619, p2620, p2621, p2622, p2623, p2624		
p2617[0...n]	EPOS traversing block position / Trav_block pos		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: p2615
	Units group: -	Unit selection: -	Func. diagram: 3616
	Min	Max	Factory setting
	-2147482648 [LU]	2147482647 [LU]	0 [LU]
Description:	Sets the target position for the traversing block.		
Dependency:	The number of indices depends on p2615. Refer to: p2615, p2616, p2618, p2619, p2620, p2621, p2622, p2623, p2624		
Note:	The target position is approached in either relative or absolute terms depending on p2623.		

p2618[0...n]	EPOS traversing block velocity / Trav_block v		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: p2615
	Units group: -	Unit selection: -	Func. diagram: 3616
	Min 1 [1000 LU/min]	Max 40000000 [1000 LU/min]	Factory setting 600 [1000 LU/min]
Description:	Sets the velocity for the traversing block.		
Dependency:	The number of indices depends on p2615. Refer to: p2615, p2616, p2617, p2619, p2620, p2621, p2622, p2623, p2624, p2646		
Note:	The velocity can be influenced using the velocity override (p2646).		
p2619[0...n]	EPOS traversing block acceleration override / Trav_block a_over		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: p2615
	Units group: -	Unit selection: -	Func. diagram: 3616
	Min 1.0 [%]	Max 100.0 [%]	Factory setting 100.0 [%]
Description:	Sets the acceleration override for the traversing block. The override refers to the maximum acceleration (p2572).		
Dependency:	The number of indices depends on p2615. Refer to: p2572, p2615, p2616, p2617, p2618, p2620, p2621, p2622, p2623, p2624		
p2620[0...n]	EPOS traversing deceleration override / Trav_block -a_over		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: p2615
	Units group: -	Unit selection: -	Func. diagram: 3616
	Min 1.0 [%]	Max 100.0 [%]	Factory setting 100.0 [%]
Description:	Sets the deceleration override for the traversing block. The override refers to the maximum deceleration (p2573).		
Dependency:	The number of indices depends on p2615. Refer to: p2573, p2615, p2616, p2617, p2618, p2619, p2621, p2622, p2623, p2624		
Notice:	If, when calculating the traversing profile, it is identified that the target position of the next block with the programmed deceleration override will not be reached without direction reversal (flying block change), then the old (actual) deceleration override remains effective.		
p2621[0...n]	EPOS traversing block task / Trav_block task		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer16
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: p2615
	Units group: -	Unit selection: -	Func. diagram: 3616
	Min 1	Max 9	Factory setting 1
Description:	Sets the required task for the traversing block.		
Value:	1: POSITIONING 2: FIXED STOP 3: ENDLESS_POS 4: ENDLESS_NEG 5: WAITING 6: GOTO 7: SET_O 8: RESET_O 9: JERK		

Dependency: The number of indices depends on p2615.
Refer to: p2615, p2616, p2617, p2618, p2619, p2620, p2622, p2623, p2624

p2622[0...n]	EPOS traversing block task parameter / Trav_blk task_par		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: p2615
	Units group: -	Unit selection: -	Func. diagram: 3616
	Min -2147483648	Max 2147483647	Factory setting 0

Description: Sets additional information/data of the appropriate task for the traversing block.

Dependency: The number of indices depends on p2615.
Refer to: p2615, p2616, p2617, p2618, p2619, p2620, p2621, p2623, p2624

Note: The following should be set depending on the task:
FIXED_STOP: Clamping torque and clamping force (rotary 0...65536 [0.01 Nm], linear 0...65536 [N])
WAIT: Delay time [ms]
GOTO: Block number
SET_O: 1, 2 or 3 - set direct output 1, 2 or 3 (both)
RESET_O: 1, 2 or 3 - reset direct output 1, 2 or 3 (both)
JERK: 0 - de-activate, 1 - activate

p2623[0...n]	EPOS traversing block task mode / Trav_block mode		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: p2615
	Units group: -	Unit selection: -	Func. diagram: 3515, 3616
	Min 0	Max 65535	Factory setting 0

Description: Sets the influence of the task for the traversing block.
Value = 0000 cccc bbbb aaaa
cccc: Positioning mode
cccc = 0000 --> ABSOLUTE
cccc = 0001 --> RELATIVE
cccc = 0010 --> ABS_POS (only for a rotary axis with modulo correction)
cccc = 0011 --> ABS_NEG (only for a rotary axis with modulo correction)
bbbb: Progression condition
bbbb = 0000 --> END
bbbb = 0001 --> CONTINUE WITH STOP
bbbb = 0010 --> CONTINUE FLYING
bbbb = 0011 --> CONTINUE EXTERNAL
bbbb = 0100 --> CONTINUE EXTERNAL WAIT
bbbb = 0101 --> CONTINUE EXTERNAL ALARM
aaaa: IDs
aaaa = 000x --> show/hide block (x = 0: show, x = 1: hide)

Dependency: The number of indices depends on p2615.
Refer to: p2615, p2616, p2617, p2618, p2619, p2620, p2621, p2622, p2624

p2624	EPOS traversing block sorting / Trav_block sort		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616
	Min 0	Max 1	Factory setting 0
Description:	Sets the traversing blocks for sorting corresponding to their block number. Procedure: Set p2624 = 0 --> 1. Sorting is started and the parameters are automatically reset to zero once the operation has been completed.		
Dependency:	Refer to: p2615, p2616, p2617, p2618, p2619, p2620, p2621, p2622, p2623		
Note:	After sorting, the traversing blocks are written at the beginning of the memory in increasing sequence without any gaps.		
p2625	BI: EPOS traversing block selection bit 0 / Trav_blk sel bit 0		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616, 3640
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to select the traversing block, bit 0.		
Dependency:	Binector inputs p2625, p2626, p2627 and p2628 are used to select one of the maximum of 16 traversing blocks. Refer to: p2626, p2627, p2628		
p2626	BI: EPOS traversing block selection bit 1 / Trav_blk sel bit 1		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616, 3640
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to select the traversing block, bit 1.		
Dependency:	Binector inputs p2625, p2626, p2627 and p2628 are used to select one of the maximum of 16 traversing blocks. Refer to: p2625, p2627, p2628		
p2627	BI: EPOS traversing block selection bit 2 / Trav_blk sel bit 2		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616, 3640
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to select the traversing block, bit 2.		
Dependency:	Binector inputs p2625, p2626, p2627 and p2628 are used to select one of the maximum of 16 traversing blocks. Refer to: p2625, p2626, p2628		
p2628	BI: EPOS traversing block selection bit 3 / Trav_blk sel bit 3		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616, 3640
	Min -	Max -	Factory setting 0
Description:	Sets the signal source to select the traversing block, bit 3.		

Dependency: Binector inputs p2625, p2626, p2627 and p2628 are used to select one of the maximum of 16 traversing blocks.
Refer to: p2625, p2626, p2627

p2631	BI: EPOS activate traversing task (0 -> 1) / Trav_task act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616, 3625
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source for "activating traversing task".

BI: p2631 = 0/1 signal

The traversing task, selected using BI: p2625 ... p2630, is started.

Dependency: Refer to: p2625, p2626, p2627, p2628, p2640, p2641

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: To start a traversing block, the axis must be referenced (r2684.11 = 1).

The status signal r2684.12 = 0/1 signal is used for acknowledgement.

A traversing task can be influenced using the following signals:

- intermediate stop via BI: p2640.

- reject traversing task via BI: p2641.

p2632	EPOS external block change evaluation / Ext BickChg eval		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer16
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3615, 3616
	Min	Max	Factory setting
	0	1	0

Description: Sets the mode to evaluate "external block change".

Value:
0: External block change via the measuring probe
1: External block change via BI: p2633

Dependency: Refer to: p2623, p2633, r2677, r2678

Note: In the mode "external block change via measuring probe (p2632 = 0), the following applies:

When starting a traversing block with the block change enable CONTINUE_EXTERNAL, CONTINUE_EXTERNAL_WAIT and CONTINUE_EXTERNAL_ALARM an activated "flying referencing" is interrupted. After ending the block, "flying referencing" must be re-activated via BI: p2595 = 0/1 signal.

p2633	BI: EPOS external block change (0 -> 1) / Ext BickChg (0->1)		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3615
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source for "external block change".

BI: p2633 = 0/1 signal

Dependency: The evaluation of the signal is only active p2632 = 1.

Refer to: p2623, p2632, p2640, p2641, r2677, r2678

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: A 0/1 edge initiates a flying block change in the subsequent traversing block.

When the external block change is identified, the actual position is saved in r2678.

A traversing task can be influenced using the following signals:

- intermediate stop via BI: p2640.

- reject traversing task via BI: p2641.

p2634[0...n]	EPOS fixed stop maximum following error / Following err max		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 3617, 4025
	Min 0 [LU]	Max 2147482647 [LU]	Factory setting 1000 [LU]
Description:	Sets the following error to detect the "fixed stop reached" state (r2526.4).		
Dependency:	Refer to: r2526, p2621, r2675		
Note:	The state "fixed stop reached" is detected if the following error exceeds the theoretically calculated following error value by p2634.		
p2635	EPOS fixed stop monitoring window / Fixed stop monit		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3617, 4025
	Min 0 [LU]	Max 2147482647 [LU]	Factory setting 100 [LU]
Description:	Sets the monitoring window of the actual position after the fixed stop is reached.		
Dependency:	Refer to: r2526, r2683 Refer to: F07484		
Note:	If, after the fixed stop is reached, the end stop shifts in either the positive or negative direction by more than the value set here, then BO: r2526.5 is set to 1 and an appropriate message is output.		
p2637	BI: EPOS fixed stop reached / Fixed stop reached		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616, 3617
	Min -	Max -	Factory setting 2526.4
Description:	Sets the signal source for the feedback signal "fixed stop reached". BI: p2637 = 1 signal Fixed stop is reached. BI: p2637 = 0 signal Fixed stop is not reached.		
Dependency:	Refer to: r2526, p2634		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
Note:	The identification of "fixed stop reached" is, for the factory setting, dependent on the signal BO: r2526.4 (fixed stop reached). This signal is influenced via p2634 (EPOS fixed stop, maximum following error).		
p2638	BI: EPOS fixed stop outside the monitoring window / Fixed stop outside		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616, 3617
	Min -	Max -	Factory setting 2526.5
Description:	Sets the signal source for the feedback signal "fixed stop outside the monitoring window". BI: p2638 = 1 signal Fixed stop is located outside the monitoring window. BI: p2638 = 0 signal Fixed stop is inside the monitoring window.		
Dependency:	Refer to: r2526, p2635		

Note: The identification of "fixed stop outside the monitoring window" is, for the factory setting, dependent on signal BO: r2526.5 (fixed stop outside window). This signal is influenced via p2635 (EPOS fixed stop monitoring window).

p2639	BI: EPOS torque limit reached / M_limit reached		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616
	Min	Max	Factory setting
	-	-	1407.7

Description: Sets the signal source for the feedback signal "torque limit reached" when traversing to fixed stop.

BI: p2639 = 1 signal

Torque limit is reached.

BI: p2639 = 0 signal

Torque limit is not reached.

Dependency: Refer to: r1407

Note: The feedback signal from "torque limit reached" is, for the factory setting, dependent on the signal BO: r1407.7 (torque limit reached).

p2640	BI: EPOS intermediate stop (0 signal) / Intermediate stop		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616, 3620, 3625
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source for the "no intermediate stop/intermediate stop".

BI: p2640 = 1 signal

No intermediate stop.

BI: p2640 = 0 signal

Intermediate stop.

Dependency: Refer to: p2631, p2641, p2647, p2649

Caution: For BI: p2649 = 1 signal, the following applies:
Motion starts without any explicit control signal.

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: This signal is only effective in the modes "traversing blocks" and "direct setpoint input/MDI".
When activating the intermediate stop, the axis brakes with the parameterized deceleration (p2620 or p2645).

p2641	BI: EPOS reject traversing task (0 signal) / Trav_task reject		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616, 3620, 3625
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source for "do not reject traversing task/reject traversing task".

BI: p2641 = 1 signal

Do not reject traversing task.

BI: p2641 = 0 signal

Reject traversing task.

Dependency: Refer to: p2631, p2640, p2647, p2649

Caution: For BI: p2649 = 1 signal, the following applies:
Motion starts without any explicit control signal.

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: This signal is only effective in the modes "traversing blocks" and "direct setpoint input/MDI".
When activating reject traversing tasks, then the axis brakes with the maximum deceleration (p2573).

p2642	CI: EPOS direct setpoint input/MDI position setpoint / MDI s_set		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Integer32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3618
	Min	Max	Factory setting
	-	-	2690[0]

Description: Sets the signal source for the position setpoint in the mode "direct setpoint input/MDI".
Dependency: Refer to: p2648, p2649, p2650, p2690
Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.
Note: Depending on p2649, the position setpoint is either transferred continuously or edge-triggered.
The position setpoint input is interpreted as length unit [LU].

p2643	CI: EPOS direct setpoint input/MDI velocity setpoint / MDI v_set		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Integer32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3618
	Min	Max	Factory setting
	-	-	2691[0]

Description: Sets the signal source for the velocity setpoint in the "direct setpoint input/MDI mode".
Dependency: Refer to: p2649, p2650, p2691
Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.
Note: Depending on p2649, the velocity setpoint is either transferred continuously or edge-triggered.
The velocity setpoint input is interpreted as [1000 LU/min].

p2644	CI: EPOS direct setpoint input/MDI acceleration override / MDI a_over		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / FloatingPoint32
CU250D-2_PN_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3618
	Min	Max	Factory setting
	-	-	2692[0]

Description: Sets the signal source for the acceleration override in the operating mode "direct setpoint input/MDI".
Dependency: Refer to: p2649, p2650, p2692
Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.
Note: Depending on p2649, the acceleration override is either transferred continuously or edge-triggered.
The signal value 4000 hex (16384 dec) corresponds to 100 %.

p2645	CI: EPOS direct setpoint input/MDI deceleration override / MDI -a_over		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / FloatingPoint32
CU250D-2_PN_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3618
	Min	Max	Factory setting
	-	-	2693[0]

Description: Sets the signal source for the deceleration override in the operating mode "direct setpoint input/MDI".
Dependency: Refer to: p2649, p2650, p2693
Notice: If, when calculating the traversing profile, it is identified that the target position with the programmed deceleration override cannot be reached without reversing the direction, then when accepting the dynamic values, the larger deceleration override is accepted and becomes effective.
The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: Depending on p2649, the deceleration override is either transferred continuously or edge-triggered.
The signal value 4000 hex (16384 dec) corresponds to 100 %.

p2646		CI: EPOS velocity override / v_over		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / FloatingPoint32	
CU250D-2_PN_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: 3630	
	Min	Max	Factory setting	
	-	-	1	
Description:	Sets the signal source for the velocity override. This velocity override is effective in the following operating modes "direct setpoint input/MDI", "traversing blocks", "jogging" and "search for reference" (when approaching the reference cam).			
Dependency:	Refer to: p2571, p2585, p2586, p2605, p2618, p2643, r2681			
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.			
Note:	The effective override (r2681) can differ from the specified override due to limits (e.g. maximum velocity).			

p2647		BI: EPOS direct setpoint input/MDI selection / MDI selection		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary	
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: 3620, 3625, 3640	
	Min	Max	Factory setting	
	-	-	0	
Description:	Sets the signal source for selecting the operating mode "direct setpoint input/MDI".			
Dependency:	Refer to: p2640, p2641, p2642, p2643, p2644, p2645, p2646, p2648, p2649, p2650, p2651, p2652, p2653			
Note:	In this mode, using BI: p2653 it is possible to make a flying changeover between setting-up and positioning. In this mode, even if the axis is not referenced (r2684.11 = 0) relative positioning is possible.			

p2648		BI: EPOS direct setpoint input/MDI positioning type / MDI pos_type		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary	
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: 3620	
	Min	Max	Factory setting	
	-	-	0	
Description:	Sets the signal source for the positioning type in the mode "direct setpoint input/MDI". BI: p2648 = 1 signal Absolute positioning is selected. BI: p2648 = 0 signal Relative positioning is selected.			
Dependency:	Refer to: p2649, p2650, p2654 Refer to: A07461, F07488			
Notice:	Absolute positioning: To traverse, the reference point must be set (r2684.11 = 1). Relative positioning: To traverse, it is not necessary that the reference point is set.			
Note:	Depending on p2649, the positioning type is either transferred continuously or edge-triggered. Binector input p2648 is only evaluated when connector input p2654 = 0. If p2654 is a value other than 0, the positioning type is evaluated by means of the set signal source.			

p2649	BI: EPOS direct setpoint input/MDI transfer type selection / MDI trans_type sel		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3620
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to define how values are transferred in the operating mode "direct setpoint input/MDI". BI: p2649 = 1 signal Values are continually transferred (refer to parameter under dependency). BI: p2649 = 0 signal The values are transferred for BI: p2650 = 0/1 signal.		
Dependency:	Refer to: p2642, p2643, p2644, p2645, p2648, p2650, p2651, p2652		
Caution:	For BI: p2649 = 1 signal, the following applies: Motion starts without any explicit control signal.		
Note:	Parameter p2649 can only be changed when p0922 (p2079) = 999.		
p2650	BI: EPOS direct setpoint input/MDI setpoint acceptance edge / MDI setp_accept		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3620
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to accept the values for edge-triggered selection (BI: p2649 = 0 signal) in the operating mode "direct setpoint input/MDI". BI: p2650 = 0/1 signal and BI: p2649 = 0 signal Values are accepted, edge-triggered (refer to parameter under dependency).		
Dependency:	Refer to: p2640, p2641, p2642, p2643, p2644, p2645, p2648, p2649, p2651, p2652, r2684		
Notice:	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
Note:	The status signal r2684.12 = 0/1 signal is used for acknowledgement. The operating mode "direct setpoint input/MDI" can be influenced via the following signals: - intermediate stop via BI: p2640. - reject traversing task via BI: p2641.		
p2651	BI: EPOS direct setpoint input/MDI direction selection, positive / MDI dir_sel pos		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3620
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for the positive direction selection in the operating mode "direct setpoint input/MDI".		
Dependency:	Refer to: p2576, p2648, p2649, p2650, p2652, p2653, p2654		
Note:	The following applies for "setting-up": - the traversing direction can be entered using this binector input. - if both directions (p2651, p2652) are selected, then the axis remains stationary (zero speed). - if both directions (p2651, p2652) are de-selected, then the axis remains stationary (zero speed). The following applies for "positioning": Using binector inputs p2651 and p2652, when the modulo correction (BI: p2577 = 1 signal) is activated and for absolute positioning (BI: p2648 = 1 signal), the traversing direction is specified as follows: BI: p2651 / BI: p2652 0 signal / 0 signal: Absolute positioning through the shortest distance. 1 signal / 0 signal: Absolute positioning in the positive direction.		

0 signal / 1 signal: Absolute positioning in the negative direction.

1 signal / 1 signal: Absolute positioning through the shortest distance.

p2652	BI: EPOS direct setpoint input/MDI direction selection negative / MDI dir_sel neg		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3620
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for the negative direction selection in the operating mode "direct setpoint input/MDI".		
Dependency:	Refer to: p2576, p2648, p2649, p2650, p2651, p2653, p2654		
Note:	<p>The following applies for "setting-up":</p> <ul style="list-style-type: none"> - the traversing direction can be entered using this binector input. - if both directions (p2651, p2652) are selected, then the axis remains stationary (zero speed). - if both directions (p2651, p2652) are de-selected, then the axis remains stationary (zero speed). <p>The following applies for "positioning":</p> <p>Using binector inputs p2651 and p2652, when the modulo correction (BI: p2577 = 1 signal) is activated and for absolute positioning (BI: p2648 = 1 signal), the traversing direction is specified as follows:</p> <p>BI: p2651 / BI: p2652</p> <p>0 signal / 0 signal: Absolute positioning through the shortest distance.</p> <p>1 signal / 0 signal: Absolute positioning in the positive direction.</p> <p>0 signal / 1 signal: Absolute positioning in the negative direction.</p> <p>1 signal / 1 signal: Absolute positioning through the shortest distance.</p>		
p2653	BI: EPOS direct setpoint input/MDI setting-up selection / MDI setting-up sel		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3620
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for setting-up in the operating mode "direct setpoint input/MDI".		
	BI: p2653 = 1 signal		
	Setting-up selected.		
	BI: p2653 = 0 signal		
	Positioning selected.		
Dependency:	Refer to: p2651, p2652		
Note:	<p>In the operating mode "direct setpoint input/MDI", it is possible to make a flying changeover between setting-up and positioning.</p> <p>For "setup" (BI: p2653 = 1 signal), the following applies:</p> <p>A traversing direction must be selected via binector inputs p2651 and p2652.</p>		
p2654	CI: EPOS direct setpoint input/MDI mode adaptation / MDI mode adapt		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Integer16
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3620
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source to interconnect the MDI mode to the operating mode "direct setpoint input MDI" via PROFIBUS telegram 110.		
	CI: p2654 = 0		
	The binector inputs listed below are evaluated.		
	CI: p2654 > 0		

The following binector inputs are not evaluated:

- BI: p2648 (positioning type)
- BI: p2651 (direction selection, positive)
- BI: p2652 (direction selection, negative)

In this case, the following definitions apply:

Signal via CI: p2654 = xx0x hex -> absolute

Signal via CI: p2654 = xx1x hex -> relative

Signal via CI: p2654 = xx2x hex -> abs_pos (only for modulo correction)

Signal via CI: p2654 = xx3x hex -> abs_neg (only for modulo correction)

Dependency: Refer to: p2648, p2651, p2652

p2655[0...1]	BI: EPOS select tracking mode / Sel tracking mode		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3635
	Min	Max	Factory setting
	-	-	[0] 1 [1] 2526.7

Description: Sets the signal source to select tracking mode.
 BI: p2655[0] or BI: p2655[1] = 1 signal
 Tracking mode after withdrawing the enable signal from EPOS (BI: p2656 = 0 signal).
 BI: p2655[0] and BI: p2655[1] = 0 signal
 No tracking mode after withdrawing the enable signal from EPOS (BI: p2656 = 0 signal).

Dependency: Refer to: p2656

Notice: The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

Note: For the following events, independent of the signal that is present, tracking mode is selected:
 - after booting.
 - after a 0/1 signal at BI: p2658 (EPOS position actual value, valid feedback signal).
 - while a fault is present.

p2656	BI: EPOS enable basic positioner / EPOS enable		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3635
	Min	Max	Factory setting
	-	-	2526.3

Description: Sets the signal source to enable the basic positioner.
 BI: p2656 = 1 signal
 The basic positioner is enabled.
 BI: p2656 = 0 signal
 The basic positioner is not enabled.

Dependency: Refer to: r2526, p2655

p2657	CI: EPOS position actual value/position setting value / Pos act/set value		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Integer32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3610, 3616, 3620, 3635
	Min	Max	Factory setting
	-	-	2521[0]

Description: Sets the signal source for the position actual value/position setting value.

Dependency: Refer to: r2521, p2658

List of parameters

Note: In the tracking mode, the position setpoint is taken from this connector input.

p2658	BI: EPOS pos. actual value valid feedback signal / Pos valid feedback		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3635
	Min	Max	Factory setting
	-	-	2526.0

Description: Sets the signal source for the feedback signal "position actual value is valid".

BI: p2658 = 1 signal

The position actual value received via CI: p2657 is valid.

BI: p2658 = 0 signal

The position actual value received via CI: p2657 is invalid.

Dependency: Refer to: r2526, p2657

Note: While a 0 signal is present, the position setpoint (p2665) is held at the value of 0.

p2659	BI: EPOS referencing active feedback signal / Ref act fdbk		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min	Max	Factory setting
	-	-	2526.1

Description: Sets the signal source for the feedback signal "referencing active".

BI: p2659 = 1 signal

Referencing is active.

BI: p2659 = 0 signal

Referencing is not active.

Dependency: Refer to: r2526

p2660	CI: EPOS measured value referencing / Meas val ref		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Integer32
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612, 3614
	Min	Max	Factory setting
	-	-	2523[0]

Description: Sets the signal source for the measured value for the function "referencing".

Dependency: Refer to: r2523

p2661	BI: EPOS measured value valid feedback signal / MeasVal valid fdbk		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612, 3614, 3615
	Min	Max	Factory setting
	-	-	2526.2

Description: Sets the signal source for the feedback signal "measured value valid".

BI: p2661 = 1 signal

The measured value received via CI: p2660 is valid.

BI: p2661 = 0 signal

The measured value received via CI: p2660 is invalid.

Dependency: Refer to: r2526, p2660

p2662	BI: EPOS adjustment value valid feedback signal / Adj val valid FS		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	2526.9
Description:	Sets the signal source for the feedback signal "adjustment value valid". BI: p2662 = 1 signal The adjustment value received via CI: p2660 is valid. BI: p2662 = 0 signal The adjustment value received via CI: p2660 is not valid.		
Dependency:	Refer to: r2526, p2660		
p2663	BI: EPOS clamping active feedback signal / Clamping active FS		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616
	Min	Max	Factory setting
	-	-	2526.8
Description:	Sets the signal source for the feedback signal "clamping active for travel to fixed stop". BI: p2663 = 1 signal Clamping is active BI: p2663 = 0 signal Clamping is not active.		
Dependency:	Refer to: r2526		
Note:	The feedback signal from "terminals active" is, for the factory setting, dependent on the signal BO: r2526.8 (terminals active when moving to a fixed stop).		
r2665	CO: EPOS position setpoint / s_set		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3635
	Min	Max	Factory setting
	- [LU]	- [LU]	- [LU]
Description:	Displays the actual absolute position setpoint.		
Dependency:	Refer to: p2530		
Note:	As standard, the following BICO interconnection is established: CI: p2530 = r2665		
r2666	CO: EPOS velocity setpoint / v_set		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3635
	Min	Max	Factory setting
	- [1000 LU/min]	- [1000 LU/min]	- [1000 LU/min]
Description:	Displays the actual velocity setpoint.		
Dependency:	Refer to: p2531		
Note:	As standard, the following BICO interconnection is established: CI: p2531 = r2666		

r2667	CO: EPOS backlash compensation value / Backlash value		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3635
	Min - [LU]	Max - [LU]	Factory setting - [LU]
Description:	Displays the actual effective value for backlash compensation.		
Dependency:	Refer to: p2516		
Note:	As standard, the following BICO interconnection is established: CI: p2516 = r2667		

r2669	CO: EPOS actual operating mode / Op mode act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3625, 3630
	Min -	Max -	Factory setting -
Description:	Displays the actual active operating mode. Value = 00 hex -> no operating mode active Value = 01 hex -> jogging active Value = 02 hex -> search for reference active Value = 04 hex -> traversing blocks active Value = 08 hex -> Positioning for direct setpoint input/MDI active Value = 10 hex -> Setting-up for direct setpoint input/MDI active Value = 20 hex -> flying referencing active		
Dependency:	Refer to: p2589, p2590, p2595, p2631, p2647, p2653		

r2670.0...15	CO/BO: EPOS status word active traversing block / ZSW act trav_block				
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32		
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 3615, 3625, 3650		
	Min -	Max -	Factory setting -		
Description:	Displays the status word for the active traversing block. r2670.0: Active traversing block, bit 0 ... r2670.5: Active traversing block, bit 5 r2670.15: MDI active				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Active traversing block bit 0	Active	Not active	-
	01	Active traversing block bit 1	Active	Not active	-
	02	Active traversing block bit 2	Active	Not active	-
	03	Active traversing block bit 3	Active	Not active	-
	15	MDI active	Active	Not active	-
Dependency:	Refer to: p2631, p2647				
Note:	Re bit 00 ... 05: Displays the active traversing block in the traversing blocks operating mode. Re bit 15: For a 1 signal, the operating mode - direct setpoint input/MDI - is active				

r2671	CO: EPOS actual position setpoint / s_set act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3610, 3616, 3620
	Min - [LU]	Max - [LU]	Factory setting - [LU]
Description:	Displays the position setpoint presently being processed.		
Note:	A position of 0 is displayed for non position-related tasks (e.g. ENDLESS_POS, ENDLESS_NEG).		

r2672	CO: EPOS actual velocity setpoint / v_set act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3610, 3612, 3616, 3620
	Min - [1000 LU/min]	Max - [1000 LU/min]	Factory setting - [1000 LU/min]
Description:	Displays the velocity setpoint presently being processed.		

r2673	CO: EPOS actual acceleration override / a_over act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3610, 3612, 3616, 3620
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the acceleration override presently being processed.		
Note:	An override of 100% is effective in the "jogging" and "search for reference" operating modes.		

r2674	CO: EPOS actual deceleration override / -a_over act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3610, 3612, 3616, 3620
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the deceleration override presently being processed.		
Note:	An override of 100% is effective in the "jogging" and "search for reference" operating modes.		

r2675	CO: EPOS actual task / Task act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer16
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616
	Min 0	Max 9	Factory setting -
Description:	Displays the task that is presently being processed.		
Value:	0: Inactive 1: POSITIONING 2: FIXED STOP 3: ENDLESS_POS 4: ENDLESS_NEG 5: WAITING		

List of parameters

6: GOTO
 7: SET_O
 8: RESET_O
 9: JERK

Dependency: Refer to: p2621

r2676	CO: EPOS actual task parameter / Task para act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616
	Min	Max	Factory setting
	-	-	-

Description: Displays the task parameter presently being processed in the "traversing blocks" operating mode.

Dependency: Refer to: p2622

Note:

The following is displayed depending on the task:

FIXED STOP: Clamping torque (0 ... 65536 [0.01 Nm]) or clamping force (0 ... 65536 [N])

WAIT: Delay time [ms]

GOTO: Block number

SET_O: 1, 2, 3 --> direct output 1, 2 or 3 (both) is set

RESET_O: 1, 2, 3 --> direct output 1, 2 or 3 (both) is reset

JERK: 0 --> de-activate, 1 --> activate

r2677	CO: EPOS actual task mode / Task mode act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned16
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616
	Min	Max	Factory setting
	-	-	-

Description: Displays the task mode presently being processed.

Dependency: Refer to: p2623

r2678	CO: EPOS external block change actual position / Ext BlckChg s_act		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3615, 3616, 3620
	Min	Max	Factory setting
	- [LU]	- [LU]	- [LU]

Description: Displays the actual position for the following events:

- external block change via measuring probe (p2632 = 0, BI: p2661 = 0/1 signal).

- external block change via BI: p2633 (p2632 = 1, BI: p2633 = 0/1 signal).

- activate traversing task (BI: p2631 = 0/1 signal).

Dependency: Refer to: p2631, p2632, p2633, p2661

r2680	CO: EPOS clearance reference cam and zero mark / Clearance cam/ZM		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3612
	Min	Max	Factory setting
	- [LU]	- [LU]	- [LU]

Description: Displays the clearance determined between the reference cam and zero mark in the search for reference.

r2681	CO: EPOS velocity override effective / v_over effective		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3630
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the actual effective velocity override.		
Dependency:	Refer to: p2571, p2646		
Note:	The effective override can differ from the specified override due to limits (e.g. p2571, maximum velocity).		

r2682	CO: EPOS residual distance to go / Residual distance		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3635
	Min - [LU]	Max - [LU]	Factory setting - [LU]
Description:	Displays the current residual distance. The remaining distance is the distance to still to be moved through up to the end of the actual positioning task.		
Dependency:	Refer to: r2665, r2671, r2678		

r2683.0...14	CO/BO: EPOS status word 1 / POS_ZSW1				
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned16		
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 3645		
	Min -	Max -	Factory setting -		
Description:	Displays status word 1 for the basic positioner (EPOS).				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Tracking mode active	Yes	No	3635, 4020
	01	Velocity limiting active	Yes	No	3630
	02	Setpoint available	Yes	No	3635
	03	Set position reached	Yes	No	3635
	04	Axis moves forward	Yes	No	3635
	05	Axis moves backward	Yes	No	3635
	06	Software limit switch minus reached	Yes	No	3635
	07	Software limit switch plus reached	Yes	No	3635
	08	Position actual value <= cam switching position 1	Yes	No	4025
	09	Position actual value <= cam switching position 2	Yes	No	4025
	10	Direct output 1 via traversing block	Yes	No	3616
	11	Direct output 2 via traversing block	Yes	No	3616
	12	Fixed stop reached	Yes	No	3616, 3617
	13	Fixed stop clamping torque reached	Yes	No	3616, 3617
	14	Travel to fixed stop active	Yes	No	3616, 3617
Dependency:	Refer to: r2684				
Note:	Re bit 02, 04, 05, 06, 07: This signals designate the state after jerk limiting. Re bit 08, 09: These signals are generated in the "closed-loop position control" function module.				

r2684.0...15 CO/BO: EPOS status word 2 / POS_ZSW2

CU250D-2_DP_F **Access level:** 1 **Calculated:** - **Data type:** Unsigned16
 CU250D-2_PN_F **Can be changed:** - **Scaling:** - **Dyn. index:** -
Units group: - **Unit selection:** - **Func. diagram:** 3646

Min **Max** **Factory setting**
 - - -

Description: Displays status word 2 for the basic positioner (EPOS).

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Search for reference active	Active	Not active	3612
	01	Flying referencing active	Active	Not active	3614
	02	Referencing active	Active	Not active	-
	03	Printing mark outside outer window	Yes	No	3614
	04	Axis accelerating	Yes	No	3635
	05	Axis decelerating	Yes	No	3635
	06	Jerk limiting active	Yes	No	3635
	07	Activate correction	Yes	No	3635
	08	Following error in tolerance	Yes	No	4025
	09	Modulo correction active	Yes	No	-
	10	Target position reached	Yes	No	4020
	11	Reference point set	Yes	No	3612, 3614, 3630
	12	Acknowledgement traversing block activated	Yes	No	3616, 3620
	13	STOP cam minus active	Yes	No	3630
	14	STOP cam plus active	Yes	No	3630
	15	Traversing command active	Yes	No	3635

Note: Re bit 02:
 The "referencing active" signal is an OR logic operation of "search for reference active" and "flying referencing active".
 Re bit 00 ... 07 and 11 ... 14:
 These signals are generated in the function module "basic positioner".
 Re bit 08:
 The signal is generated in the "closed-loop position control" function module.

r2685 CO: EPOS corrective value / Corrective value

CU250D-2_DP_F **Access level:** 1 **Calculated:** - **Data type:** Integer32
 CU250D-2_PN_F **Can be changed:** - **Scaling:** - **Dyn. index:** -
Units group: - **Unit selection:** - **Func. diagram:** 3635

Min **Max** **Factory setting**
 - [LU] - [LU] - [LU]

Description: Displays the corrective value for the position actual value.

Dependency: Refer to: r2684

Note: As standard, the following BICO interconnection is established: CI: p2513 = r2685
 Using this value, e.g. modulo corrections are carried out.

r2686[0...1]	CO: EPOS torque limiting effective / M_limit eff		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616, 3617
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the effective torque limiting. r2686[0]: Displays the effective upper torque limiting when traversing to fixed stop (referred to CI: p1522, CI: p1523). r2686[1]: Displays the effective lower torque limiting when traversing to fixed stop (referred to CI: p1522, CI: p1523).		
Index:	[0] = Upper [1] = Lower		
Dependency:	Refer to: p1520, p1521, p1522, p1523, r2676		
Note:	As standard, the following BICO interconnections are established: CI: p1528 = r2686[0] CI: p1529 = r2686[1]		

r2687	CO: EPOS torque setpoint / M_set		
CU250D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3616, 3617
	Min - [Nm]	Max - [Nm]	Factory setting - [Nm]
Description:	Displays the effective torque setpoint when reaching the fixed stop (referred to CI: p1522, CI: p1523).		
Dependency:	Refer to: p1520, p1521, p1522, p1523, r2676		

p2690	CO: EPOS position fixed setpoint / Pos fixed value		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Integer32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3618
	Min -2147482648 [LU]	Max 2147482647 [LU]	Factory setting 0 [LU]
Description:	Sets a fixed setpoint for the position.		
Dependency:	Refer to: p2642, p2648		
Note:	As standard, the following BICO interconnection is established: CI: p2642 = r2690		

p2691	CO: EPOS velocity fixed setpoint / v fixed value		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: Unsigned32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3618
	Min 1 [1000 LU/min]	Max 40000000 [1000 LU/min]	Factory setting 600 [1000 LU/min]
Description:	Sets a fixed setpoint for the velocity.		
Dependency:	Refer to: p2643		
Note:	As standard, the following BICO interconnection is established: CI: p2643 = r2691		

p2692	CO: EPOS acceleration override, fixed setpoint / a_over fixed val		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3618
	Min 0.100 [%]	Max 100.000 [%]	Factory setting 100.000 [%]
Description:	Sets a fixed setpoint for the acceleration override.		
Dependency:	Refer to: p2572, p2644		
Note:	As standard, the following BICO interconnection is established: CI: p2644 = r2692 The percentage value refers to the maximum acceleration (p2572).		
p2693	CO: EPOS deceleration override, fixed setpoint / -a_over fixed val		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: FloatingPoint32
CU250D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 3618
	Min 0.100 [%]	Max 100.000 [%]	Factory setting 100.000 [%]
Description:	Sets a fixed setpoint for the deceleration override.		
Dependency:	Refer to: p2573, p2645		
Note:	As standard, the following BICO interconnection is established: CI: p2645 = r2693 The percentage value refers to the maximum deceleration (p2573).		
p2730[0...3]	BI: LR pos. actual value preprocessing activate neg. corr. (edge) / ActV_prep neg corr		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4010, 4015
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the function "activate position actual value preprocessing, negative corrective value (edge)". 0/1 signal: The correction value available via CI: p2513 is negated and activated.		
Index:	[0] = CI-loop pos ctrl [1] = Encoder 1 [2] = Encoder 2 [3] = Reserved		
Dependency:	Refer to: p2502, p2513, r2684		
p2731	BI: LR reduce I component / Reduce I comp		
CU250D-2_DP_F	Access level: 1	Calculated: -	Data type: U32 / Binary
CU250D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 4015
	Min -	Max -	Factory setting 1407.16
Description:	Sets the signal source for reducing the I component to zero in the position controller. BI: p2731 = 1 signal: The integrator input is set to zero and the integrator content is decreased to zero according to PT1. The PT1 time constant corresponds to the integral time (p2539). BI: p2731 = 0 signal: The I component acts according to the set integral time (p2539).		
Dependency:	Refer to: p2539, r2559		

p2900[0...n]	CO: Fixed value 1 [%] / Fixed value 1 [%]		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1021
	Min -10000.00 [%]	Max 10000.00 [%]	Factory setting 0.00 [%]
Description:	Sets a fixed percentage.		
Dependency:	Refer to: p2901, p2930		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
Note:	The value can be used to interconnect a scaling function (e.g. scaling of the main setpoint)		
p2901[0...n]	CO: Fixed value 2 [%] / Fixed value 2 [%]		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: PERCENT	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1021
	Min -10000.00 [%]	Max 10000.00 [%]	Factory setting 0.00 [%]
Description:	Sets a fixed percentage.		
Dependency:	Refer to: p2900, p2930		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
Note:	The value can be used to interconnect a scaling function (e.g. scaling of the supplementary setpoint)		
r2902[0...14]	CO: Fixed values [%] / Fixed values [%]		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: PERCENT	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 1021
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Signal sources for frequently used percentage values.		
Index:	[0] = Fixed value +0 % [1] = Fixed value +5 % [2] = Fixed value +10 % [3] = Fixed value +20 % [4] = Fixed value +50 % [5] = Fixed value +100 % [6] = Fixed value +150 % [7] = Fixed value +200 % [8] = Fixed value -5 % [9] = Fixed value -10 % [10] = Fixed value -20 % [11] = Fixed value -50 % [12] = Fixed value -100 % [13] = Fixed value -150 % [14] = Fixed value -200 %		
Dependency:	Refer to: p2900, p2901, p2930		
Note:	The signal sources can, for example, be used to interconnect scalings.		

p2930[0...n]	CO: Fixed value M [Nm] / Fixed value M [Nm]		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: p2003	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 1021
	Min -100000.00 [Nm]	Max 100000.00 [Nm]	Factory setting 0.00 [Nm]
Description:	Sets a fixed value for torque.		
Dependency:	Refer to: p2900, p2901		
Notice:	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
Note:	The value can, for example, be used to interconnect a supplementary torque.		
p3110	External fault 3 power-up delay / Ext fault 3 t_on		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2546
	Min 0 [ms]	Max 1000 [ms]	Factory setting 0 [ms]
Description:	Sets the delay time for external fault 3.		
Dependency:	Refer to: p2108, p3111, p3112 Refer to: F07862		
p3111[0...n]	BI: External fault 3 enable / Ext fault 3 enab		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting 1
Description:	Sets the signal source for the enable signal of external fault 3. External fault 3 is initiated by the following AND logic operation: - BI: p2108 negated - BI: p3111 - BI: p3112 negated		
Dependency:	Refer to: p2108, p3110, p3112 Refer to: F07862		
p3112[0...n]	BI: External fault 3 enable negated / Ext flt 3 enab neg		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the negated enable signal of external fault 3. External fault 3 is initiated by the following AND logic operation: - BI: p2108 negated - BI: p3111 - BI: p3112 negated		
Dependency:	Refer to: p2108, p3110, p3111 Refer to: F07862		

r3113.0...15	CO/BO: NAMUR message bit bar / NAMUR bit bar				
	Access level: 3	Calculated: -	Data type: Unsigned16		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the status of NAMUR signal bit bar. The faults or alarms are assigned to the appropriate signaling/message classes and influence a specific message bit.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Fault converter information electronics/SW_error	Yes	No	-
	01	Network fault	Yes	No	-
	02	DC link overvoltage	Yes	No	-
	03	Fault drive converter power electronics	Yes	No	-
	04	Drive converter overtemperature	Yes	No	-
	05	Ground fault	Yes	No	-
	06	Motor overload	Yes	No	-
	07	Bus error	Yes	No	-
	08	External safety-relevant shutdown	Yes	No	-
	10	Error communication internal	Yes	No	-
	11	Fault infeed	Yes	No	-
	15	Other faults	Yes	No	-
p3117	Change safety message type / Ch. SI mess type				
	Access level: 3	Calculated: -	Data type: Unsigned32		
	Can be changed: C(1)	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	0	1	0		
Description:	Sets the re-parameterization of all safety messages for faults and alarms. The relevant message type during changeover is selected by the firmware. 0: Safety messages are not re-parameterized 1: Safety messages are re-parameterized				
Note:	A change only becomes effective after a POWER ON.				
r3131	CO: Actual flt value / Actual flt value				
	Access level: 3	Calculated: -	Data type: Integer32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 8060		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the fault value of the oldest active fault.				
Dependency:	Refer to: r2131, r3132				

r3132	CO: Actual component number / Act comp_no.		
	Access level: 3	Calculated: -	Data type: Integer32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 8060
	Min	Max	Factory setting
	-	-	-
Description:	Displays the component number of the oldest fault that is still active.		
Dependency:	Refer to: r2131, r3131		
p3230[0...n]	CI: Load monitoring speed actual value / Load monit n_act		
	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
	Can be changed: T	Scaling: p2000	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 8013
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for the speed actual value of the load monitoring.		
Dependency:	Refer to: r2169, p2181, p2192, p2193, p3231 Refer to: A07920, A07921, A07922, F07923, F07924, F07925		
Note:	The parameter is only effective for p2193 = 2.		
p3231[0...n]	Load monitoring speed deviation / Load monit n_dev		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: 3_1	Unit selection: p0505	Func. diagram: 8013
	Min	Max	Factory setting
	0.00 [rpm]	210000.00 [rpm]	150.00 [rpm]
Description:	Sets the permissible speed deviation during load monitoring (for p2193 = 2).		
Dependency:	Refer to: r2169, p2181, p2193, p3230 Refer to: A07920, A07921, A07922, F07923, F07924, F07925		
p3232[0...n]	BI: Load monitoring failure detection / Load_moni fail_det		
	Access level: 3	Calculated: -	Data type: U32 / Binary
	Can be changed: U, T	Scaling: -	Dyn. index: CDS, p0170
	Units group: -	Unit selection: -	Func. diagram: 8013
	Min	Max	Factory setting
	-	-	1
Description:	Sets the signal source for detecting a failure.		
Dependency:	Refer to: p2192, p2193 Refer to: F07936		
Note:	Monitoring is triggered with a 0 signal, as soon as the time in p2192 has expired.		
p3233[0...n]	Torque actual value filter time constant / M_act_filt T		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: 8013
	Min	Max	Factory setting
	0 [ms]	1000000 [ms]	100 [ms]
Description:	Sets the time constant for the PT1 element to smooth the torque actual value. The smoothed torque actual value is compared with the threshold values and is only used for messages and signals.		

p3235	Phase failure signal motor monitoring time / Ph_fail t_monit		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0 [ms]	Max 2000 [ms]	Factory setting 320 [ms]
Description:	Sets the monitoring time for phase failure detection of the motor.		
Notice:	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.		
Note:	For p3235 = 0 the function is deactivated. The monitoring is automatically de-activated during the flying restart operation for a motor that is still rotating. 3-phase phase failures cannot be detected and are indicated by other messages (e.g. F07902).		
p3320[0...n]	Fluid flow machine power point 1 / Fluid_mach P1		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00	Max 100.00	Factory setting 25.00
Description:	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the power (P) of point 1 as a [%]. The characteristic comprises the following value pairs: Power (P) / speed (n) p3320 / p3321 --> point 1 (P1 / n1) p3322 / p3323 --> point 2 (P2 / n2) p3324 / p3325 --> point 3 (P3 / n3) p3326 / p3327 --> point 4 (P4 / n4) p3328 / p3329 --> point 5 (P5 / n5)		
Dependency:	Refer to: r0041, p3321, p3322, p3323, p3324, p3325, p3326, p3327, p3328, p3329		
Note:	The reference value for power and speed is the rated power/rated speed. The energy saved is displayed in r0041.		
p3321[0...n]	Fluid flow machine speed point 1 / Fluid_mach n1		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00	Max 100.00	Factory setting 0.00
Description:	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the speed (n) of point 1 as a [%]. The characteristic comprises the following value pairs: Power (P) / speed (n) p3320 / p3321 --> point 1 (P1 / n1) p3322 / p3323 --> point 2 (P2 / n2) p3324 / p3325 --> point 3 (P3 / n3) p3326 / p3327 --> point 4 (P4 / n4) p3328 / p3329 --> point 5 (P5 / n5)		
Dependency:	Refer to: r0041, p3320, p3322, p3323, p3324, p3325, p3326, p3327, p3328, p3329		

Note: The reference value for power and speed is the rated power/rated speed.
The energy saved is displayed in r0041.

p3322[0...n]	Fluid flow machine power point 2 / Fluid_mach P2		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00	Max 100.00	Factory setting 50.00
Description:	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the power (P) of point 2 as a [%].		
Dependency:	Refer to: r0041, p3320, p3321, p3323, p3324, p3325, p3326, p3327, p3328, p3329		
Note:	The reference value for power and speed is the rated power/rated speed. The energy saved is displayed in r0041.		

p3323[0...n]	Fluid flow machine speed point 2 / Fluid_mach n2		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00	Max 100.00	Factory setting 25.00
Description:	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the speed (n) of point 2 as a [%].		
Dependency:	Refer to: r0041, p3320, p3321, p3322, p3324, p3325, p3326, p3327, p3328, p3329		
Note:	The reference value for power and speed is the rated power/rated speed. The energy saved is displayed in r0041.		

p3324[0...n]	Fluid flow machine power point 3 / Fluid_mach P3		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00	Max 100.00	Factory setting 77.00
Description:	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the power (P) of point 3 as a [%].		
Dependency:	Refer to: r0041, p3320, p3321, p3322, p3323, p3325, p3326, p3327, p3328, p3329		
Note:	The reference value for power and speed is the rated power/rated speed. The energy saved is displayed in r0041.		

p3325[0...n]	Fluid flow machine speed point 3 / Fluid_mach n3		
	Access level: 2	Calculated: -	Data type: FloatingPoint32
	Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00	Max 100.00	Factory setting 50.00
Description:	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the speed (n) of point 3 as a [%].		
Dependency:	Refer to: r0041, p3320, p3321, p3322, p3323, p3324, p3326, p3327, p3328, p3329		

Note: The reference value for power and speed is the rated power/rated speed.
The energy saved is displayed in r0041.

p3326[0...n] Fluid flow machine power point 4 / Fluid_mach P4

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: -
Min 0.00	Max 100.00	Factory setting 92.00

Description: For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required.

This parameter specifies the power (P) of point 4 as a [%].

Dependency: Refer to: r0041, p3320, p3321, p3322, p3323, p3324, p3325, p3327, p3328, p3329

Note: The reference value for power and speed is the rated power/rated speed.
The energy saved is displayed in r0041.

p3327[0...n] Fluid flow machine speed point 4 / Fluid_mach n4

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: -
Min 0.00	Max 100.00	Factory setting 75.00

Description: For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required.

This parameter specifies the speed (n) of point 4 as a [%].

Dependency: Refer to: r0041, p3320, p3321, p3322, p3323, p3324, p3325, p3326, p3328, p3329

Note: The reference value for power and speed is the rated power/rated speed.
The energy saved is displayed in r0041.

p3328[0...n] Fluid flow machine power point 5 / Fluid_mach P5

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: -
Min 0.00	Max 100.00	Factory setting 100.00

Description: For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required.

This parameter specifies the power (P) of point 5 as a [%].

Dependency: Refer to: r0041, p3320, p3321, p3322, p3323, p3324, p3325, p3326, p3327, p3329

Note: The reference value for power and speed is the rated power/rated speed.
The energy saved is displayed in r0041.

p3329[0...n] Fluid flow machine speed point 5 / Fluid_mach n5

Access level: 2	Calculated: -	Data type: FloatingPoint32
Can be changed: U, T	Scaling: -	Dyn. index: DDS, p0180
Units group: -	Unit selection: -	Func. diagram: -
Min 0.00	Max 100.00	Factory setting 100.00

Description: For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required.

This parameter specifies the speed (n) of point 5 as a [%].

Dependency: Refer to: r0041, p3320, p3321, p3322, p3323, p3324, p3325, p3326, p3327, p3328

Note: The reference value for power and speed is the rated power/rated speed.
The energy saved is displayed in r0041.

p3870	Long stator configuration / Long stator config				
	Access level: 3	Calculated: -	Data type: Unsigned16		
	Can be changed: U, T	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	-	-	0000 bin		
Description:	Sets the configuration when operating a long stator motor.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Activate long stator help functions	Active	Inactive	-
	01	Suppress Gx_ZSW.14	Active	Inactive	-
Notice:	The following restrictions apply to this function:				
	- it is not permissible to change over the drive data set.				
	- the encoder/drive may not be parked using a PROFIBUS telegram.				
	- a maximum of 4 drives may be connected to the Control Unit.				
	- it is not permissible to commutate with the zero mark (p0404).				
Note:	Re bit 00: All of the help functions for long stator motors can be enabled/disabled using this bit.				
	Re bit 01: When the bit is set, bit 14 (parking encoder active) is set to 0 in the encoder status word GX_ZSW independent of whether the encoder is parked or not.				

p3900	Completion of quick commissioning / Compl quick_comm				
	Access level: 1	Calculated: -	Data type: Integer16		
	Can be changed: C(1)	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	0	3	0		
Description:	Exits quick commissioning (p0010 = 1) with automatic calculation of all parameters of all existing drive data sets that depend on the entries made during quick commissioning.				
	p3900 = 1 initially includes a parameter reset (factory setting, the same as p0970 = 1) for all parameters of the drive object; however, without overwriting the entries made during the quick commissioning.				
	The interconnections of PROFIBUS PZD telegram selection (p0922) and the interconnections via p15 and p1500 are re-established and all of the dependent motor, open-loop and control-loop control parameters are calculated (corresponding to p0340 = 1).				
	p3900 = 2 includes the restoration of the interconnections of PROFIBUS PZD telegram selection (p0922) and the interconnections via p15 and p1500 and the calculations corresponding to p0340 = 1.				
	p3900 = 3 only includes the calculations associated with the motor, open-loop and closed-loop control parameters corresponding to p0340 = 1.				
Value:	0: No quick parameterization				
	1: Quick parameterization after parameter reset				
	2: Quick parameterization (only) for BICO and motor parameters				
	3: Quick parameterization for motor parameters (only)				
Notice:	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.				
Note:	When the calculations have been completed, p3900 and p0010 are automatically reset to a value of zero.				
	When calculating motor, open-loop and closed-loop control parameters (such as for p0340 = 1) parameters associated with a selected Siemens catalog motor are not overwritten.				
	If a catalog motor has not been selected (p0300), then the following parameters are reset with p3900 > 0 in order to restore the situation that applied when commissioning the drive for the first time:				
	induction motor: p0320, p0352, p0362 ... p0369, p0604, p0605, p0626 ... p0628				
	synchronous motor: p0326, p0327, p0352, p0604, p0605				

r3925[0...n]		Identification final display / Ident final_disp		
Access level: 3		Calculated: p0340 = 1	Data type: Unsigned32	
Can be changed: -		Scaling: -	Dyn. index: DDS, p0180	
Units group: -		Unit selection: -	Func. diagram: -	
Min		Max	Factory setting	
-		-	-	
Description:	Displays the commissioning steps that have been carried out.			
Bit field:	Bit	Signal name	1 signal	0 signal
	00	Motor/control parameters calculated (p0340 = 1, p3900 > 0)	Yes	No
	02	Motor data identification carried out at standstill (p1910 = 1)	Yes	No
	03	Rotating measurement carried out (p1960 = 1, 2)	Yes	No
	15	Motor equivalent circuit diagram parameters changed	Changed	Not changed
Note:	The individual bits are only set if the appropriate action has been initiated and successfully completed. When motor rating plate parameters are changed, the final display is reset. When setting the individual bits, all of the most significant bits are reset.			

r3926[0...n]		Voltage generation alternating base voltage amplitude / U_gen altern base		
Access level: 4		Calculated: -	Data type: FloatingPoint32	
Can be changed: -		Scaling: -	Dyn. index: MDS	
Units group: -		Unit selection: -	Func. diagram: -	
Min		Max	Factory setting	
- [V]		- [V]	- [V]	
Description:	Displays the base voltage for the alternating voltage in the context of motor data identification.			
	0: No alternating voltages. The function is de-activated.			
	<0: Automatic determination of the base voltage and wobulation / self-setting based on the converter and the connected motor.			
	Otherwise: Base voltage for alternating current generation in volts (wobulation active).			

r3927[0...n]		Motor data identification control word / MotID STW		
Access level: 3		Calculated: p0340 = 1	Data type: Unsigned32	
Can be changed: -		Scaling: -	Dyn. index: DDS, p0180	
Units group: -		Unit selection: -	Func. diagram: -	
Min		Max	Factory setting	
-		-	-	
Description:	Successfully completed component of the last motor data identification carried out.			
Bit field:	Bit	Signal name	1 signal	0 signal
	00	Stator inductance estimate no measurement	Yes	No
	02	Rotor time constant estimate no measurement	Yes	No
	03	Leakage inductance estimate no measurement	Yes	No
	05	Determine Tr and Lsig evaluation in the time range	Yes	No
	06	Activate vibration damping	Yes	No
	07	De-activate vibration detection	Yes	No
	11	De-activate pulse measurement Lq Ld	Yes	No

List of parameters

12	De-activate rotor resistance Rr measurement	Yes	No	-
14	De-activate valve interlocking time measurement	Yes	No	-
15	Determine only stator resistance, valve voltage fault, dead time	Yes	No	-
16	Short motor identification (lower quality)	Yes	No	-
17	Measurement without control parameter calculation	Yes	No	-

Dependency: Refer to: r3925

Note: The parameter is a copy of p1909.

r3928[0...n]	Rotating measurement configuration / Rot meas config		
Access level: 3	Calculated: p0340 = 1	Data type: Unsigned16	
Can be changed: -	Scaling: -	Dyn. index: DDS, p0180	
Units group: -	Unit selection: -	Func. diagram: -	
Min	Max	Factory setting	
-	-	-	

Description: Successfully completed component of the last rotating measurement carried out.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	01	Saturation characteristic identification	Yes	No	-
	02	Moment of inertia identification	Yes	No	-
	03	Re-calculates the speed controller parameters	Yes	No	-
	04	Speed controller optimization (vibration test)	Yes	No	-
	05	q leakage inductance ident. (for current controller adaptation)	Yes	No	-
	11	Do not change the controller parameters during the measurement	Yes	No	-
	12	Measurement shortened	Yes	No	-
	13	After measurement: direct transition into operation	Yes	No	-

Dependency: Refer to: r3925

Note: The parameter is a copy of p1959.

r3929[0...n]	Motor data identification modulated voltage generation / MotID U_gen mod		
Access level: 4	Calculated: p0340 = 1	Data type: Unsigned32	
Can be changed: -	Scaling: -	Dyn. index: DDS, p0180	
Units group: -	Unit selection: -	Func. diagram: -	
Min	Max	Factory setting	
-	-	-	

Description: Configuration of voltage generation for the various MotID sections in the case of the most recent successful MotID.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Wobble U_generate to determine dead-time correction	Yes	No	-
	01	Wobble U_generate to determine stator resistance	Yes	No	-
	02	Wobble U_generation to determine rotor time constant	Yes	No	-
	03	Wobble U_generation to determine leakage inductance	Yes	No	-
	04	Wobble U_generation to determine dynamic leakage inductance	Yes	No	-
	05	Wobble U_generation to determine magnetizing inductance	Yes	No	-
	08	Alternating U_generate to determine dead-time correction	Yes	No	-

09	Alternating U_generate to determine stator resistance	Yes	No	-
10	Alternating U_generate to determine rotor time constant	Yes	No	-
11	Alternating U_generate to determine leakage inductance	Yes	No	-
12	Alternating U_generate to determine dyn. leakage inductance	Yes	No	-
13	Alternating U_generate to determine magnetizing inductance	Yes	No	-

r3930[0...4] Power unit EEPROM characteristics / PU characteristics

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Displays the characteristics (A5E number and versions) of the power unit.
 [0]: A5E number xxxx (A5Exxxxxyyyy)
 [1]: A5E number yyyy (A5Exxxxxyyyy)
 [2]: File version (logistic)
 [3]: File version (fixed data)
 [4]: File version (calib data)

p3950 Service parameter / Serv. par.

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: C, U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: For service personnel only.

r3960[0...1] Control Unit temperature measured / CU temp measured

Access level: 3	Calculated: -	Data type: FloatingPoint32
Can be changed: -	Scaling: p2006	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
- [°C]	- [°C]	- [°C]

Description: Displays the measured Control Unit temperature.
 An appropriate message is output when 87 °C is exceeded.

Index: [0] = Actual measured value
 [1] = Maximum measured value

Dependency: Refer to: A01009


Note: The value of -200 indicates that there is no measuring signal.

Re r3960[0]:

Displays the currently measured Control Unit temperature.

Re r3960[1]:

Displays the highest measured Control Unit temperature. This value is saved on the module in a non-volatile fashion.

r3974	Drive unit status word / Drv_unit ZSW				
	Access level: 1	Calculated: -	Data type: Unsigned32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the status word for the drive unit.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Software reset active	Yes	No	-
	01	Writing of parameters disabled as parameter save in progress	Yes	No	-
	02	Writing of parameters disabled as macro is running	Yes	No	-
r3978	BICO CounterDevice / BICO CounterDevice				
	Access level: 4	Calculated: -	Data type: Unsigned32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the counter reading for modified BICO interconnections on this device. The counter is incremented by one for each modified BICO interconnection.				
p3981	Faults acknowledge drive object / Faults ackn DO				
	Access level: 3	Calculated: -	Data type: Unsigned8		
	Can be changed: U, T	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 8060		
	Min	Max	Factory setting		
	0	1	0		
Description:	Setting to acknowledge all active faults of a drive object.				
Notice:	Safety messages cannot be acknowledged using this parameter.				
Note:	Parameter should be set from 0 to 1 to acknowledge. After acknowledgement, the parameter is automatically reset to 0.				
p3985	Master control mode selection / PcCtrl mode select				
	Access level: 3	Calculated: -	Data type: Integer16		
	Can be changed: U, T	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	0	1	0		
Description:	Sets the mode to change over the master control / LOCAL mode.				
Value:	0: Change master control for STW1.0 = 0 1: Change master control in operation				
Danger:	When changing the master control in operation, the drive can manifest undesirable behavior - e.g. it can accelerate up to another setpoint.				
					

r3986	Parameter count / Parameter No.		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the number of parameters for this drive unit. The number comprises the device-specific and the drive-specific parameters.		
Dependency:	Refer to: r0980, r0981, r0989		

r3988[0...1]	Boot state / Boot_state		
	Access level: 4	Calculated: -	Data type: Integer16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	800	-
Description:	Index 0: Displays the boot state. Index 1: Displays the partial boot state		
Value:	0: Not active 1: Fatal fault 10: Fault 20: Reset all parameters 30: Drive object modified 40: Download using commissioning software 50: Parameter download using commissioning software 90: Reset Control Unit 100: Start initialization 101: Only for internal Siemens use 110: Instantiate Control Unit basis 111: Insert drive object 112: Only for internal Siemens use 113: Only for internal Siemens use 114: Only for internal Siemens use 115: Parameter download using commissioning software 117: Only for internal Siemens use 150: Wait until Power Module is determined 160: Evaluate Power Module 170: Instantiate Control Unit reset 180: Only for internal Siemens use 200: First commissioning 210: Create drive packages 250: Wait for fault acknowledge 325: Wait for input of drive type 350: Determine drive type 360: Only for internal Siemens use 370: Wait until p0010 is set to 0 380: Only for internal Siemens use 550: Call conversion functions for parameter 625: Wait for non-cyclic start 650: Start cyclic operation 660: Evaluate drive commissioning status 670: Only for internal Siemens use 680: Only for internal Siemens use 690: Wait for non-cyclic start 700: Save parameters		

725: Wait for cyclic
 740: Check the ability to operate
 745: Start cyclic calculations
 750: Interrupt enable
 800: Initialization finished

Index:
 [0] = System
 [1] = Partial boot

r3996[0...1] Parameter write inhibit status / Par_write inhib st

Access level: 3	Calculated: -	Data type: Unsigned8
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Displays whether writing to parameters is inhibited.
 r3996[0] = 0:
 Parameter write not inhibited.
 0 < r3996[0] < 100:
 Parameter write inhibited. The value shows how the calculations are progressing.

Index:
 [0] = Progress calculations
 [1] = Cause

Note:
 Re index 1:
 Only for internal Siemens troubleshooting.

r4640[0...95] Encoder diagnostics state machine / Enc diag stat_ma

Access level: 4	Calculated: -	Data type: Unsigned32
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Displays the encoder diagnostics for the PROFIdrive interface.

p4652[0...2] XIST1_ERW reset mode / XIST1_ERW res mode

Access level: 3	Calculated: -	Data type: Integer16
Can be changed: C(3)	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 4750
Min	Max	Factory setting
0	3	0

Description: Sets the mode to reset the actual value in XIST_ERW (CO: r4653).

Value:
 0: Inactive
 1: Reset with zero mark
 2: Reset with BICO
 3: Reset with selected zero mark

Index:
 [0] = Encoder 1
 [1] = Encoder 2
 [2] = Encoder 3

Dependency: Refer to: r4653, r4654, p4655

Note:
 If value = 1:
 The value in XIST1_ERW is reset when passing every zero mark.
 If value = 2:
 The value in XIST1_ERW is reset with a 0/1 edge via binector input p4655.
 If value = 3:
 The value in XIST1_ERW is reset after a 0/1 edge via binector input p4655 when passing the next zero mark.

r4653[0...2]	CO: XIST1_ERW actual value / XIST1_ERW actual				
	Access level: 3	Calculated: -	Data type: Unsigned32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 4750		
	Min	Max	Factory setting		
	-	-	-		
Description:	Display and connector output for the actual value XIST1_ERW.				
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3				
Dependency:	Refer to: p4652, r4654, p4655				
r4654.0...16	CO/BO: XIST1_ERW status / XIST1_ERW stat				
	Access level: 3	Calculated: -	Data type: Unsigned32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 4750		
	Min	Max	Factory setting		
	-	-	-		
Description:	Display and binector output to reset XIST1_ERW.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Encoder 1 XIST1_ERW reset	High	Low	-
	08	Encoder 2 XIST1_ERW reset	High	Low	-
	16	Encoder 3 XIST1_ERW reset	High	Low	-
Dependency:	Refer to: p4652, r4653, p4655				
Note:	The reset of XIST1_ERW is initiated via binector input p4655. Binector output r4654 is reset with a 0 signal from binector input p4655.				
p4655[0...2]	BI: XIST1_ERW reset signal source / XIST1_ERW resS_src				
	Access level: 3	Calculated: -	Data type: U32 / Binary		
	Can be changed: T	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 4750		
	Min	Max	Factory setting		
	-	-	0		
Description:	Sets the signal source to reset XIST1_ERW (CO: r4653).				
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3				
Dependency:	Refer to: p4652, r4653, r4654				
Note:	The reset of XIST1_ERW depends on the selected mode (p4652).				
p4680[0...n]	Zero mark monitoring tolerance permissible / ZM_monit tol perm				
	Access level: 3	Calculated: -	Data type: Unsigned32		
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	0	1000	4		
Description:	Sets the permissible tolerance in encoder pulses for the zero mark distance in the context of zero mark monitoring. Causes fault F3x100 to appear less frequently.				
Dependency:	Refer to: p0430 Refer to: F31100				
Note:	The parameter is activated using p0430.21 = 1 (zero mark tolerance).				

p4681[0...n]	Zero mark monitoring tolerance window limit 1 positive / ZM tol lim 1 pos		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 1000	Factory setting 2
Description:	Sets the positive tolerance window in encoder pulses for limit 1 for the zero mark monitoring. If the deviation is less than this limit, then the pulse number is not corrected. If it is higher than this limit, fault F3x131 is triggered. If fault F3x131 is re-parameterized to alarm (A) or no message (N), the encoder pulses which have not been corrected are added to the accumulator (p4688). The accumulator can be de-activated using p0437.7.		
Dependency:	Refer to: p0437, p4688 Refer to: F31131		
Note:	This monitoring is activated by setting p0437.2 = 1 (position actual value correction). The positive limit describes additional pulses due to EMC.		
p4682[0...n]	Zero mark monitoring tolerance window limit 1 negative / ZM tol lim 1 neg		
	Access level: 3	Calculated: -	Data type: Integer32
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min -1001	Max 0	Factory setting -1001
Description:	Sets the negative tolerance window in encoder pulses for limit 1 for the zero mark monitoring. If the deviation is less than this limit, the PPR is not corrected. If it is higher than this limit, fault F3x131 is triggered. If fault F3x131 is re-parameterized to alarm (A) or no message (N), the encoder pulses which have not been corrected are added to the accumulator (p4688). The accumulator can be de-activated using p0437.7.		
Dependency:	Refer to: p0437, p4681, p4688 Refer to: F31131		
Note:	This monitoring is activated by setting p0437.2 = 1 (position actual value correction). For a set value = -1001, the negated value of p4681 is effective. The negative limit describes the pulses lost due to a covered glass panel in the incremental encoder.		
p4683[0...n]	Zero mark monitoring tolerance window alarm threshold positive / ZM tol A_thr pos		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 100000	Factory setting 0
Description:	Sets the positive tolerance window in encoder pulses for limit 2 for the zero mark monitoring. If the zero mark deviation is higher than the tolerance set in p4681 and p4682 and fault F3x131 is re-parameterized to alarm (A) or no message (N), the accumulator p4688 is compared with this parameter and, if applicable, alarm A3x422 is output for 5 seconds.		
Dependency:	Refer to: p0437, p4681, p4682, p4688 Refer to: F31131, A31422		
Note:	Zero mark monitoring is activated by setting p0437.2 = 1 (position actual value correction).		

p4684[0...n]	Zero mark monitoring tolerance window alarm threshold negative / ZM tol A_thr neg		
	Access level: 3	Calculated: -	Data type: Integer32
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min -100001	Max 0	Factory setting -100001
Description:	Sets the negative tolerance window in encoder pulses for limit 2 for the zero mark monitoring. If the zero mark deviation is higher than the tolerance set in p4681 and p4682 and fault F3x131 is re-parameterized to alarm (A) or no message (N), the accumulator p4688 is compared with this parameter and, if applicable, alarm A3x422 is output for 5 seconds.		
Dependency:	Refer to: p0437, p4683, p4688 Refer to: F31131, A31422		
Note:	Zero mark monitoring is activated by setting p0437.2 = 1 (position actual value correction). For a set value = -100001, the negated value of p4683 is effective.		
p4685[0...n]	Speed actual value mean value generation / n_act mean val		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 20	Factory setting 0
Description:	Sets the number of current controller clock cycles for mean value generation of the speed actual value.		
Note:	Value = 0, 1: No mean value generation. Higher values also mean higher dead times for the speed actual value.		
p4686[0...n]	Zero mark minimum length / ZM min length		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: C(4)	Scaling: -	Dyn. index: EDS, p0140
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 10	Factory setting 1
Description:	Sets the minimum length for the zero mark.		
Dependency:	Refer to: p0425, p0437		
Note:	The value for the minimum length of the zero mark must be set less than p0425. The parameter is activated using p0437.1 = 1 (zero mark edge detection).		
p4688[0...2]	CO: Zero mark monitoring differential pulse count / ZM diff_pulse qty		
	Access level: 3	Calculated: -	Data type: Integer32
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min -2147483648	Max 2147483647	Factory setting 0
Description:	Displays the number of differential pulses for the zero mark monitoring that have accumulated. If fault F3x131 is re-parameterized to alarm (A) or no message (N), the encoder pulses which have not been corrected are added to the accumulator (p4688).		
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
Dependency:	Refer to: p4681, p4682, p4683, p4684		
Note:	The display can only be reset to zero.		

r4689[0...2]	CO: Squarewave encoder diagnostics / Sq-wave enc diag		
	Access level: 4	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the encoder status according to PROFIdrive for a squarewave encoder.		
Index:	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
Dependency:	Refer to: A31422		
Note:	After alarm A3x422 is output, this parameter is set for 100 ms.		
r5600	Pe energy saving mode ID / Pe mode ID		
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	255	-
Description:	Displays the PROFIdenergy mode ID of the effective energy saving mode.		
Value:	0: POWER OFF 1: Energy-saving mode 1 255: Ready		
Note:	Pe: PROFIdenergy profiles		
p5602[0...1]	Pe energy-saving mode pause time minimal / Pe mod t_pause min		
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	300000 [ms]	4294967295 [ms]	[0] 300000 [ms] [1] 480000 [ms]
Description:	Sets the minimum possible pause time for the energy-saving mode. The value is the sum of the following times: - Energy-saving mode transition time - Operating state transition time - Energy-saving mode, dwell time minimal		
Index:	[0] = Mode 1 [1] = Reserved		
Note:	It is not permissible that the value is less than the sum of the "energy-saving mode transition time" and the "operating state transition time" (system properties). Pe: PROFIdenergy profiles		
p5606[0...1]	Pe energy-saving mode dwell time maximum / Pe t_dwell max		
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0 [ms]	4294967295 [ms]	4294967295 [ms]
Description:	Sets the maximum dwell time for the energy-saving mode.		
Index:	[0] = Mode 1 [1] = Reserved		

Note: Pe: PROFenergy profiles

p5611 Pe energy-saving properties general / Pe properties gen

CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	0000 bin

Description: Sets the general properties for energy-saving.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Inhibit PROFenergy	Yes	No	-
	01	Drive initiates OFF1	Yes	No	-
	02	Trans into energy-saving mode from PRO- Fdrive state S4 poss	Yes	No	-

Note: Pe: PROFenergy profiles

p5612[0...1] Pe energy-saving properties mode-dependent / Pe properties mod

CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	[0] 0110 bin [1] 0000 bin

Description: Sets the mode-dependent properties for energy-saving.

Index:
[0] = Mode 1
[1] = Reserved

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Reserved	Yes	No	-
	01	Shutdown digital outputs	Yes	No	-
	02	Shutdown encoder supply	Yes	No	-

Note: Pe: PROFenergy profiles

r5613.0...1 CO/BO: Pe energy-saving active/inactive / Pe save act/inact

CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-

Description: Display and binector output for the state display PROFenergy energy saving active or inactive.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Pe active	Yes	No	-
	01	Pe inactive	Yes	No	-

Note: Bit 0 and bit 1 are inverse of one another.
Pe: PROFenergy profiles

p5614 BI: Pe set switch-on inhibit signal source / Pe sw on_inh s_src

CU240D-2_PN	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source to set in the PROFdrive state S1 "switching-on inhibit".

Dependency: Refer to: r5613
Note: Pe: PROFenergy profiles

r7758[0...19] KHP Control Unit serial number / KHP CU ser_no

Access level: 3	Calculated: -	Data type: Unsigned8
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Displays the actual serial number of the Control Unit.
The individual characters of the serial number are displayed in the ASCII code in the indices.
For the commissioning software, the ASCII characters are displayed uncoded.

Dependency: Refer to: p7765, p7766, p7767, p7768
Notice: An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual.
Note: KHP: Know-How Protection

p7759[0...19] KHP Control Unit reference serial number / KHP CU ref ser_no

Access level: 3	Calculated: -	Data type: Unsigned8
Can be changed: T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Sets the reference serial number for the Control Unit.
Using this parameter, if a Control Unit and/or a memory card is replaced at the end customer, the OEM can again adapt the project to the modified hardware.

Dependency: Refer to: p7765, p7766, p7767, p7768
Note: KHP: Know-How Protection
- The OEM may only change this parameter for the use case "Sending encrypted SINAMICS data".
- SINAMICS only evaluates this parameter when powering up from the encrypted "Load into file system..." output or when powering up from the encrypted PS files. The evaluation is only made when know-how protection and memory card copy protection have been activated.

r7760 Write protection/know-how protection status / Wr_prot/KHP stat

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Displays the status for the write protection and know-how protection.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Write protection active	Yes	No	-
	01	Know-how protection active	Yes	No	-
	02	Know-how protection temporarily withdrawn	Yes	No	-
	03	Know-how protection cannot be deactivated	Yes	No	-
	04	Memory card copy protection active	Yes	No	-

Dependency: Refer to: p7761, p7765, p7766, p7767, p7768
Note: KHP: Know-How Protection

Re bit 00:

Write protection can be activated/deactivated via p7761 on the Control Unit.

Re bit 01:

The know-how protection can be activated by entering a password (p7766 ... p7768).

Re bit 02:

If it has already been activated, know-how protection can be temporarily deactivated by entering the valid password in p7766. In this case, bit 1 = 0 and bit 2 = 1 offset.

Re bit 03:

Know-how protection cannot be deactivated, as p7766 is not entered in the OEM exception list (only the factory setting is possible). This bit is only set if know-how protection is active (bit 1 = 1) and p7766 has not been entered in the OEM exception list.

Re bit 04:

When know-how protection has been activated, the contents of the memory card (parameter and DCC data) can be additionally protected against being used with other memory cards. This bit is only set if know-how protection is active and p7765 = 1.

p7761	Write protection / Write protection		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 1	Factory setting 0
Description:	Setting for activating/de-activating the write protection for adjustable parameters.		
Value:	0: Deactivate write protection 1: Activate write protection		
Dependency:	Refer to: r7760		
Notice:	While write protection is active, a download is prevented; however, it is still possible to restore the factory settings.		
Note:	Parameters with the "WRITE_NO_LOCK" attributes are excluded from the write protection. A product-specific list of these parameters is also available in the corresponding List Manual.		

p7762	Write protection multi-master fieldbus system access behavior / Fieldbus acc_behav		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 1	Factory setting 0
Description:	Sets the behavior for write protection when accessing via multi-master fieldbus systems (e.g. CAN, BACnet).		
Value:	0: Write access independent of p7761 1: Write access dependent on p7761		
Dependency:	Refer to: r7760, p7761		

p7763	KHP OEM exception list number of indices for p7764 / KHP OEM qty p7764		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 1	Max 500	Factory setting 1
Description:	Sets the number of parameters for the OEM exception list (p7764[0...n]). p7764[0...n], with n = p7763 - 1		
Dependency:	Refer to: p7764		
Note:	KHP: Know-How Protection Even if know-how protection is set, parameters in this list can be read and written to.		

p7764[0...n]	KHP OEM exception list / KHP OEM excep list		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: p7763
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 65535	Factory setting [0] 7766 [1...499] 0
Description:	OEM exception list (p7764[0...n]) for setting parameters that should be excluded from know-how protection. p7764[0...n], with n = p7763 - 1		
Dependency:	The number of indices depends on p7763. Refer to: p7763		
Note:	KHP: Know-How Protection Even if know-how protection is set, parameters in this list can be read and written to.		
p7765	KHP memory card copy protection / KHP copy protect		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 1	Factory setting 0
Description:	Setting for activating/de-activating copy protection for the memory card. This means that the OEM can define whether the parameters and DCC data encrypted on the memory card should be protected before using on other memory cards.		
Value:	0: Deactivating protection 1: Activating protection		
Dependency:	Refer to: p7766, p7767, p7768		
Note:	KHP: Know-How Protection The memory card copy protection is only effective when the know-how protection has been activated.		
p7766[0...29]	KHP password input / KHP passw input		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting -
Description:	Sets the password for know-how protection. Example of a password: 123aBc = 49 50 51 97 66 99 dec (ASCII characters) [0] = character 1 (e.g. 49 dec) [1] = character 2 (e.g. 50 dec) ... [5] = character 6 (e.g. 99 dec) [29] = 0 dec (completes the entry)		
Dependency:	Refer to: p7767, p7768		
Notice:	An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual. When using the STARTER commissioning software, the password should be entered using the associated dialogs. The following rules apply when entering the password: - Password entry must start with p7766[0]. - No gaps are permissible in the password. - Entering a password is completed when writing to p7766[29] (p7766[29] = 0 for passwords less than 30 characters).		

Note: KHP: Know-How Protection
 When reading, p7766[0...29] = 42 dec (ASCII character = "**") is displayed.
 Parameters with the "KHP_WRITE_NO_LOCK" attribute are not involved in the know-how protection.
 Parameters with the "KHP_ACTIVE_READ" attribute can be read even when know-how protection is activated.
 A product-specific list of these parameters is also available in the corresponding List Manual.

p7767[0...29] KHP password new / KHP passw new

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Sets the new password for know-how protection.
Dependency: Refer to: p7766, p7768
Note: KHP: Know-How Protection
 When reading, p7767[0...29] = 42 dec (ASCII character = "**") is displayed.

p7768[0...29] KHP password confirmation / KHP passw confirm

Access level: 3	Calculated: -	Data type: Unsigned16
Can be changed: U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Confirms the new password for know-how protection.
Dependency: Refer to: p7766, p7767
Note: KHP: Know-How Protection
 When reading, p7768[0...29] = 42 dec (ASCII character = "**") is displayed.

p7769[0...20] KHP memory card reference serial number / KHP mem ref ser_no

Access level: 3	Calculated: -	Data type: Unsigned8
Can be changed: T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Sets the reference serial number for the memory card.
 Using this parameter, if a Control Unit and/or a memory card is replaced at the end customer, the OEM can again adapt the project to the modified hardware.
Dependency: Refer to: p7765, p7766, p7767, p7768
Note: KHP: Know-How Protection
 - The OEM may only change this parameter for the use case "Sending encrypted SINAMICS data".
 - SINAMICS only evaluates this parameter when powering up from the encrypted "Load into file system..." output or when powering up from the encrypted PS files. The evaluation is only made when know-how protection and memory card copy protection have been activated.

p7775 NVRAM data backup/import/delete / NVRAM backup

Access level: 3	Calculated: -	Data type: Integer16
Can be changed: C, U, T	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
0	17	0

Description: Setting to backup/import/delete NVRAM data.
 NVRAM data are non-volatile data in the device (e.g. fault buffer).

For NVRAM data actions, the following data are excluded:

- Crash diagnostics
- CU operating hours counter
- CU temperature
- Safety logbook

Value:

0:	Inactive
1:	NVRAM data backup to memory card
2:	Import NVRAM data from the memory card
3:	Delete NVRAM data in the device
10:	Error when clearing
11:	Error when backing up, memory card not available
12:	Error when backing up, insufficient memory space
13:	Error when backing up
14:	Error when importing, memory card not available
15:	Error when importing, checksum error
16:	Error when importing, no NVRAM data available
17:	Error when importing

Notice: Re value = 2, 3:
These actions are only possible when pulses are inhibited.

Note: After the action has been successfully completed, the parameter is automatically set to zero.
The actions importing and deleting NVRAM data immediately initiate a warm restart.
If the procedure was not successfully completed, then an appropriate fault value is displayed (p7775 >= 10).

r7841[0...15] Power Module serial number / PM serial no.

Access level: 4	Calculated: -	Data type: Unsigned8
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Displays the actual serial number of the Power Module.
The individual characters of the serial number are displayed in the ASCII code in the indices.

Notice: An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual.

r7843[0...20] Memory card serial number / Mem_card ser.no

Access level: 1	Calculated: -	Data type: Unsigned8
Can be changed: -	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: -
Min	Max	Factory setting
-	-	-

Description: Displays the actual serial number of the memory card.
The individual characters of the serial number are displayed in the ASCII code in the indices.

Notice: An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual.

Note: Example: displaying the serial number for a memory card:
r7843[0] = 49 dec --> ASCII characters = "1" --> serial number, character 1
r7843[1] = 49 dec --> ASCII characters = "1" --> serial number, character 2
r7843[2] = 49 dec --> ASCII characters = "1" --> serial number, character 3
r7843[3] = 57 dec --> ASCII characters = "9" --> serial number, character 4
r7843[4] = 50 dec --> ASCII characters = "2" --> serial number, character 5
r7843[5] = 51 dec --> ASCII characters = "3" --> serial number, character 6
r7843[6] = 69 dec --> ASCII characters = "E" --> serial number, character 7

r7843[7] = 0 dec --> ASCII characters = " " --> serial number, character 8
 ...
 r7843[19] = 0 dec --> ASCII characters = " " --> serial number, character 20
 r7843[20] = 0 dec
 Serial number = 111923E

r7901[0...75]	Sampling times / t_sample		
	Access level: 4	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [µs]	Max - [µs]	Factory setting - [µs]
Description:	Displays the sampling times currently present on the drive unit. For r7901[x] = 0, the following applies: The time slice is not active.		

r7903	Hardware sampling times still assignable / HW t_samp free		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting -
Description:	Displays the number of hardware sampling times that can still be assigned. These free sampling times can be used by OA applications such as DCC (Drive Control Chart) or FBLOCKS (free function blocks).		
Note:	OA: Open Architecture		

r8570[0...39]	Macro drive object / Macro DO		
	Access level: 1	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting -
Description:	Displays the macro file saved in the appropriate directory on the memory card/device memory.		
Dependency:	Refer to: p0015		
Note:	For a value = 9999999, the following applies: The read operation is still running.		

r8571[0...39]	Macro Binector Input (BI) / Macro BI		
	Access level: 4	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting -
Description:	Displays the ACX file saved in the appropriate directory in the non-volatile memory.		
Note:	For a value = 9999999, the following applies: The read operation is still running.		

r8572[0...39]	Macro Connector Inputs (CI) for speed setpoints / Macro CI n_set		
	Access level: 4	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the ACX file saved in the appropriate directory in the non-volatile memory.		
Dependency:	Refer to: p1000		
Note:	For a value = 9999999, the following applies: The read operation is still running.		

r8573[0...39]	Macro Connector Inputs (CI) for torque setpoints / Macro CI M_set		
	Access level: 4	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the ACX file saved in the appropriate directory in the non-volatile memory.		
Dependency:	Refer to: p1500		
Note:	For a value = 9999999, the following applies: The read operation is still running.		

r8585	Macro execution actual / Macro executed		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the macro currently being executed on the drive object.		
Dependency:	Refer to: p0015, p1000, p1500, r8570, r8571, r8572, r8573		

r8854	PROFINET state / PN state		
CU240D-2_PN	Access level: 4	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	255	-
Description:	State display for PROFINET.		
Value:	0: No initialization 1: Fatal fault 2: Initialization 3: Send configuration 4: Receive configuration 5: Non-cyclic communication 6: Cyclic communications but no setpoints (stop/no clock cycle) 255: Cyclic communication		

r8858[0...39]	PROFINET read diagnostics channel / PN diag_chan read		
CU240D-2_PN	Access level: 4	Calculated: -	Data type: Unsigned16
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the PROFINET diagnostics data.		
Note:	Only for internal Siemens diagnostics.		

r8859[0...7]	PROFINET identification data / PN ident data		
CU240D-2_PN	Access level: 4	Calculated: -	Data type: Unsigned16
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the PROFINET identification data		
Index:	[0] = Version interface structure [1] = Version interface driver [2] = Company (Siemens = 42) [3] = CB type [4] = Firmware version [5] = Firmware date (year) [6] = Firmware date (day/month) [7] = Firmware patch/hot fix		
Note:	Example: r8859[0] = 100 --> version of the interface structure V1.00 r8859[1] = 111 --> version of the interface driver V1.11 r8859[2] = 42 --> SIEMENS r8859[3] = 0 r8859[4] = 1300 --> first part, firmware version V13.00 (second part, see index 7) r8859[5] = 2011 --> year 2011 r8859[6] = 2306 --> 23rd June r8859[7] = 1700 --> second part, firmware version (complete version: V13.00.17.00)		

r8909	PN device ID / PN device ID		
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the PROFINET Device ID. Every SINAMICS device type has its own PROFINET Device ID and its own PROFINET GSD.		
Note:	List of the SINAMICS Device IDs: 0501 hex: S120/S150 0504 hex: G130/G150 050A hex: DC MASTER 050C hex: MV 050F hex: G120P 0510 hex: G120C 0511 hex: G120 CU240E-2 0512 hex: G120D 0513 hex: G120 CU250S-2 Vector		

0514 hex: G110M
0515 hex: G120 CU250S-2 Servo

p8920[0...239] PN Name of Station / PN Name Stat			
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Sets the station name for the onboard PROFINET interface on the Control Unit. The active station name is displayed in r8930.		
Note:	An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual. The interface configuration (p8920 and following) is activated with p8925 = 1. The parameter is not influenced by setting the factory setting. PN: PROFINET		
p8921[0...3] PN IP address of station / PN IP of stat			
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	255	0
Description:	Sets the IP address for the onboard PROFINET interface on the Control Unit. The active IP address is displayed in r8931.		
Note:	The interface configuration (p8920 and following) is activated with p8925 = 1. The parameter is not influenced by setting the factory setting.		
p8922[0...3] PN Default Gateway of Station / PN Def Gateway			
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	255	0
Description:	Sets the default gateway for the onboard PROFINET interface on the Control Unit. The active default gateway is displayed in r8932.		
Note:	The interface configuration (p8920 and following) is activated with p8925 = 1. The parameter is not influenced by setting the factory setting.		
p8923[0...3] PN Subnet Mask of Station / PN Subnet Mask			
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	255	0
Description:	Sets the subnet mask for the onboard PROFINET interface on the Control Unit. The active subnet mask is displayed in r8933.		
Note:	The interface configuration (p8920 and following) is activated with p8925 = 1. The parameter is not influenced by setting the factory setting.		

p8925 PN interface configuration / PN IF config			
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	3	0
Description:	Setting to activate the interface configuration for the onboard PROFINET interface on the Control Unit. p8925 is automatically set to 0 at the end of the operation.		
Value:	0: No function 1: Activate configuration 2: Activate and save configuration 3: Delete configuration		
Note:	Re p8925 = 1: The interface configuration (p8920 and following) is activated. Re p8925 = 2: The interface configuration (p8920 and following) is activated and saved to non-volatile memory. Re p8925 = 3: Restores all memory locations for the interface configuration to the factory settings. The factory settings for the interface configuration are loaded on activation (p8925 = 1) or at the next POWER ON.		
p8929 PN remote controller number / PN rem ctrl num			
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	1	2	1
Description:	Sets the number of remote controllers expected for PROFINET onboard. The "Shared Device" functionality is activated with a value = 2. The drive is being accessed by two PROFINET controllers simultaneously: - automation controller (SIMOTION or SIMATIC A-CPU). - safety controller (SIMATIC F-CPU).		
Value:	1: Automation or Safety 2: Automation and Safety		
Notice:	The F CPU may only use PROFIsafe telegrams.		
Note:	A change only becomes effective after POWER ON, reset or download.		
r8930[0...239] PN Name of Station active / PN Name Stat act			
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the active station name for the onboard PROFINET interface on the Control Unit.		
r8931[0...3] PN IP Address of Station active / PN IP of Stat act			
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	255	-
Description:	Displays the active IP address for the onboard PROFINET interface on the Control Unit.		

r8932[0...3]	PN Default Gateway of Station active / PN Def Gateway act		
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	255	-
Description:	Displays the active default gateway for the onboard PROFINET interface on the Control Unit.		

r8933[0...3]	PN Subnet Mask of Station active / PN Subnet Mask act		
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	255	-
Description:	Displays the active subnet mask for the onboard PROFINET interface on the Control Unit.		

r8935[0...5]	PN MAC Address of Station / PN MAC of Station		
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0000 hex	00FF hex	-
Description:	Displays the MAC address for the onboard PROFINET interface on the Control Unit.		

r8939	PN DAP ID / PN DAP ID		
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the PROFINET Device Access Point ID (DAP ID) for the onboard PROFINET interface. The combination of device ID (r8909) and DAP ID uniquely identifies a PROFINET access point.		
Note:	List of the SINAMICS DAP IDs:		
	20007 hex: CBE20 V4.5		
	20008 hex: CBE20 V4.6		
	20107 hex: CU310-2 PN V4.5		
	20108 hex: CU310-2 PN V4.6		
	20307 hex: CU320-2 PN V4.5		
	20308 hex: CU320-2 PN V4.6		
	20407 hex: CU230P-2 PN /CU240x-2 PN V4.5		
	20408 hex: CU230P-2 PN /CU240x-2 PN /CU250S-2 PN /G110M PN V4.6		
	20507 hex: CU250D-2 PN V4.5		
	20508 hex: CU250D-2 PN V4.6		

r8960[0...2]	PN subslot controller assignment / PN subslot assign		
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 8	Factory setting -
Description:	Displays the controller assignment of a PROFINET subslot on the actual drive object.		
Index:	[0] = Subslot 2 PROFIsafe [1] = Subslot 3 PZD telegram [2] = Subslot 4 PZD supplementary data		
Dependency:	Refer to: r8961, r8962		
Note:	Example: If the parameter contains the value 2 in index [1], then this means that subslot 3 is assigned to controller 2.		

r8961[0...3]	PN IP Address Remote Controller 1 / IP Addr Rem Ctrl1		
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 255	Factory setting -
Description:	Displays the IP address of the first PROFINET controller connected with the device via PN onboard.		

r8962[0...3]	PN IP Address Remote Controller 2 / IP Addr Rem Ctrl2		
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 255	Factory setting -
Description:	Displays the IP address of the second PROFINET controller connected with the device via PN onboard.		

p8980	Ethernet/IPprofile / Eth/IP profile		
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 1	Factory setting 0
Description:	Sets the profile for Ethernet/IP.		
Value:	0: SINAMICS 1: ODVA AC/DC		
Note:	Changes only become effective after POWER ON. The parameter is not influenced by setting the factory setting. ODVA: Open DeviceNet Vendor Association		

p8981	Ethernet/IP ODVA STOP mode / Eth/IP ODVA STOP		
CU240D-2_PN	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 1	Factory setting 0
Description:	Sets the STOP mode for the Ethernet/IP ODVA profile (p8980 = 1).		

List of parameters

Value: 0: OFF1
1: OFF2

Dependency: Refer to: p8980

Note: Changes only become effective after POWER ON.
The parameter is not influenced by setting the factory setting.

p8982 Ethernet/IP ODVA speed scaling / Eth/IP ODVA n scal

CU240D-2_PN	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	123	133	128

Description: Sets the scaling for the speed for Ethernet/IP ODVA profile (p8980 = 1).

Value: 123: 32
124: 16
125: 8
126: 4
127: 2
128: 1
129: 0.5
130: 0.25
131: 0.125
132: 0.0625
133: 0.03125

Dependency: Refer to: p8980

Note: Changes only become effective after POWER ON.
The parameter is not influenced by setting the factory setting.

p8991 USB memory access / USB mem acc

	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	1	2	1

Description: Selects the storage medium for access via the USB mass storage.

Value: 1: Memory card
2: Flash r/w internal

Note: A change only becomes effective after a POWER ON.
The parameter is not influenced by setting the factory setting.

p8999 USB functionality / USB Fct

	Access level: 4	Calculated: -	Data type: Integer16
	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	1	3	3

Description: Setting the USB functionality.

Value: 1: USS commissioning via the virtual COM port
2: Only memory access
3: USB commissioning and memory access

Note: COMM: Commissioning.
A change only becomes effective after a POWER ON.
The parameter is not influenced by setting the factory setting.

p9301 SI Motion enable safety functions (processor 2) / SI Mtn enable P2					
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32		
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -		
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -		
CU250D-2_PN_F					
	Min	Max	Factory setting		
	-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin		
Description:	Sets the enable signals for the safe motion monitoring.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Enable SI Motion	Enable	Inhibit	-
	16	Enable SSM hysteresis and filtering	Enable	Inhibit	2823
	17	Enable SDI	Enable	Inhibit	2824
	30	Enable F-DI in PROFIsafe telegram 900	Enable	Inhibit	-
Dependency:	Refer to: p9501 Refer to: F01682, F01683				
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.				
Note:	For bit 30 = 1, PROFIsafe telegram 900 must be configured in the F host. A change only becomes effective after a POWER ON. F-DI: Failsafe Digital Input SDI: Safe Direction SLS: Safely-Limited Speed SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)				

p9306 SI Motion function specification (processor 2) / SI Mtn fct spec P2				
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16	
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -	
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -	
CU250D-2_PN_F				
	Min	Max	Factory setting	
	1	3	1	
Description:	Sets the function specification for the safe motion monitoring.			
Value:	1: Safety without encoder and braking ramp(SBR) 3: Safety without encoder with accel_monitoring(SAM) / delay time			
Dependency:	Refer to: C30711			
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.			

p9307 SI Motion function configuration (processor 2) / SI Mtn config P2					
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32		
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -		
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -		
CU250D-2_PN_F					
	Min	Max	Factory setting		
	-	-	0011 bin		
Description:	Sets the function configuration for safe motion monitoring.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Extended message acknowledgement	Yes	No	-
	01	Setpoint velocity limit for STOP F	No	Yes	-
Dependency:	Refer to: C01711				
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.				

Note: Re bit 00:
When the function is activated, a safety-relevant acknowledgement (internal event acknowledge) can be performed by selecting/deselecting STO.
Re bit 01:
When the function is activated, the active setpoint velocity limit (CO: r9733) is set to zero when STOP F is active.

p9309 SI Motion behavior during pulse suppression (processor 2) / SI Mtn behav IL P2

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
-	-	0000 0000 1111 1111 bin

Description: Sets the behavior of safety functions and their feedback during pulse suppression in encoderless operation.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	SSM during pulse suppression and sensorless	Becomes inactive	Remains active	-
	08	SDI during pulse suppression and sensorless	Becomes inactive	Remains active	-

Dependency: Refer to: C01711

Notice: This parameter is overwritten by the copy function of the copy function of the safety functions integrated in the drive.

Re bit 00:

If the OFF1 or the OFF3 ramp-down time is too low, or there is an insufficient clearance between the SSM limit speed, and the shutdown speed, then it is possible that the "speed under limit value" signal does not change to 1, because no speed actual value below the SSM limit was able to be identified before pulse cancellation. In this case, the OFF1 or the OFF3 ramp-down time or the clearance between the SSM limit speed and shutdown speed must be increased.

Note:

SDI: Safe Direction

SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

Re bit 00:

For bit = 1 and with the SSM safety function activated, the following applies:

- During pulse suppression, monitoring is switched off and the feedback signal has a 0 signal level.

For bit = 0 and with the SSM safety function activated, the following applies:

- Monitoring continues during pulse suppression. The feedback signal last displayed before pulse suppression is kept and the system goes into the STO state.

Re bit 08:

For bit = 1 and with the SDI safety function activated, the following applies:

- During pulse suppression, monitoring is switched off and the status signal indicates inactive.

For bit = 0 and with the SDI safety function activated, the following applies:

- Monitoring continues during pulse suppression. The status signal indicates active and the system goes into the STO state.

p9321[0...7] SI Motion gearbox motor/load denominator (processor 2) / SI Mtn gear den P2

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
1	2147000000	1

Description: Sets the denominator for the gearbox between the motor and the load.

Index:

[0] = Gearbox 1

[1] = Gearbox 2

[2] = Gearbox 3

[3] = Gearbox 4

[4] = Gearbox 5

[5] = Gearbox 6
 [6] = Gearbox 7
 [7] = Gearbox 8

Dependency:

Refer to: p9322

Notice:

It is not possible to change over the gearbox stages. Gearbox 1 (index 0) is always active.

p9322[0...7] SI Motion gearbox motor/load numerator (processor 2) / SI Mtn gear num P2

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
1	2147000000	1

Description:

Sets the numerator for the gearbox between the motor and the load.

Index:

[0] = Gearbox 1
 [1] = Gearbox 2
 [2] = Gearbox 3
 [3] = Gearbox 4
 [4] = Gearbox 5
 [5] = Gearbox 6
 [6] = Gearbox 7
 [7] = Gearbox 8

Dependency:

Refer to: p9321

Notice:

It is not possible to change over the gearbox stages. Gearbox 1 (index 0) is always active.

Note:

In the case of encoderless monitoring functions, the pole pair number must be multiplied by the numerator of the gearbox ratio.

Example:

Gearbox ratio 1:4, pole pair number (r0313) = 2

--> p9321 = 1, p9322 = 8 (4 x 2)

p9331[0...3] SI Motion SLS limit values (processor 2) / SI Mtn SLS lim P2

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
0.01 [rpm]	100000.00 [rpm]	2000.00 [rpm]

Description:

Sets the limit values for the function "Safely-Limited Speed" (SLS).

Index:

[0] = Limit value SLS1
 [1] = Limit value SLS2
 [2] = Limit value SLS3
 [3] = Limit value SLS4

Dependency:

Refer to: p9363, p9531

Refer to: C01714

Notice:

This parameter is overwritten by the copy function of the safety functions integrated in the drive.

Note:

SLS: Safely-Limited Speed

p9342	SI Motion act. val. comparison tolerance (crossw.) (processor 2) / SI Mtn actV tol P2		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 0.0010 [°]	Max 360.0000 [°]	Factory setting 12.0000 [°]
Description:	Sets the tolerance for the crosswise data comparison of the actual position between processors 1 and 2.		
Dependency:	Refer to: p9542 Refer to: C01711		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
Note:	For a linear axis, the tolerance is internally limited to 10 mm. For a "linear axis with rotating motor" and standard setting of p9320, p9321 and p9322, the standard setting of p9342 corresponds to a position tolerance of 36 ° on the motor side.		
p9344	SI Motion actual value comparison tolerance (referencing) (MM) / SI mtn ref tol MM		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(95)	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.0000 [mm]	Max 36.0000 [mm]	Factory setting 0.0100 [mm]
Description:	Sets the tolerance to check the actual values after referencing (incremental encoder) or when powering up (absolute encoder).		
Dependency:	Refer to: C01711		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
Note:	A change only becomes effective after a POWER ON. For linear axes, the maximum value is limited to 1mm.		
p9345	SI Motion SSM filter time (processor 2) / SI Mtn SSM filt P2		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2823
CU250D-2_PN_F			
	Min 0.00 [µs]	Max 100000.00 [µs]	Factory setting 0.00 [µs]
Description:	Sets the filter time for the SSM feedback signal to detect standstill.		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
Note:	The filter time is effective only if the function is enabled (p9301.16 = p9501.16 = 1). The parameter is included in the crosswise data comparison of the two monitoring channels. SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)		
p9346	SI Motion SSM velocity limit (processor 2) / SI Mtn SSM v_limP2		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2823
CU250D-2_PN_F			
	Min 0.00 [rpm]	Max 100000.00 [rpm]	Factory setting 20.00 [rpm]
Description:	Sets the velocity limit for the SSM feedback signal to detect standstill ($n < nx$). When this limit value is undershot, the signal "SSM feedback signal active" is set.		
Dependency:	Refer to: p9546		

Caution:

The following applies for p9306 = 3:

The "SAM" function is switched out if the selected threshold value is undershot.

Notice:

This parameter is overwritten by the copy function of the safety functions integrated in the drive.

Note:

SAM: Safe Acceleration Monitor (safe acceleration monitoring)

SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

p9347**SI Motion SSM velocity hysteresis (processor 2) / SI Mtn SSM Hyst P2**

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2823
CU250D-2_PN_F			

Min	Max	Factory setting
0.0010 [rpm]	500.0000 [rpm]	10.0000 [rpm]

Description: Sets the velocity hysteresis for the SSM feedback signal to detect standstill ($n < nx$).

Dependency: Refer to: C01711

Notice: This parameter is overwritten by the copy function of the safety functions integrated in the drive.

Note: The velocity hysteresis is effective only if the function is enabled ($p9301.16 = p9501.16 = 1$).

The parameter is included in the crosswise data comparison of the two monitoring channels.

SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

p9348**SI Motion SAM actual velocity tolerance (processor 2) / SI mtn SAM tol P2**

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
0.00 [rpm]	120000.00 [rpm]	300.00 [rpm]

Description: Sets the velocity tolerance for the "SAM" function.

Dependency: Refer to: p9548

Refer to: C01706

Notice: This parameter is overwritten by the copy function of the safety functions integrated in the drive.

Note: SAM: Safe Acceleration Monitor (safe acceleration monitoring)

p9351**SI Motion SLS changeover delay time (processor 2) / SI Mtn SLS t P2**

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2819, 2820
CU250D-2_PN_F			

Min	Max	Factory setting
0.00 [μ s]	600000000.00 [μ s]	100000.00 [μ s]

Description: Sets the delay time for the SLS changeover for the function "safely limited speed" (SLS).

When transitioning from a higher to a lower safely-limited velocity/speed stage, within this delay time, the "old" velocity stage remains active.

Even if SLS is activated from the state "SLS in active", then this delay is still applied.

Dependency: Refer to: p9551

Notice: This parameter is overwritten by the copy function of the safety functions integrated in the drive.

Note: SLS: Safely-Limited Speed


p9356	SI Motion pulse suppression delay time (processor 2) / SI Mtn IL t_del P2		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2819
CU250D-2_PN_F			
	Min 0.00 [µs]	Max 3600000000.00 [µs]	Factory setting 600000000.00 [µs]
Description:	Sets the delay time for the safe pulse suppression after STOP B / SS1. In the case of encoderless motion monitoring functions with safe brake ramp monitoring (p9306 = 1) and the OFF3 ramp enabled at the same time (p9507.3 = 0), the parameter has no effect.		
Dependency:	Refer to: p9360, p9556 Refer to: C01701		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
Note:	SS1: Safe Stop 1		
p9358	SI Motion acceptance test mode time limit (processor 2) / SI Mtn acc t P2		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 5000000.00 [µs]	Max 100000000.00 [µs]	Factory setting 40000000.00 [µs]
Description:	Sets the maximum time for the acceptance test mode. If the acceptance test mode takes longer than the selected time limit, then the mode is automatically terminated.		
Dependency:	Refer to: p9558 Refer to: C01799		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
p9360	SI Motion pulse suppression shutdown speed (processor 2) / SI Mtn IL n_sh P2		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 10.00 [rpm]	Max 6000.00 [rpm]	Factory setting 10.00 [rpm]
Description:	Sets the shutdown speed for the pulse suppression. Below this speed "standstill" is assumed and for STOP B / SS1, the pulses are suppressed (by changing to STOP A).		
Dependency:	Refer to: p9356, p9560		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
Note:	The shutdown speed has no effect for a value = 0. SS1: Safe Stop 1		

p9363[0...3] SI Motion SLS stop response (processor 2) / SI Mtn SLS stop P2			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 0	Max 1	Factory setting 0
Description:	Sets the stop response for the function "Safely-Limited Speed" (SLS). These settings apply to the individual limit values for SLS.		
Value:	0: STOP A 1: STOP B		
Index:	[0] = Limit value SLS1 [1] = Limit value SLS2 [2] = Limit value SLS3 [3] = Limit value SLS4		
Dependency:	Refer to: p9331, p9563		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
Note:	SLS: Safely-Limited Speed		
p9364 SI Motion SDI tolerance (processor 2) / SI Mtn SDI tol P2			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2824
CU250D-2_PN_F			
	Min 0.001 [°]	Max 360.000 [°]	Factory setting 12.000 [°]
Description:	Sets the tolerance for the function "Safe motion direction" (SDI). This motion in the monitored direction is still permissible before safety message C30716 is initiated.		
Dependency:	Refer to: p9365, p9366 Refer to: C30716		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
Note:	SDI: Safe Direction		
p9365 SI Motion SDI delay time (processor 2) / SI Mtn SDI t P2			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2824
CU250D-2_PN_F			
	Min 0.00 [µs]	Max 600000000.00 [µs]	Factory setting 100000.00 [µs]
Description:	Sets the delay time for the function "Safe motion direction" (SDI). When selecting the SDI function, motion in the monitored direction is permissible as a maximum for this time; this means that this time can be used for braking existing motion.		
Dependency:	Refer to: p9364, p9366 Refer to: C30716		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
Note:	SDI: Safe Direction		

p9366 SI Motion SDI stop response (processor 2) / SI Mtn SDI Stop P2			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2824
CU250D-2_PN_F			
	Min	Max	Factory setting
	0	1	1
Description:	Sets the stop response for the function "Safe motion direction" (SDI). This setting applies to both directions of motion. In the case of encoderless motion monitoring (p9306 = 1), only a value of 0 or 1 is permitted.		
Value:	0: STOP A 1: STOP B		
Dependency:	Refer to: p9364, p9365 Refer to: C30716		
Note:	SDI: Safe Direction		
p9368 SI Motion SAM velocity limit (processor 2) / SI Mtn SAM v_limP2			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0.00 [rpm]	1000.00 [rpm]	0.00 [rpm]
Description:	Sets the velocity tolerance limit for the "SAM" function. SAM is de-activated once the set velocity limit has been undershot.		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
Note:	SAM: Safe Acceleration Monitor (safe acceleration monitoring) SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring) For p9568 = p9368 = 0, the following applies: The value in p9546/p9346 (SSM) is applied as the velocity limit for SAM.		
p9370 SI Motion acceptance test mode (processor 2) / SI Mtn acc_mod P2			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0000 hex	00AC hex	0000 hex
Description:	Setting to select and de-select the acceptance test mode.		
Value:	0: [00 hex] De-select the acceptance test mode 172: [AC hex] Select the acceptance test mode		
Dependency:	Refer to: p9358, r9371 Refer to: C01799		
Note:	Acceptance test mode can only be selected if the motion monitoring functions, which are integrated in the drives, are enabled (p9601.2/p9801.2).		

r9371	SI Motion acceptance test status (processor 2) / SI Mtn acc_stat P2		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 0000 hex	Max 00AC hex	Factory setting -
Description:	Displays the status of the acceptance test mode.		
Value:	0: [00 hex] Acc_mode inactive 12: [0C hex] Acc_mode not possible due to POWER ON fault 13: [0D hex] Acc_mode not possible due to incorrect ID in p9370 15: [0F hex] Acc_mode not possible due to expired Acc_timer 172: [AC hex] Acc_mode active		
Dependency:	Refer to: p9358, p9370 Refer to: C01799		
p9381	SI Motion brake ramp reference value (processor 2) / SI Mtn ramp ref P2		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 600.0000 [rpm]	Max 240000.0000 [rpm]	Factory setting 1500.0000 [rpm]
Description:	Sets the reference value to define the brake ramp. The rate of rise of the brake ramp depends upon p9381 (reference value) and p9383 (monitoring time).		
Dependency:	Refer to: p9382, p9383		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
p9382	SI Motion brake ramp delay time (processor 2) / SI Mtn rp t_del P2		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 10000.00 [µs]	Max 99000000.00 [µs]	Factory setting 250000.00 [µs]
Description:	Sets the delay time for monitoring the brake ramp. Monitoring of the brake ramp starts once the delay time has elapsed.		
Dependency:	Refer to: p9381, p9383		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
p9383	SI Motion brake ramp monitoring time (processor 2) / SI Mtn rp t_mon P2		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 500.00 [ms]	Max 3600000.00 [ms]	Factory setting 10000.00 [ms]
Description:	Sets the monitoring time to define the brake ramp. The rate of rise of the brake ramp depends upon p9381 (reference value) and p9383 (monitoring time).		
Dependency:	Refer to: p9381, p9382		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		

p9385 SI Motion actual value sensing sensorless fault tolerance (MM) / ActVal sl tol MM			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	-1	4	-1
Description:	Sets the tolerance of the plausibility monitoring of the current and voltage angle. A higher value results in a higher degree of ruggedness when reversing at low speeds, as well as in the field weakening range for load steps. An increase is advantageous, if the current or voltage at the motor become small.		
Dependency:	Refer to: p9507 Refer to: F30681, C30711		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive. Reducing this value can adversely affect the actual value sensing and the plausibility check. When the value is increased, this results in a longer evaluation delay and a higher velocity deviation (r9787).		
Note:	This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3). For synchronous motors, the value 4 must be set. If value = -1: - for synchronous motors, the calculation is automatically made with the value 4. - for induction motors, the calculation is automatically made with a value of 0 (if the code number of the power unit p0201[0] < 14000, otherwise with a value of 2).		

p9386 SI Motion actual value sensing sensorless delay time (P2) / ActVal sl t_del P2			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	5.00 [ms]	1000.00 [ms]	100.00 [ms]
Description:	Sets the delay time to evaluate the encoderless actual value sensing after the pulses have been enabled. The value must be greater than or equal to the motor magnetizing time (p0346).		
Dependency:	Refer to: C30711		
Caution:	The safety functionality is only completely guaranteed after this time has expired.		
			
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive. If this value is reduced, this can have a negative impact on the actual value acquisition and plausibility check – and result in Safety message C30711 with the message value 1041 or 1042.		
Note:	This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3).		

p9387 SI Motion actual value sensing sensorless filter time (P2) / Actv sl t_filt P2			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0.00 [µs]	100000.00 [µs]	25000.00 [µs]
Description:	Sets the filter time for smoothing the actual value with sensorless actual value sensing.		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive. A longer filter time results in a longer response time.		

p9388 SI Motion actual value sensing minimum current (P2) / ActVal sl I_min P2			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 0.00 [%]	Max 1000.00 [%]	Factory setting 10.00 [%]
Description:	Sets the minimum current for encoderless actual value sensing in reference to 10 mA (i.e. when 1 % = 10 mA). - The value must be increased if C30711 has occurred with message value 1042. - The value must be decreased if C30711 has occurred with message value 1041. For synchronous motors, the following condition must be fulfilled: p0305 x p9783 >= p9388 x 1.2		
Dependency:	Refer to: r9785 Refer to: C30711		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive. If this percentage value is reduced excessively, then this can result in a safety message and an inaccurate actual value.		
p9389 SI Motion actual value sensing sensorless accel. limit (P2) / ActVal sl a_lim P2			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 10.00 [%]	Max 3300.00 [%]	Factory setting 100.00 [%]
Description:	Sets the acceleration limit to filter velocity fluctuations. If this percentage value is increased, when accelerating, velocity peaks that do not reflect the real velocity characteristic can occur. If this value is decreased, and this dampens the velocity peaks when accelerating. - The value must be increased if C30711 with message value 1043 has occurred. - The value must be lowered if acceleration procedures have led to an excessive Safety actual velocity.		
Dependency:	Refer to: r9784 Refer to: C30711		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
r9398[0...1] SI Motion actual checksum SI parameters (processor 2) / SI Mtn act CRC P2			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Displays the checksum over the checked Safety Integrated parameters of the motion monitoring functions (actual checksum) on processor 2.		
Index:	[0] = Checksum over SI parameters for motion monitoring [1] = Checksum over SI parameters with hardware reference		
Dependency:	Refer to: p9399		

p9399[0...1]		SI Motion setpoint checksum SI parameters (processor 2) / SI Mtn setp CRC P2			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32		
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -		
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -		
CU250D-2_PN_F					
	Min 0000 hex	Max FFFF FFFF hex	Factory setting 0000 hex		
Description:	Sets the checksum over the checked Safety Integrated parameters of the motion monitoring functions (actual checksum) on processor 2.				
Index:	[0] = Checksum over SI parameters for motion monitoring [1] = Checksum over SI parameters with hardware reference				
Dependency:	Refer to: r9398				
p9400		Safely remove memory card / Mem_card rem			
	Access level: 2	Calculated: -	Data type: Integer16		
	Can be changed: T	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min 0	Max 100	Factory setting 0		
Description:	Setting and display when memory card is "removed safely". Procedure: Setting p9400 = 2 results in a value of 3 --> The memory card can be removed safely. After removal the value sets itself to 0 automatically. Setting p9400 = 2 results in a value of 100 --> The memory card cannot be removed safely. Removal may destroy the file system on the memory card. It may be necessary to set p9400 = 2 again.				
Value:	0: No memory card inserted 1: Memory card inserted 2: Request "safe removal" of the memory card 3: "Safe removal" possible 100: "Safe removal" not possible due to access				
Dependency:	Refer to: r9401				
Notice:	Removing the memory card without a request (p9400 = 2) and confirmation (p9400 = 3) may destroy the file system on the memory card. The memory card will then no longer work properly and must be replaced.				
Note:	The status when the memory card is being "removed safely" is shown in r9401. Re value = 0, 1, 3, 100: These values can only be displayed, not set.				
r9401		Safely remove memory card status / Mem_card rem stat			
	Access level: 2	Calculated: -	Data type: Unsigned16		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min -	Max -	Factory setting -		
Description:	Displays the status of the memory card.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Memory card inserted	Yes	No	-
	01	Memory card activated	Yes	No	-
	02	SIEMENS memory card	Yes	No	-
	03	Memory card as USB data storage medium from the PC used	Yes	No	-
Dependency:	Refer to: p9400				

Note:

Re bit 00 and bit 01:
 Bit 1/0 = 0/0: No memory card inserted (corresponds to p9400 = 0).
 Bit 1/0 = 0/1: "Safe removal" possible (corresponds to p9400 = 3).
 Bit 1/0 = 1/0: Status not possible.
 Bit 1/0 = 1/1: Memory card inserted (corresponds to p9400 = 1, 2, 100).
 Re bit 00 and bit 02:
 Bit 2/0 = 0/0: No memory card inserted.
 Bit 2/0 = 0/1: Memory card inserted, but not a SIEMENS memory card.
 Bit 2/0 = 1/0: Status not possible.
 Bit 2/0 = 1/1: SIEMENS memory card inserted.

r9406[0...19]	PS file parameter number parameter not transferred / PS par_no n transf		
Access level: 4	Calculated: -	Data type: Unsigned16	
Can be changed: -	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min	Max	Factory setting	
-	-	-	
Description:	<p>Displays the parameters that were not able to be transferred when reading the parameter back-up files (PS files) from the non-volatile memory (e.g. memory card).</p> <p>r9406[0] = 0 --> All of the parameter values were able to be transferred error-free.</p> <p>r9406[0...x] > 0 --> indicates the parameter number in the following cases:</p> <ul style="list-style-type: none"> - parameter, whose value was not able to be completely accepted. - indexed parameter, where at least 1 index was not able to be accepted. The first index that is not transferred is displayed in r9407. 		
Dependency:	Refer to: r9407, r9408		
Note:	<p>All indices from r9406 to r9408 designate the same parameter.</p> <p>r9406[x] parameter number, parameter not accepted r9407[x] parameter index, parameter not accepted r9408[x] fault code, parameter not accepted</p>		

r9407[0...19]	PS file parameter index parameter not transferred / PS parameter index		
Access level: 4	Calculated: -	Data type: Unsigned16	
Can be changed: -	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min	Max	Factory setting	
-	-	-	
Description:	<p>Displays the first index of the parameters that could not be transferred when the parameter backup files (PS files) were read from the non-volatile memory (e.g. memory card).</p> <p>If, from an indexed parameter, at least one index was not able to be transferred, then the parameter number is displayed in r9406[n] and the first index that was not transferred is displayed in r9407[n].</p> <p>r9406[0] = 0 --> All of the parameter values were able to be transferred error-free.</p> <p>r9406[n] > 0 --> Displays r9407[n] the first index of the parameter number r9406[n] that was not transferred.</p>		
Dependency:	Refer to: r9406, r9408		
Note:	<p>All indices from r9406 to r9408 designate the same parameter.</p> <p>r9406[x] parameter number, parameter not accepted r9407[x] parameter index, parameter not accepted r9408[x] fault code, parameter not accepted</p>		

r9408[0...19]	PS file fault code parameter not transferred / PS fault code		
	Access level: 4	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Only for internal Siemens service purposes.		
Dependency:	Refer to: r9406, r9407		
Note:	All indices from r9406 to r9408 designate the same parameter. r9406[x] parameter number, parameter not accepted r9407[x] parameter index, parameter not accepted r9408[x] fault code, parameter not accepted		
r9409	Number of parameters to be saved / Qty par to save		
	Access level: 4	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the number of modified parameters and those that have still not be saved for this drive object.		
Dependency:	Refer to: p0971		
Notice:	Inherent to the system, the list of the parameters to be backed up is empty after the following actions: - Download - Warm restart - Factory setting In these cases, a new parameter backup must be initiated, which is then the starting point for the list of modified parameters.		
Note:	The modified parameters that still need to be saved are internally listed in r9410 ... r9419.		
r9451[0...29]	Units changeover adapted parameters / Unit_chngov par		
	Access level: 4	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-
Description:	Displays the parameters whose parameter would have to be changed during a units changeover.		
Dependency:	Refer to: F07088		
r9463	Actual macro / Actual macro		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	999999	-
Description:	Displays the set valid macro.		
Note:	A value of 0 is displayed if a parameter set by a macro is changed.		

p9484	BICO interconnections search signal source / BICO S_src srch			
	Access level: 3	Calculated: -	Data type: Unsigned32	
	Can be changed: U, T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min 0	Max 4294967295	Factory setting 0	
Description:	Sets the signal source (BO/CO parameter, BICO coded) to search in the signal sinks. The signal source to be searched for is set in p9484 (BICO-coded) and the search result is specified using the number (r9485) and the first index (r9486).			
Dependency:	Refer to: r9485, r9486			
r9485	BICO interconnections signal source search count / BICO S_src srchQty			
	Access level: 3	Calculated: -	Data type: Unsigned16	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min -	Max -	Factory setting -	
Description:	Displays the number of BICO interconnections to the signal sink being searched for.			
Dependency:	Refer to: p9484, r9486			
Note:	The signal source to be searched is set in p9484 (BICO-coded). The search result is contained in r9482 and r9483 and is specified by the count (r9485) and the first index (r9486).			
r9486	BICO interconnections signal source search first index / BICO S_src srchIdx			
	Access level: 3	Calculated: -	Data type: Unsigned16	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min -	Max -	Factory setting -	
Description:	Displays the first index of the signal source being searched for. The signal source to be searched for is set in p9484 (BICO-coded) and the search result is specified using the number (r9485) and the first index (r9486).			
Dependency:	Refer to: p9484, r9485			
Note:	The signal source to be searched is set in p9484 (BICO-coded). The search result is contained in r9482 and r9483 and is specified by the count (r9485) and the first index (r9486).			
p9501	SI Motion enable safety functions (Control Unit) / SI Mtn enable CU			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32	
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -	
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -	
CU250D-2_PN_F				
	Min -	Max -	Factory setting 0000 0000 0000 0000 0000 0000 0000 0000 bin	
Description:	Sets the enable signals for the safe motion monitoring.			
Bit field:	Bit	Signal name	1 signal	0 signal
	00	Enable SI Motion	Enable	Inhibit
	16	Enable SSM (n < nx) hysteresis and filtering	Enable	Inhibit
	17	Enable SDI	Enable	Inhibit
	30	Enable F-DI in PROFIsafe telegram	Enable	Inhibit
Dependency:	Refer to: F01682, F01683			

Note: For bit 30 = 1, PROFIsafe telegram 31 must be configured in the F host.
 A change only becomes effective after a POWER ON.
 SDI: Safe Direction
 SLS: Safely-Limited Speed / SG: Safely reduced speed
 SOS: Safe Operating Stop / SBH: Safe operating stop
 SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

p9506 SI Motion function specification (processor 1) / SI Mtn fct_spc P1

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
1	3	1

Description: Sets the function specification for the safe motion monitoring.
Value: 1: Safety without encoder with braking ramp (SBR)
 3: Safety without encoder with accel_monitoring(SAM) / delay time
Dependency: Refer to: C01711

p9507 SI Motion function configuration (processor 1) / SI Mtn config P1

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
-	-	0011 bin

Description: Sets the function configuration for safe motion monitoring.
Bit field:

Bit	Signal name	1 signal	0 signal	FP
00	Extended message acknowledgement	Yes	No	-
01	Setpoint velocity limit for STOP F	No	Yes	-

Dependency: Refer to: C01711
Note: Re bit 00:
 When the function is activated, a safety-relevant acknowledgement (internal event acknowledge) can be performed by selecting/deselecting STO.
 Re bit 01:
 When the function is activated, the active setpoint velocity limit (CO: r9733) is set to zero when STOP F is active.

p9509 SI Motion behavior during pulse suppression (processor 1) / SI Mtn behav IL P1

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
-	-	0000 0000 1111 1111 bin

Description: Sets the behavior of safety functions and their feedback during pulse suppression in encoderless operation.
Bit field:

Bit	Signal name	1 signal	0 signal	FP
00	SSM during pulse suppression and sensorless	Becomes inactive	Remains active	-
08	SDI during pulse suppression and sensorless	Becomes inactive	Remains active	-

Dependency: Refer to: C01711

Notice: Re bit 00:
If the OFF1 or the OFF3 ramp-down time is too low, or there is an insufficient clearance between the SSM limit speed, and the shutdown speed, then it is possible that the "speed under limit value" signal does not change to 1, because no speed actual value below the SSM limit was able to be identified before pulse cancellation. In this case, the OFF1 or the OFF3 ramp-down time or the clearance between the SSM limit speed and shutdown speed must be increased.

Note: SDI: Safe Direction
SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)
Re bit 00:
For bit = 1 and with the SSM safety function activated, the following applies:
- During pulse suppression, monitoring is switched off and the feedback signal has a 0 signal level.
For bit = 0 and with the SSM safety function activated, the following applies:
- Monitoring continues during pulse suppression. The feedback signal last displayed before pulse suppression is kept and the system goes into the STO state.
Re bit 08:
For bit = 1 and with the SDI safety function activated, the following applies:
- During pulse suppression, monitoring is switched off and the status signal indicates inactive.
For bit = 0 and with the SDI safety function activated, the following applies:
- Monitoring continues during pulse suppression. The status signal indicates active and the system goes into the STO state.

p9521[0...7] SI Motion gearbox motor/load denominator (processor 1) / SI Mtn gear den P1

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
1	2147000000	1

Description: Sets the denominator for the gearbox between the motor and the load.

Index:
[0] = Gearbox 1
[1] = Gearbox 2
[2] = Gearbox 3
[3] = Gearbox 4
[4] = Gearbox 5
[5] = Gearbox 6
[6] = Gearbox 7
[7] = Gearbox 8

Dependency: Refer to: p9522

Notice: It is not possible to change over the gearbox stages. Gearbox 1 (index 0) is always active.

p9522[0...7] SI Motion gearbox motor/load numerator (processor 1) / SI Mtn gear num P1

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
1	2147000000	1

Description: Sets the numerator for the gearbox between the motor and the load.

Index:
[0] = Gearbox 1
[1] = Gearbox 2
[2] = Gearbox 3
[3] = Gearbox 4
[4] = Gearbox 5
[5] = Gearbox 6
[6] = Gearbox 7
[7] = Gearbox 8

Dependency: Refer to: p9521
Notice: It is not possible to change over the gearbox stages. Gearbox 1 (index 0) is always active.
Note: In the case of encoderless monitoring functions, the pole pair number must be multiplied by the numerator of the gearbox ratio.
 Example:
 Gearbox ratio 1:4, pole pair number (r0313) = 2
 --> p9521 = 1, p9522 = 8 (4 x 2)

p9531[0...3] **SI Motion SLS limit values (processor 1) / SI Mtn SLS lim P1**

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

	Min	Max	Factory setting
	0.01 [rpm]	100000.00 [rpm]	2000.00 [rpm]

Description: Sets the limit values for the function "Safely-Limited Speed" (SLS).
Index: [0] = Limit value SLS1
 [1] = Limit value SLS2
 [2] = Limit value SLS3
 [3] = Limit value SLS4
Dependency: Refer to: p9563
 Refer to: C01714
Note: SLS: Safely-Limited Speed

p9533 **SI Motion SLS setpoint speed limit (processor 1) / SI Mtn SLS set_lim**

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

	Min	Max	Factory setting
	0.000 [%]	100.000 [%]	80.000 [%]

Description: This is an evaluation factor to define the setpoint limit from the selected actual speed limit.
 The active SLS limit value is evaluated with this factor and is made available as setpoint limit in r9733.
Dependency: This parameter only has to be parameterized for the motion monitoring functions integrated in the drive (p9601.2 = 1)
 $r9733[0] = p9531[x] \times p9533$ (converted from the load side to the motor side)
 $r9733[1] = -p9531[x] \times p9533$ (converted from the load side to the motor side)
 [x] = Selected SLS stage
 Conversion factor from the motor side to the load side:
 - motor type = rotary and axis type = linear: $p9522 / (p9521 \times p9520)$
 - otherwise: $p9522 / p9521$
 Refer to: p9501, p9531, p9601
Note: The active actual speed limit is selected via PROFIsafe.
 With STOP A, B, setpoint 0 is specified in r9733.
 For p9533 = 0, the setpoint speed limit is de-activated and r9733[0] is set to p1082 and r9733[1] is set to -p1082.
 SLS: Safely-Limited Speed

p9542 SI Motion act. val. comparison tolerance (crossw.) (processor 1) / SI Mtn act tol P1

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
0.0010 [°]	360.0000 [°]	12.0000 [°]

Description: Sets the tolerance for the crosswise data comparison of the actual position between processors 1 and 2.

Dependency: Refer to: C01711

Note: For a linear axis, the tolerance is internally limited to 10 mm.

For a "linear axis with rotating motor" and standard setting of p9520, p9521 and p9522, the standard setting of p9542 corresponds to a position tolerance of 36 ° on the motor side.

p9545 SI Motion SSM filter time (processor 1) / SI Mtn SSM filt P1

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2823
CU250D-2_PN_F			

Min	Max	Factory setting
0.00 [ms]	100.00 [ms]	0.00 [ms]

Description: Sets the filter time for the SSM feedback signal to detect standstill.

Note: The filter time is effective only if the function is enabled (p9501.16 = 1).

The parameter is included in the crosswise data comparison of the two monitoring channels.

SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

p9546 SI Motion SSM velocity limit (processor 1) / SI Mtn SSM v_limP1

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2823
CU250D-2_PN_F			

Min	Max	Factory setting
0.00 [rpm]	100000.00 [rpm]	20.00 [rpm]

Description: Sets the velocity limit for the SSM feedback signal to detect standstill ($n < nx$).

When this limit value is undershot, the signal "SSM feedback signal active" is set.

Caution: The following applies for p9506 = 3:

The "SAM" function is switched out if the selected threshold value is undershot.



Note: SAM: Safe Acceleration Monitor (safe acceleration monitoring)

SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

p9547 SI Motion SSM velocity hysteresis (processor 1) / SI Mtn SSM hyst P1

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2823
CU250D-2_PN_F			

Min	Max	Factory setting
0.0010 [rpm]	500.0000 [rpm]	10.0000 [rpm]

Description: Sets the velocity hysteresis for the SSM feedback signal to detect standstill ($n < nx$).

Dependency: Refer to: C01711

Note: The velocity hysteresis is effective only if the function is enabled (p9501.16 = 1).
The parameter is included in the crosswise data comparison of the two monitoring channels.
SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

p9548 **SI Motion SAM actual velocity tolerance (processor 1) / SI mtn SAM tol P1**

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
0.00 [rpm]	120000.00 [rpm]	300.00 [rpm]

Description: Sets the velocity tolerance for the "SAM" function.

Dependency: Refer to: C01706

Note: SAM: Safe Acceleration Monitor (safe acceleration monitoring)

p9551 **SI Motion SLS changeover delay time (processor 1) / SI Mtn SLS t P1**

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2819, 2820
CU250D-2_PN_F			

Min	Max	Factory setting
0.00 [ms]	600000.00 [ms]	100.00 [ms]

Description: Sets the delay time for the SLS changeover for the function "safely limited speed" (SLS).
When transitioning from a higher to a lower safely-limited velocity/speed stage, within this delay time, the "old" velocity stage remains active.

Even if SLS is activated from non safety-related operation, then this delay is still applied.

Note: SLS: Safely-Limited Speed

p9556 **SI Motion pulse suppression delay time (processor 1) / SI Mtn IL t_del P1**

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2819
CU250D-2_PN_F			

Min	Max	Factory setting
0.00 [ms]	3600000.00 [ms]	600000.00 [ms]

Description: Sets the delay time for the safe pulse suppression after STOP B.

In the case of encoderless motion monitoring functions with safe brake ramp monitoring (p9506 = 1) and the OFF3 ramp enabled at the same time (p9507.3 = 0), the parameter has no effect.

Dependency: Refer to: p9560

Refer to: C01701

p9558 **SI Motion acceptance test mode time limit (processor 1) / SI Mtn acc t P1**

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
5000.00 [ms]	100000.00 [ms]	40000.00 [ms]

Description: Sets the maximum time for the acceptance test mode.

If the acceptance test mode takes longer than the selected time limit, then the mode is automatically terminated.

Dependency: Refer to: C01799

p9559 SI Motion forced checking procedure timer (processor 1) / SI Mtn dyn timer			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 0.00 [h]	Max 9000.00 [h]	Factory setting 8.00 [h]
Description:	Sets the time interval for carrying out the forced checking procedure and testing the safety motion monitoring functions integrated in the drives. Within the parameterized time, the safety functions must have been tested at least once (including de-selection of the "STO" function). This monitoring time is reset each time the test is carried out. The signal source to initiate the forced checking procedure is set in p9705.		
Dependency:	Refer to: p9705 Refer to: A01697, C01798		
Note:	STO: Safe Torque Off		
p9560 SI Motion pulse suppression shutdown speed (processor 1) / SI Mtn IL v_sh P1			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 10.00 [rpm]	Max 6000.00 [rpm]	Factory setting 10.00 [rpm]
Description:	Sets the shutdown speed for the pulse suppression. Below this speed "standstill" is assumed and for STOP B / SS1, the pulses are suppressed (by changing to STOP A).		
Dependency:	Refer to: p9556		
Note:	The shutdown speed has no effect for a value = 0. SS1: Safe Stop 1		
p9563[0...3] SI Motion SLS-specific stop response (processor 1) / SI Mtn SLS stop P1			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 0	Max 1	Factory setting 0
Description:	Sets the SLS-specific stop response for the function "Safely-Limited Speed" (SLS). These settings apply to the individual limit values for SLS.		
Value:	0: STOP A 1: STOP B		
Index:	[0] = Limit value SLS1 [1] = Limit value SLS2 [2] = Limit value SLS3 [3] = Limit value SLS4		
Dependency:	Refer to: p9531		
Note:	SLS: Safely-Limited Speed		

p9564 SI Motion SDI tolerance (processor 1) / SI Mtn SDI tol P1

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2824
CU250D-2_PN_F			

Min	Max	Factory setting
0.001 [°]	360.000 [°]	12.000 [°]

Description: Sets the tolerance for the function "Safe motion direction" (SDI).
This motion in the monitored direction is still permissible before safety message C01716 is initiated.

Dependency: Refer to: p9565, p9566
Refer to: C01716

Note: SDI: Safe Direction

p9565 SI Motion SDI delay time (processor 1) / SI Mtn SDI t P1

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2824
CU250D-2_PN_F			

Min	Max	Factory setting
0.00 [ms]	600000.00 [ms]	100.00 [ms]

Description: Sets the delay time for the function "Safe motion direction" (SDI). When selecting the SDI function, motion in the monitored direction is permissible as a maximum for this time; this means that this time can be used for braking existing motion.

Dependency: Refer to: p9564, p9566
Refer to: C01716

Note: SDI: Safe Direction

p9566 SI Motion SDI stop response (processor 1) / SI Mtn SDI Stop P1

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2824
CU250D-2_PN_F			

Min	Max	Factory setting
0	1	1

Description: Sets the stop response for the function "Safe motion direction" (SDI).
This setting applies to both directions of motion.

Value: 0: STOP A
1: STOP B

Dependency: Refer to: p9564, p9565
Refer to: C01716

Note: SDI: Safe Direction

p9568 SI Motion SAM velocity limit (processor 1) / SI Mtn SAM v_limP1

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
0.00 [rpm]	1000.00 [rpm]	0.00 [rpm]

Description: Sets the velocity tolerance limit for the "SAM" function.
SAM is de-activated once the set velocity limit has been undershot.

Note: SAM: Safe Acceleration Monitor (safe acceleration monitoring)
SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)
For p9568 = p9368 = 0, the following applies:
The value in p9546/p9346 (SSM) is applied as the velocity limit for SAM.

p9570	SI Motion acceptance test mode (processor 1) / SI Mtn acc_mod P1		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
0000 hex	00AC hex	0000 hex

Description: Setting to select and de-select the acceptance test mode.

Value: 0: [00 hex] De-select the acceptance test mode
172: [AC hex] Select the acceptance test mode

Dependency: Refer to: p9558, r9571, p9601
Refer to: C01799

Note: Acceptance test mode can only be selected if the motion monitoring functions, which are integrated in the drives, are enabled (p9601.2/p9801.2).

r9571	SI Motion acceptance test status (processor 1) / SI Mtn acc_status		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
0000 hex	00AC hex	-

Description: Displays the status of the acceptance test mode.

Value: 0: [00 hex] Acc_mode inactive
12: [0C hex] Acc_mode not possible due to POWER ON fault
13: [0D hex] Acc_mode not possible due to incorrect ID in p9570
15: [0F hex] Acc_mode not possible due to expired Acc_timer
172: [AC hex] Acc_mode active

Dependency: Refer to: p9558, p9570
Refer to: C01799

p9575	SI Motion acceptance test SLP(SE) (Control Unit) / SI mtn accept SLP		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: U, T	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
0000 hex	00AC hex	0000 hex

Description: Setting to select and de-select the acceptance test for SLP(SE).

Value: 0: [00 hex] deselect acceptance test SLP(SE)
172: [AC hex] select acceptance test SLP(SE)

Dependency: Refer to: p9358, p9370, p9558, p9570, p9601

Note: Acceptance test SLP(SE) can only be selected, if the safe motion monitoring functions have been enabled, and the acceptance test mode was activated in p9570/p9370.


SLP: Safely-Limited Position / SE: Safe software limit switches

p9581	SI Motion brake ramp reference value (processor 1) / SI Mtn ramp ref P1		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 600.0000 [rpm]	Max 240000.0000 [rpm]	Factory setting 1500.0000 [rpm]
Description:	Sets the reference value to define the brake ramp. The rate of rise of the brake ramp depends upon p9581 (reference value) and p9583 (monitoring time).		
Dependency:	Refer to: p9582, p9583		
p9582	SI Motion brake ramp delay time (processor 1) / SI Mtn ramp t P1		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 10.00 [ms]	Max 99000.00 [ms]	Factory setting 250.00 [ms]
Description:	Sets the delay time for monitoring the brake ramp. Monitoring of the brake ramp starts once the delay time has elapsed.		
Dependency:	Refer to: p9581, p9583		
p9583	SI Motion brake ramp monitoring time (processor 1) / SI Mtn rp t_mon P1		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 0.50 [s]	Max 3600.00 [s]	Factory setting 10.00 [s]
Description:	Sets the monitoring time to define the brake ramp. The rate of rise of the brake ramp depends upon p9581 (reference value) and p9583 (monitoring time).		
Dependency:	Refer to: p9581, p9582		
p9585	SI Motion actual value sensing sensorless fault tolerance (CU) / ActVal sl tol CU		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min -1	Max 4	Factory setting -1
Description:	Sets the tolerance of the plausibility monitoring of the current and voltage angle. A higher value results in a higher degree of ruggedness when reversing at low speeds, as well as in the field weakening range for load steps. An increase is advantageous, if the current or voltage at the motor become small.		
Dependency:	Refer to: r9787 Refer to: F01681, C01711		
Notice:	Reducing this value can adversely affect the actual value sensing and the plausibility check. When the value is increased, this results in a longer evaluation delay and a higher velocity deviation (r9787).		
Note:	This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3). For synchronous motors, the value 4 must be set.		

If value = -1:

- for synchronous motors, the calculation is automatically made with the value 4.

- for induction motors, the calculation is automatically made with a value of 0 (if the code number of the power unit p0201[0] < 14000, otherwise with a value of 2).

p9586 SI Motion actual value sensing sensorless delay time (P1) / ActVal sl t_del P1			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 5.00 [ms]	Max 1000.00 [ms]	Factory setting 100.00 [ms]
Description:	Sets the delay time to evaluate the encoderless actual value sensing after the pulses have been enabled. The value must be greater than or equal to the motor magnetizing time (p0346).		
Dependency:	Refer to: C01711		
Caution:	The safety functionality is only completely guaranteed after this time has expired.		
			
Notice:	If this value is reduced, this can have a negative impact on the actual value acquisition and plausibility check – and result in Safety message C01711 with the message value 1041 or 1042.		
Note:	This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3).		

p9587 SI Motion actual value sensing sensorless filter time (P1) / Actv sl t_filt P1			
CU240D-2_DP_F	Access level: 4	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 0.00 [ms]	Max 100.00 [ms]	Factory setting 25.00 [ms]
Description:	Sets the filter time for smoothing the actual value with sensorless actual value sensing.		
Notice:	A longer filter time results in a longer response time.		

p9588 SI Motion actual value sensing sensorless minimum current (P1) / ActVal sl I_min P1			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 0.00 [%]	Max 1000.00 [%]	Factory setting 10.00 [%]
Description:	Sets the minimum current for encoderless actual value sensing in reference to 10 mA (i.e. when 1 % = 10 mA). - The value must be increased if C01711 has occurred with message value 1042. - The value must be decreased if C01711 has occurred with message value 1041. For synchronous motors, the following condition must be fulfilled: $ p0305 \times p9783 \geq p9588 \times 1.2$		
Dependency:	Refer to: r9785 Refer to: C01711		
Notice:	If this percentage value is reduced excessively, then this can result in a safety message and an inaccurate actual value.		

p9589 SI Motion actual value sensing sensorless accel. limit (P1) / ActVal sl a_lim P1			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 10.00 [%]	Max 3300.00 [%]	Factory setting 100.00 [%]
Description:	Sets the acceleration limit to filter velocity fluctuations. If this percentage value is increased, when accelerating, velocity peaks that do not reflect the real velocity characteristic can occur. If this value is decreased, and this dampens the velocity peaks when accelerating. - The value must be increased if C01711 with message value 1043 has occurred. - The value must be lowered if acceleration procedures have led to an excessive Safety actual velocity.		
Dependency:	Refer to: r9784 Refer to: C01711		
r9590[0...3] SI Motion version safety motion monitoring (processor 1) / SI Mtn version P1			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Displays the Safety Integrated version for the safe monitoring functions.		
Index:	[0] = Safety Version (major release) [1] = Safety Version (minor release) [2] = Safety Version (baselevel or patch) [3] = Safety Version (hotfix)		
Dependency:	Refer to: r9770		
Note:	Example: r9590[0] = 2, r9590[1] = 60, r9590[2] = 1, r9590[3] = 0 --> SI Motion version V02.60.01.00		
p9601 SI enable functions integrated in the drive (processor 1) / SI enable fct P1			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min -	Max -	Factory setting 0000 bin
Description:	Sets the enable signals for the safety functions integrated in the drive and the type of selection on processor 1. Not all of the settings listed below will be permissible, depending on the Control Unit and Power Module being used: 0000 hex: Safety functions integrated in the drive inhibited (no safety function). 0001 hex: Basic functions are enabled via onboard terminals (permissible for r9771.0 = 1). 0004 hex: Extended functions are enabled via onboard terminals (permissible for r9771.5 = 1). 0008 hex: Basic functions are enabled via PROFIsafe (permissible for r9771.6 = 1). 0009 hex: Basic functions are enabled via PROFIsafe onboard terminals (permissible for r9771.6 = 1).		

000C hex:

Extended functions are enabled via PROFIsafe (permissible for r9771.4 = 1).

000D hex:

Extended functions are enabled via PROFIsafe and basic functions via onboard terminals (permissible for r9771.4 = 1).

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Enable STO via terminals (processor 1)	Enable	Inhibit	2810
	02	Enable drive_integr motion_monitoring functions (processor 1)	Enable	Inhibit	-
	03	Enable PROFIsafe (processor 1)	Enable	Inhibit	-

Dependency: Refer to: r9771, p9801

Note: A change only becomes effective after a POWER ON.
STO: Safe Torque Off

p9601 SI enable functions integrated in the drive (processor 1) / SI enable fct P1

CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN	Can be changed: C(95)	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	0000 bin

Description: Sets the enable signals for the safety functions integrated in the drive and the type of selection on processor 1. Not all of the settings listed below will be permissible, depending on the Control Unit and Power Module being used:

0000 hex:
Safety functions integrated in the drive inhibited (no safety function).

0001 hex:
Basic functions are enabled via onboard terminals (permissible for r9771.0 = 1).

0004 hex:
Extended functions are enabled via onboard terminals (permissible for r9771.5 = 1).

0008 hex:
Basic functions are enabled via PROFIsafe (permissible for r9771.6 = 1).

0009 hex:
Basic functions are enabled via PROFIsafe onboard terminals (permissible for r9771.6 = 1).

000C hex:
Extended functions are enabled via PROFIsafe (permissible for r9771.4 = 1).

000D hex:
Extended functions are enabled via PROFIsafe and basic functions via onboard terminals (permissible for r9771.4 = 1).

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Enable STO via terminals (processor 1)	Enable	Inhibit	2810
	03	Enable PROFIsafe (processor 1)	Enable	Inhibit	-

Dependency: Refer to: r9771, p9801

Note: A change only becomes effective after a POWER ON.
STO: Safe Torque Off

p9610 SI PROFIsafe address (processor 1) / SI PROFIsafe P1

	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: C(95)	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0000 hex	FFFE hex	0000 hex

Description: Sets the PROFIsafe address for processor 1.

Dependency: Refer to: p9810

p9650	SI F-DI changeover tolerance time (processor 1) / SI F-DI_chg tol P1		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(95)	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2810
	Min 0.00 [ms]	Max 2000.00 [ms]	Factory setting 500.00 [ms]
Description:	Sets the tolerance time for the changeover of the failsafe digital input for STO on processor 1. An F-DI changeover is not effective simultaneously due to the different runtimes in the two monitoring channels. After an F-DI changeover, dynamic data is not subject to a crosswise data comparison during this tolerance time.		
Dependency:	Refer to: p9850		
Note:	For a crosswise data comparison between p9650 and p9850, a difference of one Safety monitoring clock cycle is tolerated. The parameterized time is rounded internally to an integer multiple of the monitoring clock cycle. F-DI: Failsafe Digital Input		
p9651	SI STO debounce time (processor 1) / SI STO t_debou P1		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(95)	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0.00 [ms]	Max 100.00 [ms]	Factory setting 1.00 [ms]
Description:	Sets the debounce time for the failsafe digital inputs used to control the "STO" function. The debounce time is rounded to whole milliseconds.		
Note:	The debounce time is rounded to whole milliseconds. It specifies the maximum duration of a fault pulse at the fail-safe digital inputs with no reaction/influence on the selection or deselection of the Safety Basic Functions. Example: Debounce time = 1 ms: Fault pulses of 1 ms are filtered; only pulses longer than 2 ms are processed. Debounce time = 3 ms: Fault pulses of 3 ms are filtered; only pulses longer than 4 ms are processed.		
p9659	SI forced checking procedure timer / SI FCP Timer		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: C(95)	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2810
	Min 0.00 [h]	Max 9000.00 [h]	Factory setting 8.00 [h]
Description:	Sets the time interval for carrying out the forced checking procedure and testing the Safety shutdown paths. Within the parameterized time, STO must have been de-selected at least once. The monitoring time is reset each time that STO is de-selected.		
Dependency:	Refer to: A01699		
Note:	STO: Safe Torque Off		
r9660	SI forced checking procedure remaining time / SI frc chk remain		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [h]	Max - [h]	Factory setting - [h]
Description:	Displays the time remaining before dynamization and testing of the safety shutdown paths (forced checking procedure).		
Dependency:	Refer to: A01699		

p9700	SI copy function / SI copy function		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: C(95), U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0000 hex	Max 00D0 hex	Factory setting 0000 hex
Description:	Setting to start the required copy function. After starting, the corresponding parameters are copied from processor 1 to processor 2. Once copying is complete, the parameter is automatically reset to zero.		
Value:	0: [00 hex] Copy function ended 29: [1D hex] Start copy function node identifier 87: [57 hex] Start copy function SI parameters 208: [D0 hex] Start copy function SI basic parameters		
Dependency:	Refer to: r3996		
Notice:	When the parameters are copied, short-term communication interruptions may occur.		
Note:	Re value = 57 hex and D0 hex: The value can only be set if the safety commissioning mode is set and the Safety Integrated password was entered. Re value = D0 hex: The following parameters are copied after starting the copy function: p9601 --> p9801, p9610 --> 9810, p9650 --> p9850, p9651 --> p9851		
p9701	Acknowledge SI data change / Ackn SI data		
	Access level: 3	Calculated: -	Data type: Integer16
	Can be changed: C(95), U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0000 hex	Max 00EC hex	Factory setting 0000 hex
Description:	Setting to transfer the reference checksums from the associated actual checksums after changes (SI parameters, hardware). After transferring the reference checksums, parameters are automatically reset to zero.		
Value:	0: [00 hex] Data unchanged 172: [AC hex] Acknowledge data change complete 220: [DC hex] Acknowledge SI basic parameter change 236: [EC hex] Acknowledge hardware CRC		
Dependency:	Refer to: r9398, p9399, r9728, p9729, r9798, p9799, r9898, p9899		
Note:	Re value = AC and DC hex: These values can only be set if the safety commissioning mode is set and the Safety Integrated password was entered.		
p9705	BI: SI Motion: Test stop signal source / SI Mtn test stop		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2837
CU250D-2_PN_F	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the test stop of the safety-relevant motion monitoring functions.		

r9708[0...5] SI Motion diagnostics safe position / SI mtn safe pos

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2822, 2836
CU250D-2_PN_F			

Min	Max	Factory setting
- [°]	- [°]	- [°]

Description: Displays the actual load-side actual values of both monitoring channels and their difference.

Index:
 [0] = Load-side actual value on the CU
 [1] = Load-side actual value on the second channel
 [2] = Load-side actual value difference CU - second channel
 [3] = Load-side max. actual value difference CU - second channel
 [4] = Load-side actual value as safe position via PROFIsafe
 [5] = Load-side additional actual value difference CU - second channel

Dependency: Refer to: r9713

Note:
 Re index 0:
 The display of the load-side position actual value on processor 1 is updated in the monitoring clock cycle.
 Re index 1:
 The display of the load-side position actual value on processor 2 is updated in the CDC clock cycle (r9724) and delayed by one CDC clock cycle.
 Re index 2:
 The difference between the load-side position actual value on processor 1 and load-side position actual value on processor 2 is updated in the CDC clock cycle (r9724) and delayed by one CDC clock cycle.
 Re index 3:
 The maximum difference between the load-side position actual value on processor 1 and the load-side position actual value on processor 2.
 Re index 4:
 The content corresponds to the value in index 0.
 CDC: Crosswise Data Comparison

r9710[0...1] SI Motion diagnostics result list 1 / SI Mtn res_list 1

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
-	-	-

Description: Displays result list 1 that, for the crosswise data comparison between the monitoring channels, led to the fault.

Index:
 [0] = Result list processor 2
 [1] = Result list processor 1

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	06	Actual value > upper limit SLS1	Yes	No	-
	07	Actual value > lower limit SLS1	Yes	No	-
	08	Actual value > upper limit SLS2	Yes	No	-
	09	Actual value > lower limit SLS2	Yes	No	-
	10	Actual value > upper limit SLS3	Yes	No	-
	11	Actual value > lower limit SLS3	Yes	No	-
	12	Actual value > upper limit SLS4	Yes	No	-
	13	Actual value > lower limit SLS4	Yes	No	-
	16	Actual value > upper limit SAM/SBR	Yes	No	-
	17	Actual value > lower limit SAM/SBR	Yes	No	-
	18	Actual value > upper limit SDI positive	Yes	No	-
	19	Actual value > lower limit SDI positive	Yes	No	-
	20	Actual value > upper limit SDI negative	Yes	No	-
	21	Actual value > lower limit SDI negative	Yes	No	-

Dependency: Refer to: C01711
Note: SAM: Safe Acceleration Monitor (safe acceleration monitoring)
 SBR: Safe Brake Ramp (safe brake ramp monitoring)
 SLS: Safely-Limited Speed

r9712 **CO: SI Motion diagnostics pos. act. val. motor side (processor 1) / SI Mtn s_act motP1**

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
-	-	-

Description: Displays the actual motor-side position actual value for the motion monitoring functions on processor 1.
Note: The display is updated in the safety monitoring clock cycle.

r9713[0...5] **CO: SI Motion diagnostics position actual value load side / SI Mtn s_act load**

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
-	-	-

Description: Displays the actual load-side actual values of both monitoring channels and their difference.

Index:
 [0] = Load-side actual value on processor 1 (P1)
 [1] = Load-side actual value on processor 2 (P2)
 [2] = Load-side actual value difference P1 - P2
 [3] = Load-side maximum actual value difference P1 - P2
 [4] = Load-side actual value as safe position via PROFIsafe
 [5] = Load-side additional actual value difference CU - second channel

Dependency: Refer to: r9708, r9724

Note: The value of this parameter is displayed in r9708 with units (mm or degrees).

The display is updated in the safety monitoring clock cycle.

Re index 0:

The display of the load-side position actual value on processor 1 is updated in the monitoring clock cycle.

Re index 1:

The display of the load-side position actual value on processor 2 is updated in the CDC clock cycle (r9724) and delayed by one CDC clock cycle.

Re index 2:

The difference between the load-side position actual value on processor 1 and load-side position actual value on processor 2 is updated in the CDC clock cycle (r9724) and delayed by one CDC clock cycle.

Re index 3:

The maximum difference between the load-side position actual value on processor 1 and the load-side position actual value on processor 2.

Re index 4:

The content corresponds to the value in index 0.

CDC: Crosswise Data Comparison

r9714[0...2] CO: SI Motion diagnostics velocity (processor 1) / SI Mtn diag v P1			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the actual velocity values for the motion monitoring functions on processor 1.		
Index:	[0] = Load-side velocity actual value on processor 1 [1] = Actual SAM/SBR velocity limit on processor 1 [2] = Actual SLS velocity limit on the processor 1		
Dependency:	Refer to: r9732		
Notice:	Re index 2: This SLS velocity limit can, as a result of conversion into the internal monitoring format, deviate from the specified SLS velocity limit (see r9732).		
Note:	The display is updated in the safety monitoring clock cycle.		

r9720.0...13 CO/BO: SI Motion control signals integrated in the drive / SI Mtn integ STW					
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32		
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2840, 2855		
CU250D-2_PN_F					
	Min -	Max -	Factory setting -		
Description:	Control signals for safety-relevant motion monitoring functions integrated in the drive.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	De-select STO	Yes	No	-
	01	De-select SS1	Yes	No	-
	04	De-select SLS	Yes	No	-
	07	Acknowledgement	Signal edge active	No	-
	09	Select SLS bit 0	Set	Not set	-
	10	Select SLS bit 1	Set	Not set	-
	12	Deselect SDI positive	Yes	No	2824
	13	Deselect SDI negative	Yes	No	2824
Note:	This parameter is only supplied with actual values if SI Motion functions are active. For Safety Integrated Basic Functions (STO), the value is equal to zero.				

r9722.0...15 CO/BO: SI Motion status signals integrated in the drive / SI Mtn integ stat					
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32		
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2840, 2855		
CU250D-2_PN_F					
	Min -	Max -	Factory setting -		
Description:	Status signal for safety-relevant motion monitoring functions integrated in the drive.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	STO or safe pulse cancellation active	Yes	No	-
	01	SS1 active	Yes	No	-
	04	SLS active	Yes	No	-
	07	Internal event	No	Yes	-
	09	Active SLS stage bit 0	Set	Not set	-
	10	Active SLS stage bit 1	Set	Not set	-

12	SDI pos active	Yes	No	2824
13	SDI neg active	Yes	No	2824
15	SSM (speed below limit value)	Yes	No	2823

Notice: Re bit 07:

An internal event is displayed if a STOP A ... F is active.

The signal state behaves in an opposite way to the PROFIsafe Standard.

Note: This parameter is only supplied with actual values if SI Motion functions are active. For Safety Integrated Basic Functions (STO), the value is equal to zero.

r9723.0...16 CO/BO: SI Motion diagnostic signals integrated in the drive / SI Mtn integ diag

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_DP_F			
CU250D-2_PN_F			

Min	Max	Factory setting
-	-	-

Description: Displays the diagnostic signals for safety-relevant motion monitoring functions integrated in the drive.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Forced checking procedure required	Yes	No	-
	01	STOP F and then STOP B active	Yes	No	-
	02	Communication failure	Yes	No	-
	03	Actual value sensing supplies valid value	Yes	No	-
	04	Encoderless act val sensing acc to technique for U/f control	Yes	No	-
	09	Safe pulse cancellation active	Yes	No	-
	12	Test stop active	Yes	No	-
	16	SAM/SBR active	Yes	No	-

Note: Re bit 01:

This bit can be used to execute a control-based ESR.

ESR: Extended Stop and Retract

SAM: Safe Acceleration Monitor (safe acceleration monitoring)

SBR: Safe Brake Ramp (safe brake ramp monitoring)

r9724 SI Motion crosswise comparison clock cycle / SI Mtn CDC clk cyc

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
- [ms]	- [ms]	- [ms]

Description: Displays the crosswise comparison clock cycle.

The value indicates the clock cycle time with which each individual CDC value is compared between the two monitoring channels.

Note: CDC: Crosswise Data Comparison

r9725[0...2] SI Motion diagnostics STOP F / SI Mtn Diag STOP F			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Re index 0: Displays the message value that resulted in the STOP F on the drive. Value = 0: Processor 1 signaled a STOP F. Value = 1 ... 999: Number of the incorrect date in the crosswise data comparison between the monitoring channels. Value >= 1000: Additional diagnostic values of the drive. Re index 1: Displays the value from processor 1 that resulted in the STOP F. Re index 2: Displays the value from processor 2 that resulted in the STOP F.		
Index:	[0] = Message value for CDC [1] = Processor 1 CDC actual value [2] = Processor 2 CDC actual value		
Dependency:	Refer to: C01711		
Note:	The significance of the individual message values is described in message C01711. CDC: Crosswise Data Comparison Re Index 1, 2: When Safety message C01711 with message value >= 1000 occurs, these indices are not supplied with values.		
r9728[0...2] SI Motion actual checksum SI parameters (processor 1) / SI Mtn act CRC P1			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Displays the checksum over the checked Safety Integrated parameters of the motion monitoring functions (actual checksum).		
Index:	[0] = Checksum over SI parameters for motion monitoring [1] = Checksum over SI parameters for actual values [2] = Checksum over SI parameters for hardware		
Dependency:	Refer to: p9729 Refer to: F01680		
p9729[0...2] SI Motion setpoint checksum SI parameters (processor 1) / SI Mtn setp CRC P1			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0000 hex	FFFF FFFF hex	0000 hex
Description:	Sets the checksum using the checksum-tested Safety Integrated parameters for motion monitoring functions (reference checksum).		

Index: [0] = Checksum over SI parameters for motion monitoring
 [1] = Checksum over SI parameters for actual values
 [2] = Checksum over SI parameters for hardware

Dependency: Refer to: r9728
 Refer to: F01680

r9732[0...1] SI Motion velocity resolution / SI Mtn v_res

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
- [rpm]	- [rpm]	- [rpm]

Description: Index 0: Displays the safe velocity resolution (load side). Setpoints for velocity limits or parameter changes for velocities below this threshold have no effect.
 Index 1: Displays the safe velocity accuracy based on the safe encoder accuracy

Index: [0] = Display of the actual velocity resolution
 [1] = Display of the minimum velocity resolution

Note: Index 0: This parameter does not provide any information about the actual accuracy of the velocity sensing. This depends on the type of actual value sensing, the gear factors as well as the quality of the encoder being used.
 Index 1: For a two-encoder system, with just non-safety capable encoders, this means the poorer value of the two encoders. Index[1] takes into account the coarse resolution of the encoder only

r9733[0...2] CO: SI Motion setpoint speed limit effective / SI Mtn setp_lim

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: -	Scaling: p2000	Dyn. index: -
CU250D-2_DP_F	Units group: 3_1	Unit selection: p0505	Func. diagram: 2820, 2824, 3630
CU250D-2_PN_F			

Min	Max	Factory setting
- [rpm]	- [rpm]	- [rpm]

Description: Displays the necessary setpoint speed limit as a result of the selected motion monitoring functions.
 Contrary to the parameterization of the SI limit values, this parameter specifies the motor-side limit value and not the load-side limit value.

Index: [0] = Setpoint limiting positive
 [1] = Setpoint limiting negative
 [2] = Setpoint limit absolute

Dependency: For SLS: $r9733[0] = p9531[x] \times p9533$ (converted from the load side to the motor side)
 For SDI negative: $r9733[0] = 0$
 For SLS: $r9733[1] = -p9531[x] \times p9533$ (converted from the load side to the motor side)
 For SDI positive: $r9733[1] = 0$
 [x] = Selected SLS stage

Conversion factor from the motor side to the load side:
 - motor type = rotary and axis type = linear: $p9522 / (p9521 \times p9520)$
 - otherwise: $p9522 / p9521$

Refer to: p9531, p9533

Notice: If $p1051 = r9733[0]$ is interconnected, $p1052 = r9733[1]$ must also be interconnected and vice versa.
 If only the absolute value of the setpoint velocity limiting is required, $r9733[2]$ must be interconnected.

Note: If the "SLS" function is not selected, $r9733[0]$ shows p1082 and $r9733[1]$ shows -p1082.
 The display in $r9733$ can be delayed by up to one Safety monitoring clock cycle as compared to the display in $r9720$ and $r9722$.

r9734.0...14 CO/BO: SI Safety Info Channel status word S_ZSW1B / SIC S_ZSW1B					
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16		
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -		
CU250D-2_PN_F					
	Min	Max	Factory setting		
	-	-	-		
Description:	Display and BICO output for status word S_ZSW1B of the safety information channel.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	STO active	Yes	No	-
	01	SS1 active	Yes	No	-
	04	SLS active	Yes	No	-
	06	SLS selected	Yes	No	-
	07	Internal event	Yes	No	-
	09	Select SLS bit0	Yes	No	-
	10	Select SLS bit1	Yes	No	-
	12	SDI positive selected	Yes	No	-
	13	SDI neg selected	Yes	No	-
	14	ESR retract requested	Yes	No	-
Notice:	Re bit 07: An internal event is displayed if a STOP A ... F is active. The signal state behaves in an opposite way to the PROFIsafe Standard.				
Note:	This parameter is only supplied with actual values if SI Motion functions are active. For Safety Integrated Basic Functions (STO), the value is equal to zero.				

r9742.0...15 CO/BO: SI Motion drive-integrated status signals (processor 2) / SI Mtn int stat P2					
CU240D-2_DP_F	Access level: 4	Calculated: -	Data type: Unsigned32		
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2840, 2855		
CU250D-2_PN_F					
	Min	Max	Factory setting		
	-	-	-		
Description:	Status signal for safety-relevant motion monitoring functions integrated in the drive.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	STO or safe pulse cancellation active	Yes	No	-
	01	SS1 active	Yes	No	-
	04	SLS active	Yes	No	-
	07	Internal event	No	Yes	-
	09	Active SLS stage bit 0	Set	Not set	-
	10	Active SLS stage bit 1	Set	Not set	-
	15	SSM (speed below limit value)	Yes	No	2823
Notice:	Re bit 07: An internal event is displayed if a STOP A ... F is active. The signal state behaves in an opposite way to the PROFIsafe Standard.				
Note:	This parameter is only supplied with actual values if SI Motion functions are active. For Safety Integrated Basic Functions (STO), the value is equal to zero.				

p9761 SI password input / SI password inp			
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: C, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2800
	Min	Max	Factory setting
	0000 hex	FFFF FFFF hex	0000 hex
Description:	Enters the Safety Integrated password.		

Dependency: Refer to: F01659
Note: It is not possible to change Safety Integrated parameters until the Safety Integrated password has been entered.

p9762 **SI password new / SI password new**

Access level: 3	Calculated: -	Data type: Unsigned32
Can be changed: C(95)	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 2800
Min 0000 hex	Max FFFF FFFF hex	Factory setting 0000 hex

Description: Enters a new Safety Integrated password.
Dependency: A change made to the Safety Integrated password must be acknowledged in the following parameter:
Refer to: p9763

p9763 **SI password acknowledgement / SI ackn password**

Access level: 3	Calculated: -	Data type: Unsigned32
Can be changed: C(95)	Scaling: -	Dyn. index: -
Units group: -	Unit selection: -	Func. diagram: 2800
Min 0000 hex	Max FFFF FFFF hex	Factory setting 0000 hex

Description: Acknowledges the new Safety Integrated password.
Dependency: Refer to: p9762
Note: The new password entered into p9762 must be re-entered in order to acknowledge.
p9762 = p9763 = 0 is automatically set after the new Safety Integrated password has been successfully acknowledged.

r9765 **SI Motion forced checking procedure remaining time (processor 1) / SI Mtn dyn rem P1**

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F	Min - [h]	Max - [h]	Factory setting - [h]

Description: Displays the time remaining until the next dynamization and testing of the safety motion monitoring functions integrated in the drives.
The signal source to initiate the forced checking procedure is parameterized in p9705.
Dependency: Refer to: p9705
Refer to: C01798

r9768[0...7] **SI PROFIsafe receive control words (processor 1) / SI Ps PZD recv P1**

	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting -

Description: Displays the received PROFIsafe telegram on processor 1.
Index: [0] = PZD 1
[1] = PZD 2
[2] = PZD 3
[3] = PZD 4
[4] = PZD 5
[5] = PZD 6

[6] = PZD 7

[7] = PZD 8

Dependency: Refer to: r9769**Note:** The PROFIsafe trailer at the end of the telegram is also displayed (2 words).

r9769[0...7]	SI PROFIsafe send status words (processor 1) / SI Ps PZD send P1		
Access level: 3	Calculated: -	Data type: Unsigned16	
Can be changed: -	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min	Max	Factory setting	
-	-	-	

Description: Displays the PROFIsafe telegram to be sent on processor 1.

Index:
 [0] = PZD 1
 [1] = PZD 2
 [2] = PZD 3
 [3] = PZD 4
 [4] = PZD 5
 [5] = PZD 6
 [6] = PZD 7
 [7] = PZD 8

Dependency: Refer to: r9768**Note:** The PROFIsafe trailer at the end of the telegram is also displayed (2 words).

r9770[0...3]	SI version drive-integrated safety function (processor 1) / SI version Drv P1		
Access level: 3	Calculated: -	Data type: Unsigned16	
Can be changed: -	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: 2802	
Min	Max	Factory setting	
-	-	-	

Description: Displays the Safety Integrated version for the drive-integrated safety functions on processor 1.

Index:
 [0] = Safety Version (major release)
 [1] = Safety Version (minor release)
 [2] = Safety Version (baselevel or patch)
 [3] = Safety Version (hotfix)

Note: Example:
 r9770[0] = 2, r9770[1] = 60, r9770[2] = 1, r9770[3] = 0 --> Safety version V02.60.01.00

r9771	SI common functions (processor 1) / SI general fct P1		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2804
CU250D-2_PN_F	Min	Max	Factory setting
	-	-	-

Description: Displays the supported Safety Integrated monitoring functions.
 Processor 1 determines this display.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	STO supported via terminals	Yes	No	2804
	02	Extended Functions supported (p9501 > 0)	Yes	No	2804
	04	Extended Functions PROFIsafe supported	Yes	No	-
	05	Extended Functions integrated in drive supported (p9601.2 = 1)	Yes	No	-
	06	Basic Functions PROFIsafe supported	Yes	No	-

07	Extended Functions encoderless supported	Yes	No	-
11	Extended Functions SDI supported	Yes	No	-
12	Extended Functions SSM encoderless supported	Yes	No	-

Dependency: Refer to: r9871

Note: STO: Safe Torque Off

r9771 SI common functions (processor 1) / SI general fct P1

CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2804
	Min	Max	Factory setting
	-	-	-

Description: Displays the supported Safety Integrated monitoring functions. Processor 1 determines this display.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	STO supported via terminals	Yes	No	2804
	06	Basic Functions PROFIsafe supported	Yes	No	-

Dependency: Refer to: r9871

Note: STO: Safe Torque Off

r9772.0...20 CO/BO: SI status (processor 1) / SI status P1

CU240D-2_DP_F	Access level: 2	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2804
CU250D-2_PN_F	Min	Max	Factory setting
	-	-	-

Description: Displays the Safety Integrated status on processor 1.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	STO selected on processor 1	Yes	No	2810
	01	STO active on processor 1	Yes	No	2810
	07	STO terminal state on processor 1 (Basic Functions)	High	Low	-
	09	STOP A cannot be acknowledged active	Yes	No	2802
	10	STOP A active	Yes	No	2802
	15	STOP F active	Yes	No	2802
	16	STO cause: Safety comm. mode	Yes	No	-
	17	STO cause selection via terminal (Basic Functions)	Yes	No	-
	18	STO cause: Selection via motion monitoring functions	Yes	No	-
	19	STO cause actual value missing	Yes	No	-
	20	STO cause selection PROFIsafe (Basic Functions)	Yes	No	-

Dependency: Refer to: r9872

Note: Re bit 00:

When STO is selected, the cause is displayed in bits 16 ... 20.

Re bit 18:

When the bit is set, STO is selected via PROFIsafe.

Re bit 19:

For the drive-integrated motion monitoring functions, due to OFF2, no actual value sensing possible.

r9772.0...20		CO/BO: SI status (processor 1) / SI status P1			
CU240D-2_DP	Access level: 2	Calculated: -	Data type: Unsigned32		
CU240D-2_PN	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 2804		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the Safety Integrated status on processor 1.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	STO selected on processor 1	Yes	No	2810
	01	STO active on processor 1	Yes	No	2810
	07	STO terminal state on processor 1 (Basic Functions)	High	Low	-
	09	STOP A cannot be acknowledged active	Yes	No	2802
	10	STOP A active	Yes	No	2802
	15	STOP F active	Yes	No	2802
	16	STO cause: Safety comm. mode	Yes	No	-
	17	STO cause selection via terminal (Basic Functions)	Yes	No	-
	20	STO cause selection PROFIsafe (Basic Functions)	Yes	No	-
Dependency:	Refer to: r9872				
Note:	Re bit 00: When STO is selected, the cause is displayed in bits 16 ... 20.				
	Re bit 18: When the bit is set, STO is selected via PROFIsafe.				
	Re bit 19: For the drive-integrated motion monitoring functions, due to OFF2, no actual value sensing possible.				
r9773.0...31		CO/BO: SI status (processor 1 + processor 2) / SI status P1+P2			
	Access level: 2	Calculated: -	Data type: Unsigned32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 2804		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the Safety Integrated status on the drive (processor 1 + processor 2).				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	STO selected in drive	Yes	No	2804
	01	STO active in drive	Yes	No	2804
	31	Shutdown paths must be tested	Yes	No	2810
Note:	This status is formed from the AND operation of the relevant status of the two monitoring channels.				
r9776		SI diagnostics / SI diag			
	Access level: 4	Calculated: -	Data type: Unsigned32		
	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: -		
	Min	Max	Factory setting		
	-	-	-		
Description:	The parameter is used for diagnostics.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Safety parameter changed POWER ON required	Yes	No	-
Note:	Re bit 00 = 1: At least one Safety parameter has been changed that will only take effect after a POWER ON.				

r9780	SI monitoring clock cycle (processor 1) / SI mon_clk cyc P1		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2802
	Min - [ms]	Max - [ms]	Factory setting - [ms]
Description:	Displays the clock cycle time for the Safety Integrated Basic Functions on processor 1.		
Note:	Information regarding the relationship between monitoring clock cycle and response times can be found in the following references: - SINAMICS S120 Function Manual Safety Integrated - technical documentation for the particular product		
r9781[0...1]	SI checksum to check changes (processor 1) / SI chg chksm P1		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting -
Description:	Displays the checksum for tracking changes for Safety Integrated. These are additional checksums that are created to track changes (fingerprint for the "safety logbook" functionality) to safety parameters (that are relevant for checksums).		
Index:	[0] = SI checksum to track functional changes [1] = SI checksum to track hardware-specific changes		
Dependency:	Refer to: p9601, p9729, p9799 Refer to: F01690		
r9782[0...1]	SI time stamp to check changes (processor 1) / SI chg t P1		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [h]	Max - [h]	Factory setting - [h]
Description:	Displays the time stamps for the checksums for tracking changes for Safety Integrated. The time stamps for the checksums for tracking changes (fingerprint for the "safety logbook" functionality) made to safety parameters are saved in parameters p9781[0] and p9781[1].		
Index:	[0] = SI time stamp for checksum to track functional changes [1] = SI time stamp for checksum to track hardware-specific changes		
Dependency:	Refer to: p9601, p9729, p9799 Refer to: F01690		
r9784[0...1]	SI Motion diagnostics sensorless acceleration / Diag sl a		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F	Min - [rev/s ²]	Max - [rev/s ²]	Factory setting - [rev/s ²]
Description:	Display to diagnose acceleration values of the encoderless actual values sensing.		
Index:	[0] = Setpoint acceleration value [1] = Actual acceleration value		
Dependency:	Refer to: p9589		

List of parameters

Note: Re index 0:
Shows the parameterized acceleration value of p9589.
Re index 1:
Shows the actually measured acceleration values of the encoderless actual value sensing

r9785[0...1]	SI Motion diagnostics sensorless minimum current / Diag sl I_min		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: 6_3	Unit selection: p0505	Func. diagram: -
CU250D-2_PN_F			
	Min - [mA]	Max - [mA]	Factory setting - [mA]
Description:	Display to diagnose currents of the encoderless actual value sensing.		
Index:	[0] = Minimum current parameterized [1] = Minimum current measured		
Dependency:	Refer to: p9588		
Note:	Re index 0: Displays the parameterized minimum current of p9588. Re index 1: Displays the currently measured current of the encoderless actual value sensing		

r9786[0...2]	SI Motion diagnostics sensorless angle / Diag sl angle		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min - [°]	Max - [°]	Factory setting - [°]
Description:	Display to diagnose the angle for sensorless actual value sensing.		
Index:	[0] = Plausibility angle actual value [1] = Voltage angle actual value [2] = Current angle actual value		
Dependency:	Refer to: p9585		
Note:	Re index 0: Displays the actual plausibility angle. Re index 1: Displays the actual voltage angle. Re index 2: Displays the actual current angle.		

r9787	SI Motion diagnostics sensorless velocity deviation / Diag sl v_dev		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min - [rpm]	Max - [rpm]	Factory setting - [rpm]
Description:	Displays the actual velocity deviation for sensorless actual value sensing. This value is calculated when setting p9585/p9385. The actual velocity has a deviation of +/- r9787 for 6 ms * p9585/p9385 within a monitoring time of 1 s.		
Dependency:	Refer to: p9585		
Note:	For linear axes, the following unit applies: millimeters per minute For rotary axes, the following unit applies: revolutions per minute		

r9794[0...19]	SI crosswise comparison list (processor 1) / SI CDC_list P1		
	Access level: 3	Calculated: -	Data type: Unsigned16
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2802
	Min	Max	Factory setting
	-	-	-
Description:	Displays the numbers of the data items that are currently being compared crosswise on processor 1. The content of the list of crosswise-compared data is dependent upon the particular application.		
Note:	Example: r9794[0] = 1 (monitoring clock cycle) r9794[1] = 2 (enable safety functions) r9794[2] = 3 (F-DI changeover, tolerance time) ... A complete list of numbers for crosswise-compared data items appears in fault F01611.		
r9795	SI diagnostics STOP F (processor 1) / SI diag STOP F P1		
	Access level: 2	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2802
	Min	Max	Factory setting
	-	-	-
Description:	Displays the number of the cross-compared data item which caused STOP F on processor 1.		
Dependency:	Refer to: F01611		
Note:	A complete list of numbers for crosswise-compared data items appears in fault F01611.		
r9798	SI actual checksum SI parameters (processor 1) / SI act chksm P1		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2800
	Min	Max	Factory setting
	-	-	-
Description:	Displays the checksum for the Safety Integrated parameters checked using checksums on processor 1 (actual checksum).		
Dependency:	Refer to: p9799, r9898		
p9799	SI setpoint checksum SI parameters (processor 1) / SI setp_chksm P1		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: C(95)	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2800
	Min	Max	Factory setting
	0000 hex	FFFF FFFF hex	0000 hex
Description:	Sets the checksum for the Safety Integrated parameters checked using checksums on processor 1 (setpoint checksum).		
Dependency:	Refer to: r9798, p9899		

p9801 SI enable functions integrated in the drive (processor 2) / SI enable fct P2				
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16	
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -	
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -	
CU250D-2_PN_F				
	Min	Max	Factory setting	
	-	-	0000 bin	
Description:	Sets the enable signals for the safety functions integrated in the drive and the type of selection on processor 1. Not all of the settings listed below will be permissible, depending on the Control Unit and Power Module being used: 0000 hex: Safety functions integrated in the drive inhibited (no safety function). 0001 hex: Basic functions are enabled via onboard terminals (permissible for r9771.0 = 1). 0004 hex: Extended functions are enabled via onboard terminals (permissible for r9771.5 = 1). 0008 hex: Basic functions are enabled via PROFIsafe (permissible for r9771.6 = 1). 0009 hex: Basic functions are enabled via PROFIsafe onboard terminals (permissible for r9771.6 = 1). 000C hex: Extended functions are enabled via PROFIsafe (permissible for r9771.4 = 1). 000D hex: Extended functions are enabled via PROFIsafe and basic functions via onboard terminals (permissible for r9771.4 = 1).			
Bit field:	Bit	Signal name	1 signal	0 signal
	00	Enable STO via terminals (processor 2)	Enable	Inhibit
	02	Enable drive_integr motion_monitoring functions (processor 2)	Enable	Inhibit
	03	Enable PROFIsafe (processor 2)	Enable	Inhibit
Dependency:	Refer to: p9601, r9871			
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.			
Note:	A change only becomes effective after a POWER ON. STO: Safe Torque Off			

p9801 SI enable functions integrated in the drive (processor 2) / SI enable fct P2				
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16	
CU240D-2_PN	Can be changed: C(95)	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min	Max	Factory setting	
	-	-	0000 bin	
Description:	Sets the enable signals for the safety functions integrated in the drive and the type of selection on processor 1. Not all of the settings listed below will be permissible, depending on the Control Unit and Power Module being used: 0000 hex: Safety functions integrated in the drive inhibited (no safety function). 0001 hex: Basic functions are enabled via onboard terminals (permissible for r9771.0 = 1). 0004 hex: Extended functions are enabled via onboard terminals (permissible for r9771.5 = 1). 0008 hex: Basic functions are enabled via PROFIsafe (permissible for r9771.6 = 1). 0009 hex: Basic functions are enabled via PROFIsafe onboard terminals (permissible for r9771.6 = 1).			

000C hex:

Extended functions are enabled via PROFIsafe (permissible for r9771.4 = 1).

000D hex:

Extended functions are enabled via PROFIsafe and basic functions via onboard terminals (permissible for r9771.4 = 1).

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Enable STO via terminals (processor 2)	Enable	Inhibit	2810
	03	Enable PROFIsafe (processor 2)	Enable	Inhibit	-

Dependency: Refer to: p9601, r9871

Notice: This parameter is overwritten by the copy function of the safety functions integrated in the drive.

Note: A change only becomes effective after a POWER ON.
STO: Safe Torque Off

p9810	SI PROFIsafe address (processor 2) / SI PROFIsafe P2		
Access level: 3	Calculated: -	Data type: Unsigned16	
Can be changed: C(95)	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min 0000 hex	Max FFFE hex	Factory setting 0000 hex	
Description:	Sets the PROFIsafe address on processor 2.		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		

p9850	SI F-DI changeover tolerance time (processor 2) / SI F-DI_chg tol P2		
Access level: 3	Calculated: -	Data type: FloatingPoint32	
Can be changed: C(95)	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: 2810	
Min 0.00 [µs]	Max 2000000.00 [µs]	Factory setting 500000.00 [µs]	
Description:	Sets the tolerance time for the changeover of the failsafe digital input for STO on processor 2. An F-DI changeover is not effective simultaneously due to the different runtimes in the two monitoring channels. After an F-DI changeover, dynamic data is not subject to a crosswise data comparison during this tolerance time.		
Dependency:	Refer to: p9650		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
Note:	For a crosswise data comparison between p9650 and p9850, a difference of one Safety monitoring clock cycle is tolerated. The parameterized time is rounded internally to an integer multiple of the monitoring clock cycle. F-DI: Failsafe Digital Input		

p9851	SI STO debounce time (processor 2) / SI STO t_debou P2		
Access level: 3	Calculated: -	Data type: FloatingPoint32	
Can be changed: C(95)	Scaling: -	Dyn. index: -	
Units group: -	Unit selection: -	Func. diagram: -	
Min 0.00 [µs]	Max 100000.00 [µs]	Factory setting 0.00 [µs]	
Description:	Sets the debounce time for the failsafe digital inputs used to control the "STO" function. The debounce time is rounded to whole milliseconds.		
Dependency:	Refer to: p9651		
Notice:	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
Note:	Rounding effects can occur in the last decimal place of the parameterized time. The debounce time is rounded to whole milliseconds. It specifies the maximum duration of a fault pulse at the fail-safe digital inputs with no reaction/influence on the selection or deselection of the Safety Basic Functions.		

Example:

Debounce time = 1 ms: Fault pulses of 1 ms are filtered; only pulses longer than 2 ms are processed.

Debounce time = 3 ms: Fault pulses of 3 ms are filtered; only pulses longer than 4 ms are processed.

r9871		SI common functions (processor 2) / SI common fct P2			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32		
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2804		
CU250D-2_PN_F					
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the supported Safety Integrated monitoring functions. Processor 2 determines this display.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	STO supported via terminals	Yes	No	2804
	02	Extended Functions supported (p9501 > 0)	Yes	No	2804
	04	Extended Functions PROFIsafe supported	Yes	No	-
	05	Extended Functions integrated in drive supported (p9601.2 = 1)	Yes	No	-
	06	Basic Functions PROFIsafe supported	Yes	No	-
	07	Extended Functions encoderless supported	Yes	No	-
	11	Extended Functions SDI supported	Yes	No	-
	12	Extended Functions SSM encoderless supported	Yes	No	-
Dependency:	Refer to: r9771				
Note:	STO: Safe Torque Off				

r9871		SI common functions (processor 2) / SI common fct P2			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32		
CU240D-2_PN	Can be changed: -	Scaling: -	Dyn. index: -		
	Units group: -	Unit selection: -	Func. diagram: 2804		
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the supported Safety Integrated monitoring functions. Processor 2 determines this display.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	STO supported via terminals	Yes	No	2804
	06	Basic Functions PROFIsafe supported	Yes	No	-
Dependency:	Refer to: r9771				
Note:	STO: Safe Torque Off				

r9872.0...20		CO/BO: SI status (processor 2) / SI Status P2			
CU240D-2_DP_F	Access level: 2	Calculated: -	Data type: Unsigned32		
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2804		
CU250D-2_PN_F					
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the Safety Integrated status on processor 2.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	STO selected on processor 2	Yes	No	2810
	01	STO active on processor 2	Yes	No	2810
	07	STO terminal state on processor 2 (Basic Functions)	High	Low	-

09	STOP A cannot be acknowledged active	Yes	No	2802
10	STOP A active	Yes	No	2802
15	STOP F active	Yes	No	2802
16	STO cause: Safety comm. mode	Yes	No	-
17	STO cause selection via terminal (Basic Functions)	Yes	No	-
18	STO cause: Selection via motion monitoring functions	Yes	No	-
20	STO cause selection PROFIsafe (Basic Functions)	Yes	No	-

Dependency: Refer to: r9772

Note: Re bit 00:
When STO is selected, the cause is displayed in bits 16 ... 20.
Re bit 18:
When the bit is set, STO is selected via PROFIsafe.

r9872.0...20 CO/BO: SI status (processor 2) / SI Status P2

CU240D-2_DP	Access level: 2	Calculated: -	Data type: Unsigned32
CU240D-2_PN	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2804
	Min	Max	Factory setting
	-	-	-

Description: Displays the Safety Integrated status on processor 2.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	STO selected on processor 2	Yes	No	2810
	01	STO active on processor 2	Yes	No	2810
	07	STO terminal state on processor 2 (Basic Functions)	High	Low	-
	09	STOP A cannot be acknowledged active	Yes	No	2802
	10	STOP A active	Yes	No	2802
	15	STOP F active	Yes	No	2802
	16	STO cause: Safety comm. mode	Yes	No	-
	17	STO cause selection via terminal (Basic Functions)	Yes	No	-
	20	STO cause selection PROFIsafe (Basic Functions)	Yes	No	-

Dependency: Refer to: r9772

Note: Re bit 00:
When STO is selected, the cause is displayed in bits 16 ... 20.
Re bit 18:
When the bit is set, STO is selected via PROFIsafe.

r9898 SI actual checksum SI parameters (processor 2) / SI act_chksm P2

	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2800
	Min	Max	Factory setting
	-	-	-

Description: Displays the checksum for the Safety Integrated parameters checked using checksums on processor 2 (actual checksum).

Dependency: Refer to: r9798, p9899

p9899	SI setpoint checksum SI parameters (processor 2) / SI setp_chksm P2		
	Access level: 3	Calculated: -	Data type: Unsigned32
	Can be changed: C(95)	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: 2800
	Min 0000 hex	Max FFFF FFFF hex	Factory setting 0000 hex
Description:	Sets the checksum for the Safety Integrated parameters checked using checksums on processor 2 (setpoint checksum).		
Dependency:	Refer to: p9799, r9898		
r9925[0...99]	Firmware file incorrect / FW file incorr		
	Access level: 3	Calculated: -	Data type: Unsigned8
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting -
Description:	Displays the directory and name of the file whose status as shipped from the factory was identified as impermissible.		
Dependency:	Refer to: r9926 Refer to: A01016		
Note:	The directory and name of the file is displayed in the ASCII code.		
r9926	Firmware check status / FW check status		
	Access level: 3	Calculated: -	Data type: Unsigned8
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting -
Description:	Displays the status when the firmware is checked when the system is booted. 0: Firmware not yet checked. 1: Check running. 2: Check successfully completed. 3: Check indicates an error.		
Dependency:	Refer to: r9925 Refer to: A01016		
p9930[0...8]	System logbook activation / SYSLOG activation		
	Access level: 4	Calculated: -	Data type: Unsigned8
	Can be changed: U, T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min 0	Max 255	Factory setting 0
Description:	Only for service purposes.		
Index:	[0] = System logbook stage (0: Not active) [1] = COM2/COM1 (0: COM2, 1: COM1) [2] = Activate file write (0: Not active) [3] = Display time stamp (0: Not displayed) [4...7] = Reserved [8] = System logbook file size (stages, each 10 kB)		
Notice:	Before powering down the Control Unit, ensure that the system logbook is switched out (p9930[0] = 0). If writing to the file is activated (p9930[2] = 1), writing to the file must be de-activated again before switching off the Control Unit (p9930[2] = 0) in order to ensure that the system logbook has been completely written to the file.		

p9931[0...129]	System logbook module selection / SYSLOG mod select			
	Access level: 4	Calculated: -	Data type: Unsigned32	
	Can be changed: U, T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min 0000 hex	Max FFFF FFFF hex	Factory setting 0000 hex	
Description:	Only for service purposes.			
p9932	Save system logbook EEPROM / SYSLOG EEPROM save			
	Access level: 4	Calculated: -	Data type: Unsigned8	
	Can be changed: U, T	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min 0	Max 255	Factory setting 0	
Description:	Only for service purposes.			
r9935.0	BO: POWER ON delay signal / POWER ON t_delay			
	Access level: 4	Calculated: -	Data type: Unsigned8	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min -	Max -	Factory setting -	
Description:	Display and binector output for a delay after POWER ON. After power-on, binector output r9935.0 is set with the start of the first sampling time and is again reset after approx. 100 ms.			
Bit field:	Bit	Signal name	1 signal	0 signal
	00	POWER ON delay signal	High	Low
				FP -
r9975[0...7]	System utilization measured / Sys util meas			
	Access level: 4	Calculated: -	Data type: FloatingPoint32	
	Can be changed: -	Scaling: -	Dyn. index: -	
	Units group: -	Unit selection: -	Func. diagram: -	
	Min - [%]	Max - [%]	Factory setting - [%]	
Description:	Displays the measured system utilization. The higher the value displayed, the higher the system utilization.			
Index:	[0] = Computing time utilization (min) [1] = Computing time utilization (averaged) [2] = Computing time utilization (max) [3] = Largest total utilization (min) [4] = Largest total utilization (averaged) [5] = Largest total utilization (max) [6] = Reserved [7] = Reserved			
Dependency:	Refer to: r9976 Refer to: F01054, F01205			
Note:	Re index 3 ... 5: The total utilizations are determined using all sampling times used. The largest total utilizations are mapped here. The sampling time with the largest total utilization is displayed in r9979. Total utilization: Computing time load of sampling time involved including load from higher-priority sampling times (interrupts).			

r9976[0...7]	System utilization / Sys util		
	Access level: 3	Calculated: -	Data type: FloatingPoint32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min - [%]	Max - [%]	Factory setting - [%]
Description:	Displays the system utilization. If the utilization is greater than 100%, fault F01054 is output.		
Index:	[0] = Reserved [1] = Computing time utilization [2] = Reserved [3] = Reserved [4] = Reserved [5] = Largest total utilization [6] = Reserved [7] = Reserved		
Dependency:	Refer to: F01054, F01205		
Note:	Re index 1: The value shows the total computing time load of the system. Re index 5: The total utilization is determined using all sampling times used. The largest total utilization is mapped here. The sampling time with the largest total utilization is displayed in r9979. Total utilization: Computing time load of sampling time involved including load from higher-priority sampling times (interrupts).		
r9999[0...99]	Software error internal supplementary diagnostics / SW_err int diag		
	Access level: 4	Calculated: -	Data type: Unsigned32
	Can be changed: -	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min -	Max -	Factory setting -
Description:	Diagnostics parameter to display additional information for internal software errors.		
Note:	Only for internal Siemens troubleshooting.		
p10001	SI delay time for test stop at DO / SI t_delay DO		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F	Min 4.00 [ms]	Max 2000.00 [ms]	Factory setting 500.00 [ms]
Description:	Sets the delay time for testing the digital output. Within this time, for a forced checking procedure of the digital output, the signal must have been detected via the corresponding readback input (p10047).		
Dependency:	Refer to: p10003, p10007, p10017, p10046		
Note:	The delay time must be set to a value greater than the debounce time (p10017). Regardless of p10001, the forced checking procedure will pause for at least two safety monitoring clock cycles between each stage of the test. The test stop is only performed if the safety output is being used (see p10042).		

p10002	SI discrepancy monitoring time (processor 1) / SI discrpt t_mon P1		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 1.00 [ms]	Max 2000.00 [ms]	Factory setting 500.00 [ms]
Description:	Sets the monitoring time for the discrepancy for the digital inputs. The signal states at the two associated digital inputs (F-DI) must assume the same state within this monitoring time.		
Dependency:	Refer to: p10102		
Note:	F-DI: Failsafe Digital Input		
p10003	SI forced checking procedure timer / SI FCP Timer		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 0.00 [h]	Max 8760.00 [h]	Factory setting 8.00 [h]
Description:	Sets the time to carry out the forced checking procedure (test stop). Within the parameterized time, the digital inputs/outputs must have been subject to a forced checking procedure at least once.		
Dependency:	Refer to: p10002, p10007, p10046		
p10006	SI acknowledgement internal event F-DI (processor 1) / SI ackn int evt P1		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min 0	Max 255	Factory setting 0
Description:	Select a fail-safe digital input for the signal "acknowledge internal event" (internal fault). The falling edge at this input resets the status "internal event" in the drives. The rising edge at this input acknowledges any existing discrepancy errors.		
Value:	0: Statically active 1: F-DI 0 2: F-DI 1 3: F-DI 2 255: Statically inactive		
Dependency:	Refer to: p10106 Refer to: A01666, A30666		
Note:	The values "static active" and "static inactive" result in an inactive function of the safe acknowledgment. F-DI: Failsafe Digital Input		

p10007	BI: SI forced checking procedure F-DO signal source / SI FCP F-DO s_src		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2848
CU250D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Selects an input terminal to start the test stop. The test stop is started with a 0/1 signal at the input terminal and is then only possible if the drive is not in commissioning mode.		
Dependency:	Refer to: p10001, p10002, p10003, p10046		
p10017	SI digital inputs debounce time (processor 1) / SI DI t_debounceP1		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0.00 [ms]	100.00 [ms]	1.00 [ms]
Description:	Sets the debounce time for digital inputs. The debounce time is accepted rounded off to whole milliseconds. The debounce time acts on the following digital inputs: - Fail-safe digital inputs (F-DI). - Single-channel digital inputs (DI). - Single-channel digital input 5 (DI 5, read back input for the forced checking procedure).		
Dependency:	Refer to: p10117		
Note:	Example: Debounce time = 1 ms: Fault pulses of 1 ms are filtered; only pulses longer than 2 ms are processed. Debounce time = 3 ms: Fault pulses of 3 ms are filtered; only pulses longer than 4 ms are processed. The debounce result can be read in r10051.		
p10022	SI STO input terminal (processor 1) / SI STO F-DI P1		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0	255	0
Description:	Sets the fail-safe digital input (F-DI) for the "STO" function.		
Value:	0: Statically active 1: F-DI 0 2: F-DI 1 3: F-DI 2 255: Statically inactive		
Dependency:	Refer to: p10122		
Note:	If value = 0: No terminal assigned, safety function always active. If value = 255: No terminal assigned, safety function always inactive. F-DI: Failsafe Digital Input STO: Safe Torque Off		

p10023	SI SS1 input terminal (processor 1) / SI SS1 F-DI P1		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0	255	0
Description:	Sets the fail-safe digital input (F-DI) for the "SS1" function.		
Value:	0: Statically active 1: F-DI 0 2: F-DI 1 3: F-DI 2 255: Statically inactive		
Dependency:	Refer to: p10123		
Note:	If value = 0: No terminal assigned, safety function always active. If value = 255: No terminal assigned, safety function always inactive. F-DI: Failsafe Digital Input SS1: Safe Stop 1		

p10026	SI SLS input terminal (processor 1) / SI SLS F-DI P1		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0	255	0
Description:	Sets the fail-safe digital input (F-DI) for the "SLS" function.		
Value:	0: Statically active 1: F-DI 0 2: F-DI 1 3: F-DI 2 255: Statically inactive		
Dependency:	Refer to: p10126		
Note:	If value = 0: No terminal assigned, safety function always active. If value = 255: No terminal assigned, safety function always inactive. F-DI: Failsafe Digital Input SLS: Safely-Limited Speed		

p10030	SI SDI positive input terminal (processor 1) / SI SDI pos F-DI P1		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0	255	0
Description:	Sets the fail-safe digital input (F-DI) for the "SDI positive" function.		
Value:	0: Statically active 1: F-DI 0 2: F-DI 1		

List of parameters

3: F-DI 2
 255: Statically inactive
Note: If value = 0:
 No terminal assigned, safety function always active.
 If value = 255:
 No terminal assigned, safety function always inactive.
 F-DI: Failsafe Digital Input
 SDI: Safe Direction

p10031 SI SDI negative input terminal (processor 1) / SI SDI neg F-DI P1

CU240D-2_DP_F **Access level:** 3 **Calculated:** - **Data type:** Integer16
 CU240D-2_PN_F **Can be changed:** C(95) **Scaling:** - **Dyn. index:** -
 CU250D-2_DP_F **Units group:** - **Unit selection:** - **Func. diagram:** -
 CU250D-2_PN_F

Min	Max	Factory setting
0	255	0

Description: Sets the fail-safe digital input (F-DI) for the "SDI negative" function.
Value: 0: Statically active
 1: F-DI 0
 2: F-DI 1
 3: F-DI 2
 255: Statically inactive
Note: If value = 0:
 No terminal assigned, safety function always active.
 If value = 255:
 No terminal assigned, safety function always inactive.
 F-DI: Failsafe Digital Input
 SDI: Safe Direction

p10039 SI Safe State signal selection / SI Safe State Sel

CU240D-2_DP_F **Access level:** 3 **Calculated:** - **Data type:** Unsigned32
 CU240D-2_PN_F **Can be changed:** C(95) **Scaling:** - **Dyn. index:** -
 CU250D-2_DP_F **Units group:** - **Unit selection:** - **Func. diagram:** 2856
 CU250D-2_PN_F

Min	Max	Factory setting
-	-	0000 0001 bin

Description: Sets the signals for the drive group specific signal "Safe State".

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Power_removed	Selected	Not selected	-
	01	SS1_active	Selected	Not selected	-
	04	SLS_active	Selected	Not selected	-
	05	SDI_pos_active	Selected	Not selected	-
	06	SDI_neg_active	Selected	Not selected	-

p10042[0...5] SI F-DO 0 signal sources / SI F-DO 0 S_src

CU240D-2_DP_F **Access level:** 3 **Calculated:** - **Data type:** Integer16
 CU240D-2_PN_F **Can be changed:** C(95) **Scaling:** - **Dyn. index:** -
 CU250D-2_DP_F **Units group:** - **Unit selection:** - **Func. diagram:** 2877
 CU250D-2_PN_F

Min	Max	Factory setting
0	13	0

Description: Sets the signal sources for F-DO 0 (X131.5).
 The 6 signal sources in p10042[0...5] are AND'ed and the result is output at F-DO 0.

Value:	0: No function
	1: STO active
	2: SS1 active
	5: SLS active
	6: SSM feedback signal active
	7: Safe state
	9: Internal event
	12: SDI positive active
	13: SDI negative active
Index:	[0] = AND logic operation input 1
	[1] = AND logic operation input 2
	[2] = AND logic operation input 3
	[3] = AND logic operation input 4
	[4] = AND logic operation input 5
	[5] = AND logic operation input 6
Note:	F-DO: Failsafe Digital Output

p10046	SI F-DO feedback signal input activation / SI F-DO FS act				
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32		
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -		
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -		
CU250D-2_PN_F					
	Min	Max	Factory setting		
	-	-	0000 bin		
Description:	Activates the readback input for the safety digital output (F-DO) The test mode for the particular safety digital output is set in p10047.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Test F-DO 0	Test active	No test	-
Dependency:	Refer to: p10001, p10003, p10007, p10047				
Note:	The test stop is only performed if the safety output of the Control Unit is being used (see p10042).				

p10047	SI F-DO test stop mode / SI F-DO test mode			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16	
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -	
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -	
CU250D-2_PN_F				
	Min	Max	Factory setting	
	2	4	4	
Description:	Sets the test stop mode for the safety digital output (F-DO)			
Value:	2: Test mode 2 read back F-DO in DI (relay circuit)			
	3: Test mode 3 read back F-DO in DI (actuator with feedback signal)			
	4: Test mode 4 evaluation of two internal diagnostic signals			
Dependency:	Refer to: p10001, p10003, p10007, p10046			
Note:	The test stop is only performed if the safety output is being used (see p10042).			

r10049	SI F-DI monitoring status (processor 1) / SI F-DI status P1			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32	
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -	
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -	
CU250D-2_PN_F				
	Min	Max	Factory setting	
	-	-	-	
Description:	Displays the monitoring status of the fail-safe digital inputs (F-DI). The F-DIs that are being used by the Safety Integrated functions are displayed. If the module used has fewer than 3 F-DIs, "Freely available" is displayed for the F-DIs which are not in use.			

List of parameters

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	F-DI 0	Safety monitored	Freely available	-
	01	F-DI 1	Safety monitored	Freely available	-
	02	F-DI 2	Safety monitored	Freely available	-

Dependency: p10006 / p10106
p10022 / p10122
p10023 / p10123
p10026 / p10126
p10030 / p10130
p10031 / p10131
Refer to: r10149

p10050 SI PROFIsafe F-DI transfer (processor 1) / SI Ps F-DI tran P1

CU240D-2_DP_F **Access level:** 3 **Calculated:** - **Data type:** Unsigned32
CU240D-2_PN_F **Can be changed:** C(95) **Scaling:** - **Dyn. index:** -
CU250D-2_DP_F **Units group:** - **Unit selection:** - **Func. diagram:** -
CU250D-2_PN_F

Min	Max	Factory setting
-	-	0000 bin

Description: Setting for the transfer and evaluation of failsafe digital inputs (F-DI) via PROFIsafe. The safe state of the selected F-DIs is transferred to the F-control via PROFIsafe. The F-DIs are monitored for discrepancies. Discrepancy faults can be acknowledged via PROFIsafe.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	F-DI 0 processor 1	Transfer	No transfer	-
	01	F-DI 1 processor 1	Transfer	No transfer	-
	02	F-DI 2 processor 1	Transfer	No transfer	-

Dependency: Refer to: p10150

Note: F-DI: Failsafe Digital Input

r10051.0...2 CO/BO: SI digital inputs status (processor 1) / SI DI status P1

CU240D-2_DP_F **Access level:** 3 **Calculated:** - **Data type:** Unsigned32
CU240D-2_PN_F **Can be changed:** - **Scaling:** - **Dyn. index:** -
CU250D-2_DP_F **Units group:** - **Unit selection:** - **Func. diagram:** -
CU250D-2_PN_F

Min	Max	Factory setting
-	-	-

Description: Displays the single-channel, logical, and debounced status of the fail-safe digital inputs (F-DI). The parameter is updated in the SI Motion monitoring clock cycle.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	F-DI 0 processor 1	High	Low	-
	01	F-DI 1 processor 1	High	Low	-
	02	F-DI 2 processor 1	High	Low	-

Dependency: Refer to: p9501, p9601, p10017, p10050, r10151

Note: If a safety function is assigned to an input (e.g. via p10022), then the following applies:

- logical "0": Safety function is selected
- logical "1": Safety function is de-selected

The interrelationship between the logical level and the external voltage level at the input depends on the parameterization (refer to p10040) of the input as either NC or NO contact and is aligned to the use of a safety function:

With 24 V at the input, NC contacts have a logical "1" level, for 0 V at the input, a logical "0" level.

This means that an NC/NC contact parameterization of 0 V at both inputs of the F-DI selects the safety function, for 24 V at both inputs, de-selects the safety function.

With 24 V at the input, NO contacts have a logical "0" level, for 0 V at the input, a logical "1" level.

This means that for an NC/NO contact parameterization, the level 0 V/24 V selects the safety function, the level 24 V/0 V de-selects the safety function.

F-DI: Failsafe Digital Input

The state of parameter r10151 is delayed by one monitoring clock cycle in relation to r10051.

The parameter is only updated in the following cases:

- If the Safety Extended Functions are enabled by means of activation via F-DI.
- If transfer of the F-DIs via PROFIsafe is enabled (see p9501).

In this case only the F-DIs transferred for PROFIsafe are displayed and updated (see p10050/p10150). All F-DIs which have not been transferred have a static zero value.

r10052.0		CO/BO: SI digital outputs status (processor 1) / SI DO status P1			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32		
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -		
CU250D-2_PN_F					
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the status of the digital output of processor 1.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	F-DO 0 processor 1	High	Low	2853
Note:	F-DO: Failsafe Digital Output				
p10101		SI delay time for test stop at DO / SI t_delay DO			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32		
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -		
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -		
CU250D-2_PN_F					
	Min	Max	Factory setting		
	4.00 [ms]	2000.00 [ms]	500.00 [ms]		
Description:	Sets the delay time for testing the digital output. Within this time, for a forced checking procedure of the digital output, the signal must have been detected via the corresponding readback input (p10047).				
Dependency:	Refer to: p10003, p10007, p10046				
Note:	The delay time must be set to a value greater than the debounce time (p10017). Regardless of p10001, the forced checking procedure will pause for at least two safety monitoring clock cycles between each stage of the test. The test stop is only performed if the safety output is being used (p10142).				
p10102		SI discrepancy monitoring time (processor 2) / SI discr t_mon P2			
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32		
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -		
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2850, 2851		
CU250D-2_PN_F					
	Min	Max	Factory setting		
	1.00 [ms]	2000.00 [ms]	500.00 [ms]		
Description:	Sets the monitoring time for the discrepancy for the digital inputs. The signal states at the two associated digital inputs (F-DI) must assume the same state within this monitoring time.				
Dependency:	Refer to: p10002				
Note:	F-DI: Failsafe Digital Input				

p10106		SI acknowledgement internal event F-DI (processor 2) / SI ackn int evt P2	
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0	255	0
Description:	Select a fail-safe digital input for the signal "acknowledge internal event" (internal fault). The falling edge at this input resets the status "internal event" in the drives.		
Value:	0: Statically active 1: F-DI 0 2: F-DI 1 3: F-DI 2 255: Statically inactive		
Dependency:	Refer to: p10006		
Note:	The values "static active" and "static inactive" result in an inactive function of the safe acknowledgment. F-DI: Failsafe Digital Input		
p10117		SI digital inputs debounce time (processor 2) / SI DI t_debounceP2	
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0.00 [ms]	100.00 [ms]	1.00 [ms]
Description:	Sets the debounce time for digital inputs. The debounce time acts on the following digital inputs: - Fail-safe digital inputs (F-DI). - Single-channel digital input 2 (DI 2, read back input for the forced checking procedure). The debounce time is accepted rounded off to whole milliseconds.		
Dependency:	Refer to: p10017		
Note:	Example: Debounce time = 1 ms: Fault pulses of 1 ms are filtered; only pulses longer than 2 ms are processed. Debounce time = 3 ms: Fault pulses of 3 ms are filtered; only pulses longer than 4 ms are processed. The debounce result can be read in r10151.		
p10122		SI STO input terminal (processor 2) / SI STO F-DI P2	
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0	255	0
Description:	Sets the fail-safe digital input (F-DI) for the "STO" function.		
Value:	0: Statically active 1: F-DI 0 2: F-DI 1 3: F-DI 2 255: Statically inactive		
Dependency:	Refer to: p10022		
Note:	If value = 0: No terminal assigned, safety function always active.		

If value = 255:
 No terminal assigned, safety function always inactive.
 F-DI: Failsafe Digital Input
 STO: Safe Torque Off

p10123	SI SS1 input terminal (processor 2) / SI SS1 F-DI P2		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0	255	0
Description:	Sets the fail-safe digital input (F-DI) for the "SS1" function.		
Value:	0: Statically active 1: F-DI 0 2: F-DI 1 3: F-DI 2 255: Statically inactive		
Dependency:	Refer to: p10023		
Note:	If value = 0: No terminal assigned, safety function always active. If value = 255: No terminal assigned, safety function always inactive. F-DI: Failsafe Digital Input SS1: Safe Stop 1		

p10126	SI SLS input terminal (processor 2) / SI SLS F-DI P2		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0	255	0
Description:	Sets the fail-safe digital input (F-DI) for the "SLS" function.		
Value:	0: Statically active 1: F-DI 0 2: F-DI 1 3: F-DI 2 255: Statically inactive		
Dependency:	Refer to: p10026		
Note:	If value = 0: No terminal assigned, safety function always active. If value = 255: No terminal assigned, safety function always inactive. F-DI: Failsafe Digital Input SLS: Safely-Limited Speed		

p10130	SI SDI positive input terminal (processor 2) / SI SDI pos F-DI P2		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
0	255	0

Description: Sets the fail-safe digital input (F-DI) for the "SDI positive" function.

Value:
 0: Statically active
 1: F-DI 0
 2: F-DI 1
 3: F-DI 2
 255: Statically inactive

Note:
 If value = 0:
 No terminal assigned, safety function always active.
 If value = 255:
 No terminal assigned, safety function always inactive.
 F-DI: Failsafe Digital Input
 SDI: Safe Direction

p10131	SI SDI negative input terminal (processor 2) / SI SDI neg F-DI P2		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
0	255	0

Description: Sets the fail-safe digital input (F-DI) for the "SDI negative" function.

Value:
 0: Statically active
 1: F-DI 0
 2: F-DI 1
 3: F-DI 2
 255: Statically inactive

Note:
 If value = 0:
 No terminal assigned, safety function always active.
 If value = 255:
 No terminal assigned, safety function always inactive.
 F-DI: Failsafe Digital Input
 SDI: Safe Direction

p10139	SI Safe State signal selection (processor 2) / SI Safe State Sel		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2856
CU250D-2_PN_F			

Min	Max	Factory setting
-	-	0000 0001 bin

Description: Selects the individual signals that should be logically combined to create "Safe State".

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Power_removed	Selected	Not selected	-
	01	SS1_active	Selected	Not selected	-

04	SLS_active	Selected	Not selected	-
05	SDI_pos_active	Selected	Not selected	-
06	SDI_neg_active	Selected	Not selected	-

p10142[0...5] SI F-DO 0 signal sources (processor 2) / SI F-DO 0 S_src P2

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2857
CU250D-2_PN_F			

Min	Max	Factory setting
0	13	0

Description: Sets the signal sources for F-DO 0 (X131.6).

The 6 signal sources in p10142[0...5] are AND'ed and the result is output at F-DO 0.

Value:	0: No function
	1: STO active
	2: SS1 active
	5: SLS active
	6: SSM feedback signal active
	7: Safe state
	9: Internal event
	12: SDI positive active
	13: SDI negative active

Index:	[0] = AND logic operation input 1
	[1] = AND logic operation input 2
	[2] = AND logic operation input 3
	[3] = AND logic operation input 4
	[4] = AND logic operation input 5
	[5] = AND logic operation input 6

Note: F-DO: Failsafe Digital Output

p10146 SI test sensor feedback signal / SI test sens FS

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2848
CU250D-2_PN_F			

Min	Max	Factory setting
-	-	0000 bin

Description: Sets the test of the feedback line for forced checking procedure.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Test F-DO 0	Test active	No test	-

Note: F-DO: Failsafe Digital Output

p10147 SI F-DO test stop mode / SI F-DO test mode

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
2	4	4

Description: Sets the test stop mode for the safety digital output (F-DO)

Value:	2: Test mode 2 read back F-DO in DI (relay circuit)
	3: Test mode 3 read back F-DO in DI (actuator with feedback signal)
	4: Test mode 4 evaluation of two internal diagnostic signals

Dependency: Refer to: p10001, p10003, p10007, p10046

r10149 SI F-DI monitoring status (processor 2) / SI F-DI status P2

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
-	-	-

Description: Displays the monitoring status of the fail-safe digital inputs (F-DI).
The F-DIs that are being used by the Safety Integrated functions are displayed.
If the module used has fewer than 3 F-DIs, "Freely available" is displayed for the F-DIs which are not in use.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	F-DI 0	Safety monitored	Freely available	-
	01	F-DI 1	Safety monitored	Freely available	-
	02	F-DI 2	Safety monitored	Freely available	-

Dependency: p10006 / p10106
p10022 / p10122
p10023 / p10123
p10026 / p10126
p10030 / p10130
p10031 / p10131
p10050 / p10150
Refer to: r10049

p10150 SI PROFIsafe F-DI transfer (processor 2) / SI Ps F-DI tran P2

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: C(95)	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
-	-	0000 bin

Description: Setting for the transfer and evaluation of failsafe digital inputs (F-DI) via PROFIsafe.
The safe state of the selected F-DIs is transferred to the F-control via PROFIsafe. The F-DIs are monitored for discrepancies. Discrepancy faults can be acknowledged via PROFIsafe.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	F-DI 0 processor 2	Transfer	No transfer	-
	01	F-DI 1 processor 2	Transfer	No transfer	-
	02	F-DI 2 processor 2	Transfer	No transfer	-

Dependency: Refer to: p10050

Note: F-DI: Failsafe Digital Input

r10151.0...2 CO/BO: SI digital inputs status (processor 2) / SI DI status P2

CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			

Min	Max	Factory setting
-	-	-

Description: Displays the single-channel, logical, and debounced status of the fail-safe digital inputs (F-DI).
The parameter is updated in the SI Motion monitoring clock cycle.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	F-DI 0 processor 2	High	Low	-
	01	F-DI 1 processor 2	High	Low	-
	02	F-DI 2 processor 2	High	Low	-
Dependency:	Refer to: p9501, p9601, p10117, p10150				
Note:	F-DI: Failsafe Digital Input				
	If a safety function is assigned to an input (e.g. via p10122), then the following applies:				
	- logical "0": Safety function is selected				
	- logical "1": Safety function is de-selected				
	The interrelationship between the logical level and the external voltage level at the input depends on the parameterization (refer to p10140) of the input as either NC or NO contact and is aligned to the use of a safety function:				
	With 24 V at the input, NC contacts have a logical "1" level, for 0 V at the input, a logical "0" level.				
	This means that an NC/NC contact parameterization of 0 V at both inputs of the F-DI selects the safety function, for 24 V at both inputs, de-selects the safety function.				
	With 24 V at the input, NO contacts have a logical "0" level, for 0 V at the input, a logical "1" level.				
	This means that for an NC/NO contact parameterization, the level 0 V/24 V selects the safety function, the level 24 V/0 V de-selects the safety function.				
	The state of parameter r10151 is delayed by one monitoring clock cycle in relation to r10051.				
	The parameter is only updated in the following cases:				
	- If the Safety Extended Functions are enabled by means of activation via F-DI.				
	- If transfer of the F-DIs via PROFIsafe is enabled (see p9501).				
	In this case only the F-DIs transferred for PROFIsafe are displayed and updated (see p10050/p10150). All F-DIs which have not been transferred have a static zero value.				

r10152.0	CO/BO: SI digital outputs status (processor 2) / SI DO status P2				
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned32		
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -		
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -		
CU250D-2_PN_F					
	Min	Max	Factory setting		
	-	-	-		
Description:	Displays the status of the digital output of processor 2.				
Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	F-DO 0 processor 2	High	Low	2853
Note:	F-DO: Failsafe Digital Output				

r20001[0...9]	Run-time group sampling time / RTG sampling time			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32	
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -	
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: -	
CU240D-2_PN_F				
	Min	Max	Factory setting	
	- [ms]	- [ms]	- [ms]	
Description:	Displays the current sampling time of the run-time group 0 to 9.			
Index:	[0] = Run-time group 0			
	[1] = Run-time group 1			
	[2] = Run-time group 2			
	[3] = Run-time group 3			
	[4] = Run-time group 4			
	[5] = Run-time group 5			
	[6] = Run-time group 6			
	[7] = Run-time group 7			
	[8] = Run-time group 8			
	[9] = Run-time group 9			

p20030[0...3]	BI: AND 0 inputs / AND 0 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantities I0, I1, I2, I3 of instance AND 0 of the AND function block.		
Index:	[0] = Input I0 [1] = Input I1 [2] = Input I2 [3] = Input I3		
r20031	BO: AND 0 output Q / AND 0 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity Q = I0 & I1 & I2 & I3 of instance AND 0 of the AND function block.		
p20032	AND 0 run-time group / AND 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance AND 0 of the AND function block is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20033	AND 0 run sequence / AND 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	10
Description:	Setting parameter for the run sequence of instance AND 0 within the run-time group set in p20032.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20034[0...3]	BI: AND 1 inputs / AND 1 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantities I0, I1, I2, I3 of instance AND 1 of the AND function block.		
Index:	[0] = Input I0 [1] = Input I1 [2] = Input I2 [3] = Input I3		
r20035	BO: AND 1 output Q / AND 1 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity Q = I0 & I1 & I2 & I3 of instance AND 1 of the AND function block.		
p20036	AND 1 run-time group / AND 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance AND 1 of the AND function block is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20037	AND 1 run sequence / AND 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	20
Description:	Setting parameter for the run sequence of instance AND 1 within the run-time group set in p20036.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20038[0...3]	BI: AND 2 inputs / AND 2 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	0

Description: Sets the signal source of input quantities I0, I1, I2, I3 of instance AND 2 of the AND function block.

Index:
 [0] = Input I0
 [1] = Input I1
 [2] = Input I2
 [3] = Input I3

r20039	BO: AND 2 output Q / AND 2 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	-

Description: Display parameter for binary quantity Q = I0 & I1 & I2 & I3 of instance AND 2 of the AND function block.

p20040	AND 2 run-time group / AND 2 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			

Min	Max	Factory setting
1	9999	9999

Description: Setting parameter for the run-time group in which the instance AND 2 of the AND function block is to be called.

Value:
 1: Run-time group 1
 2: Run-time group 2
 3: Run-time group 3
 4: Run-time group 4
 5: Run-time group 5
 6: Run-time group 6
 9999: Do not calculate

p20041	AND 2 run sequence / AND 2 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 2710
CU240D-2_PN_F			

Min	Max	Factory setting
0	32000	30

Description: Setting parameter for the run sequence of instance AND 2 within the run-time group set in p20040.

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p20042[0...3]	BI: AND 3 inputs / AND 3 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantities I0, I1, I2, I3 of instance AND 3 of the AND function block.		
Index:	[0] = Input I0 [1] = Input I1 [2] = Input I2 [3] = Input I3		
r20043	BO: AND 3 output Q / AND 3 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity Q = I0 & I1 & I2 & I3 of instance AND 3 of the AND function block.		
p20044	AND 3 run-time group / AND 3 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance AND 3 of the AND function block is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20045	AND 3 run sequence / AND 3 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7210
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	40
Description:	Setting parameter for the run sequence of instance AND 3 within the run-time group set in p20044.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20046[0...3]	BI: OR 0 inputs / OR 0 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantities I0, I1, I2, I3 of instance OR 0 of the OR function block.		
Index:	[0] = Input I0 [1] = Input I1 [2] = Input I2 [3] = Input I3		
r20047	BO: OR 0 output Q / OR 0 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity $Q = I0 \vee I1 \vee I2 \vee I3$ of instance OR 0 of the OR function block.		
p20048	OR 0 run-time group / OR 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance OR 0 of the OR function block is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20049	OR 0 run sequence / OR 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	60
Description:	Setting parameter for the run sequence of instance OR 0 within the run-time group set in p20048.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20050[0...3]	BI: OR 1 inputs / OR 1 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantities I0, I1, I2, I3 of instance OR 1 of the OR function block.		
Index:	[0] = Input I0 [1] = Input I1 [2] = Input I2 [3] = Input I3		
r20051	BO: OR 1 output Q / OR 1 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity $Q = I0 \vee I1 \vee I2 \vee I3$ of instance OR 1 of the OR function block.		
p20052	OR 1 run-time group / OR 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance OR 1 of the OR function block is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20053	OR 1 run sequence / OR 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	70
Description:	Setting parameter for the run sequence of instance OR 1 within the run-time group set in p20052.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20054[0...3]	BI: OR 2 inputs / OR 2 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantities I0, I1, I2, I3 of instance OR 2 of the OR function block.		
Index:	[0] = Input I0 [1] = Input I1 [2] = Input I2 [3] = Input I3		
r20055	BO: OR 2 output Q / OR 2 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity Q = I0 I1 I2 I3 of instance OR 2 of the OR function block.		
p20056	OR 2 run-time group / OR 2 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance OR 2 of the OR function block is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20057	OR 2 run sequence / OR 2 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	80
Description:	Setting parameter for the run sequence of instance OR 2 within the run-time group set in p20056.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20058[0...3]	BI: OR 3 inputs / OR 3 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantities I0, I1, I2, I3 of instance OR 3 of the OR function block.		
Index:	[0] = Input I0 [1] = Input I1 [2] = Input I2 [3] = Input I3		
r20059	BO: OR 3 output Q / OR 3 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity $Q = I0 \vee I1 \vee I2 \vee I3$ of instance OR 3 of the OR function block.		
p20060	OR 3 run-time group / OR 3 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance OR 3 of the OR function block is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20061	OR 3 run sequence / OR 3 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7212
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	90
Description:	Setting parameter for the run sequence of instance OR 3 within the run-time group set in p20060.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20062[0...3]	BI: XOR 0 inputs / XOR 0 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantities I0, I1, I2, I3 of instance XOR 0 of the XOR function block.		
Index:	[0] = Input I0 [1] = Input I1 [2] = Input I2 [3] = Input I3		
r20063	BO: XOR 0 output Q / XOR 0 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity Q of instance XOR 0 of the XOR function block.		
p20064	XOR 0 run-time group / XOR 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance XOR 0 of the XOR function block is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20065	XOR 0 run sequence / XOR 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	110
Description:	Setting parameter for the run sequence of instance XOR 0 within the run-time group set in p20064.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20066[0...3]	BI: XOR 1 inputs / XOR 1 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantities I0, I1, I2, I3 of instance XOR 1 of the XOR function block.		
Index:	[0] = Input I0 [1] = Input I1 [2] = Input I2 [3] = Input I3		
r20067	BO: XOR 1 output Q / XOR 1 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity Q of instance XOR 1 of the XOR function block.		
p20068	XOR 1 run-time group / XOR 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance XOR 1 of the XOR function block is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20069	XOR 1 run sequence / XOR 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	120
Description:	Setting parameter for the run sequence of instance XOR 1 within the run-time group set in p20068.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20070[0...3]			
BI: XOR 2 inputs / XOR 2 inputs			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantities I0, I1, I2, I3 of instance XOR 2 of the XOR function block.		
Index:	[0] = Input I0 [1] = Input I1 [2] = Input I2 [3] = Input I3		
r20071			
BO: XOR 2 output Q / XOR 2 output Q			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity Q of instance XOR 2 of the XOR function block.		
p20072			
XOR 2 run-time group / XOR 2 RTG			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance XOR 2 of the XOR function block is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20073			
XOR 2 run sequence / XOR 2 RunSeq			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	130
Description:	Setting parameter for the run sequence of instance XOR 2 within the run-time group set in p20072.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20074[0...3]	BI: XOR 3 inputs / XOR 3 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	0

Description: Sets the signal source of input quantities I0, I1, I2, I3 of instance XOR 3 of the XOR function block.

Index:
 [0] = Input I0
 [1] = Input I1
 [2] = Input I2
 [3] = Input I3

r20075	BO: XOR 3 output Q / XOR 3 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	-

Description: Display parameter for binary quantity Q of instance XOR 3 of the XOR function block.

p20076	XOR 3 run-time group / XOR 3 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			

Min	Max	Factory setting
1	9999	9999

Description: Setting parameter for the run-time group in which the instance XOR 3 of the XOR function block is to be called.

Value:
 1: Run-time group 1
 2: Run-time group 2
 3: Run-time group 3
 4: Run-time group 4
 5: Run-time group 5
 6: Run-time group 6
 9999: Do not calculate

p20077	XOR 3 run sequence / XOR 3 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7214
CU240D-2_PN_F			

Min	Max	Factory setting
0	32000	140

Description: Setting parameter for the run sequence of instance XOR 3 within the run-time group set in p20076.

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p20078	BI: NOT 0 input I / NOT 0 input I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantity I of instance NOT 0 of the inverter.		
r20079	BO: NOT 0 inverted output / NOT 0 inv output		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for the inverted output of instance NOT 0 of the inverter.		
p20080	NOT 0 run-time group / NOT 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance NOT 0 of the inverter is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20081	NOT 0 run sequence / NOT 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	160
Description:	Setting parameter for the run sequence of instance NOT 0 within the run-time group set in p20080.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20082	BI: NOT 1 input I / NOT 1 input I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source of input quantity I of instance NOT 1 of the inverter.

r20083	BO: NOT 1 inverted output / NOT 1 inv output		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-

Description: Display parameter for the inverted output of instance NOT 1 of the inverter.

p20084	NOT 1 run-time group / NOT 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999

Description: Setting parameter for the run-time group in which the instance NOT 1 of the inverter is to be called.

Value:

- 1: Run-time group 1
- 2: Run-time group 2
- 3: Run-time group 3
- 4: Run-time group 4
- 5: Run-time group 5
- 6: Run-time group 6
- 9999: Do not calculate

p20085	NOT 1 run sequence / NOT 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	170

Description: Setting parameter for the run sequence of instance NOT 1 within the run-time group set in p20084.

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p20086	BI: NOT 2 input I / NOT 2 input I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantity I of instance NOT 2 of the inverter.		
r20087	BO: NOT 2 inverted output / NOT 2 inv output		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for the inverted output of instance NOT 2 of the inverter.		
p20088	NOT 2 run-time group / NOT 2 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance NOT 2 of the inverter is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20089	NOT 2 run sequence / NOT 2 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	180
Description:	Setting parameter for the run sequence of instance NOT 2 within the run-time group set in p20088.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20090	BI: NOT 3 input I / NOT 3 input I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source of input quantity I of instance NOT 3 of the inverter.

r20091	BO: NOT 3 inverted output / NOT 3 inv output		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-

Description: Display parameter for the inverted output of instance NOT 3 of the inverter.

p20092	NOT 3 run-time group / NOT 3 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999

Description: Setting parameter for the run-time group in which the instance NOT 3 of the inverter is to be called.

Value:

- 1: Run-time group 1
- 2: Run-time group 2
- 3: Run-time group 3
- 4: Run-time group 4
- 5: Run-time group 5
- 6: Run-time group 6
- 9999: Do not calculate

p20093	NOT 3 run sequence / NOT 3 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	190

Description: Setting parameter for the run sequence of instance NOT 3 within the run-time group set in p20092.

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p20094[0...3] CI: ADD 0 inputs / ADD 0 inputs			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantities X0, X1, X2, X3 of instance ADD 0 of the adder.		
Index:	[0] = Input X0 [1] = Input X1 [2] = Input X2 [3] = Input X3		
r20095 CO: ADD 0 output Y / ADD 0 output Y			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for the output quantity $Y = X0 + X1 + X2 + X3$ of instance ADD 0 of the adder.		
p20096 ADD 0 run-time group / ADD 0 RTG			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999
Description:	Setting parameter for the run-time group in which the instance ADD 0 of the adder is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20097 ADD 0 run sequence / ADD 0 RunSeq			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	210
Description:	Setting parameter for the run sequence of instance ADD 0 within the run-time group set in p20096.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20098[0...3]	CI: ADD 1 inputs / ADD 1 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	0

Description: Sets the signal source of input quantities X0, X1, X2, X3 of instance ADD 1 of the adder.

Index:
 [0] = Input X0
 [1] = Input X1
 [2] = Input X2
 [3] = Input X3

r20099	CO: ADD 1 output Y / ADD 1 output Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	-

Description: Display parameter for the output quantity $Y = X0 + X1 + X2 + X3$ of instance ADD 1 of the adder.

p20100	ADD 1 run-time group / ADD 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			

Min	Max	Factory setting
5	9999	9999

Description: Setting parameter for the run-time group in which the instance ADD 1 of the adder is to be called.

Value:
 5: Run-time group 5
 6: Run-time group 6
 9999: Do not calculate

p20101	ADD 1 run sequence / ADD 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			

Min	Max	Factory setting
0	32000	220

Description: Setting parameter for the run sequence of instance ADD 1 within the run-time group set in p20100.

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p20102[0...1]	CI: SUB 0 inputs / SUB 0 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of minuend X1 and subtrahend X2 of instance SUB 0 of the subtractor.		
Index:	[0] = Minuend X1 [1] = Subtrahend X2		

r20103	CO: SUB 0 difference Y / SUB 0 difference Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for the difference $Y = X1 - X2$ of instance SUB 0 of the subtractor.		

p20104	SUB 0 run-time group / SUB 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999
Description:	Setting parameter for the run-time group in which instance SUB 0 of the subtractor is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20105	SUB 0 run sequence / SUB 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	240
Description:	Setting parameter for the run sequence of instance SUB 0 within the run-time group set in p20104.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20106[0...1]	CI: SUB 1 inputs / SUB 1 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of minuend X1 and subtrahend X2 of instance SUB 1 of the subtractor.		

Index: [0] = Minuend X1
[1] = Subtrahend X2

r20107 CO: SUB 1 difference Y / SUB 1 difference Y

CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-

Description: Display parameter for the difference $Y = X1 - X2$ of instance SUB 1 of the subtractor.

p20108 SUB 1 run-time group / SUB 1 RTG

CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999

Description: Setting parameter for the run-time group in which instance SUB 1 of the subtractor is to be called.

Value: 5: Run-time group 5
6: Run-time group 6
9999: Do not calculate

p20109 SUB 1 run sequence / SUB 1 RunSeq

CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	250

Description: Setting parameter for the run sequence of instance SUB 1 within the run-time group set in p20108.

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p20110[0...3] CI: MUL 0 inputs / MUL 0 inputs

CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source of the factors X0, X1, X2, X3 of instance MUL 0 of the multiplier.

Index: [0] = Factor X0
[1] = Factor X1
[2] = Factor X2
[3] = Factor X3

r20111	CO: MUL 0 product Y / MUL 0 product Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for the product $Y = X0 * X1 * X2 * X3$ of instance MUL 0 of the multiplier.		
p20112	MUL 0 run-time group / MUL 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999
Description:	Setting parameter for the run-time group in which instance MUL 0 of the multiplier is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20113	MUL 0 run sequence / MUL 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	270
Description:	Setting parameter for the run sequence of instance MUL 0 within the run-time group set in p20112.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20114[0...3]	CI: MUL 1 inputs / MUL 1 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of the factors X0, X1, X2, X3 of instance MUL 1 of the multiplier.		
Index:	[0] = Factor X0 [1] = Factor X1 [2] = Factor X2 [3] = Factor X3		

r20115	CO: MUL 1 product Y / MUL 1 product Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for the product $Y = X0 * X1 * X2 * X3$ of instance MUL 1 of the multiplier.		
p20116	MUL 1 run-time group / MUL 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999
Description:	Setting parameter for the run-time group in which instance MUL 1 of the multiplier is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20117	MUL 1 run sequence / MUL 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	280
Description:	Setting parameter for the run sequence of instance MUL 1 within the run-time group set in p20116.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20118[0...1]	CI: DIV 0 inputs / DIV 0 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of dividend X1 and divisor X2 of instance DIV 0 of the divider.		
Index:	[0] = Dividend X0 [1] = Divisor X1		
r20119[0...2]	CO: DIV 0 quotient / DIV 0 quotient		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for quotients $Y = X1/X2$, integer number quotients YIN, and division remainder $MOD = (Y - YIN) \times X2$ of instance DIV 0 of the divider.		

List of parameters

Index: [0] = Quotient Y
[1] = Integer number quotient YIN
[2] = Div remainder MOD

r20120	BO: DIV 0 divisor is zero QF / DIV 0 divisor=0 QF		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-

Description: Display parameter for the signal QF that the divisor X2 of instance DIV 0 of the divider is zero.
X2 = 0.0 => QF = 1

p20121	DIV 0 run-time group / DIV 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999

Description: Setting parameter for the run-time group in which instance DIV 0 of the divider is to be called.

Value: 5: Run-time group 5
6: Run-time group 6
9999: Do not calculate

p20122	DIV 0 run sequence / DIV 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	300

Description: Setting parameter for the run sequence of instance DIV 0 within the run-time group set in p20121.

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p20123[0...1]	CI: DIV 1 inputs / DIV 1 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source of dividend X1 and divisor X2 of instance DIV 1 of the divider.

Index: [0] = Dividend X0
[1] = Divisor X1

r20124[0...2]	CO: DIV 1 quotient / DIV 1 quotient		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for quotients $Y = X1/X2$, integer number quotients YIN, and division remainder $MOD = (Y - YIN) \times X2$ of instance DIV 1 of the divider.		
Index:	[0] = Quotient Y [1] = Integer number quotient YIN [2] = Div remainder MOD		
r20125	BO: DIV 1 divisor is zero QF / DIV 1 divisor=0 QF		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for the signal QF that the divisor X2 of instance DIV 1 of the divider is zero. $X2 = 0.0 \Rightarrow QF = 1$		
p20126	DIV 1 run-time group / DIV 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999
Description:	Setting parameter for the run-time group in which instance DIV 1 of the divider is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20127	DIV 1 run sequence / DIV 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7222
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	310
Description:	Setting parameter for the run sequence of instance DIV 1 within the run-time group set in p20126.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20128	CI: AVA 0 input X / AVA 0 input X		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7224
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of the input quantity X of instance AVA 0 of the absolute value generator with sign evaluation.		
r20129	CO: AVA 0 output Y / AVA 0 output Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7224
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for output quantity Y of instance AVA 0 of the absolute value generator with sign evaluation.		
r20130	BO: AVA 0 input negative SN / AVA 0 input neg SN		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7224
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for signal SN that the input quantity X of instance AVA 0 of the absolute value generator with sign evaluation is negative. X < 0.0 => SN = 1		
p20131	AVA 0 run-time group / AVA 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7224
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999
Description:	Setting parameter for the run-time group in which instance AVA 0 of the absolute value generator with sign evaluation is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20132	AVA 0 run sequence / AVA 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7224
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	340
Description:	Setting parameter for the run sequence of instance AVA 0 within the run-time group set in p20131.		

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p20133	CI: AVA 1 input X / AVA 1 input X		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7224
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of the input quantity X of instance AVA 1 of the absolute value generator with sign evaluation.		
r20134	CO: AVA 1 output Y / AVA 1 output Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7224
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for output quantity Y of instance AVA 1 of the absolute value generator with sign evaluation.		
r20135	BO: AVA 1 input negative SN / AVA 1 input neg SN		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7224
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for signal SN that the input quantity X of instance AVA 1 of the absolute value generator with sign evaluation is negative. X < 0.0 => SN = 1		
p20136	AVA 1 run-time group / AVA 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7224
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999
Description:	Setting parameter for the run-time group in which instance AVA 1 of the absolute value generator with sign evaluation is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20137	AVA 1 run sequence / AVA 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7224
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 350
Description:	Setting parameter for the run sequence of instance AVA 1 within the run-time group set in p20136.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20138	BI: MFP 0 input pulse I / MFP 0 inp_pulse I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the input pulse I of instance MFP 0 of the pulse generator.		
p20139	MFP 0 pulse duration in ms / MFP 0 pulse_dur ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 0.00	Max 5400000.00	Factory setting 0.00
Description:	Setting parameter for pulse duration T in milliseconds of instance MFP 0 of the pulse generator.		
r20140	BO: MFP 0 output Q / MFP 0 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output pulse Q of instance MFP 0 of the pulse generator.		
p20141	MFP 0 run-time group / MFP 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance MFP 0 of the pulse generator is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20142	MFP 0 run sequence / MFP 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 370
Description:	Setting parameter for the run sequence of instance MFP 0 within the run-time group set in p20141.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20143	BI: MFP 1 input pulse I / MFP 1 inp_pulse I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the input pulse I of instance MFP 1 of the pulse generator.		
p20144	MFP 1 pulse duration in ms / MFP 1 pulse_dur ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 0.00	Max 5400000.00	Factory setting 0.00
Description:	Setting parameter for pulse duration T in milliseconds of instance MFP 1 of the pulse generator.		
r20145	BO: MFP 1 output Q / MFP 1 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output pulse Q of instance MFP 1 of the pulse generator.		
p20146	MFP 1 run-time group / MFP 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance MFP 1 of the pulse generator is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20147	MFP 1 run sequence / MFP 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 380
Description:	Setting parameter for the run sequence of instance MFP 1 within the run-time group set in p20146.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20148	BI: PCL 0 input pulse I / PCL 0 inp_pulse I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the input pulse I of instance PCL 0 of the pulse shortener.		
p20149	PCL 0 pulse duration in ms / PCL 0 pulse_dur ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 0.00	Max 5400000.00	Factory setting 0.00
Description:	Setting parameter for pulse duration T in milliseconds of instance PCL 0 of the pulse shortener.		
r20150	BO: PCL 0 output Q / PCL 0 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output pulse Q of instance PCL 0 of the pulse shortener.		
p20151	PCL 0 run-time group / PCL 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance PCL 0 of the pulse shortener is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20152	PCL 0 run sequence / PCL 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 400
Description:	Setting parameter for the run sequence of instance PCL 0 within the run-time group set in p20151.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20153	BI: PCL 1 input pulse I / PCL 1 inp_pulse I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the input pulse I of instance PCL 1 of the pulse shortener.		
p20154	PCL 1 pulse duration in ms / PCL 1 pulse_dur ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 0.00	Max 5400000.00	Factory setting 0.00
Description:	Setting parameter for pulse duration T in milliseconds of instance PCL 1 of the pulse shortener.		
r20155	BO: PCL 1 output Q / PCL 1 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output pulse Q of instance PCL 1 of the pulse shortener.		
p20156	PCL 1 run-time group / PCL 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance PCL 1 of the pulse shortener is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20157	PCL 1 run sequence / PCL 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 410
Description:	Setting parameter for the run sequence of instance PCL 1 within the run-time group set in p20156.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20158	BI: PDE 0 input pulse I / PDE 0 inp_pulse I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the input pulse I of instance PDE 0 of the closing delay device.		
p20159	PDE 0 pulse delay time in ms / PDE 0 t_del ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min 0.00	Max 5400000.00	Factory setting 0.00
Description:	Setting parameter for pulse delay time T in milliseconds of instance PDE 0 of the closing delay device.		
r20160	BO: PDE 0 output Q / PDE 0 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output pulse Q of instance PDE 0 of the closing delay device.		
p20161	PDE 0 run-time group / PDE 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which instance PDE 0 of the closing delay device is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20162		PDE 0 run sequence / PDE 0 RunSeq	
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	430
Description:	Setting parameter for the run sequence of instance PDE 0 within the run-time group set in p20161.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20163		BI: PDE 1 input pulse I / PDE 1 inp_pulse I	
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source for the input pulse I of instance PDE 1 of the closing delay device.

p20164		PDE 1 pulse delay time in ms / PDE 1 t_del ms	
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min	Max	Factory setting
	0.00	5400000.00	0.00

Description: Setting parameter for pulse delay time T in milliseconds of instance PDE 1 of the closing delay device.

r20165		BO: PDE 1 output Q / PDE 1 output Q	
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-

Description: Display parameter for output pulse Q of instance PDE 1 of the closing delay device.

p20166		PDE 1 run-time group / PDE 1 RTG	
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999

Description: Setting parameter for the run-time group in which instance PDE 1 of the closing delay device is to be called.

Value:
5: Run-time group 5
6: Run-time group 6
9999: Do not calculate

p20167	PDE 1 run sequence / PDE 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 440
Description:	Setting parameter for the run sequence of instance PDE 1 within the run-time group set in p20166.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20168	BI: PDF 0 input pulse I / PDF 0 inp_pulse I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the input pulse I of instance PDF 0 of the breaking delay device.		
p20169	PDF 0 pulse extension time in ms / PDF 0 t_ext ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min 0.00	Max 5400000.00	Factory setting 0.00
Description:	Setting parameter for pulse extension time T in milliseconds of instance PDF 0 of the breaking delay device.		
r20170	BO: PDF 0 output Q / PDF 0 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output pulse Q of instance PDF 0 of the breaking delay device.		
p20171	PDF 0 run-time group / PDF 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance PDF 0 of the breaking delay device is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20172	PDF 0 run sequence / PDF 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 460
Description:	Setting parameter for the run sequence of instance PDF 0 within the run-time group set in p20171.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20173	BI: PDF 1 input pulse I / PDF 1 inp_pulse I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the input pulse I of instance PDF 1 of the breaking delay device.		
p20174	PDF 1 pulse extension time in ms / PDF 1 t_ext ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min 0.00	Max 5400000.00	Factory setting 0.00
Description:	Setting parameter for pulse extension time T in milliseconds of instance PDF 1 of the breaking delay device.		
r20175	BO: PDF 1 output Q / PDF 1 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output pulse Q of instance PDF 1 of the breaking delay device.		
p20176	PDF 1 run-time group / PDF 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance PDF 1 of the breaking delay device is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20177	PDF 1 run sequence / PDF 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 470
Description:	Setting parameter for the run sequence of instance PDF 1 within the run-time group set in p20176.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20178[0...1]	BI: PST 0 inputs / PST 0 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7234
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for input pulse I and the reset input R of instance PST 0 of the pulse extension element.		
Index:	[0] = Input pulse I [1] = Reset input R		
p20179	PST 0 pulse duration in ms / PST 0 pulse_dur ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7234
CU240D-2_PN_F			
	Min 0.00	Max 5400000.00	Factory setting 0.00
Description:	Setting parameter for pulse duration T in milliseconds of instance PST 0 of the pulse extension element.		
r20180	BO: PST 0 output Q / PST 0 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7234
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output pulse Q of instance PST 0 of the pulse extension element.		
p20181	PST 0 run-time group / PST 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7234
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance PST 0 of the pulse extension element is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20182	PST 0 run sequence / PST 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7234
CU240D-2_PN_F			
	Min 0	Max 7999	Factory setting 490
Description:	Setting parameter for the run sequence of instance PST 0 within the run-time group set in p20181.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20183[0...1]	BI: PST 1 inputs / PST 1 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7234
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for input pulse I and the reset input R of instance PST 1 of the pulse extension element.		
Index:	[0] = Input pulse I [1] = Reset input R		
p20184	PST 1 pulse duration in ms / PST 1 pulse_dur ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7234
CU240D-2_PN_F			
	Min 0.00	Max 5400000.00	Factory setting 0.00
Description:	Setting parameter for pulse duration T in milliseconds of instance PST 1 of the pulse extension element.		
r20185	BO: PST 1 output Q / PST 1 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7234
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output pulse Q of instance PST 1 of the pulse extension element.		
p20186	PST 1 run-time group / PST 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7234
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance PST 1 of the pulse extension element is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20187	PST 1 run sequence / PST 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7234
CU240D-2_PN_F			
	Min 0	Max 7999	Factory setting 500
Description:	Setting parameter for the run sequence of instance PST 1 within the run-time group set in p20186.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20188[0...1]	BI: RSR 0 inputs / RSR 0 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for set input S and reset input R of instance RSR 0 of the RS flipflop.		
Index:	[0] = Set S [1] = Reset R		
r20189	BO: RSR 0 output Q / RSR 0 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output Q of instance RSR 0 of the RS flipflop		
r20190	BO: RSR 0 inverted output QN / RSR 0 inv outp QN		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for inverted output QN of instance RSR 0 of the RS flipflop.		
p20191	RSR 0 run-time group / RSR 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min 1	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which instance RSR 0 of the RS flipflop is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4		

5: Run-time group 5
 6: Run-time group 6
 9999: Do not calculate

p20192	RSR 0 run sequence / RSR 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	7999	520
Description:	Setting parameter for the run sequence of instance RSR 0 within the run-time group set in p20191.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20193[0...1]	BI: RSR 1 inputs / RSR 1 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for set input S and reset input R of instance RSR 1 of the RS flipflop.		
Index:	[0] = Set S [1] = Reset R		

r20194	BO: RSR 1 output Q / RSR 1 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for output Q of instance RSR 1 of the RS flipflop		

r20195	BO: RSR 1 inverted output QN / RSR 1 inv outp QN		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for inverted output QN of instance RSR 1 of the RS flipflop.		

p20196	RSR 1 run-time group / RSR 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which instance RSR 1 of the RS flipflop is to be called.		

List of parameters

Value:	1:	Run-time group 1
	2:	Run-time group 2
	3:	Run-time group 3
	4:	Run-time group 4
	5:	Run-time group 5
	6:	Run-time group 6
	9999:	Do not calculate

p20197	RSR 1 run sequence / RSR 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			

Min	Max	Factory setting
0	7999	530

Description: Setting parameter for the run sequence of instance RSR 1 within the run-time group set in p20196.

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p20198[0...3]	BI: DFR 0 inputs / DFR 0 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	0

Description: Sets the signal source for trigger input I, D input D, set input S, and reset input R of instance DFR 0 of the D flipflop.

Index:
 [0] = Trigger input I
 [1] = D input D
 [2] = Set S
 [3] = Reset R

r20199	BO: DFR 0 output Q / DFR 0 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	-

Description: Display parameter for output Q of instance DFR 0 of the D flipflop.

r20200	BO: DFR 0 inverted output QN / DFR 0 inv outp QN		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	-

Description: Display parameter for the inverted output QN of instance DFR 0 of the D flipflop.

p20201	DFR 0 run-time group / DFR 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min 1	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which instance DFR 0 of the D flipflop is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20202	DFR 0 run sequence / DFR 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 550
Description:	Setting parameter for the run sequence of instance DFR 0 within the run-time group set in p20201.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20203[0...3]	BI: DFR 1 inputs / DFR 1 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for trigger input I, D input D, set input S, and reset input R of instance DFR 1 of the D flipflop.		
Index:	[0] = Trigger input I [1] = D input D [2] = Set S [3] = Reset R		
r20204	BO: DFR 1 output Q / DFR 1 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output Q of instance DFR 1 of the D flipflop.		

r20205	BO: DFR 1 inverted output QN / DFR 1 inv outp QN		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	-

Description: Display parameter for the inverted output QN of instance DFR 1 of the D flipflop.

p20206	DFR 1 run-time group / DFR 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			

Min	Max	Factory setting
1	9999	9999

Description: Setting parameter for the run-time group in which instance DFR 1 of the D flipflop is to be called.

Value:

- 1: Run-time group 1
- 2: Run-time group 2
- 3: Run-time group 3
- 4: Run-time group 4
- 5: Run-time group 5
- 6: Run-time group 6
- 9999: Do not calculate

p20207	DFR 1 run sequence / DFR 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			

Min	Max	Factory setting
0	32000	560

Description: Setting parameter for the run-time group of instance DFR 1 within the run-time group set in p20206.

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p20208[0...1]	BI: BSW 0 inputs / BSW 0 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			

Min	Max	Factory setting
-	-	0

Description: Sets the signal source of input quantities I0 and I1 of instance BSW 0 of the binary changeover switch.

Index:

- [0] = Input I0
- [1] = Input I1

p20209	BI: BSW 0 switch setting I / BSW 0 sw_setting		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source of the switch setting I of instance BSW 0 of the binary changeover switch.

r20210	BO: BSW 0 output Q / BSW 0 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-

Description: Display parameter for output quantity Q of instance BSW 0 of the binary changeover switch.

p20211	BSW 0 run-time group / BSW 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999

Description: Setting parameter for the run-time group in which the instance BSW 0 of the binary changeover switch is to be called.

Value:

- 1: Run-time group 1
- 2: Run-time group 2
- 3: Run-time group 3
- 4: Run-time group 4
- 5: Run-time group 5
- 6: Run-time group 6
- 9999: Do not calculate

p20212	BSW 0 run sequence / BSW 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	7999	580

Description: Setting parameter for the run sequence of instance BSW 0 within the run-time group set in p20211.

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p20213[0...1]	BI: BSW 1 inputs / BSW 1 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantities I0 and I1 of instance BSW 1 of the binary changeover switch.		
Index:	[0] = Input I0 [1] = Input I1		
p20214	BI: BSW 1 switch setting I / BSW 1 sw_setting		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of the switch setting I of instance BSW 1 of the binary changeover switch.		
r20215	BO: BSW 1 output Q / BSW 1 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for output quantity Q of instance BSW 1 of the binary changeover switch.		
p20216	BSW 1 run-time group / BSW 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance BSW 1 of the binary changeover switch is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20217	BSW 1 run sequence / BSW 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min 0	Max 7999	Factory setting 590
Description:	Setting parameter for the run sequence of instance BSW 1 within the run-time group set in p20216.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20218[0...1]	CI: NSW 0 inputs / NSW 0 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source of input quantities X0 and X1 of instance NSW 0 of the numeric changeover switch.		
Index:	[0] = Input X0 [1] = Input X1		
p20219	BI: NSW 0 switch setting I / NSW 0 sw_setting		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source of the switch setting I of instance NSW 0 of the numeric changeover switch.		
r20220	CO: NSW 0 output Y / NSW 0 output Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output quantity Y of instance NSW 0 of the numeric changeover switch.		
p20221	NSW 0 run-time group / NSW 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance NSW 0 of the numeric changeover switch is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20222	NSW 0 run sequence / NSW 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 610
Description:	Setting parameter for the run sequence of instance NSW 0 within the run-time group set in p20221.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20223[0...1]	CI: NSW 1 inputs / NSW 1 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source of input quantities X0 and X1 of instance NSW 1 of the numeric changeover switch.		
Index:	[0] = Input X0 [1] = Input X1		
p20224	BI: NSW 1 switch setting I / NSW 1 sw_setting		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source of the switch setting I of instance NSW 1 of the numeric changeover switch.		
r20225	CO: NSW 1 output Y / NSW 1 output Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output quantity Y of instance NSW 1 of the numeric changeover switch.		
p20226	NSW 1 run-time group / NSW 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance NSW 1 of the numeric changeover switch is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20227	NSW 1 run sequence / NSW 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7250
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 620
Description:	Setting parameter for the run sequence of instance NSW 1 within the run-time group set in p20226.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20228	CI: LIM 0 input X / LIM 0 input X		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source of input quantity X of instance LIM 0 of the limiter.		
p20229	LIM 0 upper limit value LU / LIM 0 upper lim LU		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min -340.28235E36	Max 340.28235E36	Factory setting 0.0000
Description:	Setting parameter for the upper limit value LU of instance LIM 0 of the limiter.		
p20230	LIM 0 lower limit value LL / LIM 0 lower lim LL		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min -340.28235E36	Max 340.28235E36	Factory setting 0.0000
Description:	Setting parameter for the lower limit value LL of instance LIM 0 of the limiter.		
r20231	CO: LIM 0 output Y / LIM 0 output Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for the limited output quantity Y of instance LIM 0 of the limiter.		

r20232 BO: LIM 0 input quantity at the upper limit QU / LIM 0 QU			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter of instance LIM 0 of limiter QU (upper limit reached), i.e. QU = 1 for X >= LU.		

r20233 BO: LIM 0 input quantity at the lower limit QL / LIM 0 QL			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter of instance LIM 0 of limiter QL (lower limit reached), i.e. QL = 1 for X <= LL.		

p20234 LIM 0 run-time group / LIM 0 RTG			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999
Description:	Setting parameter for the run-time group in which instance LIM 0 of the limiter is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20235 LIM 0 run sequence / LIM 0 RunSeq			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	640
Description:	Setting parameter for the run sequence of instance LIM 0 within the run-time group set in p20234.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20236 CI: LIM 1 input X / LIM 1 input X			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantity X of instance LIM 1 of the limiter.		

p20237	LIM 1 upper limit value LU / LIM 1 upper lim LU		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min -340.28235E36	Max 340.28235E36	Factory setting 0.0000
Description:	Setting parameter for the upper limit value LU of instance LIM 1 of the limiter.		

p20238	LIM 1 lower limit value LL / LIM 1 lower lim LL		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min -340.28235E36	Max 340.28235E36	Factory setting 0.0000
Description:	Setting parameter for the lower limit value LL of instance LIM 1 of the limiter.		

r20239	CO: LIM 1 output Y / LIM 1 output Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for the limited output quantity Y of instance LIM 1 of the limiter.		

r20240	BO: LIM 1 input quantity at the upper limit QU / LIM 1 QU		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter of instance LIM 1 of limiter QU (upper limit reached), i.e. QU = 1 for X >= LU.		

r20241	BO: LIM 1 input quantity at the lower limit QL / LIM 1 QL		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter of instance LIM 1 of limiter QL (lower limit reached), i.e. QL = 1 for X <= LL.		

p20242	LIM 1 run-time group / LIM 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which instance LIM 1 of the limiter is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20243	LIM 1 run sequence / LIM 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7260
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 650
Description:	Setting parameter for the run sequence of instance LIM 1 within the run-time group set in p20242.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20244[0...1]	CI: PT1 0 inputs / PT1 0 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7262
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source of input quantity X and of setting value SV of instance PT1 0 of the smoothing element.		
Index:	[0] = Input X [1] = Setting value SV		
p20245	BI: PT1 0 accept setting value S / PT1 0 acc set val		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7262
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the "accept setting value" signal of instant PT1 0 of the smoothing element.		
p20246	PT1 0 smoothing time constant in ms / PT1 0 T_smooth ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7262
CU240D-2_PN_F			
	Min 0.00	Max 340.28235E36	Factory setting 0.00
Description:	Sets the smoothing time constant T in milliseconds of instance PT1 0 of the smoothing element.		

r20247	CO: PT1 0 output Y / PT1 0 output Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7262
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for the smoothed output quantity Y of instance PT1 0 of the smoothing element.		
p20248	PT1 0 run-time group / PT1 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7262
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999
Description:	Setting parameter for the run-time group in which instance PT1 0 of the smoothing element is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20249	PT1 0 run sequence / PT1 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7262
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	670
Description:	Setting parameter for the run sequence of instance PT1 0 within the run-time group set in p20248.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20250[0...1]	CI: PT1 1 inputs / PT1 1 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7262
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantity X and of setting value SV of instance PT1 1 of the smoothing element.		
Index:	[0] = Input X [1] = Setting value SV		
p20251	BI: PT1 1 accept setting value S / PT1 1 acc set val		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7262
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for the "accept setting value" signal of instant PT1 1 of the smoothing element.		

p20252 PT1 1 smoothing time constant in ms / PT1 1 T_smooth ms			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7262
CU240D-2_PN_F			
	Min 0.00	Max 340.28235E36	Factory setting 0.00
Description:	Sets the smoothing time constant T in milliseconds of instance PT1 1 of the smoothing element.		

r20253 CO: PT1 1 output Y / PT1 1 output Y			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7262
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for the smoothed output quantity Y of instance PT1 1 of the smoothing element.		

p20254 PT1 1 run-time group / PT1 1 RTG			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7262
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which instance PT1 1 of the smoothing element is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20255 PT1 1 run sequence / PT1 1 RunSeq			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7262
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 680
Description:	Setting parameter for the run sequence of instance PT1 1 within the run-time group set in p20254.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20256[0...1] CI: INT 0 inputs / INT 0 inputs			
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source of input quantity X and of setting value SV of instance INT 0 of the integrator.		
Index:	[0] = Input X [1] = Setting value SV		

p20257	INT 0 upper limit value LU / INT 0 upper lim LU		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min	Max	Factory setting
	-340.28235E36	340.28235E36	0.0000
Description:	Sets the upper limit value LU of instance INT 0 of the integrator.		

p20258	INT 0 lower limit value LL / INT 0 lower lim LL		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min	Max	Factory setting
	-340.28235E36	340.28235E36	0.0000
Description:	Sets the lower limit value LL of instance INT 0 of the integrator.		

p20259	INT 0 integrating time constant in ms / INT 0 T_Integr ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min	Max	Factory setting
	0.00	340.28235E36	0.00
Description:	Sets the integrating time constant T_i in milliseconds of instance INT 0 of the integrator.		

p20260	BI: INT 0 accept setting value S / INT 0 acc set val		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for the "accept setting value" signal of instant INT 0 of the integrator.		

r20261	CO: INT 0 output Y / INT 0 output Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for output quantity Y of instance INT 0 of the integrator. If $LL \geq LU$, then the output quantity $Y = LU$.		

r20262	BO: INT 0 integrator at the upper limit QU / INT 0 QU		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for the signal QU that output quantity Y of instance INT 0 of the integrator has reached the upper limit value LU.		
r20263	BO: INT 0 integrator at the lower limit QL / INT 0 QL		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for the signal QL that output quantity Y of instance INT 0 of the integrator has reached the lower limit value LL.		
p20264	INT 0 run-time group / INT 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999
Description:	Setting parameter for the run-time group in which instance INT 0 of the integrator is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20265	INT 0 run sequence / INT 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	700
Description:	Setting parameter for the run sequence of instance INT 0 within the run-time group set in p20264.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20266	CI: LVM 0 input X / LVM 0 input X		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantity X of instance LVM 0 of the double-sided limiter.		

p20267	LVM 0 interval average value M / LVM 0 avg value M		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min -340.28235E36	Max 340.28235E36	Factory setting 0.0000
Description:	Setting parameter for the interval average M of instance LVM 0 of the double-sided limiter.		
p20268	LVM 0 interval limit L / LVM 0 limit L		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min -340.28235E36	Max 340.28235E36	Factory setting 0.0000
Description:	Setting parameter for the interval limit L of instance LVM 0 of the double-sided limiter.		
p20269	LVM 0 hyst HY / LVM 0 hyst HY		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min -340.28235E36	Max 340.28235E36	Factory setting 0.0000
Description:	Setting parameter for hysteresis HY of instance LVM 0 of the double-sided limiter.		
r20270	BO: LVM 0 input quantity above interval QU / LVM 0 X above QU		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter of instance LVM 0 of the double-sided limiter that input quantity X was at least once $X > M + L$ and X is $\geq M + L - HY$.		
r20271	BO: LVM 0 input quantity within interval QM / LVM 0 X within QM		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter of instance LVM 0 of the double-sided limiter that the input quantity X lies within the interval.		

r20272	BO: LVM 0 input quantity below interval QL / LVM 0 X below QL		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-

Description: Display parameter of instance LVM 0 of the double-sided limiter that input quantity X was at least once $X < M - L$ and $X \text{ is } \leq M - L + HY$.

p20273	LVM 0 run-time group / LVM 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999

Description: Setting parameter for the run-time group in which instance LVM 0 of the double-sided limiter is to be called.

Value:

- 5: Run-time group 5
- 6: Run-time group 6
- 9999: Do not calculate

p20274	LVM 0 run sequence / LVM 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	7999	720

Description: Setting parameter for the run sequence of instance LVM 0 within the run-time group set in p20273.

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p20275	CI: LVM 1 input X / LVM 1 input X		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0

Description: Sets the signal source of input quantity X of instance LVM 1 of the double-sided limiter.

p20276	LVM 1 interval average value M / LVM 1 avg value M		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min	Max	Factory setting
	-340.28235E36	340.28235E36	0.0000

Description: Setting parameter for the interval average M of instance LVM 1 of the double-sided limiter.

p20277	LVM 1 interval limit L / LVM 1 limit L		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min -340.28235E36	Max 340.28235E36	Factory setting 0.0000
Description:	Setting parameter for the interval limit L of instance LVM 1 of the double-sided limiter.		
p20278	LVM 1 hyst HY / LVM 1 hyst HY		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min -340.28235E36	Max 340.28235E36	Factory setting 0.0000
Description:	Setting parameter for hysteresis HY of instance LVM 1 of the double-sided limiter.		
r20279	BO: LVM 1 input quantity above interval QU / LVM 1 X above QU		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter of instance LVM 1 of the double-sided limiter that input quantity X was at least once $X > M + L$ and X is $\geq M + L - HY$.		
r20280	BO: LVM 1 input quantity within interval QM / LVM 1 X within QM		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter of instance LVM 1 of the double-sided limiter that the input quantity X lies within the interval.		
r20281	BO: LVM 1 input quantity below interval QL / LVM 1 X below QL		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter of instance LVM 1 of the double-sided limiter that input quantity X was at least once $X < M - L$ and X is $\leq M - L + HY$.		

p20282	LVM 1 run-time group / LVM 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which instance LVM 1 of the double-sided limiter is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20283	LVM 1 run sequence / LVM 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7270
CU240D-2_PN_F			
	Min 0	Max 7999	Factory setting 730
Description:	Setting parameter for the run sequence of instance LVM 1 within the run-time group set in p20282.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20284	CI: DIF 0 input X / DIF 0 input X		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source of input quantity X of instance DIF 0 of the differentiating element.		
p20285	DIF 0 differentiating time constant in ms / DIF 0 T_diff ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min 0.00	Max 340.28235E36	Factory setting 0.00
Description:	Sets the differentiating time constant Td in milliseconds of instance DIF 0 of the differentiating element.		
r20286	CO: DIF 0 output Y / DIF 0 output Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output quantity Y of instance DIF 0 of the differentiating element.		

p20287	DIF 0 run-time group / DIF 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999
Description:	Setting parameter for the run-time group in which instance DIF 0 of the differentiating element is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20288	DIF 0 run sequence / DIF 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7264
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	750
Description:	Setting parameter for the run sequence of instance DIF 0 within the run-time group set in p20287.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20300	BI: NOT 4 input I / NOT 4 input I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantity I of instance NOT 4 of the inverter.		

r20301	BO: NOT 4 inverted output / NOT 4 inv output		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for the inverted output of instance NOT 4 of the inverter.		

p20302	NOT 4 run-time group / NOT 4 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance NOT 4 of the inverter is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3		

List of parameters

4: Run-time group 4
 5: Run-time group 5
 6: Run-time group 6
 9999: Do not calculate

p20303	NOT 4 run sequence / NOT 4 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	770
Description:	Setting parameter for the run sequence of instance NOT 4 within the run-time group set in p20302.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20304	BI: NOT 5 input I / NOT 5 input I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantity I of instance NOT 5 of the inverter.		

r20305	BO: NOT 5 inverted output / NOT 5 inv output		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for the inverted output of instance NOT 5 of the inverter.		

p20306	NOT 5 run-time group / NOT 5 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which the instance NOT 5 of the inverter is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20307	NOT 5 run sequence / NOT 5 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7216
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 780
Description:	Setting parameter for the run sequence of instance NOT 5 within the run-time group set in p20306.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20308[0...3]	CI: ADD 2 inputs / ADD 2 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source of input quantities X0, X1, X2, X3 of instance ADD 2 of the adder.		
Index:	[0] = Input X0 [1] = Input X1 [2] = Input X2 [3] = Input X3		
r20309	CO: ADD 2 output Y / ADD 2 output Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for the output quantity $Y = X0 + X1 + X2 + X3$ of instance ADD 2 of the adder.		
p20310	ADD 2 run-time group / ADD 2 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance ADD 2 of the adder is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20311	ADD 2 run sequence / ADD 2 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7220
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	800
Description:	Setting parameter for the run sequence of instance ADD 2 within the run-time group set in p20310.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20312[0...1]	CI: NCM 0 inputs / NCM 0 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7225
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source of input quantities X0 and X1 of instance NCM 0 of the numeric comparator.		
Index:	[0] = Input X0 [1] = Input X1		
r20313	BO: NCM 0 output QU / NCM 0 output QU		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7225
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity QU of instance NCM 0 of the numeric comparator. QU is only set if X0 > X1.		
r20314	BO: NCM 0 output QE / NCM 0 output QE		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7225
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity QE of instance NCM 0 of the numeric comparator. QE is only set if X0 = X1.		
r20315	BO: NCM 0 output QL / NCM 0 output QL		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7225
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity QL of instance NCM 0 of the numeric comparator. QL is only set if X0 < X1.		

p20316	NCM 0 run-time group / NCM 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7225
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance NCM 0 of the numeric comparator is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20317	NCM 0 run sequence / NCM 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7225
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 820
Description:	Setting parameter for the run sequence of instance NCM 0 within the run-time group set in p20316.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20318[0...1]	CI: NCM 1 inputs / NCM 1 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7225
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source of input quantities X0 and X1 of instance NCM 1 of the numeric comparator.		
Index:	[0] = Input X0 [1] = Input X1		
r20319	BO: NCM 1 output QU / NCM 1 output QU		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7225
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for binary quantity QU of instance NCM 1 of the numeric comparator. QU is only set if X0 > X1.		

r20320	BO: NCM 1 output QE / NCM 1 output QE		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7225
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity QE of instance NCM 1 of the numeric comparator. QE is only set if X0 = X1.		
r20321	BO: NCM 1 output QL / NCM 1 output QL		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7225
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for binary quantity QL of instance NCM 1 of the numeric comparator. QL is only set if X0 < X1.		
p20322	NCM 1 run-time group / NCM 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7225
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999
Description:	Setting parameter for the run-time group in which the instance NCM 1 of the numeric comparator is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		
p20323	NCM 1 run sequence / NCM 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7225
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	830
Description:	Setting parameter for the run sequence of instance NCM 1 within the run-time group set in p20322.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20324[0...1]	BI: RSR 2 inputs / RSR 2 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for set input S and reset input R of instance RSR 2 of the RS flipflop.		

Index: [0] = Set S
[1] = Reset R

r20325	BO: RSR 2 output Q / RSR 2 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-

Description: Display parameter for output Q of instance RSR 2 of the RS flipflop

r20326	BO: RSR 2 inverted output QN / RSR 2 inv outp QN		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-

Description: Display parameter for inverted output QN of instance RSR 2 of the RS flipflop.

p20327	RSR 2 run-time group / RSR 2 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999

Description: Setting parameter for the run-time group in which instance RSR 2 of the RS flipflop is to be called.

Value:

- 1: Run-time group 1
- 2: Run-time group 2
- 3: Run-time group 3
- 4: Run-time group 4
- 5: Run-time group 5
- 6: Run-time group 6
- 9999: Do not calculate

p20328	RSR 2 run sequence / RSR 2 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	7999	850

Description: Setting parameter for the run sequence of instance RSR 2 within the run-time group set in p20327.

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p20329[0...3]	BI: DFR 2 inputs / DFR 2 inputs		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for trigger input I, D input D, set input S, and reset input R of instance DFR 2 of the D flipflop.		
Index:	[0] = Trigger input I [1] = D input D [2] = Set S [3] = Reset R		
r20330	BO: DFR 2 output Q / DFR 2 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for output Q of instance DFR 2 of the D flipflop.		
r20331	BO: DFR 2 inverted output QN / DFR 2 inv outp QN		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for the inverted output QN of instance DFR 2 of the D flipflop.		
p20332	DFR 2 run-time group / DFR 2 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	1	9999	9999
Description:	Setting parameter for the run-time group in which instance DFR 2 of the D flipflop is to be called.		
Value:	1: Run-time group 1 2: Run-time group 2 3: Run-time group 3 4: Run-time group 4 5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20333	DFR 2 run sequence / DFR 2 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7240
CU240D-2_PN_F			
	Min	Max	Factory setting
	0	32000	870
Description:	Setting parameter for the run-time group of instance DFR 2 within the run-time group set in p20332.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		

p20334	BI: PDE 2 input pulse I / PDE 2 inp_pulse I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for the input pulse I of instance PDE 2 of the closing delay device.		

p20335	PDE 2 pulse delay time in ms / PDE 2 t_del ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min	Max	Factory setting
	0.00	5400000.00	0.00
Description:	Setting parameter for pulse delay time T in milliseconds of instance PDE 2 of the closing delay device.		

r20336	BO: PDE 2 output Q / PDE 2 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for output pulse Q of instance PDE 2 of the closing delay device.		

p20337	PDE 2 run-time group / PDE 2 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min	Max	Factory setting
	5	9999	9999
Description:	Setting parameter for the run-time group in which instance PDE 2 of the closing delay device is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20338	PDE 2 run sequence / PDE 2 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 890
Description:	Setting parameter for the run sequence of instance PDE 2 within the run-time group set in p20337.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20339	BI: PDE 3 input pulse I / PDE 3 inp_pulse I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the input pulse I of instance PDE 3 of the closing delay device.		
p20340	PDE 3 pulse delay time in ms / PDE 3 t_del ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min 0.00	Max 5400000.00	Factory setting 0.00
Description:	Setting parameter for pulse delay time T in milliseconds of instance PDE 3 of the closing delay device.		
r20341	BO: PDE 3 output Q / PDE 3 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output pulse Q of instance PDE 3 of the closing delay device.		
p20342	PDE 3 run-time group / PDE 3 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which instance PDE 3 of the closing delay device is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20343	PDE 3 run sequence / PDE 3 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7232
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 900
Description:	Setting parameter for the run sequence of instance PDE 3 within the run-time group set in p20342.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20344	BI: PDF 2 input pulse I / PDF 2 inp_pulse I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the input pulse I of instance PDF 2 of the breaking delay device.		
p20345	PDF 2 pulse extension time in ms / PDF 2 t_ext ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min 0.00	Max 5400000.00	Factory setting 0.00
Description:	Setting parameter for pulse extension time T in milliseconds of instance PDF 2 of the breaking delay device.		
r20346	BO: PDF 2 output Q / PDF 2 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output pulse Q of instance PDF 2 of the breaking delay device.		
p20347	PDF 2 run-time group / PDF 2 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance PDF 2 of the breaking delay device is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20348	PDF 2 run sequence / PDF 2 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 920
Description:	Setting parameter for the run sequence of instance PDE 2 within the run-time group set in p20347.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20349	BI: PDF 3 input pulse I / PDF 3 inp_pulse I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the input pulse I of instance PDF 3 of the breaking delay device.		
p20350	PDF 3 pulse extension time in ms / PDF 3 t_ext ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min 0.00	Max 5400000.00	Factory setting 0.00
Description:	Setting parameter for pulse extension time T in milliseconds of instance PDF 3 of the breaking delay device.		
r20351	BO: PDF 3 output Q / PDF 3 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output pulse Q of instance PDF 3 of the breaking delay device.		
p20352	PDF 3 run-time group / PDF 3 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance PDF 3 of the breaking delay device is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20353	PDF 3 run sequence / PDF 3 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7233
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 930
Description:	Setting parameter for the run sequence of instance PDE 3 within the run-time group set in p20352.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20354	BI: MFP 2 input pulse I / MFP 2 inp_pulse I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the input pulse I of instance MFP 2 of the pulse generator.		
p20355	MFP 2 pulse duration in ms / MFP 2 pulse_dur ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 0.00	Max 5400000.00	Factory setting 0.00
Description:	Setting parameter for pulse duration T in milliseconds of instance MFP 2 of the pulse generator.		
r20356	BO: MFP 2 output Q / MFP 2 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output pulse Q of instance MFP 2 of the pulse generator.		
p20357	MFP 2 run-time group / MFP 2 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance MFP 2 of the pulse generator is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20358	MFP 2 run sequence / MFP 2 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 950
Description:	Setting parameter for the run sequence of instance MFP 2 within the run-time group set in p20357.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20359	BI: MFP 3 input pulse I / MFP 3 inp_pulse I		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / Binary
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for the input pulse I of instance MFP 3 of the pulse generator.		
p20360	MFP 3 pulse duration in ms / MFP 3 pulse_dur ms		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 0.00	Max 5400000.00	Factory setting 0.00
Description:	Setting parameter for pulse duration T in milliseconds of instance MFP 3 of the pulse generator.		
r20361	BO: MFP 3 output Q / MFP 3 output Q		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned32
CU240D-2_DP_F	Can be changed: -	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for output pulse Q of instance MFP 3 of the pulse generator.		
p20362	MFP 3 run-time group / MFP 3 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 5	Max 9999	Factory setting 9999
Description:	Setting parameter for the run-time group in which the instance MFP 3 of the pulse generator is to be called.		
Value:	5: Run-time group 5 6: Run-time group 6 9999: Do not calculate		

p20363	MFP 3 run sequence / MFP 3 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7230
CU240D-2_PN_F			
	Min 0	Max 32000	Factory setting 960
Description:	Setting parameter for the run sequence of instance MFP 3 within the run-time group set in p20362.		
Note:	The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.		
p20372	CI: PLI 0 input X / PLI 0 input X		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7226
CU240D-2_PN_F			
	Min -	Max -	Factory setting 0
Description:	Sets the signal source for input X of the polyline (20 breakpoints) of instance PLI 0.		
r20373	CO: PLI 0 output Y / PLI 0 output Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7226
CU240D-2_PN_F			
	Min -	Max -	Factory setting -
Description:	Display parameter for the output quantity Y of the polyline (20 breakpoints) of instance PLI 0		
p20374[0...19]	PLI 0 X-coordinate, A breakpoint / PLI 0 X-coordinate		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7226
CU240D-2_PN_F			
	Min -340.28235E36	Max 340.28235E36	Factory setting 0.0000
Description:	Sets the x-coordinates for the breakpoints (A0...A19) of the polyline (20 breakpoints) of instance PLI 0.		
Index:	[0] = Breakpoint 0 [1] = Breakpoint 1 [2] = Breakpoint 2 [3] = Breakpoint 3 [4] = Breakpoint 4 [5] = Breakpoint 5 [6] = Breakpoint 6 [7] = Breakpoint 7 [8] = Breakpoint 8 [9] = Breakpoint 9 [10] = Breakpoint 10 [11] = Breakpoint 11 [12] = Breakpoint 12 [13] = Breakpoint 13 [14] = Breakpoint 14 [15] = Breakpoint 15 [16] = Breakpoint 16		

List of parameters

[17] = Breakpoint 17

[18] = Breakpoint 18

[19] = Breakpoint 19

p20375[0...19]	PLI 0 Y-coordinate, B breakpoint / PLI 0 Y-coordinate		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7226
CU240D-2_PN_F			

Min	Max	Factory setting
-340.28235E36	340.28235E36	0.0000

Description: Sets the y-coordinates for the breakpoints (B0...B19) of the polyline (20 breakpoints) of instance PLI 0.

Index:

- [0] = Breakpoint 0
- [1] = Breakpoint 1
- [2] = Breakpoint 2
- [3] = Breakpoint 3
- [4] = Breakpoint 4
- [5] = Breakpoint 5
- [6] = Breakpoint 6
- [7] = Breakpoint 7
- [8] = Breakpoint 8
- [9] = Breakpoint 9
- [10] = Breakpoint 10
- [11] = Breakpoint 11
- [12] = Breakpoint 12
- [13] = Breakpoint 13
- [14] = Breakpoint 14
- [15] = Breakpoint 15
- [16] = Breakpoint 16
- [17] = Breakpoint 17
- [18] = Breakpoint 18
- [19] = Breakpoint 19

p20376	PLI 0 run-time group / PLI 0 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7226
CU240D-2_PN_F			

Min	Max	Factory setting
5	9999	9999

Description: Setting parameter for the run-time group in which instance PLI 0 of the polyline is to be called

Value:

- 5: Run-time group 5
- 6: Run-time group 6
- 9999: Do not calculate

p20377	PLI 0 run sequence / PLI 0 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7226
CU240D-2_PN_F			

Min	Max	Factory setting
0	32000	980

Description: Setting parameter for the run sequence of instance PLI 0 within the run-time group set in p20376.

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p20378	CI: PLI 1 input X / PLI 1 input X		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: U32 / FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7226
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	0
Description:	Sets the signal source for input X of the polyline (20 breakpoints) of instance PLI 1.		

r20379	CO: PLI 1 output Y / PLI 1 output Y		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: -	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7226
CU240D-2_PN_F			
	Min	Max	Factory setting
	-	-	-
Description:	Display parameter for the output quantity Y of the polyline (20 breakpoints) of instance PLI 1		

p20380[0...19]	PLI 1 X-coordinate, A breakpoint / PLI 1 X-coordinate		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7226
CU240D-2_PN_F			
	Min	Max	Factory setting
	-340.28235E36	340.28235E36	0.0000
Description:	Sets the x-coordinates for the breakpoints (A0...A19) of the polyline (20 breakpoints) of instance PLI 1.		
Index:	[0] = Breakpoint 0 [1] = Breakpoint 1 [2] = Breakpoint 2 [3] = Breakpoint 3 [4] = Breakpoint 4 [5] = Breakpoint 5 [6] = Breakpoint 6 [7] = Breakpoint 7 [8] = Breakpoint 8 [9] = Breakpoint 9 [10] = Breakpoint 10 [11] = Breakpoint 11 [12] = Breakpoint 12 [13] = Breakpoint 13 [14] = Breakpoint 14 [15] = Breakpoint 15 [16] = Breakpoint 16 [17] = Breakpoint 17 [18] = Breakpoint 18 [19] = Breakpoint 19		

p20381[0...19]	PLI 1 Y-coordinate, B breakpoint / PLI 1 Y-coordinate		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: FloatingPoint32
CU240D-2_DP_F	Can be changed: T	Scaling: PERCENT	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7226
CU240D-2_PN_F			

Min	Max	Factory setting
-340.28235E36	340.28235E36	0.0000

Description: Sets the y-coordinates for the breakpoints (B0...B19) of the polyline (20 breakpoints) of instance PLI 1.

Index:
 [0] = Breakpoint 0
 [1] = Breakpoint 1
 [2] = Breakpoint 2
 [3] = Breakpoint 3
 [4] = Breakpoint 4
 [5] = Breakpoint 5
 [6] = Breakpoint 6
 [7] = Breakpoint 7
 [8] = Breakpoint 8
 [9] = Breakpoint 9
 [10] = Breakpoint 10
 [11] = Breakpoint 11
 [12] = Breakpoint 12
 [13] = Breakpoint 13
 [14] = Breakpoint 14
 [15] = Breakpoint 15
 [16] = Breakpoint 16
 [17] = Breakpoint 17
 [18] = Breakpoint 18
 [19] = Breakpoint 19

p20382	PLI 1 run-time group / PLI 1 RTG		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7226
CU240D-2_PN_F			

Min	Max	Factory setting
5	9999	9999

Description: Setting parameter for the run-time group in which instance PLI 1 of the polyline is to be called

Value:
 5: Run-time group 5
 6: Run-time group 6
 9999: Do not calculate

p20383	PLI 1 run sequence / PLI 1 RunSeq		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_DP_F	Can be changed: T	Scaling: -	Dyn. index: -
CU240D-2_PN	Units group: -	Unit selection: -	Func. diagram: 7226
CU240D-2_PN_F			

Min	Max	Factory setting
0	32000	990

Description: Setting parameter for the run sequence of instance PLI 1 within the run-time group set in p20382.

Note: The function blocks with a lower run sequence value are calculated before function blocks with a higher run sequence value.

p60022	PROFIsafe telegram selection / Ps telegram_sel		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: -
CU250D-2_PN_F			
	Min	Max	Factory setting
	0	998	998
Description:	Sets the PROFIsafe telegram number.		
Value:	0: No PROFIsafe telegram selected 30: PROFIsafe standard telegram 30, PZD-1/1 900: PROFIsafe SIEMENS telegram 900, PZD-2/2 998: Compatibility mode (as for firmware version < 4.6)		
Note:	For p9601.3 = p9801.3 = 1 (PROFIsafe enabled), the following variants exist when parameterizing PROFIsafe telegram 30: - p9611 = p9811 = 998 and p60022 = 0 - p9611 = p9811 = 998 and p60022 = 30 - p9611 = p9811 = 30 and p60022 = 30		
p60022	PROFIsafe telegram selection / Ps telegram_sel		
CU240D-2_DP	Access level: 3	Calculated: -	Data type: Unsigned16
CU240D-2_PN	Can be changed: T	Scaling: -	Dyn. index: -
	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	0	998	998
Description:	Sets the PROFIsafe telegram number.		
Value:	0: No PROFIsafe telegram selected 30: PROFIsafe standard telegram 30, PZD-1/1 998: Compatibility mode (as for firmware version < 4.6)		
Note:	For p9601.3 = p9801.3 = 1 (PROFIsafe enabled), the following variants exist when parameterizing PROFIsafe telegram 30: - p9611 = p9811 = 998 and p60022 = 0 - p9611 = p9811 = 998 and p60022 = 30 - p9611 = p9811 = 30 and p60022 = 30		
p60122	PROFIdrive SIC telegram selection / SIC telegr		
CU240D-2_DP_F	Access level: 3	Calculated: -	Data type: Integer16
CU240D-2_PN_F	Can be changed: T	Scaling: -	Dyn. index: -
CU250D-2_DP_F	Units group: -	Unit selection: -	Func. diagram: 2423
CU250D-2_PN_F			
	Min	Max	Factory setting
	700	999	999
Description:	Sets the telegram for the Safety Info Channel (SIC). The SIC telegram p60122 is attached directly to the PZD telegram p0922/p2079.		
Value:	700: Supplementary telegram 700, PZD-0/3 999: Free telegram configuration with BICO		
Dependency:	Refer to: p0922, p2071, p2079		
Note:	The clearance to the PZD telegram can be increased using p2071. After changing p0922/p2079 or p2071, then p60122 must be set again. The telegram interconnections can only be changed if p60122 and p0922 are both set to 999.		

r61000[0...239] PROFINET Name of Station / PN Name of Station

CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-

Description: Displays PROFINET Name of Station.

Notice: An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual.

r61001[0...3] PROFINET IP of Station / PN IP of Station

CU240D-2_PN	Access level: 3	Calculated: -	Data type: Unsigned8
CU240D-2_PN_F	Can be changed: -	Scaling: -	Dyn. index: -
CU250D-2_PN_F	Units group: -	Unit selection: -	Func. diagram: -
	Min	Max	Factory setting
	-	-	-

Description: Displays PROFINET IP of Station.

1.3 Command and drive data sets - overview

1.3.1 Command data sets (CDS)

Product: SINAMICS G120D, Version: 4601800, Language: eng, Type: CDS

p0641[0...n]	Cl: Current limit variable / Curr lim var
p0820[0...n]	Bl: Drive Data Set selection DDS bit 0 / DDS select bit 0
p0821[0...n]	Bl: Drive Data Set selection DDS bit 1 / DDS select bit 1
p0840[0...n]	Bl: ON / OFF (OFF1) / ON / OFF (OFF1)
p0844[0...n]	Bl: No coast-down / coast-down (OFF2) signal source 1 / OFF2 S_src 1
p0845[0...n]	Bl: No coast-down / coast-down (OFF2) signal source 2 / OFF2 S_src 2
p0848[0...n]	Bl: No Quick Stop / Quick Stop (OFF3) signal source 1 / OFF3 S_src 1
p0849[0...n]	Bl: No Quick Stop / Quick Stop (OFF3) signal source 2 / OFF3 S_src 2
p0852[0...n]	Bl: Enable operation/inhibit operation / Operation enable
p0854[0...n]	Bl: Control by PLC/no control by PLC / Master ctrl by PLC
p0855[0...n]	Bl: Unconditionally open holding brake / Uncond open brake
p0856[0...n]	Bl: Speed controller enable / n_ctrl enable
p0858[0...n]	Bl: Unconditionally close holding brake / Uncond close brake
p1000[0...n]	Speed setpoint selection / n_set sel
p1020[0...n]	Bl: Fixed speed setpoint selection Bit 0 / n_set_fixed Bit 0
p1021[0...n]	Bl: Fixed speed setpoint selection Bit 1 / n_set_fixed Bit 1
p1022[0...n]	Bl: Fixed speed setpoint selection Bit 2 / n_set_fixed Bit 2
p1023[0...n]	Bl: Fixed speed setpoint selection Bit 3 / n_set_fixed Bit 3
p1035[0...n]	Bl: Motorized potentiometer setpoint raise / Mop raise
p1036[0...n]	Bl: Motorized potentiometer lower setpoint / Mop lower
p1039[0...n]	Bl: Motorized potentiometer inversion / MotP inv
p1041[0...n]	Bl: Motorized potentiometer manual/automatic / Mop manual/auto
p1042[0...n]	Cl: Motorized potentiometer automatic setpoint / Mop auto setpoint
p1043[0...n]	Bl: Motorized potentiometer accept setting value / MotP acc set val
p1044[0...n]	Cl: Motorized potentiometer setting value / Mop set val
p1051[0...n]	Cl: Speed limit RFG positive direction of rotation / n_limit RFG pos
p1052[0...n]	Cl: Speed limit RFG negative direction of rotation / n_limit RFG neg
p1055[0...n]	Bl: Jog bit 0 / Jog bit 0
p1056[0...n]	Bl: Jog bit 1 / Jog bit 1
p1070[0...n]	Cl: Main setpoint / Main setpoint
p1071[0...n]	Cl: Main setpoint scaling / Main setp scal
p1075[0...n]	Cl: Supplementary setpoint / Suppl setp
p1076[0...n]	Cl: Supplementary setpoint scaling / Suppl setp scal
p1085[0...n]	Cl: Speed limit in positive direction of rotation / n_limit pos
p1088[0...n]	Cl: Speed limit in negative direction of rotation / n_limit neg
p1098[0...n]	Cl: Skip speed scaling / n_skip scal
p1106[0...n]	Cl: Minimum speed signal source / n_min s_src
p1108[0...n]	Bl: Total setpoint selection / Total setp sel
p1109[0...n]	Cl: Total setpoint / Total setp
p1110[0...n]	Bl: Inhibit negative direction / Inhib neg dir
p1111[0...n]	Bl: Inhibit positive direction / Inhib pos dir
p1113[0...n]	Bl: Setpoint inversion / Setp inv
p1122[0...n]	Bl: Bypass ramp-function generator / Bypass RFG
p1138[0...n]	Cl: Up ramp scaling / Up ramp scaling
p1139[0...n]	Cl: Down ramp scaling / Down ramp scaling
p1140[0...n]	Bl: Enable ramp-function generator/inhibit ramp-function generator / RFG enable

p1141[0...n]	BI: Continue ramp-function generator/freeze ramp-function generator / Continue RFG
p1142[0...n]	BI: Enable setpoint/inhibit setpoint / Setpoint enable
p1143[0...n]	BI: Ramp-function generator, accept setting value / RFG accept set v
p1144[0...n]	CI: Ramp-function generator setting value / RFG setting value
p1155[0...n]	CI: Speed controller speed setpoint 1 / n_ctrl n_set 1
p1160[0...n]	CI: Speed controller speed setpoint 2 / n_ctrl n_set 2
p1201[0...n]	BI: Flying restart enable signal source / Fly_res enab S_src
p1230[0...n]	BI: DC braking activation / DC brake act
p1330[0...n]	CI: U/f control independent voltage setpoint / Uf U_set independ.
p1352[0...n]	CI: Motor holding brake starting frequency signal source / Brake f_start
p1455[0...n]	CI: Speed controller P gain adaptation signal / n_ctr adapt_sig Kp
p1466[0...n]	CI: Speed controller P-gain scaling / n_ctrl Kp scal
p1475[0...n]	CI: Speed controller torque setting value for motor holding brake / n_ctrl M_sv MHB
p1476[0...n]	BI: Speed controller hold integrator / n_ctrl integ stop
p1477[0...n]	BI: Speed controller set integrator value / n_ctrl integ set
p1478[0...n]	CI: Speed controller integrator setting value / n_ctr integ_setVal
p1479[0...n]	CI: Speed controller integrator setting value scaling / n_ctrl I_val scal
p1486[0...n]	CI: Droop compensation torque / Droop M_comp
p1492[0...n]	BI: Droop feedback enable / Droop enable
p1500[0...n]	Torque setpoint selection / M_set sel
p1501[0...n]	BI: Change over between closed-loop speed/torque control / Changeov n/M_ctrl
p1503[0...n]	CI: Torque setpoint / M_set
p1511[0...n]	CI: Supplementary torque 1 / M_suppl 1
p1512[0...n]	CI: Supplementary torque 1 scaling / M_suppl 1 scal
p1513[0...n]	CI: Supplementary torque 2 / M_suppl 2
p1522[0...n]	CI: Torque limit upper / M_max upper
p1523[0...n]	CI: Torque limit lower / M_max lower
p1528[0...n]	CI: Torque limit upper scaling / M_max upper scal
p1529[0...n]	CI: Torque limit lower scaling / M_max lower scal
p1545[0...n]	BI: Activates travel to a fixed stop / TfS activation
p1552[0...n]	CI: Torque limit upper scaling without offset / M_max up w/o offs
p1554[0...n]	CI: Torque limit lower scaling without offset / M_max low w/o offs
p2103[0...n]	BI: 1. Acknowledge faults / 1. Acknowledge
p2104[0...n]	BI: 2. Acknowledge faults / 2. Acknowledge
p2105[0...n]	BI: 3. Acknowledge faults / 3. Acknowledge
p2106[0...n]	BI: External fault 1 / External fault 1
p2107[0...n]	BI: External fault 2 / External fault 2
p2108[0...n]	BI: External fault 3 / External fault 3
p2112[0...n]	BI: External alarm 1 / External alarm 1
p2116[0...n]	BI: External alarm 2 / External alarm 2
p2117[0...n]	BI: External alarm 3 / External alarm 3
p2144[0...n]	BI: Motor stall monitoring enable (negated) / Mot stall enab neg
p2148[0...n]	BI: RFG active / RFG active
p2151[0...n]	CI: Speed setpoint for messages/signals / n_set for msg
p2200[0...n]	BI: Technology controller enable / Tec_ctrl enable
p2220[0...n]	BI: Technology controller fixed value selection bit 0 / Tec_ctrl sel bit 0
p2221[0...n]	BI: Technology controller fixed value selection bit 1 / Tec_ctrl sel bit 1
p2222[0...n]	BI: Technology controller fixed value selection bit 2 / Tec_ctrl sel bit 2
p2223[0...n]	BI: Technology controller fixed value selection bit 3 / Tec_ctrl sel bit 3
p2235[0...n]	BI: Technology controller motorized potentiometer raise setpoint / Tec_ctrl mop raise
p2236[0...n]	BI: Technology controller motorized potentiometer lower setpoint / Tec_ctrl mop lower
p2253[0...n]	CI: Technology controller setpoint 1 / Tec_ctrl setp 1
p2254[0...n]	CI: Technology controller setpoint 2 / Tec_ctrl setp 2

p2264[0...n]	CI: Technology controller actual value / Tec_ctrl act val
p2286[0...n]	BI: Hold technology controller integrator / Tec_ctr integ stop
p2289[0...n]	CI: Technology controller pre-control signal / Tec_ctrl prectrl
p2296[0...n]	CI: Technology controller output scaling / Tec_ctrl outp scal
p2297[0...n]	CI: Technology controller maximum limit signal source / Tec_ctrMaxLimS_src
p2298[0...n]	CI: Technology controller minimum limit signal source / Tec_ctrl min_l s_s
p2299[0...n]	CI: Technology controller limit offset / Tech_ctrl lim offs
p3111[0...n]	BI: External fault 3 enable / Ext fault 3 enab
p3112[0...n]	BI: External fault 3 enable negated / Ext flt 3 enab neg
p3230[0...n]	CI: Load monitoring speed actual value / Load monit n_act
p3232[0...n]	BI: Load monitoring failure detection / Load_moni fail_det

1.3.2 Drive data sets (DDS)

Product: SINAMICS G120D, Version: 4601800, Language: eng, Type: DDS

p0187[0...n]	Encoder 1 encoder data set number / Enc 1 EDS number
p0188[0...n]	Encoder 2 encoder data set number / Enc 2 EDS number
p0340[0...n]	Automatic calculation motor/control parameters / Calc auto par
p0640[0...n]	Current limit / Current limit
p1001[0...n]	CO: Fixed speed setpoint 1 / n_set_fixed 1
p1002[0...n]	CO: Fixed speed setpoint 2 / n_set_fixed 2
p1003[0...n]	CO: Fixed speed setpoint 3 / n_set_fixed 3
p1004[0...n]	CO: Fixed speed setpoint 4 / n_set_fixed 4
p1005[0...n]	CO: Fixed speed setpoint 5 / n_set_fixed 5
p1006[0...n]	CO: Fixed speed setpoint 6 / n_set_fixed 6
p1007[0...n]	CO: Fixed speed setpoint 7 / n_set_fixed 7
p1008[0...n]	CO: Fixed speed setpoint 8 / n_set_fixed 8
p1009[0...n]	CO: Fixed speed setpoint 9 / n_set_fixed 9
p1010[0...n]	CO: Fixed speed setpoint 10 / n_set_fixed 10
p1011[0...n]	CO: Fixed speed setpoint 11 / n_set_fixed 11
p1012[0...n]	CO: Fixed speed setpoint 12 / n_set_fixed 12
p1013[0...n]	CO: Fixed speed setpoint 13 / n_set_fixed 13
p1014[0...n]	CO: Fixed speed setpoint 14 / n_set_fixed 14
p1015[0...n]	CO: Fixed speed setpoint 15 / n_set_fixed 15
p1030[0...n]	Motorized potentiometer configuration / Mop configuration
p1037[0...n]	Motorized potentiometer maximum speed / MotP n_max
p1038[0...n]	Motorized potentiometer minimum speed / MotP n_min
p1040[0...n]	Motorized potentiometer starting value / Mop start value
p1047[0...n]	Motorized potentiometer ramp-up time / Mop ramp-up time
p1048[0...n]	Motorized potentiometer ramp-down time / Mop ramp-down time
p1058[0...n]	Jog 1 speed setpoint / Jog 1 n_set
p1059[0...n]	Jog 2 speed setpoint / Jog 2 n_set
p1063[0...n]	Speed limit setpoint channel / n_limit setp
p1080[0...n]	Minimum speed / n_min
p1082[0...n]	Maximum speed / n_max
p1083[0...n]	CO: Speed limit in positive direction of rotation / n_limit pos
p1086[0...n]	CO: Speed limit in negative direction of rotation / n_limit neg
p1091[0...n]	Skip speed 1 / n_skip 1
p1092[0...n]	Skip speed 2 / n_skip 2
p1093[0...n]	Skip speed 3 / n_skip 3
p1094[0...n]	Skip speed 4 / n_skip 4
p1101[0...n]	Skip speed bandwidth / n_skip bandwidth
p1120[0...n]	Ramp-function generator ramp-up time / RFG ramp-up time
p1121[0...n]	Ramp-function generator ramp-down time / RFG ramp-down time
p1123[0...n]	Ramp-function generator minimum ramp-up time / RFG t_RU min
p1127[0...n]	Ramp-function generator minimum ramp-down time / RFG t_RD min
p1130[0...n]	Ramp-function generator initial rounding-off time / RFG t_start_round
p1131[0...n]	Ramp-function generator final rounding-off time / RFG t_end_delay
p1134[0...n]	Ramp-function generator rounding-off type / RFG round-off type
p1135[0...n]	OFF3 ramp-down time / OFF3 t_RD
p1136[0...n]	OFF3 initial rounding-off time / RFGOFF3 t_strt_rnd
p1137[0...n]	OFF3 final rounding-off time / RFG OFF3 t_end_del
p1145[0...n]	Ramp-function generator tracking intensity. / RFG track intens
p1148[0...n]	Ramp-function gen. tolerance for ramp-up and ramp-down active / RFG tol HL/RL act
p1200[0...n]	Flying restart operating mode / FlyRest op_mode

p1202[0...n]	Flying restart search current / FlyRest I_srch
p1203[0...n]	Flying restart search rate factor / FlyRst v_Srch Fact
p1226[0...n]	Threshold for zero speed detection / n_standst n_thresh
p1300[0...n]	Open-loop/closed-loop control operating mode / Op/cl-lp ctrl_mode
p1302[0...n]	U/f control configuration / U/f config
p1310[0...n]	Voltage boost permanent / U_boost perm
p1311[0...n]	Voltage boost at acceleration / U_boost accelerate
p1312[0...n]	Voltage boost when starting / U_boost starting
p1320[0...n]	U/f control programmable characteristic frequency 1 / Uf char f1
p1321[0...n]	U/f control programmable characteristic voltage 1 / Uf char U1
p1322[0...n]	U/f control programmable characteristic frequency 2 / Uf char f2
p1323[0...n]	U/f control programmable characteristic voltage 2 / Uf char U2
p1324[0...n]	U/f control programmable characteristic frequency 3 / Uf char f3
p1325[0...n]	U/f control programmable characteristic voltage 3 / Uf char U3
p1326[0...n]	U/f control programmable characteristic frequency 4 / Uf char f4
p1327[0...n]	U/f control programmable characteristic voltage 4 / Uf char U4
p1333[0...n]	U/f control FCC starting frequency / U/f FCC f_start
p1334[0...n]	U/f control slip compensation starting frequency / Slip comp start
p1335[0...n]	Slip compensation scaling / Slip comp scal
p1336[0...n]	Slip compensation limit value / Slip comp lim val
p1338[0...n]	U/f mode resonance damping gain / Uf Res_damp gain
p1339[0...n]	U/f mode resonance damping filter time constant / Uf Res_damp T
p1340[0...n]	I_max frequency controller proportional gain / I_max_ctrl Kp
p1341[0...n]	I_max frequency controller integral time / I_max_ctrl Tn
p1345[0...n]	I_max voltage controller proportional gain / I_max_U_ctrl Kp
p1346[0...n]	I_max voltage controller integral time / I_max_U_ctrl Tn
p1349[0...n]	U/f mode resonance damping maximum frequency / Uf res_damp f_max
p1350[0...n]	Soft starting / Soft starting
p1351[0...n]	CO: Motor holding brake starting frequency / Brake f_start
p1400[0...n]	Speed control configuration / n_ctrl config
p1401[0...n]	Flux control configuration / Flux ctrl config
p1402[0...n]	Closed-loop current control and motor model configuration / I_ctrl config
p1416[0...n]	Speed setpoint filter 1 time constant / n_set_filt 1 T
p1441[0...n]	Actual speed smoothing time / n_act T_smooth
p1442[0...n]	Speed controller speed actual value smoothing time / n_ctr n_act T_smth
p1452[0...n]	Speed controller speed actual value smoothing time (SLVC) / n_C n_act T_s SLVC
p1456[0...n]	Speed controller P gain adaptation lower starting point / n_ctrl AdaptKpLow
p1457[0...n]	Speed controller P gain adaptation upper starting point / n_ctrl AdaptKp up
p1458[0...n]	Adaptation factor lower / Adapt_factor lower
p1459[0...n]	Adaptation factor upper / Adapt_factor upper
p1460[0...n]	Speed controller P gain adaptation speed lower / n_ctrl Kp n lower
p1461[0...n]	Speed controller Kp adaptation speed upper scaling / n_ctr Kp n up scal
p1462[0...n]	Speed controller integral time adaptation speed lower / n_ctrl Tn n lower
p1463[0...n]	Speed controller Tn adaptation speed upper scaling / n_ctr Tn n up scal
p1464[0...n]	Speed controller adaptation speed lower / n_ctrl n lower
p1465[0...n]	Speed controller adaptation speed upper / n_ctrl n upper
p1470[0...n]	Speed controller encoderless operation P-gain / n_ctrl SLVC Kp
p1472[0...n]	Speed controller encoderless operation integral time / n_ctrl SLVC Tn
p1487[0...n]	Droop compensation torque scaling / Droop M_comp scal
p1488[0...n]	Droop input source / Droop input source
p1489[0...n]	Droop feedback scaling / Droop scaling
p1496[0...n]	Acceleration pre-control scaling / a_prectrl scal
p1499[0...n]	Accelerating for torque control scaling / a for M_ctrl scal

p1514[0...n]	Supplementary torque 2 scaling / M_suppl 2 scal
p1517[0...n]	Accelerating torque smoothing time constant / M_accel T_smooth
p1520[0...n]	CO: Torque limit upper / M_max upper
p1521[0...n]	CO: Torque limit lower / M_max lower
p1524[0...n]	CO: Torque limit upper/motoring scaling / M_max up/mot scal
p1525[0...n]	CO: Torque limit lower scaling / M_max lower scal
p1530[0...n]	Power limit motoring / P_max mot
p1531[0...n]	Power limit regenerative / P_max gen
p1553[0...n]	Stall limit scaling / Stall limit scal
p1570[0...n]	CO: Flux setpoint / Flex setp
p1573[0...n]	Flux threshold value magnetizing / Flux thresh magnet
p1574[0...n]	Voltage reserve dynamic / U_reserve dyn
p1580[0...n]	Efficiency optimization / Efficiency opt.
p1582[0...n]	Flux setpoint smoothing time / Flux setp T_smth
p1584[0...n]	Field weakening operation flux setpoint smoothing time / Field weak T_smth
p1594[0...n]	Field-weakening controller P gain / Field_ctrl Kp
p1596[0...n]	Field weakening controller integral-action time / Field_ctrl Tn
p1610[0...n]	Torque setpoint static (SLVC) / M_set static
p1611[0...n]	Supplementary accelerating torque (SLVC) / M_suppl_accel
p1616[0...n]	Current setpoint smoothing time / I_set T_smooth
p1654[0...n]	Curr. setpoint torque-gen. smoothing time field weakening range / Isq_s T_smth FW
p1702[0...n]	Isd current controller pre-control scaling / Isd_ctr_prectrScal
p1703[0...n]	Isq current controller pre-control scaling / Isq_ctr_prectrScal
p1715[0...n]	Current controller P gain / I_ctrl Kp
p1717[0...n]	Current controller integral-action time / I_ctrl Tn
p1726[0...n]	Quadrature arm decoupling scaling / Transv_decpl scal
p1727[0...n]	Quadrature arm decoupling at voltage limit scaling / TrnsvDecplVmaxScal
p1730[0...n]	Isd controller integral component shutdown threshold / Isd_ctr I_compDeac
p1731[0...n]	Isd controller combination current time component / Isd ctrl iCombi T1
p1740[0...n]	Gain resonance damping for encoderless closed-loop control / Gain res_damp
p1744[0...n]	Motor model speed threshold stall detection / MotMod n_thr stall
p1745[0...n]	Motor model error threshold stall detection / MotMod ThreshStall
p1749[0...n]	Motor model increase changeover speed encoderless operation / Incr n_chng no enc
p1750[0...n]	Motor model configuration / MotMod config
p1752[0...n]	Motor model changeover speed operation with encoder / MotMod n_chgov enc
p1753[0...n]	Motor model changeover speed hysteresis operation with encoder / MotMod n_chgovHysE
p1755[0...n]	Motor model changeover speed encoderless operation / MotMod n_chgSnsorI
p1758[0...n]	Motor model changeover delay time closed/open-loop control / MotMod t_cl_op
p1759[0...n]	Motor model changeover delay time open/closed-loop control / MotMod t_op_cl
p1760[0...n]	Motor model with encoder speed adaptation Kp / MotMod wE n_ada Kp
p1761[0...n]	Motor model with encoder speed adaptation Tn / MotMod wE n_ada Tn
p1764[0...n]	Motor model without encoder speed adaptation Kp / MotMod woE n_adaKp
p1767[0...n]	Motor model without encoder speed adaptation Tn / MotMod woE n_adaTn
p1774[0...n]	Motor model offset voltage compensation alpha / MotMod offs comp A
p1775[0...n]	Motor model offset voltage compensation beta / MotMod offs comp B
p1780[0...n]	Motor model adaptation configuration / MotMod adapt conf
p1784[0...n]	Motor model feedback scaling / MotMod fdbk scal
p1785[0...n]	Motor model Lh adaptation Kp / MotMod Lh Kp
p1786[0...n]	Motor model Lh adaptation integral time / MotMod Lh Tn
r1787[0...n]	Motor model Lh adaptation corrective value / MotMod Lh corr
p1795[0...n]	Motor model kT adaptation integral time / MotMod kT Tn
r1797[0...n]	Motor model kT adaptation corrective value / MotMod kT corr
p1800[0...n]	Pulse frequency setpoint / Pulse freq setp

p1802[0...n]	Modulator mode / Modulator mode
p1803[0...n]	Maximum modulation depth / Modulat depth max
p1806[0...n]	Filter time constant Vdc correction / T_filt Vdc_corr
p1820[0...n]	Reverse the output phase sequence / Outp_ph_seq rev
p1959[0...n]	Rotating measurement configuration / Rot meas config
p2140[0...n]	Hysteresis speed 2 / n_hysteresis 2
p2141[0...n]	Speed threshold 1 / n_thresh val 1
p2142[0...n]	Hysteresis speed 1 / n_hysteresis 1
p2149[0...n]	Monitoring configuration / Monit config
p2150[0...n]	Hysteresis speed 3 / n_hysteresis 3
p2152[0...n]	Delay for comparison $n > n_{max}$ / Del $n > n_{max}$
p2153[0...n]	Speed actual value filter time constant / n_act_filt T
p2155[0...n]	Speed threshold 2 / n_thresh val 2
p2156[0...n]	On delay comparison value reached / t_on cmptr val rchd
p2157[0...n]	Speed threshold 5 / n_thresh val 5
p2158[0...n]	Delay for n_act comparison with speed threshold value 5 / Del compar n_5
p2159[0...n]	Speed threshold 6 / n_thresh val 6
p2160[0...n]	Delay for n_act comparison with speed threshold value 6 / Del compar n_6
p2161[0...n]	Speed threshold 3 / n_thresh val 3
p2162[0...n]	Hysteresis speed $n_{act} > n_{max}$ / Hyst $n_{act} > n_{max}$
p2163[0...n]	Speed threshold 4 / n_thresh val 4
p2164[0...n]	Hysteresis speed 4 / n_hysteresis 4
p2166[0...n]	Off delay $n_{act} = n_{set}$ / t_del_off n_i=n_so
p2167[0...n]	Switch-on delay $n_{act} = n_{set}$ / t_on n_act=n_set
p2170[0...n]	Current threshold value / I_thres
p2171[0...n]	Current threshold value reached delay time / t_del I_thresh rch
p2172[0...n]	DC link voltage threshold value / Vdc thresh val
p2173[0...n]	DC link voltage comparison delay time / t_del Vdc
p2174[0...n]	Torque threshold value 1 / M_thresh val 1
p2175[0...n]	Motor blocked speed threshold / Mot lock n_thresh
p2176[0...n]	Torque threshold value comparison delay time / M_thrsh comp T_del
p2177[0...n]	Motor blocked delay time / Mot lock t_del
p2178[0...n]	Motor stalled delay time / Mot stall t_del
p2179[0...n]	Output load identification current limit / Outp_Id iden I_lim
p2180[0...n]	Missing output load delay time / No load t_delay
p2181[0...n]	Load monitoring response / Load monit resp
p2182[0...n]	Load monitoring speed threshold value 1 / n_thresh 1
p2183[0...n]	Load monitoring speed threshold value 2 / n_thresh 2
p2184[0...n]	Load monitoring speed threshold value 3 / n_thresh 3
p2185[0...n]	Load monitoring torque threshold 1 upper / M_thresh 1 upper
p2186[0...n]	Load monitoring torque threshold 1 lower / M_thresh 1 lower
p2187[0...n]	Load monitoring torque threshold 2 upper / M_thresh 2 upper
p2188[0...n]	Load monitoring torque threshold 2 lower / M_thresh 2 lower
p2189[0...n]	Load monitoring torque threshold 3 upper / M_thresh 3 upper
p2190[0...n]	Load monitoring torque threshold 3 lower / M_thresh 3 lower
p2192[0...n]	Load monitoring delay time / Load monit t_del
p2193[0...n]	Load monitoring configuration / Load monit config
p2194[0...n]	Torque threshold value 2 / M_thresh val 2
p2195[0...n]	Torque utilization switch-off delay / M_util t_off
p2196[0...n]	Torque utilization scaling / M_util scal
p2201[0...n]	CO: Technology controller fixed value 1 / Tec_ctrl fix val1
p2202[0...n]	CO: Technology controller fixed value 2 / Tec_ctr fix val 2
p2203[0...n]	CO: Technology controller fixed value 3 / Tec_ctr fix val 3

p2204[0...n]	CO: Technology controller fixed value 4 / Tec_ctr fix val 4
p2205[0...n]	CO: Technology controller fixed value 5 / Tec_ctr fix val 5
p2206[0...n]	CO: Technology controller fixed value 6 / Tec_ctr fix val 6
p2207[0...n]	CO: Technology controller fixed value 7 / Tec_ctr fix val 7
p2208[0...n]	CO: Technology controller fixed value 8 / Tec_ctr fix val 8
p2209[0...n]	CO: Technology controller fixed value 9 / Tec_ctr fix val 9
p2210[0...n]	CO: Technology controller fixed value 10 / Tec_ctr fix val 10
p2211[0...n]	CO: Technology controller fixed value 11 / Tec_ctr fix val 11
p2212[0...n]	CO: Technology controller fixed value 12 / Tec_ctr fix val 12
p2213[0...n]	CO: Technology controller fixed value 13 / Tec_ctr fix val 13
p2214[0...n]	CO: Technology controller fixed value 14 / Tec_ctr fix val 14
p2215[0...n]	CO: Technology controller fixed value 15 / Tec_ctr fix val 15
p2216[0...n]	Technology controller fixed value selection method / Tec_ctr FixVal sel
p2230[0...n]	Technology controller motorized potentiometer configuration / Tec_ctr mop config
p2237[0...n]	Technology controller motorized potentiometer maximum value / Tec_ctrl mop max
p2238[0...n]	Technology controller motorized potentiometer minimum value / Tec_ctrl mop min
p2240[0...n]	Technology controller motorized potentiometer starting value / Tec_ctrl mop start
p2247[0...n]	Technology controller motorized potentiometer ramp-up time / Tec_ctr mop t_r-up
p2248[0...n]	Technology controller motorized potentiometer ramp-down time / Tec_ctrMop t_rdown
p2502[0...n]	LR encoder assignment / Encoder assignment
p2503[0...n]	LR length unit LU per 10 mm / LU per 10 mm
p2504[0...n]	LR motor/load motor revolutions / Mot/load motor rev
p2505[0...n]	LR motor/load load revolutions / Mot/load load rev
p2506[0...n]	LR length unit LU per load revolution / LU per load rev
p2519[0...n]	LR position actual value preprocessing config. DDS changeover / s_act config DDS
p2533[0...n]	LR position setpoint filter time constant / s_set_filt T
p2534[0...n]	LR speed pre-control factor / n_prectrl fact
p2535[0...n]	LR speed pre-control balancing filter dead time / n_prectrl t_dead
p2536[0...n]	LR speed pre-control symmetrizing filter PT1 / n_prectrl filt PT1
p2538[0...n]	LR proportional gain / Kp
p2539[0...n]	LR integral time / Tn
p2546[0...n]	LR dynamic following error monitoring tolerance / s_delta_monit tol
p2567[0...n]	LR torque pre-control moment of inertia / M_prectrl M_inertia
p2634[0...n]	EPOS fixed stop maximum following error / Following err max
p2900[0...n]	CO: Fixed value 1 [%] / Fixed value 1 [%]
p2901[0...n]	CO: Fixed value 2 [%] / Fixed value 2 [%]
p2930[0...n]	CO: Fixed value M [Nm] / Fixed value M [Nm]
p3231[0...n]	Load monitoring speed deviation / Load monit n_dev
p3233[0...n]	Torque actual value filter time constant / M_act_filt T
p3320[0...n]	Fluid flow machine power point 1 / Fluid_mach P1
p3321[0...n]	Fluid flow machine speed point 1 / Fluid_mach n1
p3322[0...n]	Fluid flow machine power point 2 / Fluid_mach P2
p3323[0...n]	Fluid flow machine speed point 2 / Fluid_mach n2
p3324[0...n]	Fluid flow machine power point 3 / Fluid_mach P3
p3325[0...n]	Fluid flow machine speed point 3 / Fluid_mach n3
p3326[0...n]	Fluid flow machine power point 4 / Fluid_mach P4
p3327[0...n]	Fluid flow machine speed point 4 / Fluid_mach n4
p3328[0...n]	Fluid flow machine power point 5 / Fluid_mach P5
p3329[0...n]	Fluid flow machine speed point 5 / Fluid_mach n5
r3925[0...n]	Identification final display / Ident final_disp
r3927[0...n]	Motor data identification control word / MotID STW
r3928[0...n]	Rotating measurement configuration / Rot meas config
r3929[0...n]	Motor data identification modulated voltage generation / MotID U_gen mod

1.3.3 Motor data sets (MDS)

Product: SINAMICS G120D, Version: 4601800, Language: eng, Type: MDS

p0133[0...n]	Motor configuration / Motor config
p0300[0...n]	Motor type selection / Mot type sel
p0301[0...n]	Motor code number selection / Mot code No. sel
p0304[0...n]	Rated motor voltage / Mot U _{rated}
p0305[0...n]	Rated motor current / Mot I _{rated}
p0306[0...n]	Number of motors connected in parallel / Motor qty
p0307[0...n]	Rated motor power / Mot P _{rated}
p0308[0...n]	Rated motor power factor / Mot cos _{phi} _{rated}
p0309[0...n]	Rated motor efficiency / Mot eta _{rated}
p0310[0...n]	Rated motor frequency / Mot f _{rated}
p0311[0...n]	Rated motor speed / Mot n _{rated}
p0312[0...n]	Rated motor torque / Mot M _{rated}
r0313[0...n]	Motor pole pair number, actual (or calculated) / Mot PolePairNo act
p0314[0...n]	Motor pole pair number / Mot pole pair No.
p0316[0...n]	Motor torque constant / Mot kT
p0318[0...n]	Motor stall current / Mot I _{standstill}
p0320[0...n]	Motor rated magnetizing current/short-circuit current / Mot I _{mag} _{rated}
p0322[0...n]	Maximum motor speed / Mot n _{max}
p0323[0...n]	Maximum motor current / Mot I _{max}
p0325[0...n]	Motor pole position identification current 1st phase / Mot PolID I 1st ph
p0326[0...n]	Motor stall torque correction factor / Mot M _{stall} _{corr}
p0327[0...n]	Optimum motor load angle / Mot phi _{load} _{opt}
p0328[0...n]	Motor reluctance torque constant / Mot kT _{reluctance}
p0329[0...n]	Motor pole position identification current / Mot PolID current
r0330[0...n]	Rated motor slip / Mot slip _{rated}
r0331[0...n]	Actual motor magnetizing current/short-circuit current / Mot I _{mag} _{rtd} act
r0332[0...n]	Rated motor power factor / Mot cos _{phi} _{rated}
r0333[0...n]	Rated motor torque / Mot M _{rated}
r0334[0...n]	Actual motor-torque constant / Mot kT act
p0335[0...n]	Motor cooling type / Mot cool type
r0337[0...n]	Rated motor EMF / Mot EMF _{rated}
p0341[0...n]	Motor moment of inertia / Mot M _{mom} of inert
p0342[0...n]	Ratio between the total and motor moment of inertia / Mot MomInert Ratio
r0343[0...n]	Rated motor current identified / Mot I _{rated} ident
p0344[0...n]	Motor weight (for the thermal motor model) / Mot weight th mod
r0345[0...n]	Nominal motor starting time / Mot t _{start} _{rated}
p0346[0...n]	Motor excitation build-up time / Mot t _{excitation}
p0347[0...n]	Motor de-excitation time / Mot t _{de-excitat.}
p0350[0...n]	Motor stator resistance cold / Mot R _{stator} cold
p0352[0...n]	Cable resistance / R _{cable}
p0354[0...n]	Motor rotor resistance cold / Mot R _r cold
p0356[0...n]	Motor stator leakage inductance / Mot L _{stator} leak.
p0357[0...n]	Motor stator inductance d axis / Mot L _{stator} d
p0358[0...n]	Motor rotor leakage inductance / Mot L _{rot} leak
p0360[0...n]	Motor magnetizing inductance / Mot L _h
p0362[0...n]	Motor saturation characteristic flux 1 / Mot saturat.flux 1
p0363[0...n]	Motor saturation characteristic flux 2 / Mot saturat.flux 2
p0364[0...n]	Motor saturation characteristic flux 3 / Mot saturat.flux 3
p0365[0...n]	Motor saturation characteristic flux 4 / Mot saturat.flux 4
p0366[0...n]	Motor saturation characteristic I _{mag} 1 / Mot sat. I _{mag} 1

p0367[0...n]	Motor saturation characteristic I_mag 2 / Mot sat. I_mag 2
p0368[0...n]	Motor saturation characteristic I_mag 3 / Mot sat. I_mag 3
p0369[0...n]	Motor saturation characteristic I_mag 4 / Mot sat. I_mag 4
r0370[0...n]	Motor stator resistance cold / Mot R_stator cold
r0372[0...n]	Cable resistance / Mot R_cable
r0373[0...n]	Motor rated stator resistance / Mot R_stator rated
r0374[0...n]	Motor rotor resistance cold / Mot R_r cold
r0376[0...n]	Rated motor rotor resistance / Mot R_rotor rated
r0377[0...n]	Motor leakage inductance total / Mot L_leak total
r0378[0...n]	Motor stator inductance d axis / Mot L_stator d
r0382[0...n]	Motor magnetizing inductance transformed / Mot L_magn transf
r0384[0...n]	Motor rotor time constant / damping time constant d axis / Mot T_rotor/T_Dd
r0386[0...n]	Motor stator leakage time constant / Mot T_stator leak
r0395[0...n]	Actual stator resistance / R_stator act
r0396[0...n]	Actual rotor resistance / R_rotor act
p0397[0...n]	Angle magnetic decoupling maximum angle / Magn decpl max_ang
p0601[0...n]	Motor temperature sensor type / Mot_temp_sens type
p0604[0...n]	Mot_temp_mod 2/KTY alarm threshold / Mod 2/KTY A thresh
p0605[0...n]	Mot_temp_mod 1/2 threshold / Mod 1/2 threshold
p0606[0...n]	Mot_temp_mod 2/KTY timer / Mod 2/KTY t_timer
p0607[0...n]	Temperature sensor fault timer / Sensor fault time
p0610[0...n]	Motor overtemperature response / Mot temp response
p0611[0...n]	I2t motor model thermal time constant / I2t mot_mod T
p0612[0...n]	Mot_temp_mod activation / Mot_temp_mod act
p0614[0...n]	Thermal resistance adaptation reduction factor / Therm R_adapt red
p0615[0...n]	Mot_temp_mod 1 (I2t) fault threshold / I2t F thresh
p0620[0...n]	Thermal adaptation, stator and rotor resistance / Mot therm_adapt R
p0621[0...n]	Identification stator resistance after restart / Rst_ident Restart
p0622[0...n]	Motor excitation time for Rs_ident after powering up again / t_excit Rs_id
p0625[0...n]	Motor ambient temperature / Mot T_ambient
p0626[0...n]	Motor overtemperature, stator core / Mot T_over core
p0627[0...n]	Motor overtemperature, stator winding / Mot T_over stator
p0628[0...n]	Motor overtemperature rotor winding / Mot T_over rotor
r0630[0...n]	Mot_temp_mod ambient temperature / Mod T_ambient
r0631[0...n]	Mot_temp_mod stator iron temperature / Mod T_stator
r0632[0...n]	Mot_temp_mod stator winding temperature / Mod T_winding
r0633[0...n]	Mot_temp_mod rotor temperature / Mod T_rotor
p0634[0...n]	Q flux flux constant unsaturated / PSIQ KPSI UNSAT
p0635[0...n]	Q flux quadrature axis current constant unsaturated / PSIQ KIQ UNSAT
p0636[0...n]	Q flux direct axis current constant unsaturated / PSIQ KID UNSAT
p0637[0...n]	Q flux flux gradient saturated / PSIQ Grad SAT
p0650[0...n]	Actual motor operating hours / Mot t_oper act
p0651[0...n]	Motor operating hours maintenance interval / Mot t_op maint
p0826[0...n]	Motor changeover motor number / Mot_chng mot No.
p1231[0...n]	DC braking configuration / DCBRK config
p1232[0...n]	DC braking braking current / DCBRK I_brake
p1233[0...n]	DC braking time / DCBRK time
p1234[0...n]	Speed at the start of DC braking / DCBRK n_start
p1909[0...n]	Motor data identification control word / MotID STW
p1980[0...n]	PolID technique / PolID technique
p1999[0...n]	Ang. commutation offset calibr. and PolID scaling / Com_ang_offs scal
r3926[0...n]	Voltage generation alternating base voltage amplitude / U_gen altern base

1.3.4 Power unit data sets (PDS)

Product: SINAMICS G120D, Version: 4601800, Language: eng, Type: PDS

p0124[0...n]	CU detection via LED / CU detection LED
r0200[0...n]	Power unit code number actual / PU code no. act
p0201[0...n]	Power unit code number / PU code no
r0203[0...n]	Actual power unit type / PU actual type
r0204[0...n]	Power unit hardware properties / PU HW property

1.3.5 Encoder Data Sets (EDS)

Product: SINAMICS G120D, Version: 4601800, Language: eng, Type: EDS

p0400[0...n]	Encoder type selection / Enc_typ sel
p0404[0...n]	Encoder configuration effective / Enc_config eff
p0405[0...n]	Square-wave encoder track A/B / Sq-wave enc A/B
p0407[0...n]	Linear encoder grid division / Enc grid div
p0408[0...n]	Rotary encoder pulse number / Rot enc pulse No.
p0410[0...n]	Encoder inversion actual value / Enc inv act value
p0418[0...n]	Fine resolution Gx_XIST1 (in bits) / Enc fine Gx_XIST1
p0419[0...n]	Fine resolution absolute value Gx_XIST2 (in bits) / Enc fine Gx_XIST2
p0421[0...n]	Absolute encoder rotary multiturn resolution / Enc abs multiturn
p0422[0...n]	Absolute encoder linear measuring step resolution / Enc abs meas step
p0423[0...n]	Absolute encoder rotary singleturn resolution / Enc abs singleturn
p0425[0...n]	Encoder rotary zero mark distance / Enc rot dist ZM
p0426[0...n]	Encoder zero mark differential distance / Enc ZM Dif_dist
p0427[0...n]	Encoder SSI baud rate / Enc SSI baud rate
p0428[0...n]	Encoder SSI monoflop time / Enc SSI t_monoflop
p0429[0...n]	Encoder SSI configuration / Enc SSI config
p0430[0...n]	Sensor Module configuration / SM config
p0434[0...n]	Encoder SSI error bit / Enc SSI error bit
p0435[0...n]	Encoder SSI alarm bit / Enc SSI alarm bit
p0436[0...n]	Encoder SSI parity bit / Enc SSI parity bit
p0437[0...n]	Sensor Module configuration extended / SM config ext
p0438[0...n]	Squarewave encoder filter time / Enc t_filt
p0439[0...n]	Encoder ramp-up time / Enc ramp-up time
p0446[0...n]	Encoder SSI number of bits before the absolute value / Enc SSI bit before
p0447[0...n]	Encoder SSI number of bits absolute value / Enc SSI bit val
p0448[0...n]	Encoder SSI number of bits after the absolute value / Enc SSI bit after
p0449[0...n]	Encoder SSI number of bits filler bits / Enc SSI fill bits
p0453[0...n]	Pulse encoder evaluation zero speed measuring time / Enc_ev n_0 t_meas
p0493[0...n]	Zero mark selection input terminal / ZM_sel inp_term
p0494[0...n]	Equivalent zero mark input terminal / ZM_equiv input
p2507[0...n]	LR absolute encoder adjustment status / Abs_enc_adj stat
p2525[0...n]	CO: LR encoder adjustment offset / Enc_adj offset
p4680[0...n]	Zero mark monitoring tolerance permissible / ZM_monit tol perm
p4681[0...n]	Zero mark monitoring tolerance window limit 1 positive / ZM tol lim 1 pos
p4682[0...n]	Zero mark monitoring tolerance window limit 1 negative / ZM tol lim 1 neg
p4683[0...n]	Zero mark monitoring tolerance window alarm threshold positive / ZM tol A_thr pos
p4684[0...n]	Zero mark monitoring tolerance window alarm threshold negative / ZM tol A_thr neg
p4685[0...n]	Speed actual value mean value generation / n_act mean val
p4686[0...n]	Zero mark minimum length / ZM min length

1.4 BICO parameters (connectors/binectors)

1.4.1 Binector inputs (BI)

Product: SINAMICS G120D, Version: 4601800, Language: eng, Type: BI

p0730	BI: CU signal source for terminal DO 0 / CU S_src DO 0
p0731	BI: CU signal source for terminal DO 1 / CU S_src DO 1
p0806	BI: Inhibit master control / PcCtrl inhibit
p0810	BI: Command data set selection CDS bit 0 / CDS select bit 0
p0811	BI: Command data set selection CDS bit 1 / CDS select bit 1
p0820[0...n]	BI: Drive Data Set selection DDS bit 0 / DDS select bit 0
p0821[0...n]	BI: Drive Data Set selection DDS bit 1 / DDS select bit 1
p0840[0...n]	BI: ON / OFF (OFF1) / ON / OFF (OFF1)
p0844[0...n]	BI: No coast-down / coast-down (OFF2) signal source 1 / OFF2 S_src 1
p0845[0...n]	BI: No coast-down / coast-down (OFF2) signal source 2 / OFF2 S_src 2
p0848[0...n]	BI: No Quick Stop / Quick Stop (OFF3) signal source 1 / OFF3 S_src 1
p0849[0...n]	BI: No Quick Stop / Quick Stop (OFF3) signal source 2 / OFF3 S_src 2
p0852[0...n]	BI: Enable operation/inhibit operation / Operation enable
p0854[0...n]	BI: Control by PLC/no control by PLC / Master ctrl by PLC
p0855[0...n]	BI: Unconditionally open holding brake / Uncond open brake
p0856[0...n]	BI: Speed controller enable / n_ctrl enable
p0858[0...n]	BI: Unconditionally close holding brake / Uncond close brake
p0860	BI: Line contactor feedback signal / Line contact feedb
p0897	BI: Parking axis selection / Parking axis sel
p1020[0...n]	BI: Fixed speed setpoint selection Bit 0 / n_set_fixed Bit 0
p1021[0...n]	BI: Fixed speed setpoint selection Bit 1 / n_set_fixed Bit 1
p1022[0...n]	BI: Fixed speed setpoint selection Bit 2 / n_set_fixed Bit 2
p1023[0...n]	BI: Fixed speed setpoint selection Bit 3 / n_set_fixed Bit 3
p1035[0...n]	BI: Motorized potentiometer setpoint raise / Mop raise
p1036[0...n]	BI: Motorized potentiometer lower setpoint / Mop lower
p1039[0...n]	BI: Motorized potentiometer inversion / MotP inv
p1041[0...n]	BI: Motorized potentiometer manual/automatic / Mop manual/auto
p1043[0...n]	BI: Motorized potentiometer accept setting value / MotP acc set val
p1055[0...n]	BI: Jog bit 0 / Jog bit 0
p1056[0...n]	BI: Jog bit 1 / Jog bit 1
p1108[0...n]	BI: Total setpoint selection / Total setp sel
p1110[0...n]	BI: Inhibit negative direction / Inhib neg dir
p1111[0...n]	BI: Inhibit positive direction / Inhib pos dir
p1113[0...n]	BI: Setpoint inversion / Setp inv
p1122[0...n]	BI: Bypass ramp-function generator / Bypass RFG
p1140[0...n]	BI: Enable ramp-function generator/inhibit ramp-function generator / RFG enable
p1141[0...n]	BI: Continue ramp-function generator/freeze ramp-function generator / Continue RFG
p1142[0...n]	BI: Enable setpoint/inhibit setpoint / Setpoint enable
p1143[0...n]	BI: Ramp-function generator, accept setting value / RFG accept set v
p1201[0...n]	BI: Flying restart enable signal source / Fly_res enab S_src
p1230[0...n]	BI: DC braking activation / DC brake act
p1476[0...n]	BI: Speed controller hold integrator / n_ctrl integ stop
p1477[0...n]	BI: Speed controller set integrator value / n_ctrl integ set
p1492[0...n]	BI: Droop feedback enable / Droop enable
p1501[0...n]	BI: Change over between closed-loop speed/torque control / Changeov n/M_ctrl
p1545[0...n]	BI: Activates travel to a fixed stop / TfS activation

p2080[0...15]	BI: Binector-connector converter status word 1 / Bin/con ZSW1
p2081[0...15]	BI: Binector-connector converter status word 2 / Bin/con ZSW2
p2082[0...15]	BI: Binector-connector converter status word 3 / Bin/con ZSW3
p2083[0...15]	BI: Binector-connector converter status word 4 / Bin/con ZSW4
p2084[0...15]	BI: Binector-connector converter status word 5 / Bin/con ZSW5
p2103[0...n]	BI: 1. Acknowledge faults / 1. Acknowledge
p2104[0...n]	BI: 2. Acknowledge faults / 2. Acknowledge
p2105[0...n]	BI: 3. Acknowledge faults / 3. Acknowledge
p2106[0...n]	BI: External fault 1 / External fault 1
p2107[0...n]	BI: External fault 2 / External fault 2
p2108[0...n]	BI: External fault 3 / External fault 3
p2112[0...n]	BI: External alarm 1 / External alarm 1
p2116[0...n]	BI: External alarm 2 / External alarm 2
p2117[0...n]	BI: External alarm 3 / External alarm 3
p2144[0...n]	BI: Motor stall monitoring enable (negated) / Mot stall enab neg
p2148[0...n]	BI: RFG active / RFG active
p2200[0...n]	BI: Technology controller enable / Tec_ctrl enable
p2220[0...n]	BI: Technology controller fixed value selection bit 0 / Tec_ctrl sel bit 0
p2221[0...n]	BI: Technology controller fixed value selection bit 1 / Tec_ctrl sel bit 1
p2222[0...n]	BI: Technology controller fixed value selection bit 2 / Tec_ctrl sel bit 2
p2223[0...n]	BI: Technology controller fixed value selection bit 3 / Tec_ctrl sel bit 3
p2235[0...n]	BI: Technology controller motorized potentiometer raise setpoint / Tec_ctrl mop raise
p2236[0...n]	BI: Technology controller motorized potentiometer lower setpoint / Tec_ctrl mop lower
p2286[0...n]	BI: Hold technology controller integrator / Tec_ctr integ stop
p2508[0...3]	BI: LR activate reference mark search / Ref_mark act
p2509[0...3]	BI: LR activating measuring probe evaluation / MT_eval act
p2510[0...3]	BI: LR selecting measuring probe evaluation / MT_eval select
p2511[0...3]	BI: LR measuring probe evaluation edge / MT_eval edge
p2512[0...3]	BI: LR pos. actual value preprocessing activate corr. value (edge) / ActVal_prepCorrAct
p2514[0...3]	BI: LR activate position actual value setting / s_act setting act
p2549	BI: LR enable 1 / Enable 1
p2550	BI: LR enable 2 / Enable 2
p2551	BI: LR setpoint signal present / Mess setp pres
p2552	BI: LR signal travel to fixed stop active / Signal TfS act
p2553	BI: LR signal fixed stop reached / Signal fixed stop
p2554	BI: LR signal traversing command active / Sig trav_cmnd act
p2568	BI: EPOS STOP cam activation / STOP cam act
p2569	BI: EPOS STOP cam minus / STOP cam minus
p2570	BI: EPOS STOP cam plus / STOP cam plus
p2575	BI: EPOS jerk limiting activation / Jerk limit act
p2577	BI: EPOS modulo correction activation / Modulo corr act
p2582	BI: EPOS software limit switch activation / SW lim sw act
p2589	BI: EPOS jog 1 signal source / Jog 1 S_src
p2590	BI: EPOS jog 2 signal source / Jog 2 S_src
p2591	BI: EPOS jogging incremental / Jog incr
p2595	BI: EPOS referencing start / Ref start
p2596	BI: EPOS set reference point / Set ref_pt
p2597	BI: EPOS referencing type selection / Ref_typ select
p2604	BI: EPOS search for reference start direction / Srch for ref dir
p2612	BI: EPOS search for reference reference cam / Ref_cam
p2613	BI: EPOS search for reference reversing cam minus / Rev minus
p2614	BI: EPOS search for reference reversing cam plus / Rev plus
p2625	BI: EPOS traversing block selection bit 0 / Trav_blk sel bit 0

p2626	BI: EPOS traversing block selection bit 1 / Trav_blk sel bit 1
p2627	BI: EPOS traversing block selection bit 2 / Trav_blk sel bit 2
p2628	BI: EPOS traversing block selection bit 3 / Trav_blk sel bit 3
p2631	BI: EPOS activate traversing task (0 -> 1) / Trav_task act
p2633	BI: EPOS external block change (0 -> 1) / Ext BlckChg (0->1)
p2637	BI: EPOS fixed stop reached / Fixed stop reached
p2638	BI: EPOS fixed stop outside the monitoring window / Fixed stop outside
p2639	BI: EPOS torque limit reached / M_limit reached
p2640	BI: EPOS intermediate stop (0 signal) / Intermediate stop
p2641	BI: EPOS reject traversing task (0 signal) / Trav_task reject
p2647	BI: EPOS direct setpoint input/MDI selection / MDI selection
p2648	BI: EPOS direct setpoint input/MDI positioning type / MDI pos_type
p2649	BI: EPOS direct setpoint input/MDI transfer type selection / MDI trans_type sel
p2650	BI: EPOS direct setpoint input/MDI setpoint acceptance edge / MDI setp_accept
p2651	BI: EPOS direct setpoint input/MDI direction selection, positive / MDI dir_sel pos
p2652	BI: EPOS direct setpoint input/MDI direction selection negative / MDI dir_sel neg
p2653	BI: EPOS direct setpoint input/MDI setting-up selection / MDI setting-up sel
p2655[0...1]	BI: EPOS select tracking mode / Sel tracking mode
p2656	BI: EPOS enable basic positioner / EPOS enable
p2658	BI: EPOS pos. actual value valid feedback signal / Pos valid feedback
p2659	BI: EPOS referencing active feedback signal / Ref act fdbk
p2661	BI: EPOS measured value valid feedback signal / MeasVal valid fdbk
p2662	BI: EPOS adjustment value valid feedback signal / Adj val valid FS
p2663	BI: EPOS clamping active feedback signal / Clamping active FS
p2730[0...3]	BI: LR pos. actual value preprocessing activate neg. corr. (edge) / ActV_prep neg corr
p2731	BI: LR reduce I component / Reduce I comp
p3111[0...n]	BI: External fault 3 enable / Ext fault 3 enab
p3112[0...n]	BI: External fault 3 enable negated / Ext flt 3 enab neg
p3232[0...n]	BI: Load monitoring failure detection / Load_moni fail_det
p4655[0...2]	BI: XIST1_ERW reset signal source / XIST1_ERW resS_src
p5614	BI: Pe set switch-on inhibit signal source / Pe sw on_inh s_src
p9705	BI: SI Motion: Test stop signal source / SI Mtn test stop
p10007	BI: SI forced checking procedure F-DO signal source / SI FCP F-DO s_src
p20030[0...3]	BI: AND 0 inputs / AND 0 inputs
p20034[0...3]	BI: AND 1 inputs / AND 1 inputs
p20038[0...3]	BI: AND 2 inputs / AND 2 inputs
p20042[0...3]	BI: AND 3 inputs / AND 3 inputs
p20046[0...3]	BI: OR 0 inputs / OR 0 inputs
p20050[0...3]	BI: OR 1 inputs / OR 1 inputs
p20054[0...3]	BI: OR 2 inputs / OR 2 inputs
p20058[0...3]	BI: OR 3 inputs / OR 3 inputs
p20062[0...3]	BI: XOR 0 inputs / XOR 0 inputs
p20066[0...3]	BI: XOR 1 inputs / XOR 1 inputs
p20070[0...3]	BI: XOR 2 inputs / XOR 2 inputs
p20074[0...3]	BI: XOR 3 inputs / XOR 3 inputs
p20078	BI: NOT 0 input I / NOT 0 input I
p20082	BI: NOT 1 input I / NOT 1 input I
p20086	BI: NOT 2 input I / NOT 2 input I
p20090	BI: NOT 3 input I / NOT 3 input I
p20138	BI: MFP 0 input pulse I / MFP 0 inp_pulse I
p20143	BI: MFP 1 input pulse I / MFP 1 inp_pulse I
p20148	BI: PCL 0 input pulse I / PCL 0 inp_pulse I
p20153	BI: PCL 1 input pulse I / PCL 1 inp_pulse I

p20158	BI: PDE 0 input pulse I / PDE 0 inp_pulse I
p20163	BI: PDE 1 input pulse I / PDE 1 inp_pulse I
p20168	BI: PDF 0 input pulse I / PDF 0 inp_pulse I
p20173	BI: PDF 1 input pulse I / PDF 1 inp_pulse I
p20178[0...1]	BI: PST 0 inputs / PST 0 inputs
p20183[0...1]	BI: PST 1 inputs / PST 1 inputs
p20188[0...1]	BI: RSR 0 inputs / RSR 0 inputs
p20193[0...1]	BI: RSR 1 inputs / RSR 1 inputs
p20198[0...3]	BI: DFR 0 inputs / DFR 0 inputs
p20203[0...3]	BI: DFR 1 inputs / DFR 1 inputs
p20208[0...1]	BI: BSW 0 inputs / BSW 0 inputs
p20209	BI: BSW 0 switch setting I / BSW 0 sw_setting
p20213[0...1]	BI: BSW 1 inputs / BSW 1 inputs
p20214	BI: BSW 1 switch setting I / BSW 1 sw_setting
p20219	BI: NSW 0 switch setting I / NSW 0 sw_setting
p20224	BI: NSW 1 switch setting I / NSW 1 sw_setting
p20245	BI: PT1 0 accept setting value S / PT1 0 acc set val
p20251	BI: PT1 1 accept setting value S / PT1 1 acc set val
p20260	BI: INT 0 accept setting value S / INT 0 acc set val
p20300	BI: NOT 4 input I / NOT 4 input I
p20304	BI: NOT 5 input I / NOT 5 input I
p20324[0...1]	BI: RSR 2 inputs / RSR 2 inputs
p20329[0...3]	BI: DFR 2 inputs / DFR 2 inputs
p20334	BI: PDE 2 input pulse I / PDE 2 inp_pulse I
p20339	BI: PDE 3 input pulse I / PDE 3 inp_pulse I
p20344	BI: PDF 2 input pulse I / PDF 2 inp_pulse I
p20349	BI: PDF 3 input pulse I / PDF 3 inp_pulse I
p20354	BI: MFP 2 input pulse I / MFP 2 inp_pulse I
p20359	BI: MFP 3 input pulse I / MFP 3 inp_pulse I

1.4.2 Connector inputs (CI)

Product: SINAMICS G120D, Version: 4601800, Language: eng, Type: CI

p0480[0...2]	CI: Encoder control word Gn_STW signal source / Enc Gn_STW S_src
p0641[0...n]	CI: Current limit variable / Curr lim var
p1042[0...n]	CI: Motorized potentiometer automatic setpoint / Mop auto setpoint
p1044[0...n]	CI: Motorized potentiometer setting value / Mop set val
p1051[0...n]	CI: Speed limit RFG positive direction of rotation / n_limit RFG pos
p1052[0...n]	CI: Speed limit RFG negative direction of rotation / n_limit RFG neg
p1070[0...n]	CI: Main setpoint / Main setpoint
p1071[0...n]	CI: Main setpoint scaling / Main setp scal
p1075[0...n]	CI: Supplementary setpoint / Suppl setp
p1076[0...n]	CI: Supplementary setpoint scaling / Suppl setp scal
p1085[0...n]	CI: Speed limit in positive direction of rotation / n_limit pos
p1088[0...n]	CI: Speed limit in negative direction of rotation / n_limit neg
p1098[0...n]	CI: Skip speed scaling / n_skip scal
p1106[0...n]	CI: Minimum speed signal source / n_min s_src
p1109[0...n]	CI: Total setpoint / Total setp
p1138[0...n]	CI: Up ramp scaling / Up ramp scaling
p1139[0...n]	CI: Down ramp scaling / Down ramp scaling
p1144[0...n]	CI: Ramp-function generator setting value / RFG setting value
p1155[0...n]	CI: Speed controller speed setpoint 1 / n_ctrl n_set 1
p1160[0...n]	CI: Speed controller speed setpoint 2 / n_ctrl n_set 2
p1330[0...n]	CI: U/f control independent voltage setpoint / Uf U_set independ.
p1352[0...n]	CI: Motor holding brake starting frequency signal source / Brake f_start
p1455[0...n]	CI: Speed controller P gain adaptation signal / n_ctr adapt_sig Kp
p1466[0...n]	CI: Speed controller P-gain scaling / n_ctrl Kp scal
p1475[0...n]	CI: Speed controller torque setting value for motor holding brake / n_ctrl M_sv MHB
p1478[0...n]	CI: Speed controller integrator setting value / n_ctr integ_setVal
p1479[0...n]	CI: Speed controller integrator setting value scaling / n_ctrl I_val scal
p1486[0...n]	CI: Droop compensation torque / Droop M_comp
p1503[0...n]	CI: Torque setpoint / M_set
p1511[0...n]	CI: Supplementary torque 1 / M_suppl 1
p1512[0...n]	CI: Supplementary torque 1 scaling / M_suppl 1 scal
p1513[0...n]	CI: Supplementary torque 2 / M_suppl 2
p1522[0...n]	CI: Torque limit upper / M_max upper
p1523[0...n]	CI: Torque limit lower / M_max lower
p1528[0...n]	CI: Torque limit upper scaling / M_max upper scal
p1529[0...n]	CI: Torque limit lower scaling / M_max lower scal
p1552[0...n]	CI: Torque limit upper scaling without offset / M_max up w/o offs
p1554[0...n]	CI: Torque limit lower scaling without offset / M_max low w/o offs
p2016[0...3]	CI: Comm IF USS PZD send word / Comm USS send word
p2051[0...13]	CI: PROFIdrive PZD send word / PZD send word
p2061[0...12]	CI: PROFIBUS PZD send double word / PZD send DW
p2099[0...1]	CI: Connector-binector converter signal source / Con/bin S_src
p2151[0...n]	CI: Speed setpoint for messages/signals / n_set for msg
p2253[0...n]	CI: Technology controller setpoint 1 / Tec_ctrl setp 1
p2254[0...n]	CI: Technology controller setpoint 2 / Tec_ctrl setp 2
p2264[0...n]	CI: Technology controller actual value / Tec_ctrl act val
p2289[0...n]	CI: Technology controller pre-control signal / Tec_ctrl prectrl
p2296[0...n]	CI: Technology controller output scaling / Tec_ctrl outp scal
p2297[0...n]	CI: Technology controller maximum limit signal source / Tec_ctrMaxLimS_src
p2298[0...n]	CI: Technology controller minimum limit signal source / Tec_ctrl min_l s_s

p2299[0...n]	CI: Technology controller limit offset / Tech_ctrl lim offs
p2513[0...3]	CI: LR Position actual value preprocessing corrective value / Act val_prep corr
p2515[0...3]	CI: LR position actual setting setting value / s_act set setVal
p2516[0...3]	CI: LR position offset / Position offset
p2530	CI: LR position setpoint / s_set
p2531	CI: LR velocity setpoint / v_set
p2532	CI: LR position actual value / s_act
p2537	CI: LR position controller adaptation / Adaptation
p2541	CI: LR position controller output speed limit signal source / LR_outp lim S_src
p2555	CI: LR LU/revolution LU/mm / LU/rev LU/mm
p2578	CI: EPOS software limit switch minus signal source / SW limSw Min S_src
p2579	CI: EPOS software limit switch plus signal source / SW limSwPlus S_src
p2593	CI: EPOS LU/revolution LU/mm / LU/rev LU/mm
p2594[0...2]	CI: EPOS Maximum velocity externally limited / v_Max ext lim
p2598[0...3]	CI: EPOS reference point coordinate signal source / Ref_pt coord S_src
p2642	CI: EPOS direct setpoint input/MDI position setpoint / MDI s_set
p2643	CI: EPOS direct setpoint input/MDI velocity setpoint / MDI v_set
p2644	CI: EPOS direct setpoint input/MDI acceleration override / MDI a_over
p2645	CI: EPOS direct setpoint input/MDI deceleration override / MDI -a_over
p2646	CI: EPOS velocity override / v_over
p2654	CI: EPOS direct setpoint input/MDI mode adaptation / MDI mode adapt
p2657	CI: EPOS position actual value/position setting value / Pos act/set value
p2660	CI: EPOS measured value referencing / Meas val ref
p3230[0...n]	CI: Load monitoring speed actual value / Load monit n_act
p20094[0...3]	CI: ADD 0 inputs / ADD 0 inputs
p20098[0...3]	CI: ADD 1 inputs / ADD 1 inputs
p20102[0...1]	CI: SUB 0 inputs / SUB 0 inputs
p20106[0...1]	CI: SUB 1 inputs / SUB 1 inputs
p20110[0...3]	CI: MUL 0 inputs / MUL 0 inputs
p20114[0...3]	CI: MUL 1 inputs / MUL 1 inputs
p20118[0...1]	CI: DIV 0 inputs / DIV 0 inputs
p20123[0...1]	CI: DIV 1 inputs / DIV 1 inputs
p20128	CI: AVA 0 input X / AVA 0 input X
p20133	CI: AVA 1 input X / AVA 1 input X
p20218[0...1]	CI: NSW 0 inputs / NSW 0 inputs
p20223[0...1]	CI: NSW 1 inputs / NSW 1 inputs
p20228	CI: LIM 0 input X / LIM 0 input X
p20236	CI: LIM 1 input X / LIM 1 input X
p20244[0...1]	CI: PT1 0 inputs / PT1 0 inputs
p20250[0...1]	CI: PT1 1 inputs / PT1 1 inputs
p20256[0...1]	CI: INT 0 inputs / INT 0 inputs
p20266	CI: LVM 0 input X / LVM 0 input X
p20275	CI: LVM 1 input X / LVM 1 input X
p20284	CI: DIF 0 input X / DIF 0 input X
p20308[0...3]	CI: ADD 2 inputs / ADD 2 inputs
p20312[0...1]	CI: NCM 0 inputs / NCM 0 inputs
p20318[0...1]	CI: NCM 1 inputs / NCM 1 inputs
p20372	CI: PLI 0 input X / PLI 0 input X
p20378	CI: PLI 1 input X / PLI 1 input X

1.4.3 Binector outputs (BO)

Product: SINAMICS G120D, Version: 4601800, Language: eng, Type: BO

r0751.0...9	BO: CU analog inputs status word / CU AI status word
r0807.0	BO: Master control active / PcCtrl active
r1025.0	BO: Fixed speed setpoint status / n_setp_fix status
r1979.0...11	BO: Speed_ctrl_opt status / n_opt status
r2043.0...2	BO: PROFIdrive PZD state / PD PZD state
r2090.0...15	BO: PROFIdrive PZD1 receive bit-serial / PZD1 recv bitw
r2091.0...15	BO: PROFIdrive PZD2 receive bit-serial / PZD2 recv bitw
r2092.0...15	BO: PROFIdrive PZD3 receive bit-serial / PZD3 recv bitw
r2093.0...15	BO: PROFIdrive PZD4 receive bit-serial / PZD4 recv bitw
r2094.0...15	BO: Connector-binector converter binector output / Con/bin outp
r2095.0...15	BO: Connector-binector converter binector output / Con/bin outp
r9935.0	BO: POWER ON delay signal / POWER ON t_delay
r20031	BO: AND 0 output Q / AND 0 output Q
r20035	BO: AND 1 output Q / AND 1 output Q
r20039	BO: AND 2 output Q / AND 2 output Q
r20043	BO: AND 3 output Q / AND 3 output Q
r20047	BO: OR 0 output Q / OR 0 output Q
r20051	BO: OR 1 output Q / OR 1 output Q
r20055	BO: OR 2 output Q / OR 2 output Q
r20059	BO: OR 3 output Q / OR 3 output Q
r20063	BO: XOR 0 output Q / XOR 0 output Q
r20067	BO: XOR 1 output Q / XOR 1 output Q
r20071	BO: XOR 2 output Q / XOR 2 output Q
r20075	BO: XOR 3 output Q / XOR 3 output Q
r20079	BO: NOT 0 inverted output / NOT 0 inv output
r20083	BO: NOT 1 inverted output / NOT 1 inv output
r20087	BO: NOT 2 inverted output / NOT 2 inv output
r20091	BO: NOT 3 inverted output / NOT 3 inv output
r20120	BO: DIV 0 divisor is zero QF / DIV 0 divisor=0 QF
r20125	BO: DIV 1 divisor is zero QF / DIV 1 divisor=0 QF
r20130	BO: AVA 0 input negative SN / AVA 0 input neg SN
r20135	BO: AVA 1 input negative SN / AVA 1 input neg SN
r20140	BO: MFP 0 output Q / MFP 0 output Q
r20145	BO: MFP 1 output Q / MFP 1 output Q
r20150	BO: PCL 0 output Q / PCL 0 output Q
r20155	BO: PCL 1 output Q / PCL 1 output Q
r20160	BO: PDE 0 output Q / PDE 0 output Q
r20165	BO: PDE 1 output Q / PDE 1 output Q
r20170	BO: PDF 0 output Q / PDF 0 output Q
r20175	BO: PDF 1 output Q / PDF 1 output Q
r20180	BO: PST 0 output Q / PST 0 output Q
r20185	BO: PST 1 output Q / PST 1 output Q
r20189	BO: RSR 0 output Q / RSR 0 output Q
r20190	BO: RSR 0 inverted output QN / RSR 0 inv outp QN
r20194	BO: RSR 1 output Q / RSR 1 output Q
r20195	BO: RSR 1 inverted output QN / RSR 1 inv outp QN
r20199	BO: DFR 0 output Q / DFR 0 output Q
r20200	BO: DFR 0 inverted output QN / DFR 0 inv outp QN
r20204	BO: DFR 1 output Q / DFR 1 output Q
r20205	BO: DFR 1 inverted output QN / DFR 1 inv outp QN

r20210	BO: BSW 0 output Q / BSW 0 output Q
r20215	BO: BSW 1 output Q / BSW 1 output Q
r20232	BO: LIM 0 input quantity at the upper limit QU / LIM 0 QU
r20233	BO: LIM 0 input quantity at the lower limit QL / LIM 0 QL
r20240	BO: LIM 1 input quantity at the upper limit QU / LIM 1 QU
r20241	BO: LIM 1 input quantity at the lower limit QL / LIM 1 QL
r20262	BO: INT 0 integrator at the upper limit QU / INT 0 QU
r20263	BO: INT 0 integrator at the lower limit QL / INT 0 QL
r20270	BO: LVM 0 input quantity above interval QU / LVM 0 X above QU
r20271	BO: LVM 0 input quantity within interval QM / LVM 0 X within QM
r20272	BO: LVM 0 input quantity below interval QL / LVM 0 X below QL
r20279	BO: LVM 1 input quantity above interval QU / LVM 1 X above QU
r20280	BO: LVM 1 input quantity within interval QM / LVM 1 X within QM
r20281	BO: LVM 1 input quantity below interval QL / LVM 1 X below QL
r20301	BO: NOT 4 inverted output / NOT 4 inv output
r20305	BO: NOT 5 inverted output / NOT 5 inv output
r20313	BO: NCM 0 output QU / NCM 0 output QU
r20314	BO: NCM 0 output QE / NCM 0 output QE
r20315	BO: NCM 0 output QL / NCM 0 output QL
r20319	BO: NCM 1 output QU / NCM 1 output QU
r20320	BO: NCM 1 output QE / NCM 1 output QE
r20321	BO: NCM 1 output QL / NCM 1 output QL
r20325	BO: RSR 2 output Q / RSR 2 output Q
r20326	BO: RSR 2 inverted output QN / RSR 2 inv outp QN
r20330	BO: DFR 2 output Q / DFR 2 output Q
r20331	BO: DFR 2 inverted output QN / DFR 2 inv outp QN
r20336	BO: PDE 2 output Q / PDE 2 output Q
r20341	BO: PDE 3 output Q / PDE 3 output Q
r20346	BO: PDF 2 output Q / PDF 2 output Q
r20351	BO: PDF 3 output Q / PDF 3 output Q
r20356	BO: MFP 2 output Q / MFP 2 output Q
r20361	BO: MFP 3 output Q / MFP 3 output Q

1.4.4 Connector outputs (CO)

Product: SINAMICS G120D, Version: 4601800, Language: eng, Type: CO

r0021	CO: Actual speed smoothed / n_act smooth
r0025	CO: Output voltage smoothed / U_outp smooth
r0026	CO: DC link voltage smoothed / Vdc smooth
r0027	CO: Absolute actual current smoothed / I_act abs val smth
r0032	CO: Active power actual value smoothed / P_actv_act smth
r0034	CO: Motor utilization / Motor utilization
r0035	CO: Motor temperature / Mot temp
r0036	CO: Power unit overload I2t / PU overload I2t
r0037[0...19]	CO: Power unit temperatures / PU temperatures
r0060	CO: Speed setpoint before the setpoint filter / n_set before filt.
r0061[0...2]	CO: Actual speed unsmoothed / n_act unsmoothed
r0062	CO: Speed setpoint after the filter / n_set after filter
r0063[0...2]	CO: Speed actual value / n_act
r0064	CO: Speed controller system deviation / n_ctrl system dev
r0066	CO: Output frequency / f_outp
r0067	CO: Output current maximum / I_outp max
r0068[0...1]	CO: Absolute current actual value / I_act abs val
r0069[0...6]	CO: Phase current actual value / I_phase act value
r0070	CO: Actual DC link voltage / Vdc act val
r0072	CO: Output voltage / U_output
r0074	CO: Modulat_depth / Modulat_depth
r0075	CO: Current setpoint field-generating / Id_set
r0076	CO: Current actual value field-generating / Id_act
r0077	CO: Current setpoint torque-generating / Iq_set
r0078	CO: Current actual value torque-generating / Iq_act
r0079	CO: Torque setpoint / M_set
r0080[0...1]	CO: Torque actual value / M_act
r0081	CO: Torque utilization / M_Utilization
r0082[0...2]	CO: Active power actual value / P_act
r0083	CO: Flux setpoint / Flex setp
r0084[0...1]	CO: Flux actual value / Flux act val
r0087	CO: Actual power factor / Cos phi act
r0094	CO: Transformation angle / Transformat_angle
r0289	CO: Maximum power unit output current / PU I_outp max
r0479[0...2]	CO: Diagnostics encoder position actual value Gn_XIST1 / Diag Gn_XIST1
r0481[0...2]	CO: Encoder status word Gn_ZSW / Enc Gn_ZSW
r0482[0...2]	CO: Encoder actual position value Gn_XIST1 / Enc Gn_XIST1
r0483[0...2]	CO: Encoder actual position value Gn_XIST2 / Enc Gn_XIST2
r0497[0...2]	CO: Encoder diagnostic signal double word / Enc diag DW
r0498[0...2]	CO: Encoder diagnostic signal low word / Enc diag low word
r0499[0...2]	CO: Encoder diagnostic signal high word / Enc diag high word
r0586	CO: Measuring probe speed actual value / MT n_act
r0587	CO: Measuring probe measuring time measured / MT t_meas measured
r0588	CO: Measuring probe pulse counter / MT pulse counter
r0752[0...1]	CO: CO: CU analog inputs input voltage/current actual / CU AI U/I_inp act
r0755[0...1]	CO: CO: CU analog inputs actual value in percent / CU AI value in %
r0944	CO: Counter for fault buffer changes / Fault buff change
p1001[0...n]	CO: Fixed speed setpoint 1 / n_set_fixed 1
p1002[0...n]	CO: Fixed speed setpoint 2 / n_set_fixed 2
p1003[0...n]	CO: Fixed speed setpoint 3 / n_set_fixed 3

p1004[0...n]	CO: Fixed speed setpoint 4 / n_set_fixed 4
p1005[0...n]	CO: Fixed speed setpoint 5 / n_set_fixed 5
p1006[0...n]	CO: Fixed speed setpoint 6 / n_set_fixed 6
p1007[0...n]	CO: Fixed speed setpoint 7 / n_set_fixed 7
p1008[0...n]	CO: Fixed speed setpoint 8 / n_set_fixed 8
p1009[0...n]	CO: Fixed speed setpoint 9 / n_set_fixed 9
p1010[0...n]	CO: Fixed speed setpoint 10 / n_set_fixed 10
p1011[0...n]	CO: Fixed speed setpoint 11 / n_set_fixed 11
p1012[0...n]	CO: Fixed speed setpoint 12 / n_set_fixed 12
p1013[0...n]	CO: Fixed speed setpoint 13 / n_set_fixed 13
p1014[0...n]	CO: Fixed speed setpoint 14 / n_set_fixed 14
p1015[0...n]	CO: Fixed speed setpoint 15 / n_set_fixed 15
r1024	CO: Fixed speed setpoint effective / n_set_fixed eff
r1045	CO: Mot. potentiometer speed setp. in front of ramp-fct. gen. / Mop n_set bef RFG
r1050	CO: Motor. potentiometer setpoint after the ramp-function generator / Mop setp after RFG
r1073	CO: Main setpoint effective / Main setpoint eff
r1077	CO: Supplementary setpoint effective / Suppl setpoint eff
r1078	CO: Total setpoint effective / Total setpoint eff
p1083[0...n]	CO: Speed limit in positive direction of rotation / n_limit pos
r1084	CO: Speed limit positive effective / n_limit pos eff
p1086[0...n]	CO: Speed limit in negative direction of rotation / n_limit neg
r1087	CO: Speed limit negative effective / n_limit neg eff
r1112	CO: Speed setpoint after minimum limiting / n_set aft min_lim
r1114	CO: Setpoint after the direction limiting / Setp after limit
r1119	CO: Ramp-function generator setpoint at the input / RFG setp at inp
r1149	CO: Ramp-function generator acceleration / RFG acceleration
r1150	CO: Ramp-function generator speed setpoint at the output / RFG n_set at outp
r1169	CO: Speed controller speed setpoints 1 and 2 / n_ctrl n_set 1/2
r1170	CO: Speed controller setpoint sum / n_ctrl setp sum
r1337	CO: Actual slip compensation / Slip comp act val
r1343	CO: I_max controller frequency output / I_max_ctrl f_outp
r1348	CO: U/f control Eco factor actual value / U/f Eco fac act v
p1351[0...n]	CO: Motor holding brake starting frequency / Brake f_start
r1438	CO: Speed controller speed setpoint / n_ctrl n_set
r1445	CO: Actual speed smoothed / n_act smooth
r1454	CO: Speed controller system deviation I component / n_ctrl sys dev Tn
r1468	CO: Speed controller P-gain effective / n_ctr Kp eff
r1482	CO: Speed controller I torque output / n_ctrl I-M_outp
r1490	CO: Droop feedback speed reduction / Droop n_reduction
r1493	CO: Moment of inertia total / M_inertia total
r1508	CO: Torque setpoint before supplementary torque / M_set bef. M_suppl
r1516	CO: Supplementary torque and acceleration torque / M_suppl + M_accel
r1518[0...1]	CO: Accelerating torque / M_accel
p1520[0...n]	CO: Torque limit upper / M_max upper
p1521[0...n]	CO: Torque limit lower / M_max lower
p1524[0...n]	CO: Torque limit upper/motoring scaling / M_max up/mot scal
p1525[0...n]	CO: Torque limit lower scaling / M_max lower scal
r1526	CO: Torque limit upper without offset / M_max up w/o offs
r1527	CO: Torque limit lower without offset / M_max low w/o offs
r1538	CO: Upper effective torque limit / M_max upper eff
r1539	CO: Lower effective torque limit / M_max lower eff
r1547[0...1]	CO: Torque limit for speed controller output / M_max outp n_ctrl
r1548[0...1]	CO: Stall current limit torque-generating maximum / Isq_max stall

p1570[0...n]	CO: Flux setpoint / Flex setp
r1593[0...1]	CO: Field weakening controller / flux controller output / Field/Fl_ctrl outp
r1597	CO: Field weakening controller output / Field_ctrl outp
r1598	CO: Total flux setpoint / Flux setp total
r1718	CO: Isq controller output / Isq_ctrl outp
r1723	CO: Isd controller output / Isd_ctrl outp
r1732[0...1]	CO: Direct-axis voltage setpoint / Direct U set
r1733[0...1]	CO: Quadrature-axis voltage setpoint / Quad U set
r1770	CO: Motor model speed adaptation proportional component / MotMod n_adapt Kp
r1771	CO: Motor model speed adaptation I comp. / MotMod n_adapt Tn
r1801[0...1]	CO: Pulse frequency / Pulse frequency
r1809	CO: Modulator mode actual / Modulator mode act
r2050[0...11]	CO: PROFIBUS PZD receive word / PZD recv word
r2060[0...10]	CO: PROFIdrive PZD receive double word / PZD recv DW
r2089[0...4]	CO: Send binector-connector converter status word / Bin/con ZSW send
r2120	CO: Sum of fault and alarm buffer changes / Sum buffer changed
r2121	CO: Counter alarm buffer changes / Alrm buff changed
r2131	CO: Actual fault code / Actual fault code
r2132	CO: Actual alarm code / Actual alarm code
r2169	CO: Actual speed smoothed signals / n_act smth message
p2201[0...n]	CO: Technology controller fixed value 1 / Tec_ctrl fix val1
p2202[0...n]	CO: Technology controller fixed value 2 / Tec_ctr fix val 2
p2203[0...n]	CO: Technology controller fixed value 3 / Tec_ctr fix val 3
p2204[0...n]	CO: Technology controller fixed value 4 / Tec_ctr fix val 4
p2205[0...n]	CO: Technology controller fixed value 5 / Tec_ctr fix val 5
p2206[0...n]	CO: Technology controller fixed value 6 / Tec_ctr fix val 6
p2207[0...n]	CO: Technology controller fixed value 7 / Tec_ctr fix val 7
p2208[0...n]	CO: Technology controller fixed value 8 / Tec_ctr fix val 8
p2209[0...n]	CO: Technology controller fixed value 9 / Tec_ctr fix val 9
p2210[0...n]	CO: Technology controller fixed value 10 / Tec_ctr fix val 10
p2211[0...n]	CO: Technology controller fixed value 11 / Tec_ctr fix val 11
p2212[0...n]	CO: Technology controller fixed value 12 / Tec_ctr fix val 12
p2213[0...n]	CO: Technology controller fixed value 13 / Tec_ctr fix val 13
p2214[0...n]	CO: Technology controller fixed value 14 / Tec_ctr fix val 14
p2215[0...n]	CO: Technology controller fixed value 15 / Tec_ctr fix val 15
r2224	CO: Technology controller fixed value effective / Tec_ctr FixVal eff
r2245	CO: Technology controller mot. potentiometer setpoint before RFG / Tec_ctr mop befRFG
r2250	CO: Technology controller motorized potentiometer setpoint after RFG / Tec_ctr mop aftRFG
r2260	CO: Technology controller setpoint after ramp-function generator / Tec_ctr set aftRFG
r2262	CO: Technology controller setpoint after filter / Tec_ctr set aftFlt
r2266	CO: Technology controller actual value after filter / Tec_ctr act aftFlt
r2272	CO: Technology controller actual value scaled / Tech_ctrl act scal
r2273	CO: Technology controller error / Tec_ctrl error
p2291	CO: Technology controller maximum limiting / Tec_ctrl max_lim
p2292	CO: Technology controller minimum limiting / Tec_ctrl min_lim
r2294	CO: Technology controller output signal / Tec_ctrl outp_sig
p2295	CO: Technology controller output scaling / Tec_ctrl outp scal
r2344	CO: Technology controller last speed setpoint (smoothed) / Tec_ctrl n_setp_sm
r2520[0...2]	CO: LR Position actual value preprocessing encoder control word / ActVal_prep STW
r2521[0...3]	CO: LR position actual value / s_act
r2522[0...3]	CO: LR velocity actual value / v_act
r2523[0...3]	CO: LR measured value / Measured value
r2524	CO: LR LU/revolution / LU/revolution

p2525[0...n]	CO: LR encoder adjustment offset / Enc_adj offset
p2540	CO: LR position controller output speed limit / LR_outp limit
r2556	CO: LR position setpoint after setpoint smoothing / s_set after interp
r2557	CO: LR position controller input system deviation / LR_inp sys dev
r2558	CO: LR position controller output P component / LR_outp P comp
r2559	CO: LR position controller output I component / LR_outp I comp
r2560	CO: LR speed setpoint / n_set
r2561	CO: LR speed pre-control value / n_prectrl val
r2562	CO: LR total speed setpoint / n_set total
r2563	CO: LR following error dynamic model / Follow error dyn
r2564	CO: LR torque pre-control value / M_prectrl val
r2565	CO: LR following error actual / Following err act
p2580	CO: EPOS software limit switch minus / SW limSwitch minus
p2581	CO: EPOS software limit switch plus / SW lim switch plus
p2599	CO: EPOS reference point coordinate value / Ref_pt coord val
r2665	CO: EPOS position setpoint / s_set
r2666	CO: EPOS velocity setpoint / v_set
r2667	CO: EPOS backlash compensation value / Backlash value
r2669	CO: EPOS actual operating mode / Op mode act
r2671	CO: EPOS actual position setpoint / s_set act
r2672	CO: EPOS actual velocity setpoint / v_set act
r2673	CO: EPOS actual acceleration override / a_over act
r2674	CO: EPOS actual deceleration override / -a_over act
r2675	CO: EPOS actual task / Task act
r2676	CO: EPOS actual task parameter / Task para act
r2677	CO: EPOS actual task mode / Task mode act
r2678	CO: EPOS external block change actual position / Ext BlckChg s_act
r2680	CO: EPOS clearance reference cam and zero mark / Clearance cam/ZM
r2681	CO: EPOS velocity override effective / v_over effective
r2682	CO: EPOS residual distance to go / Residual distance
r2685	CO: EPOS corrective value / Corrective value
r2686[0...1]	CO: EPOS torque limiting effective / M_limit eff
r2687	CO: EPOS torque setpoint / M_set
p2690	CO: EPOS position fixed setpoint / Pos fixed value
p2691	CO: EPOS velocity fixed setpoint / v fixed value
p2692	CO: EPOS acceleration override, fixed setpoint / a_over fixed val
p2693	CO: EPOS deceleration override, fixed setpoint / -a_over fixed val
p2900[0...n]	CO: Fixed value 1 [%] / Fixed value 1 [%]
p2901[0...n]	CO: Fixed value 2 [%] / Fixed value 2 [%]
r2902[0...14]	CO: Fixed values [%] / Fixed values [%]
p2930[0...n]	CO: Fixed value M [Nm] / Fixed value M [Nm]
r3131	CO: Actual flt value / Actual flt value
r3132	CO: Actual component number / Act comp_no.
r4653[0...2]	CO: XIST1_ERW actual value / XIST1_ERW actual
p4688[0...2]	CO: Zero mark monitoring differential pulse count / ZM diff_pulse qty
r4689[0...2]	CO: Squarewave encoder diagnostics / Sq-wave enc diag
r9712	CO: SI Motion diagnostics pos. act. val. motor side (processor 1) / SI Mtn s_act motP1
r9713[0...5]	CO: SI Motion diagnostics position actual value load side / SI Mtn s_act load
r9714[0...2]	CO: SI Motion diagnostics velocity (processor 1) / SI Mtn diag v P1
r9733[0...2]	CO: SI Motion setpoint speed limit effective / SI Mtn setp_lim
r20095	CO: ADD 0 output Y / ADD 0 output Y
r20099	CO: ADD 1 output Y / ADD 1 output Y
r20103	CO: SUB 0 difference Y / SUB 0 difference Y

r20107	CO: SUB 1 difference Y / SUB 1 difference Y
r20111	CO: MUL 0 product Y / MUL 0 product Y
r20115	CO: MUL 1 product Y / MUL 1 product Y
r20119[0...2]	CO: DIV 0 quotient / DIV 0 quotient
r20124[0...2]	CO: DIV 1 quotient / DIV 1 quotient
r20129	CO: AVA 0 output Y / AVA 0 output Y
r20134	CO: AVA 1 output Y / AVA 1 output Y
r20220	CO: NSW 0 output Y / NSW 0 output Y
r20225	CO: NSW 1 output Y / NSW 1 output Y
r20231	CO: LIM 0 output Y / LIM 0 output Y
r20239	CO: LIM 1 output Y / LIM 1 output Y
r20247	CO: PT1 0 output Y / PT1 0 output Y
r20253	CO: PT1 1 output Y / PT1 1 output Y
r20261	CO: INT 0 output Y / INT 0 output Y
r20286	CO: DIF 0 output Y / DIF 0 output Y
r20309	CO: ADD 2 output Y / ADD 2 output Y
r20373	CO: PLI 0 output Y / PLI 0 output Y
r20379	CO: PLI 1 output Y / PLI 1 output Y

1.4.5 Connector/binector outputs (CO/BO)

Product: SINAMICS G120D, Version: 4601800, Language: eng, Type: CO/BO

r0046.0...31	CO/BO: Missing enable sig / Missing enable sig
r0050.0...1	CO/BO: Command Data Set CDS effective / CDS effective
r0051.0...1	CO/BO: Drive Data Set DDS effective / DDS effective
r0052.0...15	CO/BO: Status word 1 / ZSW 1
r0053.0...11	CO/BO: Status word 2 / ZSW 2
r0054.0...15	CO/BO: Control word 1 / STW 1
r0055.0...15	CO/BO: Supplementary control word / Suppl STW
r0056.0...13	CO/BO: Status word, closed-loop control / ZSW cl-loop ctrl
r0722.0...12	CO/BO: CU digital inputs status / CU DI status
r0722.0...5	CO/BO: CU digital inputs status / CU DI status
r0723.0...12	CO/BO: CU digital inputs status inverted / CU DI status inv
r0723.0...5	CO/BO: CU digital inputs status inverted / CU DI status inv
r0835.2...8	CO/BO: Data set changeover status word / DDS_ZSW
r0836.0...1	CO/BO: Command Data Set CDS selected / CDS selected
r0837.0...1	CO/BO: Drive Data Set DDS selected / DDS selected
r0863.1	CO/BO: Drive coupling status word/control word / CoupleZSW/STW
r0898.0...14	CO/BO: Control word sequence control / STW seq_ctrl
r0899.0...13	CO/BO: Status word sequence control / ZSW seq_ctrl
r1099.0	CO/BO: Skip band status word / Skip band ZSW
r1198.0...15	CO/BO: Control word setpoint channel / STW setpoint chan
r1199.0...8	CO/BO: Ramp-function generator status word / RFG ZSW
r1204.0...13	CO/BO: Flying restart U/f control status / FlyRest Uf st
r1205.0...15	CO/BO: Flying restart vector control status / FlyRest vector st
r1214.0...15	CO/BO: Automatic restart status / AR status
r1239.8...13	CO/BO: DC braking status word / DCBRK ZSW
r1406.4...15	CO/BO: Control word speed controller / STW n_ctrl
r1407.0...17	CO/BO: Status word speed controller / ZSW n_ctrl
r1408.0...14	CO/BO: Status word current controller / ZSW I_ctrl
r2129.0...15	CO/BO: Trigger word for faults and alarms / Trigger word
r2135.12...15	CO/BO: Status word faults/alarms 2 / ZSW fault/alarm 2
r2138.7...15	CO/BO: Control word faults/alarms / STW fault/alarm
r2139.0...12	CO/BO: Status word faults/alarms 1 / ZSW fault/alarm 1
r2197.0...13	CO/BO: Status word monitoring 1 / ZSW monitor 1
r2198.0...13	CO/BO: Status word monitoring 2 / ZSW monitor 2
r2199.0...11	CO/BO: Status word monitoring 3 / ZSW monitor 3
r2225.0	CO/BO: Technology controller fixed value selection status word / Tec_ctr FixVal ZSW
r2349.0...12	CO/BO: Technology controller status word / Tec_ctrl status
r2526.0...9	CO/BO: LR status word / ZSW
r2527.0...2	CO/BO: LR actual value sensing status word encoder 1 / ActValSensZSW enc1
r2528.0...2	CO/BO: LR actual value sensing status word encoder 2 / ActValSensZSW enc2
r2670.0...15	CO/BO: EPOS status word active traversing block / ZSW act trav_block
r2683.0...14	CO/BO: EPOS status word 1 / POS_ZSW1
r2684.0...15	CO/BO: EPOS status word 2 / POS_ZSW2
r3113.0...15	CO/BO: NAMUR message bit bar / NAMUR bit bar
r4654.0...16	CO/BO: XIST1_ERW status / XIST1_ERW stat
r5613.0...1	CO/BO: Pe energy-saving active/inactive / Pe save act/inact
r9720.0...13	CO/BO: SI Motion control signals integrated in the drive / SI Mtn integ STW
r9722.0...15	CO/BO: SI Motion status signals integrated in the drive / SI Mtn integ stat
r9723.0...16	CO/BO: SI Motion diagnostic signals integrated in the drive / SI Mtn integ diag
r9734.0...14	CO/BO: SI Safety Info Channel status word S_ZSW1B / SIC S_ZSW1B

BICO parameters (connectors/binectors)

r9742.0...15	CO/BO: SI Motion drive-integrated status signals (processor 2) / SI Mtn int stat P2
r9772.0...20	CO/BO: SI status (processor 1) / SI status P1
r9773.0...31	CO/BO: SI status (processor 1 + processor 2) / SI status P1+P2
r9872.0...20	CO/BO: SI status (processor 2) / SI Status P2
r10051.0...2	CO/BO: SI digital inputs status (processor 1) / SI DI status P1
r10052.0	CO/BO: SI digital outputs status (processor 1) / SI DO status P1
r10151.0...2	CO/BO: SI digital inputs status (processor 2) / SI DI status P2
r10152.0	CO/BO: SI digital outputs status (processor 2) / SI DO status P2

1.5 Parameters for write protection and know-how protection

1.5.1 Parameters with "WRITE_NO_LOCK"

The following list contains the parameters with the "WRITE_NO_LOCK" attribute.

These parameters are not affected by the write protection.

Product: SINAMICS G120D, Version: 4601800, Language: eng, Type: WRITE_NO_LOCK

p0003	Access level / Acc_level
p0010	Drive commissioning parameter filter / Drv comm. par_filt
p0124[0...n]	CU detection via LED / CU detection LED
p0970	Reset drive parameters / Drive par reset
p0971	Save parameters / Save par
p0972	Drive unit reset / Drv_unit reset
p2111	Alarm counter / Alarm counter
p3950	Service parameter / Serv. par.
p3981	Faults acknowledge drive object / Faults ackn DO
p3985	Master control mode selection / PcCtrl mode select
p7761	Write protection / Write protection
p9400	Safely remove memory card / Mem_card rem
p9484	BICO interconnections search signal source / BICO S_src srch

1.5.2 Parameters with "KHP_WRITE_NO_LOCK"

The following list contains the parameters with the "KHP_WRITE_NO_LOCK" attribute.

These parameters are not affected by the know-how protection.

Product: SINAMICS G120D, Version: 4601800, Language: eng, Type: KHP_WRITE_NO_LOCK

p0003	Access level / Acc_level
p0010	Drive commissioning parameter filter / Drv comm. par_filt
p0124[0...n]	CU detection via LED / CU detection LED
p0970	Reset drive parameters / Drive par reset
p0971	Save parameters / Save par
p0972	Drive unit reset / Drv_unit reset
p2040	Fieldbus interface monitoring time / Fieldbus t_monit
p2111	Alarm counter / Alarm counter
p3950	Service parameter / Serv. par.
p3981	Faults acknowledge drive object / Faults ackn DO
p3985	Master control mode selection / PcCtrl mode select
p7761	Write protection / Write protection
p8980	Ethernet/IPprofile / Eth/IP profile
p8981	Ethernet/IP ODVA STOP mode / Eth/IP ODVA STOP
p8982	Ethernet/IP ODVA speed scaling / Eth/IP ODVA n scal
p9400	Safely remove memory card / Mem_card rem
p9484	BICO interconnections search signal source / BICO S_src srch

1.5.3 Parameters with "KHP_ACTIVE_READ"

The following list contains the parameters with the "KHP_ACTIVE_READ" attribute.

These parameters can also be read with activated know-how protection.

Product: SINAMICS G120D, Version: 4601800, Language: eng, Type: KHP_ACTIVE_READ

p0015	Macro drive unit / Macro drv unit
p0100	IEC/NEMA mot stds / IEC/NEMA mot stds
p0170	Number of Command Data Sets (CDS) / CDS count
p0180	Number of Drive Data Sets (DDS) / DDS count
p0199[0...24]	Drive object name / DO name
p0300[0...n]	Motor type selection / Mot type sel
p0304[0...n]	Rated motor voltage / Mot U _{rated}
p0305[0...n]	Rated motor current / Mot I _{rated}
p0400[0...n]	Encoder type selection / Enc _{typ} sel
p0505	Selecting the system of units / Unit sys select
p0595	Technological unit selection / Tech unit select
p0730	BI: CU signal source for terminal DO 0 / CU S _{src} DO 0
p0731	BI: CU signal source for terminal DO 1 / CU S _{src} DO 1
p0806	BI: Inhibit master control / PcCtrl inhibit
p0922	PROFIdrive PZD telegram selection / PZD telegr_sel
p1080[0...n]	Minimum speed / n _{min}
p1082[0...n]	Maximum speed / n _{max}
p1520[0...n]	CO: Torque limit upper / M _{max} upper
p2000	Reference speed reference frequency / n _{ref} f _{ref}
p2001	Reference voltage / Reference voltage
p2002	Reference current / I _{ref}
p2003	Reference torque / M _{ref}
p2005	Reference angle / Reference angle
p2006	Reference temp / Ref temp
p2007	Reference acceleration / a _{ref}
p2030	Field bus int protocol selection / Field bus protocol
p2038	PROFIdrive STW/ZSW interface mode / PD STW/ZSW IF mode
p2079	PROFIdrive PZD telegram selection extended / PZD telegr ext
p7763	KHP OEM exception list number of indices for p7764 / KHP OEM qty p7764
p7764[0...n]	KHP OEM exception list / KHP OEM excep list
p9601	SI enable functions integrated in the drive (processor 1) / SI enable fct P1
p9810	SI PROFIsafe address (processor 2) / SI PROFIsafe P2

1.6 Quick commissioning (p0010 = 1)

The parameters required for the quick commissioning (p0010 = 1) are shown in Table 1-7:

Table 1-7 Quick commissioning (p0010 = 1)

Par. no.	Name	Access level		Changeable
p0010	Drive, commissioning parameter filter	1		C(1)T
p0015	Macro drive unit	1		C,C(1)
p0100	IEC/NEMA motor standard	1		C(1)
p0205	Power unit application	1		C(1,2)
p0230	Drive filter type, motor side	1		C(1,2)
p0300:	Motor type selection	2		C(1,3)
p0301	Motor code number selection	2		C(1,3)
p0304	Rated motor voltage	1		C(1,3)
p0305	Rated motor current	1		C(1,3)
p0306	Number of motors connected in parallel:	1		C(1,3)
p0307	Rated motor power	1		C(1,3)
p0308	Rated motor power factor	1		C(1,3)
p0309	Rated motor efficiency	1		C(1,3)
p0310	Rated motor frequency	1		C(1,3)
p0311	Rated motor speed	1		C(1,3)
p0314	Motor pole pair number	3		C(1,3)
p0316	Motor torque constant	3		C(1,3)UT
p0322	Maximum motor speed	1		C(1,3)
p0323	Maximum motor current	1		C(1,3)
p0335	Motor cooling type	2		C(1,3)T
p0400	Encoder type selection	1		C(1,4)
p0402	Gear unit type selection	1		C(1,4)
p0500	Technology application	2		C(1,5)T
p0640	Current limit	2		C(1,3)UT
p0922	PROFIdrive telegram selection	1		C(1)T
p0970	Reset drive parameters	1		C(1,30)
p1080	Minimum speed	1		C(1)T
p1082	Maximum speed	1		C(1)T
p1120	Ramp-function generator ramp-up time	1		C(1)UT
p1121	Ramp-function generator ramp-down time	1		C(1)UT
p1135	OFF3 ramp-down time	2		C(1)UT

Table 1-7 Quick commissioning (p0010 = 1), continued

Par. no.	Name	Access level	Change-able
p1300	Open-loop/closed-loop control operating mode	2	C(1)T
p1500	Torque setpoint selection	2	C(1)T
p1900	Motor data identification and rotating measurement	1	C(1)T
p1905	Parameter tuning selection	1	C(1)T
p2196	Torque utilization scaling	1	C(1,3)UT
p3900	Completion of quick commissioning	1	C(1)

If p0010 = 1 is selected, p0003 (user access level) can be used to select the parameters that are to be accessed.

At the end of the quick commissioning, set p3900 = 1 to perform the required motor calculations and reset all other parameters (not included in p0010 = 1) to their default settings.

Note:

This only applies for the quick commissioning.

Function diagrams

2

Contents

2.1	Table of contents, function diagrams	2-572
2.2	Explanations on the function diagrams	2-578
2.3	Overviews	2-583
2.4	Input/output terminals	2-587
2.5	PROFenergy	2-593
2.6	PROFdrive communication (PROFIBUS/PROFINET)	2-596
2.7	Internal control/status words	2-613
2.8	Brake control	2-632
2.9	Safety Integrated Basic Functions	2-634
2.10	Safety Integrated Extended Functions	2-640
2.11	Safety Integrated PROFIsafe	2-652
2.12	Setpoint channel	2-655
2.13	Basic positioner (EPOS)	2-666
2.14	Position control	2-682
2.15	Encoder evaluation	2-687
2.16	Vector control	2-694
2.17	Free function blocks	2-715
2.18	Technology functions	2-736
2.19	Technology controller	2-739
2.20	Signals and monitoring functions	2-744
2.21	Faults and alarms	2-755
2.22	Data sets	2-761

2.1 Table of contents, function diagrams

2.2 Explanations on the function diagrams	2-578
1020 – Explanation of the symbols (Part 1)	2-579
1021 – Explanation of the symbols (Part 2)	2-580
1022 – Explanation of the symbols (Part 3)	2-581
1030 – Handling BICO technology	2-582
2.3 Overviews	2-583
1690 – Vector control, V/f control	2-584
1700 – Vector control, speed control and generation of the torque limits	2-585
1710 – Vector control, current control	2-586
2.4 Input/output terminals	2-587
2201 – Connection overview	2-588
2210 – Digital inputs (DI 0 ... DI 5)	2-589
2241 – Digital outputs (DO 0 ... DO 1)	2-590
2251 – Analog inputs (AI 0 ... AI 1)	2-591
2256 – Analog inputs as digital inputs (DI 11 ... DI 12)	2-592
2.5 PROFlenergy	2-593
2381 – Control commands and interrogation commands	2-594
2382 – States	2-595
2.6 PROFIdrive communication (PROFIBUS/PROFINET)	2-596
2401 – Overview	2-597
2410 – PROFIBUS (PB) / PROFINET (PN), addresses and diagnostics	2-598
2420 – Telegrams and process data (PZD)	2-599
2440 – PZD receive signals interconnection	2-600
2441 – STW1 control word interconnection (p2038 = 2)	2-601
2442 – STW1 control word interconnection (p2038 = 0)	2-602
2446 – STW3 control word interconnection	2-603
2450 – PZD send signals interconnection	2-604
2451 – ZSW1 status word interconnection (p2038 = 2)	2-605
2452 – ZSW1 status word interconnection (p2038 = 0)	2-606
2456 – ZSW3 status word interconnection	2-607
2463 – POS_STW1 positioning control word 1 interconnection	2-608
2464 – POS_STW2 positioning control word 2 interconnection	2-609

2468 – Receive telegram, free interconnection via BICO (p0922 = 999)	2-610
2470 – Send telegram, free interconnection via BICO (p0922 = 999)	2-611
2472 – Status words, free interconnection	2-612
2.7 Internal control/status words	2-613
2500 – Overview	2-614
2501 – Control word, sequence control	2-615
2503 – Status word, sequence control	2-616
2505 – Control word, setpoint channel	2-617
2510 – Status word 1 (r0052)	2-618
2511 – Status word 2 (r0053)	2-619
2512 – Control word 1 (r0054)	2-620
2513 – Control word 2 (r0055)	2-621
2520 – Control word, speed controller	2-622
2522 – Status word, speed controller	2-623
2526 – Status word, closed-loop control	2-624
2530 – Status word, current control	2-625
2534 – Status word, monitoring functions 1	2-626
2536 – Status word, monitoring functions 2	2-627
2537 – Status word, monitoring functions 3	2-628
2546 – Control word, faults/alarms	2-629
2548 – Status word, faults/alarms 1 and 2	2-630
2634 – Sequence control - Missing enables	2-631
2.8 Brake control	2-632
2701 – Basic brake control	2-633
2.9 Safety Integrated Basic Functions	2-634
2800 – Parameter manager	2-635
2802 – Monitoring and faults/alarms	2-636
2804 – Status words	2-637
2810 – STO: Safe Torque Off	2-638
2812 – F-DI: Fail-safe digital input	2-639

2.10 Safety Integrated Extended Functions	2-640
2819 – SS1: Safe Stop 1, internal STOP A, B, F	2-641
2820 – SLS: Safely-Limited Speed	2-642
2823 – SSM: Safe Speed Monitor	2-643
2824 – SDI: Safe Direction	2-644
2840 – PROFIsafe control and status word	2-645
2850 – Fail-safe digital inputs (F-DI 0 ... F-DI 2)	2-646
2853 – Fail-safe digital output (F-DO 0)	2-647
2855 – F-DI assignment	2-648
2856 – Safe state selection	2-649
2857 – F-DO assignment	2-650
2858 – Extended Functions via PROFIsafe (9601.2 = 1 and 9601.3 = 1)	2-651
2.11 Safety Integrated PROFIsafe	2-652
2915 – Standard telegrams	2-653
2917 – Manufacturer-specific telegrams	2-654
2.12 Setpoint channel	2-655
3001 – Overview	2-656
3010 – Fixed speed setpoints, binary selection (p1016 = 2)	2-657
3011 – Fixed speed setpoints, direct selection (p1016 = 1)	2-658
3020 – Motorized potentiometer	2-659
3030 – Main/supplementary setpoint, setpoint scaling, jogging	2-660
3040 – Direction limitation and direction reversal	2-661
3050 – Skip frequency bands and speed limitations	2-662
3060 – Basic ramp-function generator	2-663
3070 – Extended ramp-function generator	2-664
3080 – Ramp-function generator selection, status word, tracking	2-665
2.13 Basic positioner (EPOS)	2-666
3610 – Jog mode	2-667
3612 – Homing / active homing mode (p2597 = 0-signal)	2-668
3614 – Passive homing mode (p2597 = 1-signal)	2-669
3615 – Traversing block mode, external block change	2-670
3616 – Traversing block mode	2-671
3617 – Travel to fixed stop	2-672
3618 – Direct setpoint specification / MDI mode, dynamic values	2-673

3620 – Direct setpoint specification / MDI mode	2-674
3625 – Mode control	2-675
3630 – Traversing range limits	2-676
3635 – Interpolator	2-677
3640 – Control word, block selection / MDI selection	2-678
3645 – Status word 1	2-679
3646 – Status word 2	2-680
3650 – Status word, active traversing block / MDI active	2-681
2.14 Position control	2-682
4010 – Position actual value conditioning	2-683
4015 – Position controller	2-684
4020 – Standstill/positioning monitoring	2-685
4025 – Dynamic following error monitoring, cam controllers	2-686
2.15 Encoder evaluation	2-687
4704 – Position sensing, encoders 1 ... 2	2-688
4715 – Speed actual value and pole position sensing, motor encoder ASM/SM (encoder 1) 2-689	
4720 – Encoder interface, receive signals, encoders 1 ... 2	2-690
4730 – Encoder interface, send signals, encoders 1 ... 2	2-691
4735 – Reference mark search with external zero mark, encoders 1	2-692
4750 – Absolute value for incremental encoder	2-693
2.16 Vector control	2-694
6030 – Speed setpoint, droop	2-695
6031 – Pre-control balancing, acceleration model	2-696
6040 – Speed controller	2-697
6050 – Kp_n/Tn_n adaptation	2-698
6060 – Torque setpoint	2-699
6300 – V/f characteristic and voltage boost	2-700
6310 – Resonance damping and slip compensation (V/f)	2-701
6490 – Speed control configuration	2-702
6491 – Flux control configuration	2-703
6630 – Upper/lower torque limit	2-704
6640 – Current/power/torque limits	2-705
6710 – Current setpoint filter	2-706

6714 – Iq and Id controller	2-707
6721 – Id setpoint (PEM, p0300 = 2xx)	2-708
6722 – Field weakening characteristic, Id setpoint (ASM, p0300 = 1)	2-709
6723 – Field weakening controller, flux controller (ASM, p0300 = 1)	2-710
6724 – Field weakening controller (PEM, p0300 = 2xx)	2-711
6730 – Interface to the Power Module (ASM, p0300 = 1)	2-712
6731 – Interface to the Power Module (PEM, p0300 = 2xx)	2-713
6799 – Display signals	2-714
2.17 Free function blocks	2-715
7200 – Sampling times of the runtime groups	2-716
7210 – AND (AND function blocks with 4 inputs)	2-717
7212 – OR (OR function blocks with 4 inputs)	2-718
7214 – XOR (XOR function blocks with 4 inputs)	2-719
7216 – NOT (inverter)	2-720
7220 – ADD (adder with 4 inputs), SUB (subtractor)	2-721
7222 – MUL (multiplier with 4 inputs), DIV (divider)	2-722
7224 – AVA (absolute value generator)	2-723
7225 – NCM (numeric comparator)	2-724
7226 – PLI (polyline scaling)	2-725
7230 – MFP (pulse generator), PCL (pulse contractor)	2-726
7232 – PDE (ON delay)	2-727
7233 – PDF (OFF delay)	2-728
7234 – PST (pulse stretcher)	2-729
7240 – RSR (RS flip-flop), DFR (D flip-flop)	2-730
7250 – BSW (binary change-over switch), NSW (numeric change-over switch)	2-731
7260 – LIM (limiter)	2-732
7262 – PT1 (smoothing element)	2-733
7264 – INT (integrator), DIF (derivative-action element)	2-734
7270 – LVM (double-sided limit monitor with hysteresis)	2-735
2.18 Technology functions	2-736
7017 – DC braking (p0300 = 1)	2-737

2.19 Technology controller	2-739
7950 – Fixed values, binary selection (p2216 = 2)	2-740
7951 – Fixed values, direct selection (p2216 = 1)	2-741
7954 – Motorized potentiometer	2-742
7958 – Closed-loop control	2-743
2.20 Signals and monitoring functions	2-744
8005 – Overview	2-745
8010 – Speed signals 1	2-746
8011 – Speed signals 2	2-747
8012 – Torque signals, motor locked/stalled	2-748
8013 – Load monitoring	2-749
8014 – Thermal monitoring, power unit	2-750
8016 – Thermal monitoring, motor	2-751
8017 – Thermal motor models	2-752
8020 – Monitoring functions 1	2-753
8021 – Monitoring functions 2	2-754
2.21 Faults and alarms	2-755
8050 – Overview	2-756
8060 – Fault buffer	2-757
8065 – Alarm buffer	2-758
8070 – Fault/alarm trigger word (r2129)	2-759
8075 – Fault/alarm configuration	2-760
2.22 Data sets	2-761
8550 – Overview	2-762
8560 – Command Data Sets (CDS)	2-763
8565 – Drive Data Sets (DDS)	2-764
8570 – Encoder Data Sets (EDS)	2-765

2.2 Explanations on the function diagrams


Function diagrams

1020 – Explanation of the symbols (Part 1)	2-579
1021 – Explanation of the symbols (Part 2)	2-580
1022 – Explanation of the symbols (Part 3)	2-581
1030 – Handling BICO technology	2-582

Fig. 2-1 1020 – Explanation of the symbols (Part 1)


Parameters		Connectors		Binectors		Data sets					
Symbol Parameter name [Unit] rxxx[y..z] ↑	Meaning Monitoring parameter with unit [Unit] and index range [y..z] or data set [C/D]	Symbol Parameter name pxxx[y..z] ⊶ (Def)	Meaning Connector input CI with index range [y..z] or data set [C/D] and factory setting (Def *)	Symbol Parameter name pxxx[y..z] ⊷ (Def.y)	Meaning Binector input BI with with index range [y..z] or data set [C/D] and factory setting.bit number (Def)	Symbol pxxx[C] ↓	Meaning Parameter belongs to the Command Data Set (CDS).				
Symbol Parameter name from ... to [Unit] pxxx[C/D] (Def) ↓	Meaning Setting parameter with min/ max value and unit [Unit] data set [C/D] and factory setting (Def *)	Symbol Parameter name [Unit] rxxx[y..z] ⊷	Meaning Connector output CO with unit [Unit] and with index range [y..z]	Symbol Parameter name rxxxx ⊷	Meaning Binector output BO	Symbol pxxx[D] ↓	Meaning Parameter belongs to the Drive Data Set (DDS).				
Connectors/binectors				Pre-assigned connectors							
Symbol Parameter name rxxxx ⊷ rxxxx ⊷	Meaning Connector/binector output CO/BO			Symbol Parameter name from ... to [Unit] pxxx[D] (Def) ⊷ ↓	Meaning Setting parameter with min/ max value and unit [Unit] data set [D] and factory setting (Def)						
Information on parameters, binectors, connectors				Cross references between diagrams							
Symbol Parameter name [Unit] rxxx[y] or rxxx[y..z] or rxxx[y].ww or rxxx.ww pxxx[y] or pxxx[y..z] or pxxx[y].ww or pxxx.ww from ... to (xxx[y].ww) (Def) (Def.w) [aaaa.b]	Meaning Parameter name (up to 18 characters) [dimension unit] "r" = monitoring parameter. These parameters are read-only "xxxx" stands for the parameter number "[y]" specifies the applicable index, "[y..z]" specifies the index range ".ww" specifies the bit number (e.g. 0...15). "p" = setting parameter. These parameters can be changed. "xxxx" stands for the parameter number, "[y]" specifies the applicable index, "[y..z]" specifies the index range ".ww" specifies the bit number (e.g. 0...15). Value range. Parameter number (xxxx) with Index number [y] and bit number .ww. Factory setting. Factory setting with bit number as prefix. Diagram references for setting parameters that occur a multiple number of times. [Function diagram number, signal path]			Symbol Signal path Text → [aaaa.b] [cccc.d] → Text To "function diagram name" [aaaa.b] = binectors.				Meaning The function diagrams are sub-divided into signal paths 1...8 in order to facilitate orientation. Text = Unique signal designation aaaa = Signal to target diagram aaa b = Signal to signal path b Text = Unique signal designation cccc = Signal from source diagram cccc d =Signal from signal path d			
				Cross references for control bits							
				Symbol pxxxx [aaaa.b]	Meaning pxxxx= Original parameter of signal aaaa = Signa from source diagram aaaa b = Signal from signal path b						
*) For some parameters the value for the factory setting is calculated during commissioning for they are dependent on Power Module and motor (see Section 1.1.1 "Calculated").											
1	2	3	4	5	6	7	8				
Explanations for the function diagrams					fp_1020_97_61.vsd	Function diagram					
Explanation of the symbols (Part 1)					12.12.2012 V4.6	SINAMICS G120D					
							- 1020 -				

Symbols for computational and closed-loop control functions

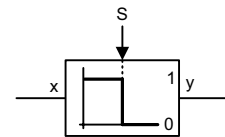


Threshold value switch 1/0

Outputs at y a logical "1" if $x < S$.

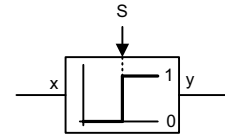


Threshold value switch 0/1

Outputs at y a logical "1" if $x > S$.

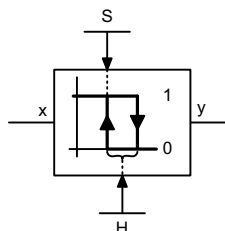


Threshold value 1/0 with hysteresis

Outputs a logical "1" at y if $x < S$.
If $x >= S + H$ then y returns to 0.

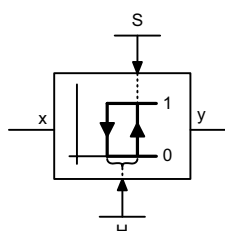

Threshold value 0/1 with hysteresis

Outputs a logical "1" at y if $x > S$.
If $x <= S - H$ then y returns to 0.

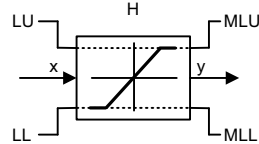

Limiter


x is limited to the upper limit LU and the lower limit LL and output at y.
The digital signals MLU and MLL have the value "1", if the upper or lower limit is active.




Sample & Hold element

Sample and hold element.
 $y = x$ if SET = 1
(not retentively saved at POWER OFF)


Symbols for logic functions




Logical inversion



AND element with logical inversion of an input signal




OR element



Exclusive-OR/XOR


$y = 1$ when $x1 \neq x2$ is.



R/S flip-flop

S = setting input
R = reset input
Q = non-inverted output
Q-bar = inverted output

Symbols for computational and closed-loop control functions




Sign reversal

$y = -x$




Absolute value generator

$y = |x|$




Divider

$y = \frac{x1}{x2}$



Comparator


Output y is a logical "1", if the analog signal $x > 0$, i.e. is positive.



Differentiator

$y = \frac{dx}{dt}$

Symbol for monitoring



Axxxxx
or
Fxxxxx


Monitoring

1	2	3	4	5	6	7	8
Explanations for the function diagrams					fp_1021_97_61.vsd	Function diagram	
Explanation of the symbols (Part 2)					12.12.2012 V4.6	SINAMICS G120D	
							- 1021 -


Fig. 2-2 1021 – Explanation of the symbols (Part 2)

Fig. 2-3 1022 – Explanation of the symbols (Part 3)


Switch-on delay

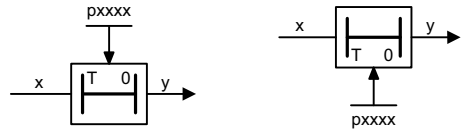


The digital signal x must have the value "1" without any interruption during the time T before output y changes to "1".

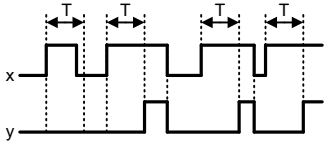


Switch-off delay

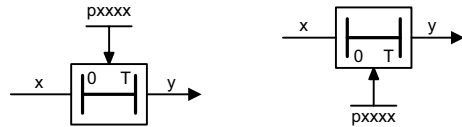


The digital signal x must have the value "0" without interruption during the time T before output y changes to "0".

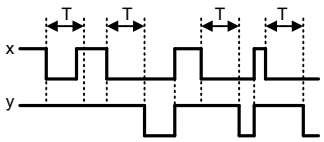


Delay (switch-on and switch-off)

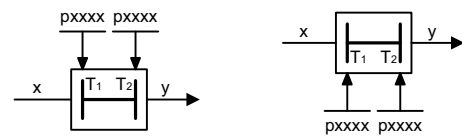

The digital signal x must have the value "1" without interruption during time T1 or must have the value "0" during time T2 before output y changes its signal state.

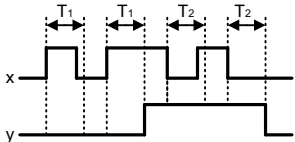


Switch symbol

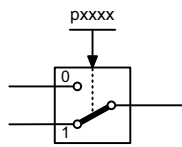

Simple changeover switch

The switch position is shown according to the factory setting (in this case, switch position 1 in the default state on delivery).


PT1 element

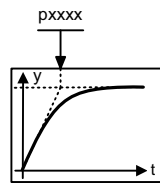

Delay element, first order.

pxxxx = time constant


PT2 low pass

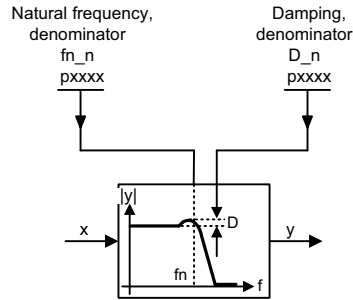

Transfer function

$$H(s) = \frac{1}{\left(\frac{s}{2\pi f_{n_n}}\right)^2 + \frac{2 \cdot D_n}{2\pi f_{n_n}} \cdot s + 1}$$

2nd-order filter (bandstop/general filter)

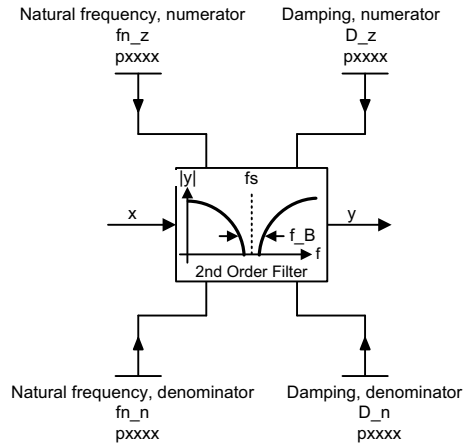

Used as bandstop filter

- center frequency fs: fn_z = fs


- bandwidth f_B: D_z = 0

$$D_n = \frac{f_B}{2 \cdot fs}$$

Transfer function when used as general filter

$$H(s) = \frac{\left(\frac{s}{2\pi f_{n_z}}\right)^2 + \frac{2 \cdot D_z}{2\pi f_{n_z}} \cdot s + 1}{\left(\frac{s}{2\pi f_{n_n}}\right)^2 + \frac{2 \cdot D_n}{2\pi f_{n_n}} \cdot s + 1}$$

Analog adder can be activated

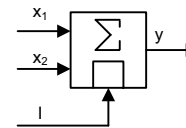

The following applies to l = 1 signal: y = x1 + x2

The following applies to l = 0 signal: y = x1

1 2 3 4 5 6 7 8
 Explanations for the function diagrams

Explanation of the symbols (Part 3)

fp_1022_97_61.vsd


Function diagram


12.12.2012 V4.6

SINAMICS G120D

- 1022 -

Handling BICO technology

Binector: 


Connector:  Connectors are "analog signals" that can be freely interconnected (e.g. percentage variables, speeds or torques). Connectors are also "CO:" display parameters (CO = Connector Output).

Parameterization:

At the signal destination, the required binector or connector is selected using appropriate parameters:
 "Bl:" parameter for binectors (Bl = Binector Input)
 or
 "Cl:" parameter for connectors (Cl = Connector Input)

Example:

The main setpoint for the speed controller (Cl: p1070) should be received from the output of the motorized potentiometer (CO: r1050) and the "jog" command (Bl: p1055) from Digital Input DI0 (BO: r0722.0, Terminal 5 (Kl. 5)) on the CU.

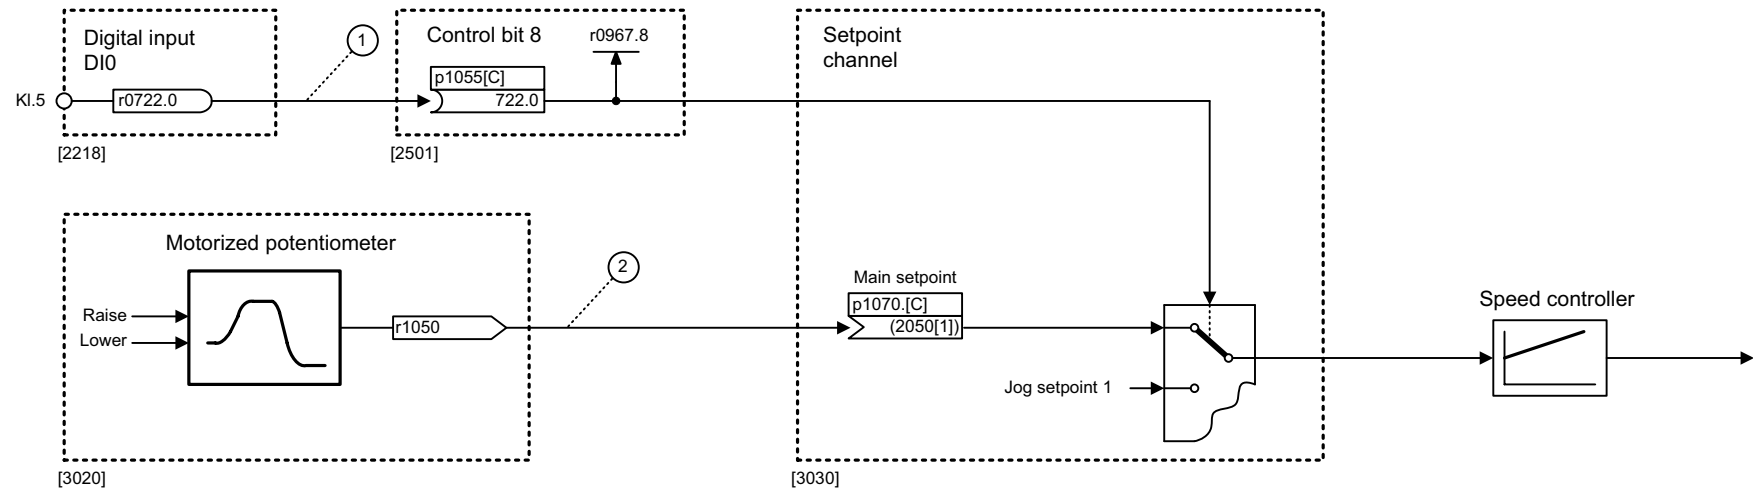

Parameterizing steps:

- ① p1055[0] = 722.0 Terminal 5 (Kl. 5) acts as "Jog bit 0".
- ② p1070[0] = 1050 The output of the motorized potentiometer acts as main setpoint for the speed controller.


1	2	3	4	5	6	7	8
Explanations for the function diagrams					fp_1030_97_61.vsd	Function diagram	
Handling BICO technology					12.12.2012 V4.6	SINAMICS G120D	
							- 1030 -

Fig. 2-4 1030 – Handling BICO technology

2.3 Overviews

Function diagrams

1690 – Vector control, V/f control	2-584
1700 – Vector control, speed control and generation of the torque limits	2-585
1710 – Vector control, current control	2-586

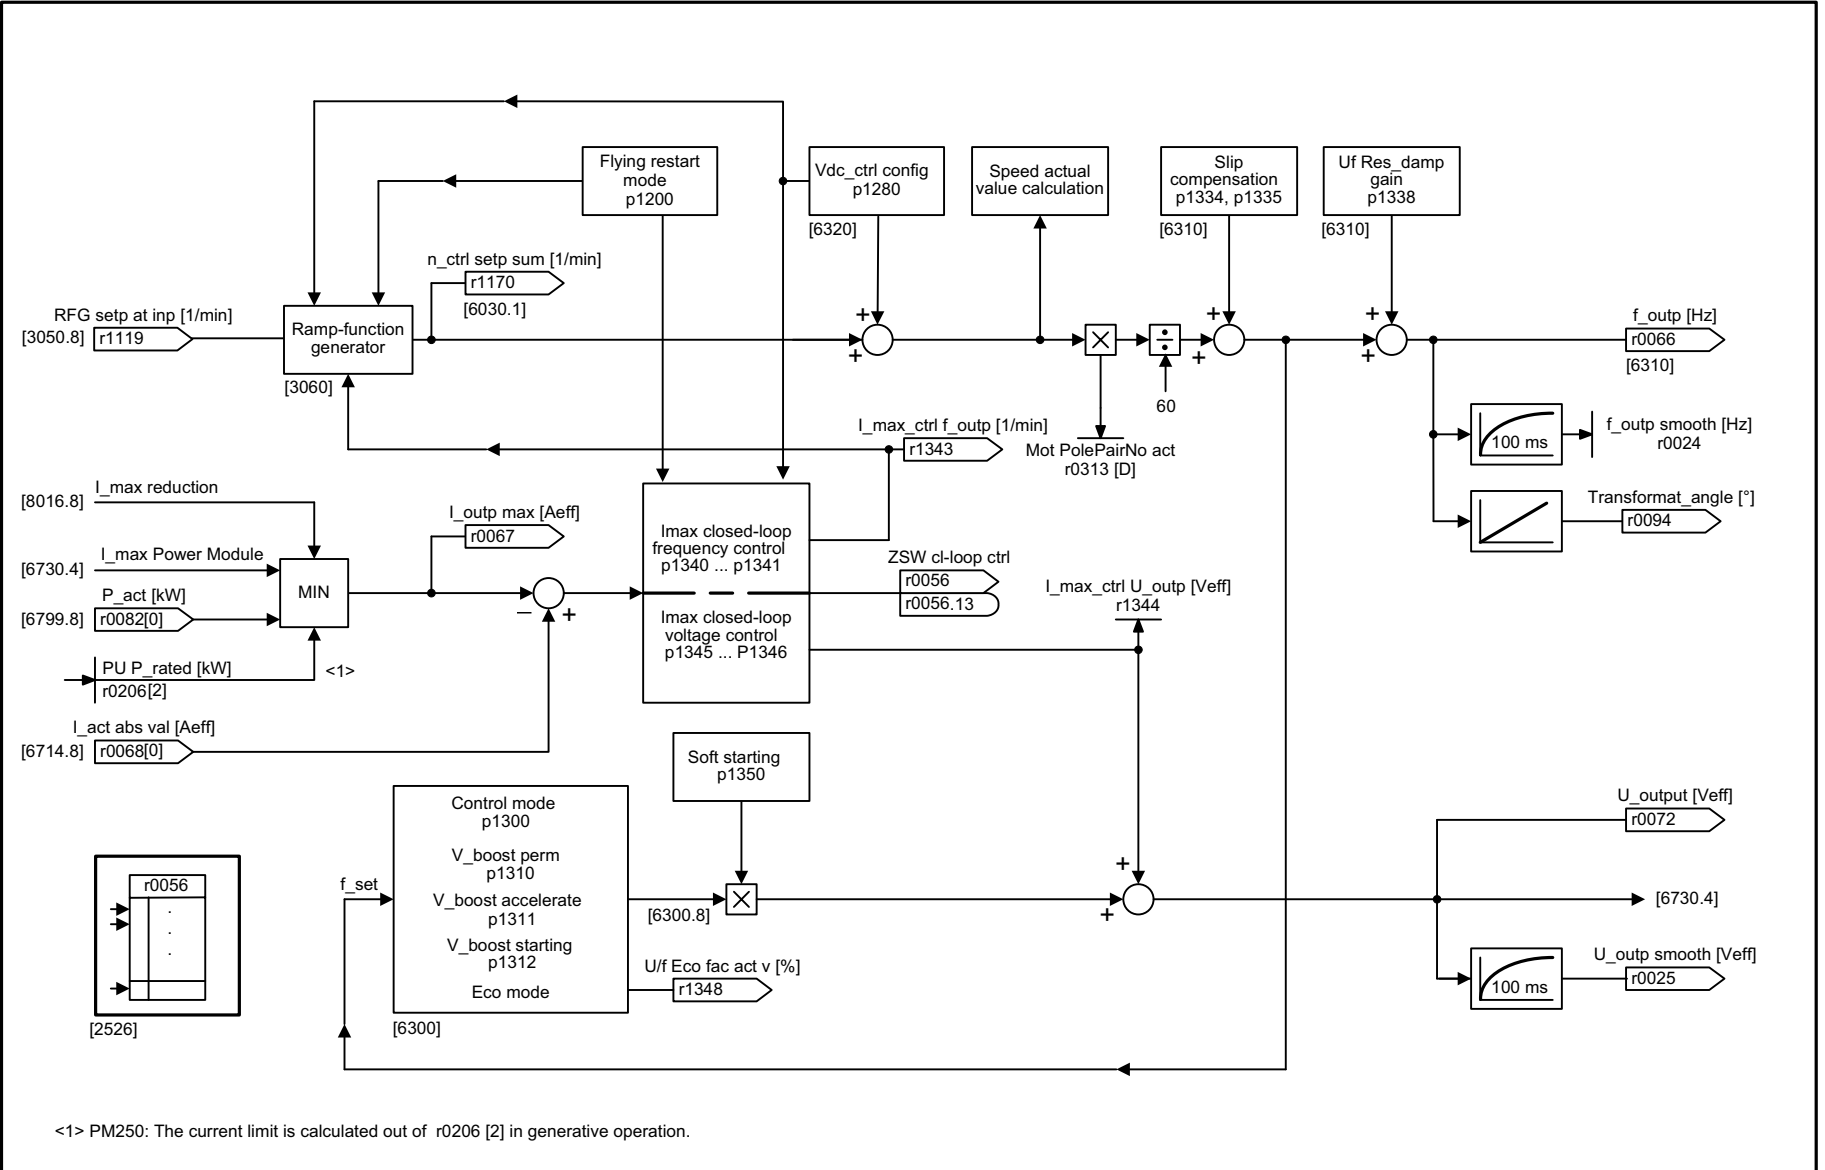


<1> PM250: The current limit is calculated out of r0206 [2] in generative operation.

1	2	3	4	5	6	7	8
Overviews					fp_1690_97_53.vsd	Function diagram	
Vector control, U/f control					12.12.2012 V4.6	SINAMICS G120D	
							- 1690 -

Fig. 2-5 1690 – Vector control, U/f control

Fig. 2-6 1700 – Vector control, speed control and generation of the torque limits

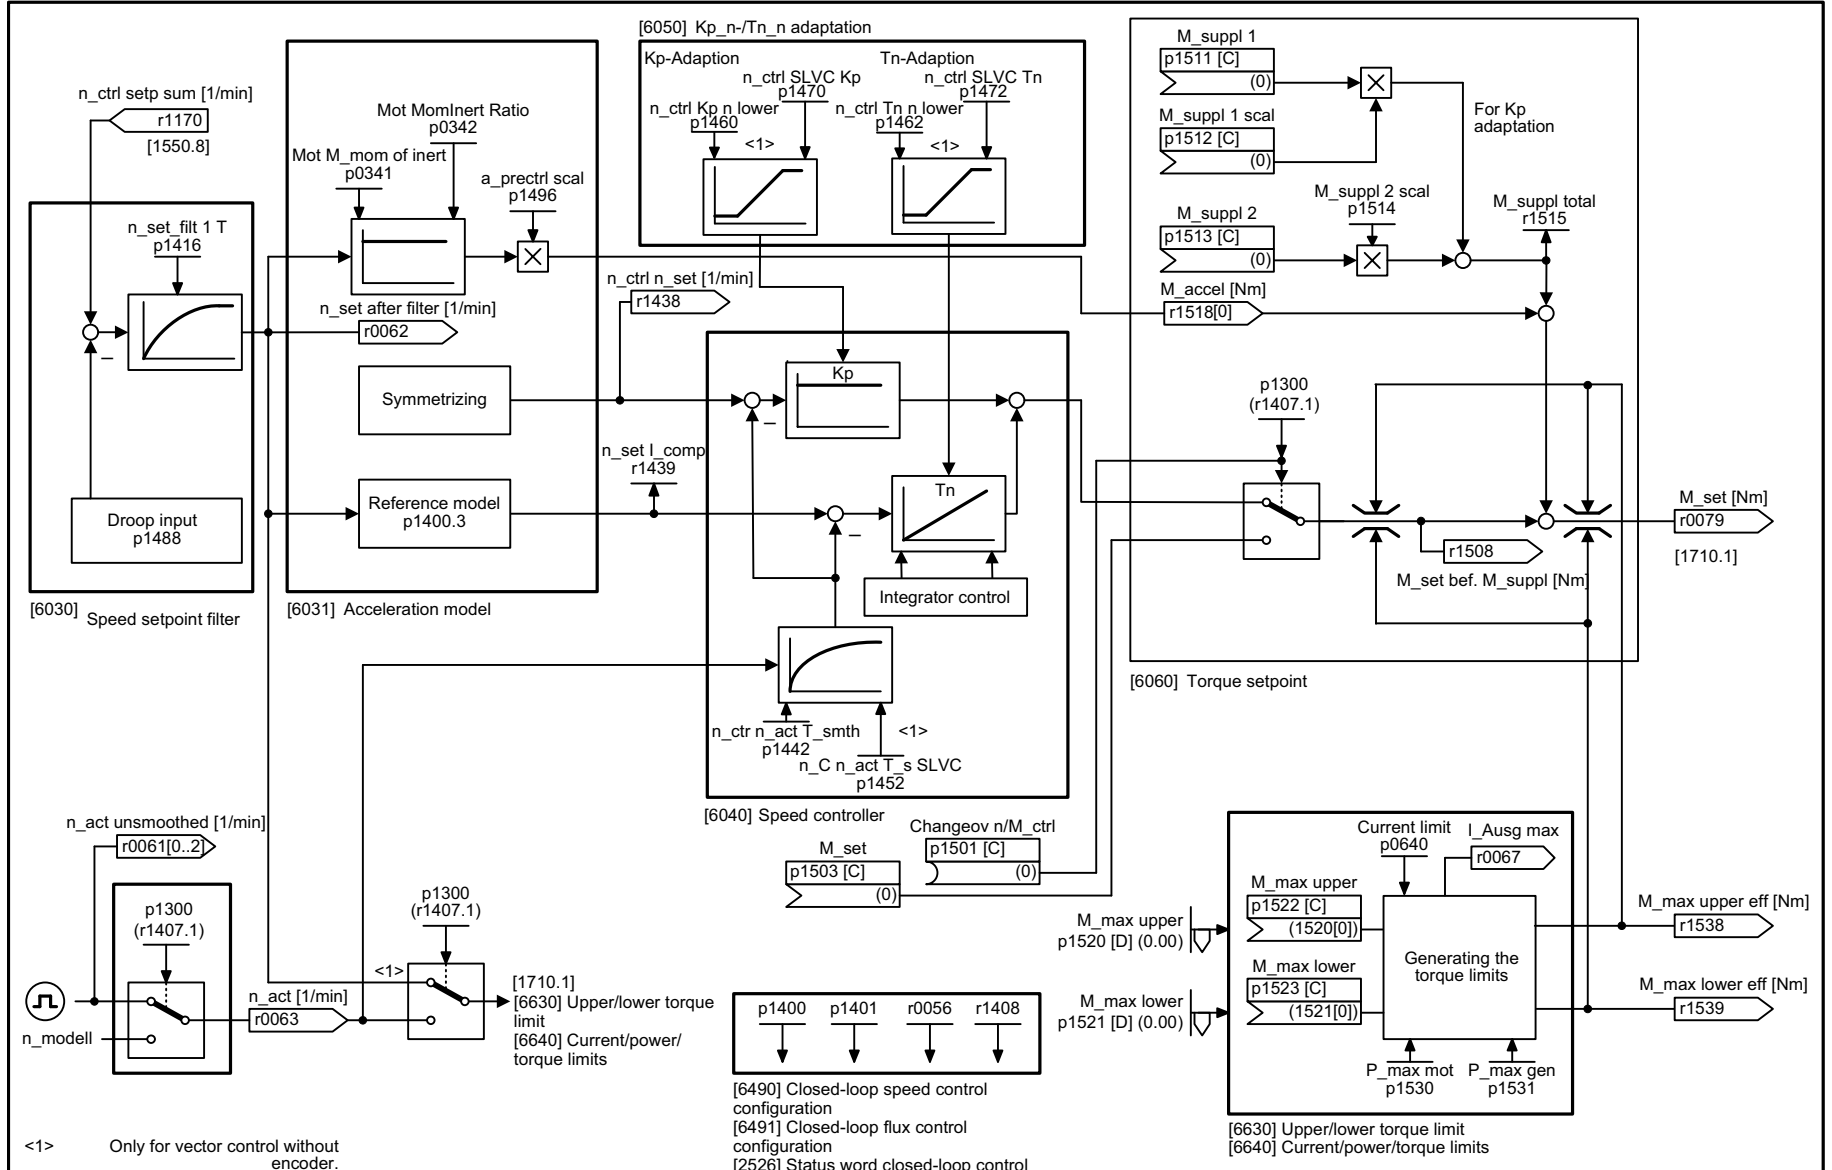

1	2	3	4	5	6	7	8
Overviews					fp_1700_97_55.vsd	Function diagram	
Vector control, speed control and generation of the torque limits					12.12.2012 V4.6	SINAMICS G120D	
							- 1700 -

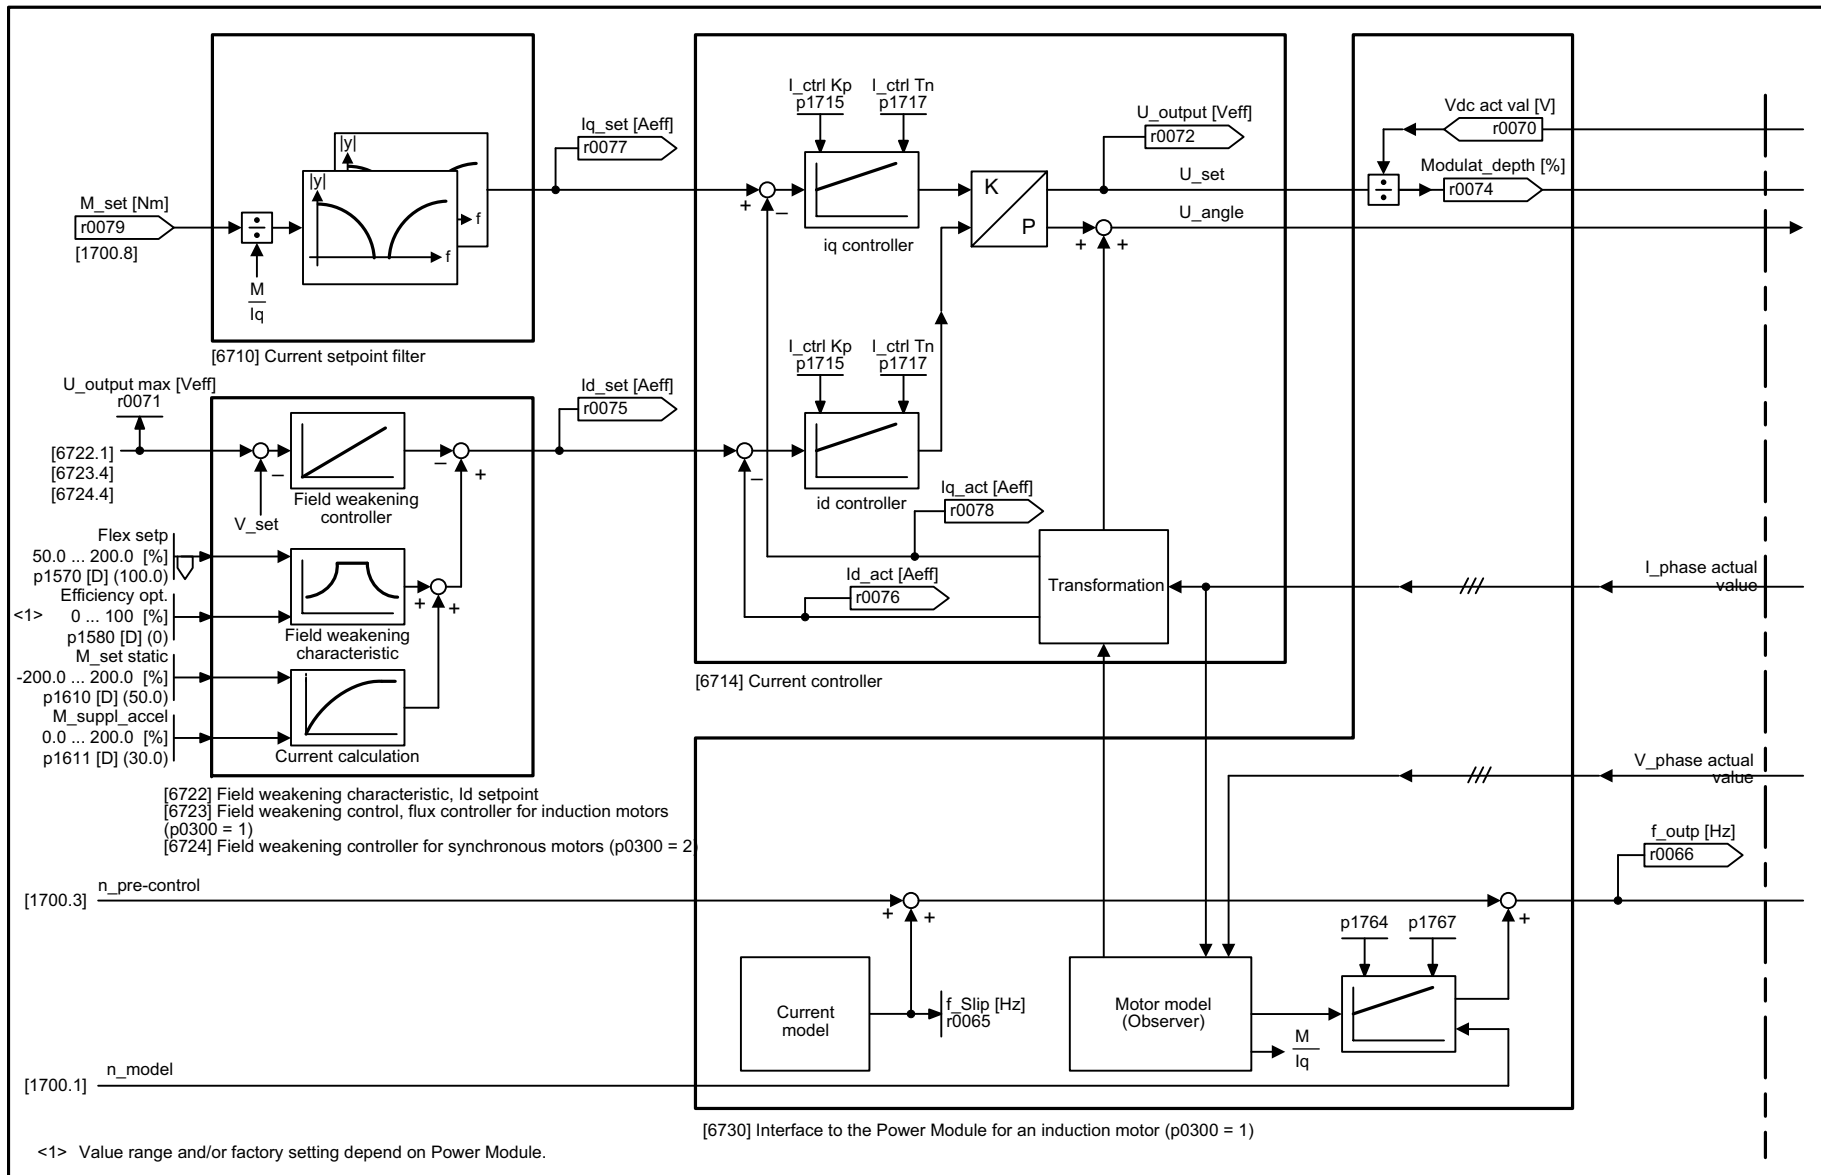


Fig. 2-7 1710 – Vector control, current control

1	2	3	4	5	6	7	8
Overviews					fp_1710_97_55.vsd	Function diagram	
Vector control, current control					12.12.2012 V4.6	SINAMICS G120D	
							- 1710 -

[6722] Field weakening characteristic, Id setpoint
 [6723] Field weakening control, flux controller for induction motors (p0300 = 1)
 [6724] Field weakening controller for synchronous motors (p0300 = 2)

[1700.3] n_pre-control
 [1700.1] n_model

<1> Value range and/or factory setting depend on Power Module.

2.4 Input/output terminals

Function diagrams

2201 – Connection overview	2-588
2210 – Digital inputs (DI 0 ... DI 5)	2-589
2241 – Digital outputs (DO 0 ... DO 1)	2-590
2251 – Analog inputs (AI 0 ... AI 1)	2-591
2256 – Analog inputs as digital inputs (DI 11 ... DI 12)	2-592


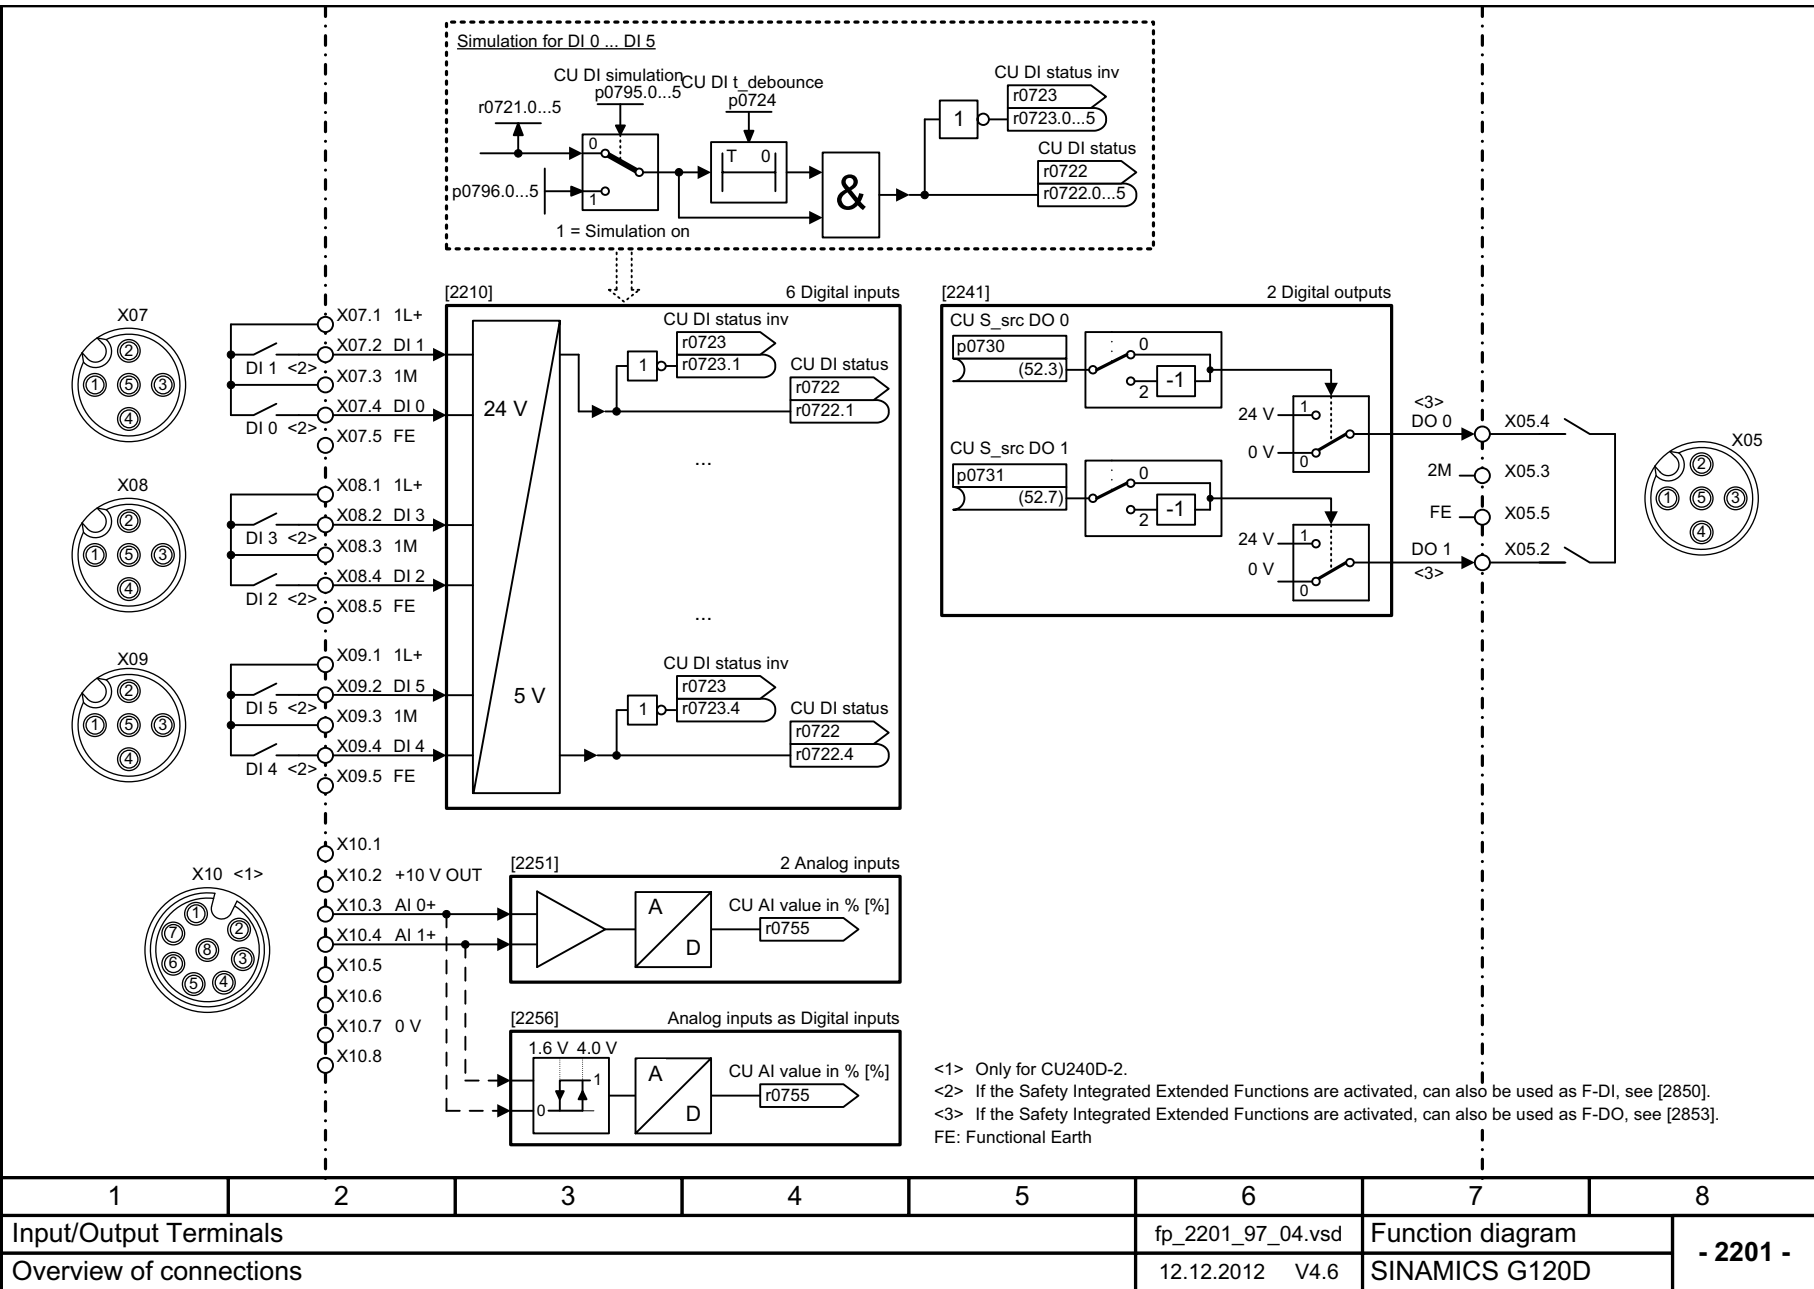


Fig. 2-8 2201 – Connection overview

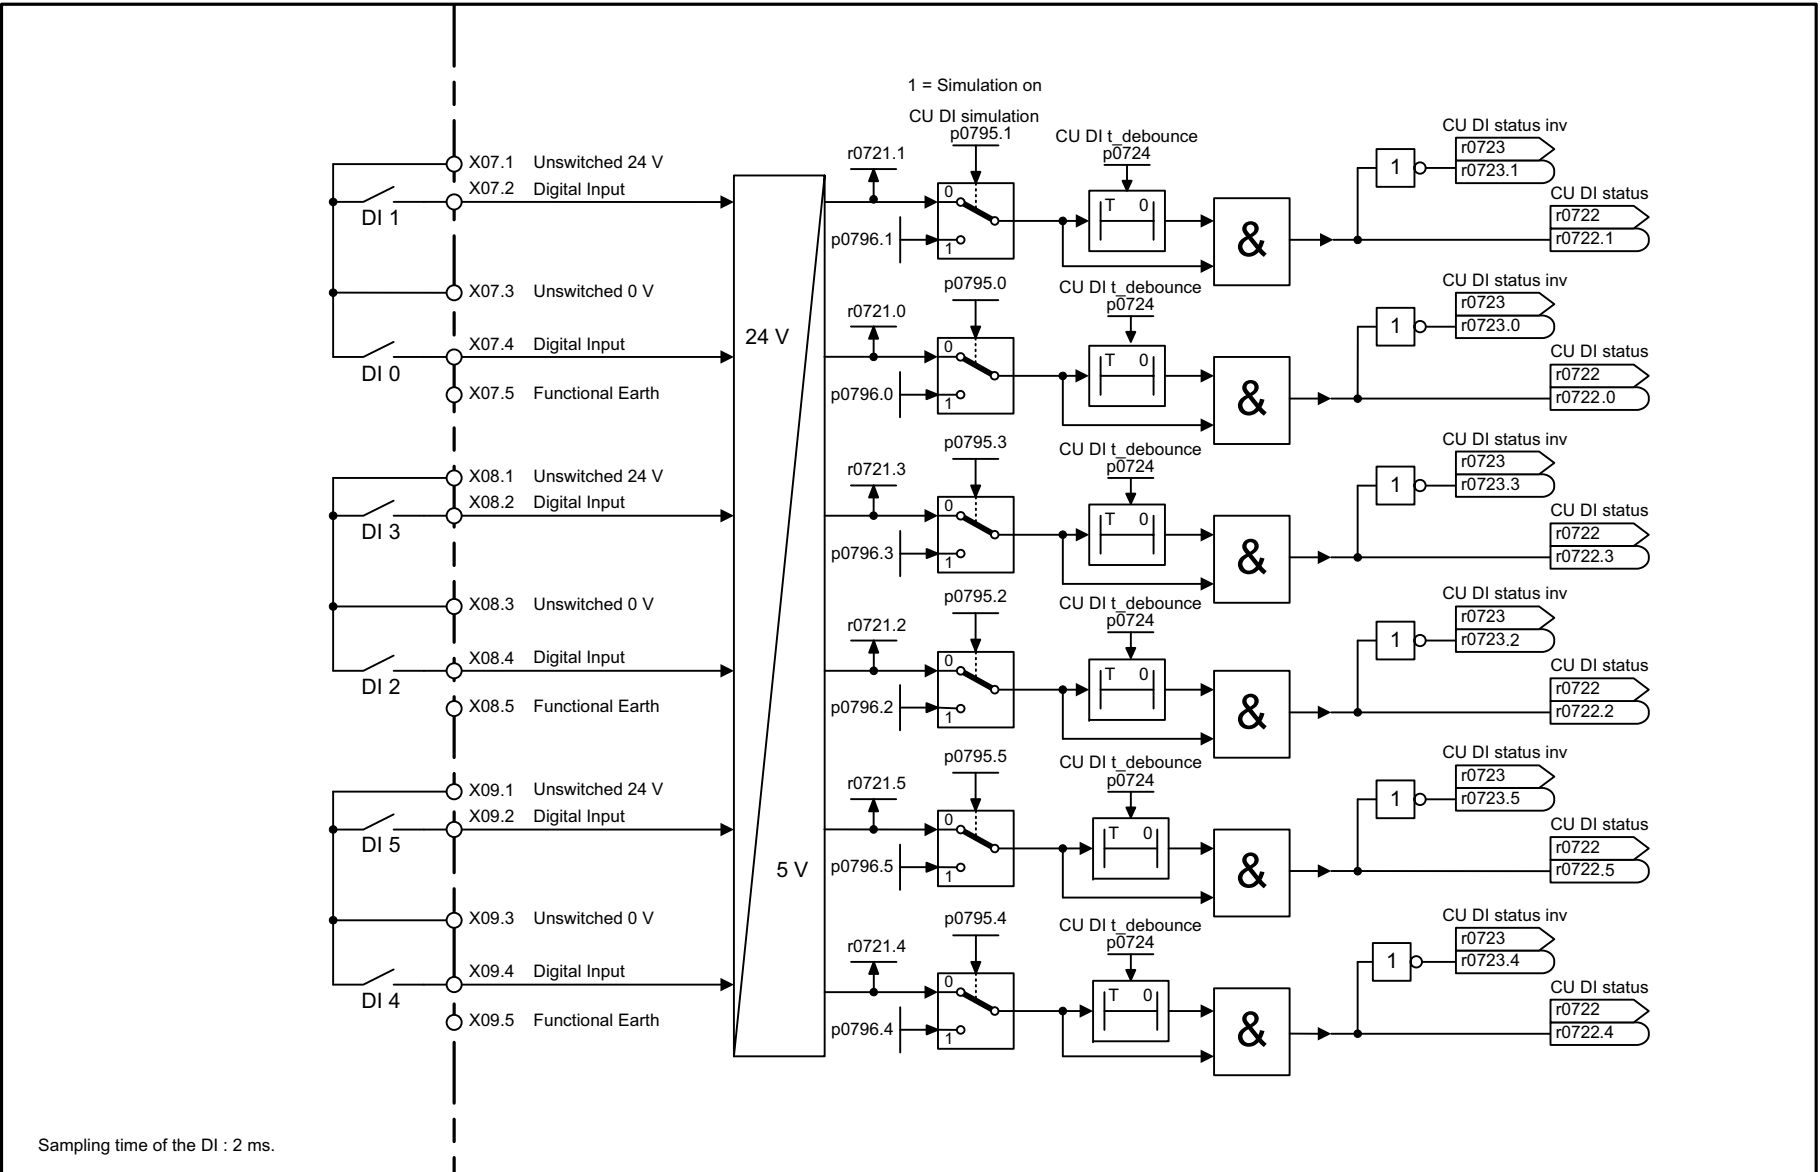

1	2	3	4	5	6	7	8
Input/Output Terminals					fp_2210_97_04.vsd	Function diagram	
Digital inputs (DI 0 ... DI 5)					12.12.2012 V4.6	SINAMICS G120D	

Fig. 2-9 2210 – Digital inputs (DI 0 ... DI 5)


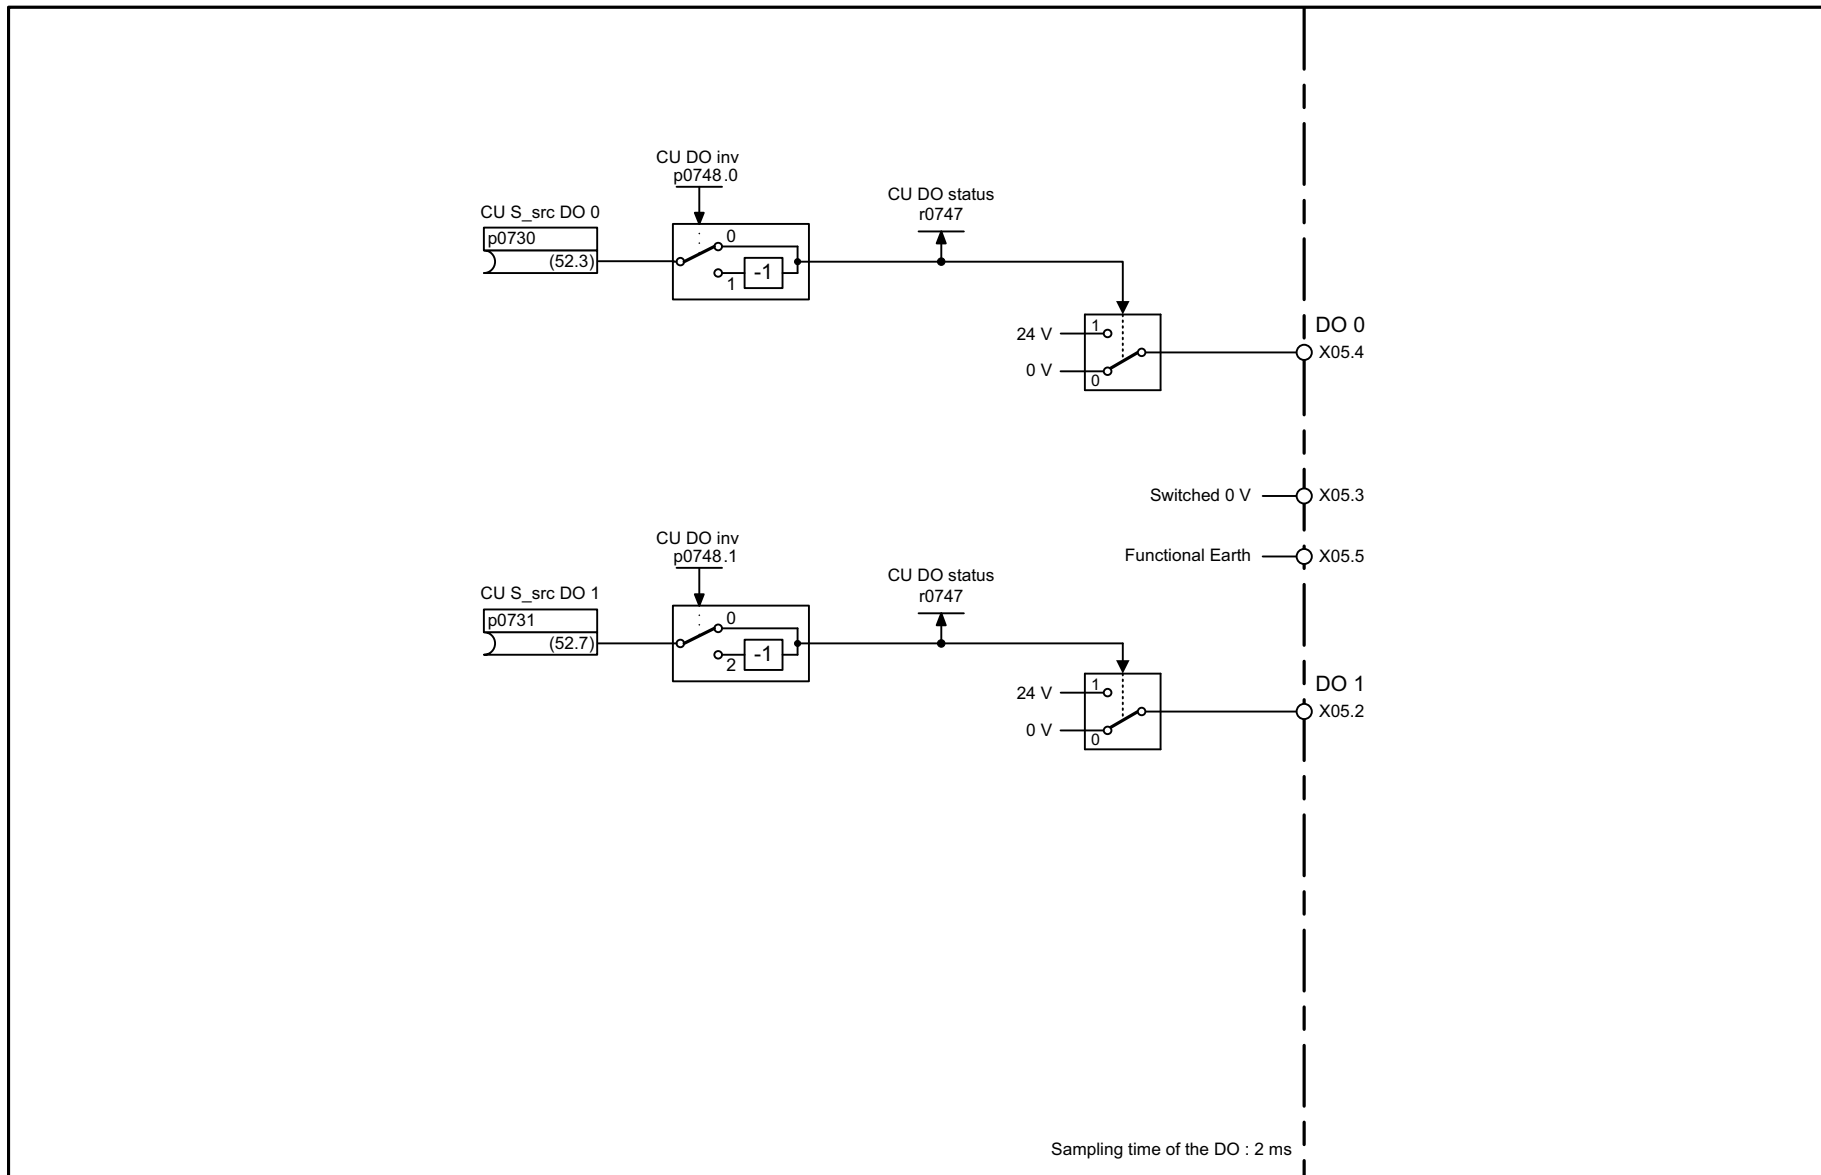


Fig. 2-10 2241 – Digital outputs (DO 0 ... DO 1)

1	2	3	4	5	6	7	8
Input/Output Terminals					fp_2241_97_04.vsd	Function diagram	
Digital outputs (DO 0 ... DO 1)					12.12.2012 V4.6	SINAMICS G120D	

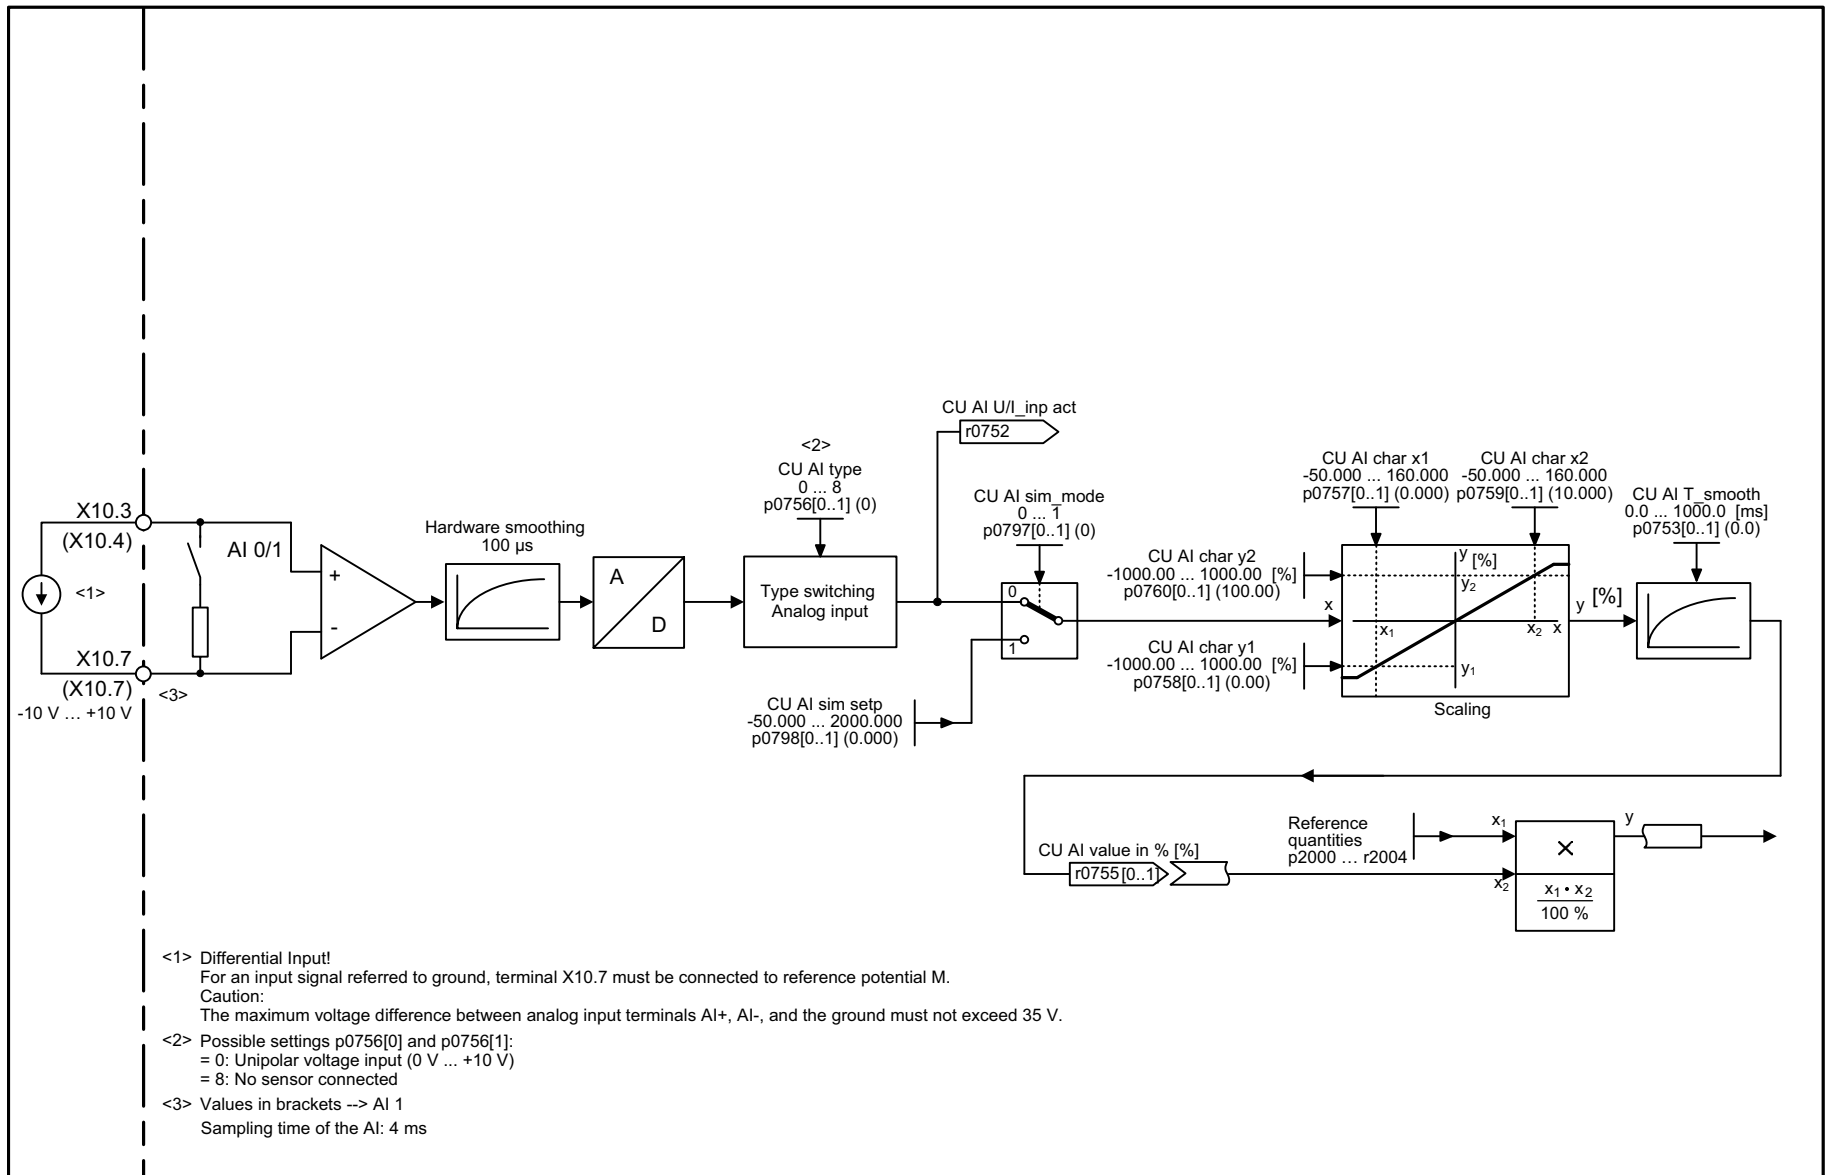

- <1> Differential Input!
For an input signal referred to ground, terminal X10.7 must be connected to reference potential M.
Caution:
The maximum voltage difference between analog input terminals AI+, AI-, and the ground must not exceed 35 V.
- <2> Possible settings p0756[0] and p0756[1]:
= 0: Unipolar voltage input (0 V ... +10 V)
= 8: No sensor connected
- <3> Values in brackets --> AI 1
Sampling time of the AI: 4 ms

1	2	3	4	5	6	7	8
Input/Output Terminals					fp_2251_97_04.vsd	Function diagram	
Analog inputs 0 ... 1 (AI 0 ... AI 1)					12.12.2012 V4.6	G120D CU240D-2	
							- 2251 -

Fig. 2-11 2251 – Analog inputs (AI 0 ... AI 1)

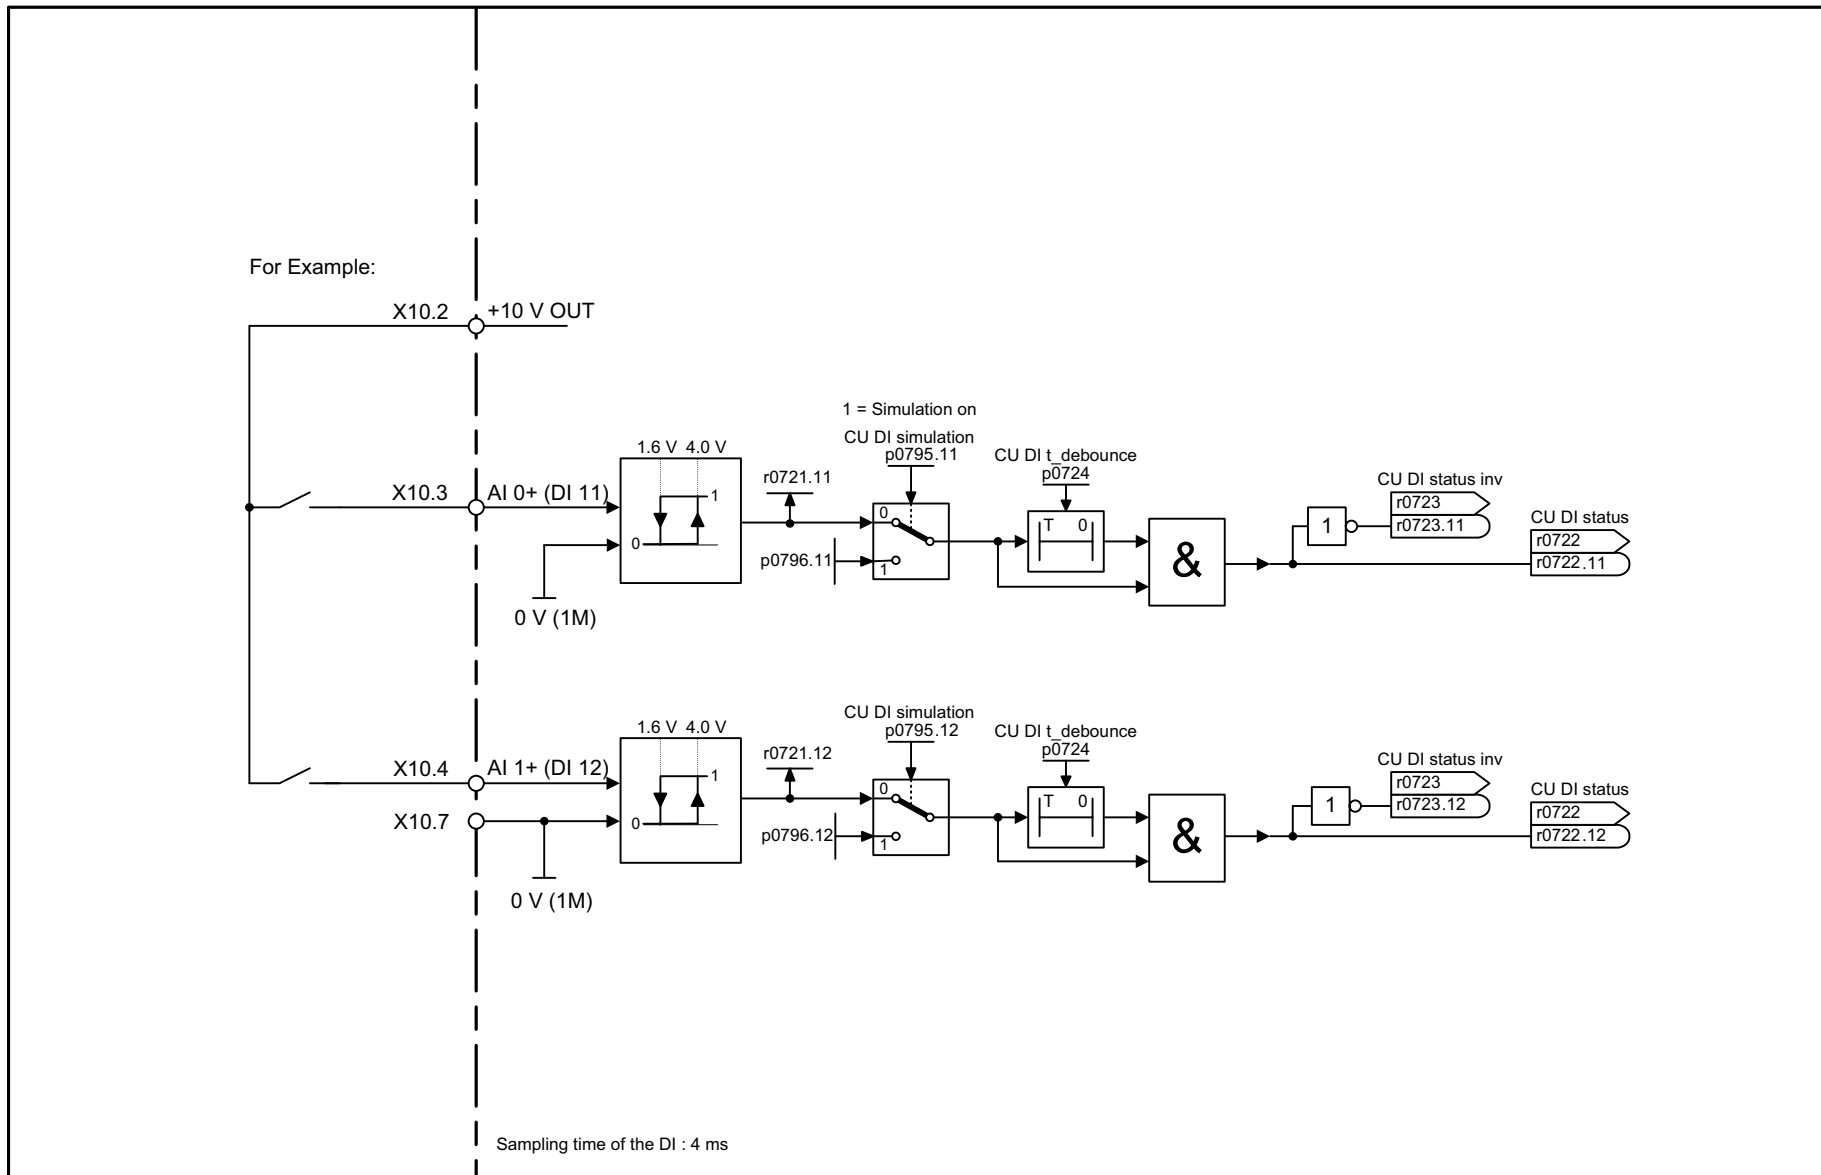


Fig. 2-12 2256 – Analog inputs as digital inputs (DI 11 ... DI 12)

1	2	3	4	5	6	7	8
Input/Output Terminals					fp_2256_97_04.vsd	Function diagram	
Analog inputs as Digital inputs (DI 11 ... DI 12)					12.12.2012 V4.6	G120D CU240D-2	

2.5 PROFlenergy

Function diagrams

2381 – Control commands and interrogation commands	2-594
2382 – States	2-595


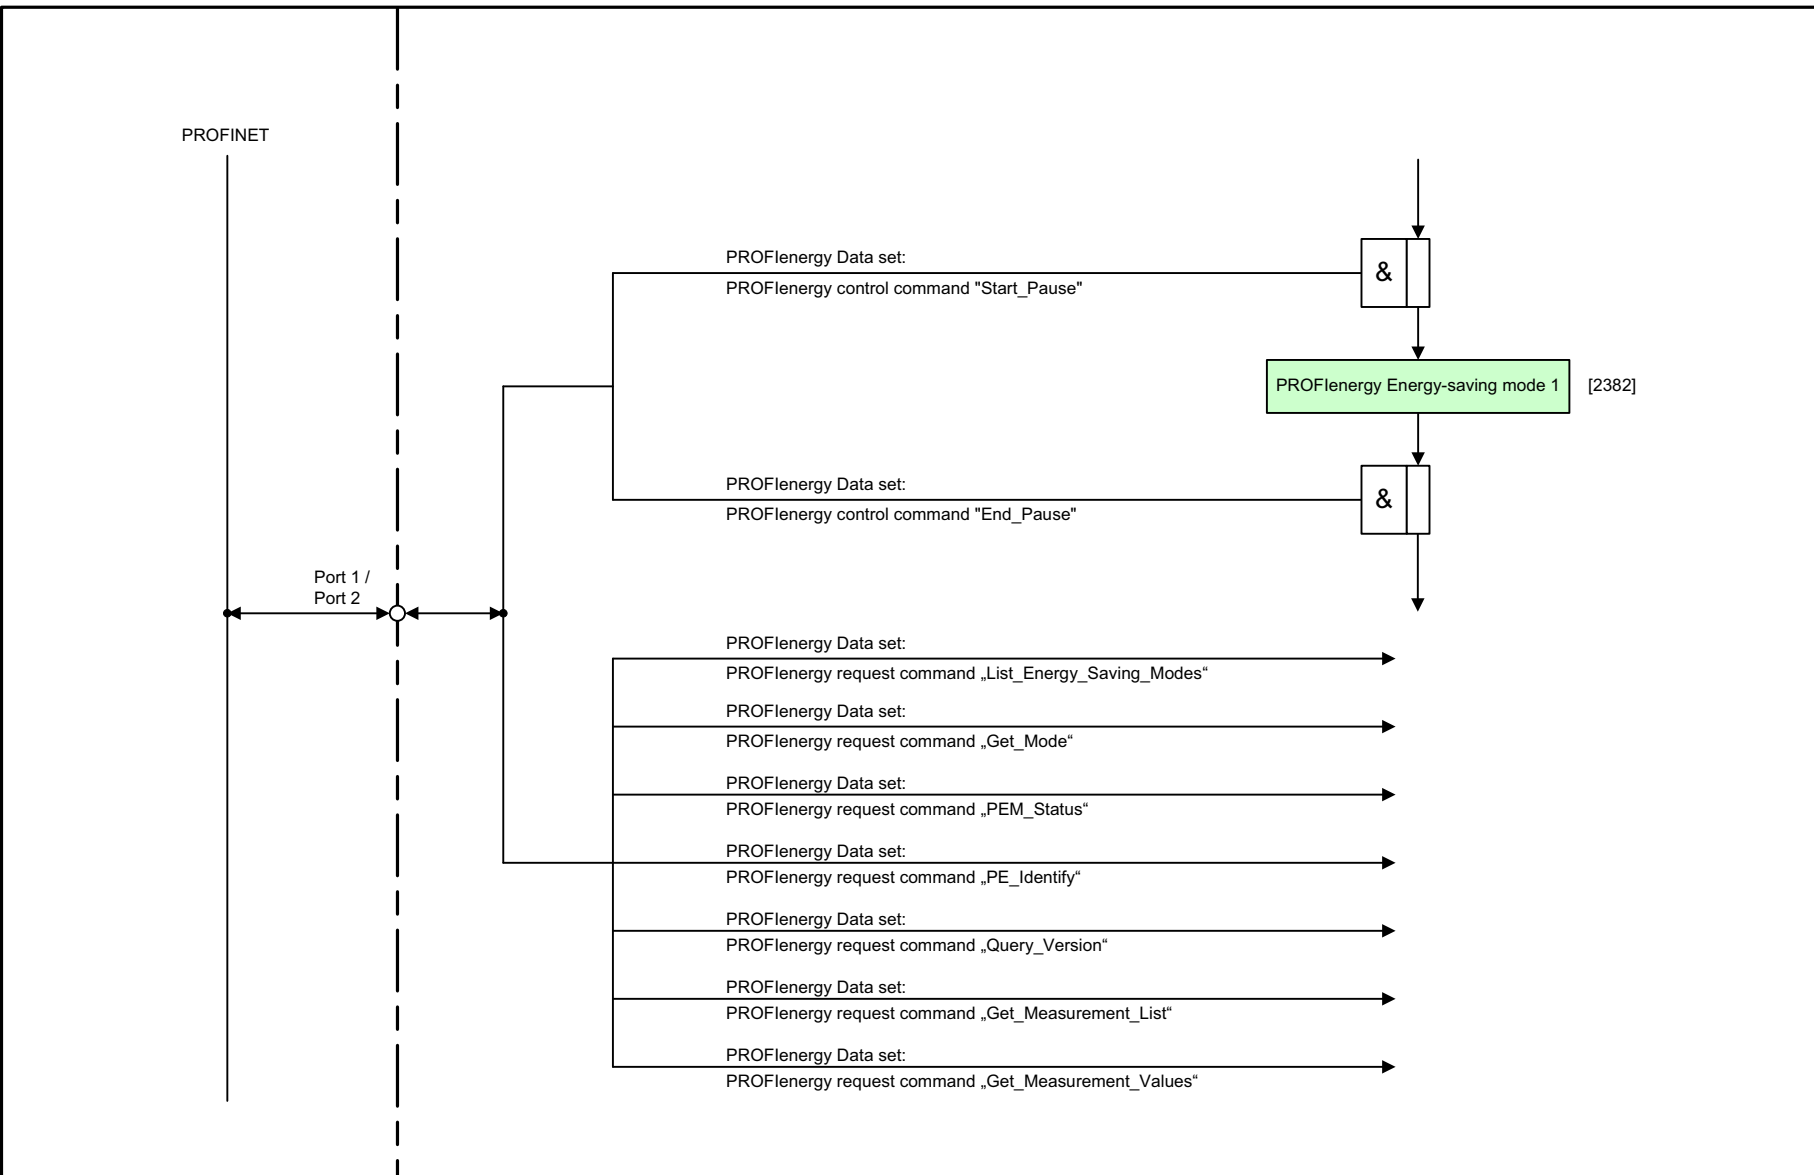


Fig. 2-13 2381 – Control commands and interrogation commands

1	2	3	4	5	6	7	8
PROFenergy					fp_2381_97_04.vsd	Function diagram	
Control commands and request commands					12.12.2012 V4.6	SINAMICS G120D PN	
							- 2381 -

Fig. 2-14 2382 – States

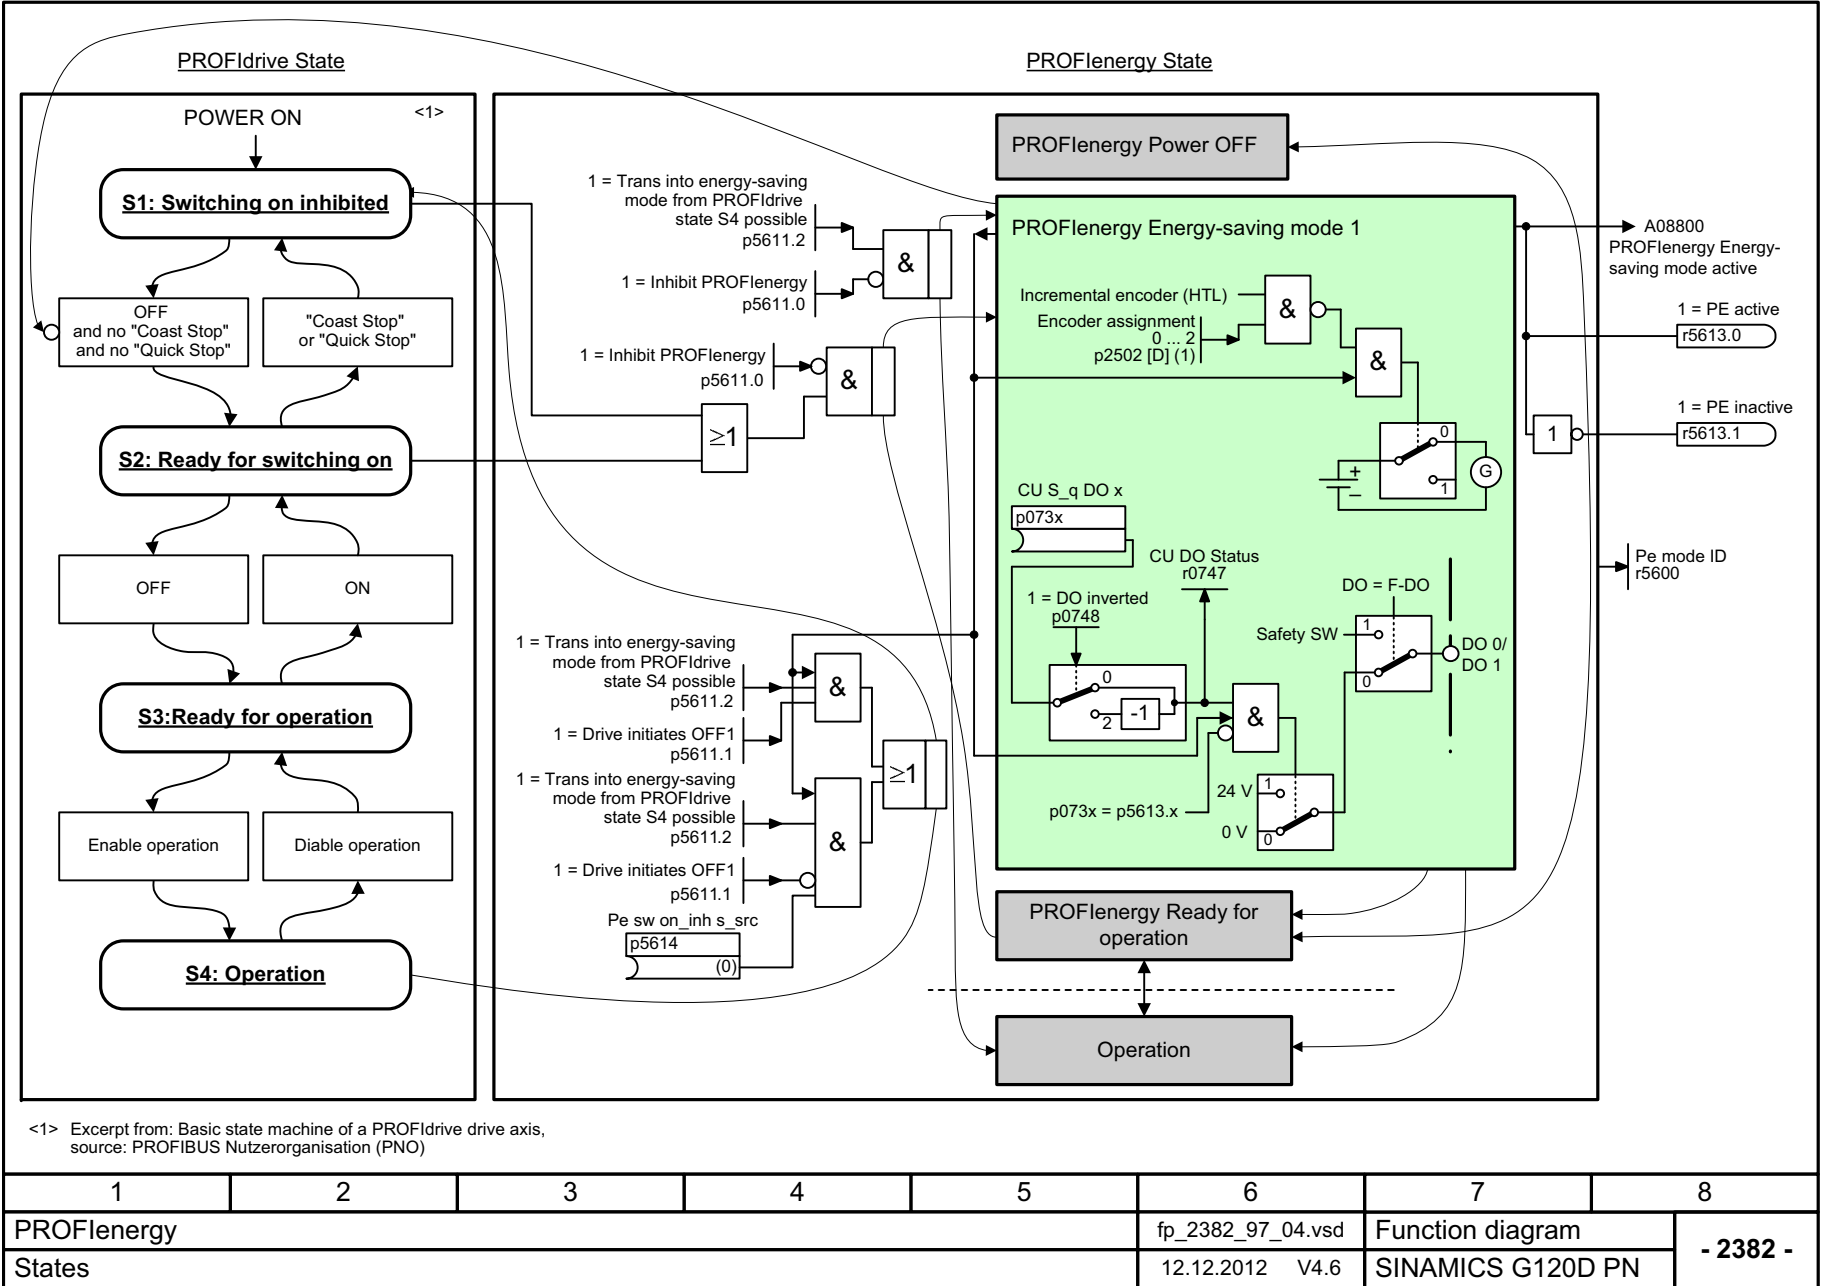


1	2	3	4	5	6	7	8
PROFenergy					fp_2382_97_04.vsd	Function diagram	
States					12.12.2012 V4.6	SINAMICS G120D PN	
							- 2382 -

2.6 PROFIdrive communication (PROFIBUS/PROFINET)


Function diagrams

2401 – Overview	2-597
2410 – PROFIBUS (PB) / PROFINET (PN), addresses and diagnostics	2-598
2420 – Telegrams and process data (PZD)	2-599
2440 – PZD receive signals interconnection	2-600
2441 – STW1 control word interconnection (p2038 = 2)	2-601
2442 – STW1 control word interconnection (p2038 = 0)	2-602
2446 – STW3 control word interconnection	2-603
2450 – PZD send signals interconnection	2-604
2451 – ZSW1 status word interconnection (p2038 = 2)	2-605
2452 – ZSW1 status word interconnection (p2038 = 0)	2-606
2456 – ZSW3 status word interconnection	2-607
2463 – POS_STW1 positioning control word 1 interconnection	2-608
2464 – POS_STW2 positioning control word 2 interconnection	2-609
2468 – Receive telegram, free interconnection via BICO (p0922 = 999)	2-610
2470 – Send telegram, free interconnection via BICO (p0922 = 999)	2-611
2472 – Status words, free interconnection	2-612

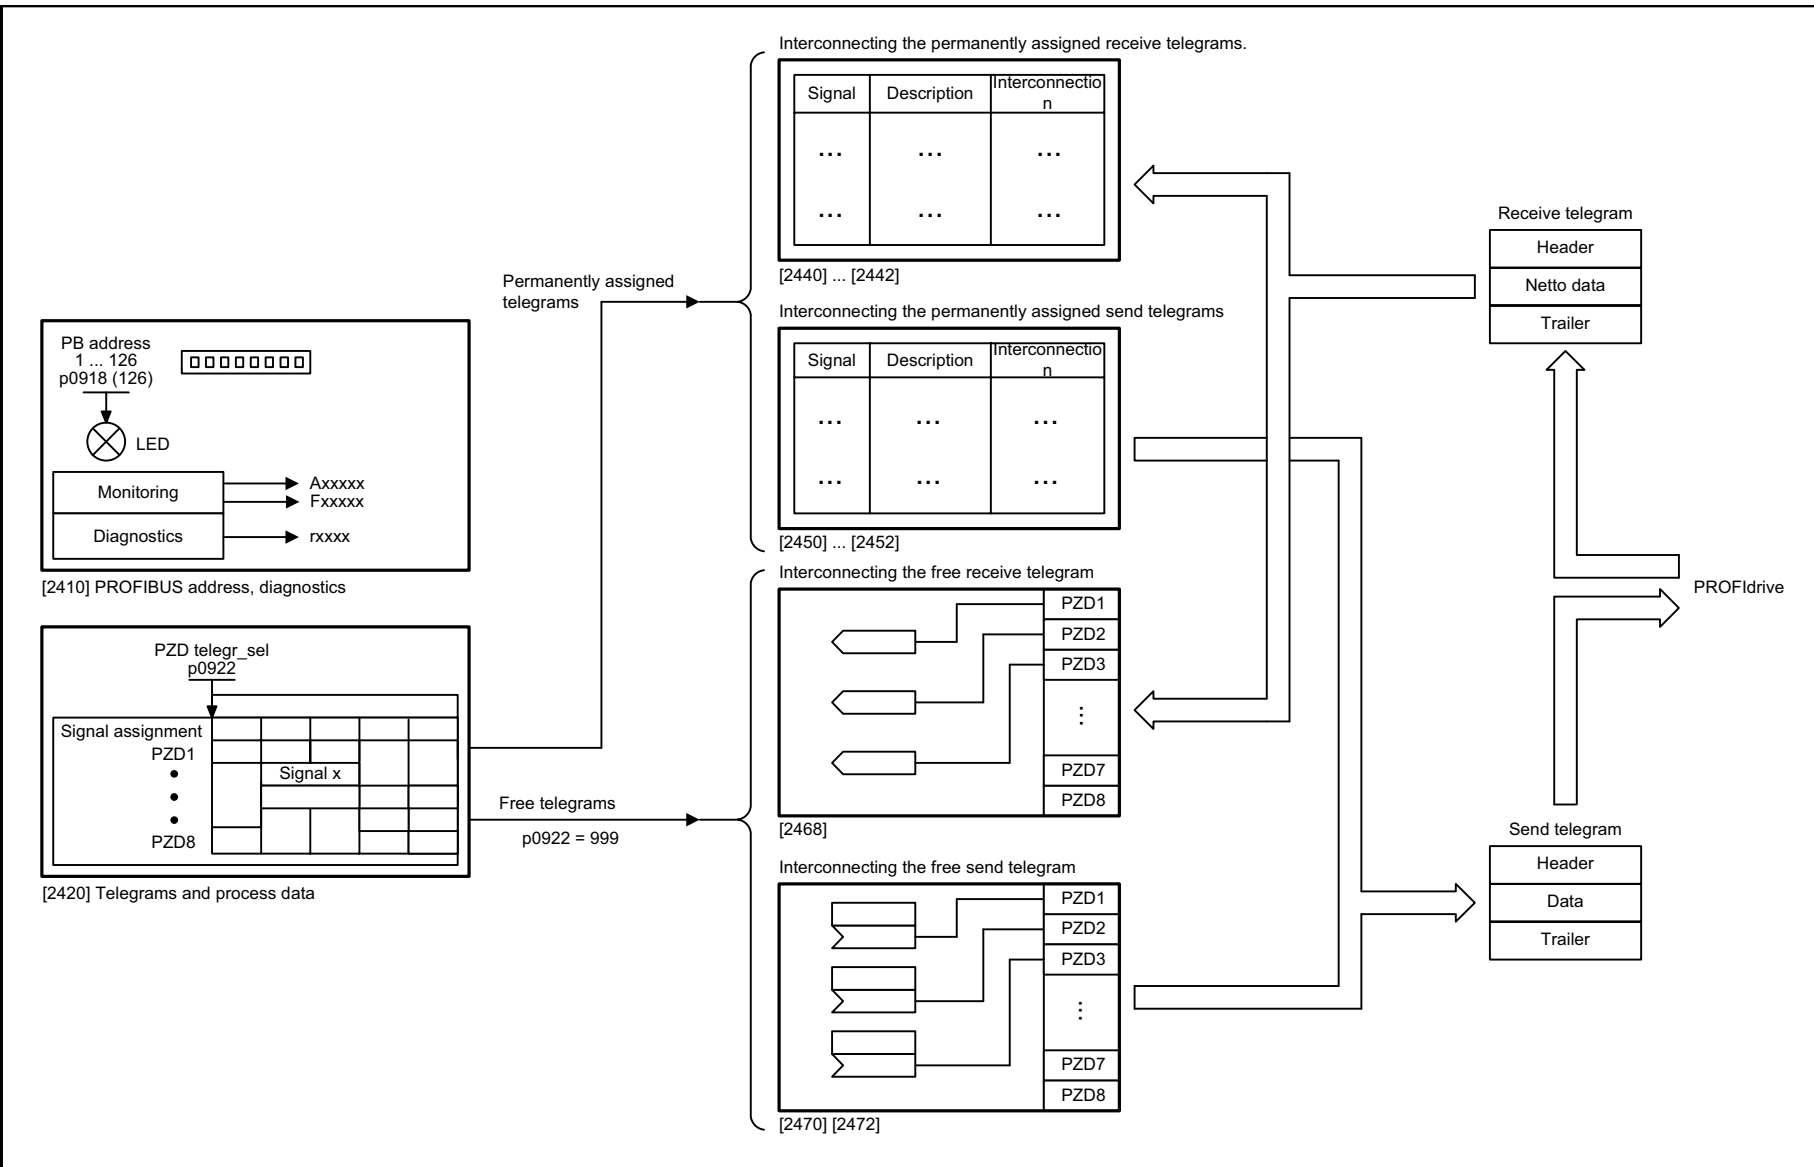

1	2	3	4	5	6	7	8
PROFdrive (PROFIBUS/PROFINET)					fp_2401_97_61.vsd	Function diagram	
Overview					12.12.2012 V4.6	SINAMICS G120D	
							- 2401 -

Fig. 2-15 2401 – Overview

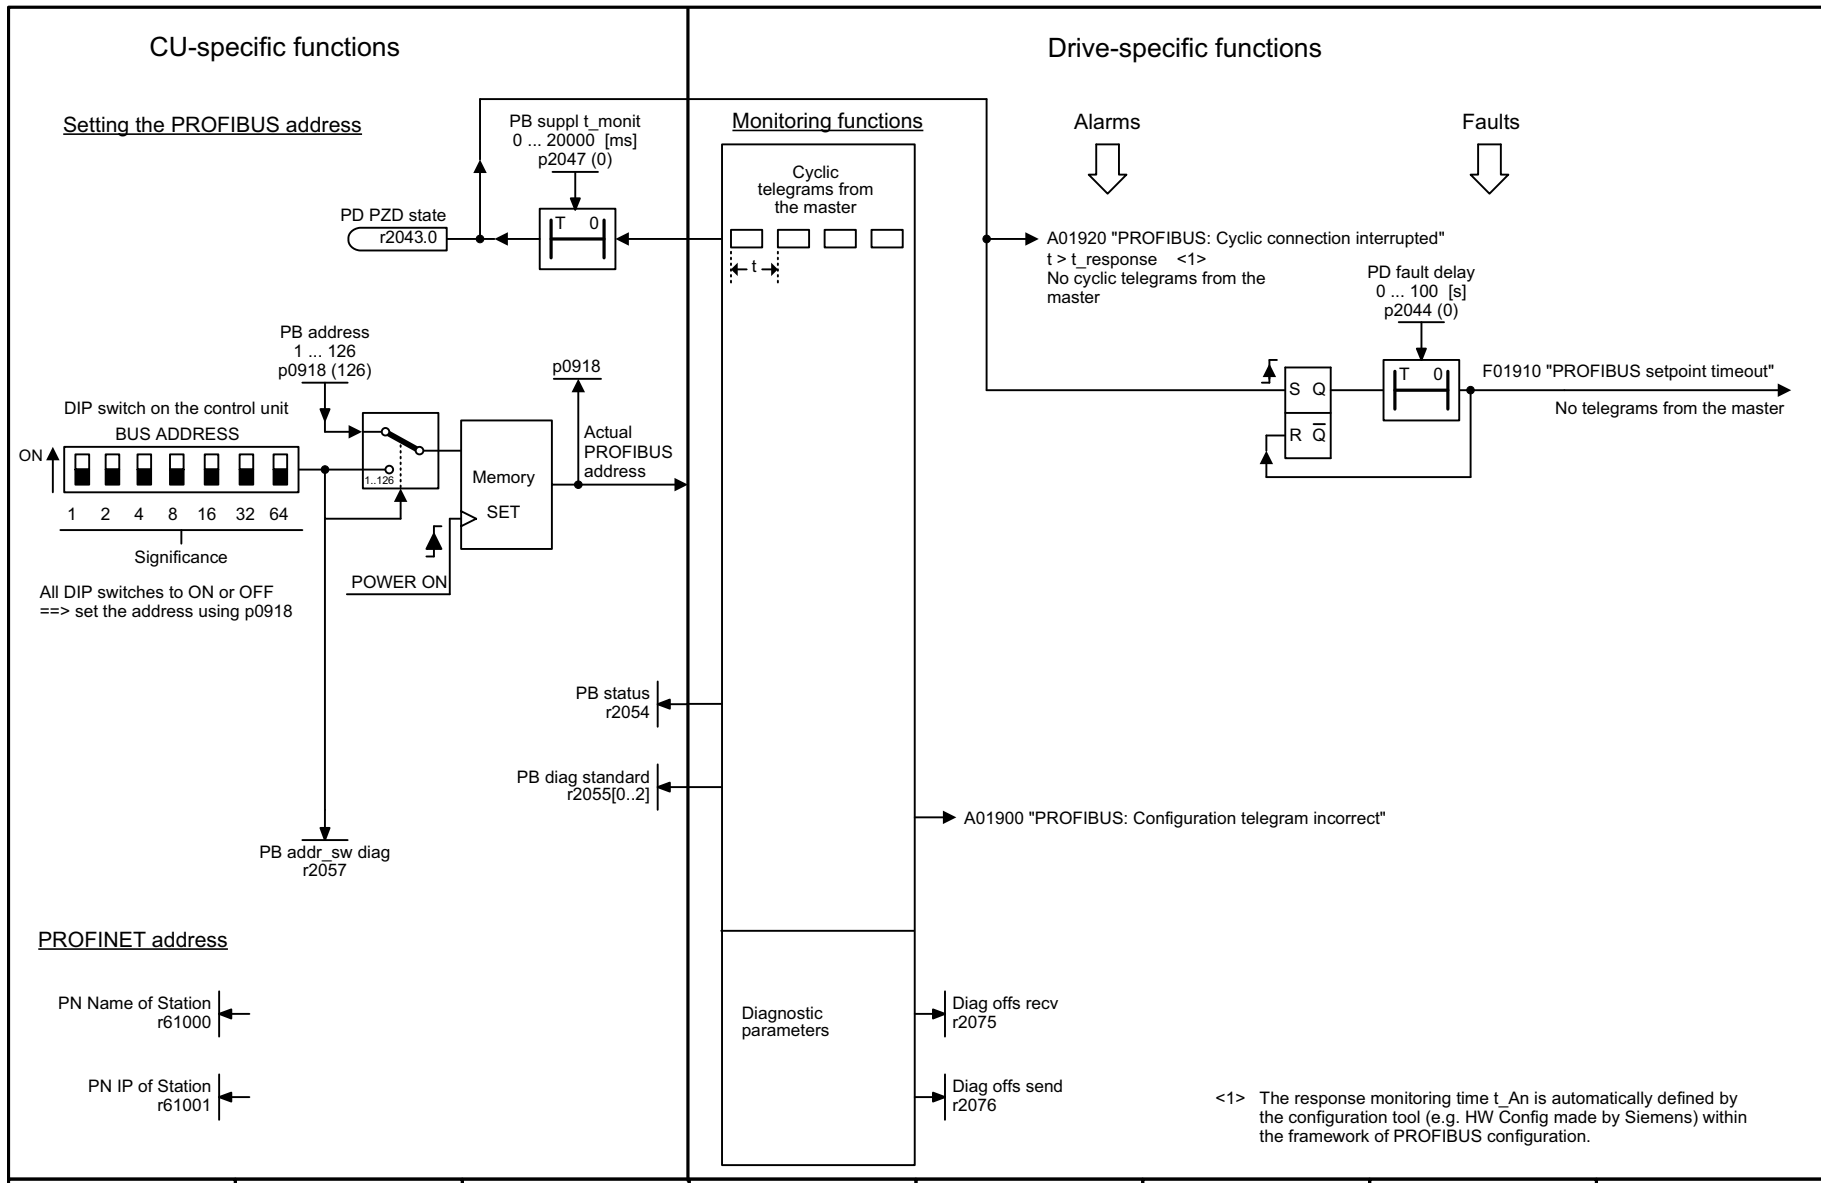

1	2	3	4	5	6	7	8
PROFdrive (PROFIBUS/PROFINET)					fp_2410_97_65.vsd	Function diagram	
PROFIBUS (PB) / PROFINET (PN), addresses and diagnostics					12.12.2012 V4.6	SINAMICS G120D	
							- 2410 -

Fig. 2-16 2410 – PROFIBUS (PB) / PROFINET (PN), addresses and diagnostics

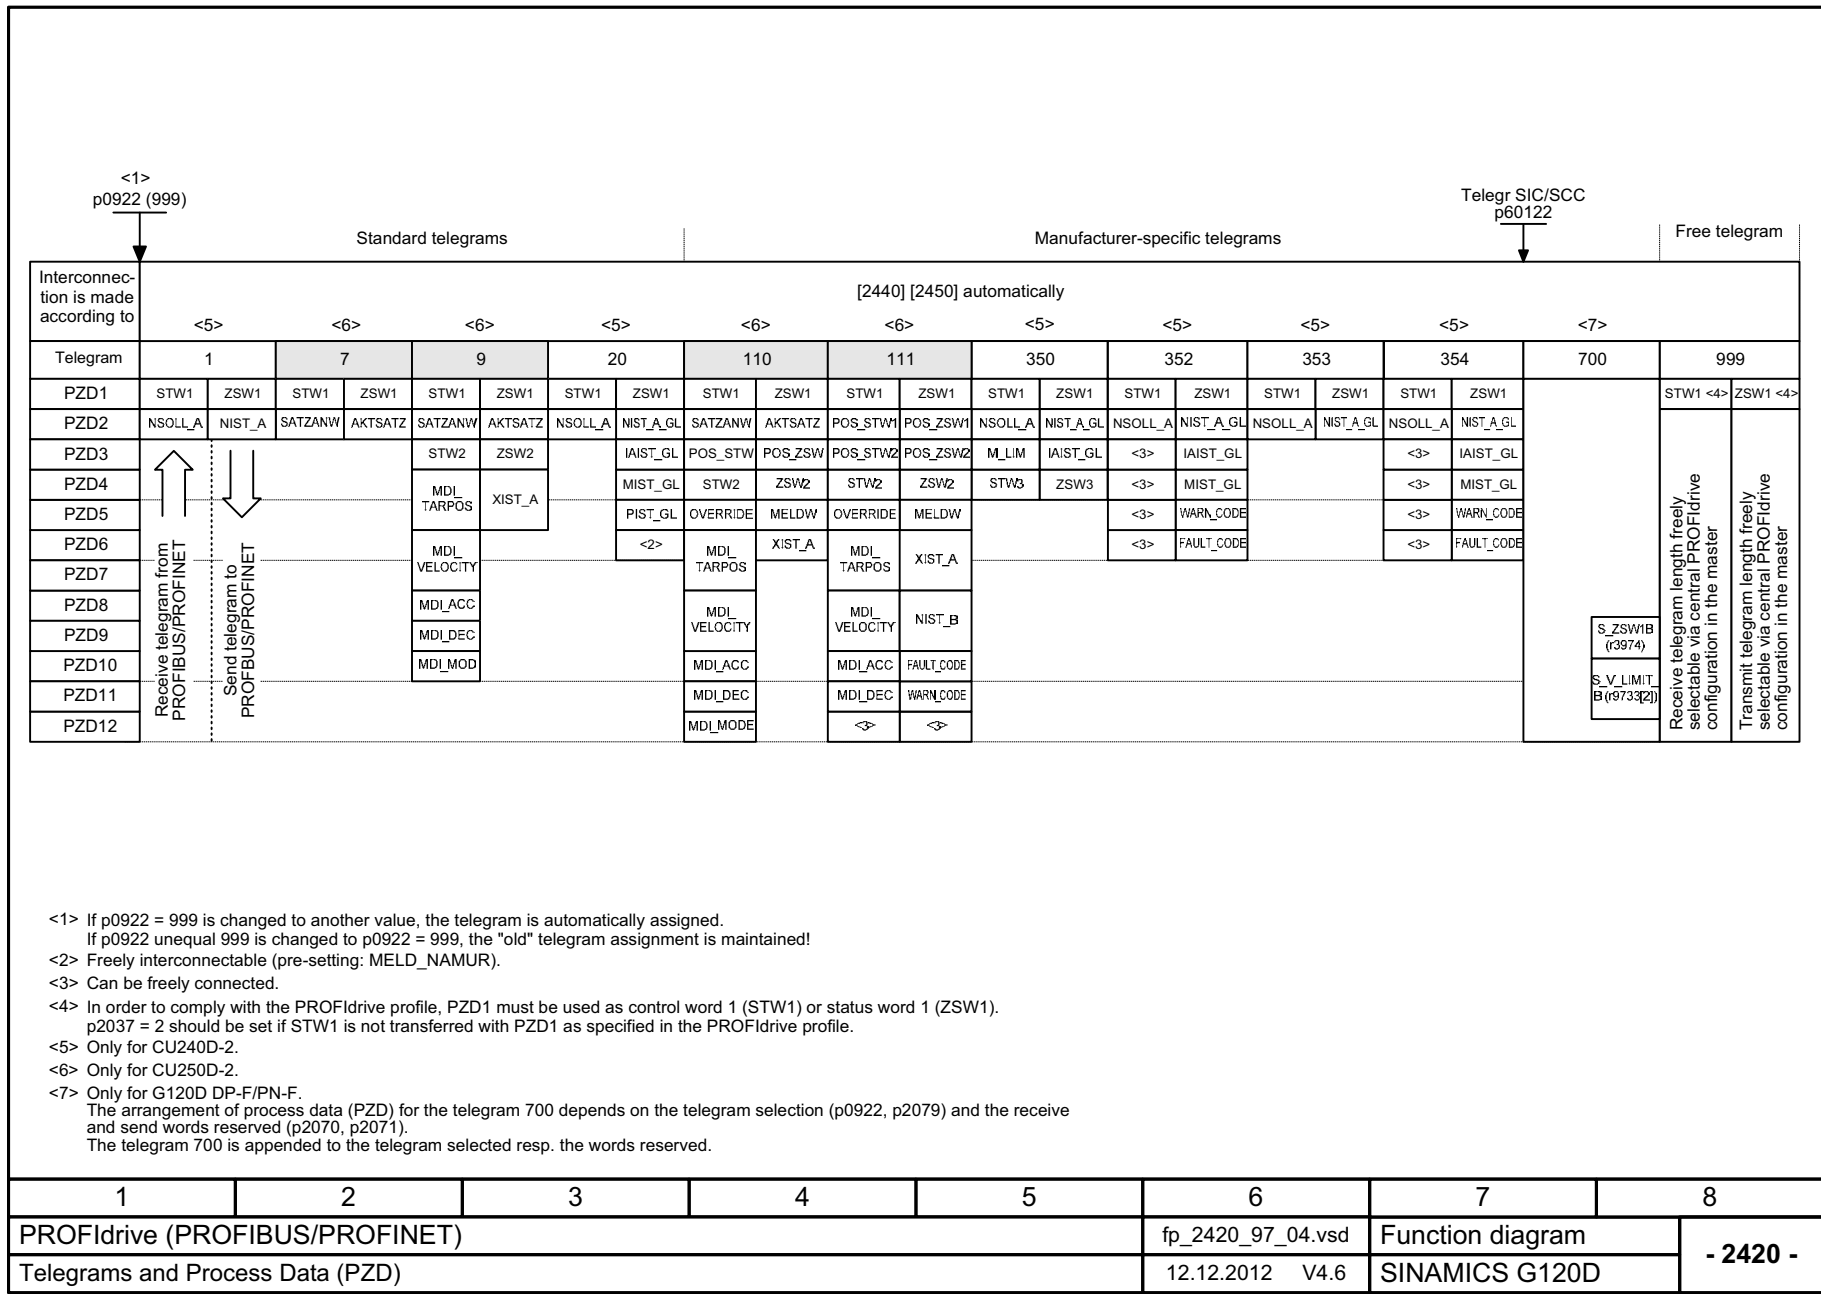


Fig. 2-17 2420 – Telegrams and process data (PZD)

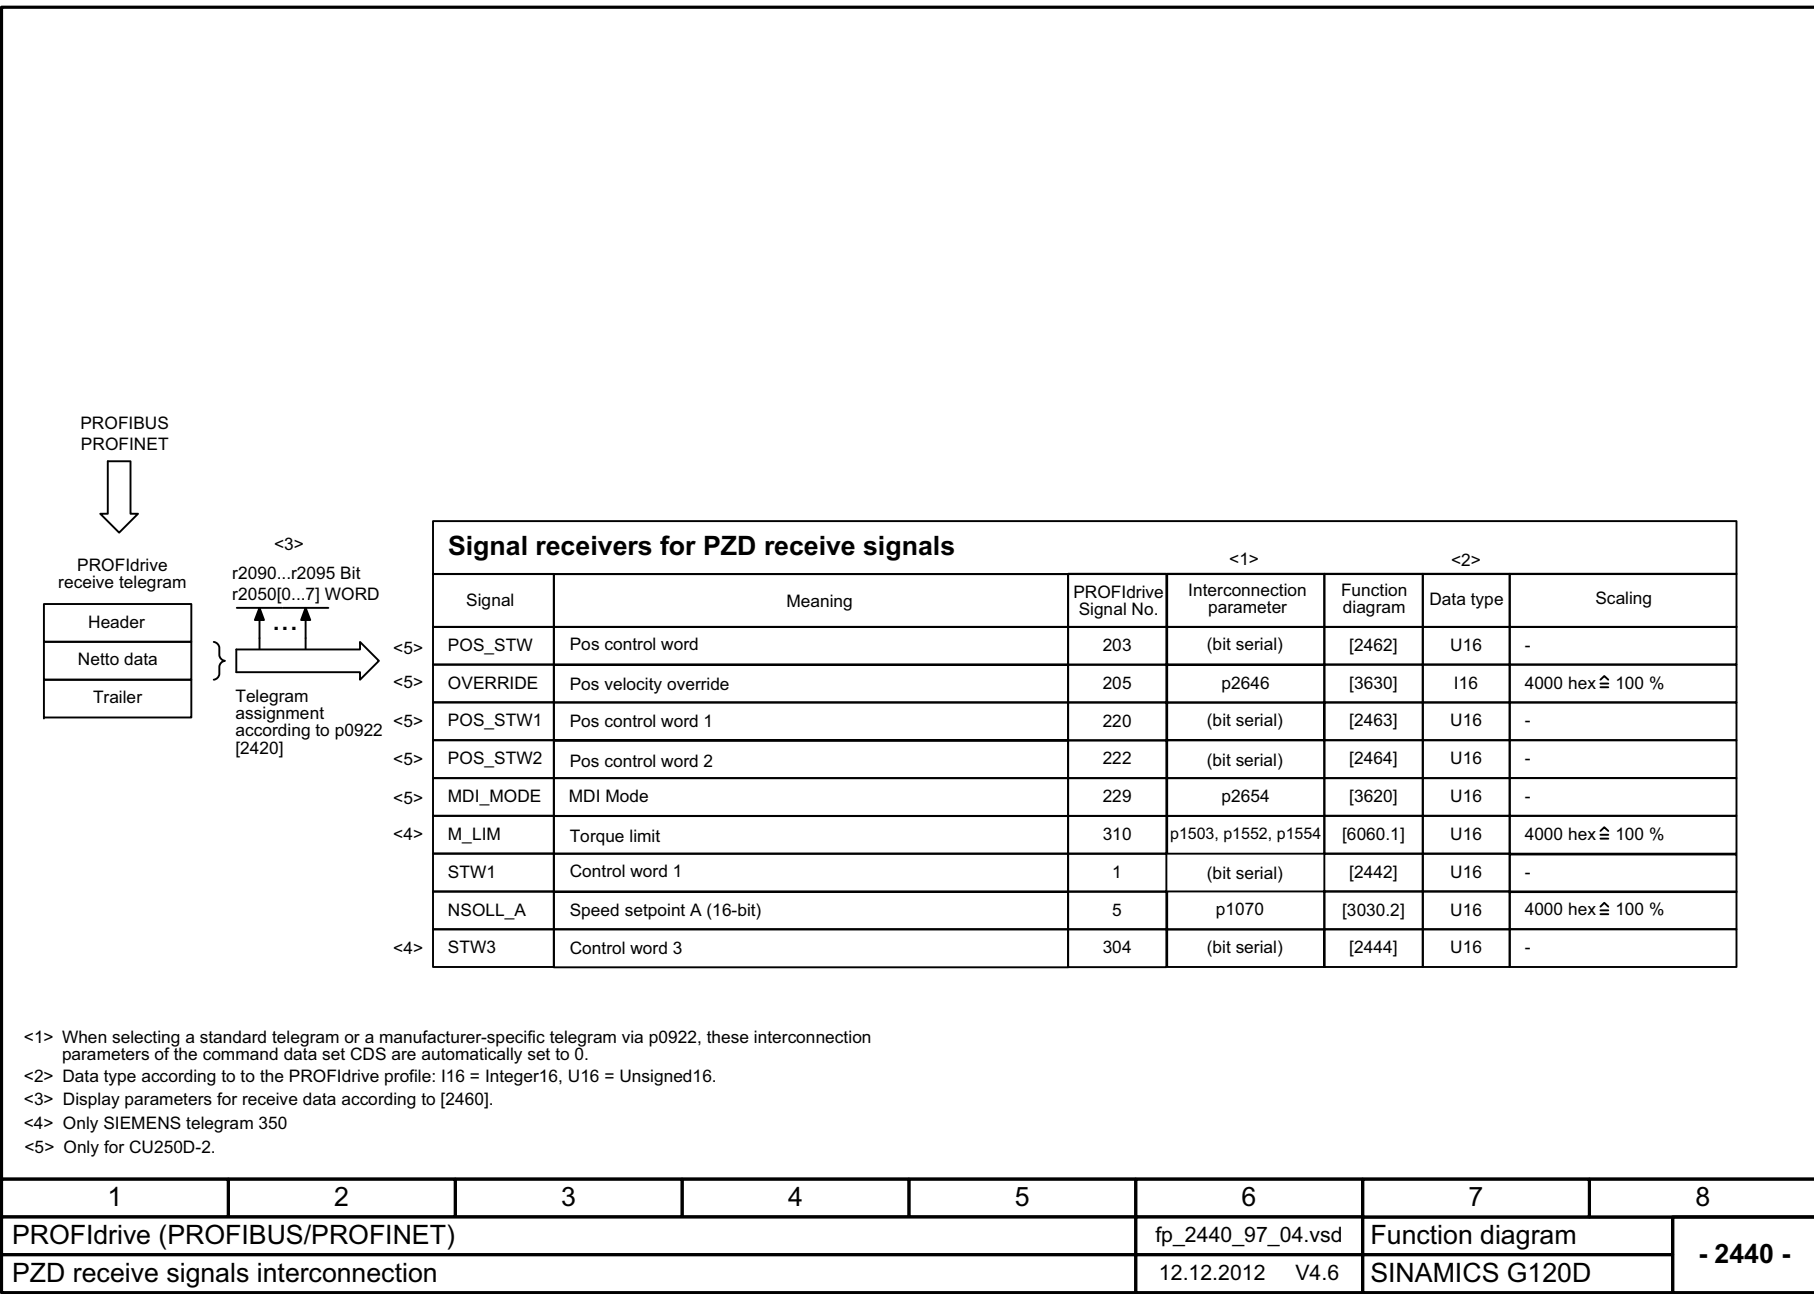


Fig. 2-18 2440 – PZD receive signals interconnection

Signal targets for STW1 in Interface Mode VIK-NAMUR (p2038 = 2) <1>					
Signal	Meaning	Interconnection parameters	[Function diagram] internal control word	[Function diagram] signal target	Inverted
STW1.0	▲ = ON (pulses can be enabled) 0 = OFF1 (braking with ramp-function generator, then pulse suppression & ready for switching on)	p0840[0] = r2090.0	[2501.3]	Sequence control	-
STW1.1	1 = No OFF2 (enable is possible) 0 = OFF2 (immediate pulse suppression and switching on inhibited)	p0844[0] = r2090.1	[2501.3]	Sequence control	-
STW1.2	1 = No OFF3 (enable is possible) 0 = OFF3 (braking with the OFF3 ramp p1135, then pulse suppression and switching on inhibited)	p0848[0] = r2090.2	[2501.3]	Sequence control	-
STW1.3	1 = Enable operation (pulses can be enabled) 0 = Inhibit operation (suppress pulses)	p0852[0] = r2090.3	[2501.3]	Sequence control	-
STW1.4	1 = Operating condition (the ramp-function generator can be enabled) 0 = Inhibit ramp-function generator (set the ramp-function generator output to zero)	p1140[0] = r2090.4	[2501.3]	[3060] [3070] [3080]	-
STW1.5	1 = Enable the ramp-function generator 0 = Stop the ramp-function generator (freeze the ramp-function generator output)	p1141[0] = r2090.5	[2501.3]	[3060] [3070]	-
STW1.6	1 = Enable setpoint 0 = Inhibit setpoint (set the ramp-function generator input to zero)	p1142[0] = r2090.6	[2501.3]	[3060] [3070] [3080]	-
STW1.7	▲ = Acknowledge faults	p2103[0] = r2090.7	[2546.1]	[8060]	-
STW1.8	Reserved	-	-	-	-
STW1.9	Reserved	-	-	-	-
STW1.10	1 = Control via PLC <2>	p0854[0] = r2090.10	[2501.3]	[2501]	-
STW1.11	1 = Dir of rot reversal <4>	p1113[0] = r2090.11	[2505.3]	[3040]	-
STW1.12	Reserved	-	-	-	-
STW1.13	Reserved	-	-	-	-
STW1.14	Reserved	-	-	-	-
STW1.15	1 = CDS selection	p0810[0] = 2090.15 <3>	-	[8565]	-

<1> Used in telegram 20.

<2> Bit 10 in STW1 must be set to ensure that the drive accepts the process data.

<3> Interconnection is not disabled.

<4> The direction reversal can be locked. See p1110 and p1111.

1	2	3	4	5	6	7	8
PROFdrive (PROFIBUS/PROFINET)					fp_2441_97_61.vsd	Function diagram	
STW1 control word interconnection (p2038 = 2)					12.12.2012 V4.6	SINAMICS G120D	
							- 2441 -

Fig. 2-19 2441 – STW1 control word interconnection (p2038 = 2)

Signal targets for STW1 in Interface Mode SINAMICS (p2038 = 0)						<1>
Signal	Meaning	Interconnection parameters	[Function diagram] internal control word	[Function diagram] signal target	Inverted	
STW1.0	= ON (pulses can be enabled) 0 = OFF1 (braking with ramp-function generator, then pulse suppression & ready for switching on)	p0840[0] = r2090.0	[2501.3]	Sequence control	-	
STW1.1	1 = No OFF2 (enable is possible) 0 = OFF2 (immediate pulse suppression and switching on inhibited)	p0844[0] = r2090.1	[2501.3]	Sequence control	-	
STW1.2	1 = No OFF3 (enable is possible) 0 = OFF3 (braking with the OFF3 ramp p1135, then pulse suppression and switching on inhibited)	p0848[0] = r2090.2	[2501.3]	Sequence control	-	
STW1.3	1 = Enable operation (pulses can be enabled) 0 = Inhibit operation (suppress pulses)	p0852[0] = r2090.3	[2501.3]	Sequence control	-	
STW1.4	1 = Operating condition (the ramp-function generator can be enabled) 0 = Inhibit ramp-function generator (set the ramp-function generator output to zero)	p1140[0] = r2090.4	[2501.3]	[3060] [3070] [3080]	-	
STW1.5	1 = Enable the ramp-function generator 0 = Stop the ramp-function generator (freeze the ramp-function generator output)	p1141[0] = r2090.5	[2501.3]	[3060] [3070]	-	
STW1.6	1 = Enable setpoint 0 = Inhibit setpoint (set the ramp-function generator input to zero)	p1142[0] = r2090.6	[2501.3]	[3060] [3070] [3080]	-	
STW1.7	= Acknowledge faults	p2103[0] = r2090.7	[2546.1]	[8060]	-	
STW1.8	Reserved	-	-	-	-	
STW1.9	Reserved	-	-	-	-	
STW1.10	1 = Control via PLC	p0854[0] = r2090.10	[2501.3]	[2501]	-	<2>
STW1.11	1 = Dir of rot reversal	p1113[0] = r2090.11	[2505.3]	[3040]	-	<3>
STW1.12	Reserved	-	-	-	-	
STW1.13	1 = Motorized potentiometer, setpoint, raise	p1035[0] = r2090.13	[2505.3]	[3020]	-	
STW1.14	1 = Motorized potentiometer, setpoint, lower	p1036[0] = r2090.14	[2505.3]	[3020]	-	
STW1.15	Reserved	-	-	-	-	

<1> Used in telegrams 1, 350, 352, 353, 354.
 <2> Bit 10 in STW1 must be set to ensure that the drive accepts the process data.
 <3> The direction reversal can be locked. See p1110 and p1111.

1	2	3	4	5	6	7	8
PROFdrive (PROFIBUS/PROFINET)					fp_2442_97_61.vsd	Function diagram	
STW1 control word interconnection (p2038 = 0)					12.12.2012 V4.6	SINAMICS G120D	
							- 2442 -

Fig. 2-20 2442 – STW1 control word interconnection (p2038 = 0)


Signal targets for STW3 in Interface Mode SINAMICS						<1>
Signal	Meaning	Interconnection parameters	[Function diagram] internal control word	[Function diagram] signal target	Inverted	
STW3.0	1 = Fixed setp bit 0	p1020[0] = r2093.0	[3010.2]	[3010.2]	-	
STW3.1	1 = Fixed setp bit 1	p1021[0] = r2093.1	[2513.2]	[3010.2]	-	
STW3.2	1 = Fixed setp bit 2	p1022[0] = r2093.2	[2513.2]	[3010.2]	-	
STW3.3	1 = Fixed setp bit 3	p1023[0] = r2093.3	[2513.2]	[3010.2]	-	
STW3.4	1 = DDS select. bit 0	p0820 = r2093.4	[2513.2]	[8565.2]	-	
STW3.5	1 = DDS select. bit 1	p0821 = r2093.5	[2513.2]	[8565.2]	-	
STW3.6	Reserved	-	-	-	-	
STW3.7	Reserved	-	-	-	-	
STW3.8	1 = Technology controller enable	p2200[0] = r2093.8	[2513.2]	[7958.4]	-	
STW3.9	1 = DC brake enable	p1230[0] = r2093.9	[2513.2]	[7017.1]	-	
STW3.10	Reserved	-	-	-	-	
STW3.11	1 = Droop enable	p1492[0] = r2093.11	[2513.2]	[6030.1]	-	
STW3.12	1 = Torque control active	p1501[0] = r2093.12	[2513.2]	[6060.1]	-	
STW3.13	0 = External fault 1 (F07860)	p2106[0] = r2093.13	[2513.2]	[8060.1]	-	
STW3.14	Reserved	-	-	-	-	
STW3.15	1 = CDS bit 1	p0811[0] = r2093.15	[2513.2]	[8560.3]	-	

<1> Used in telegrams 350.

1	2	3	4	5	6	7	8
PROFdrive (PROFIBUS/PROFINET)					fp_2446_97_51.vsd	Function diagram	
STW3 control word interconnection					12.12.2012 V4.6	G120D CU250D-2	
							- 2446 -

Fig. 2-21 2446 – STW3 control word interconnection

Signal sources for PZD send signals <1>						
Signal	Description	PROFdrive Signal No.	Interconnection parameter	Function diagram	Data type	Scaling
ZSW1	Status word 1	2	r2089[0]	[2452]	U16	-
NIST_A	Actual speed A (16 bit)	6	r0063[0]	-	I16	4000 hex $\hat{=}$ p2000
IAIST_GLATT	Absolute actual current, smoothed	51	r0068[1]	[6799]	I16	4000 hex $\hat{=}$ p2002
MIST_GLATT	Actual torque smoothed	53	r0080[1]	[6799]	I16	4000 hex $\hat{=}$ p2003
PIST_GLATT	Power factor, smoothed	54	r0082[1]	[6799]	I16	4000 hex $\hat{=}$ p2004
NIST_A_GLATT	Actual speed, smoothed	57	r0063[1]	-	I16	4000 hex $\hat{=}$ p2000
MELD_NAMUR	VIK-NAMUR message bit bar	58	r3113	-	U16	
FAULT_CODE	Fault code	301	r2131	[8060]	U16	
WARN_CODE	Alarm code	303	r2132	[8065]	U16	
ZSW3	Status word 3	305	r0053	[2454]	U16	

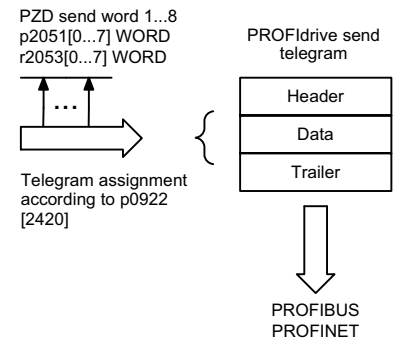

<1> Data type according to the PROFdrive profile: I16 = Integer16, U16 = Unsigned16.

1	2	3	4	5	6	7	8
PROFdrive (PROFIBUS/PROFINET)					fp_2450_97_61.vsd	Function diagram	
PZD send signals interconnection					12.12.2012 V4.6	SINAMICS G120D	
							- 2450 -

Fig. 2-22 2450 – PZD send signals interconnection

Signal sources for ZSW1 in Interface Mode VIK-NAMUR (p2038 = 2) <1>					
Signal	Meaning	Interconnection parameters	[Function diagram] internal control word	[Function diagram] signal target	Inverted <2>
ZSW1.0	1 = Ready for switching on	p2080[0] = r0899.0	[2503.7]	Sequence control	-
ZSW1.1	1 = Ready for operation (DC link loaded, pulses inhibited)	p2080[1] = r0899.1	[2503.7]	Sequence control	-
ZSW1.2	1 = Operation enabled (drive follows n_set)	p2080[2] = r0899.2	[2503.7]	Sequence control	-
ZSW1.3	1 = Fault present	p2080[3] = r2139.3	[2548.7]	[8060]	-
ZSW1.4	1 = No coast down active (OFF2 inactive)	p2080[4] = r0899.4	[2503.7]	Sequence control	-
ZSW1.5	1 = No fast stop active (OFF3 inactive)	p2080[5] = r0899.5	[2503.7]	Sequence control	-
ZSW1.6	1 = Switching on inhibited active	p2080[6] = r0899.6	[2503.7]	Sequence control	-
ZSW1.7	1 = Alarm present	p2080[7] = r2139.7	[2548.7]	[8065]	-
ZSW1.8	1 = Speed setpoint - actual value deviation within tolerance t_off	p2080[8] = r2197.7	[2534.7]	[8011]	-
ZSW1.9	1 = Control requested <3>	p2080[9] = r0899.9	[2503.7]	[2503]	-
ZSW1.10	1 = f or n comparison value reached/exceeded	p2080[10] = r2199.1	[2536.7]	[8010]	-
ZSW1.11	1 = I, M, or P limit not reached	p2080[11] = r0056.13	[2522.7]	[6060]	✓
ZSW1.12	Reserved	-	-	-	-
ZSW1.13	1 = No motor overtemperature alarm	p2080[13] = r2135.14	[2548.7]	[8016]	✓
ZSW1.14	1 = Motor rotates forwards (n_act ≥ 0) 0 = Motor rotates backwards (n_act < 0)	p2080[14] = r2197.3	[2534.7]	[8011]	-
ZSW1.15	1 = Display CDS	p2080[15] = r0836.0 <4>	-	-	-

<1> Used in telegram 20.

<2> The ZSW1 is generated using the binector-connector converter (BI: p2080[0...15], inversion: p2088[0]...p2088[0].15)

<3> The drive object is ready to accept data.

<4> Interconnection is not disabled.

1	2	3	4	5	6	7	8
PROFdrive (PROFIBUS/PROFINET)					fp_2451_97_61.vsd	Function diagram	
ZSW1 status word interconnection (p2038 = 2)					12.12.2012 V4.6	SINAMICS G120D	
							- 2451 -

Fig. 2-23 2451 – ZSW1 status word interconnection (p2038 = 2)

Signal sources for ZSW1 im Interface Mode SINAMICS (p2038 = 0)						<1>
Signal	Meaning	Interconnection parameters	[Function diagram] internal control word	[Function diagram] signal target	Inverted <2>	
ZSW1.0	1 = Ready for switching on	p2080[0] = r0899.0	[2503.7]	Sequence control	-	
ZSW1.1	1 = Ready for operation (DC link loaded, pulses inhibited)	p2080[1] = r0899.1	[2503.7]	Sequence control	-	
ZSW1.2	1 = Operation enabled (drive follows n_set)	p2080[2] = r0899.2	[2503.7]	Sequence control	-	
ZSW1.3	1 = Fault present	p2080[3] = r2139.3	[2548.7]	[8060]	-	
ZSW1.4	1 = No coast down active (OFF2 inactive)	p2080[4] = r0899.4	[2503.7]	Sequence control	-	
ZSW1.5	1 = No fast stop active (OFF3 inactive)	p2080[5] = r0899.5	[2503.7]	Sequence control	-	
ZSW1.6	1 = Switching on inhibited active	p2080[6] = r0899.6	[2503.7]	Sequence control	-	
ZSW1.7	1 = Alarm present	p2080[7] = r2139.7	[2548.7]	[8065]	-	
ZSW1.8	1 = Speed setpoint - actual value deviation within tolerance t_off	p2080[8] = r2197.7	[2534.7]	[8011]	-	
ZSW1.9	1 = Control requested <3>	p2080[9] = r0899.9	[2503.7]	[2503]	-	
ZSW1.10	1 = f or n comparison value reached/exceeded	p2080[10] = r2199.1	[2536.7]	[8010]	-	
ZSW1.11	1 = I, M, or P limit not reached	p2080[11] = r1407.7	[2522.7]	[6060]	✓	
ZSW1.12	1 = Open holding brake	p2080[12] = r0899.12	[2503.7]	[2701]	-	
ZSW1.13	1 = No motor overtemperature alarm	p2080[13] = r2135.14	[2548.7]	[8016]	✓	
ZSW1.14	1 = Motor rotates forwards (n_act ≥ 0) 0 = Motor rotates backwards (n_act < 0)	p2080[14] = r2197.3	[2534.7]	[8011]	-	
ZSW1.15	1 = No alarm, thermal overload, power unit	p2080[15] = r2135.15	[2548.7]	[8014]	✓	

<1> Used in telegrams 1, 350, 352, 353, 354.

<2> The ZSW1 is generated using the binector-connector converter (BI: p2080[0...15], inversion: p2088[0]...p2088[0].15)

<3> The drive is ready to accept data.

1	2	3	4	5	6	7	8
PROFIdrive (PROFIBUS/PROFINET)					fp_2452_97_61.vsd	Function diagram	
ZSW1 status word interconnection (p2038 = 0)					12.12.2012 V4.6	SINAMICS G120D	
							- 2452 -

Fig. 2-24 2452 – ZSW1 status word interconnection (p2038 = 0)

Signal sources for ZSW3 im Interface Mode SINAMICS						<1>
Signal	Meaning	Interconnection parameters	[Function diagram] internal status word	[Function diagram] signal source	Inverted	
ZSW3.0	1 = DC brake active 0 = DC brake not active	p2051[3] = r0053	[2511.7]	[7017.5]	-	
ZSW3.1	1 = n_act > p1226 (n_standstill)		[2511.7]	[2534.7]	-	
ZSW3.2	1 = n_act > p1080 (n_min)		[2511.7]	[2534.7]	-	
ZSW3.3	1 = l_act >= p2170		[2511.7]	[2534.7]	-	
ZSW3.4	1 = n_act > p2155		[2511.7]	[2534.7]	-	
ZSW3.5	1 = n_act <= p2155		[2511.7]	[2534.7]	-	
ZSW3.6	1 = n_act >= r1119 (n_set)		[2511.7]	[2534.7]	-	
ZSW3.7	1 = Vdc <= p2172		[2511.7]	[2534.7]	-	
ZSW3.8	1 = Vdc > p2172		[2511.7]	[2534.7]	-	
ZSW3.9	1 = Ramping finished		[2511.7]	[3080.7]	-	
ZSW3.10	1 = Techn. contr. out at lower limit		[2511.7]	[7958.7]	-	
ZSW3.11	1 = Techn. contr. out at upper limit		[2511.7]	[7958.7]	-	
ZSW3.12	Reserved		-	-	-	
ZSW3.13	Reserved		-	-	-	
ZSW3.14	Reserved		-	-	-	
ZSW3.15	Reserved	-	-	-		

<1> Used in telegrams 350.

1	2	3	4	5	6	7	8
PROFdrive (PROFIBUS/PROFINET)					fp_2456_97_61.vsd	Function diagram	
ZSW3 status word interconnection					12.12.2012 V4.6	G120D CU250D-2	
							- 2456 -

Fig. 2-25 2456 – ZSW3 status word interconnection

Signal targets for POS_STW1 (positioning mode) <1>					
Signal	Meaning	Interconnection parameters	[Function diagram] internal control word	[Function diagram] signal target	Inverted
POS_STW1.0	Traversing block selection, bit 0	p2625 = r2091.0	-	-	-
POS_STW1.1	Traversing block selection, bit 1	p2626 = r2091.1	-	-	-
POS_STW1.2	Traversing block selection, bit 2	p2627 = r2091.2	-	-	-
POS_STW1.3	Traversing block selection, bit 3	p2626 = r2091.3	-	-	-
POS_STW1.4	Reserved	-	-	-	-
POS_STW1.5	Reserved	-	-	-	-
POS_STW1.6	Reserved	-	-	-	-
POS_STW1.7	Reserved	-	-	-	-
POS_STW1.8	1 = Absolute positioning is selected. 0 = Relative positioning is selected.	p2648 = r2091.8	-	-	-
POS_STW1.9	0/0 = Absolute positioning through the shortest distance 1/0 = Absolute positioning in the positive direction 0/1 = Absolute positioning in the negative direction	p2651 = r2091.9	-	-	-
POS_STW1.10	1/1 = Absolute positioning through the shortest distance	p2652 = r2091.10	-	-	-
POS_STW1.11	Reserved	-	-	-	-
POS_STW1.12	1 = Continuous acceptance of the values 0 = The values are accepted for p2650 = 0/1 signal	p2649 = r2091.12	-	-	-
POS_STW1.13	Reserved	-	-	-	-
POS_STW1.14	1 = signal setting-up selected 0 = signal positioning selected	p2653 = r2091.14	-	-	-
POS_STW1.15	1 = MDI selection 1 = MDI deselection	p2647 = r2091.15	-	-	-

<1> Used in telegram 111.

1	2	3	4	5	6	7	8
PROFdrive (PROFIBUS/PROFINET)					fp_2463_97_04.vsd	Function diagram	
POS_STW1 Positioning control word 1 interconnection					12.12.2012 V4.6	G120D CU250D-2	
							- 2463 -

Fig. 2-26 2463 – POS_STW1 positioning control word 1 interconnection

Signal targets for POS_STW2 (positioning mode) <1>					
Signal	Meaning	Interconnection parameters	[Function diagram] internal control word	[Function diagram] signal target	Inverted
POS_STW2.0	1 = Activate Tracking mode	p2655[0] = r2092.0	-	[3635]	-
POS_STW2.1	1 = Set home position	p2596 = r2092.1	-	[3612]	-
POS_STW2.2	1 = Reference cam active	p2612 = r2092.2	-	[3612]	-
POS_STW2.3	Reserved	-	-	-	-
POS_STW2.4	Reserved	-	-	-	-
POS_STW2.5	1 = Jogging, incremental active 0 = Jogging, velocity active	p2591 = r2092.5	-	[3610]	-
POS_STW2.6	Reserved	-	-	-	-
POS_STW2.7	Reserved	-	-	-	-
POS_STW2.8	1 = Referencing type selection for flying referencing 0 = Referencing type selection for search for reference	p2597 = r2092.8	-	-	-
POS_STW2.9	1 = Start the search for reference in the negative direction 0 = Start the search for reference in the positive direction.	p2604 = r2092.9	-	-	-
POS_STW2.10	1 = Measuring probe 2 is activated 0 = Measuring probe 1 is activated	p2510[0] = r2092.10	-	-	-
POS_STW2.11	1 = Falling edge of the measuring probe 0 = Rising edge of the measuring probe	p2511[0] = r2092.11	-	-	-
POS_STW2.12	Reserved	-	-	-	-
POS_STW2.13	Reserved	-	-	-	-
POS_STW2.14	1 = Software limit switch activation	p2582 = r2092.14	-	-	-
POS_STW2.15	1 = STOP cam active	p2568 = r2092.15	-	-	-

<1> Used in telegram 111.

1	2	3	4	5	6	7	8
PROFdrive (PROFIBUS/PROFINET)					fp_2464_97_04.vsd	Function diagram	
POS_STW2 Positioning control word 2 interconnection					12.12.2012 V4.6	G120D CU250D-2	
							- 2464 -

Fig. 2-27 2464 – POS_STW2 positioning control word 2 interconnection


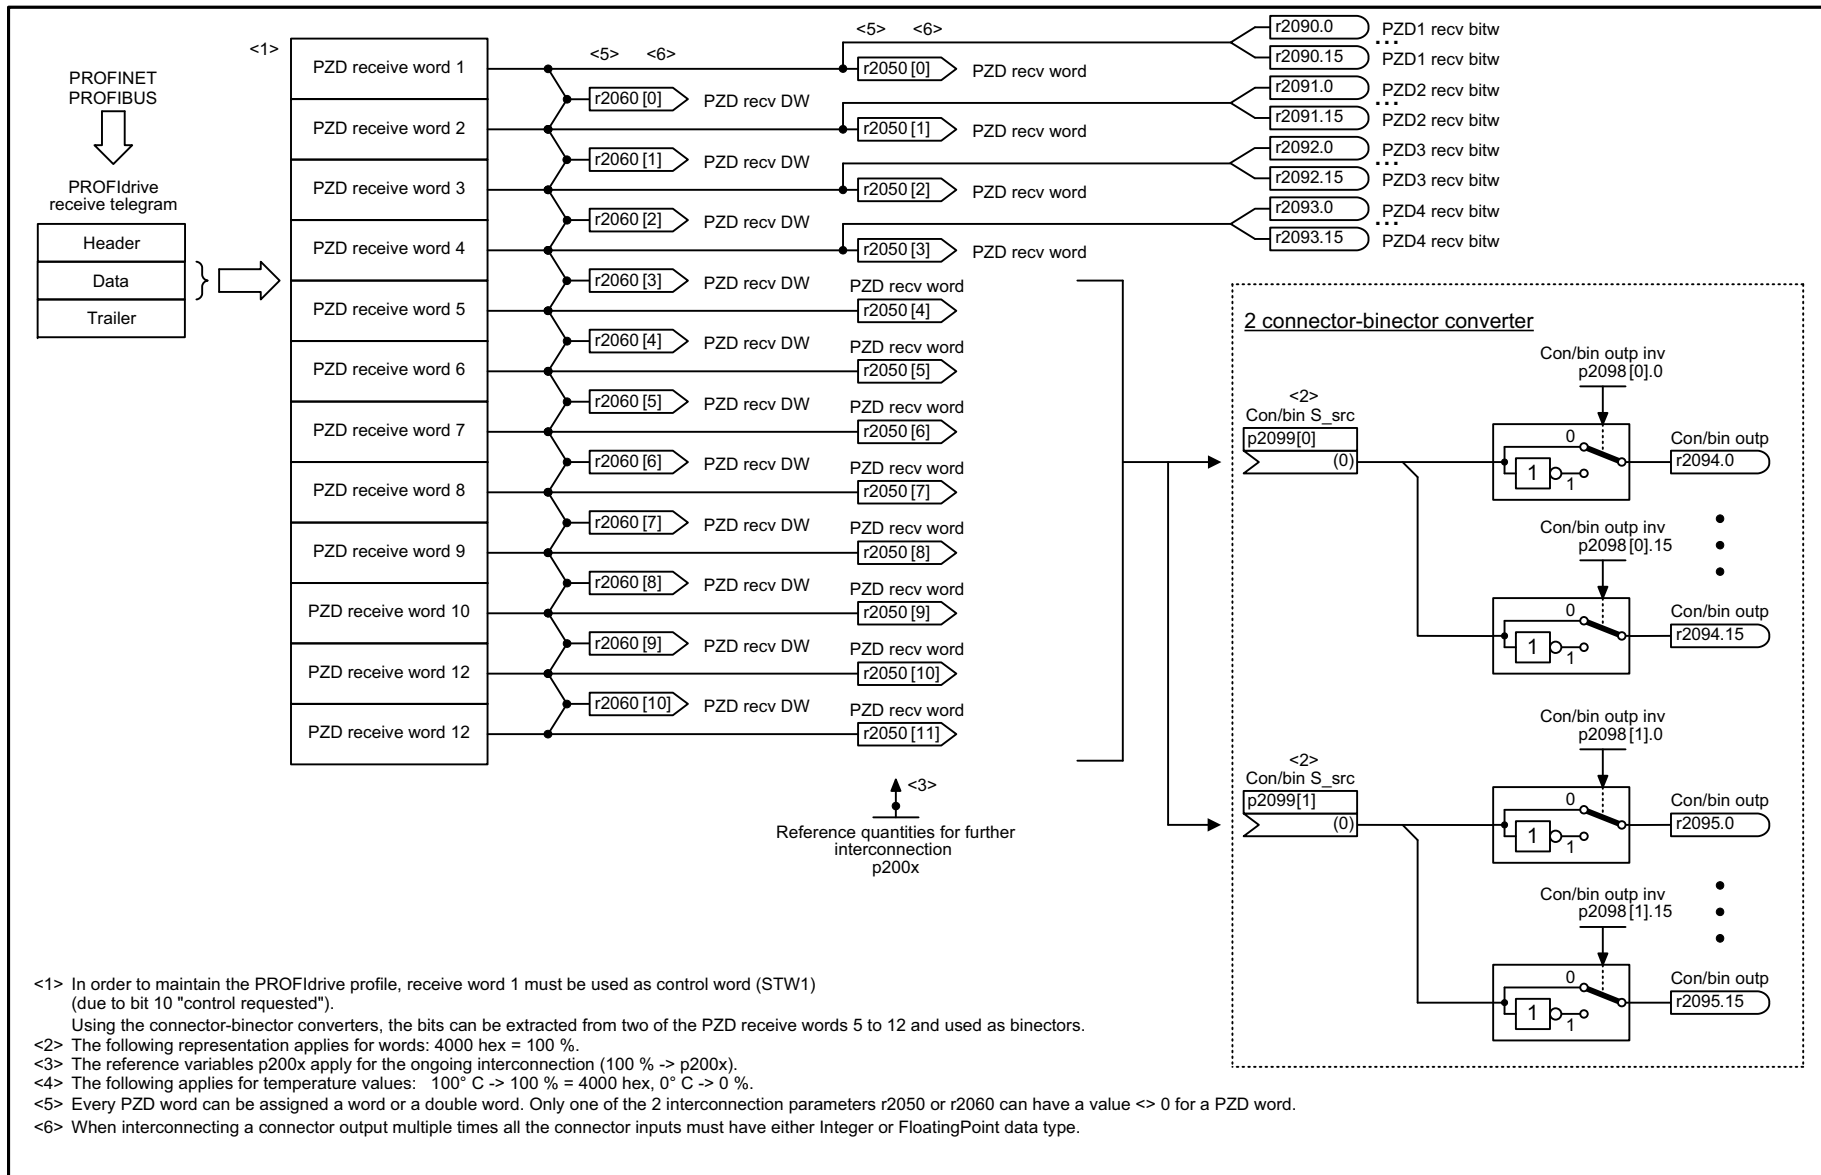


Fig. 2-28 2468 – Receive telegram, free interconnection via BICO (p0922 = 999)


1	2	3	4	5	6	7	8
PROFdrive (PROFIBUS/PROFINET)					fp_2468_97_61.vsd	Function diagram	
Receive telegram, free interconnection via BICO (p0922 = 999)					12.12.2012 V4.6	SINAMICS G120D	

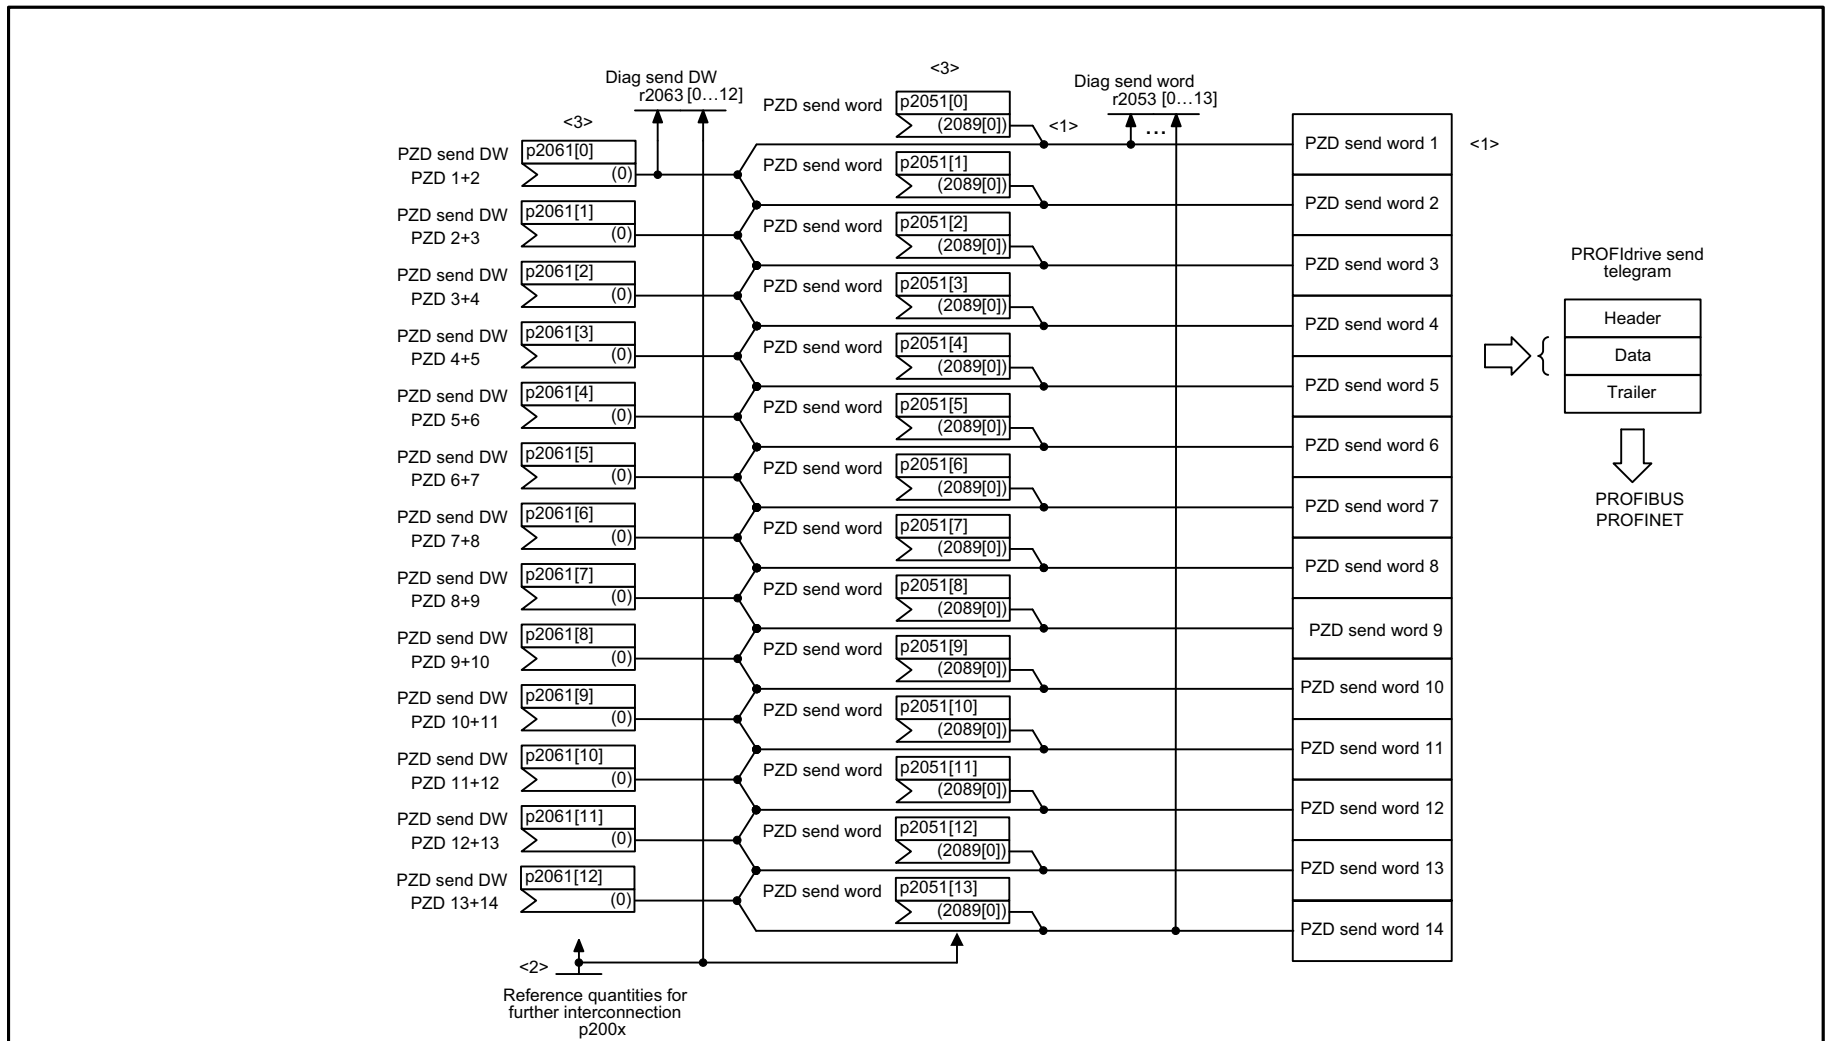

- <1> To comply with the PROFdrive profile, send word 1 must be used as status word 1 (ZSW1).
- <2> Physical word values are inserted in the telegram as referenced variables. p200x apply as reference variables (telegram contents = 4000 hex, if the input variable has the value p200x).
The following applies for temperature values: 100° C -> 100 % = 4000 hex; 0° C -> 0%.
- <3> A PZD send word can either be supplied via connector input p2051[x] (WORD) or via p2061[x] (DWORD).
The two corresponding connector inputs cannot be interconnected.

1	2	3	4	5	6	7	8
PROFdrive (PROFIBUS/PROFINET)					fp_2470_97_61.vsd	Function diagram	
Send telegram, free interconnection via BICO (p0922 = 999)					12.12.2012 V4.6	SINAMICS G120D	
							- 2470 -

Fig. 2-29 2470 – Send telegram, free interconnection via BICO (p0922 = 999)

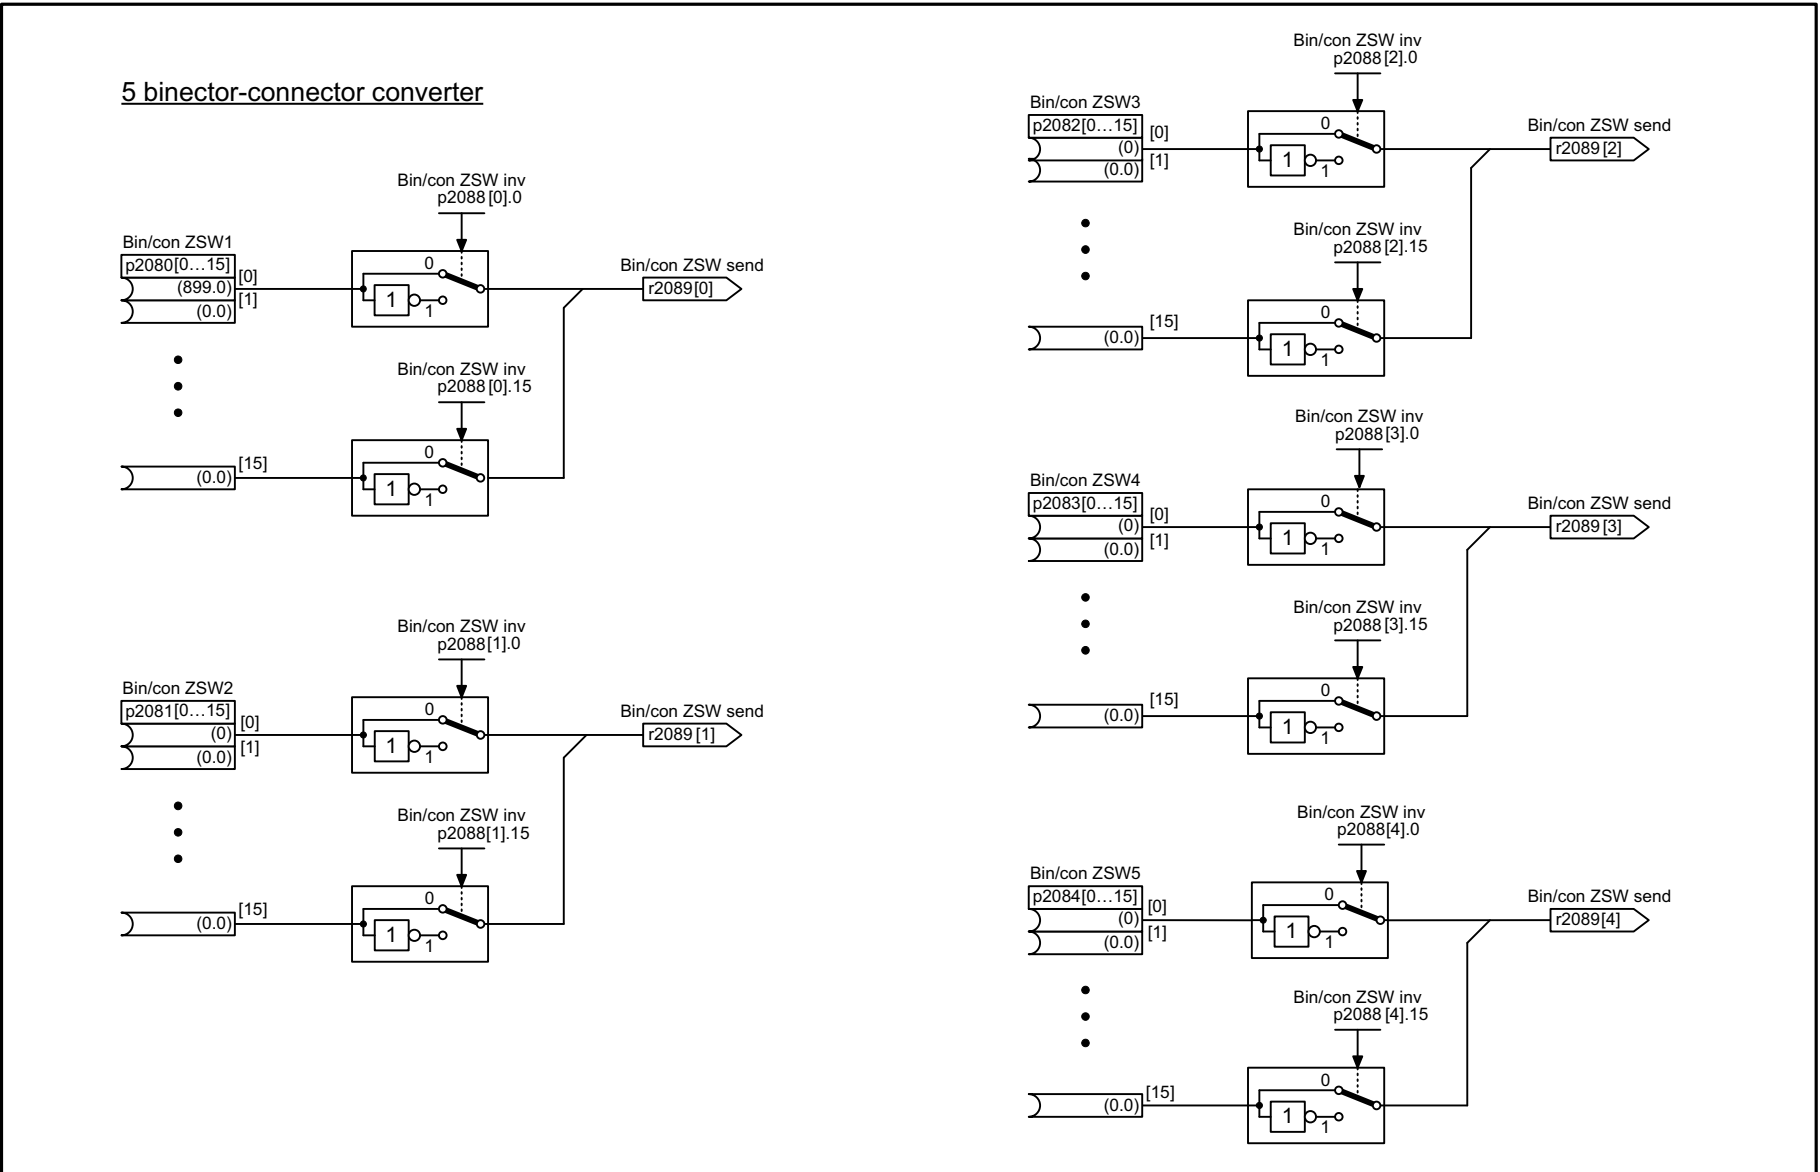


1	2	3	4	5	6	7	8
PROFdrive (PROFIBUS/PROFINET)					fp_2472_97_51.vsd	Function diagram	
Status words, free interconnection					12.12.2012 V4.6	SINAMICS G120D	

Fig. 2-30 2472 – Status words, free interconnection

2.7 Internal control/status words

Function diagrams


2500 – Overview	2-614
2501 – Control word, sequence control	2-615
2503 – Status word, sequence control	2-616
2505 – Control word, setpoint channel	2-617
2510 – Status word 1 (r0052)	2-618
2511 – Status word 2 (r0053)	2-619
2512 – Control word 1 (r0054)	2-620
2513 – Control word 2 (r0055)	2-621
2520 – Control word, speed controller	2-622
2522 – Status word, speed controller	2-623
2526 – Status word, closed-loop control	2-624
2530 – Status word, current control	2-625
2534 – Status word, monitoring functions 1	2-626
2536 – Status word, monitoring functions 2	2-627
2537 – Status word, monitoring functions 3	2-628
2546 – Control word, faults/alarms	2-629
2548 – Status word, faults/alarms 1 and 2	2-630
2634 – Sequence control - Missing enables	2-631

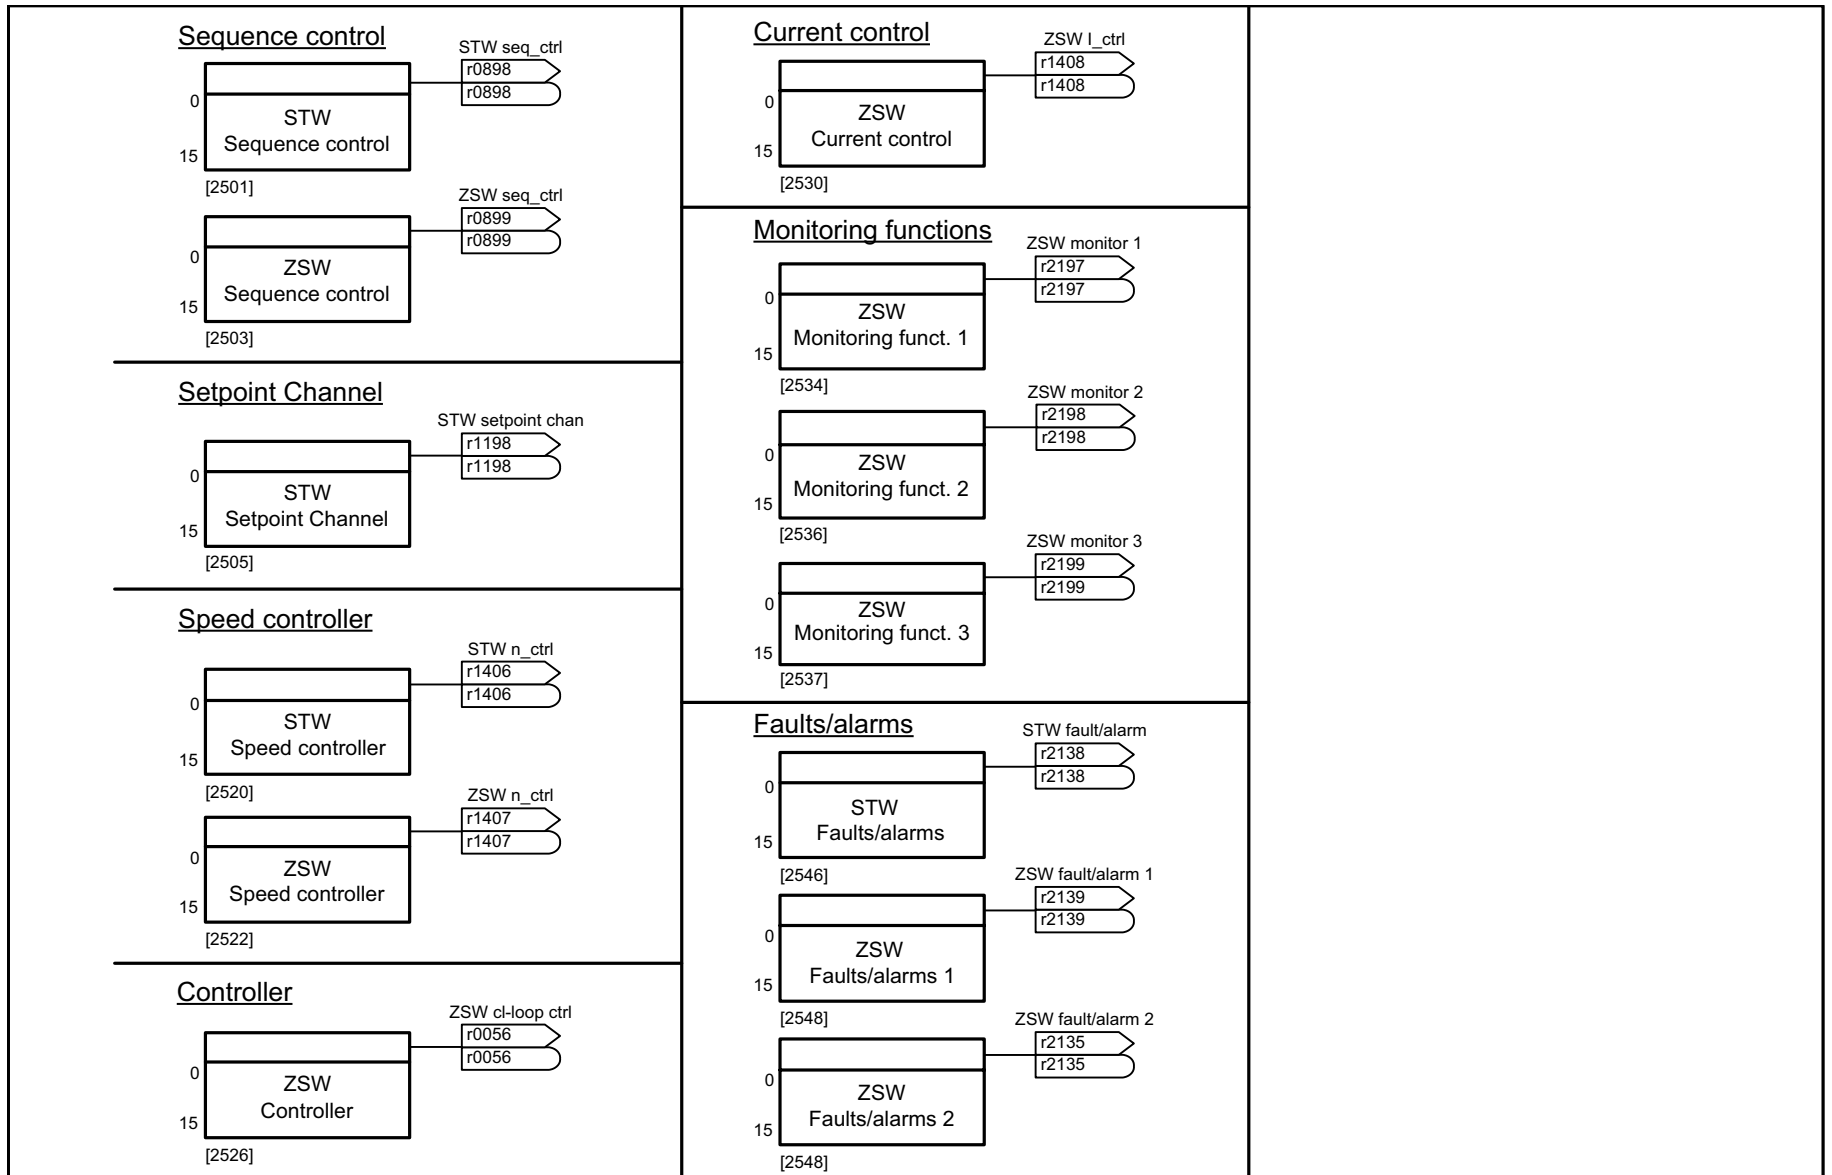

1	2	3	4	5	6	7	8
Internal control/status words					fp_2500_97_57.vsd	Function diagram	
Overview					12.12.2012 V4.6	SINAMICS G120D	

Fig. 2-31 2500 – Overview

Fig. 2-32 2501 – Control word, sequence control

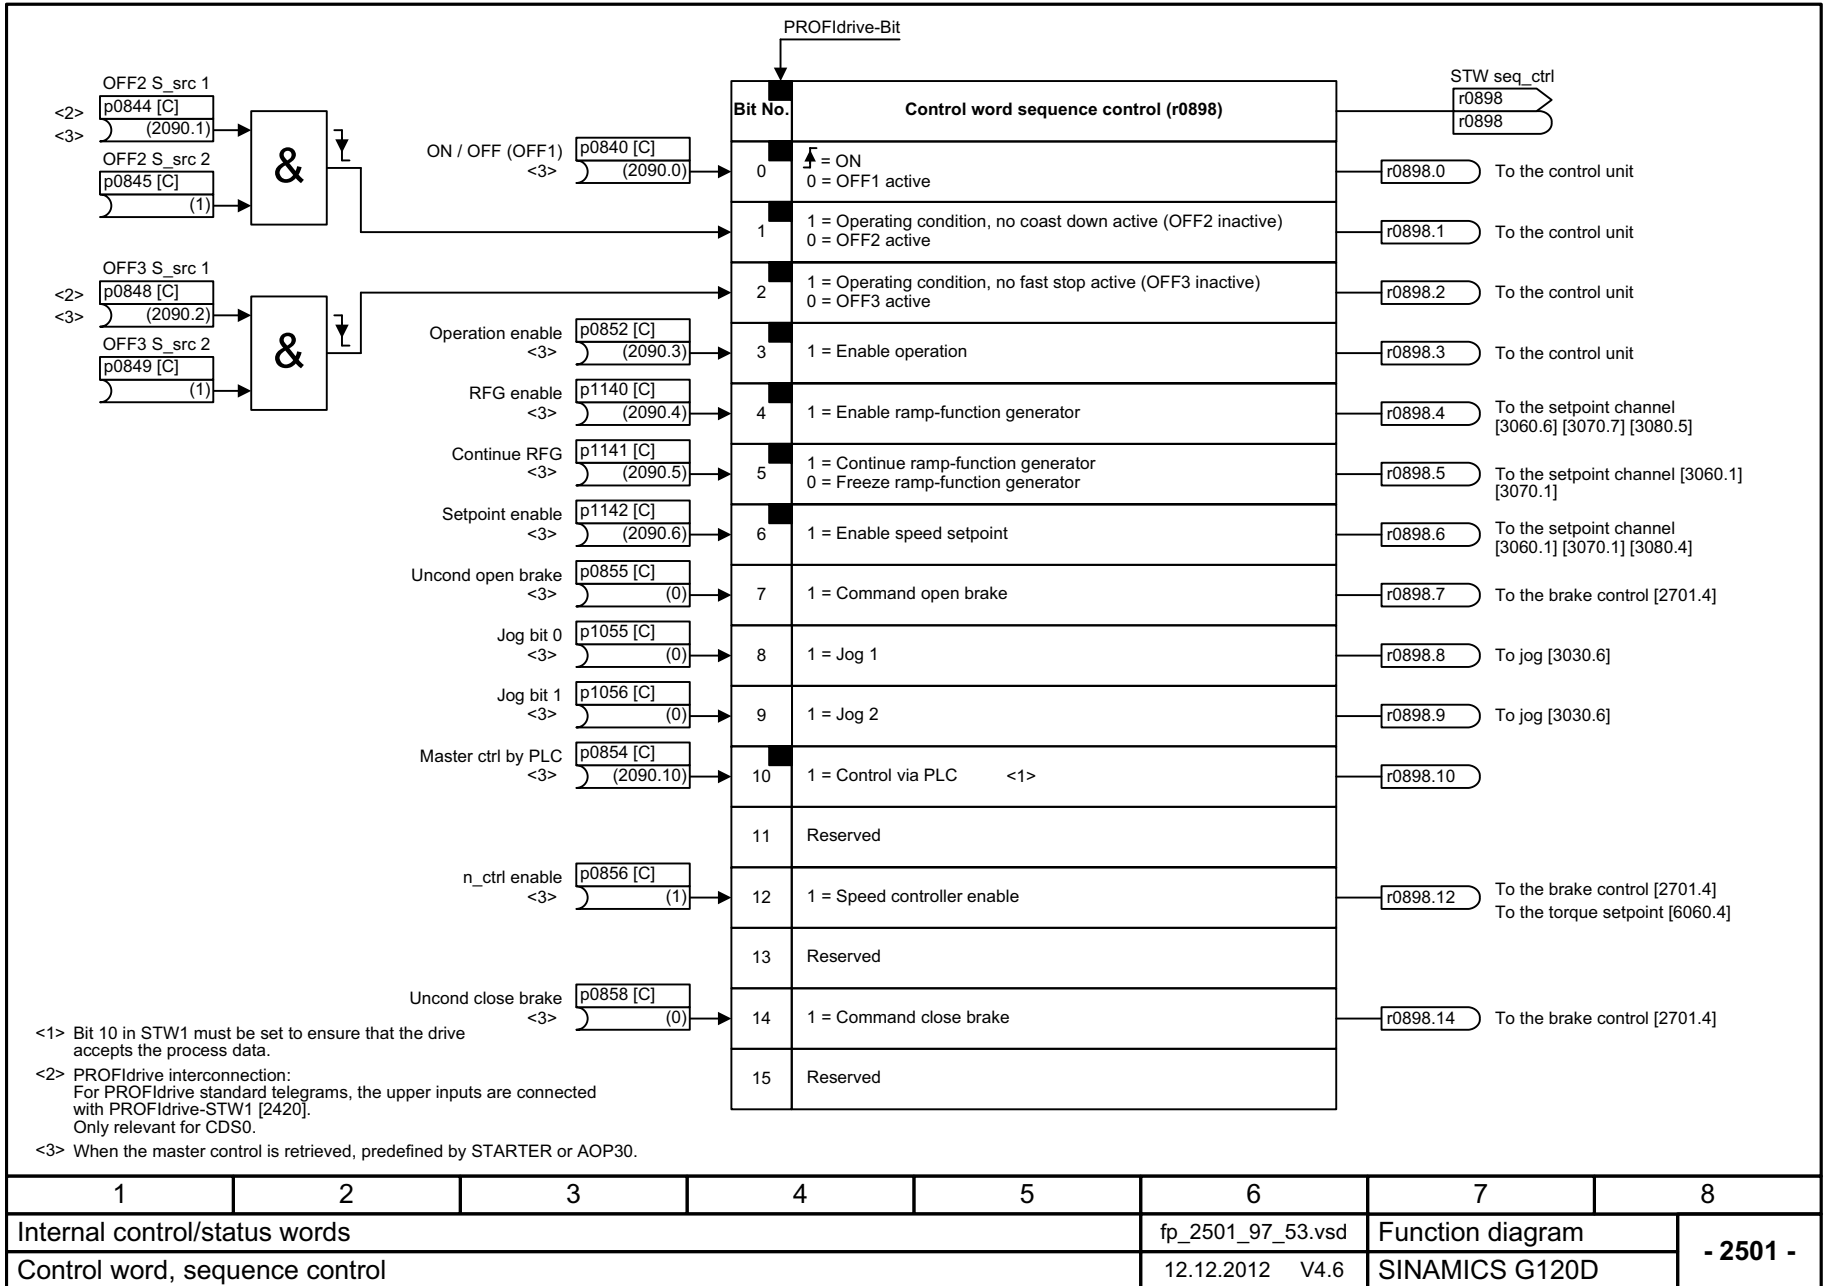

1	2	3	4	5	6	7	8
Internal control/status words					fp_2501_97_53.vsd	Function diagram	
Control word, sequence control					12.12.2012 V4.6	SINAMICS G120D	
- 2501 -							


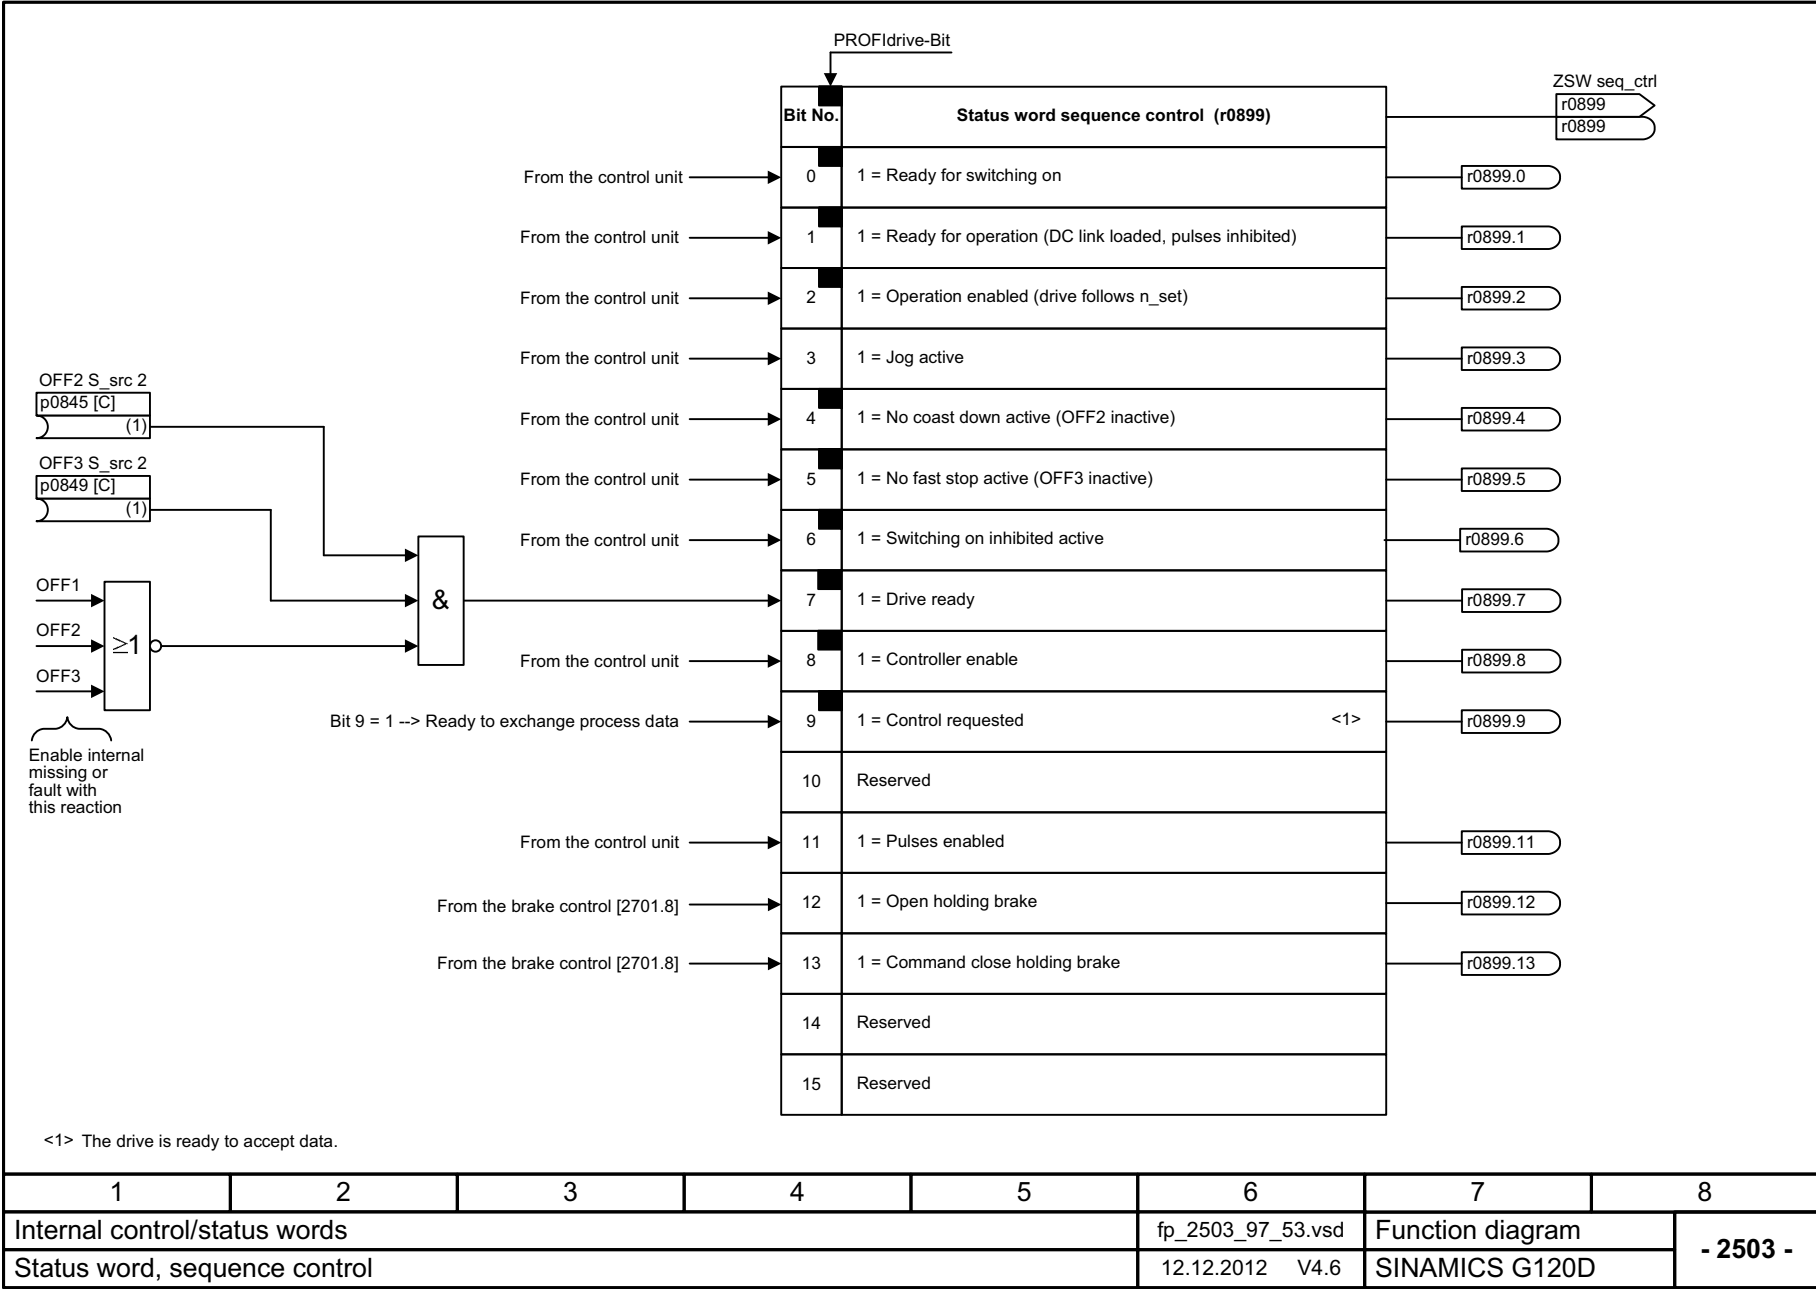


Fig. 2-33 2503 – Status word, sequence control

1	2	3	4	5	6	7	8
Internal control/status words					fp_2503_97_53.vsd	Function diagram	
Status word, sequence control					12.12.2012 V4.6	SINAMICS G120D	
- 2503 -							

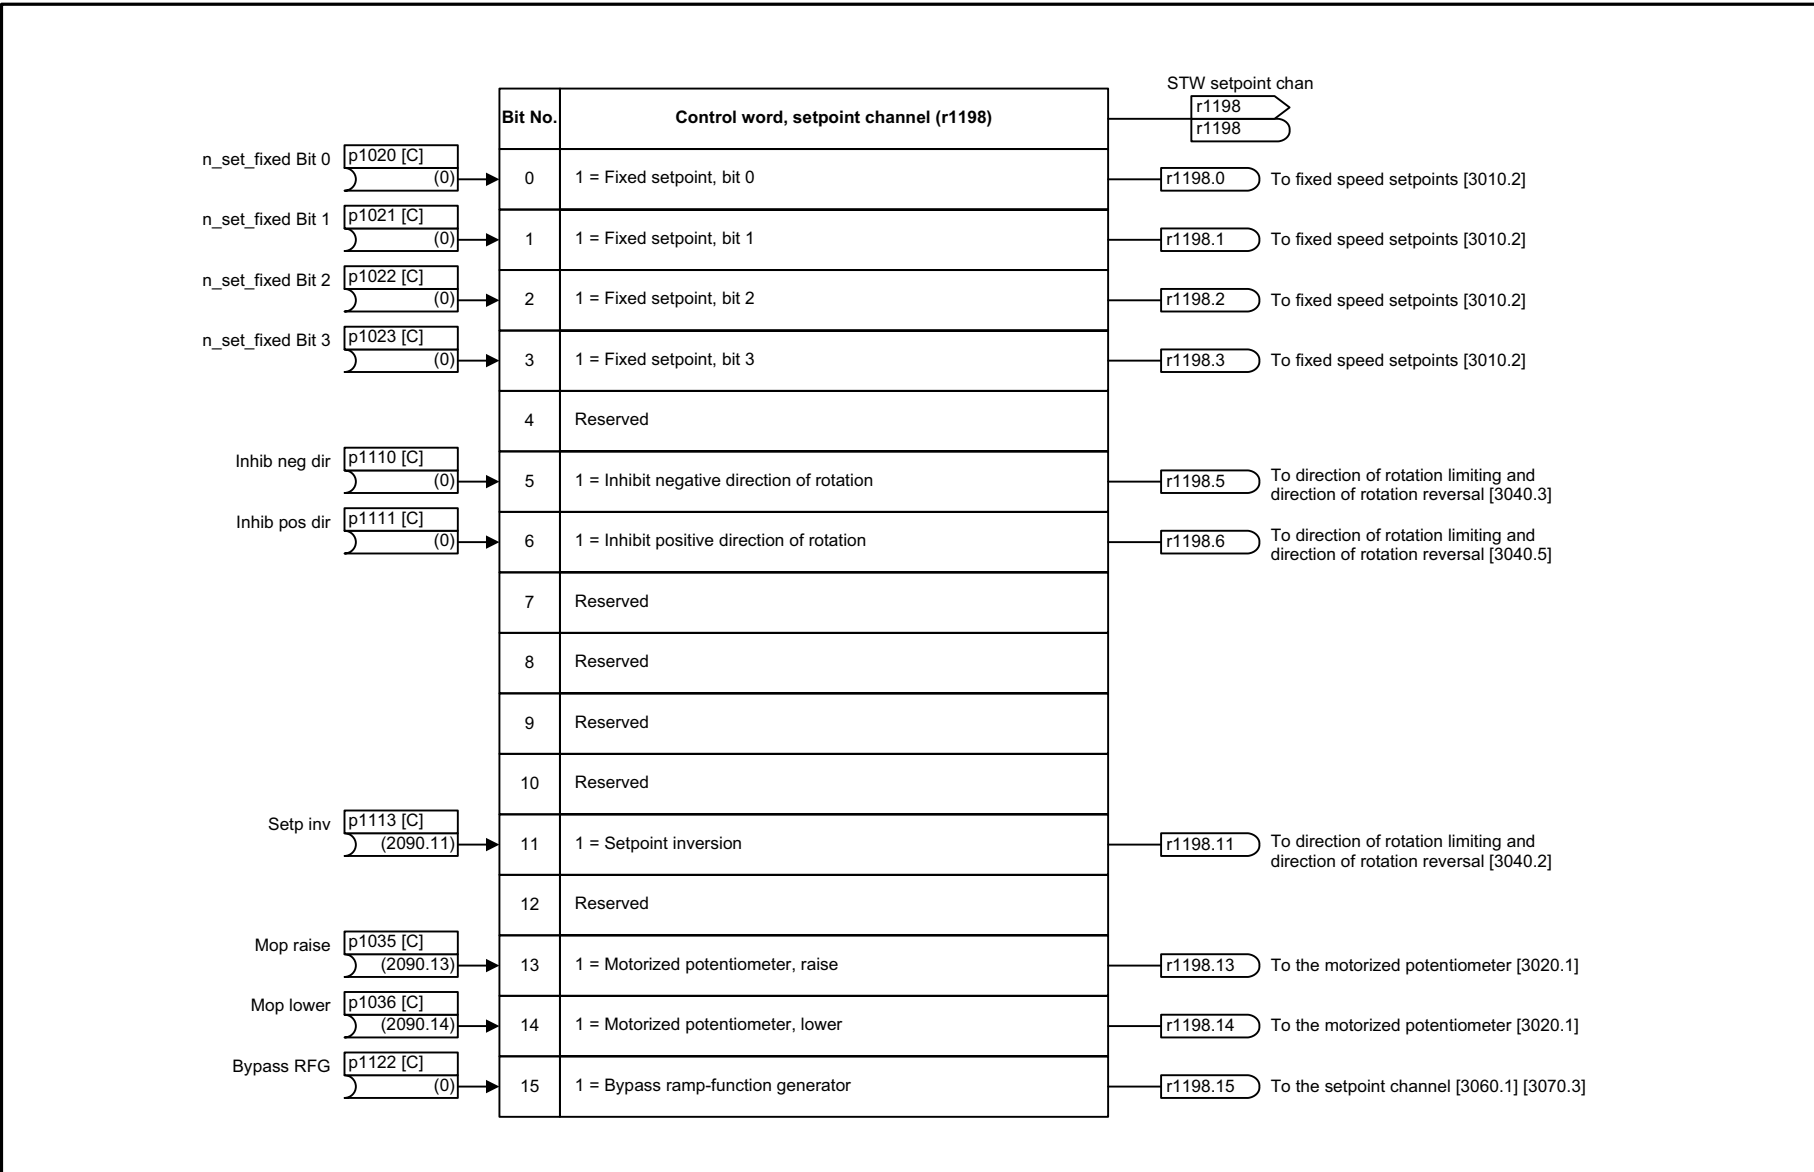

1	2	3	4	5	6	7	8
Internal control/status words					fp_2505_97_51.vsd	Function diagram	
Control word, setpoint channel					12.12.2012 V4.6	SINAMICS G120D	

Fig. 2-34 2505 – Control word, setpoint channel

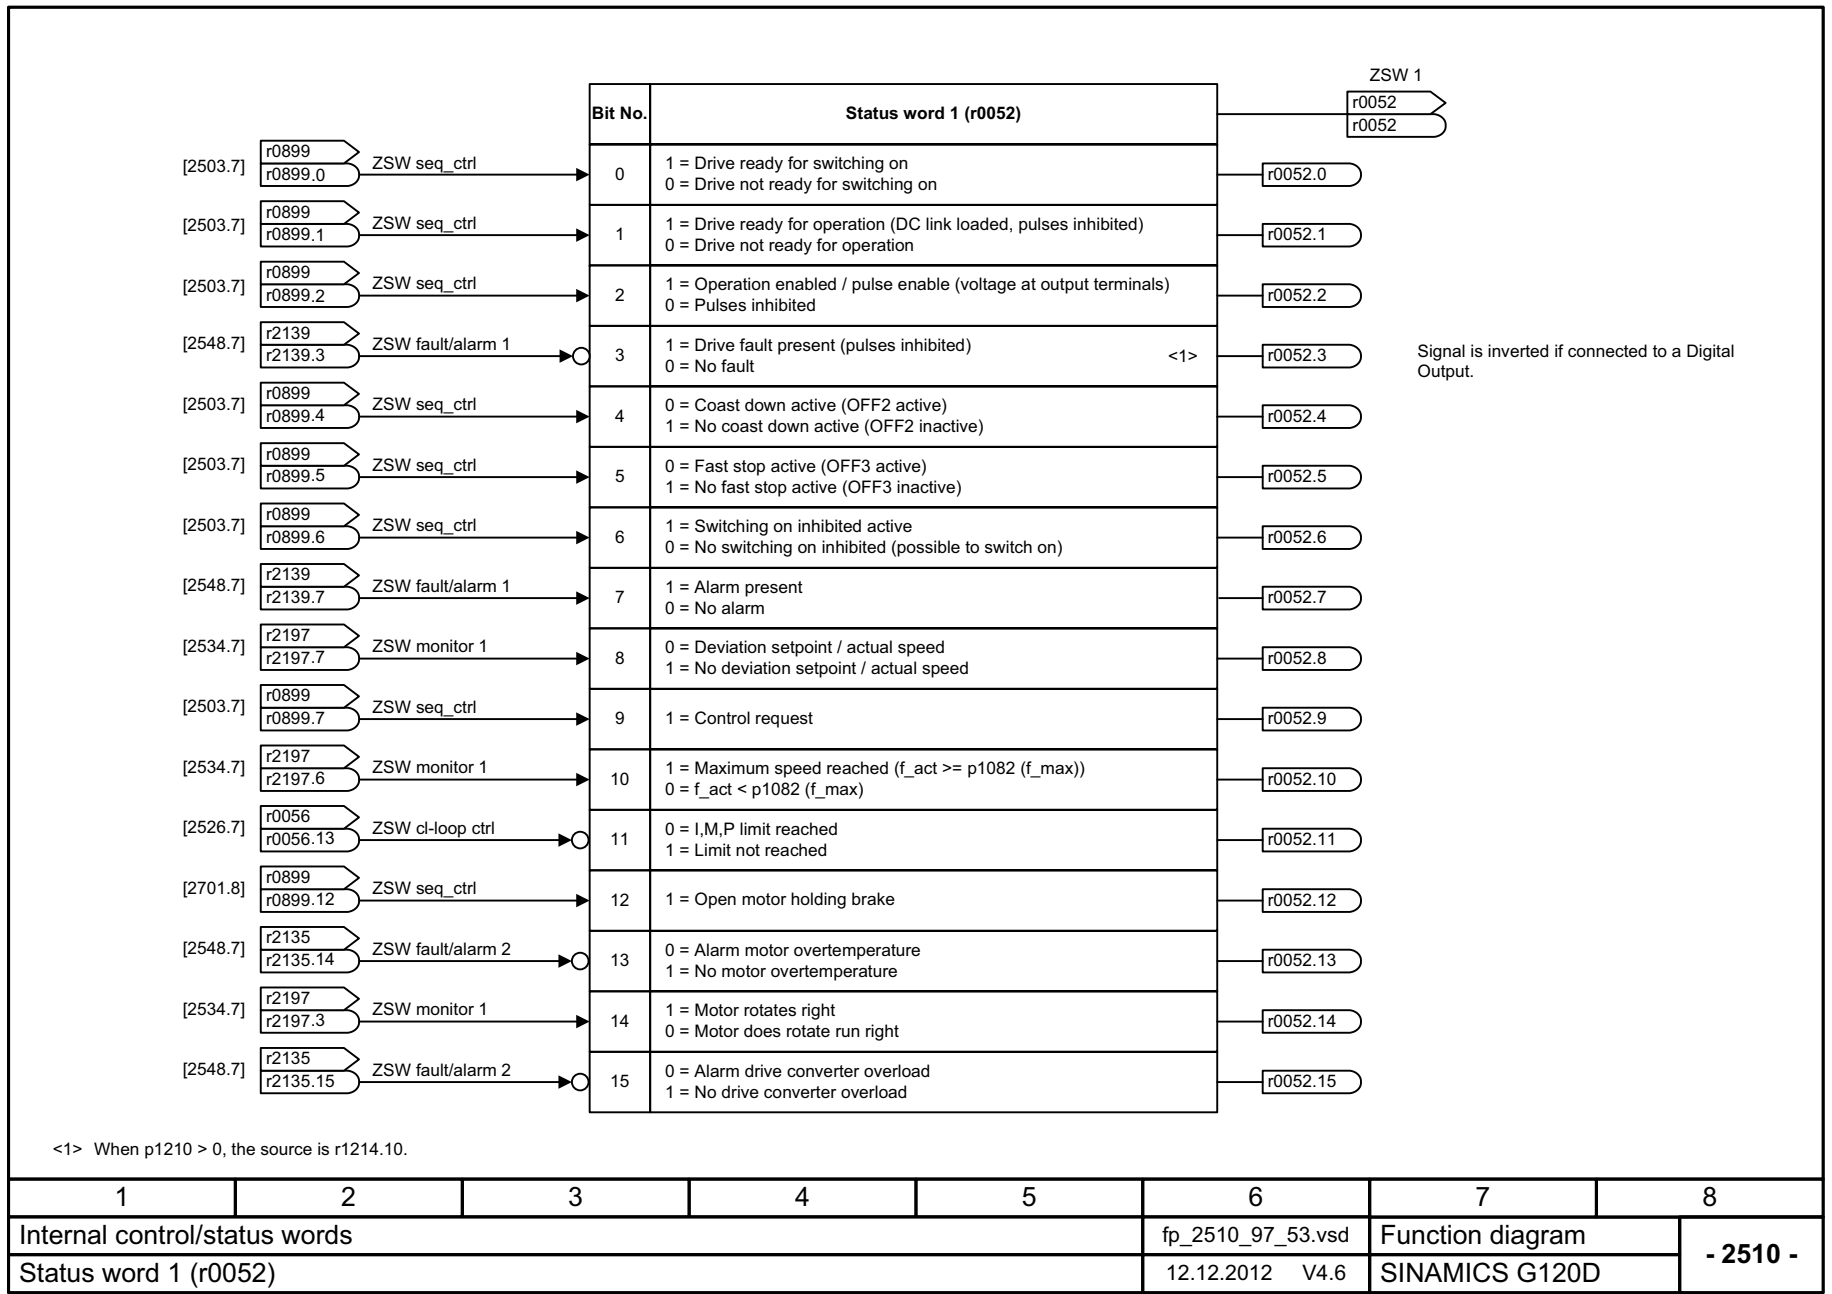


Fig. 2-35 2510 – Status word 1 (r0052)

1	2	3	4	5	6	7	8
Internal control/status words					fp_2510_97_53.vsd	Function diagram	
Status word 1 (r0052)					12.12.2012 V4.6	SINAMICS G120D	
- 2510 -							

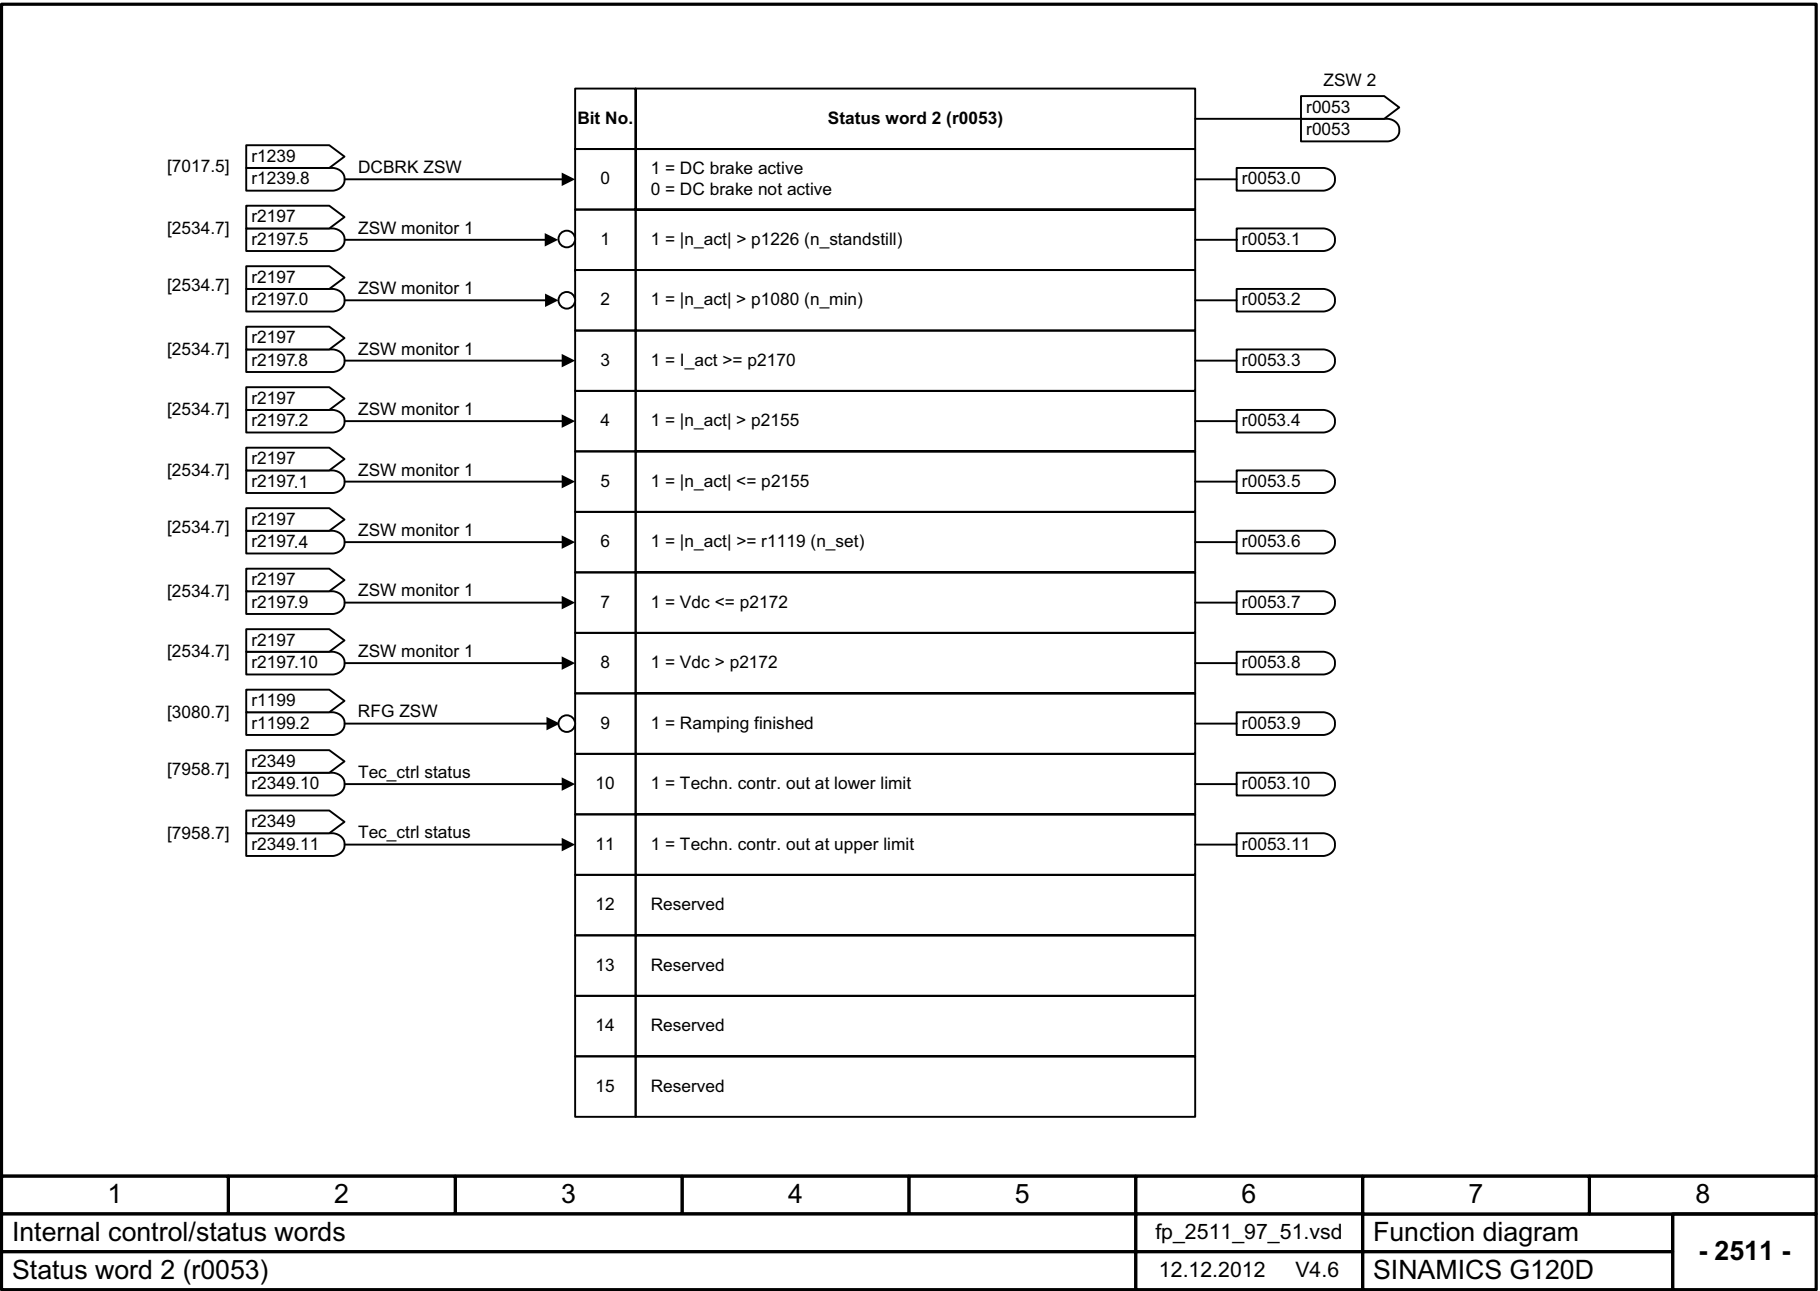


Fig. 2-36 2511 – Status word 2 (r0053)

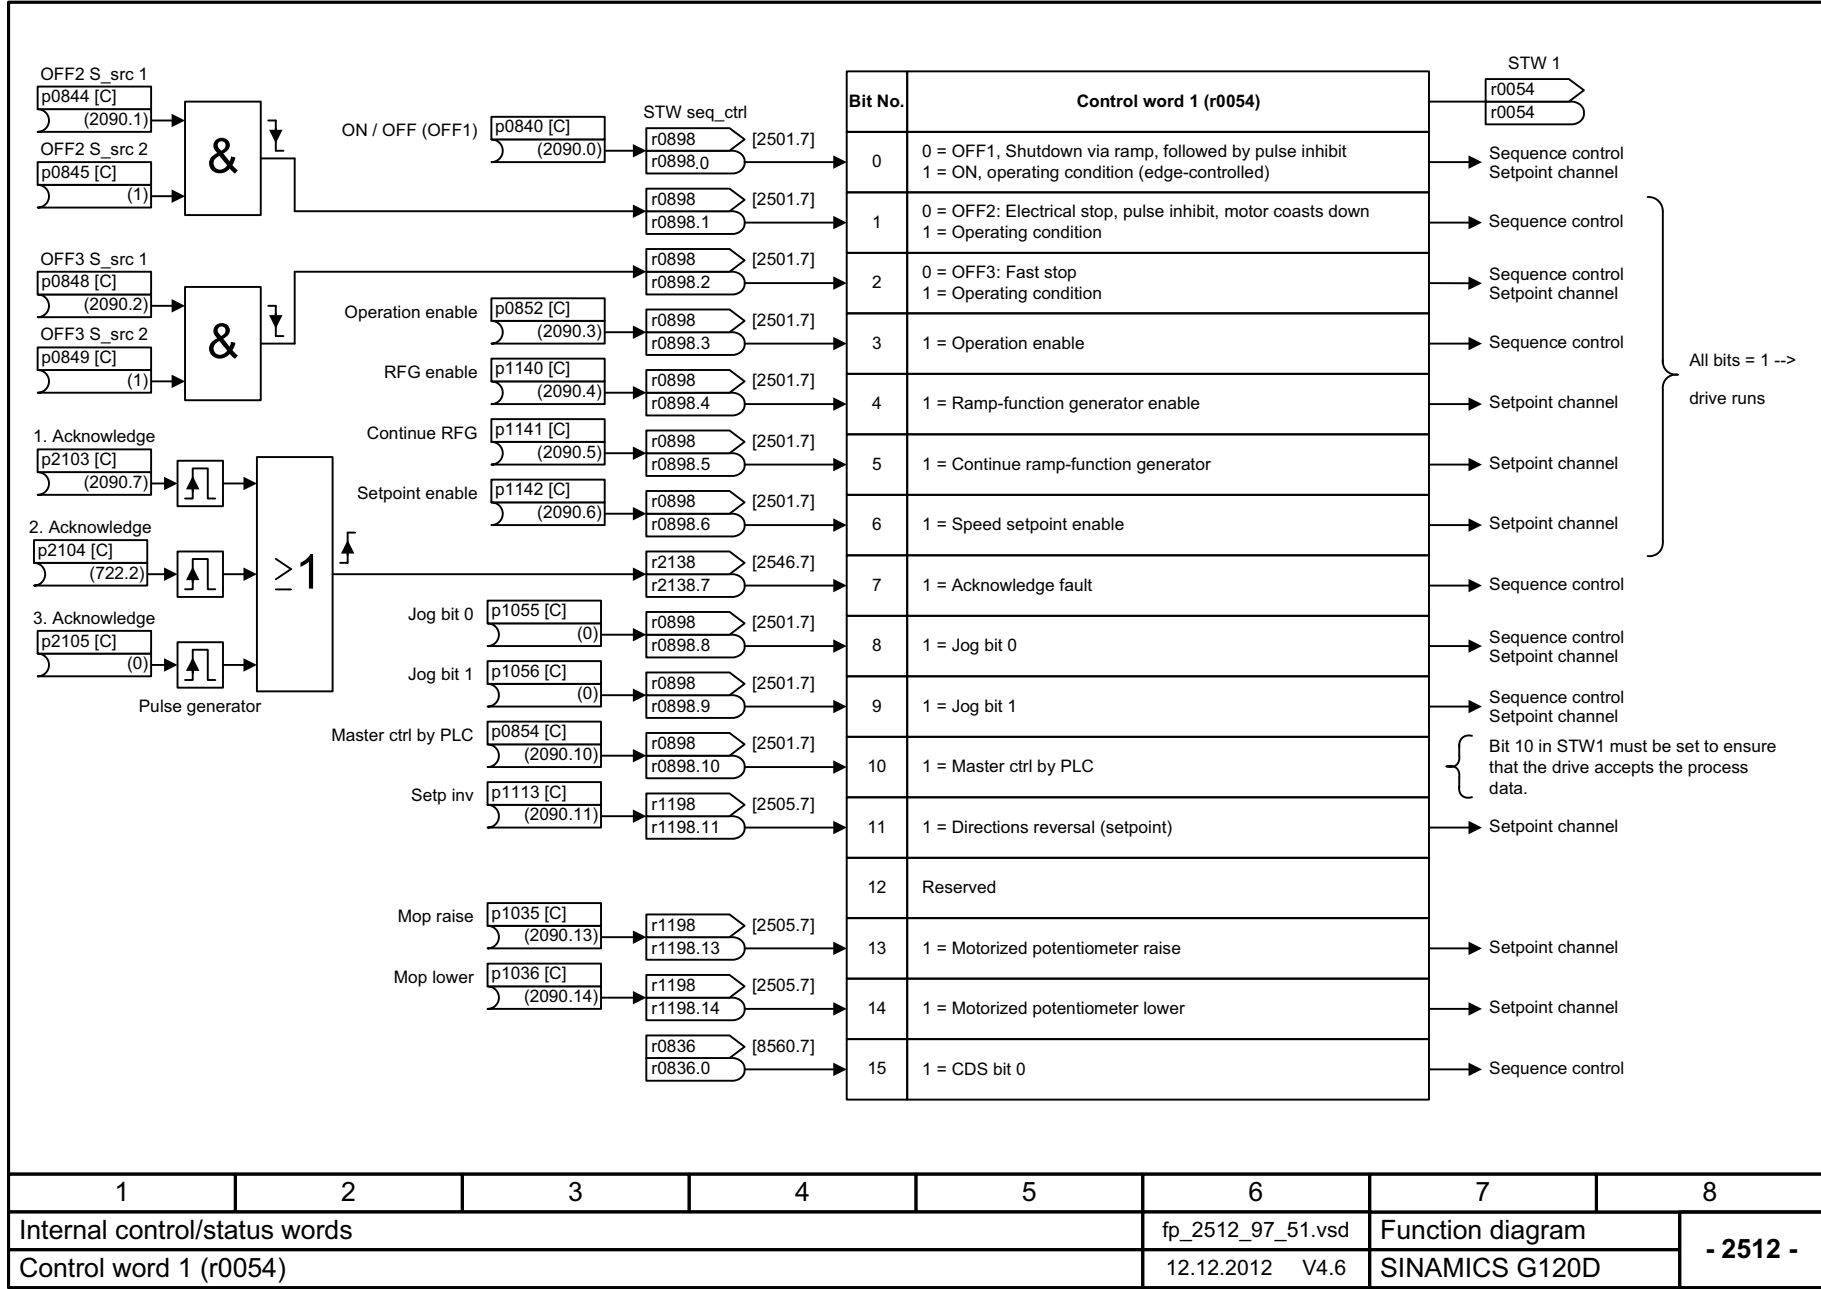


Fig. 2-37 2512 – Control word 1 (r0054)

1	2	3	4	5	6	7	8
Internal control/status words					fp_2512_97_51.vsd	Function diagram	
Control word 1 (r0054)					12.12.2012 V4.6	SINAMICS G120D	
- 2512 -							

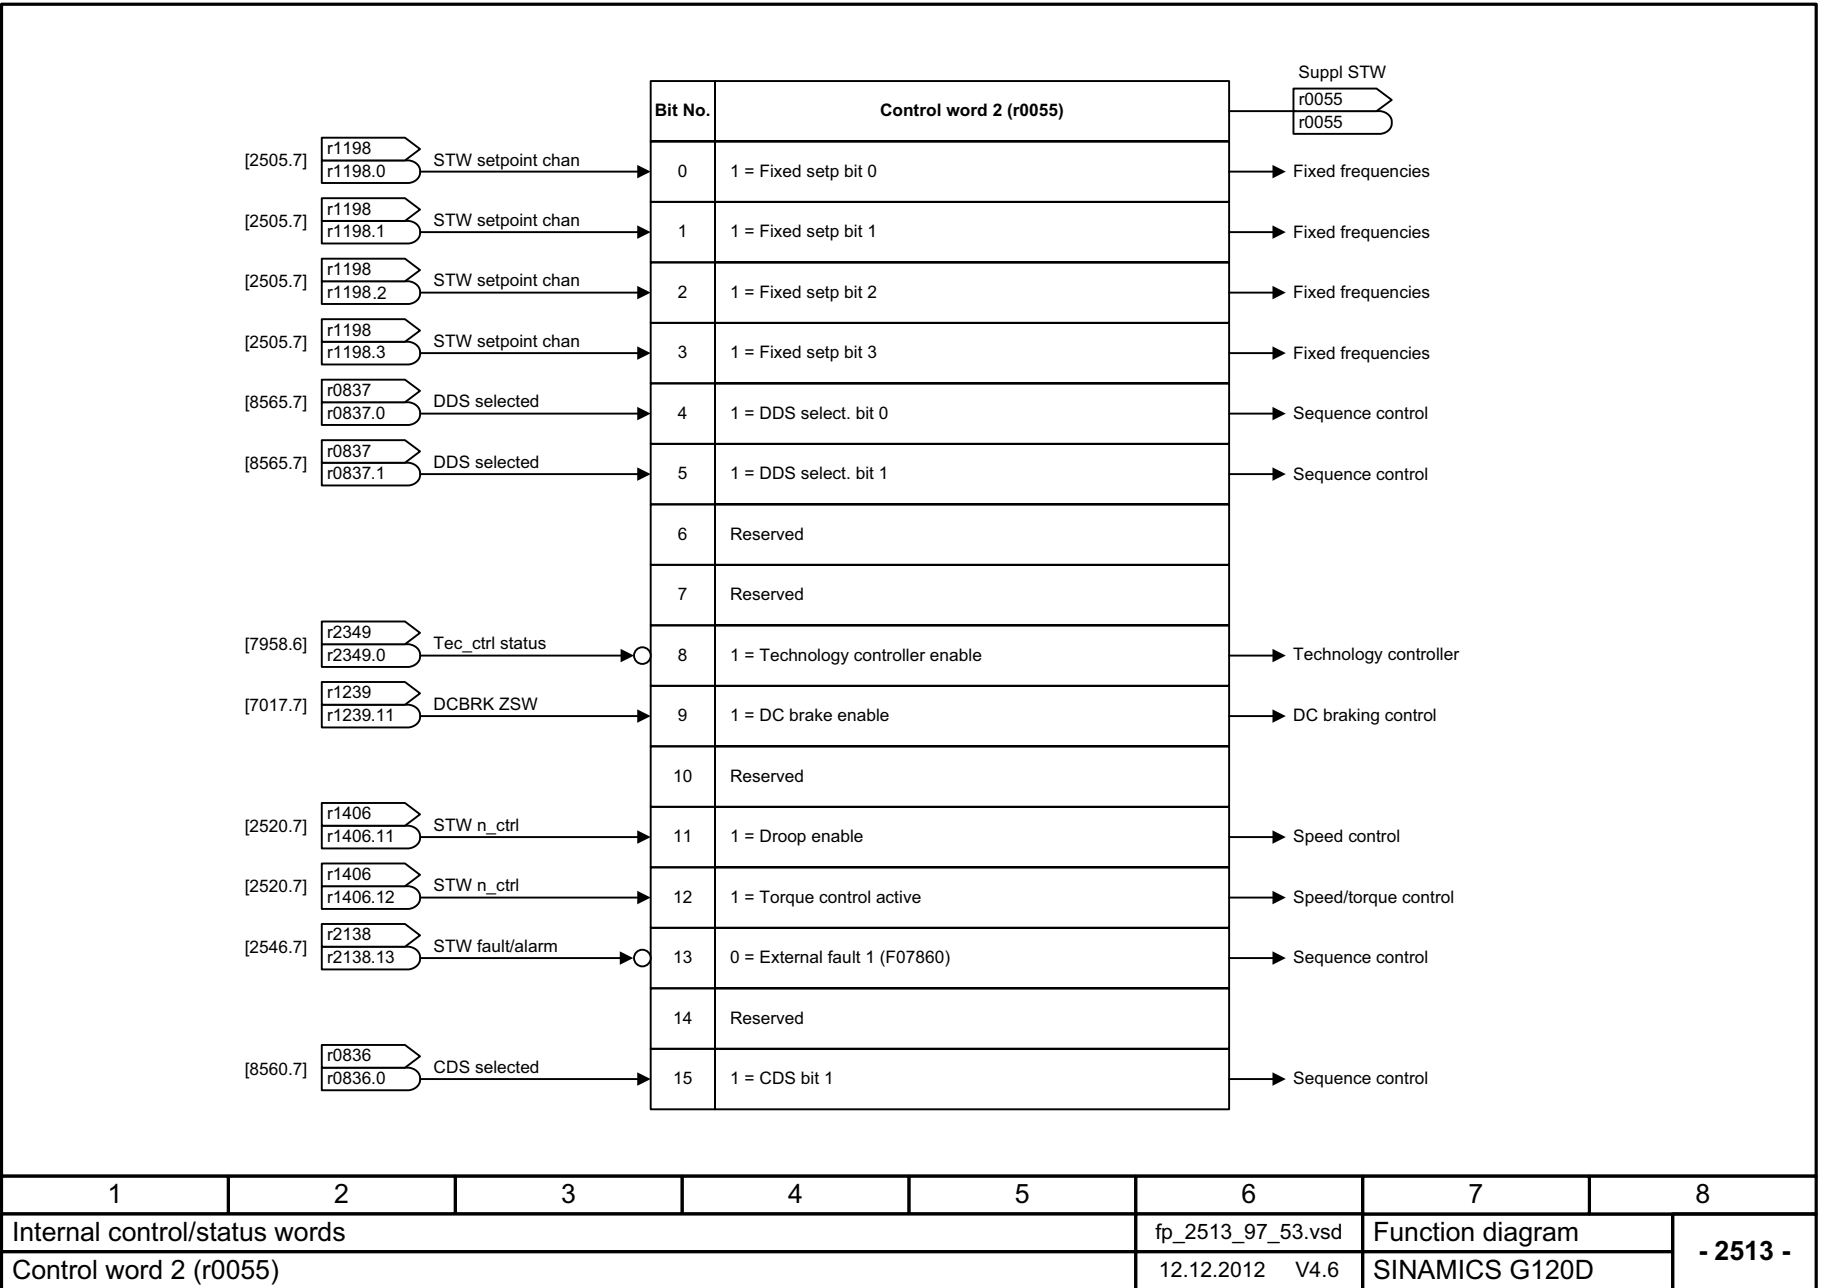


Fig. 2-38 2513 – Control word 2 (r0055)

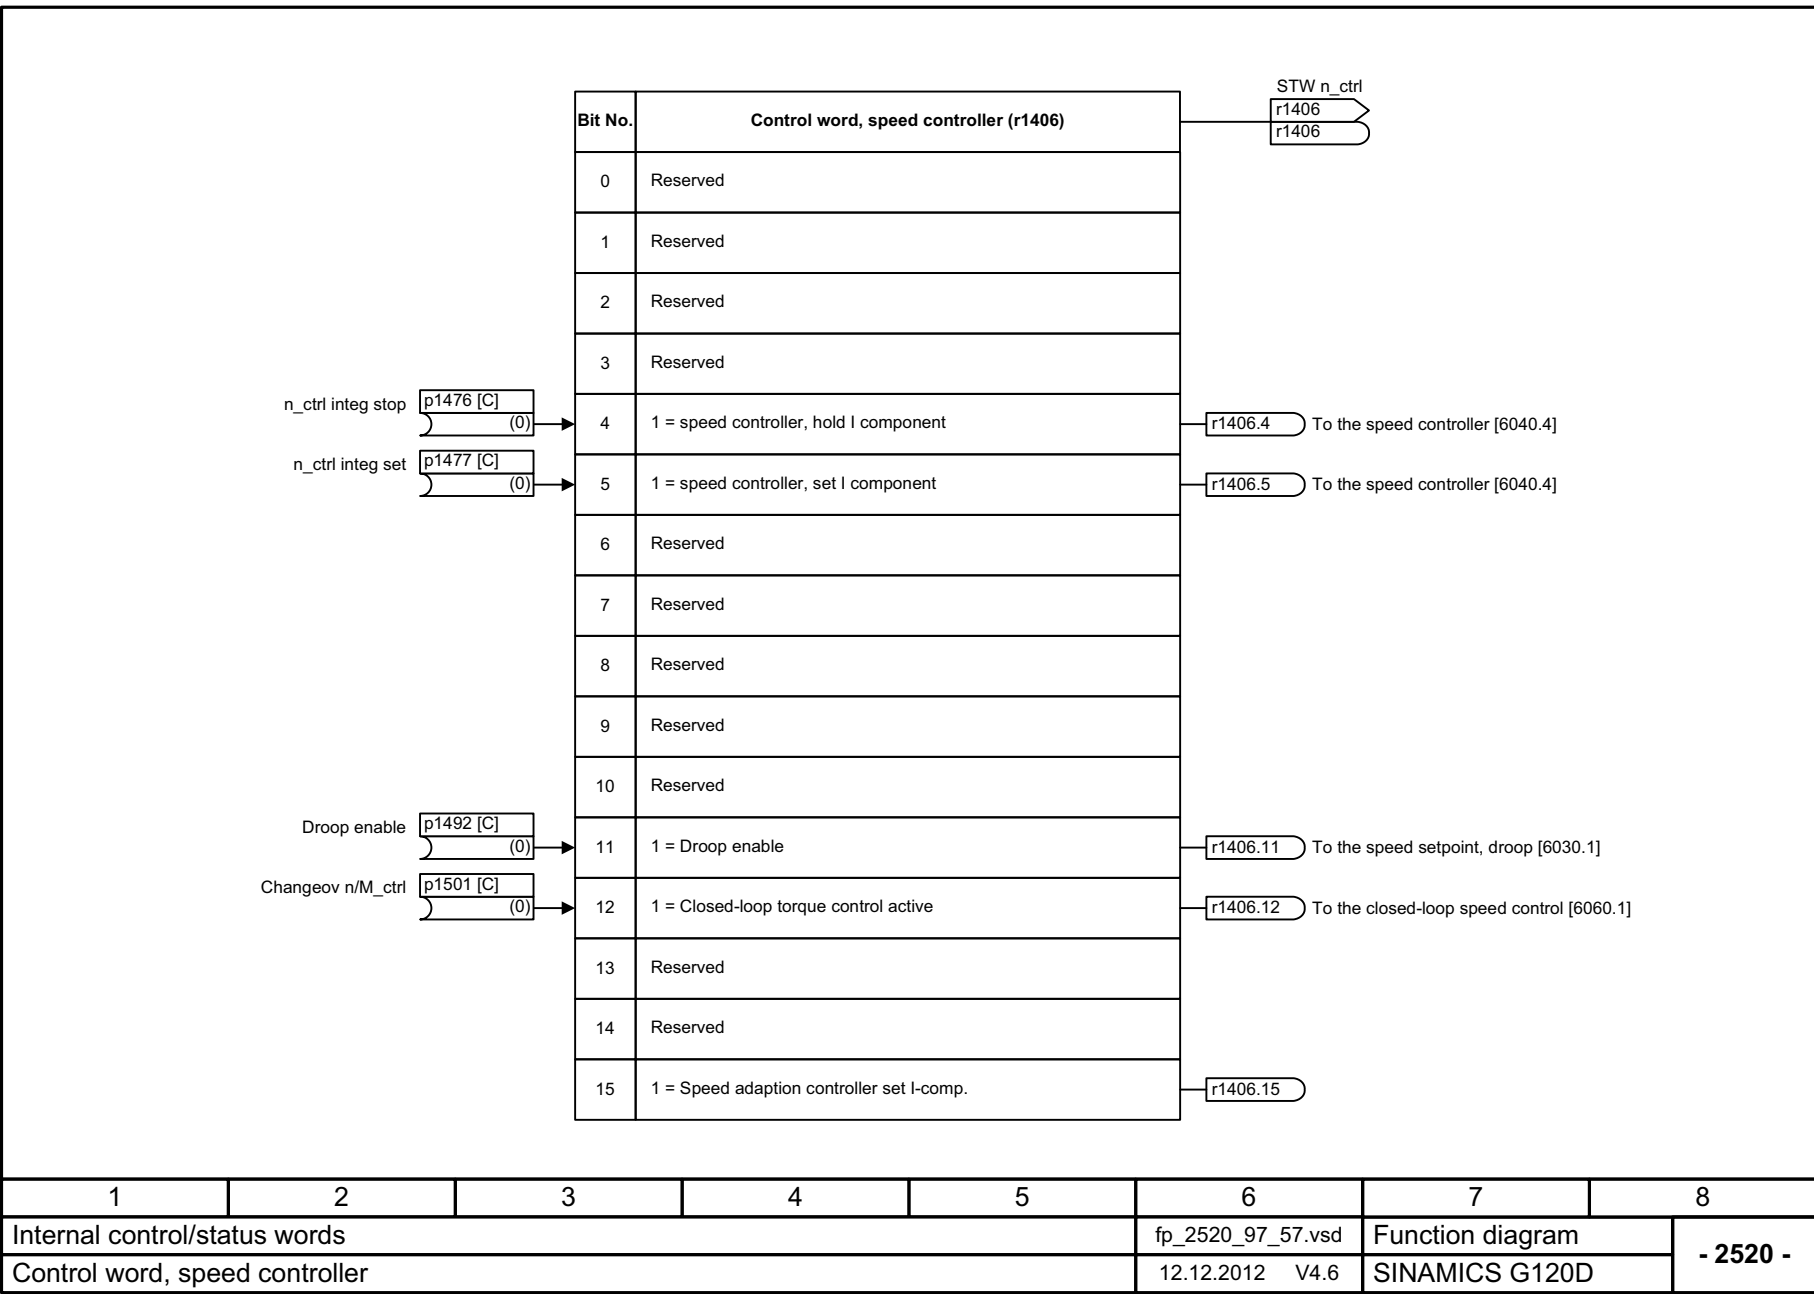


Fig. 2-39 2520 – Control word, speed controller

1	2	3	4	5	6	7	8
Internal control/status words					fp_2520_97_57.vsd	Function diagram	
Control word, speed controller					12.12.2012 V4.6	SINAMICS G120D	
							- 2520 -

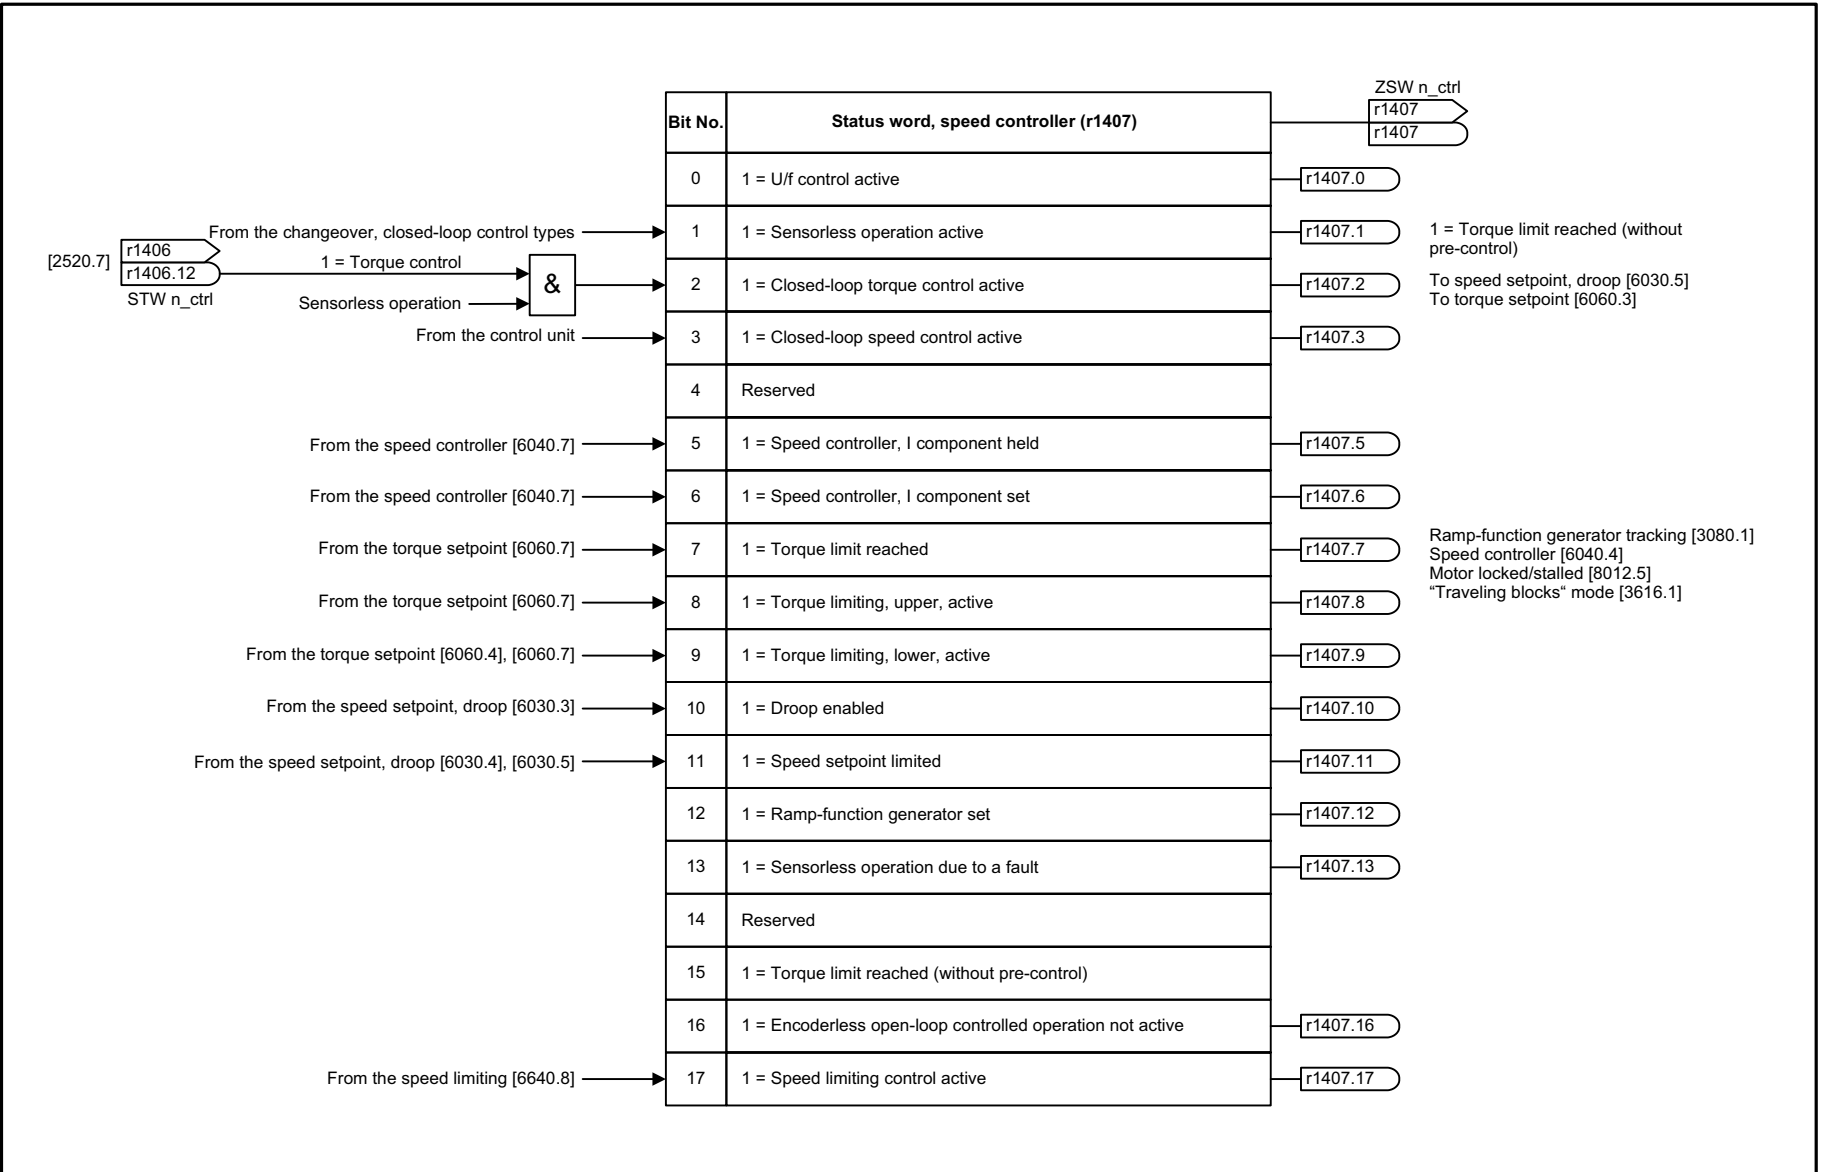


Fig. 2-40 2522 – Status word, speed controller

1	2	3	4	5	6	7	8
Internal control/status words					fp_2522_97_04.vsd	Function diagram	
Status word, speed controller					12.12.2012 V4.6	SINAMICS G120D	

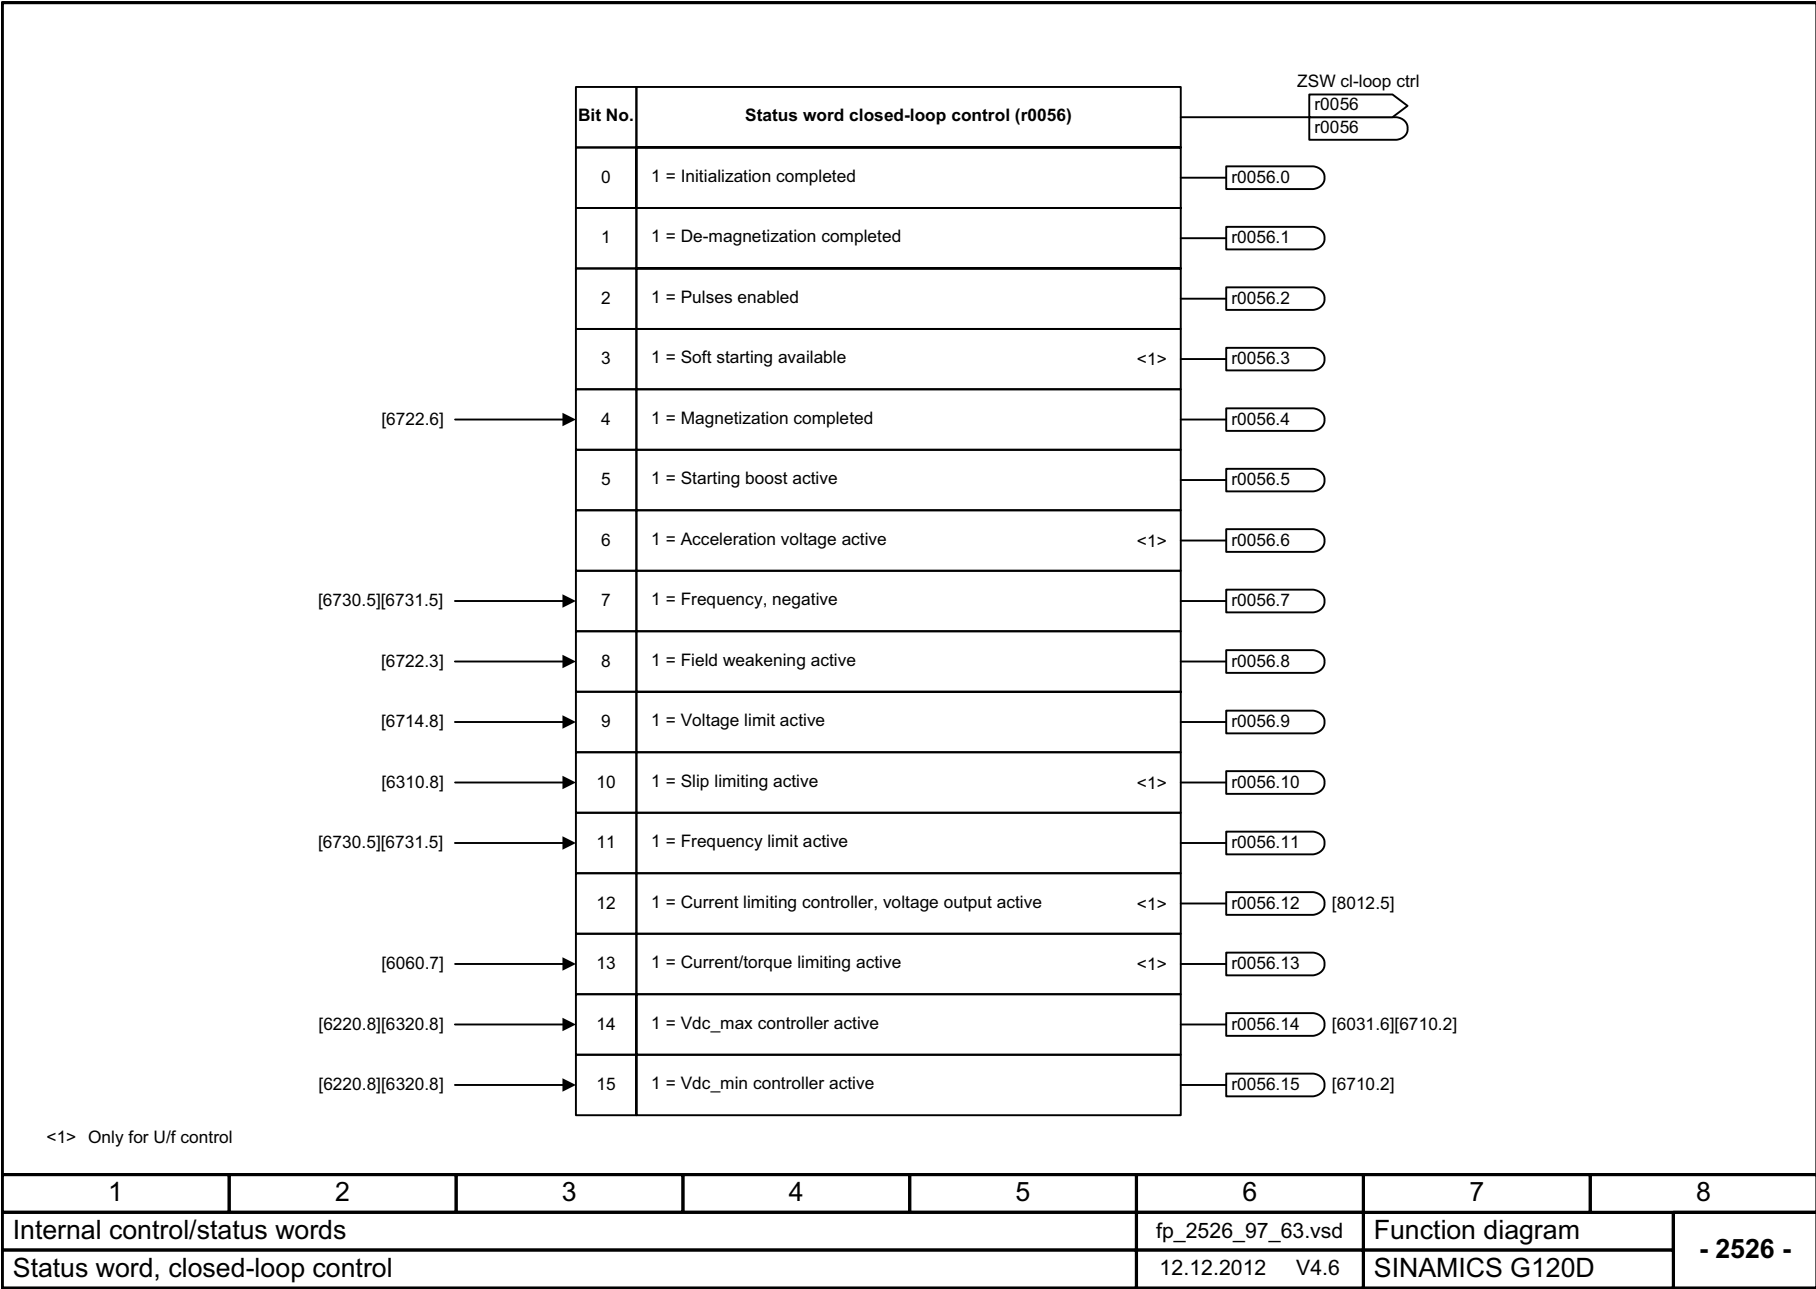


Fig. 2-41 2526 – Status word, closed-loop control

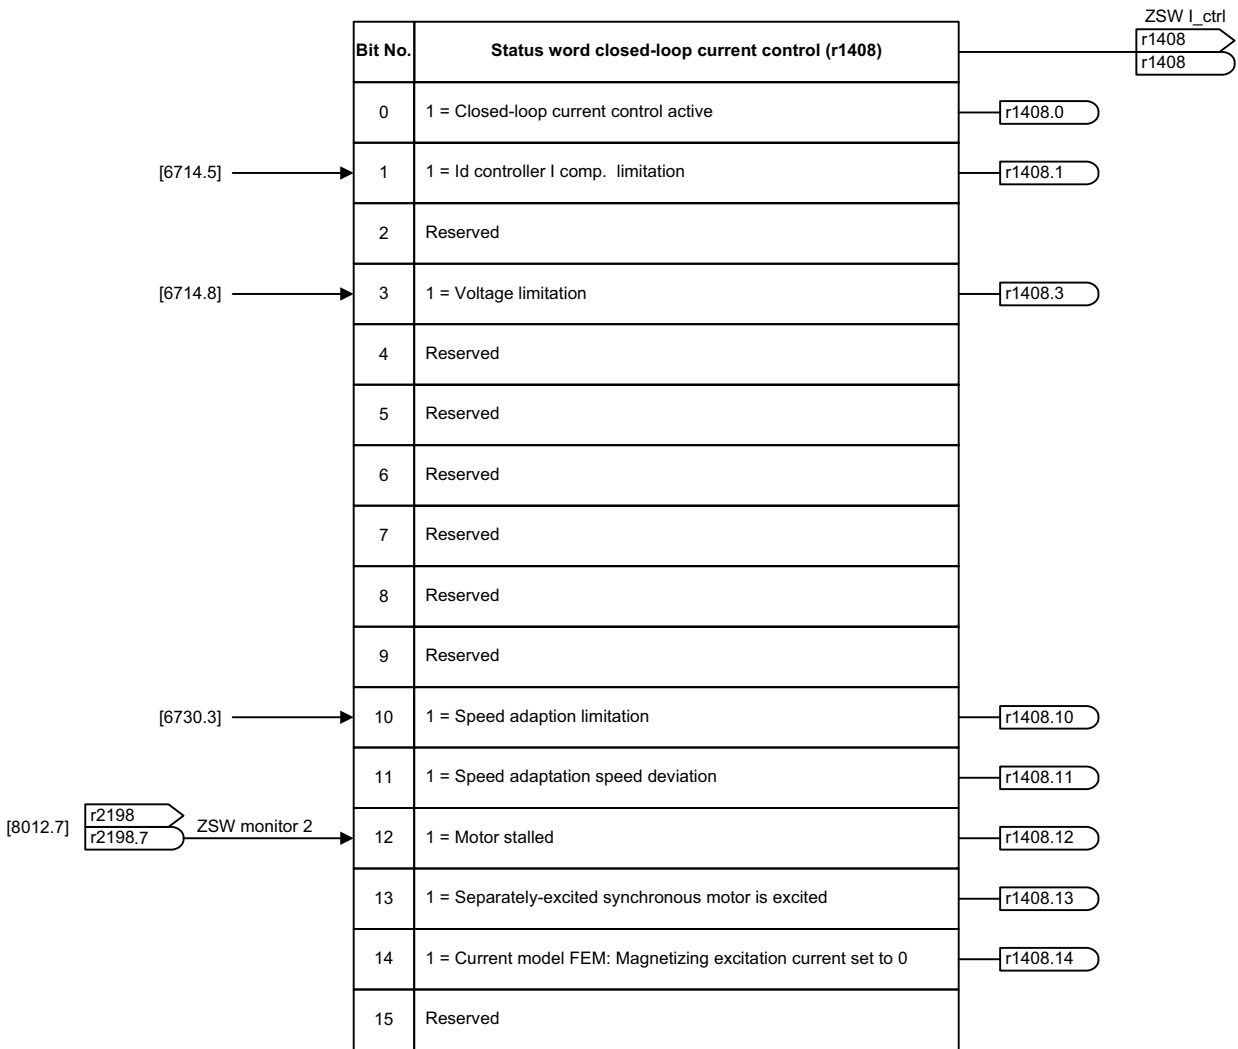


Fig. 2-42 2530 – Status word, current control

1	2	3	4	5	6	7	8
Internal control/status words					fp_2530_97_55.vsd	Function diagram	
Status word, current control					12.12.2012 V4.6	SINAMICS G120D	
							- 2530 -

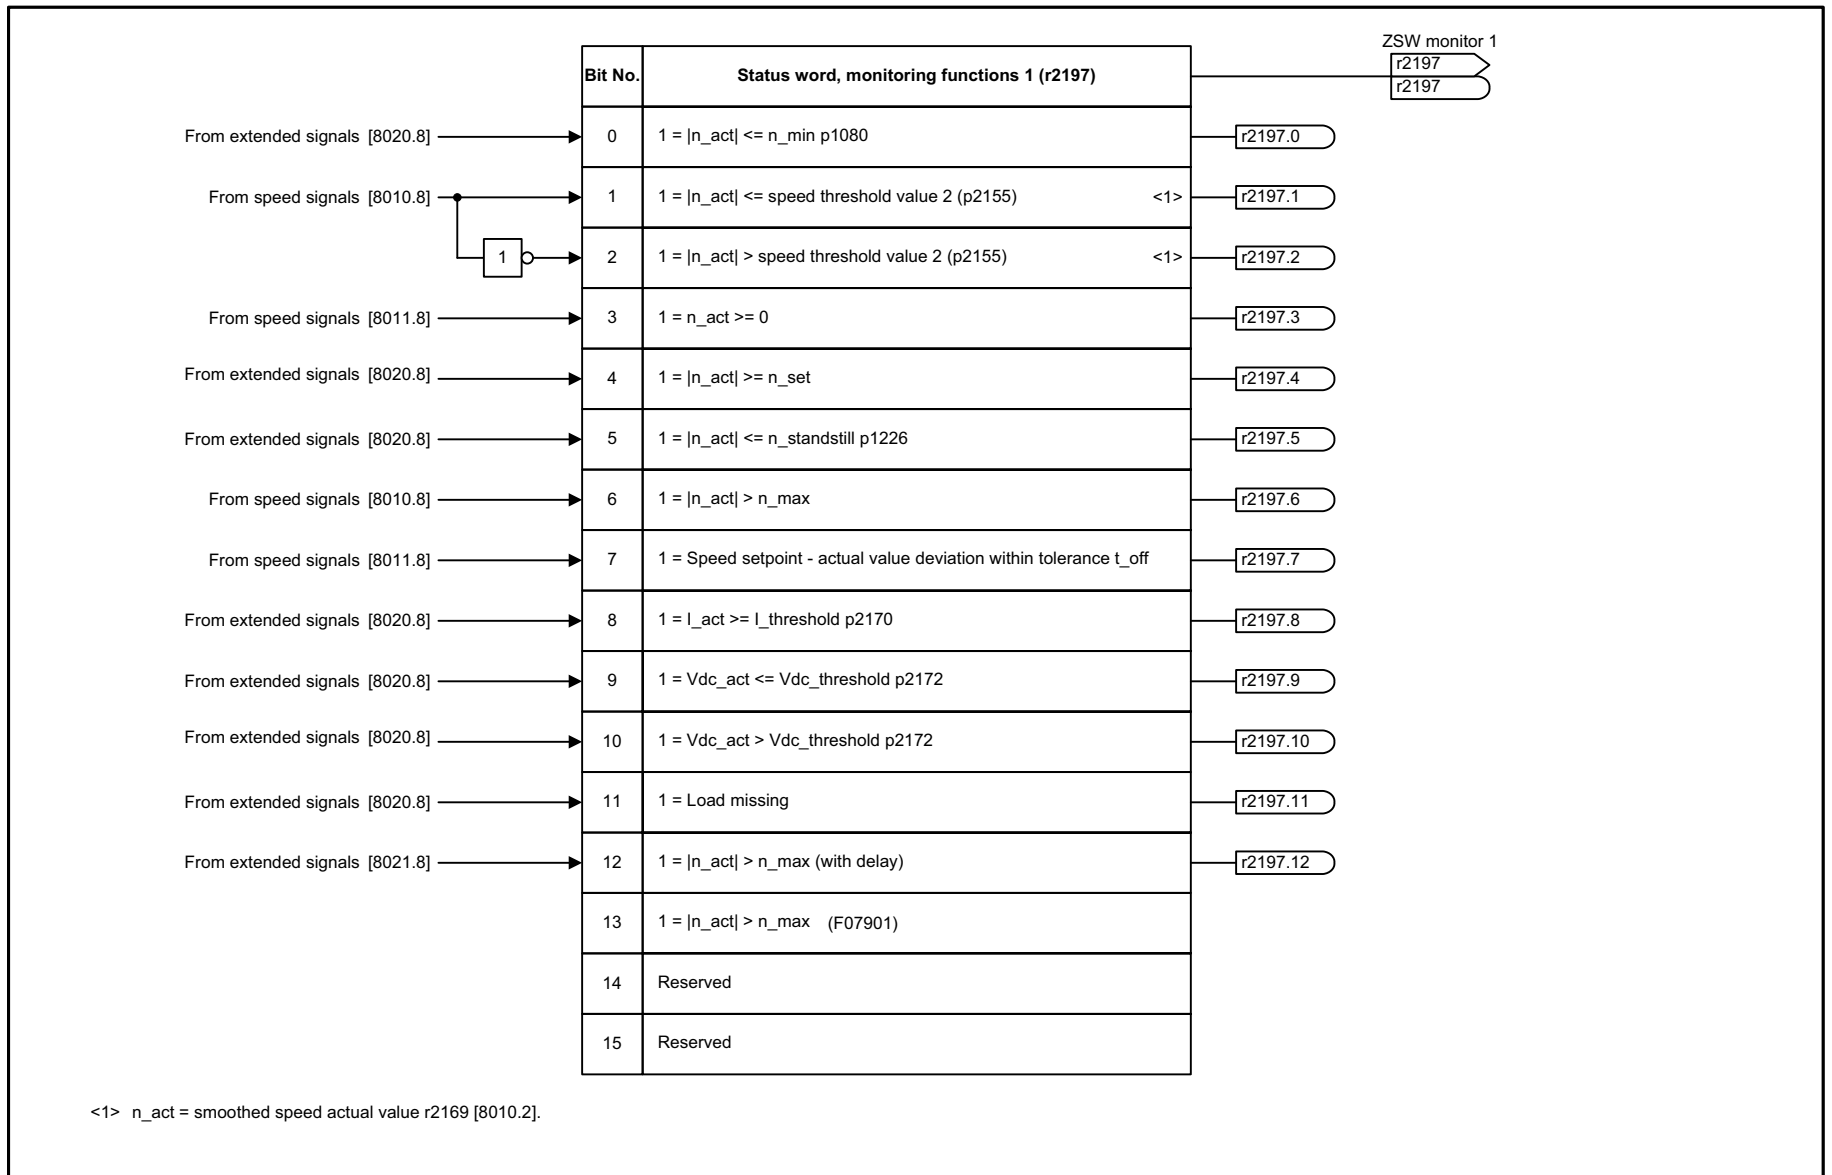


Fig. 2-43 2534 – Status word, monitoring functions 1

1	2	3	4	5	6	7	8
Internal control/status words					fp_2534_97_57.vsd	Function diagram	
Status word, monitoring functions 1					12.12.2012 V4.6	SINAMICS G120D	

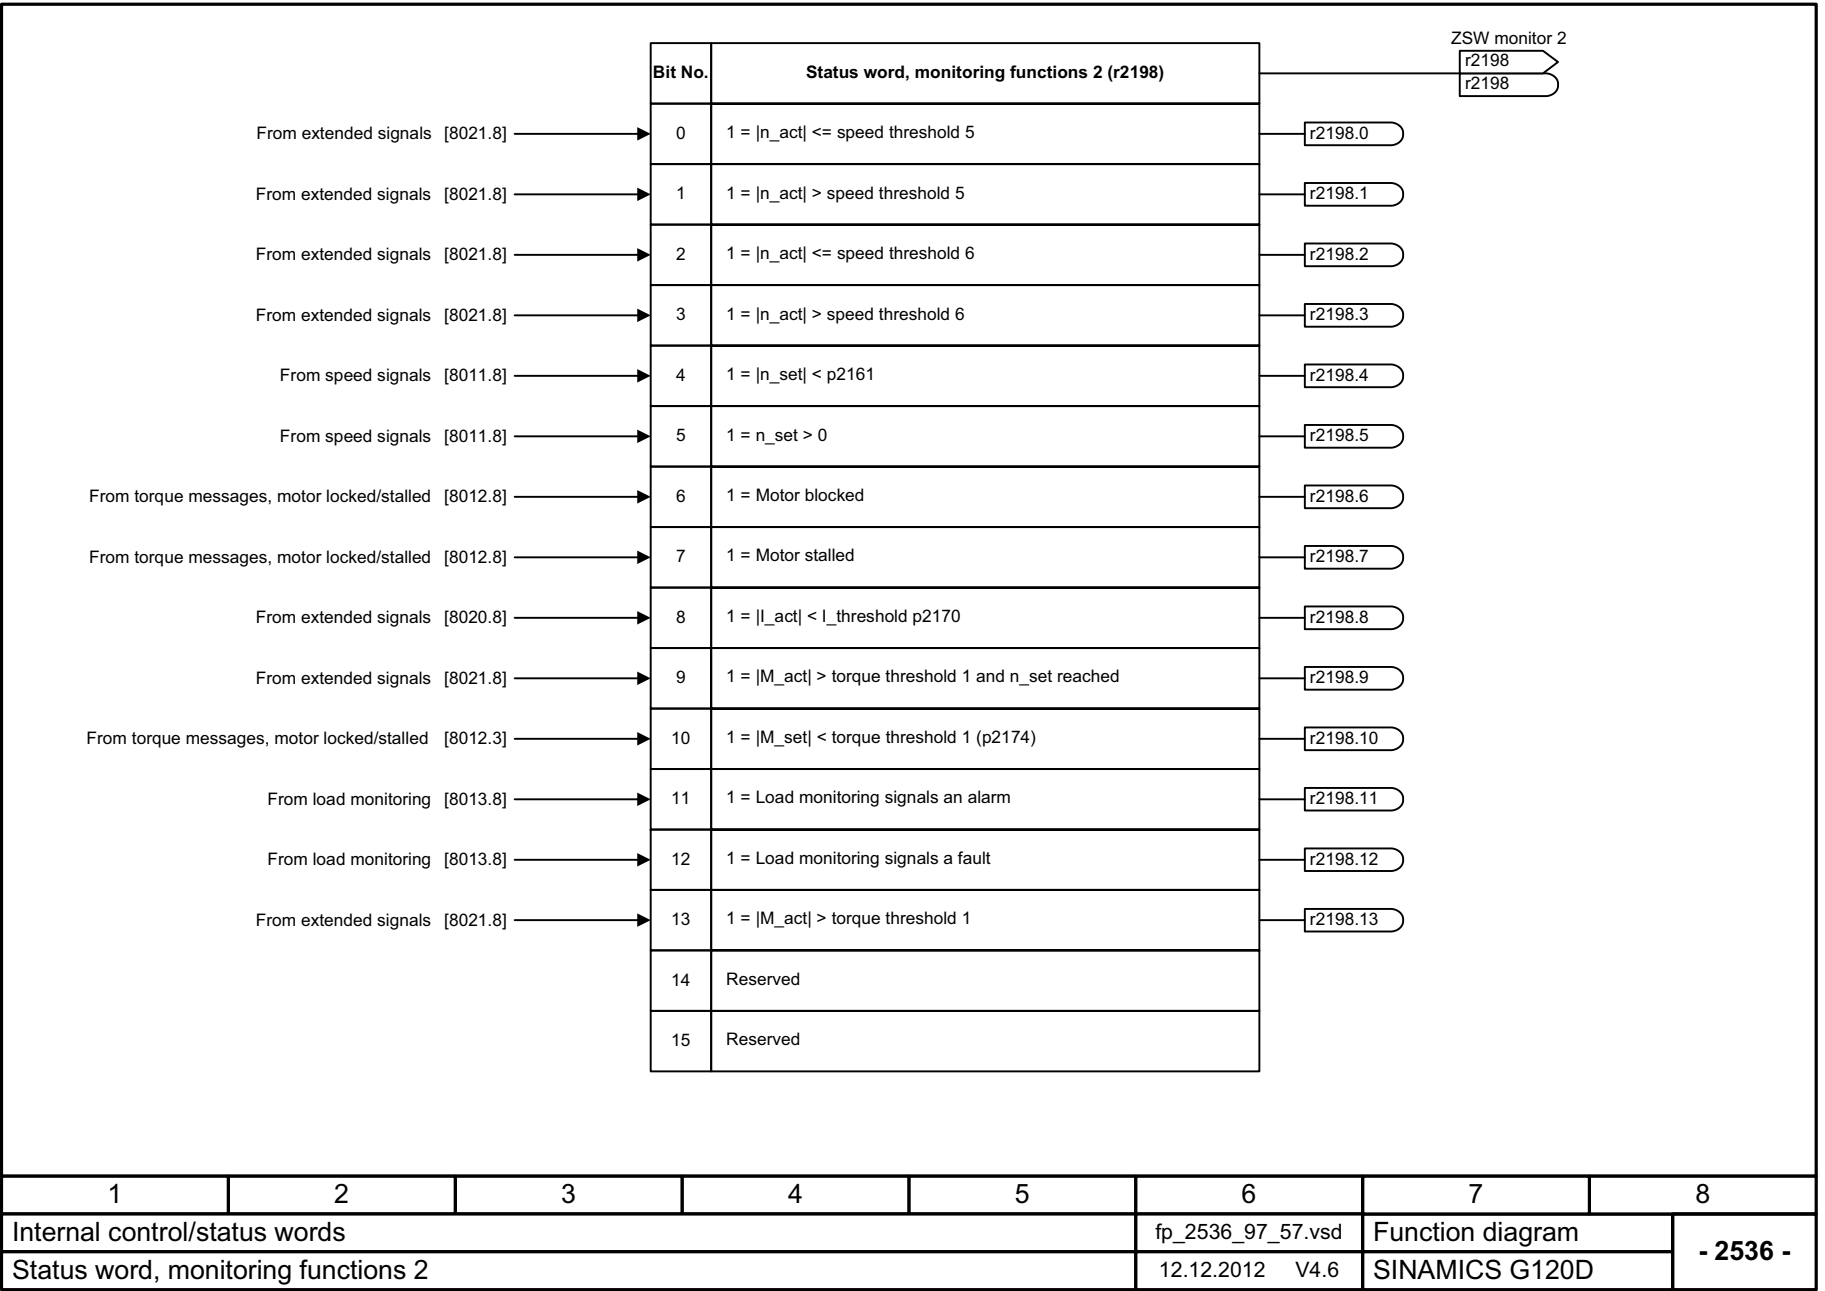


Fig. 2-44 2536 – Status word, monitoring functions 2

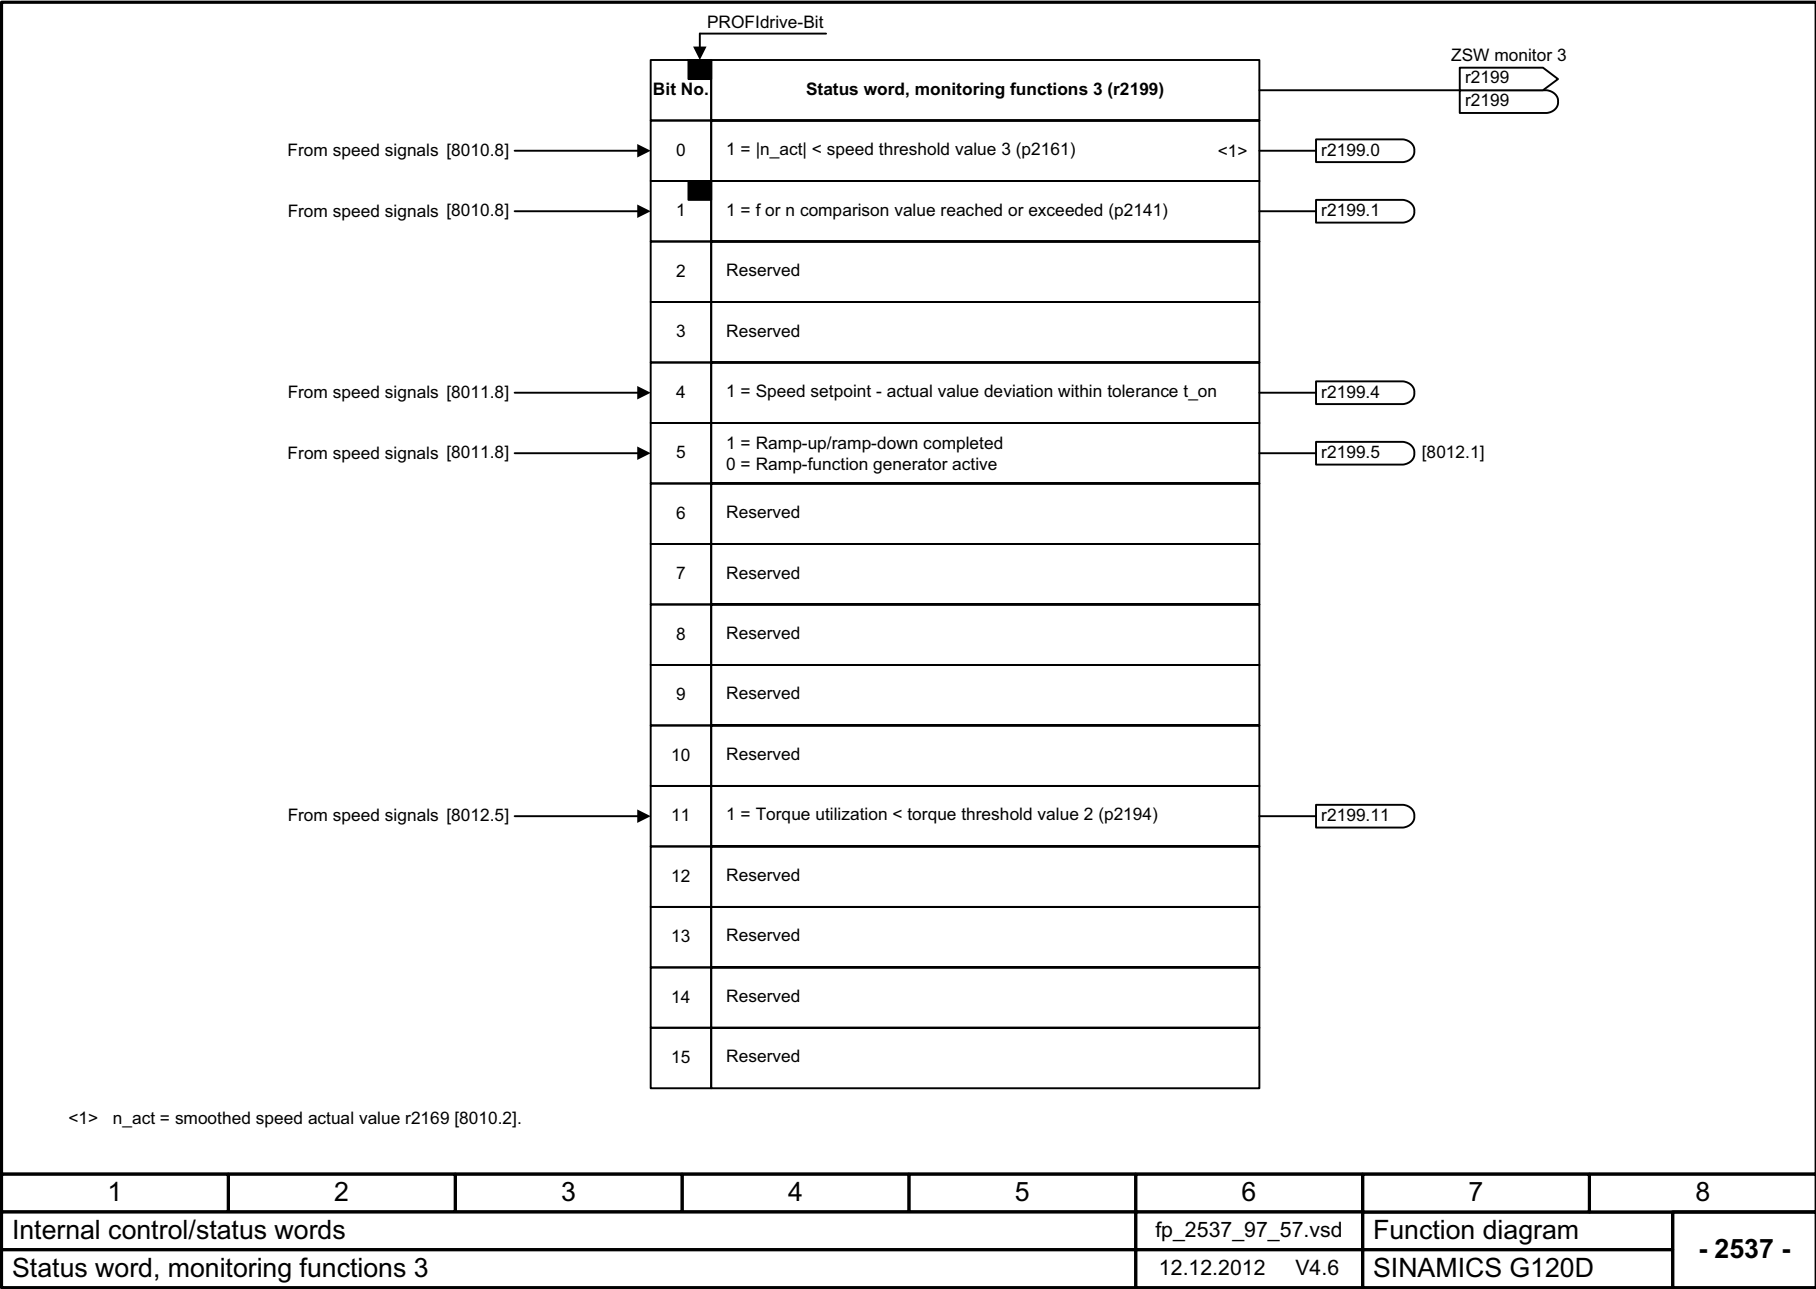


Fig. 2-45 2537 – Status word, monitoring functions 3

2-628

1	2	3	4	5	6	7	8
Internal control/status words					fp_2537_97_57.vsd	Function diagram	
Status word, monitoring functions 3					12.12.2012 V4.6	SINAMICS G120D	
- 2537 -							

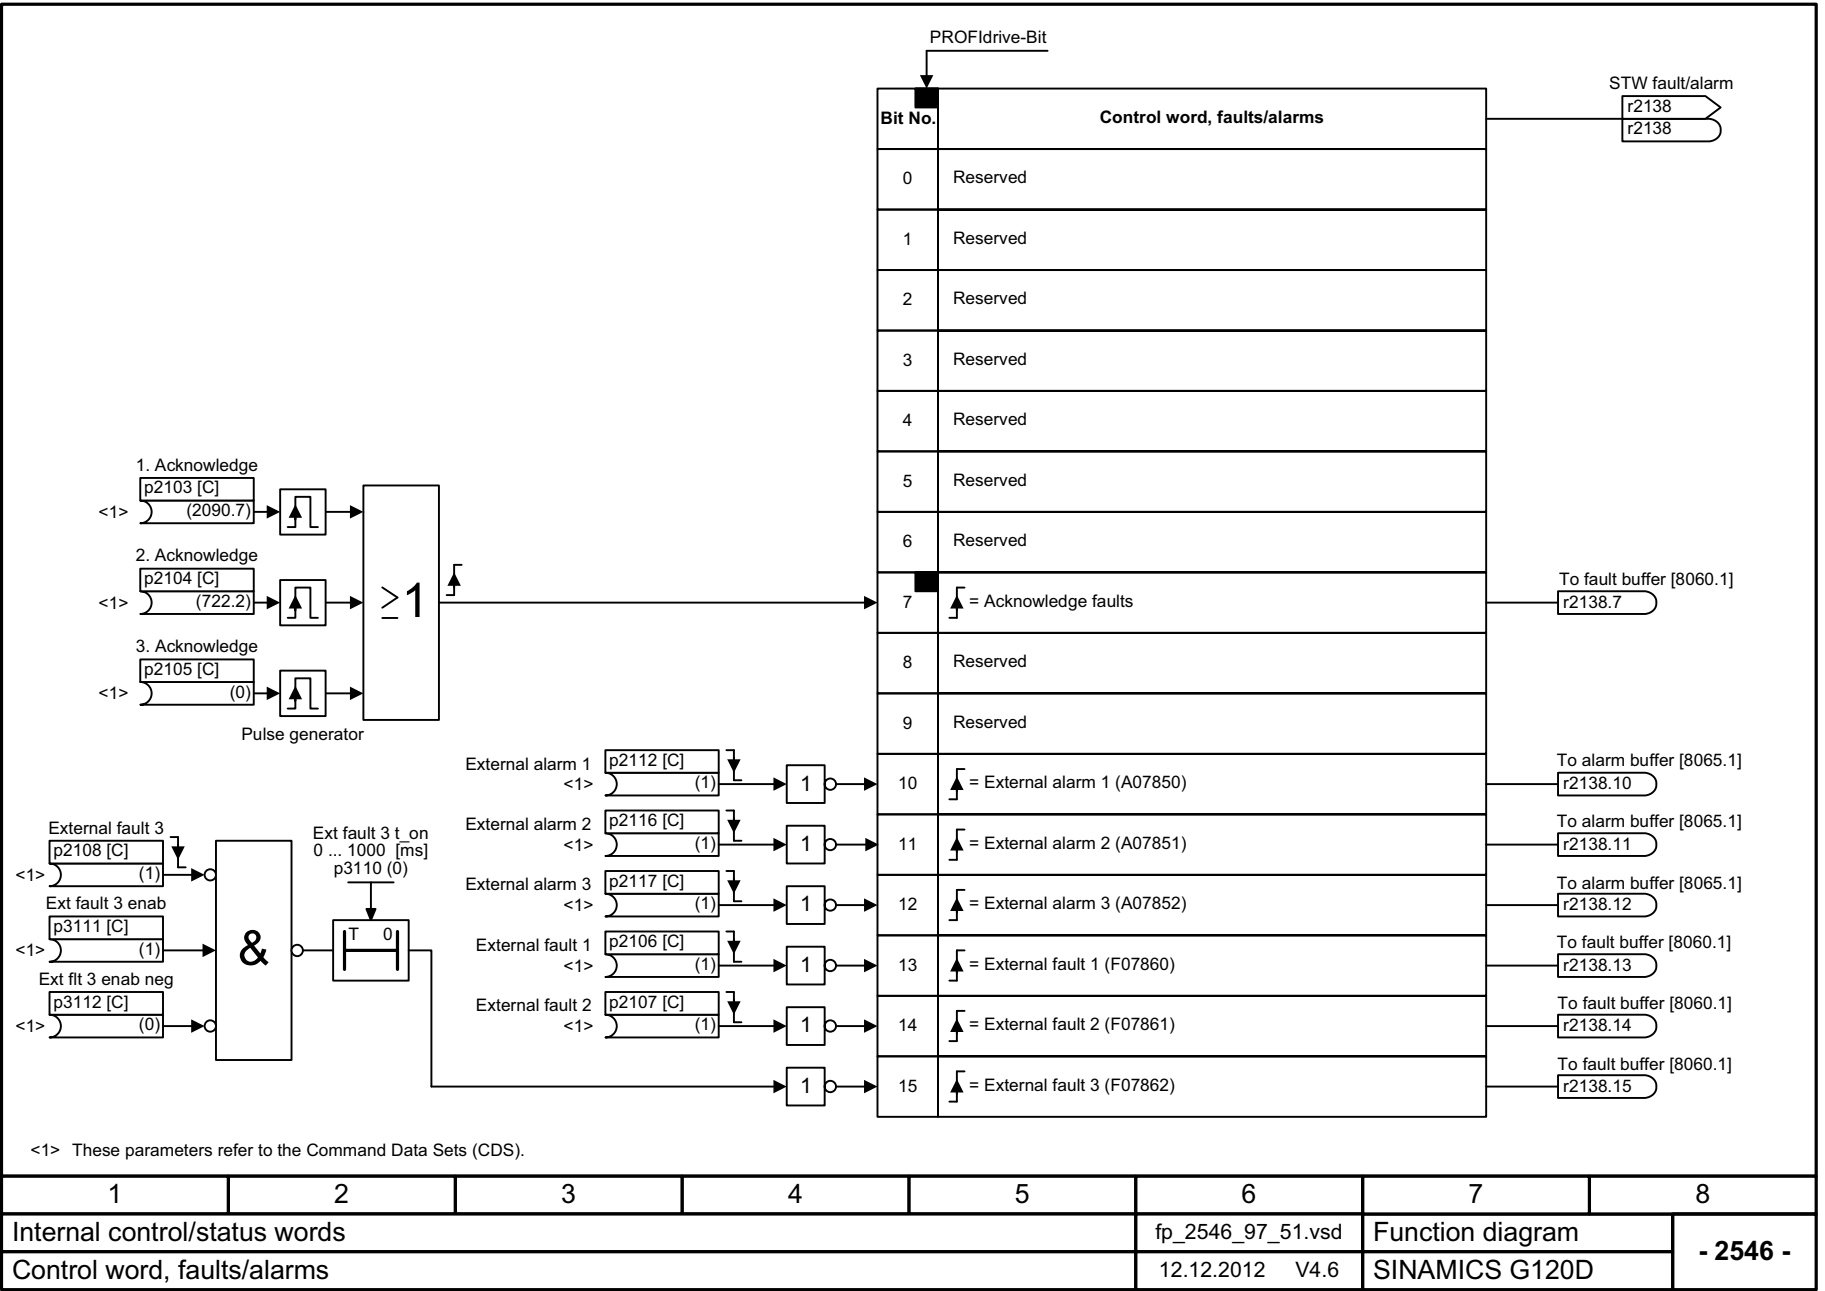


Fig. 2-46 2546 – Control word, faults/alarms

1	2	3	4	5	6	7	8
Internal control/status words					fp_2546_97_51.vsd	Function diagram	
Control word, faults/alarms					12.12.2012 V4.6	SINAMICS G120D	
							- 2546 -

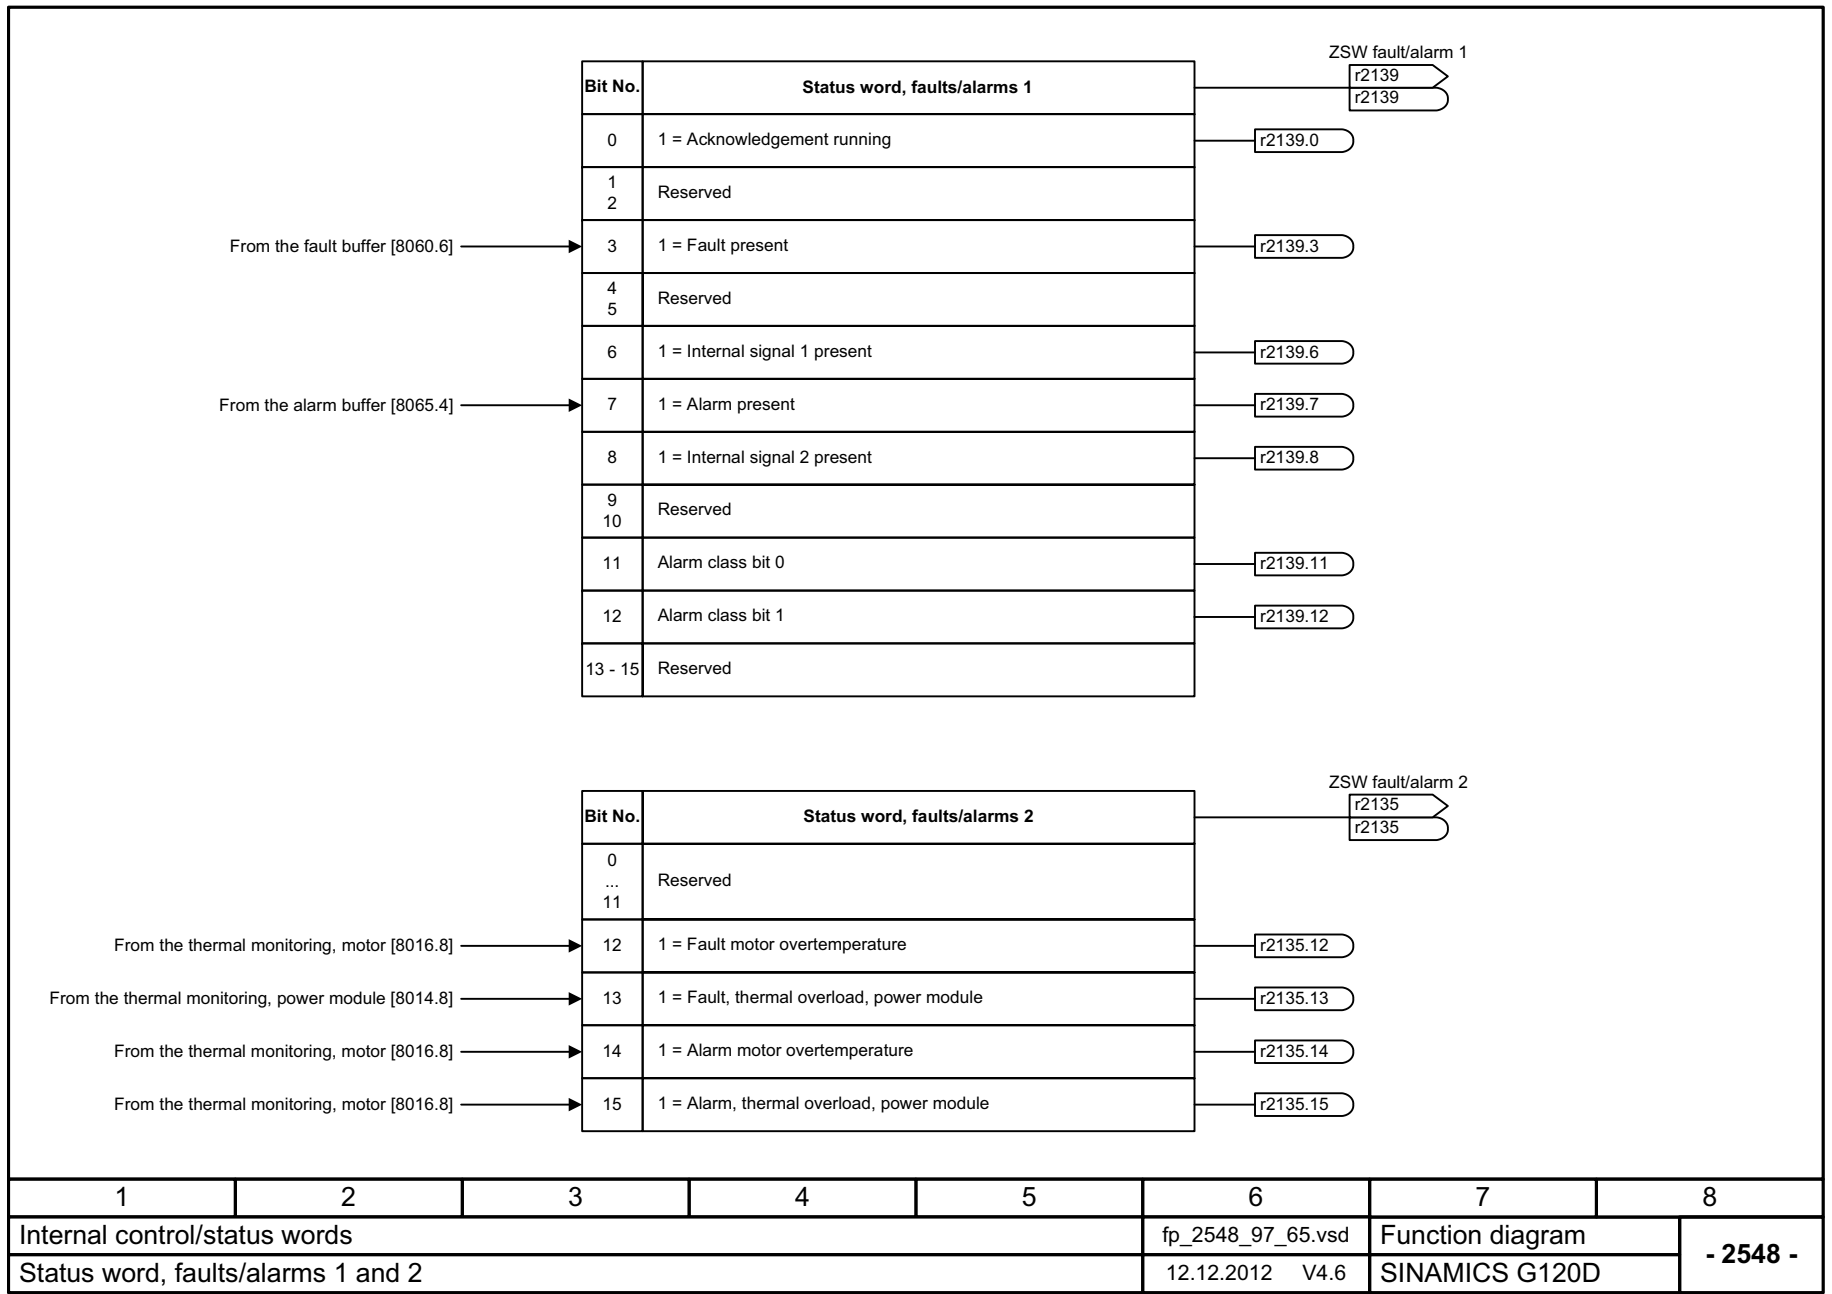


Fig. 2-47 2548 – Status word, faults/alarms 1 and 2

1	2	3	4	5	6	7	8
Internal control/status words					fp_2548_97_65.vsd	Function diagram	
Status word, faults/alarms 1 and 2					12.12.2012 V4.6	SINAMICS G120D	

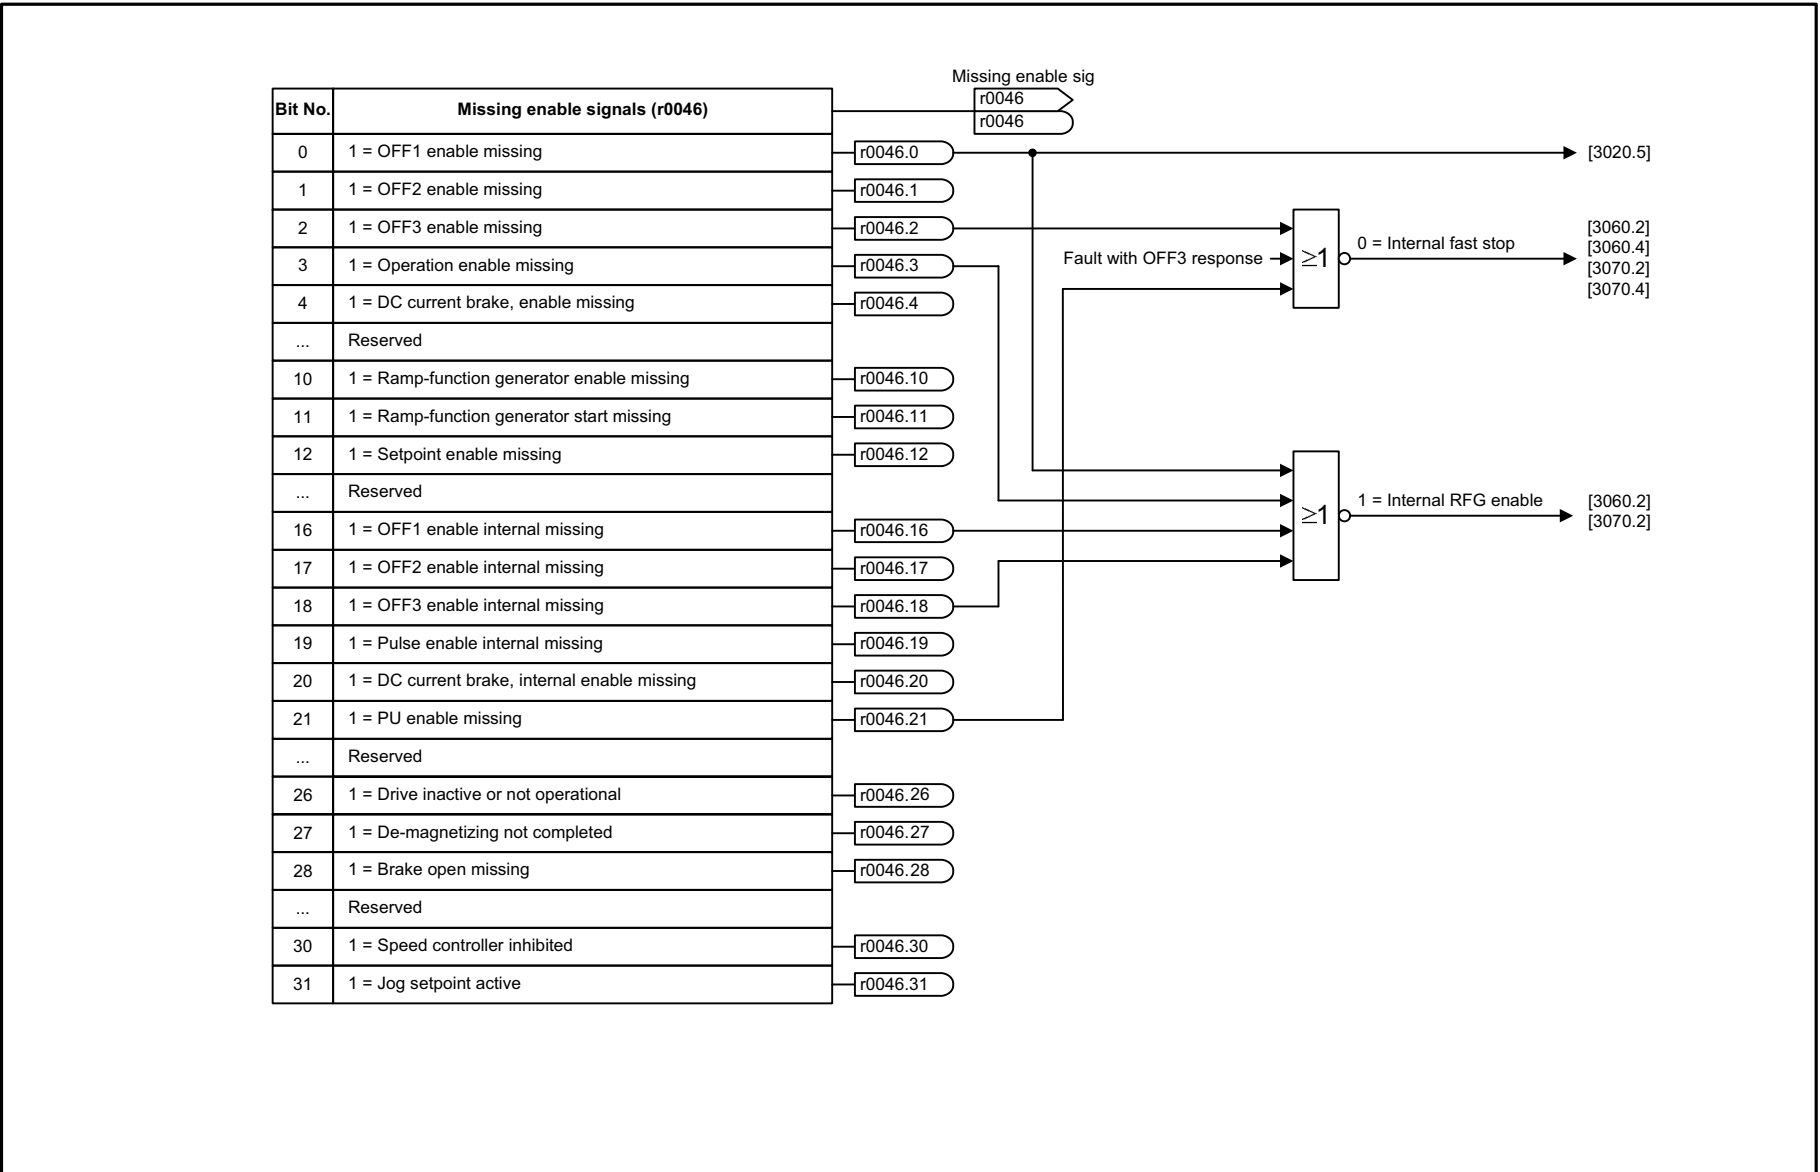


Fig. 2-48 2634 – Sequence control - Missing enables

1	2	3	4	5	6	7	8
Internal control/status words					fp_2634_97_65.vsd	Function diagram	
Sequence control - Missing enable signals					12.12.2012 V4.6	SINAMICS G120D	
							- 2634 -


2.8 Brake control

Function diagrams

2701 – Basic brake control

2-633

Fig. 2-49 2701 – Basic brake control

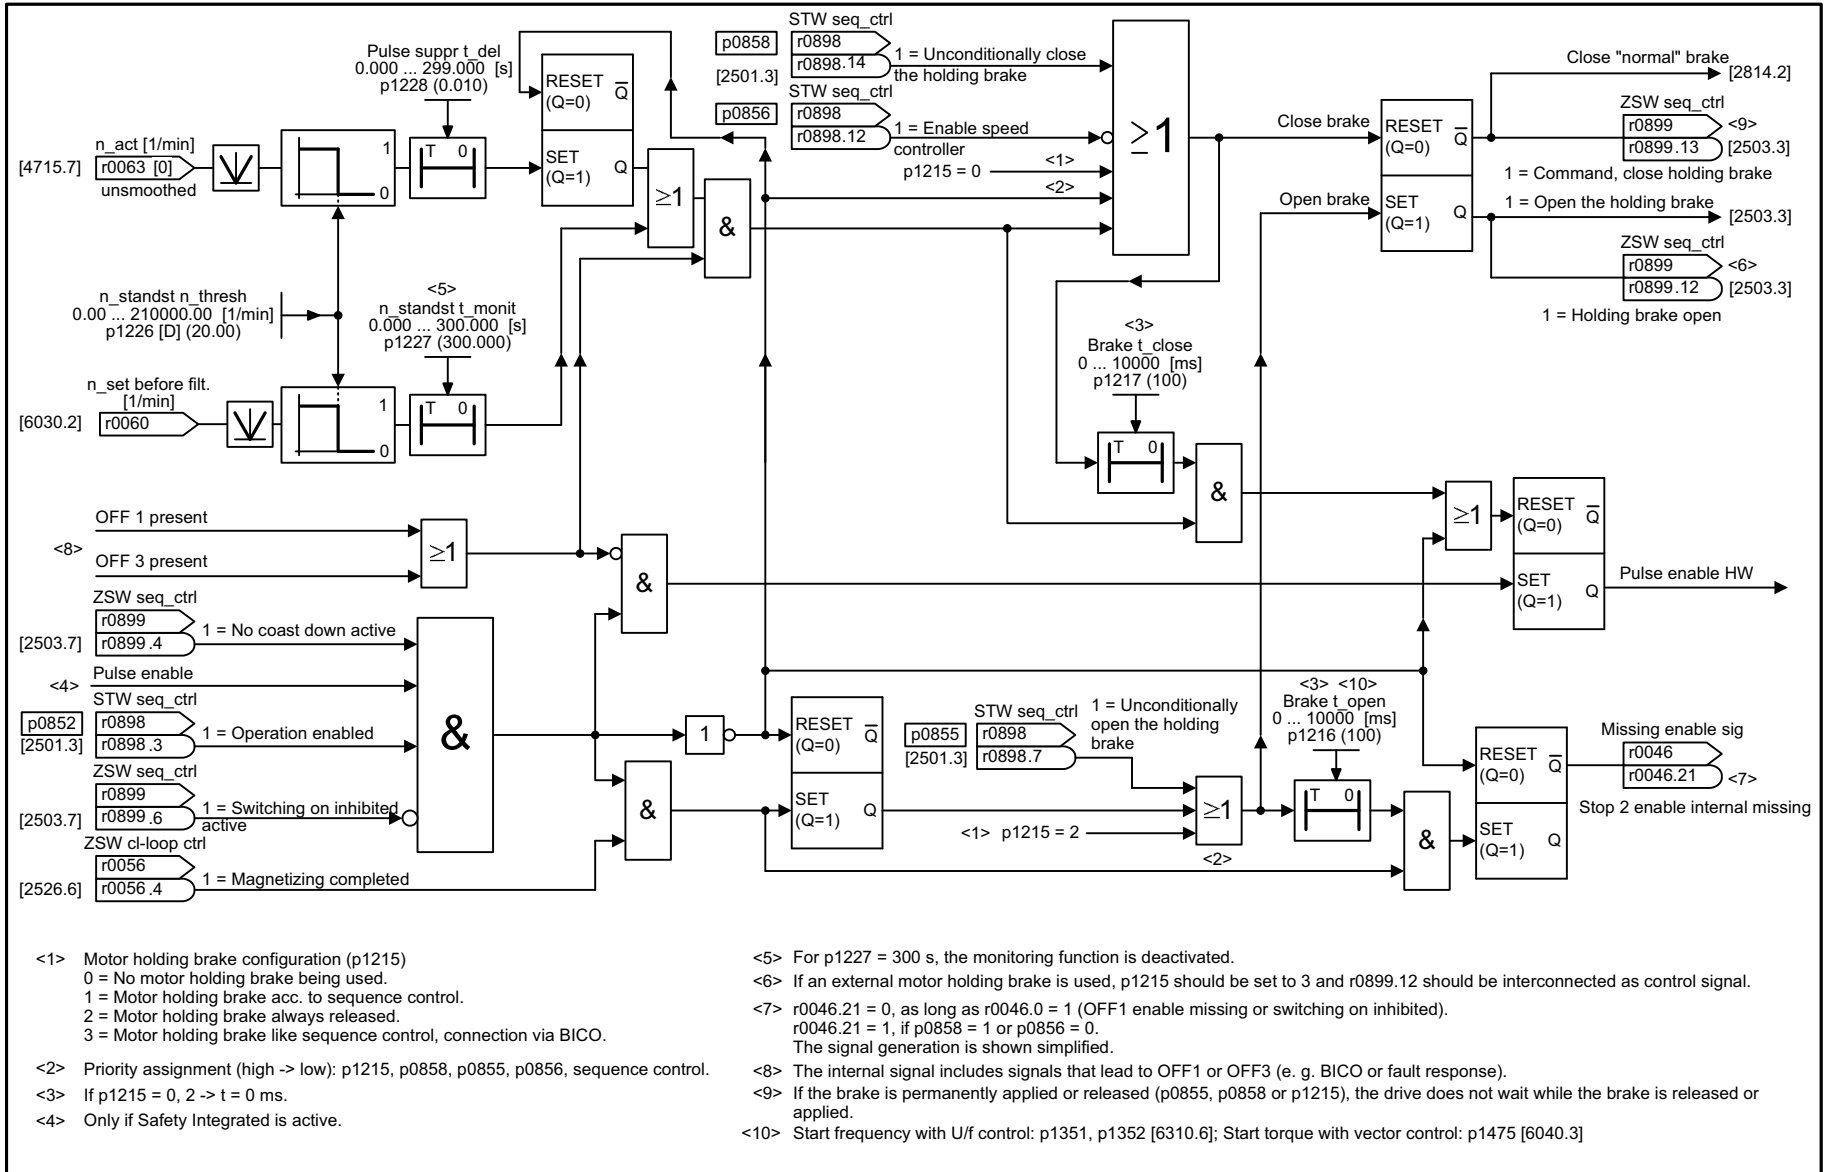


1	2	3	4	5	6	7	8
Braking Control					fp_2701_97_57.vsd	Function diagram	
Basic braking control					12.12.2012 V4.6	SINAMICS G120D	
							- 2701 -

2.9 Safety Integrated Basic Functions

Function diagrams

2800 – Parameter manager	2-635
2802 – Monitoring and faults/alarms	2-636
2804 – Status words	2-637
2810 – STO: Safe Torque Off	2-638
2812 – F-DI: Fail-safe digital input	2-639

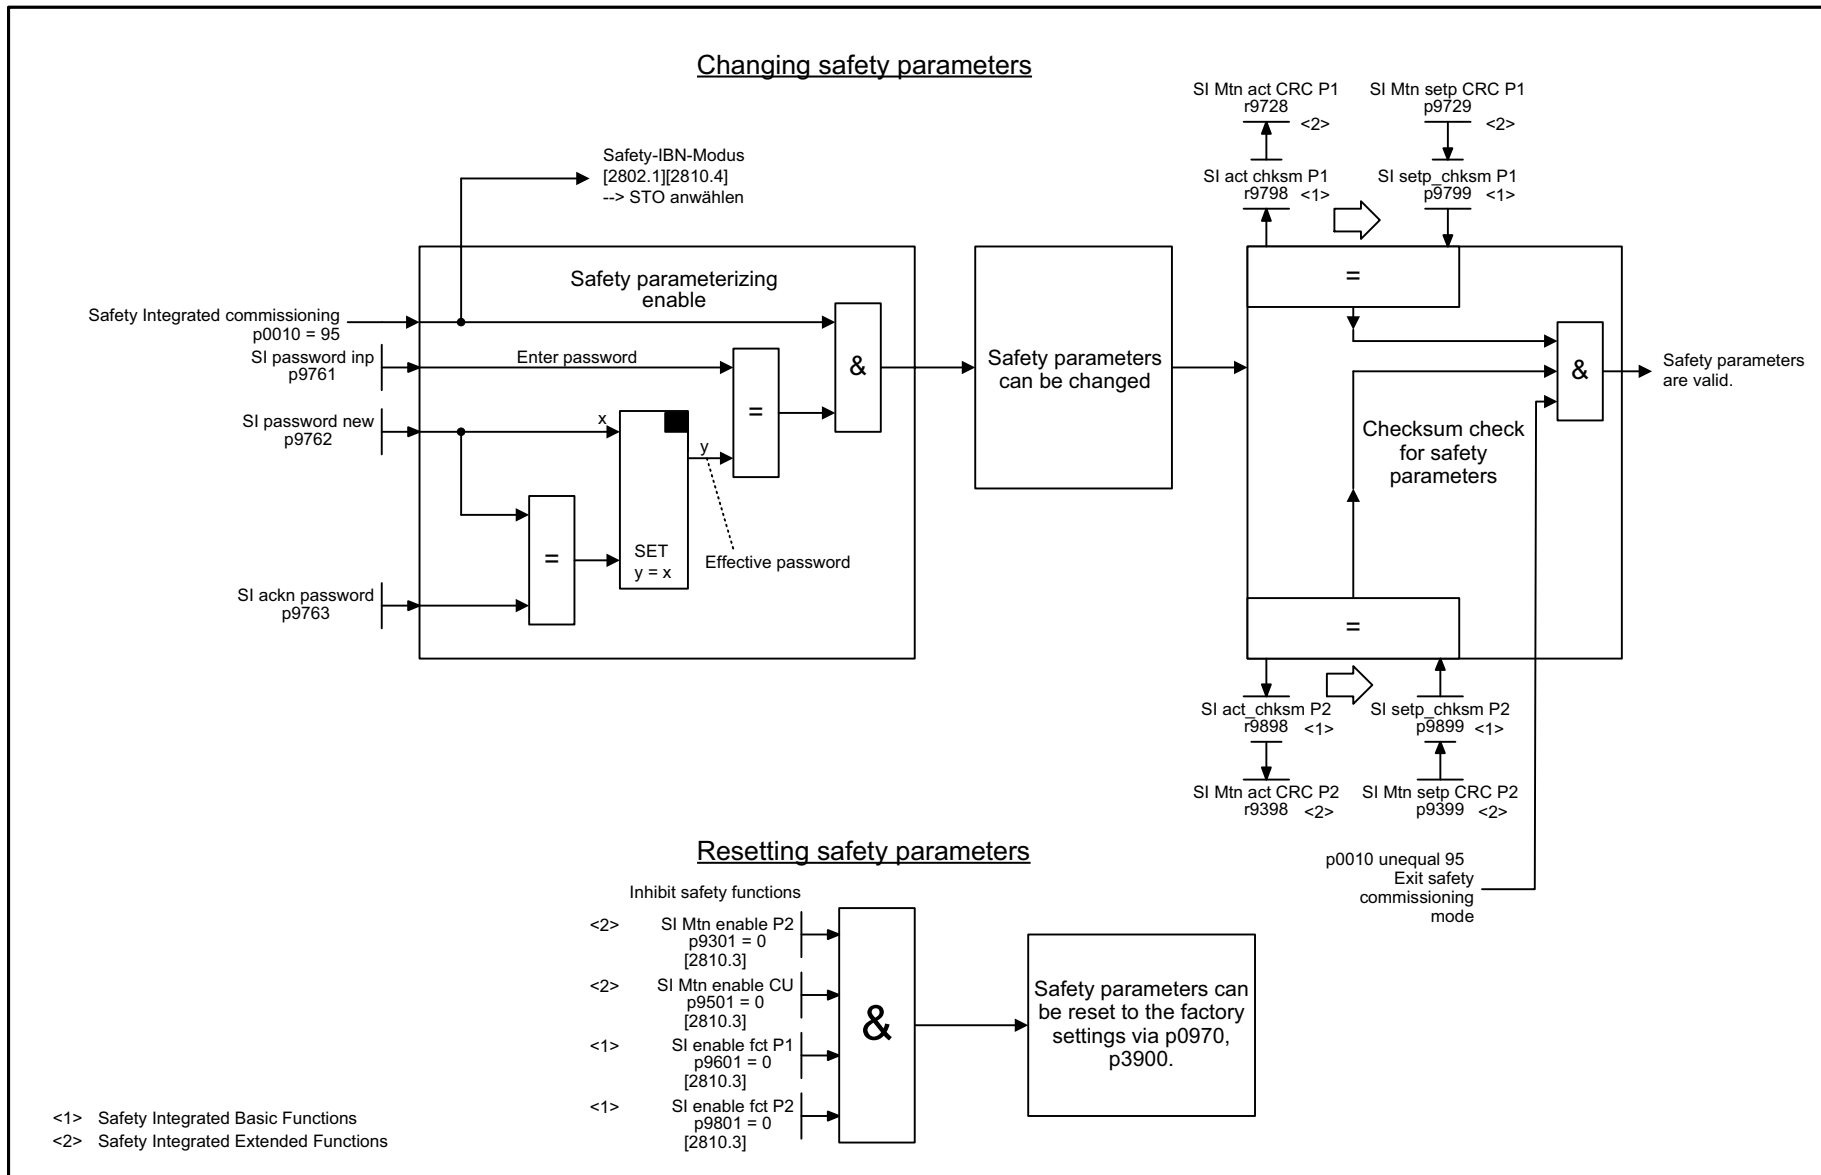

1	2	3	4	5	6	7	8
Safety Integrated Basic Functions					fp_2800_97_58.vsd	Function diagram	
Parameter Manager					12.12.2012 V4.6	SINAMICS G120D	
							- 2800 -

Fig. 2-50 2800 – Parameter manager

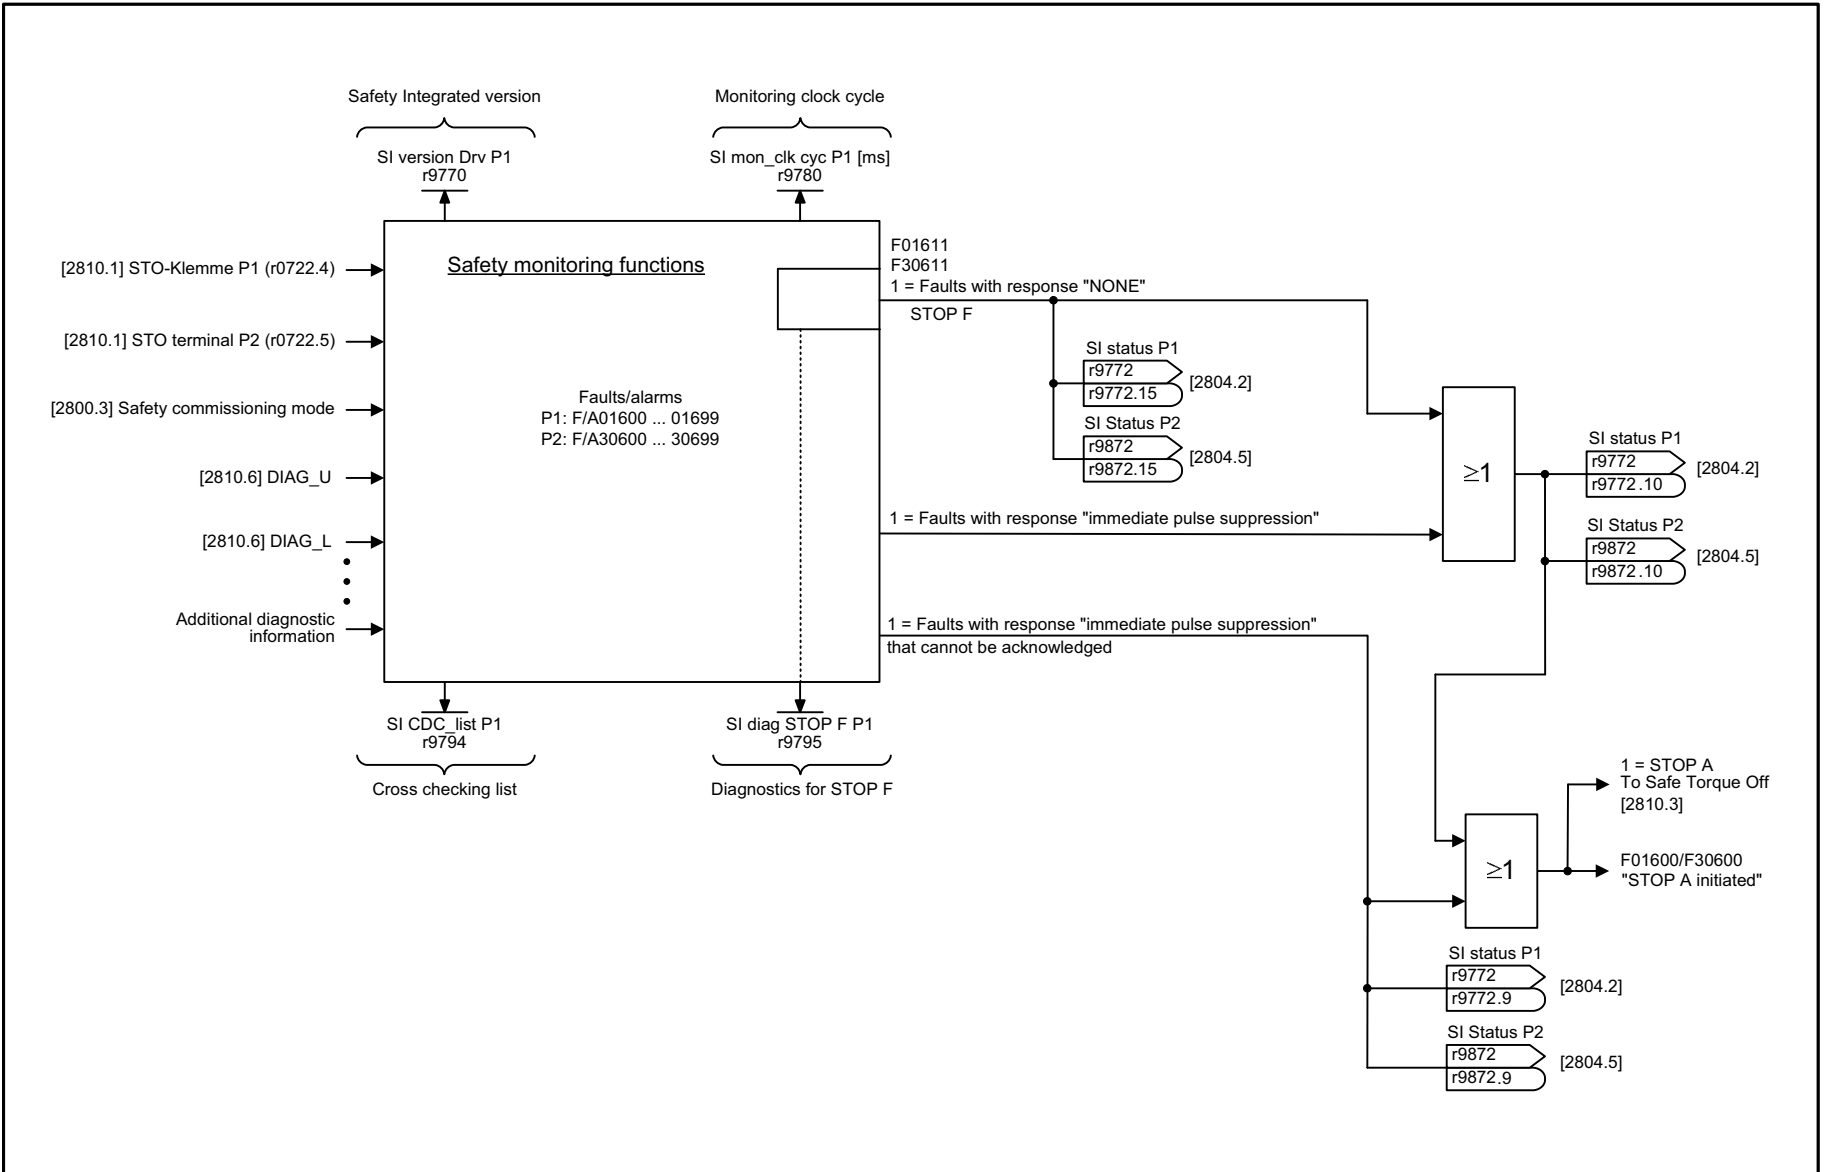


Fig. 2-51 2802 – Monitoring and faults/alarms

1	2	3	4	5	6	7	8
Safety Integrated Basic Functions					fp_2802_97_69.vsd	Function diagram	
Monitoring functions and faults/alarms					12.12.2012 V4.6	SINAMICS G120D	
							- 2802 -

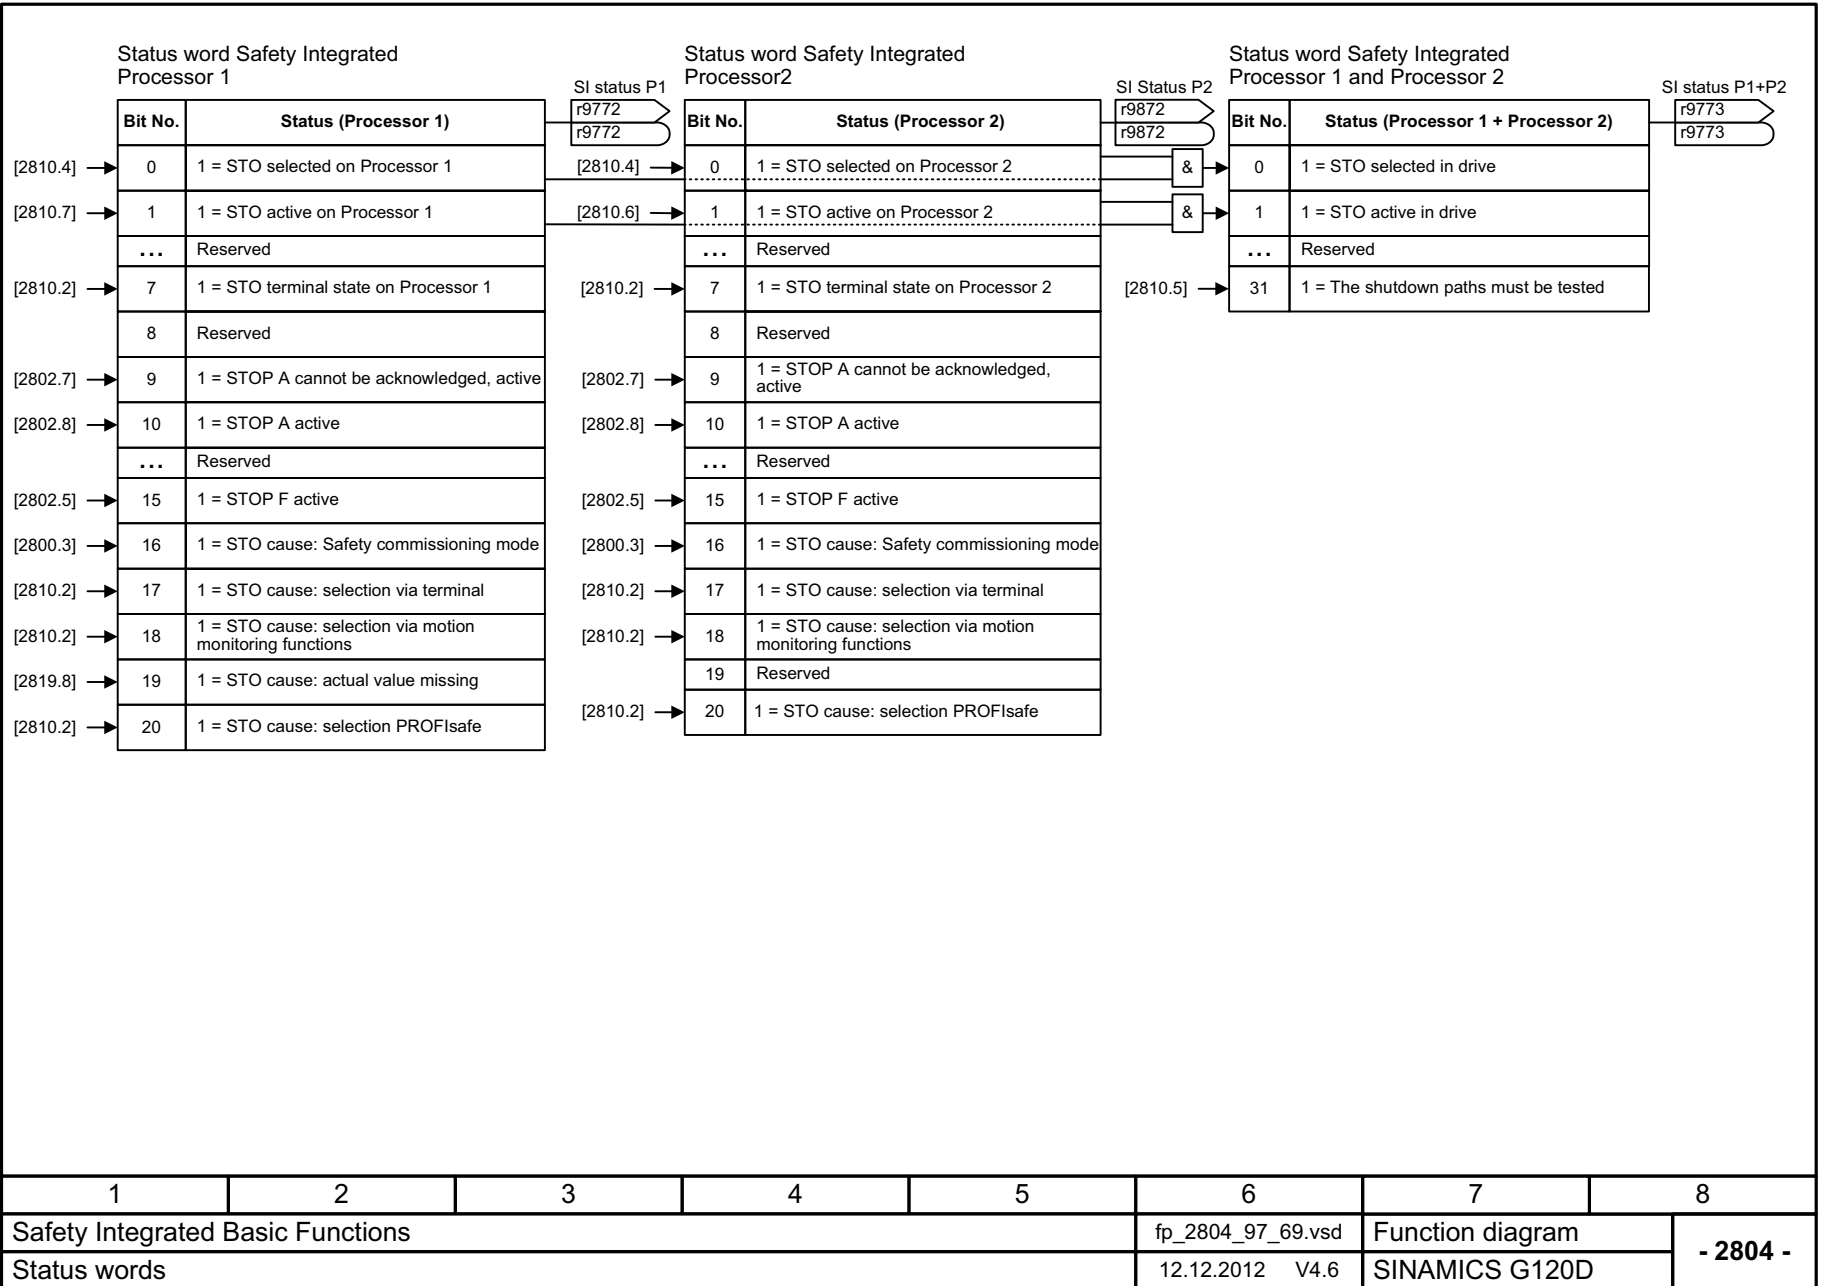


Fig. 2-52 2804 – Status words

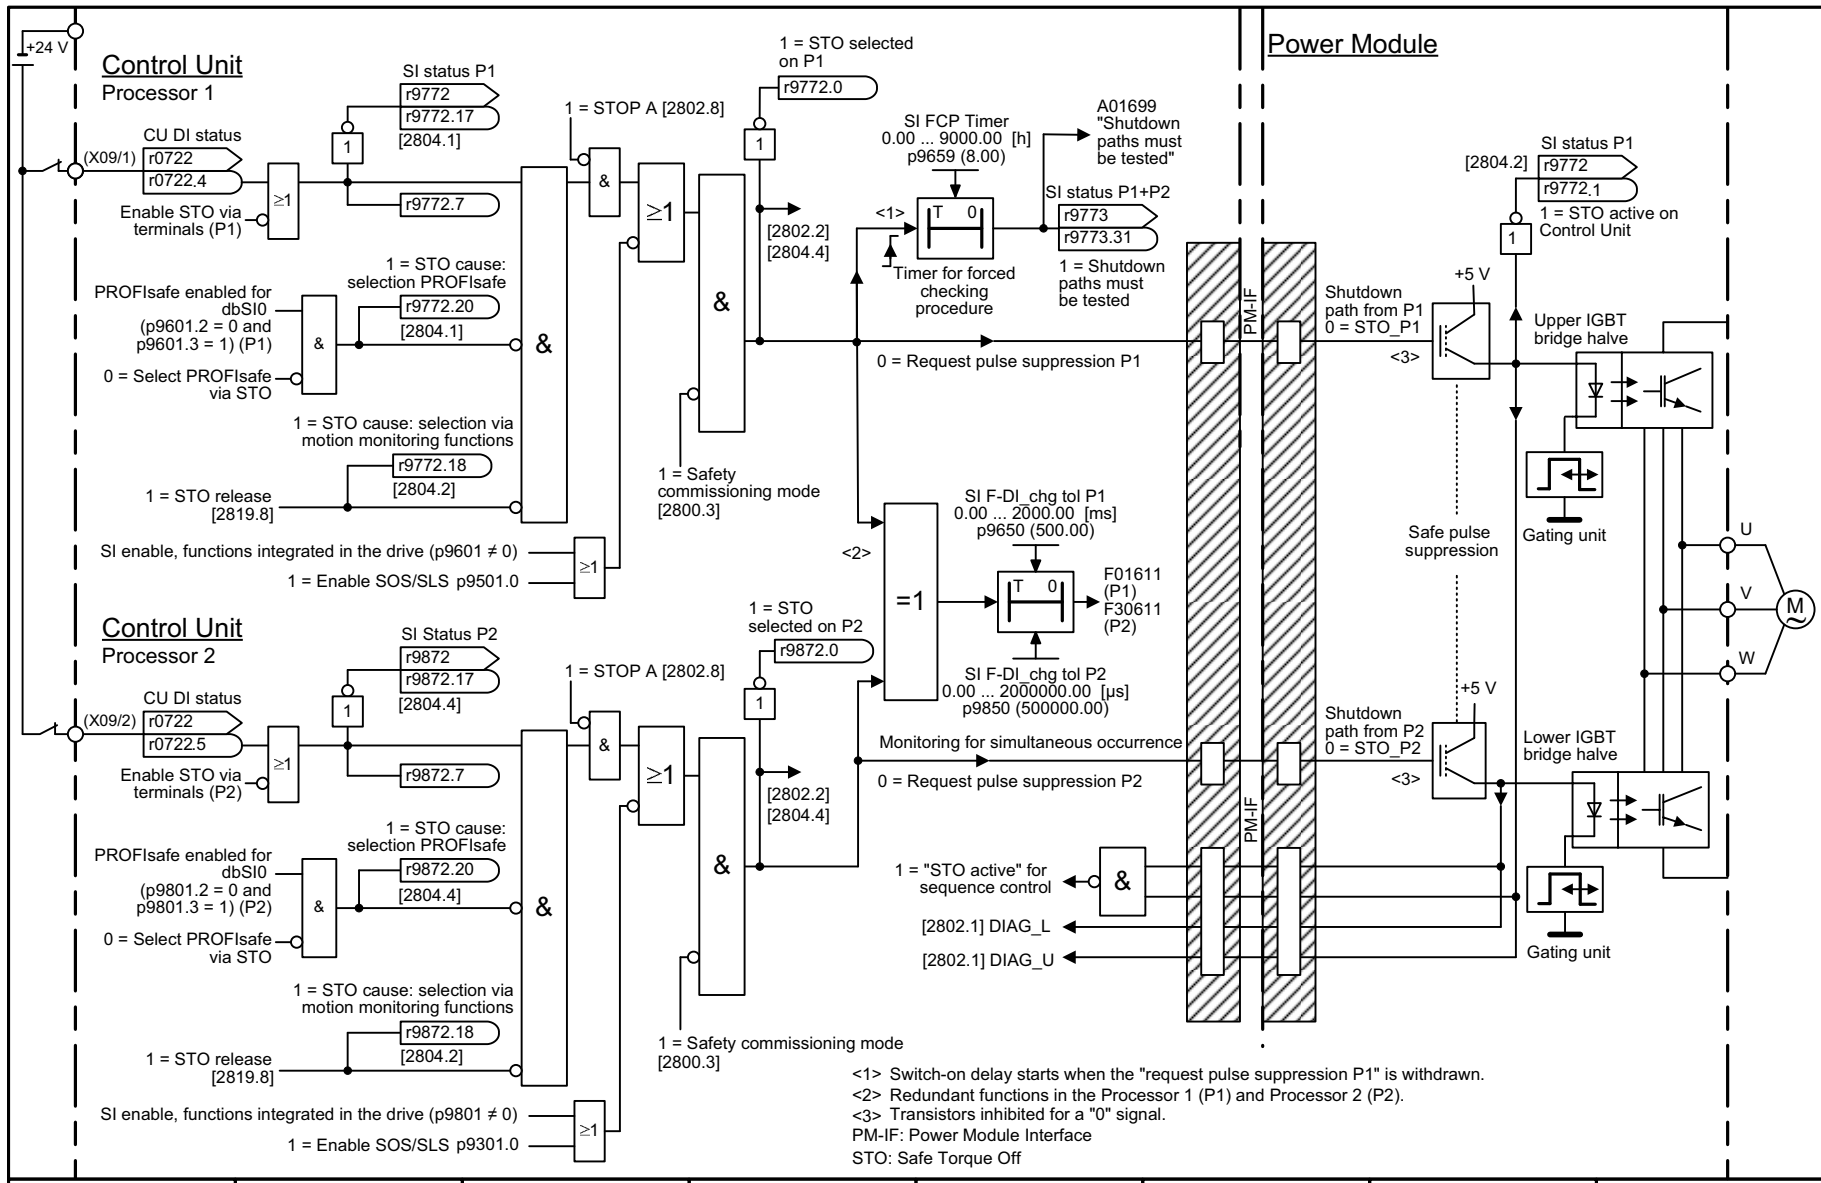


Fig. 2-53 2810 – STO: Safe Torque Off

2-638

© Siemens AG 2012 - 2013 All Rights Reserved
SINAMICS G120D List Manual (LH14), 01/2013

1	2	3	4	5	6	7	8
Safety Integrated Basic Functions					fp_2810_97_57.vsd	Function diagram	
STO (Safe Torque Off)					12.12.2012 V4.6	SINAMICS G120D	
- 2810 -							

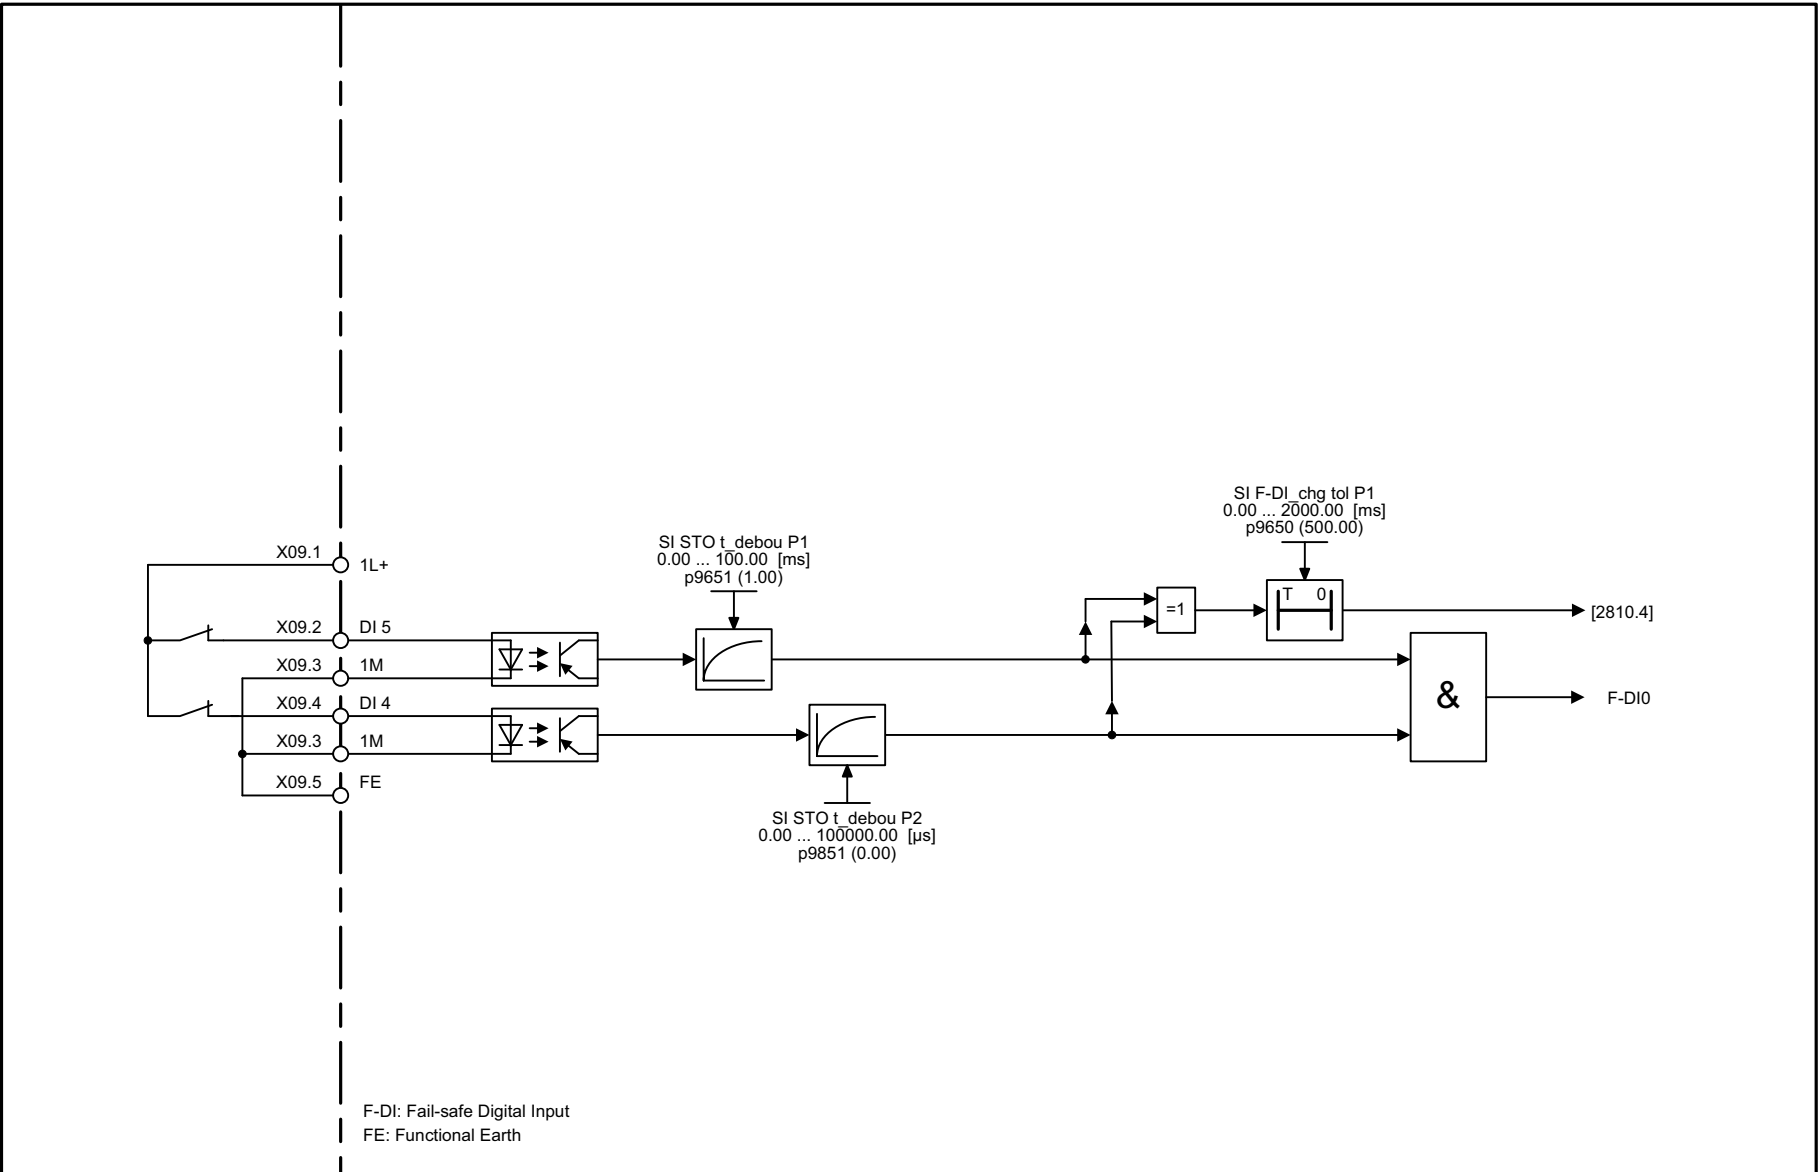



Fig. 2-54 2812 – F-DI: Fail-safe digital input

1	2	3	4	5	6	7	8
Safety Integrated Basic Functions					fp_2812_97_04.vsd	Function diagram	
F-DI (Fail-safe Digital Input)					12.12.2012 V4.6	SINAMICS G120D	
							- 2812 -

2.10 Safety Integrated Extended Functions

Function diagrams


2819 – SS1: Safe Stop 1, internal STOP A, B, F	2-641
2820 – SLS: Safely-Limited Speed	2-642
2823 – SSM: Safe Speed Monitor	2-643
2824 – SDI: Safe Direction	2-644
2840 – PROFIsafe control and status word	2-645
2850 – Fail-safe digital inputs (F-DI 0 ... F-DI 2)	2-646
2853 – Fail-safe digital output (F-DO 0)	2-647
2855 – F-DI assignment	2-648
2856 – Safe state selection	2-649
2857 – F-DO assignment	2-650
2858 – Extended Functions via PROFIsafe (9601.2 = 1 and 9601.3 = 1)	2-651

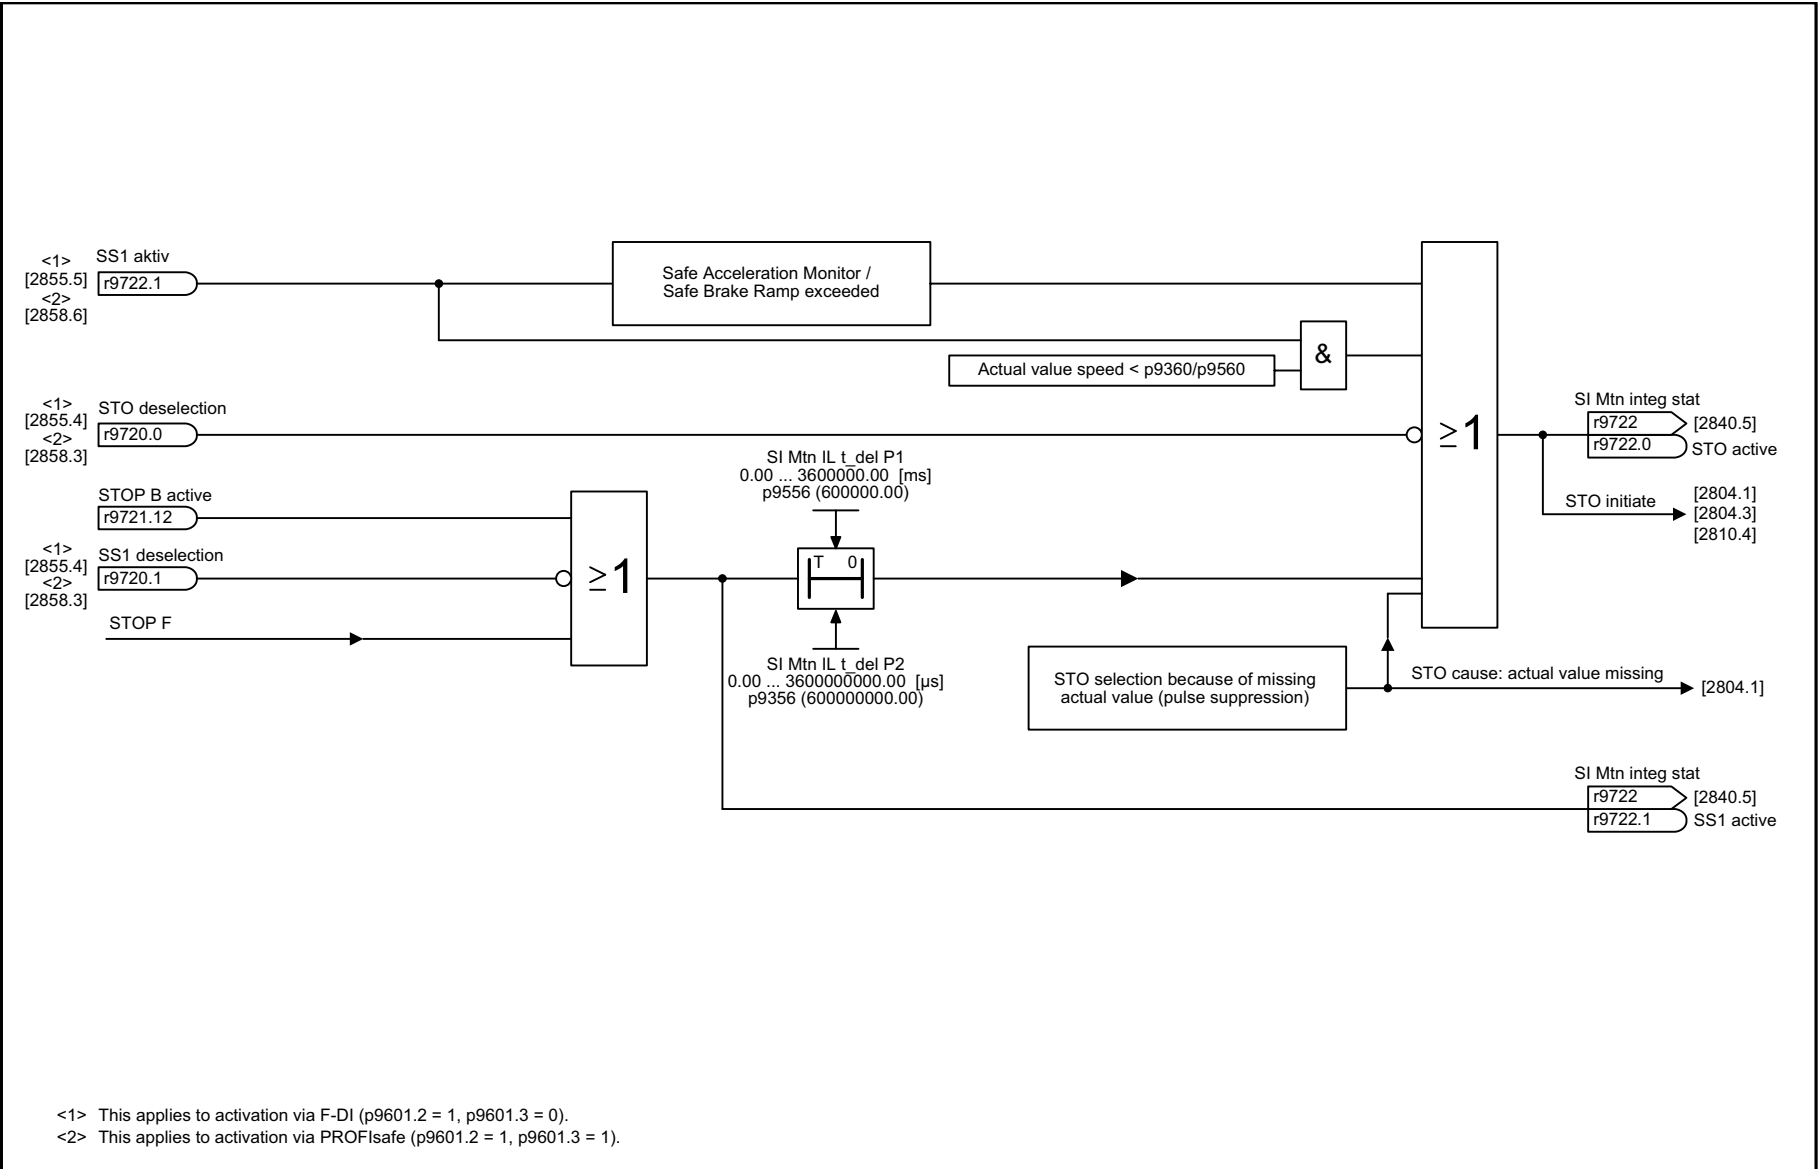

<1> This applies to activation via F-DI (p9601.2 = 1, p9601.3 = 0).
 <2> This applies to activation via PROFSafe (p9601.2 = 1, p9601.3 = 1).

1	2	3	4	5	6	7	8
Safety Integrated Extended Functions					fp_2819_97_58.vsd	Function diagram	
SS1 (Safe Stop 1), Internal STOP A, B, F					12.12.2012 V4.6	SINAMICS G120D	
- 2819 -							


Fig. 2-55 2819 – SS1 : Safe Stop 1, Internal STOP A, B, F

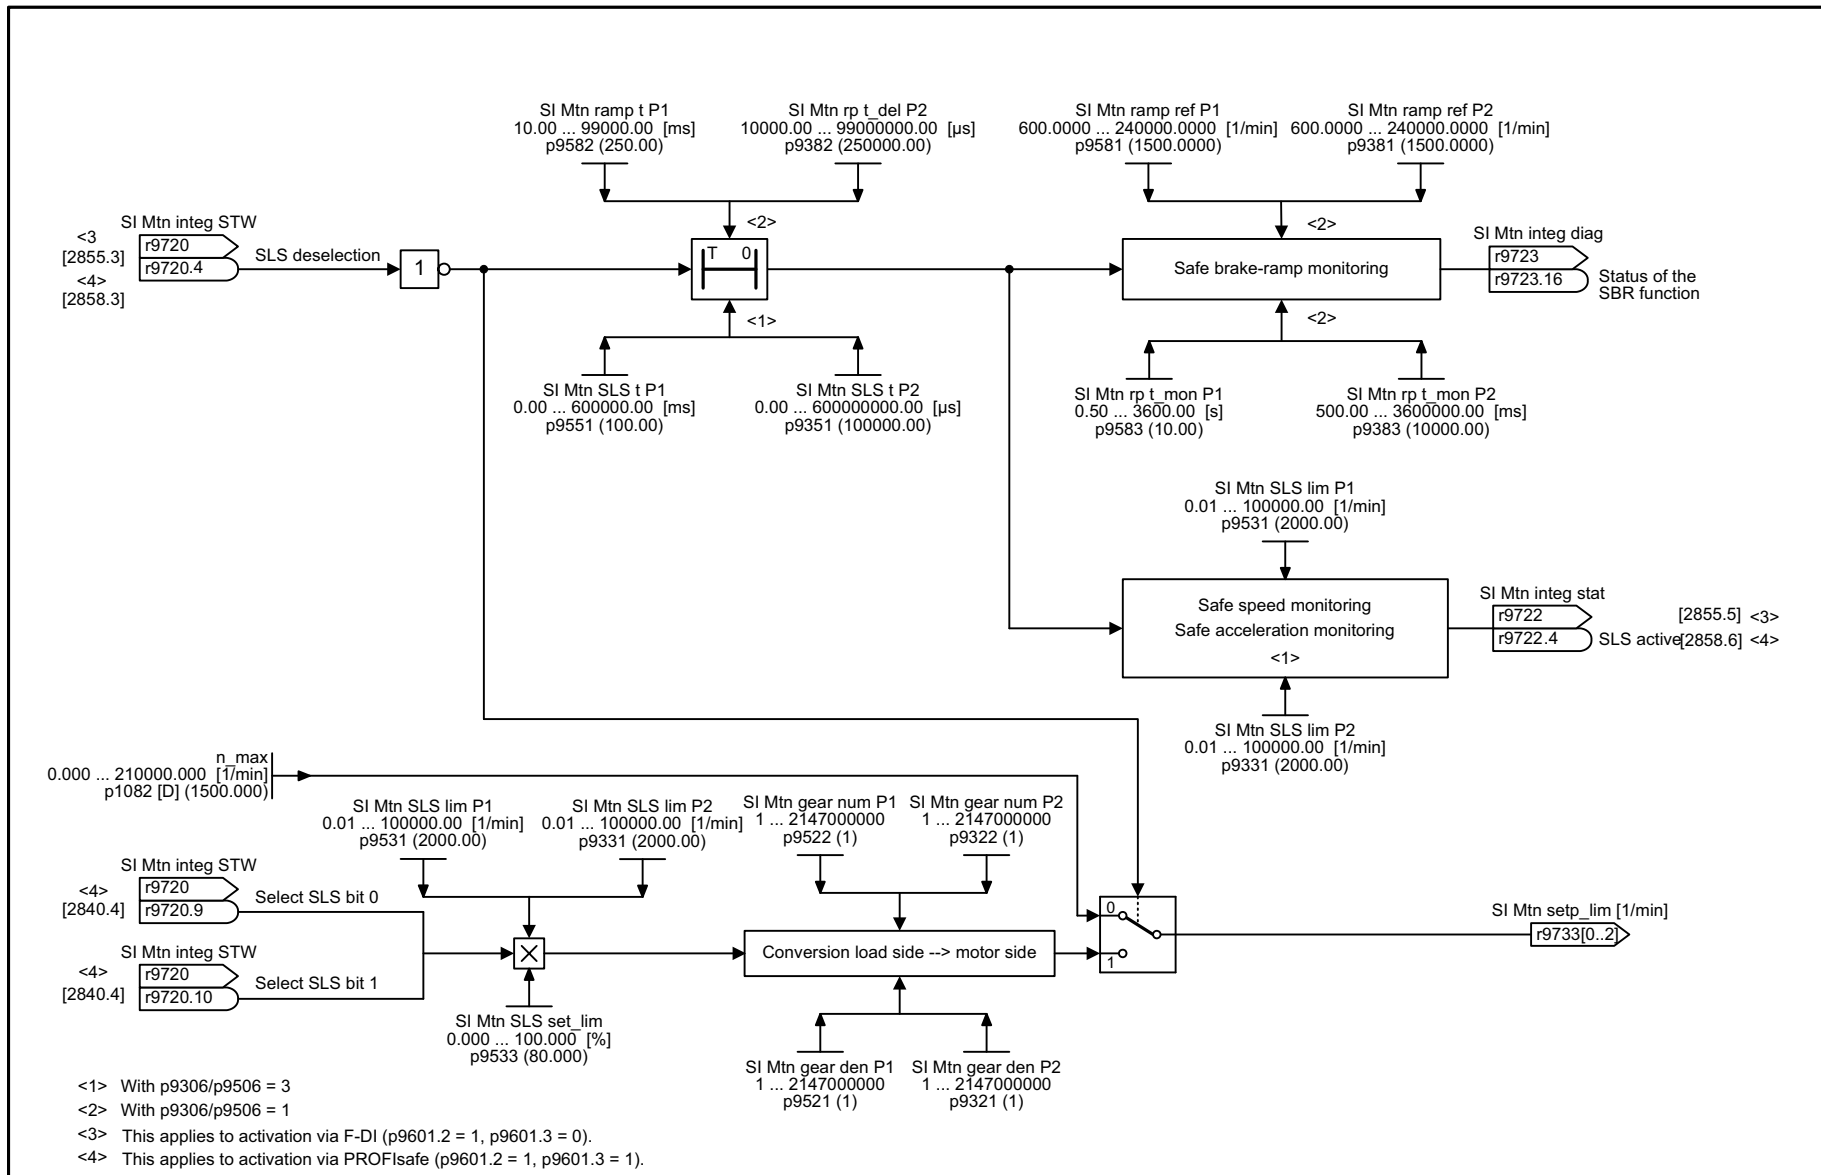

1	2	3	4	5	6	7	8
Safety Integrated Extended Functions					fp_2820_97_58.vsd	Function diagram	
SLS (Safely-Limited Speed)					12.12.2012 V4.6	SINAMICS G120D	
							- 2820 -

Fig. 2-56 2820 – SLS: Safely-Limited Speed


2-642

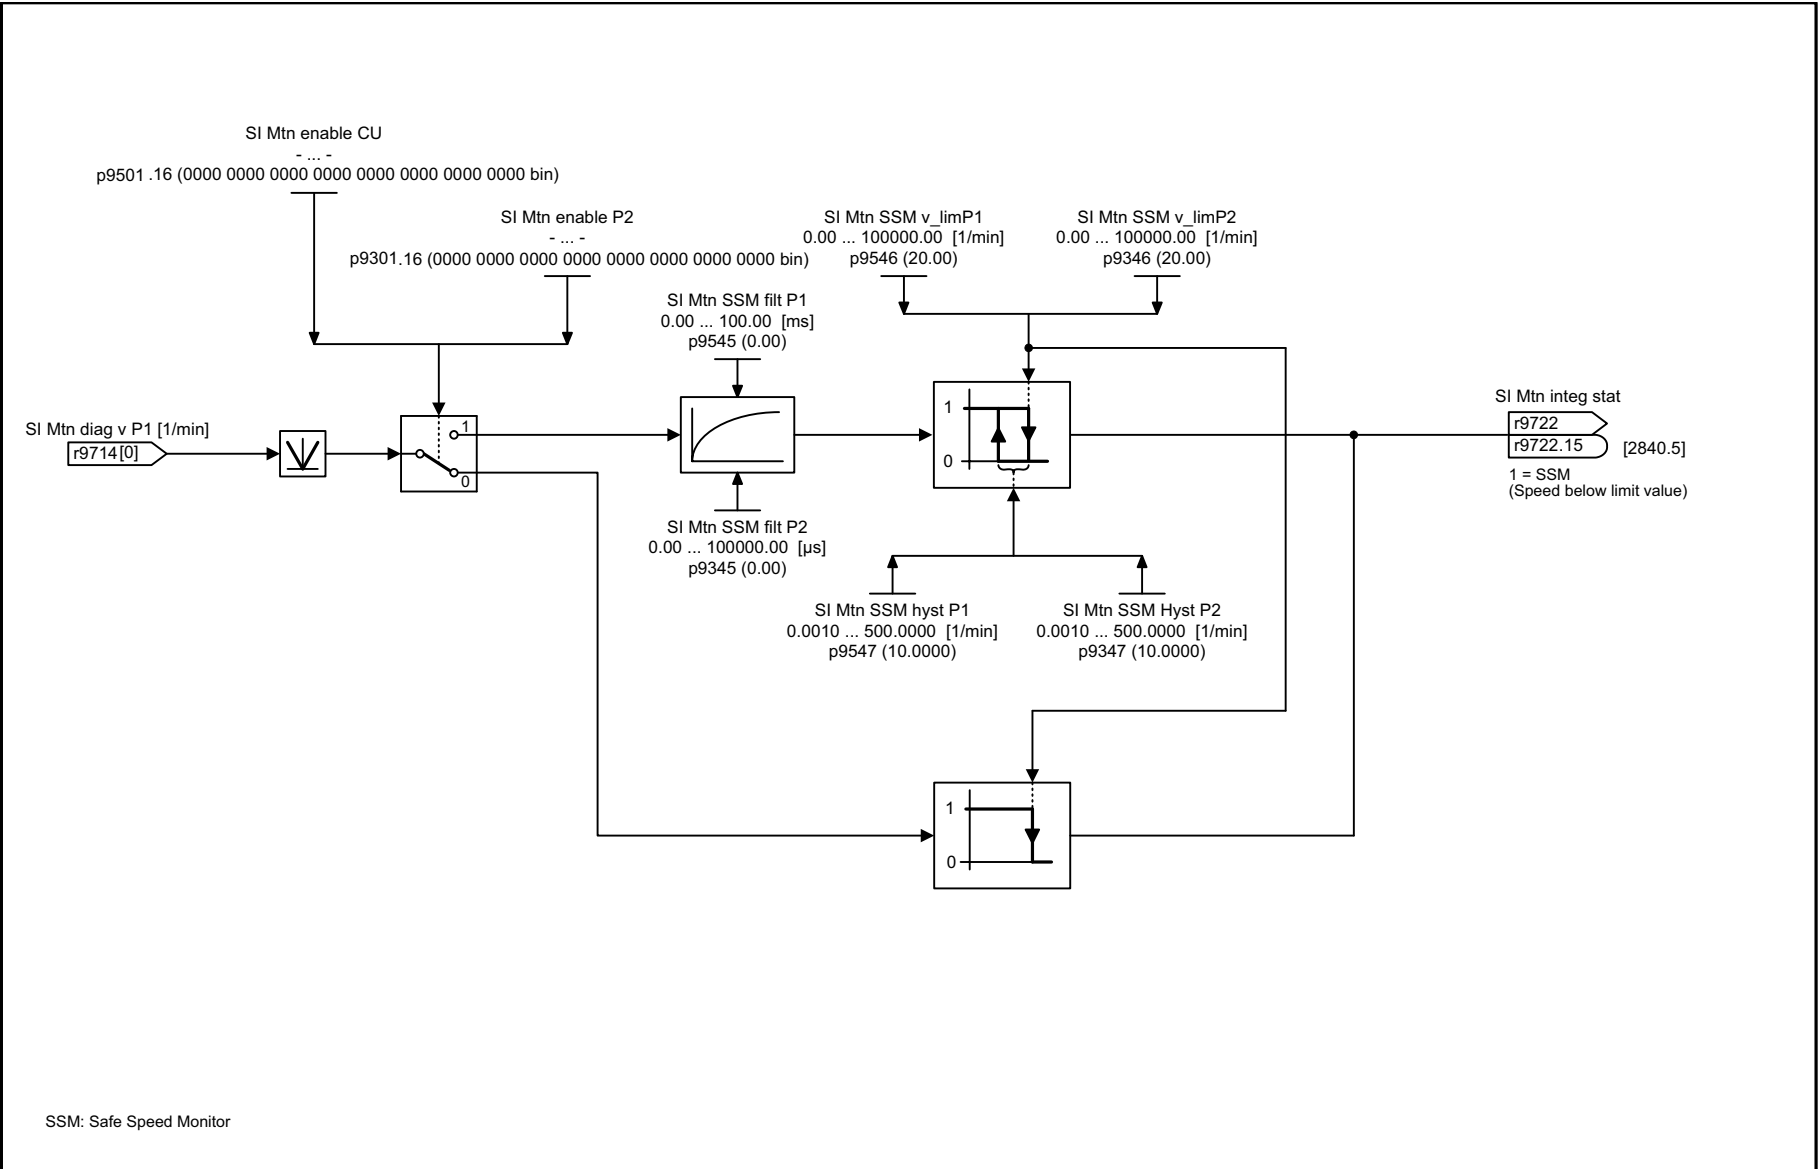

SSM: Safe Speed Monitor

1	2	3	4	5	6	7	8
Safety Integrated Extended Functions					fp_2823_97_58.vsd	Function diagram	
SSM (Safe Speed Monitor)					12.12.2012 V4.6	SINAMICS G120D	
- 2823 -							

Fig. 2-57 2823 – SSM: Safe Speed Monitor

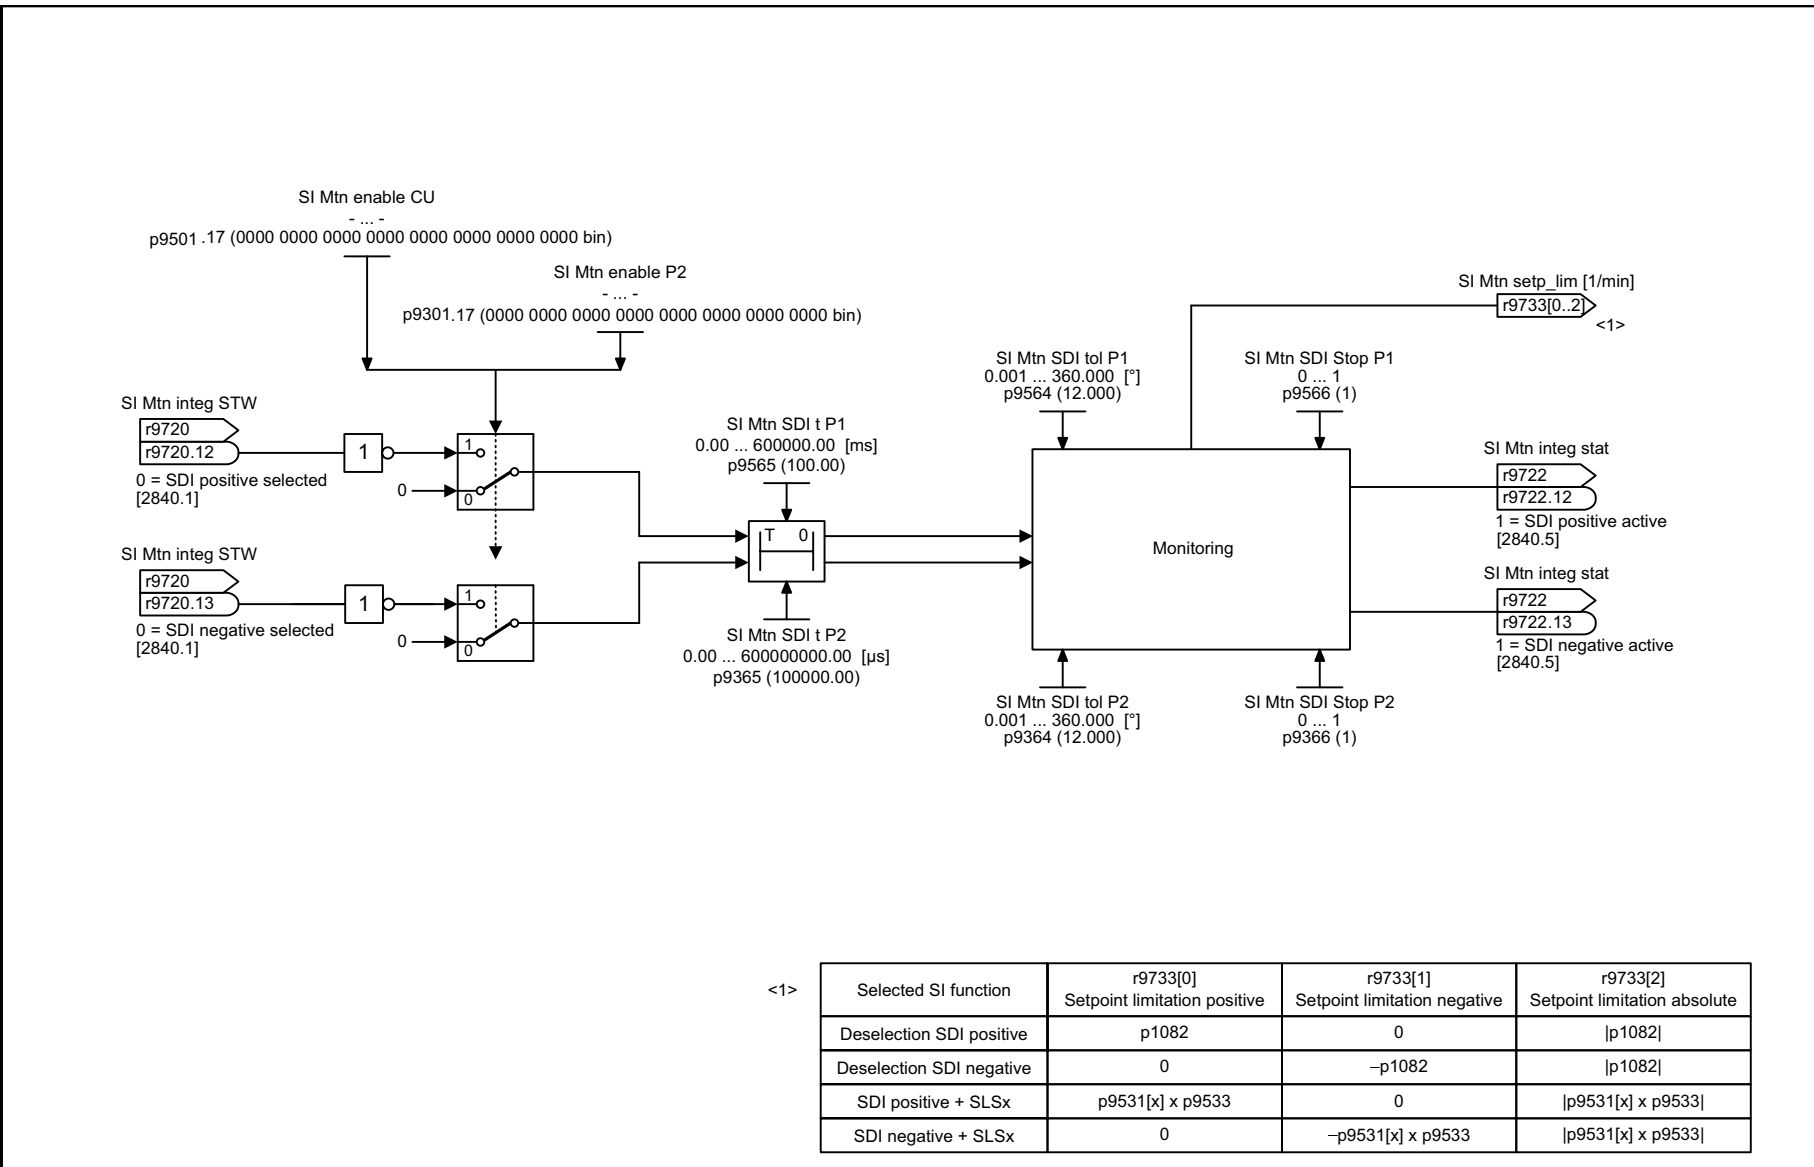

1	2	3	4	5	6	7	8
Safety Integrated Extended Functions					fp_2824_97_58.vsd	Function diagram	
SDI (Safe Direction)					12.12.2012 V4.6	SINAMICS G120D	
- 2824 -							

Fig. 2-58 2824 – SDI: Safe Direction

2-644


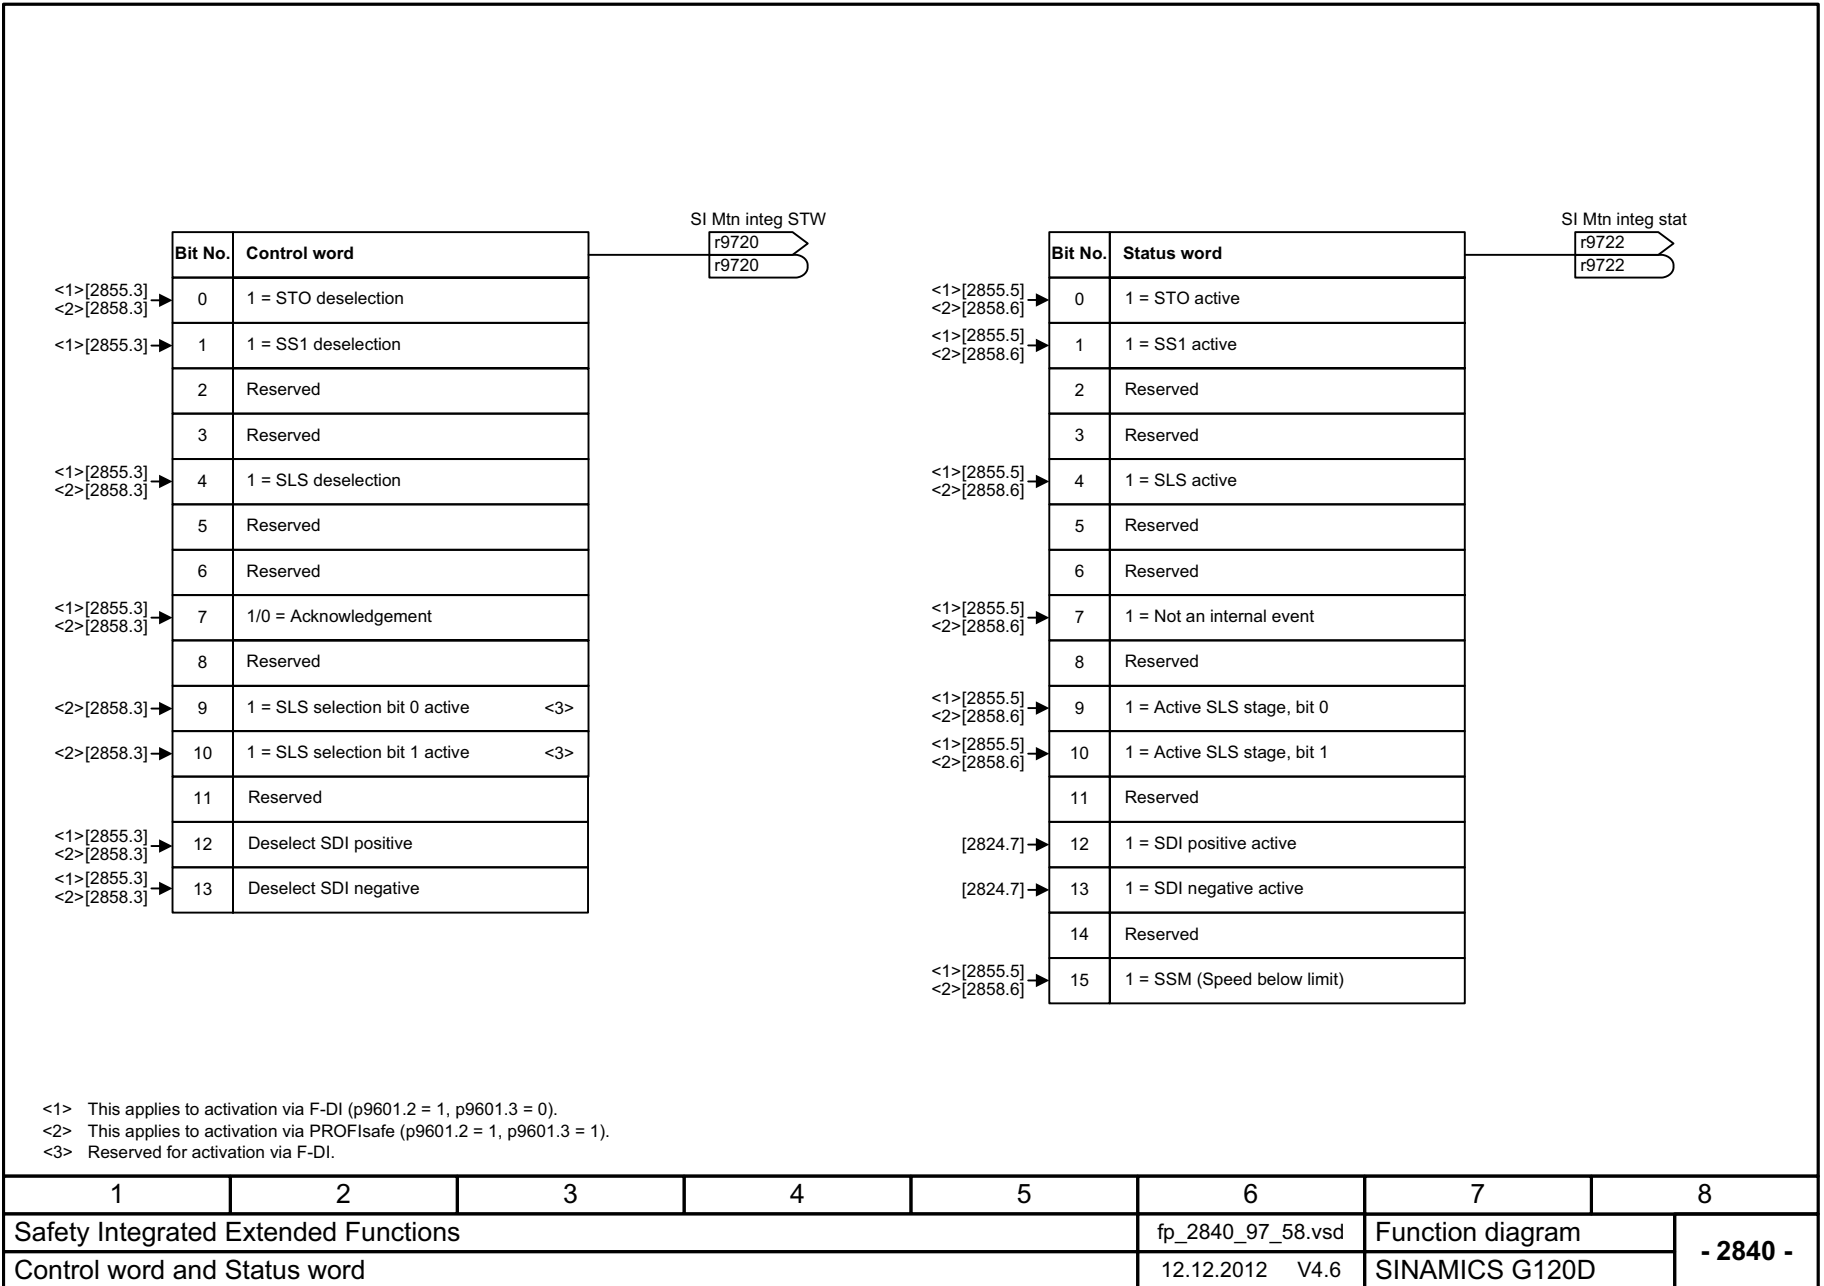


Fig. 2-59 2840 – PROFIsafe control and status word

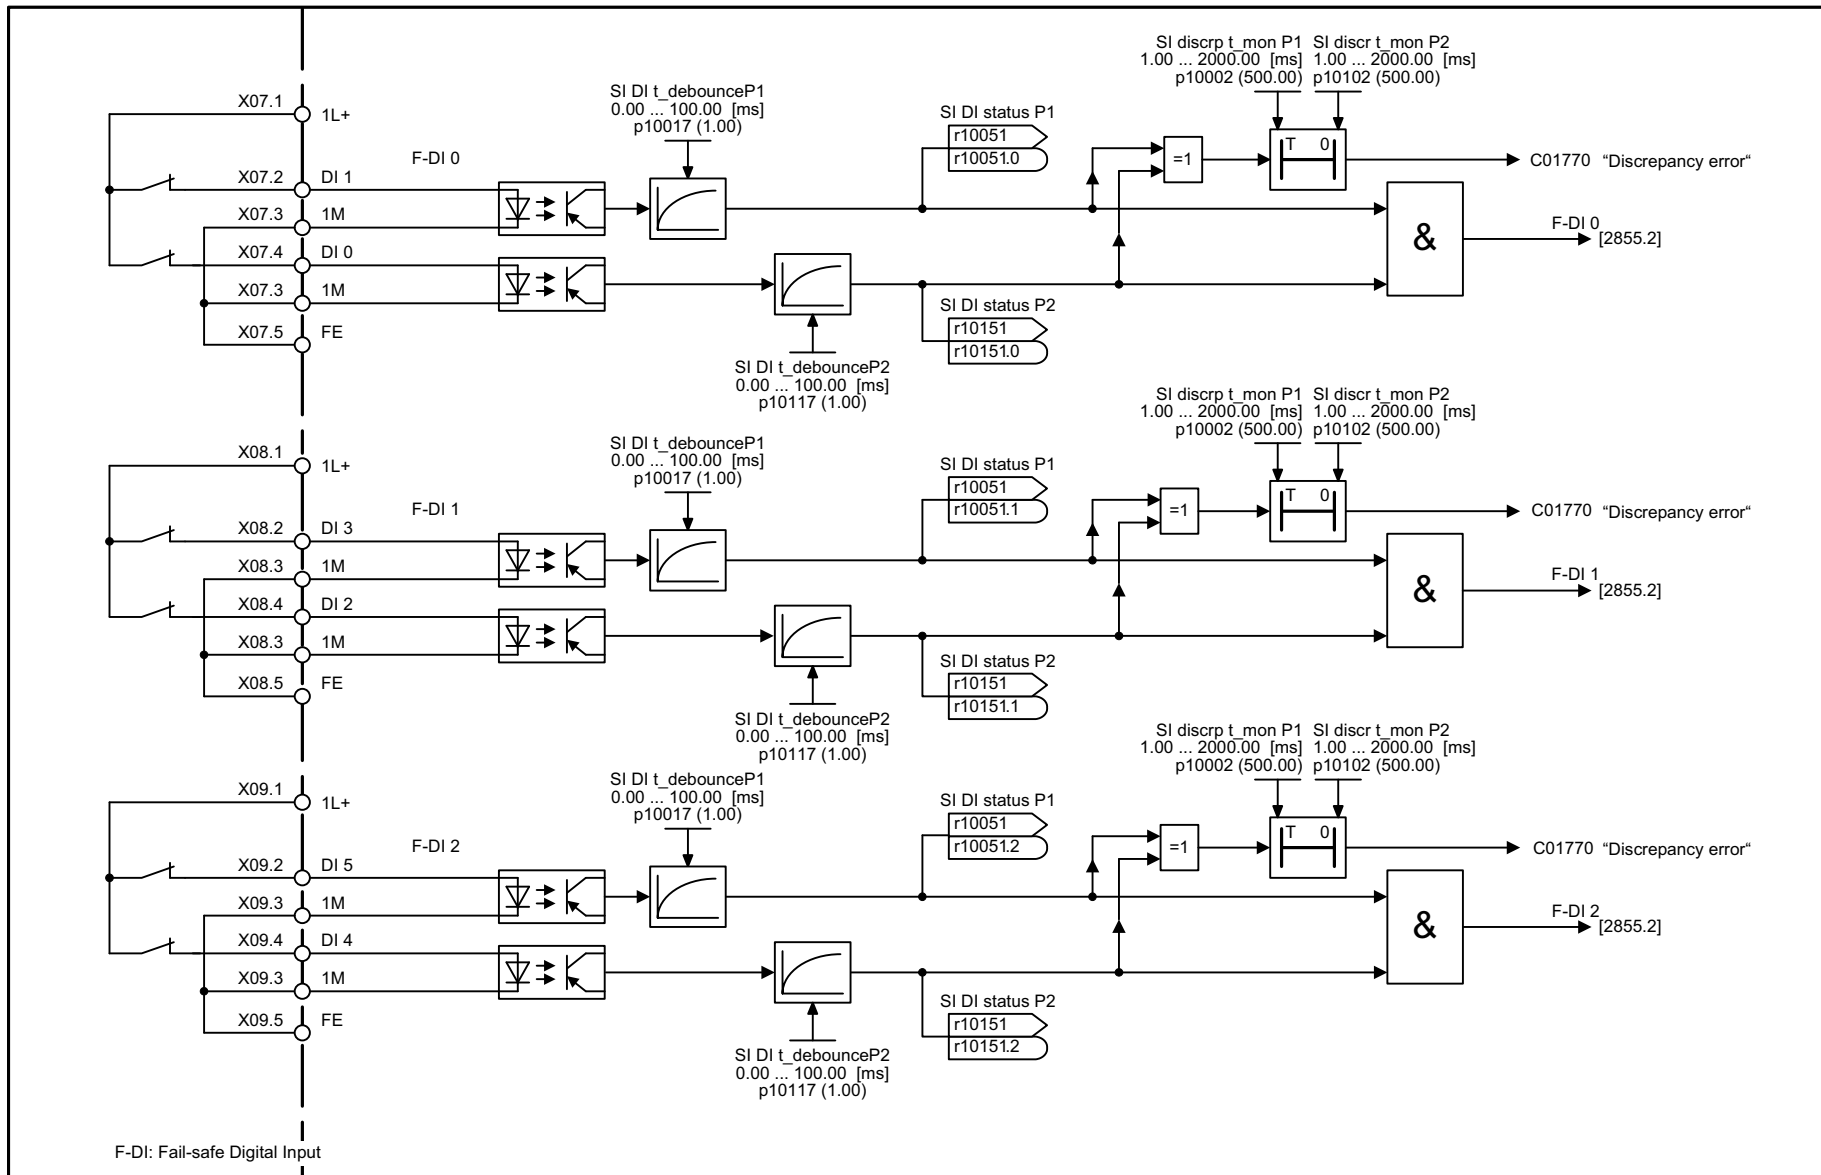

F-DI: Fail-safe Digital Input

1	2	3	4	5	6	7	8
Safety Integrated Extended Functions					fp_2850_97_04.vsd	Function diagram	
Fail-safe Digital Inputs (F-DI 0 ... F-DI 2)					12.12.2012 V4.6	SINAMICS G120D	
- 2850 -							

Fig. 2-60 2850 – Fail-safe digital inputs (F-DI 0 ... F-DI 2)

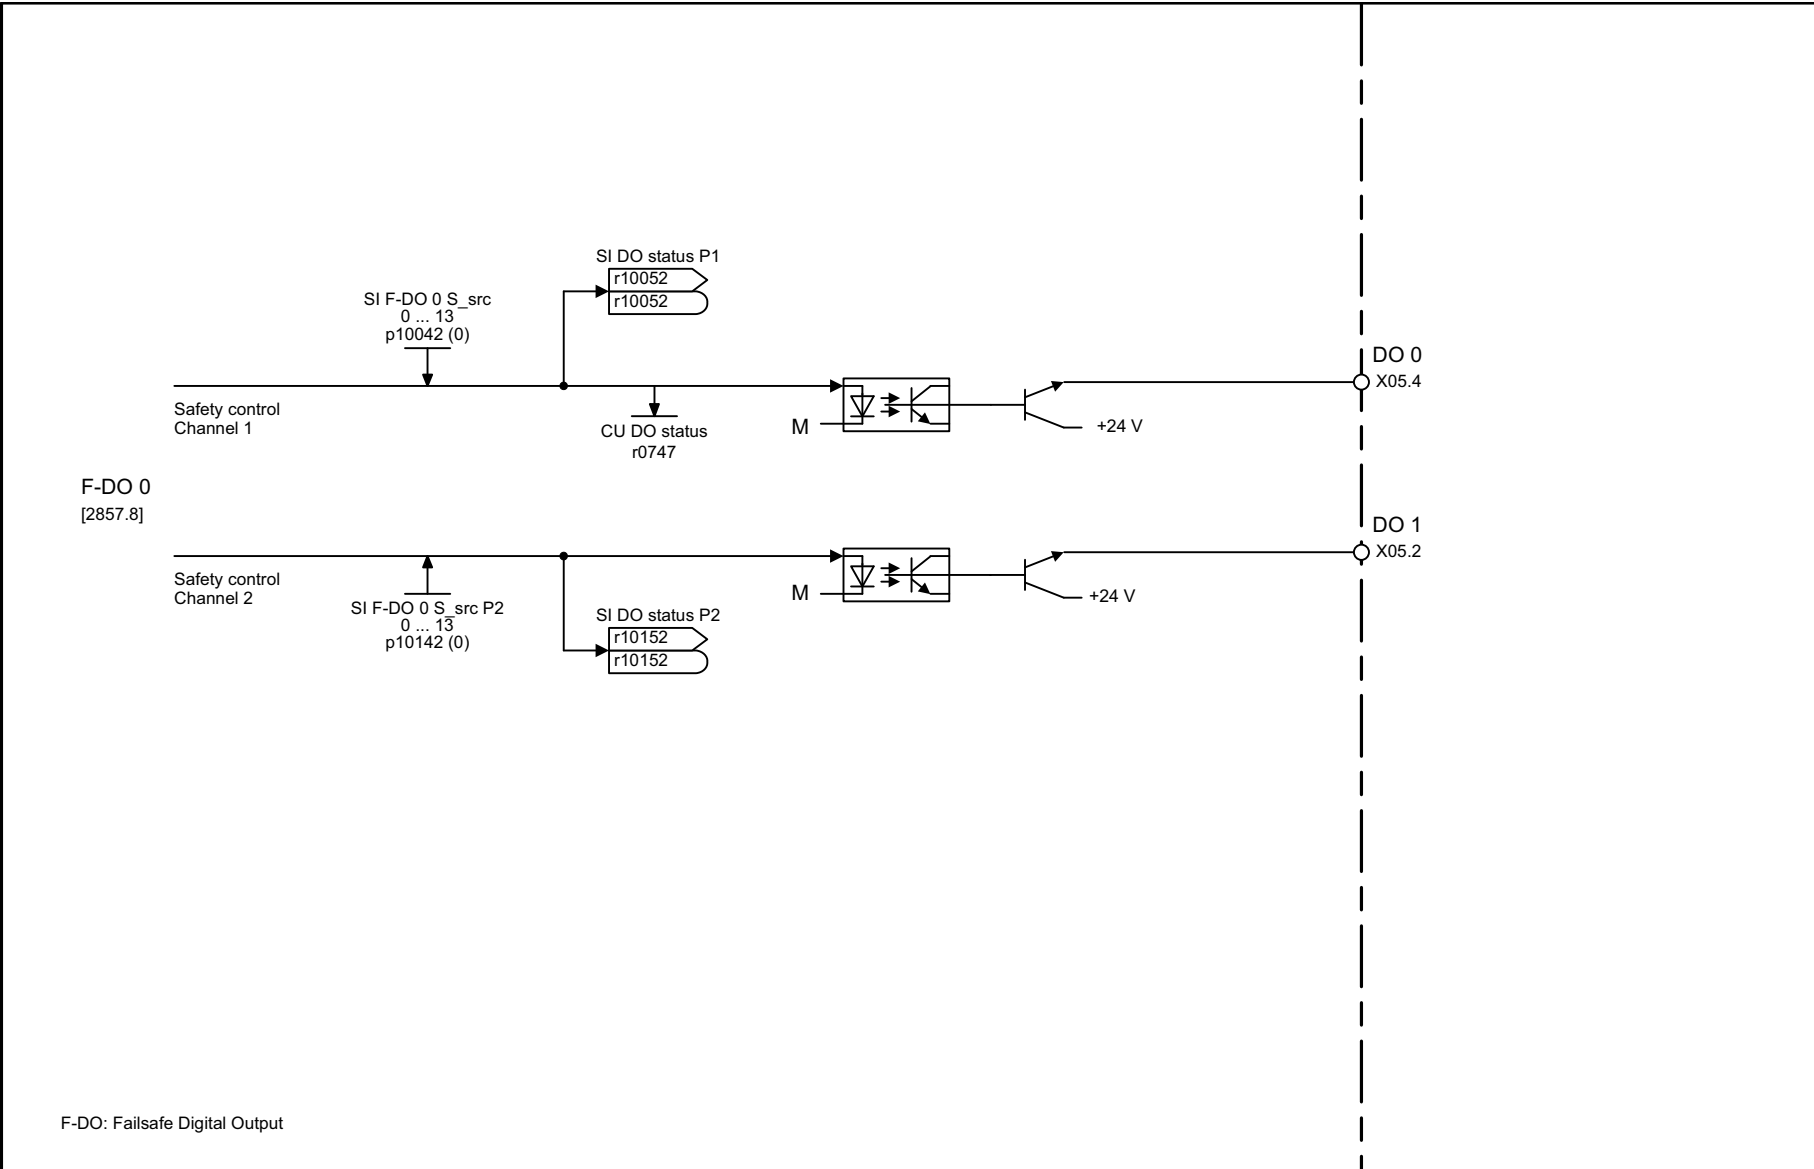


Fig. 2-61 2853 – Fail-safe digital output (F-DO 0)

1	2	3	4	5	6	7	8
Safety Integrated Extended Functions					fp_2853_97_04.vsd	Function diagram	
Fail-safe Digital Output (F-DO 0)					12.12.2012 V4.6	SINAMICS G120D	
							- 2853 -

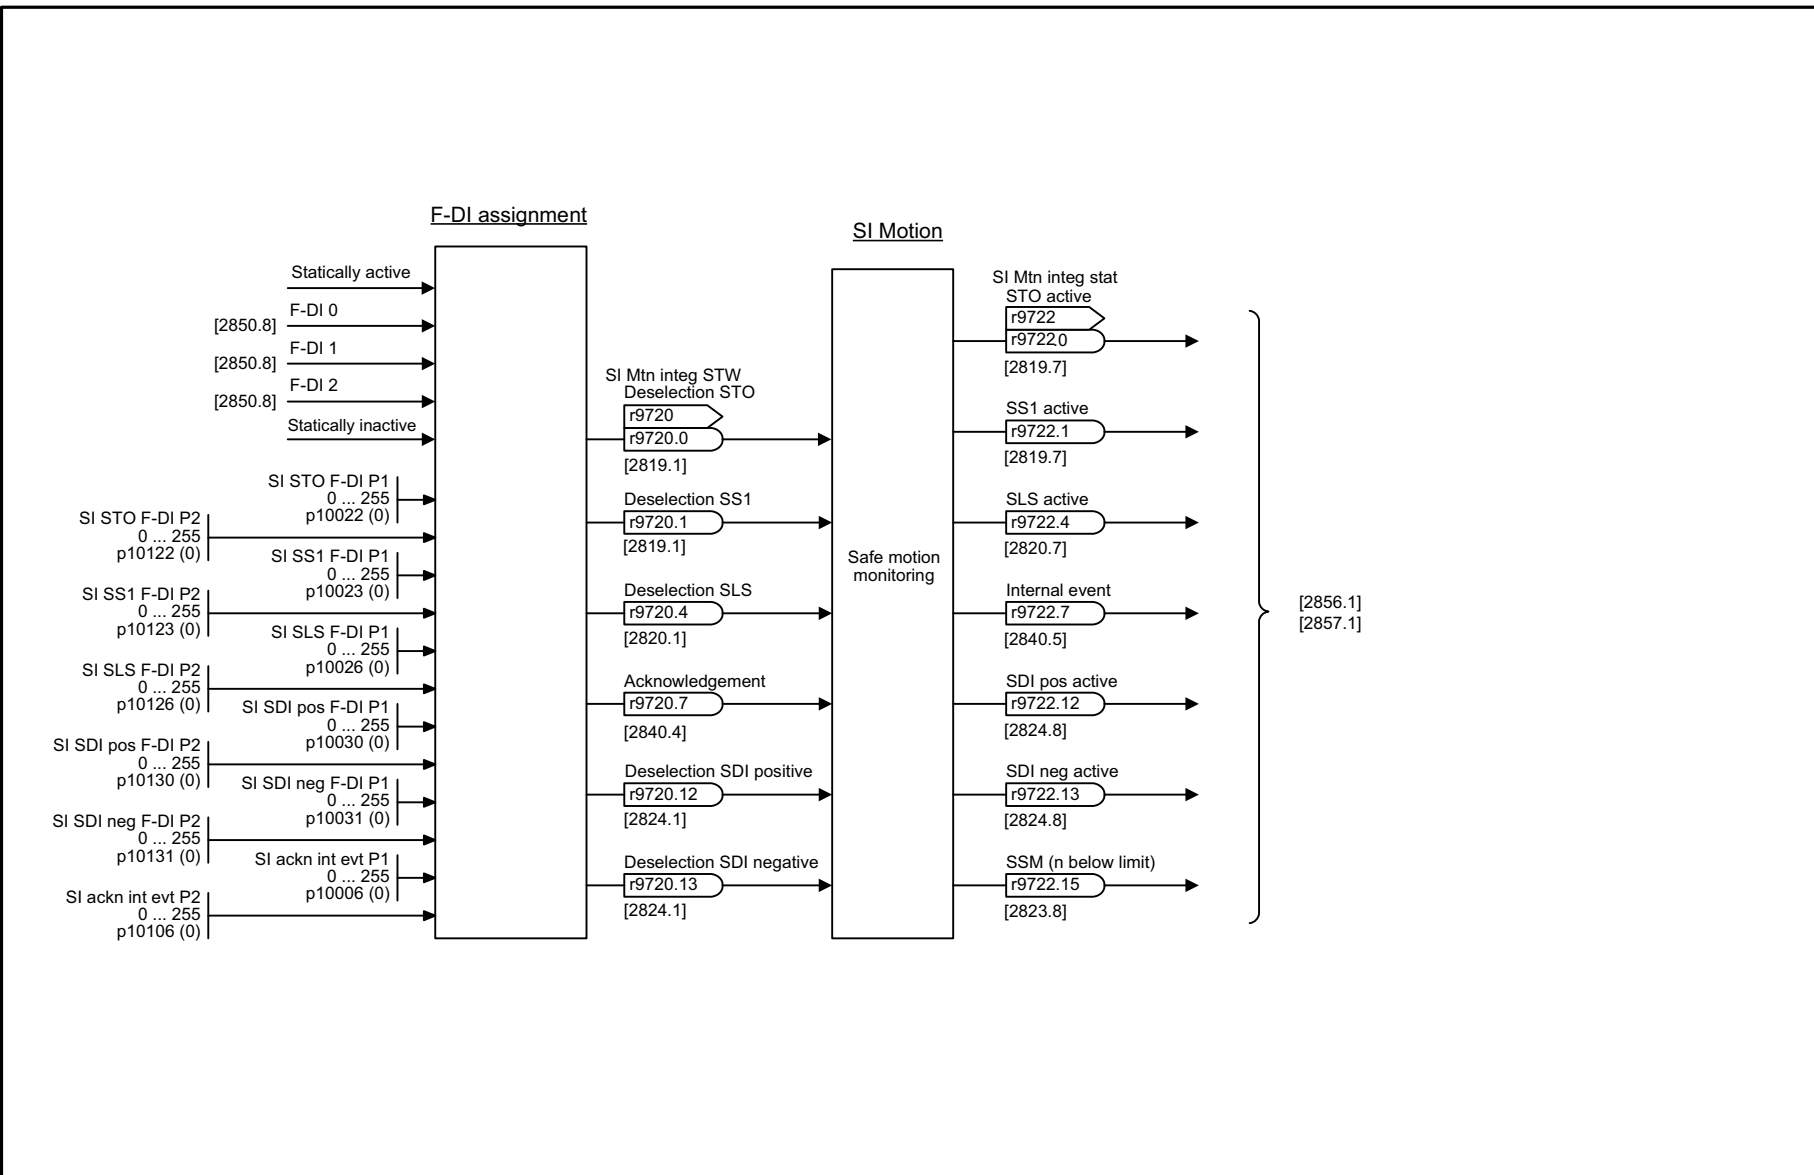


Fig. 2-62 2855 – F-DI assignment

1	2	3	4	5	6	7	8
Safety Integrated Extended Functions					fp_2855_97_55.vsd	Function diagram	
F-DI assignment					12.12.2012 V4.6	SINAMICS G120D	
							- 2855 -

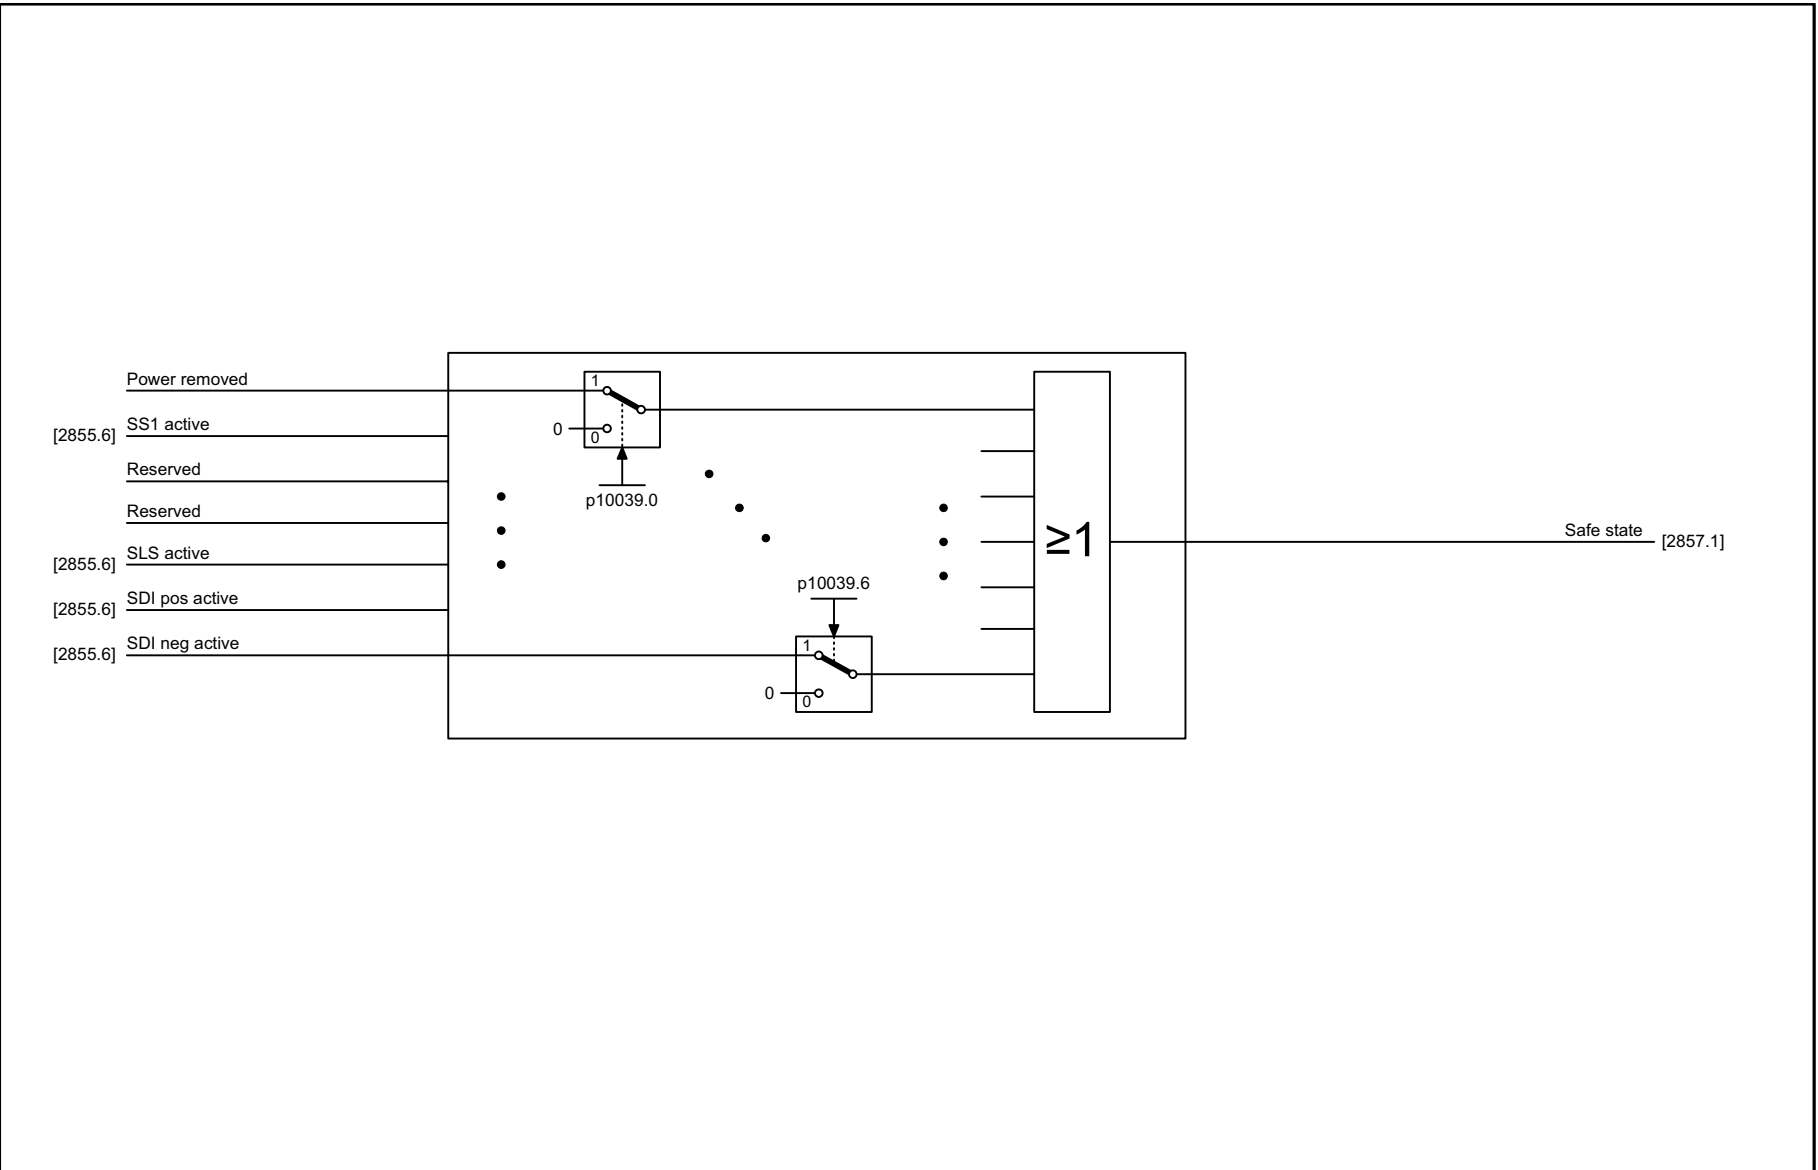


Fig. 2-63 2856 – Safe state selection

1	2	3	4	5	6	7	8
Safety Integrated Extended Functions					fp_2856_97_55.vsd	Function diagram	
Safe State selection					12.12.2012 V4.6	SINAMICS G120D	
							- 2856 -

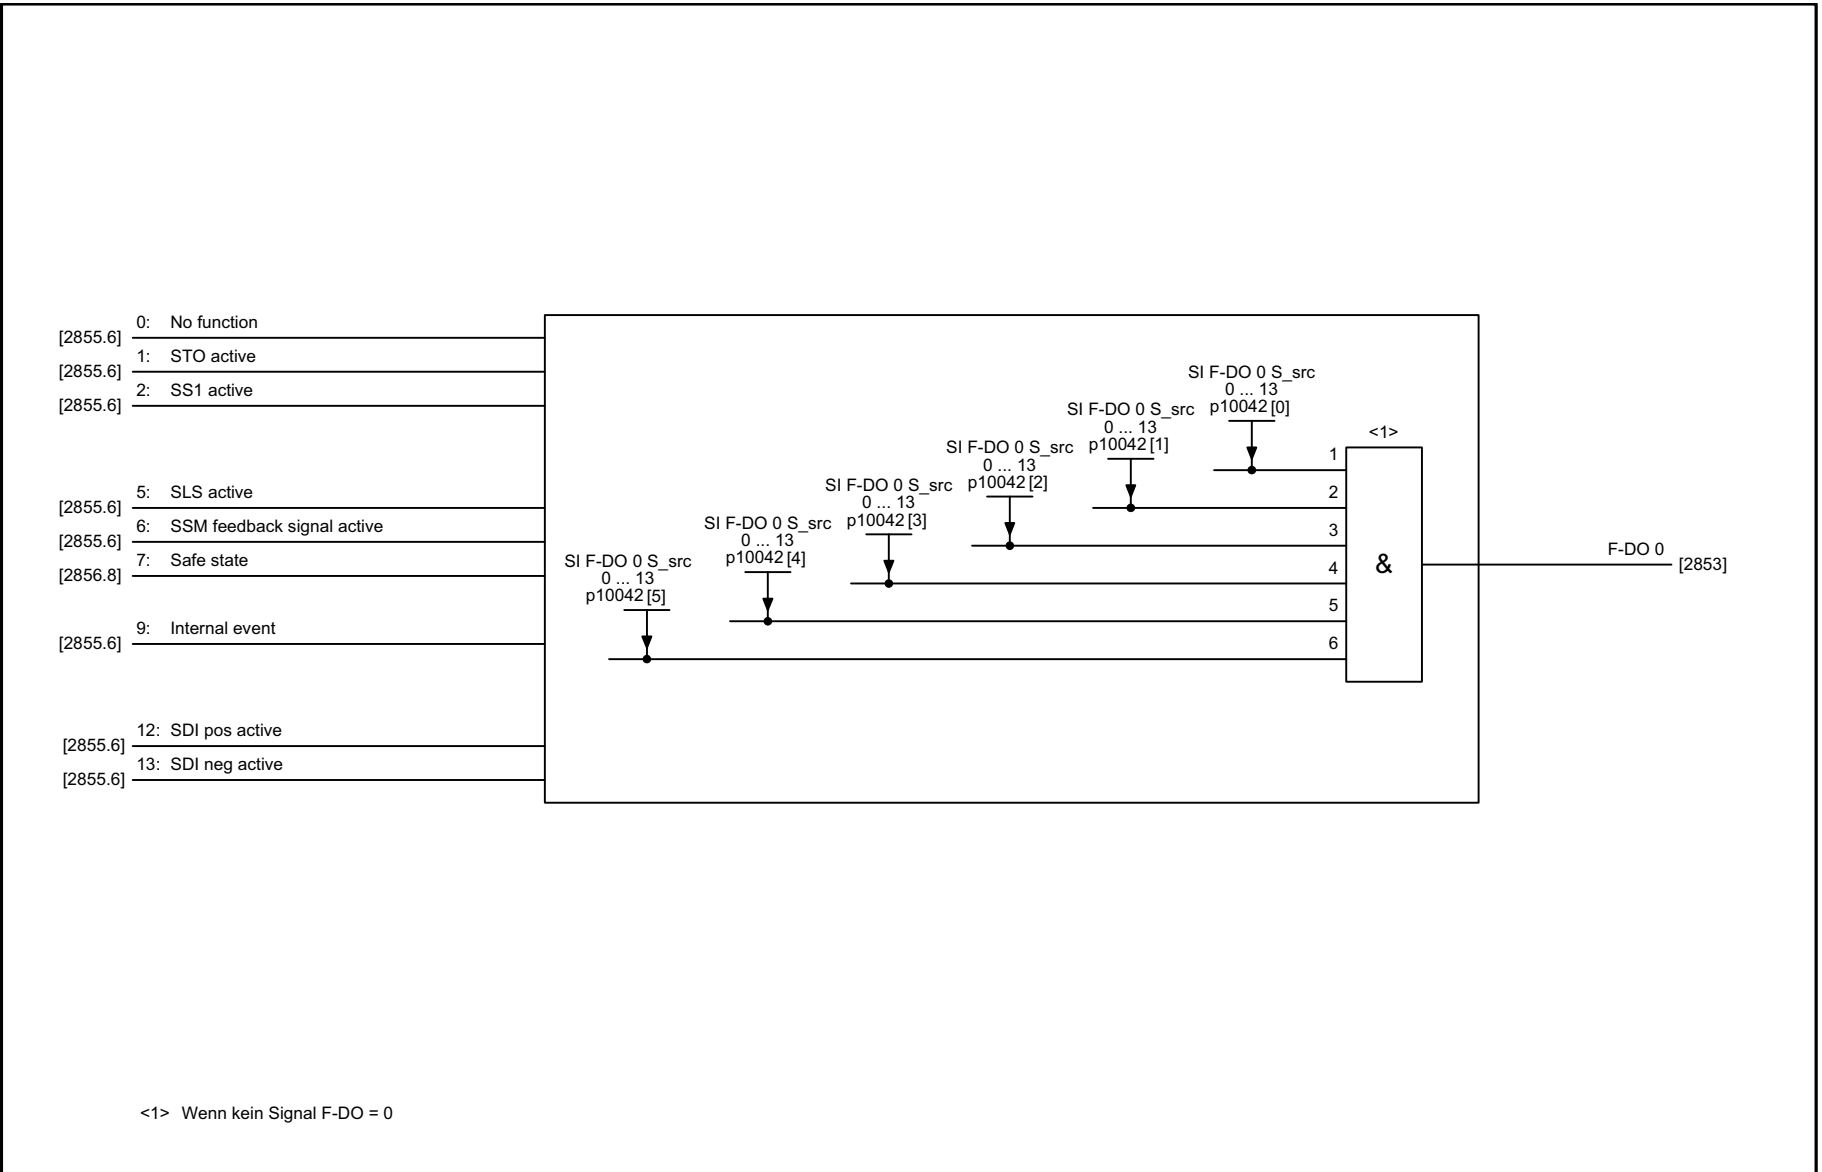


Fig. 2-64 2857 – F-DO assignment

2-650

1	2	3	4	5	6	7	8
Safety Integrated Extended Functions					fp_2857_97_55.vsd	Function diagram	
F-DO assignment					12.12.2012 V4.6	SINAMICS G120D	
							- 2857 -

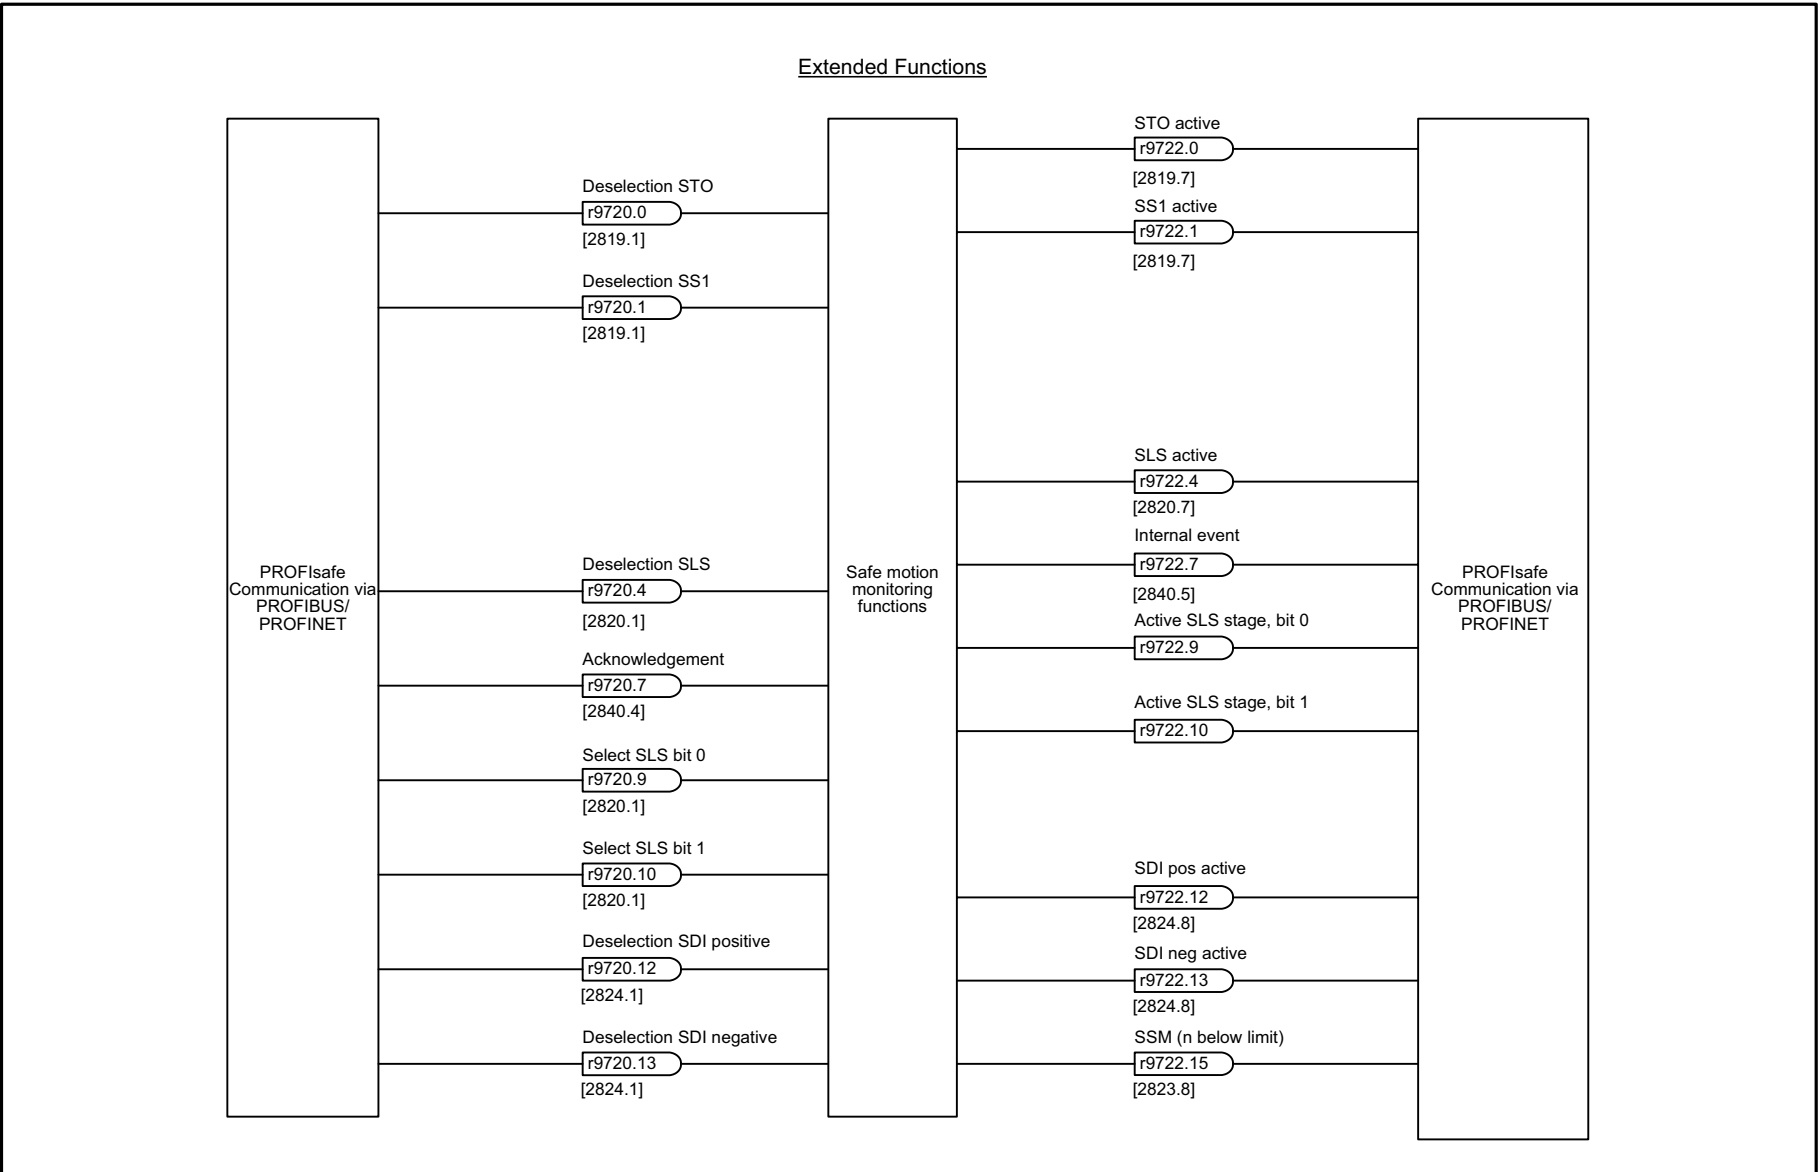


Fig. 2-65 2858 – Extended Functions via PROFIsafe (9601.2 = 1 and 9601.3 = 1)

1	2	3	4	5	6	7	8
Safety Integrated Extended Functions					fp_2858_97_58.vsd	Function diagram	
Extended Functions via PROFIsafe (9601.2 = 1 and 9601.3 = 1)					12.12.2012 V4.6	SINAMICS G120D	
							- 2858 -

2.11 Safety Integrated PROFIsafe

Function diagrams

2915 – Standard telegrams	2-653
2917 – Manufacturer-specific telegrams	2-654

Ps telegram_sel p60022								
Interconnection is made according to								
Telegram	30							
PZD1	S_STW1	S_ZSW1						
PZD2								
PZD3								
PZD4								
PZD5								
PZD6								
PZD7								
PZD8								
PZD9								
PZD10								
PZD11								
PZD12								
PZD13								
PZD14								
PZD15								
PZD16								
PZD17								
PZD18								
PZD19								
PZD20								
PZD21								
PZD22								
PZD23								
PZD24								
PZD25								
PZD26								
PZD27								
PZD28								
PZD29								
PZD30								
PZD31								
PZD32								
1	2	3	4	5	6	7	8	
Safety Integrated PROFIsafe					fp_2915_97_63.vsd	Function diagram		- 2915 -
Standard telegrams					12.12.2012 V4.6	G120D DP/PN (-F)		

Fig. 2-66 2915 – Standard telegrams


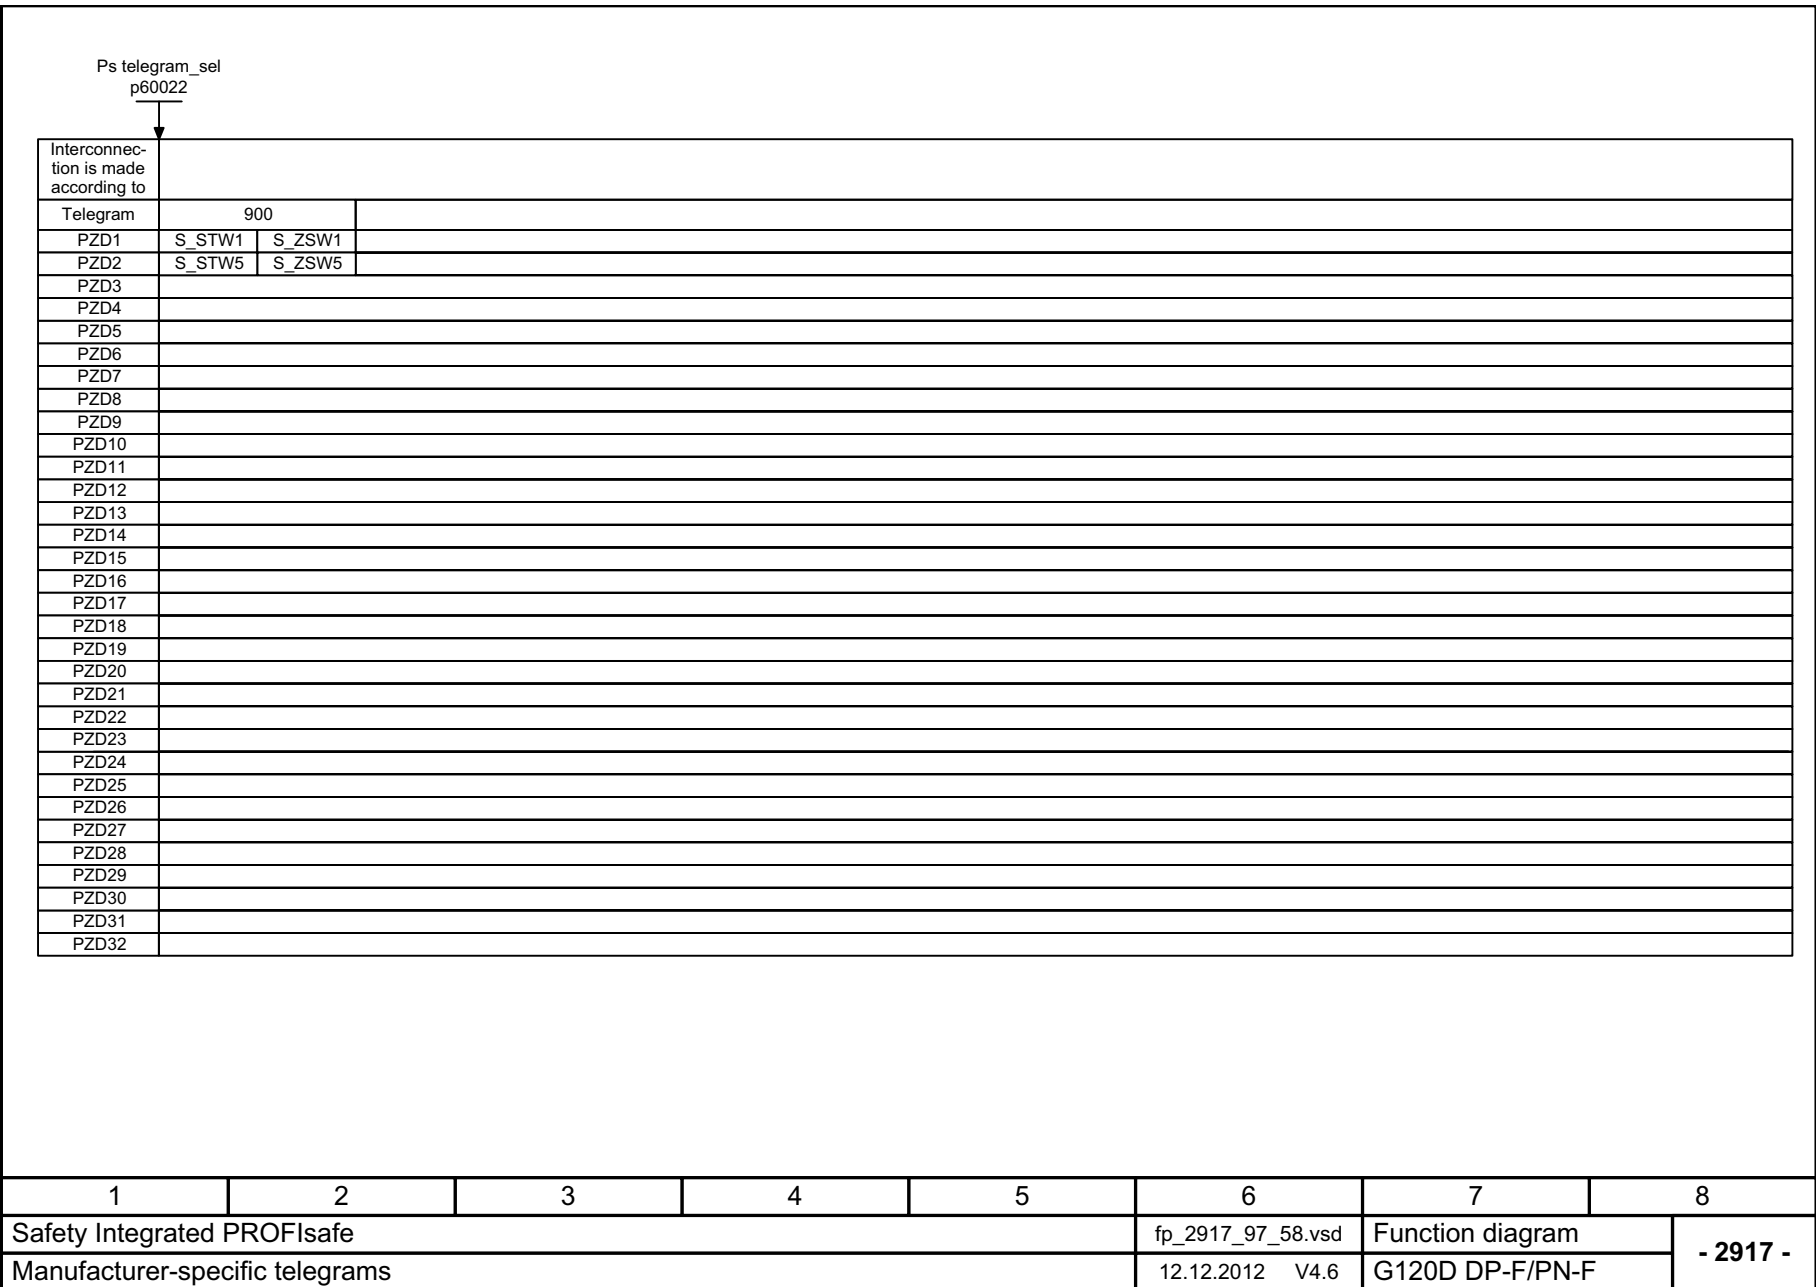


Fig. 2-67 2917 – Manufacturer-specific telegrams

2.12 Setpoint channel

Function diagrams

3001 – Overview	2-656
3010 – Fixed speed setpoints, binary selection (p1016 = 2)	2-657
3011 – Fixed speed setpoints, direct selection (p1016 = 1)	2-658
3020 – Motorized potentiometer	2-659
3030 – Main/supplementary setpoint, setpoint scaling, jogging	2-660
3040 – Direction limitation and direction reversal	2-661
3050 – Skip frequency bands and speed limitations	2-662
3060 – Basic ramp-function generator	2-663
3070 – Extended ramp-function generator	2-664
3080 – Ramp-function generator selection, status word, tracking	2-665

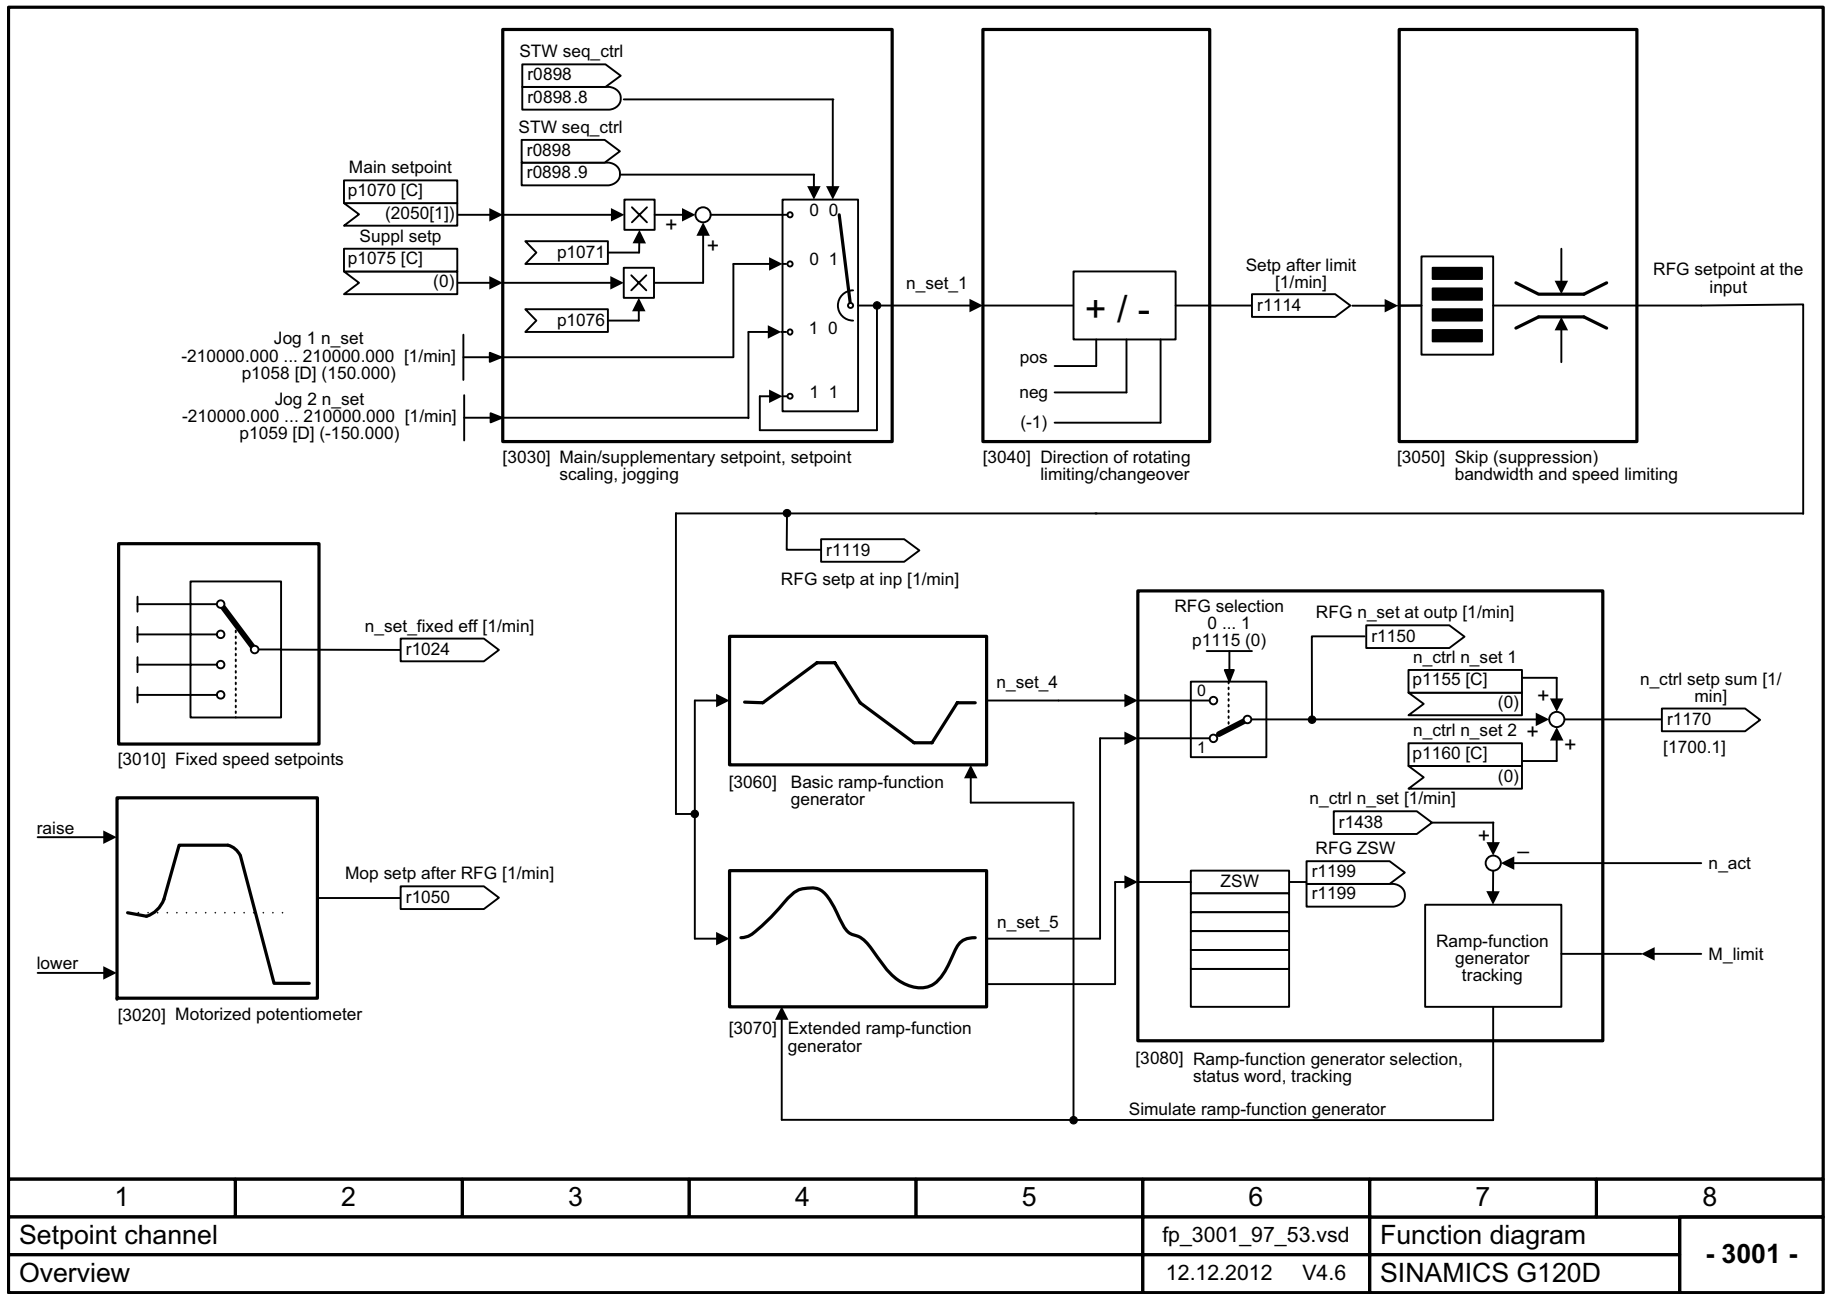

1	2	3	4	5	6	7	8
Setpoint channel					fp_3001_97_53.vsd	Function diagram	
Overview					12.12.2012 V4.6	SINAMICS G120D	
							- 3001 -

Fig. 2-68 3001 – Overview

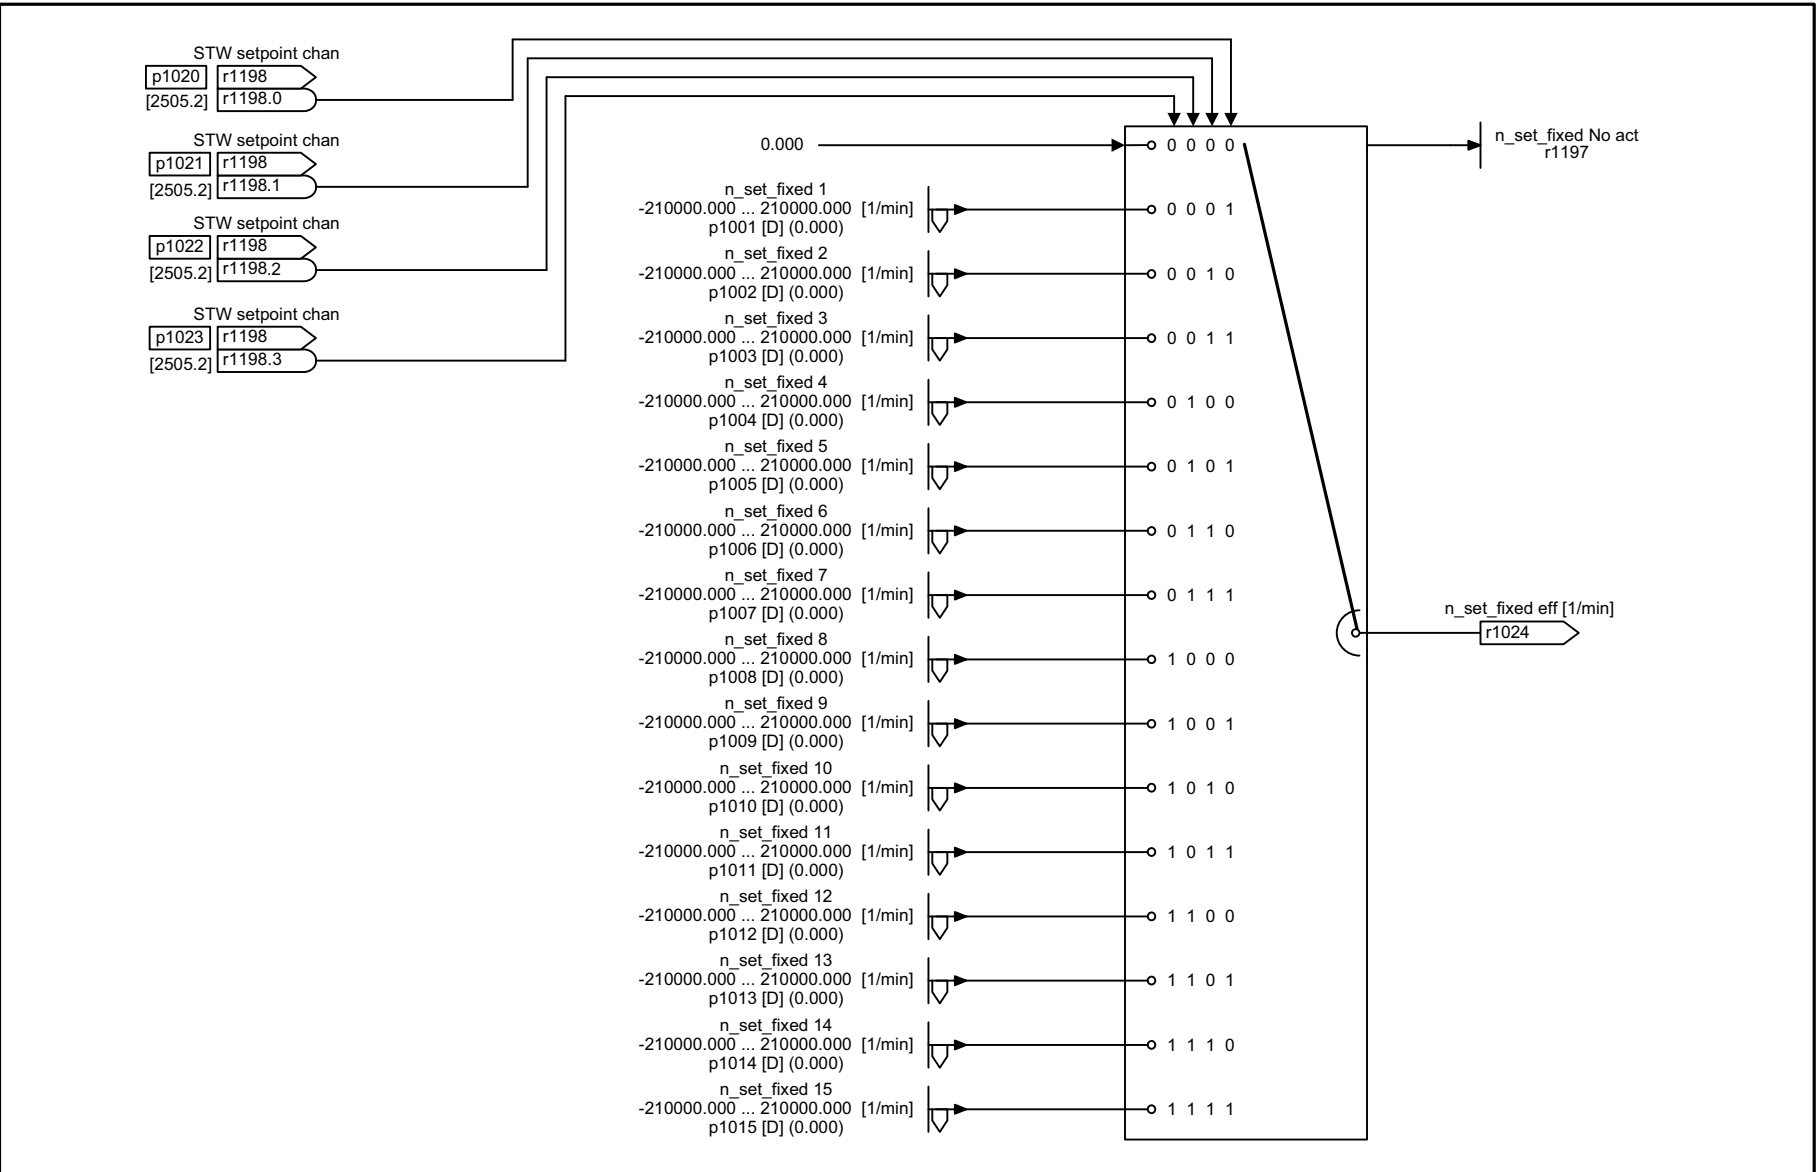


Fig. 2-69 3010 – Fixed speed setpoints, binary selection (p1016 = 2)

1	2	3	4	5	6	7	8
Setpoint channel					fp_3010_97_51.vsd	Function diagram	
Fixed speed setpoints, binary selection (p1016 = 2)					12.12.2012 V4.6	SINAMICS G120D	
							- 3010 -


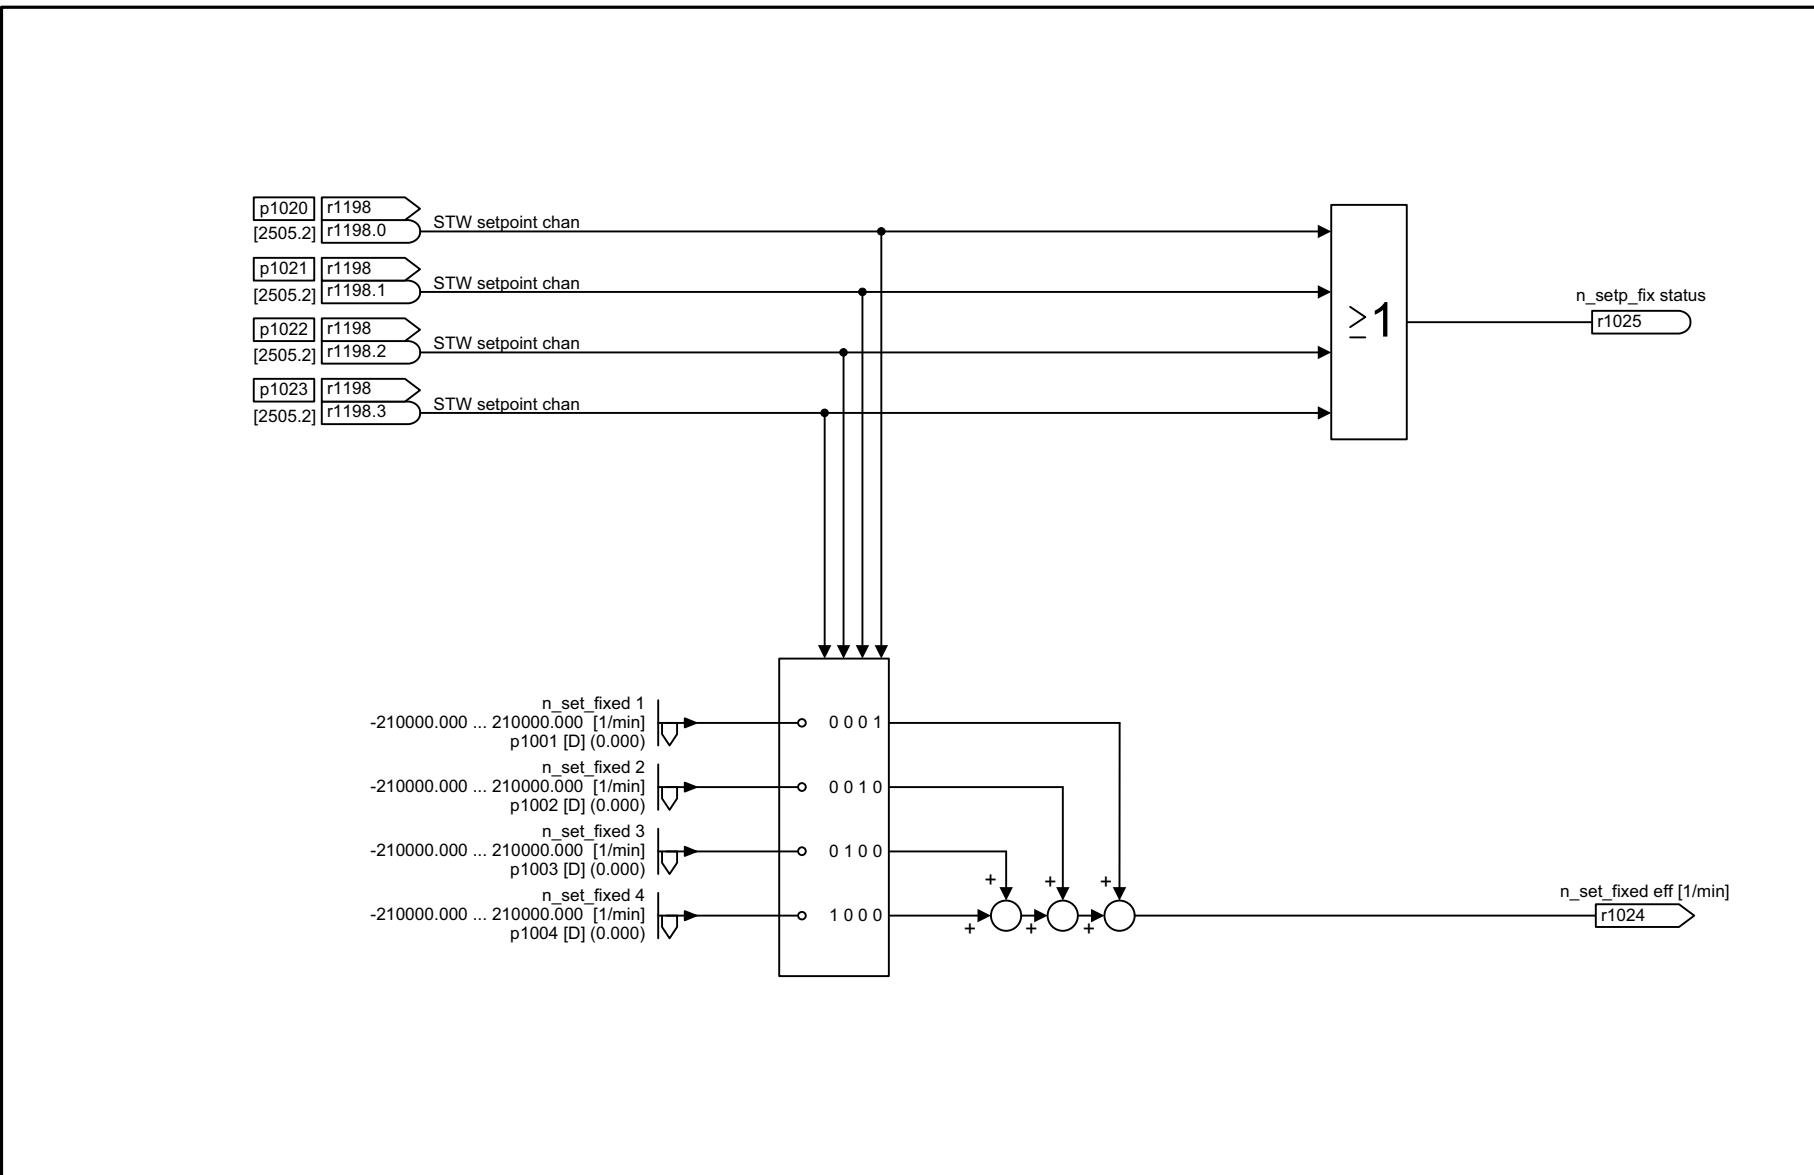



Fig. 2-70 3011 – Fixed speed setpoints, direct selection (p1016 = 1)

1	2	3	4	5	6	7	8
Setpoint channel					fp_3011_97_51.vsd	Function diagram	
Fixed speed setpoints, direct selection (p1016 = 1)					12.12.2012 V4.6	SINAMICS G120D	
							- 3011 -

Fig. 2-71 3020 – Motorized potentiometer

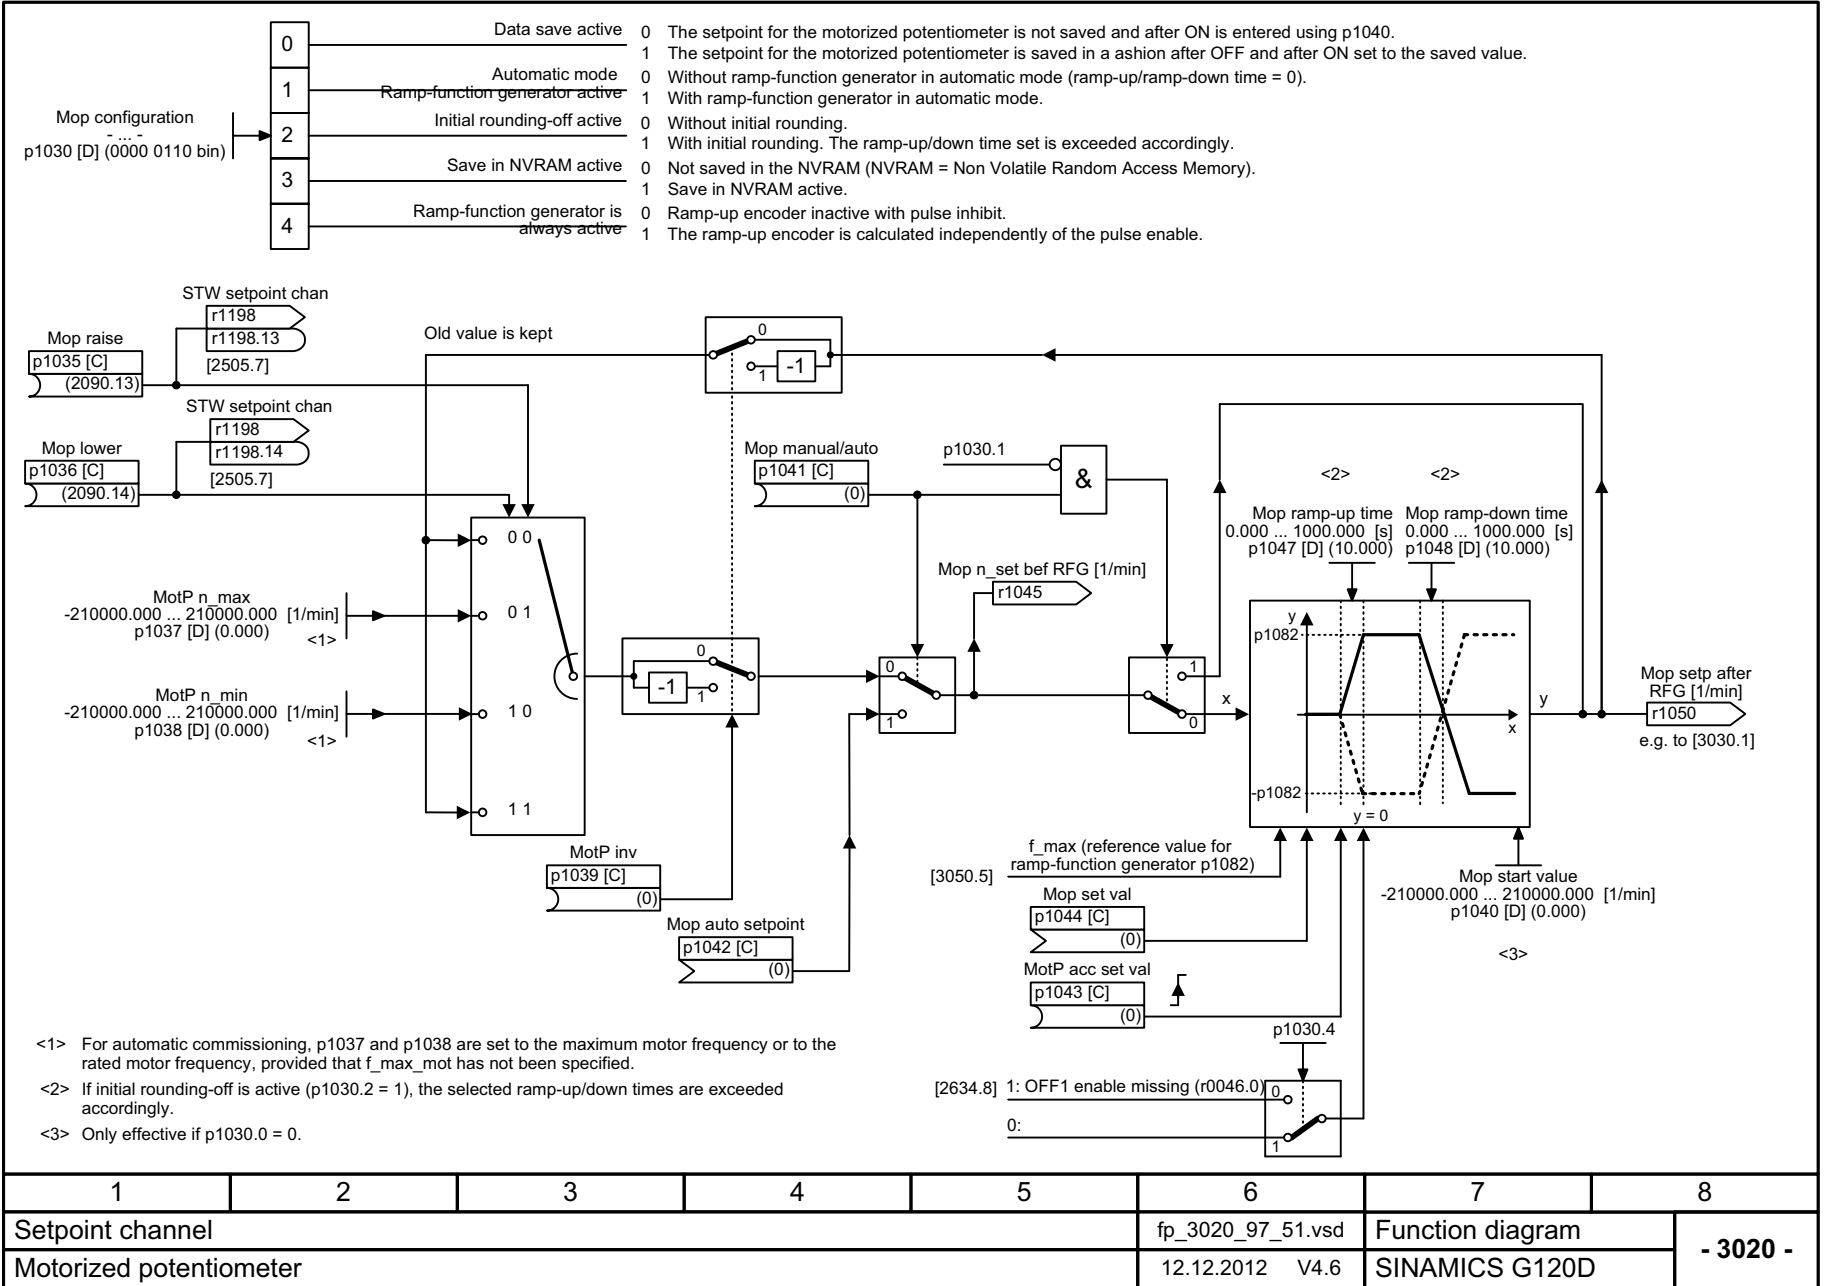

1	2	3	4	5	6	7	8
Setpoint channel					fp_3020_97_51.vsd	Function diagram	
Motorized potentiometer					12.12.2012 V4.6	SINAMICS G120D	
							- 3020 -

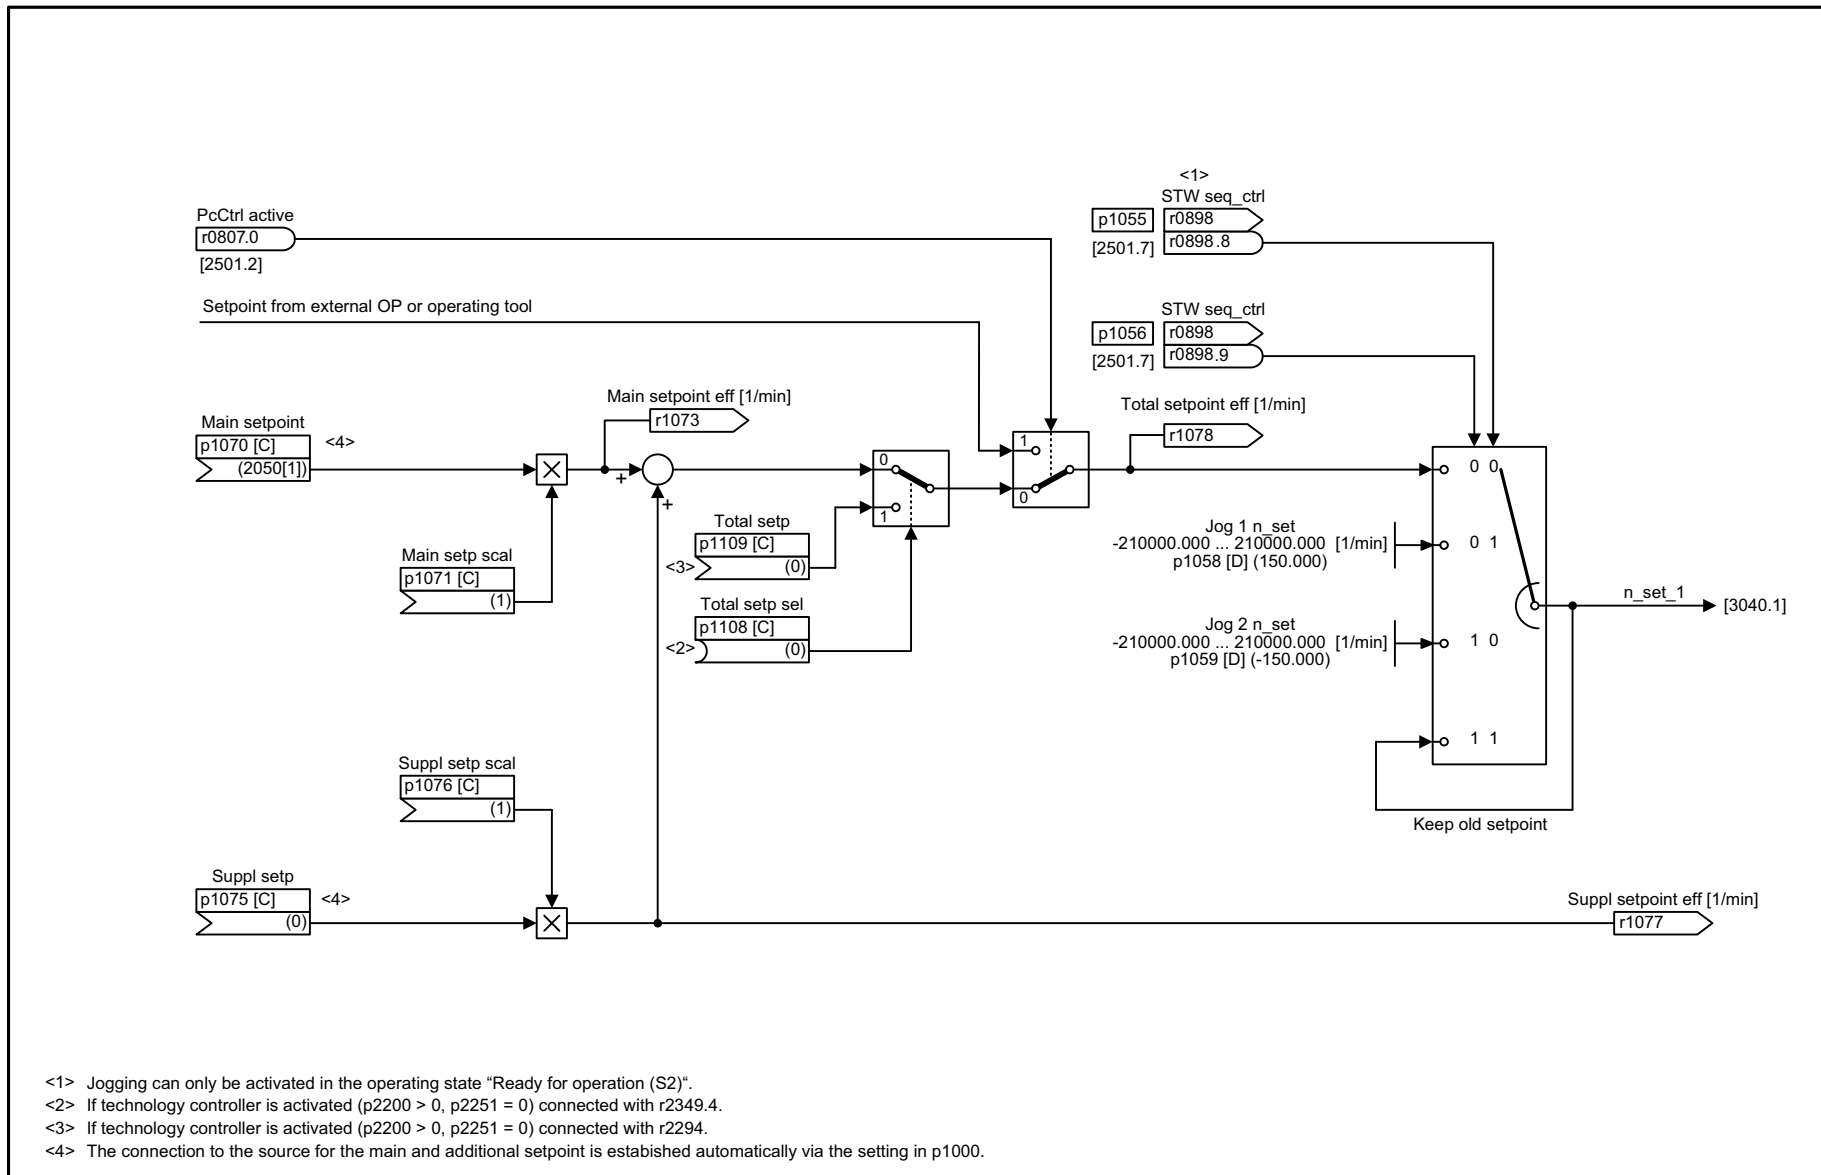

<1> Jogging can only be activated in the operating state "Ready for operation (S2)".
 <2> If technology controller is activated (p2200 > 0, p2251 = 0) connected with r2349.4.
 <3> If technology controller is activated (p2200 > 0, p2251 = 0) connected with r2294.
 <4> The connection to the source for the main and additional setpoint is established automatically via the setting in p1000.

1	2	3	4	5	6	7	8
Setpoint channel					fp_3030_97_51.vsd	Function diagram	
Main/supplementary setpoint, setpoint scaling, jogging					12.12.2012 V4.6	SINAMICS G120D	
							- 3030 -

Fig. 2-72 3030 – Main/supplementary setpoint, setpoint scaling, jogging


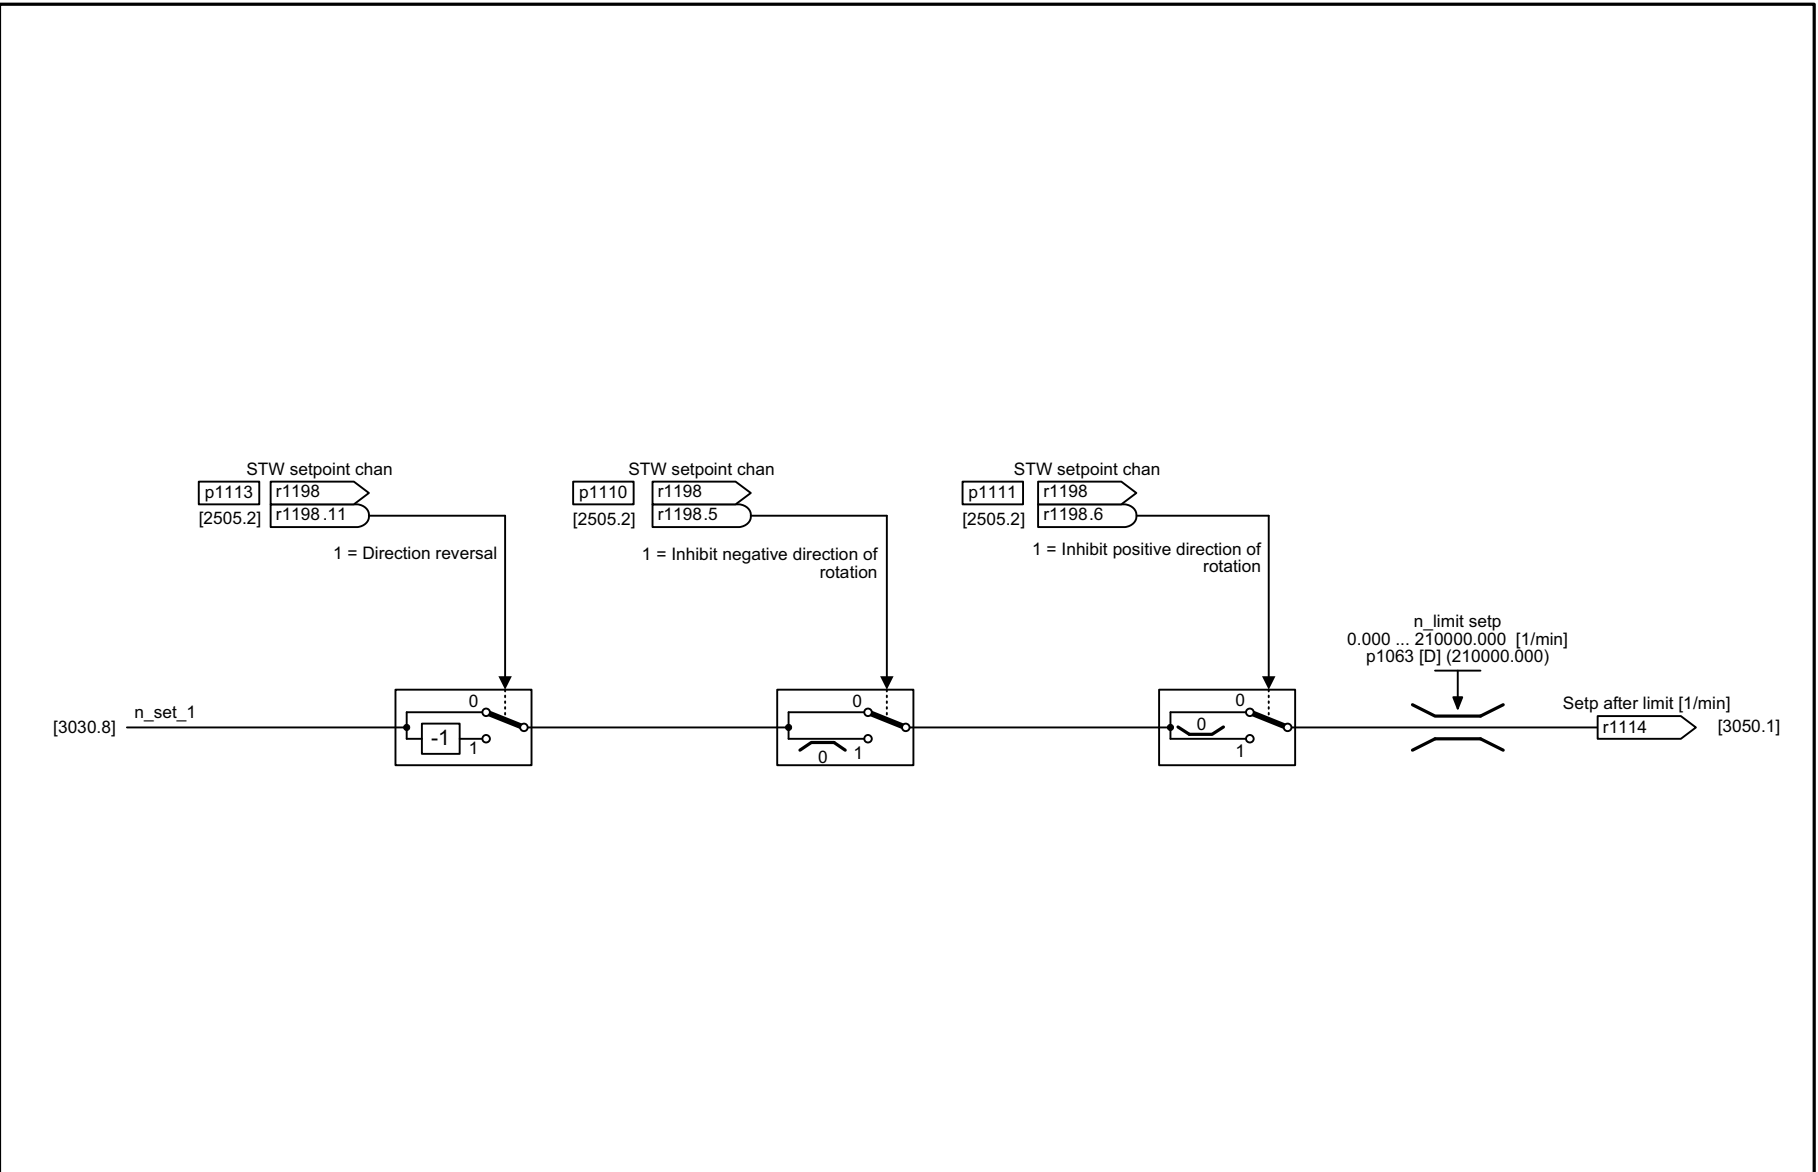


Fig. 2-73 3040 – Direction limitation and direction reversal

1	2	3	4	5	6	7	8
Setpoint channel					fp_3040_97_53.vsd	Function diagram	
Direction limitation and direction reversal					12.12.2012 V4.6	SINAMICS G120D	
							- 3040 -

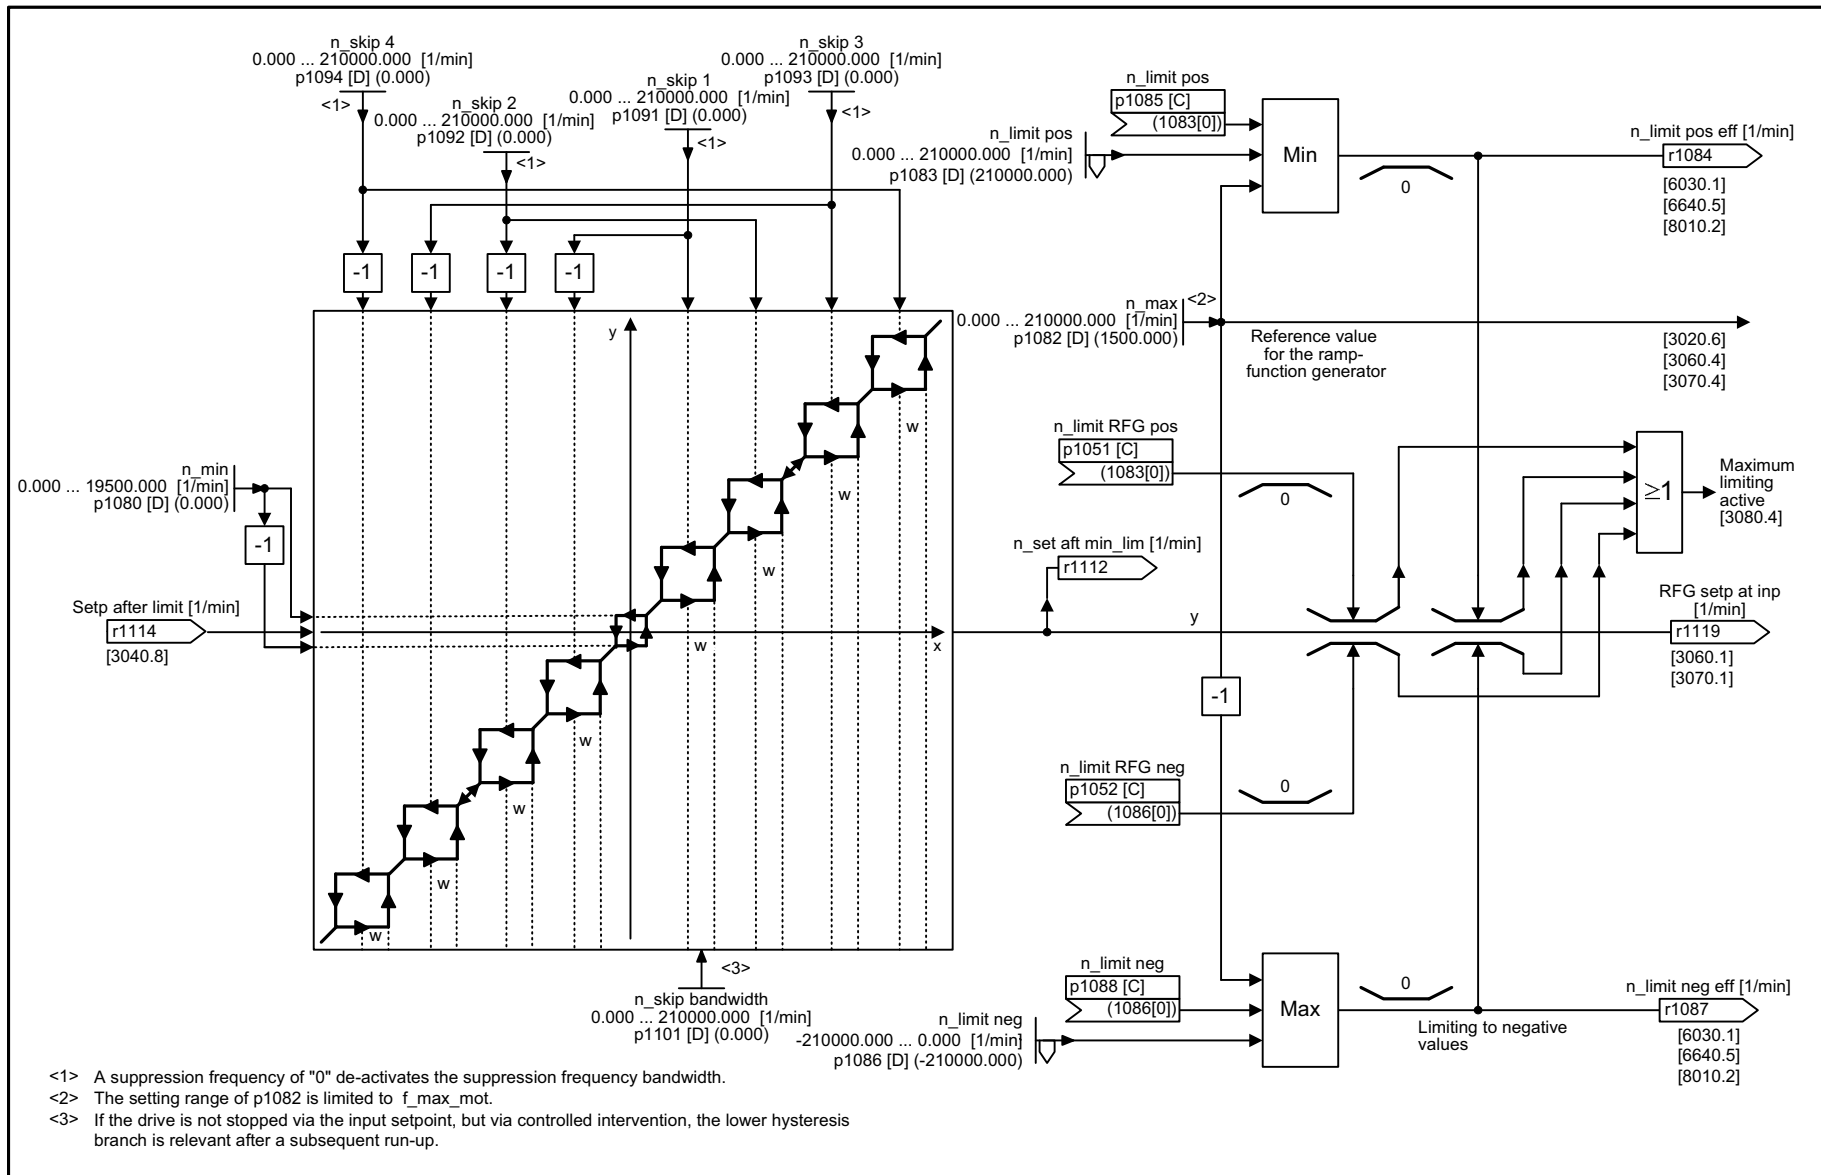


- <1> A suppression frequency of "0" de-activates the suppression frequency bandwidth.
- <2> The setting range of p1082 is limited to f_max_mot.
- <3> If the drive is not stopped via the input setpoint, but via controlled intervention, the lower hysteresis branch is relevant after a subsequent run-up.


1	2	3	4	5	6	7	8
Setpoint channel					fp_3050_97_51.vsd	Function diagram	
Skip speed bands and speed limitations					12.12.2012 V4.6	SINAMICS G120D	
- 3050 -							

Fig. 2-74 3050 – Skip frequency bands and speed limitations

Fig. 2-75 3060 – Basic ramp-function generator

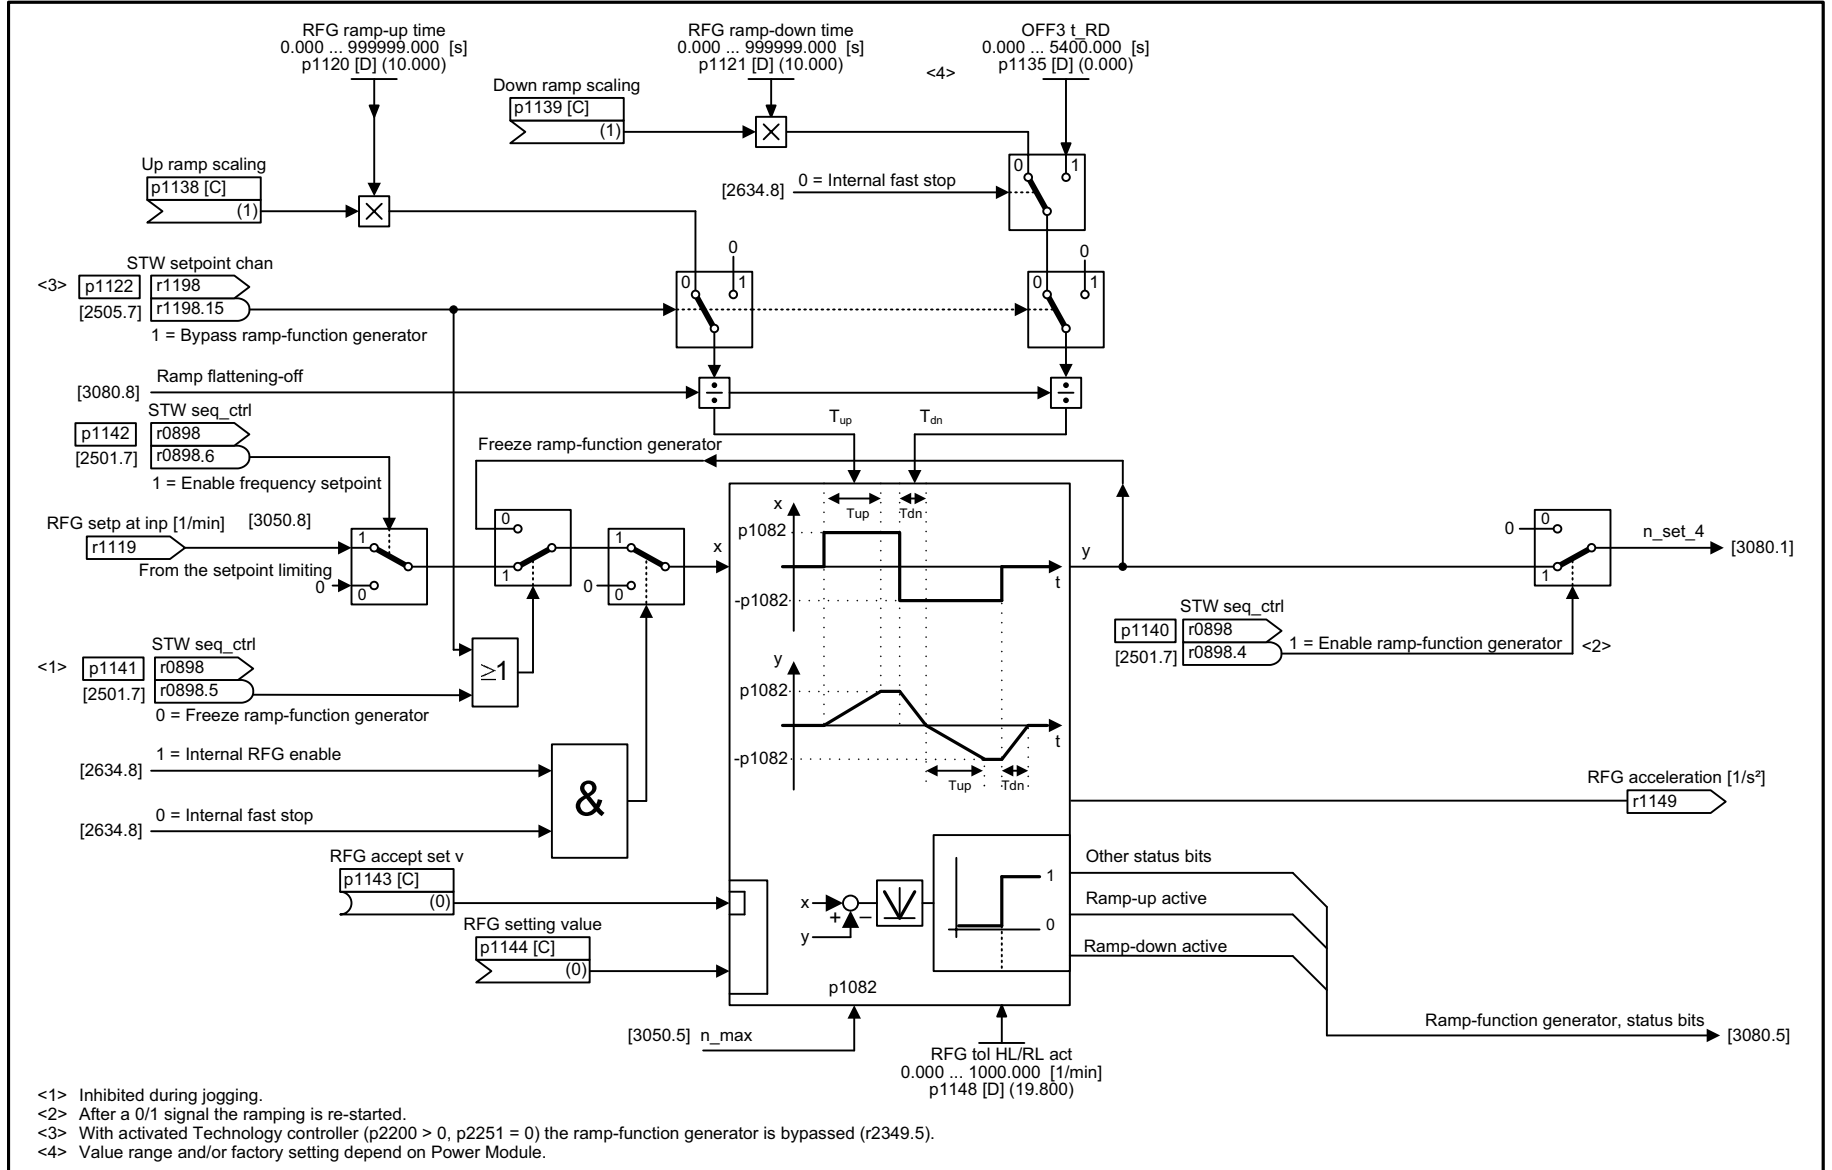

1	2	3	4	5	6	7	8
Setpoint channel					fp_3060_97_53.vsd	Function diagram	
Basic ramp-function generator					12.12.2012 V4.6	SINAMICS G120D	
							- 3060 -

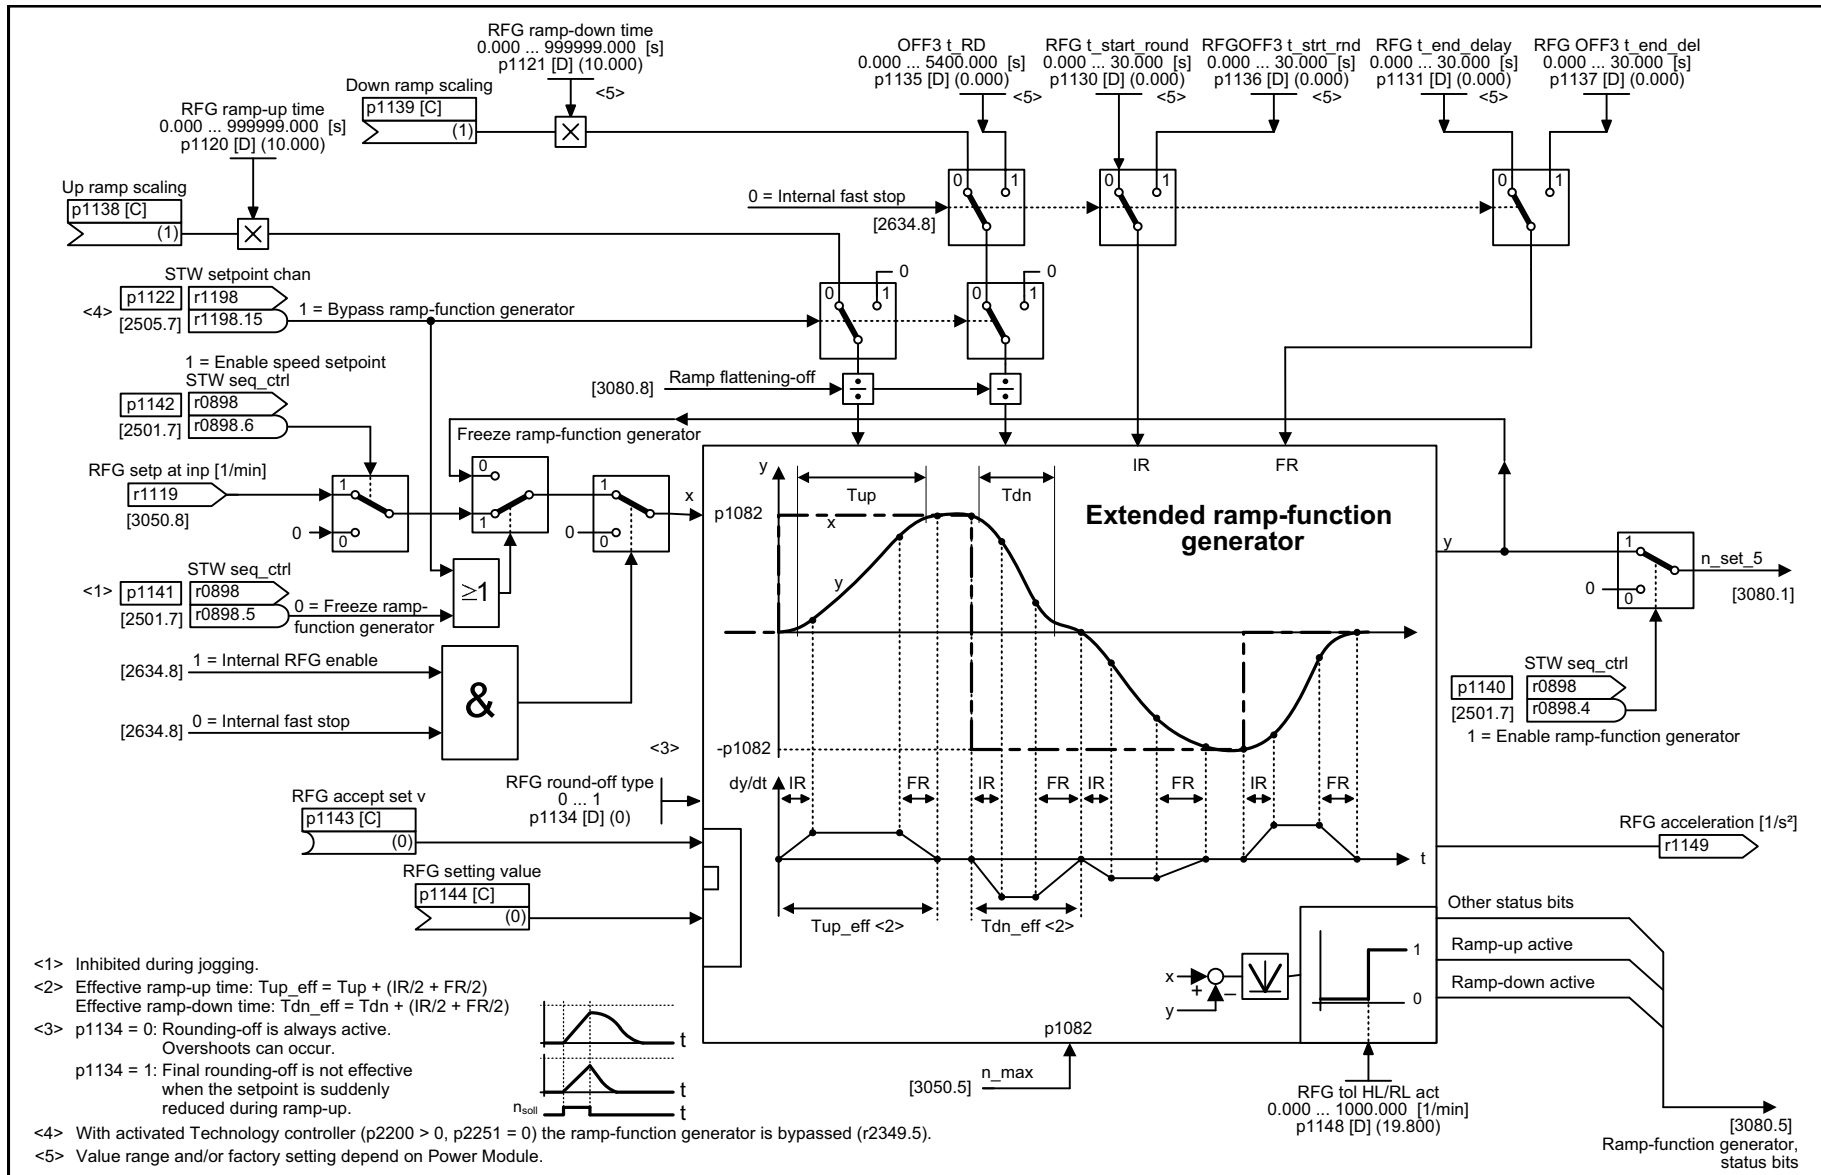


- <1> Inhibited during jogging.
- <2> Effective ramp-up time: $T_{up_eff} = T_{up} + (IR/2 + FR/2)$
Effective ramp-down time: $T_{dn_eff} = T_{dn} + (IR/2 + FR/2)$
- <3> p1134 = 0: Rounding-off is always active. Overshoots can occur.
p1134 = 1: Final rounding-off is not effective when the setpoint is suddenly reduced during ramp-up.
- <4> With activated Technology controller (p2200 > 0, p2251 = 0) the ramp-function generator is bypassed (r2349.5).
- <5> Value range and/or factory setting depend on Power Module.

1	2	3	4	5	6	7	8
Setpoint channel					fp_3070_97_51.vsd	Function diagram	
Extended ramp-function generator					12.12.2012 V4.6	SINAMICS G120D	
							- 3070 -

Fig. 2-76 3070 – Extended ramp-function generator

Fig. 2-77 3080 – Ramp-function generator selection, status word, tracking

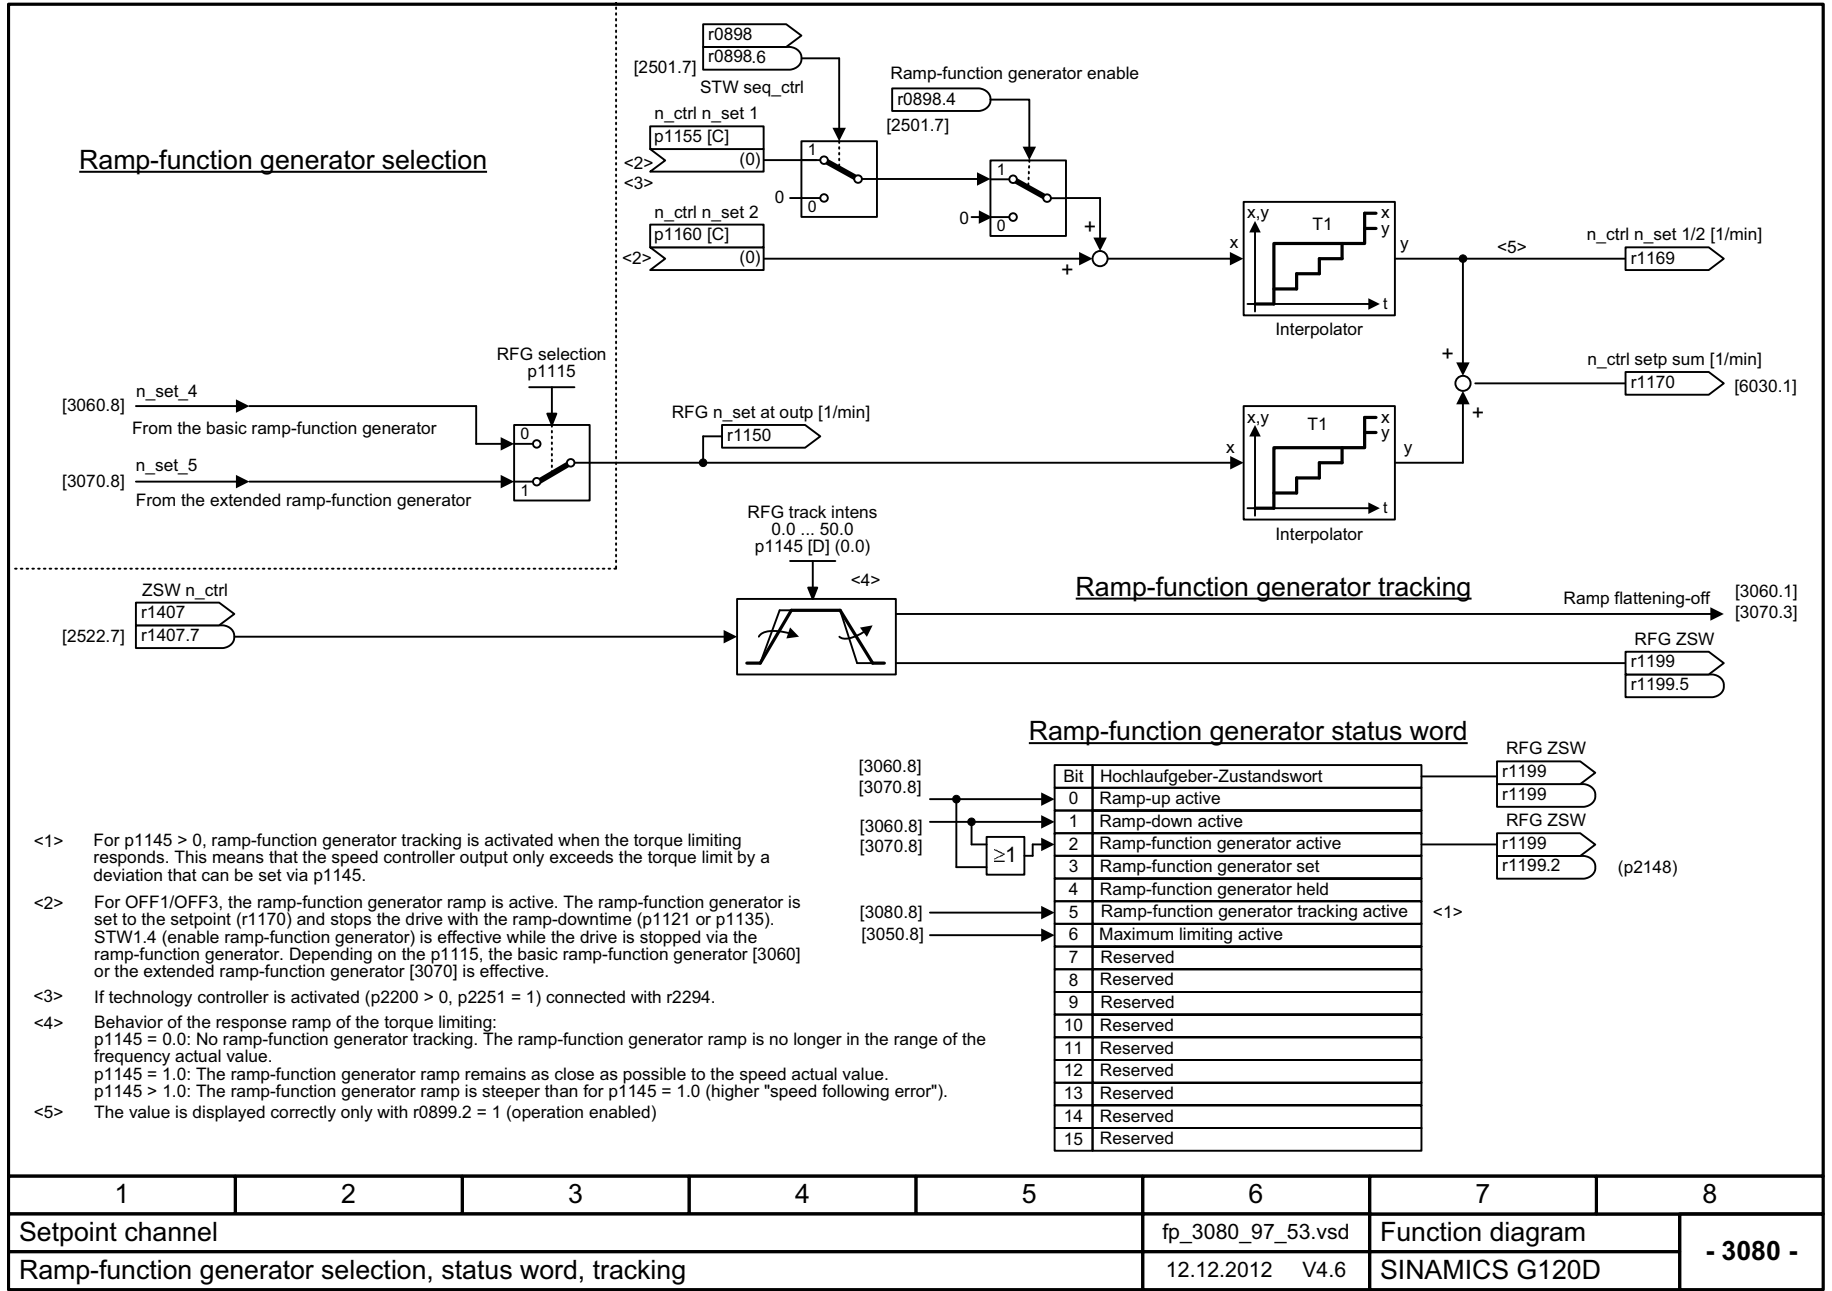


1	2	3	4	5	6	7	8
Setpoint channel					fp_3080_97_53.vsd	Function diagram	
Ramp-function generator selection, status word, tracking					12.12.2012 V4.6	SINAMICS G120D	
- 3080 -							

2.13 Basic positioner (EPOS)


Function diagrams

3610 – Jog mode	2-667
3612 –Homing / active homing mode (p2597 = 0-signal)	2-668
3614 – Passive homing mode (p2597 = 1-signal)	2-669
3615 – Traversing block mode, external block change	2-670
3616 – Traversing block mode	2-671
3617 – Travel to fixed stop	2-672
3618 – Direct setpoint specification / MDI mode, dynamic values	2-673
3620 – Direct setpoint specification / MDI mode	2-674
3625 – Mode control	2-675
3630 – Traversing range limits	2-676
3635 – Interpolator	2-677
3640 – Control word, block selection / MDI selection	2-678
3645 – Status word 1	2-679
3646 – Status word 2	2-680
3650 – Status word, active traversing block / MDI active	2-681

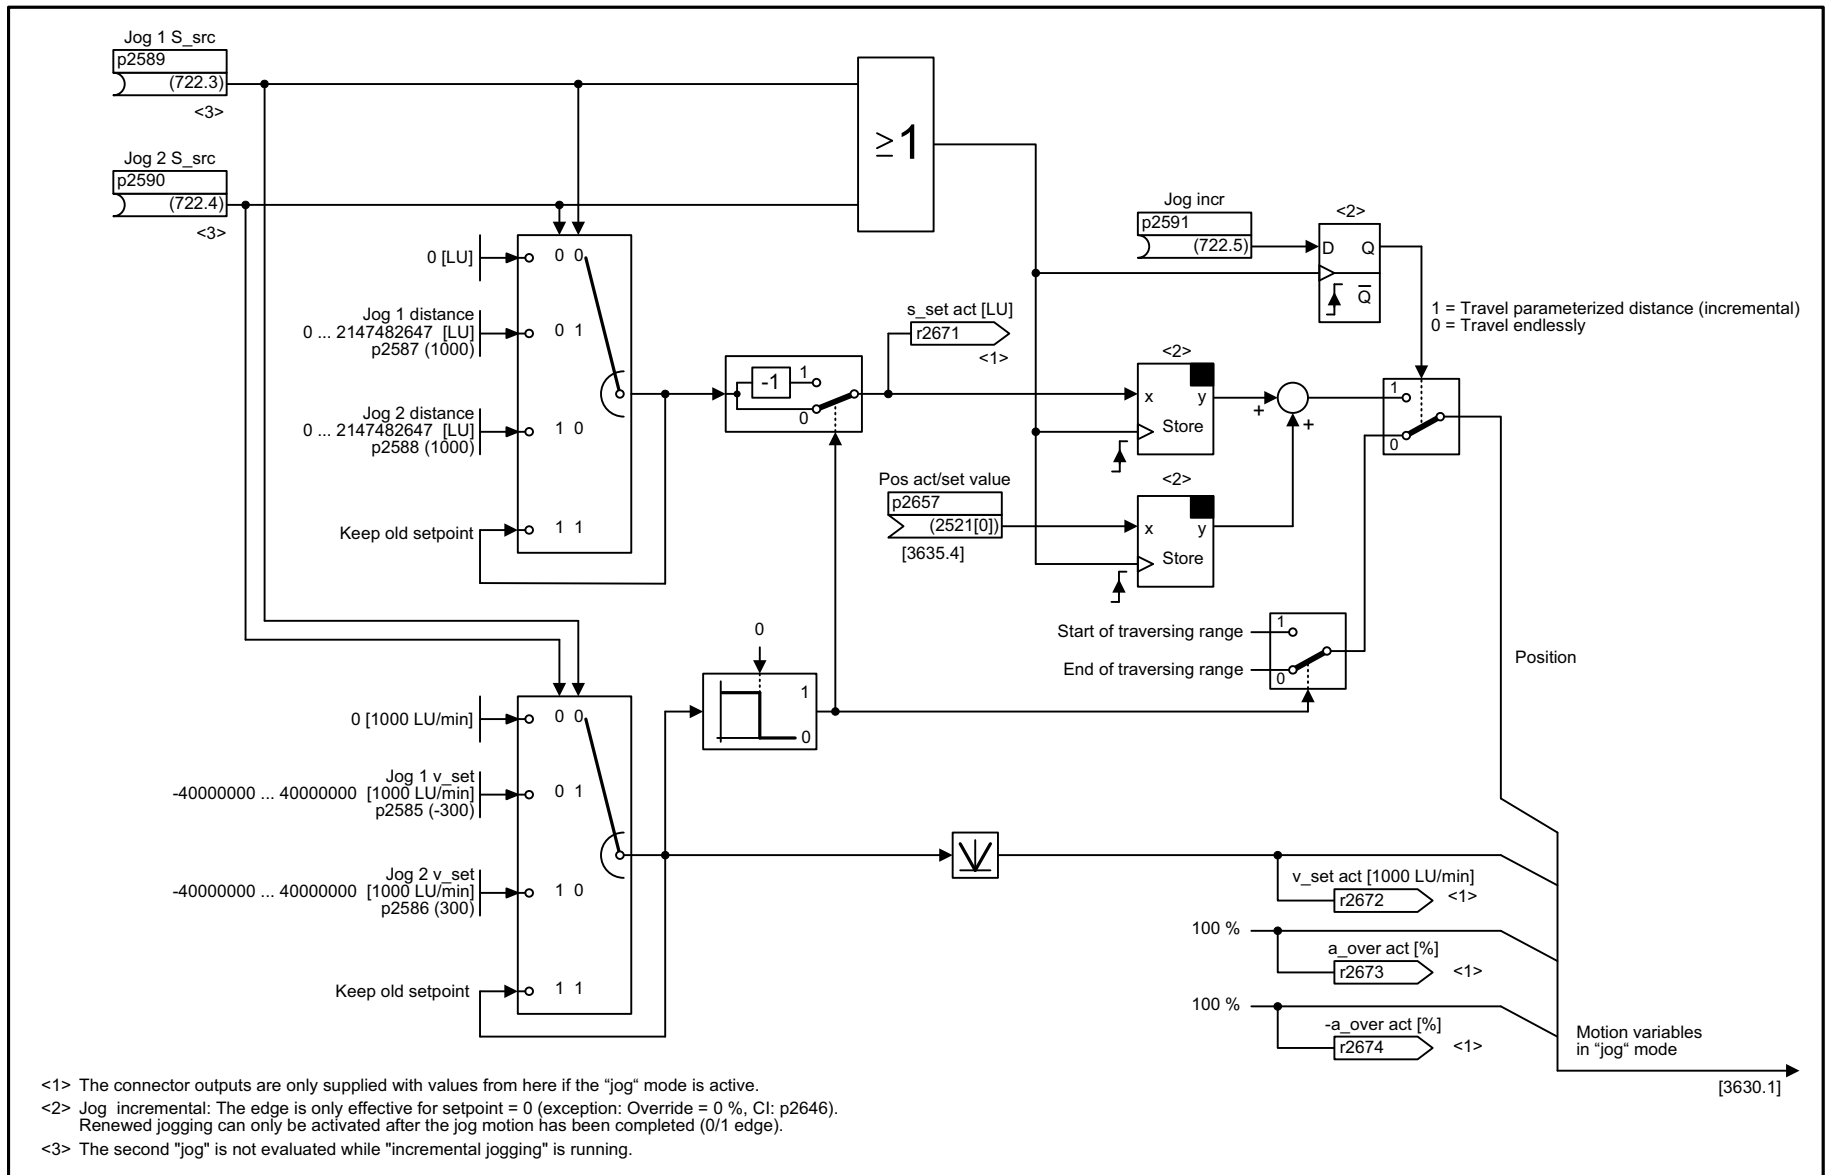


1	2	3	4	5	6	7	8
Basic positioner (EPOS)					fp_3610_97_55.vsd	Function diagram	
Jog mode					12.12.2012 V4.6	G120D CU250D-2	
							- 3610 -

Fig. 2-78 3610 – Jog mode

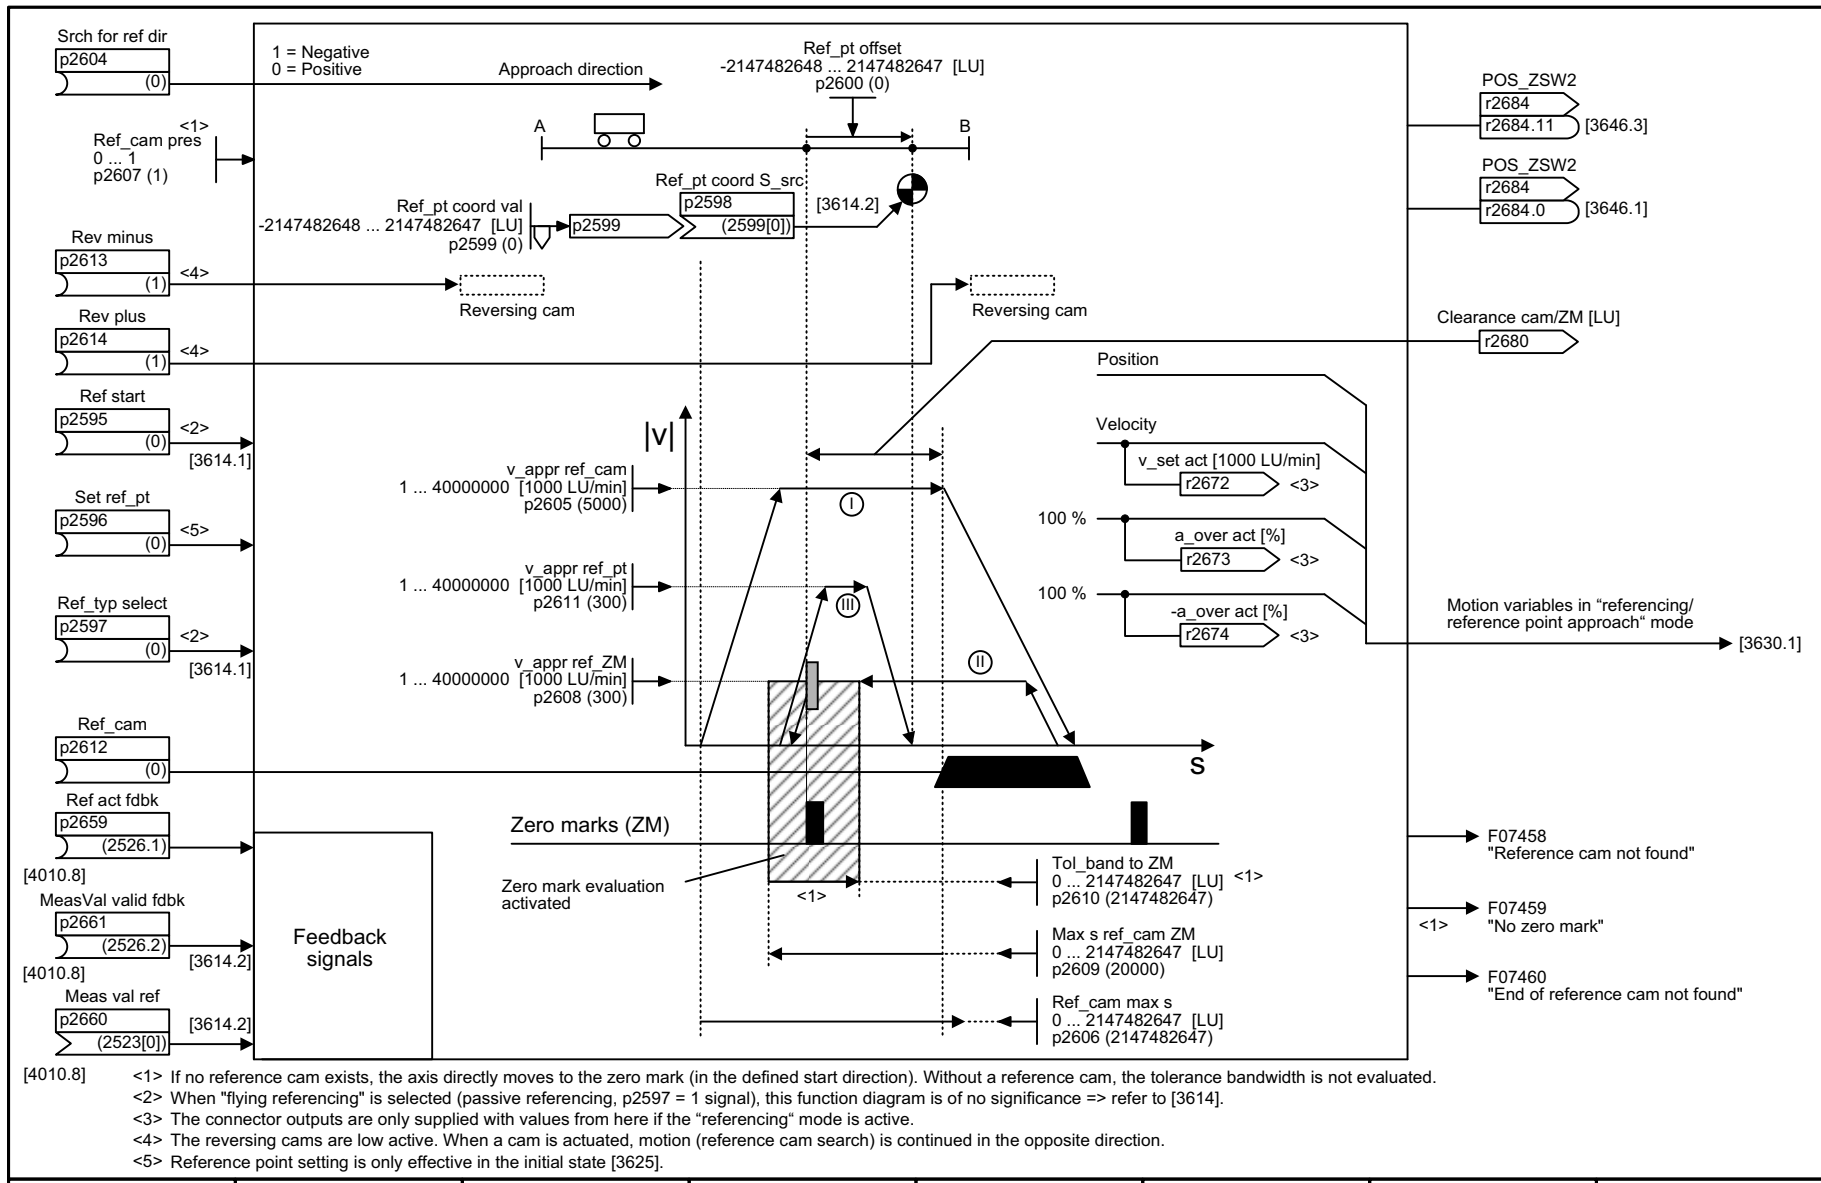

1	2	3	4	5	6	7	8
Basic positioner (EPOS)					fp_3612_97_55.vsd	Function diagram	
Referencing/reference point approach mode (p2597 = 0 signal)					12.12.2012 V4.6	G120D CU250D-2	
							- 3612 -


Fig. 2-79 3612 –Homing / active homing mode (p2597 = 0-signal)

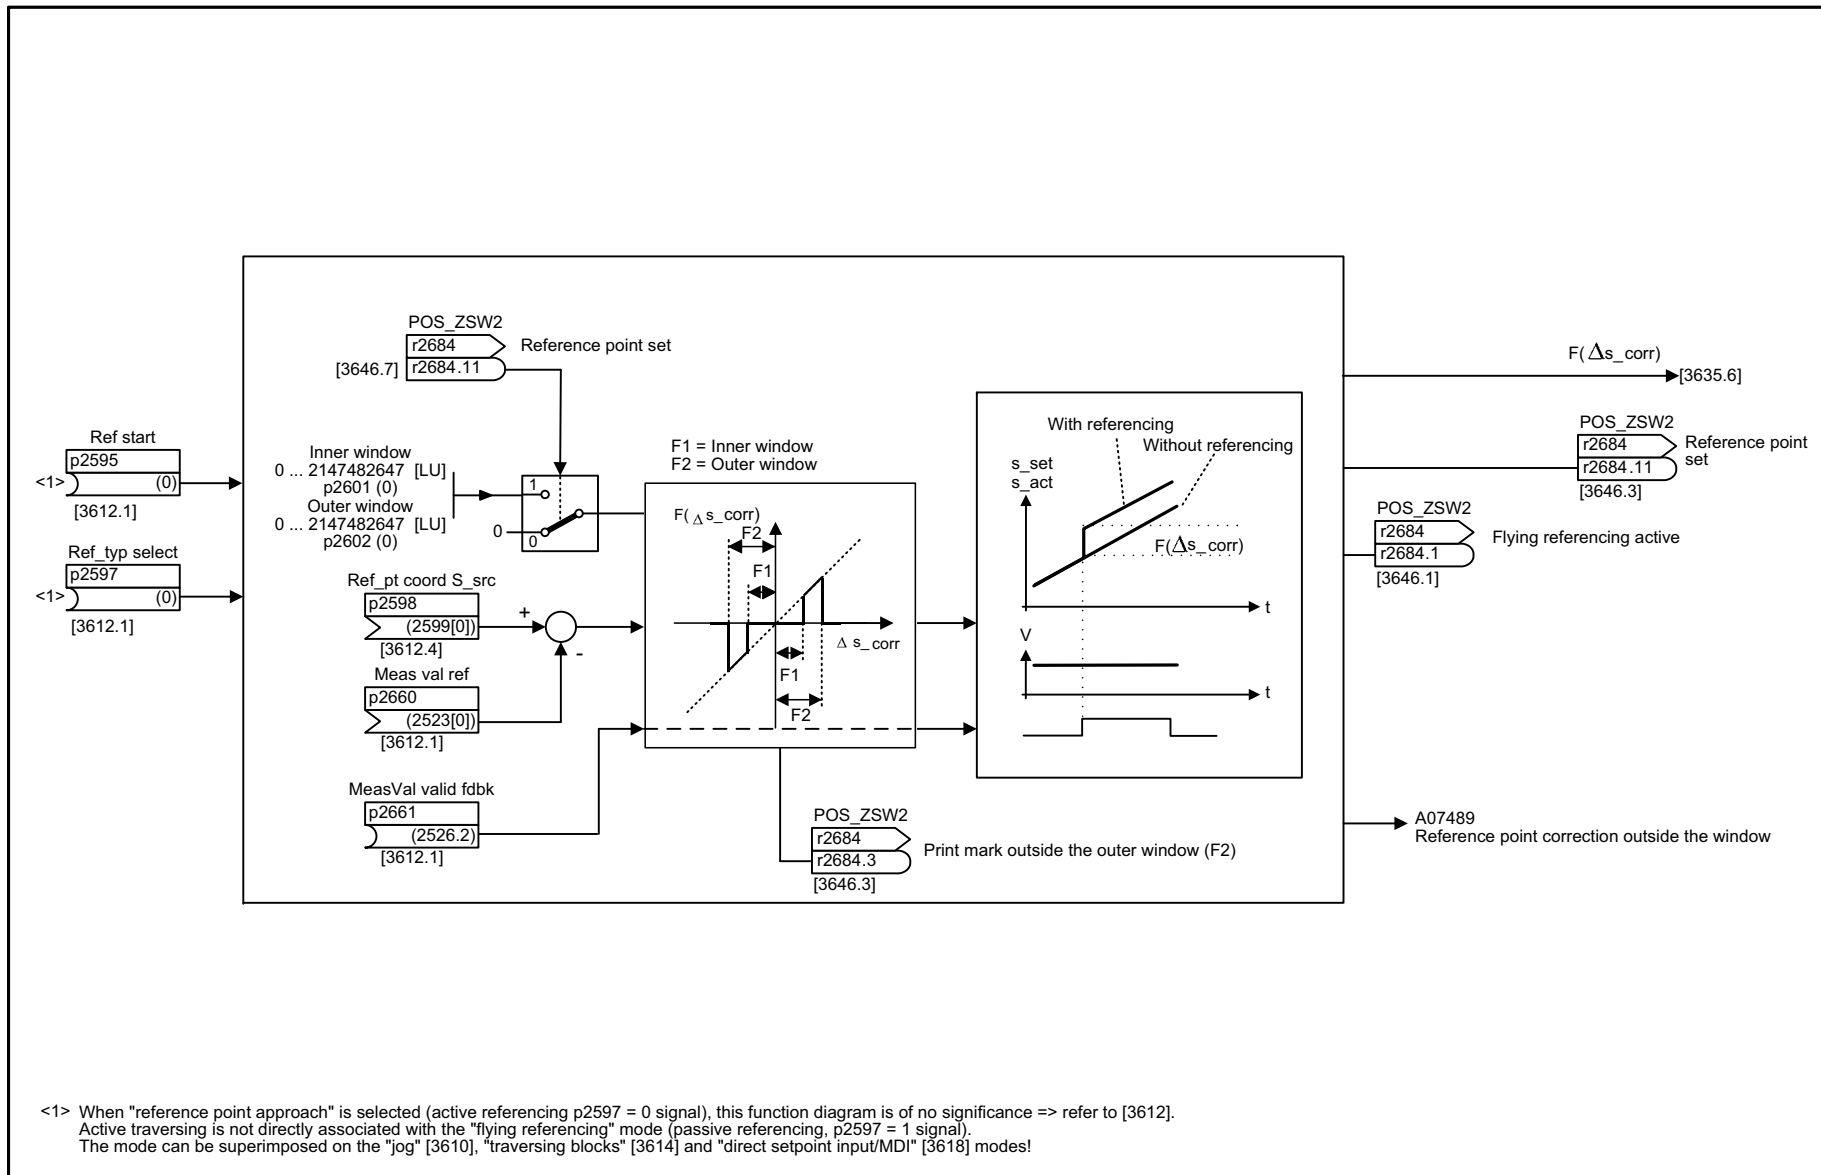

<1> When "reference point approach" is selected (active referencing p2597 = 0 signal), this function diagram is of no significance => refer to [3612].
 Active traversing is not directly associated with the "flying referencing" mode (passive referencing, p2597 = 1 signal).
 The mode can be superimposed on the "jog" [3610], "traversing blocks" [3614] and "direct setpoint input/MDI" [3618] modes!


1	2	3	4	5	6	7	8
Basic positioner (EPOS)					fp_3614_97_55.vsd	Function diagram	
Flying referencing mode (p2597 = 1 signal)					12.12.2012 V4.6	G120D CU250D-2	
							- 3614 -

Fig. 2-80 3614 – Passive homing mode (p2597 = 1-signal)

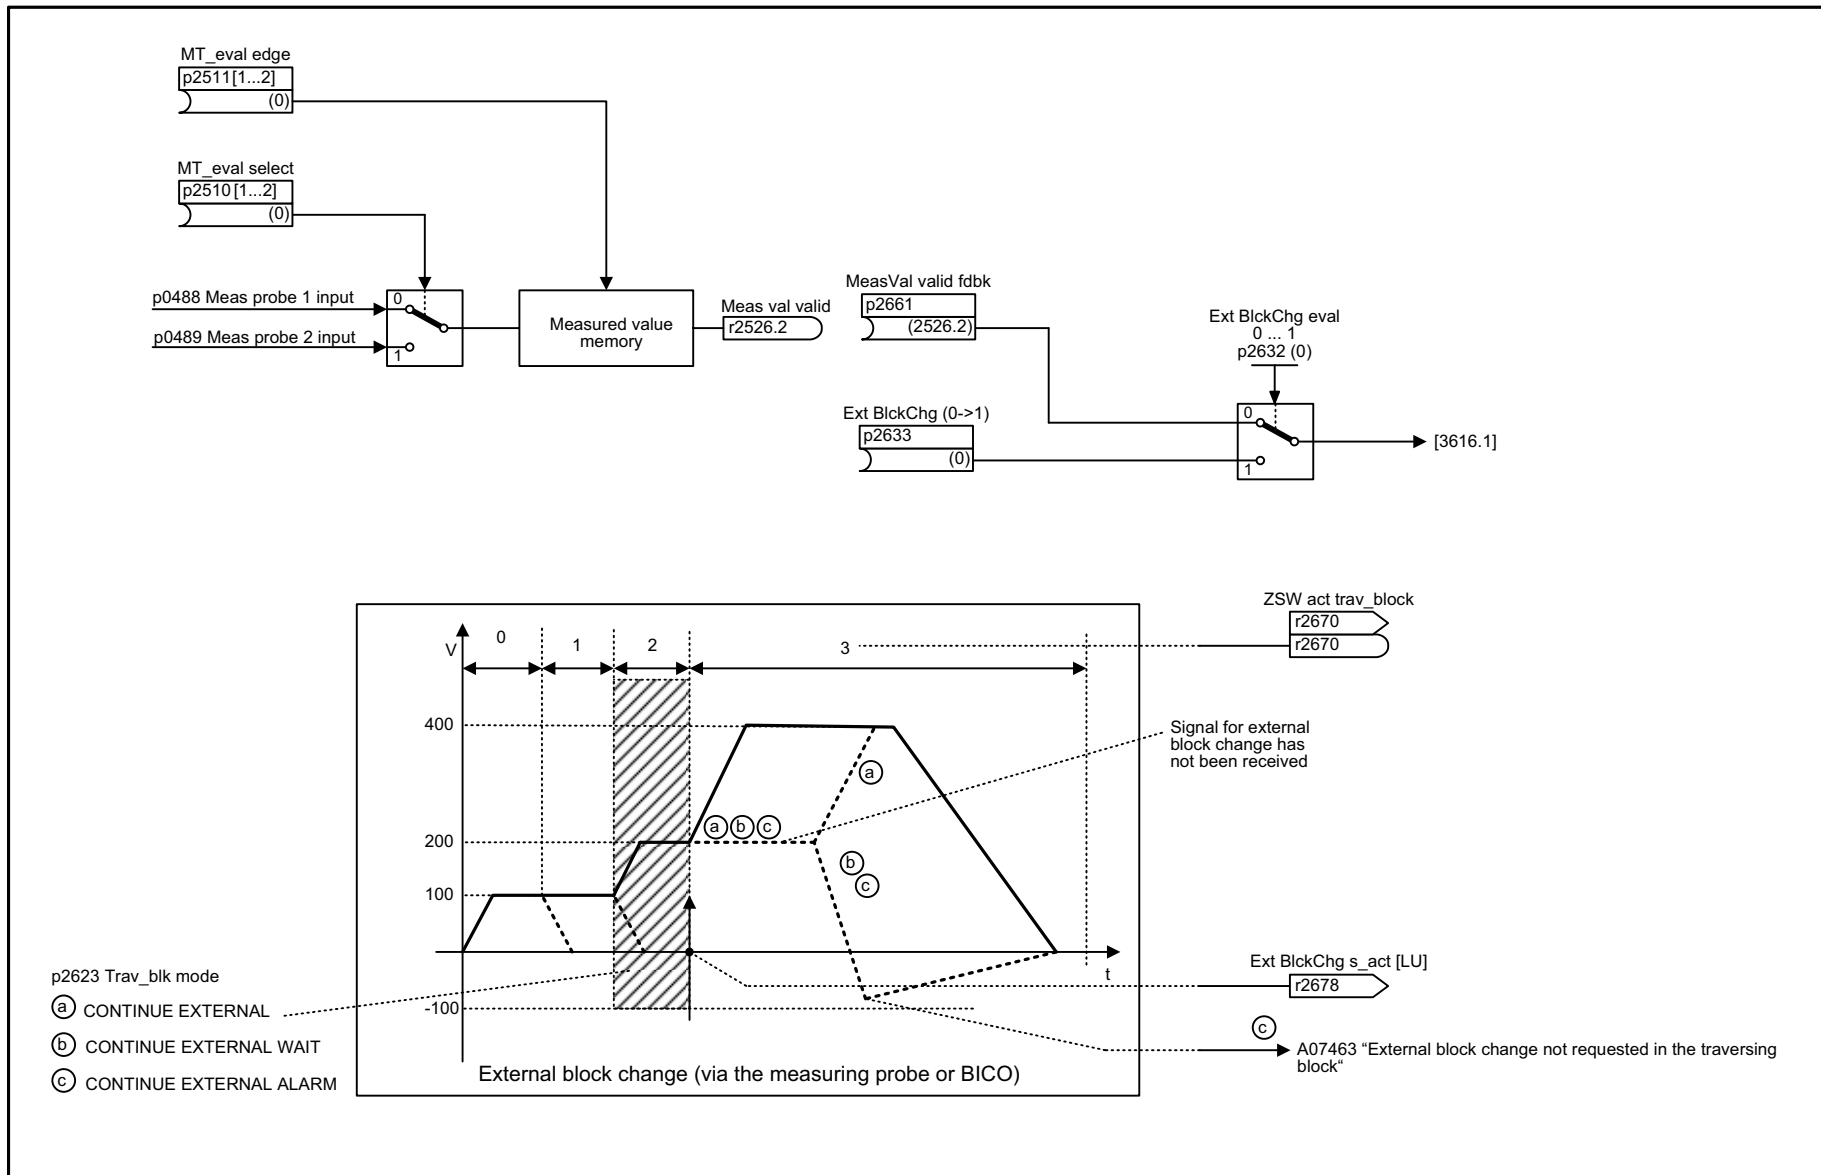

1	2	3	4	5	6	7	8
Basic positioner (EPOS)					fp_3615_97_55.vsd	Function diagram	
Traversing block mode, external block change					12.12.2012 V4.6	G120D CU250D-2	

Fig. 2-82 3616 – Traversing block mode

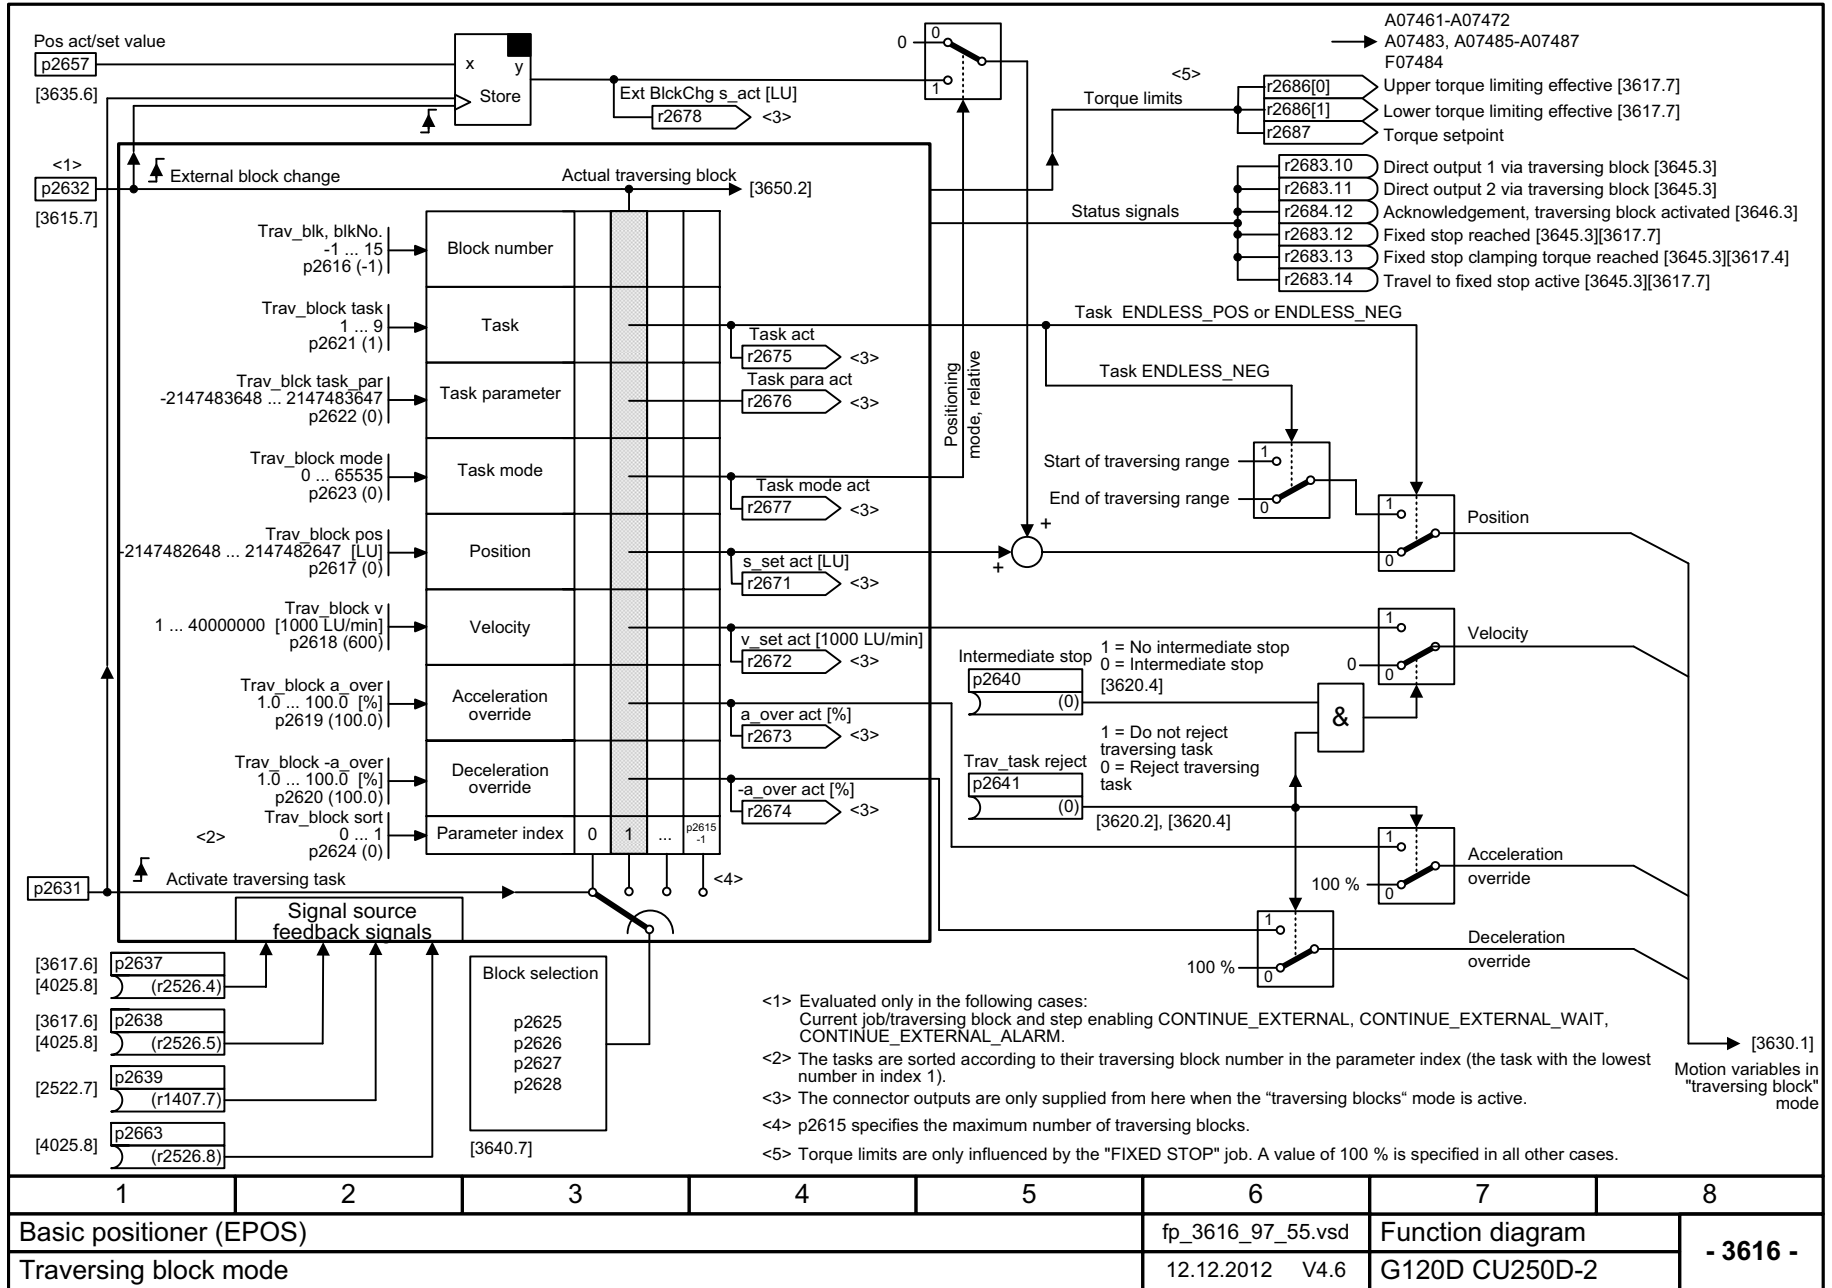

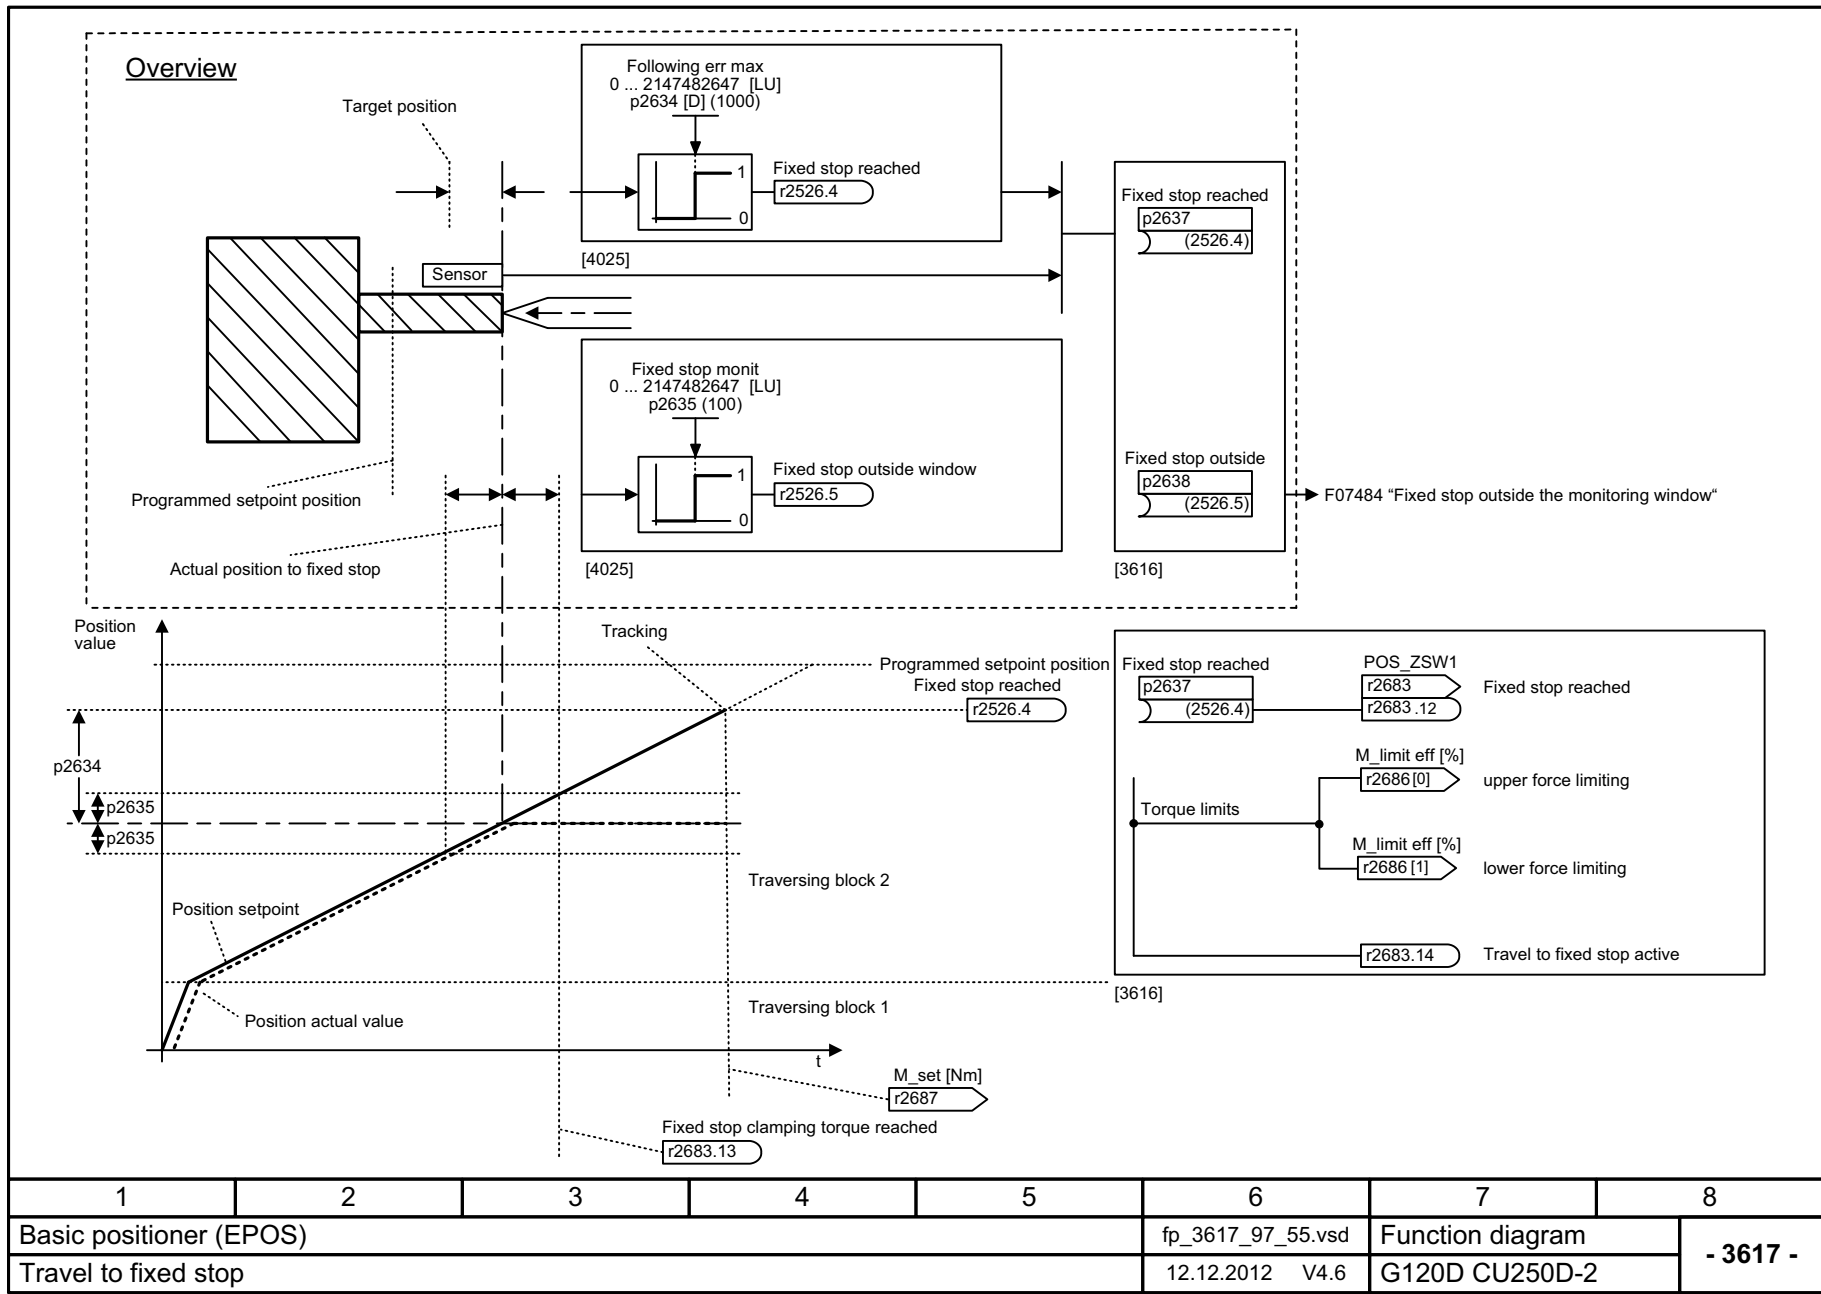


Fig. 2-83 3617 – Travel to fixed stop

1	2	3	4	5	6	7	8
Basic positioner (EPOS)					fp_3617_97_55.vsd	Function diagram	
Travel to fixed stop					12.12.2012 V4.6	G120D CU250D-2	
							- 3617 -


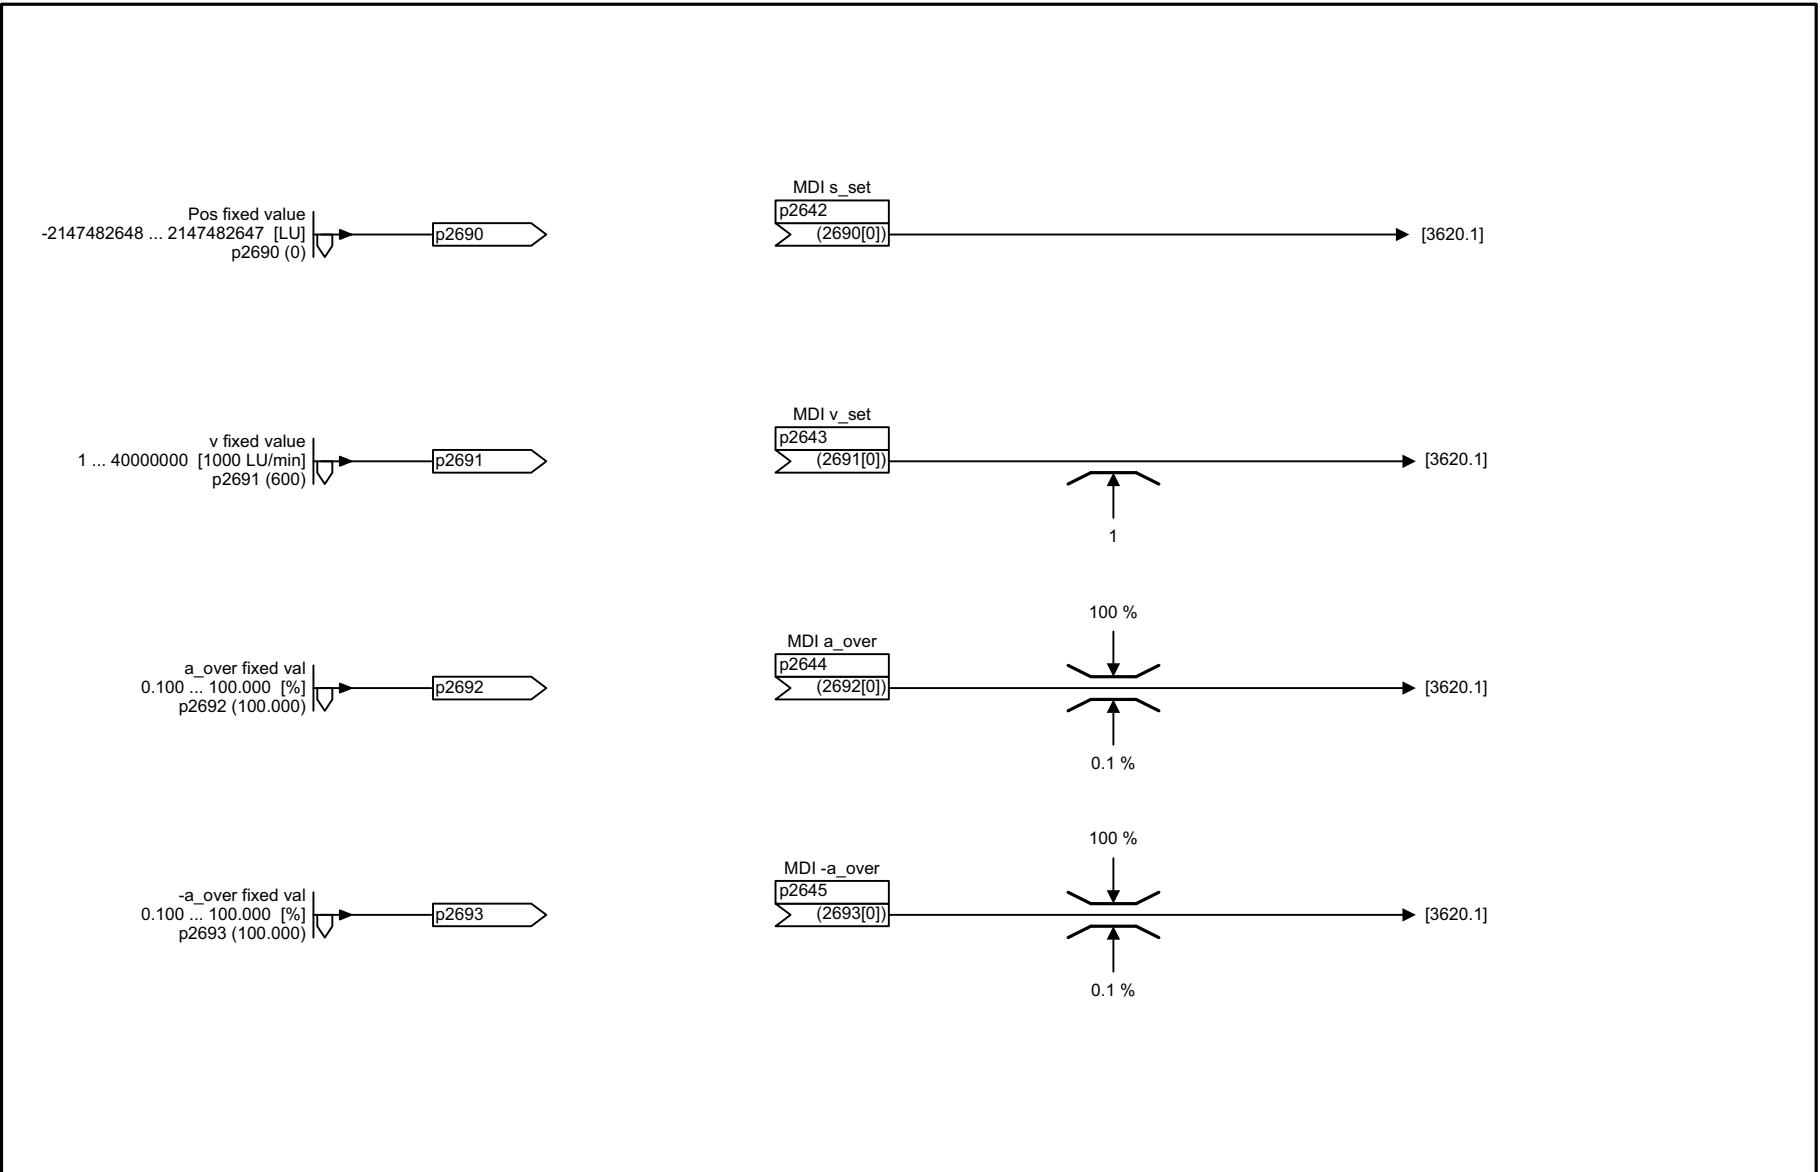


Fig. 2-84 3618 – Direct setpoint specification / MDI mode, dynamic values

1	2	3	4	5	6	7	8
Basic positioner (EPOS)					fp_3618_97_55.vsd	Function diagram	
Direct setpoint input/MDI mode, dynamic values					12.12.2012 V4.6	G120D CU250D-2	
							- 3618 -

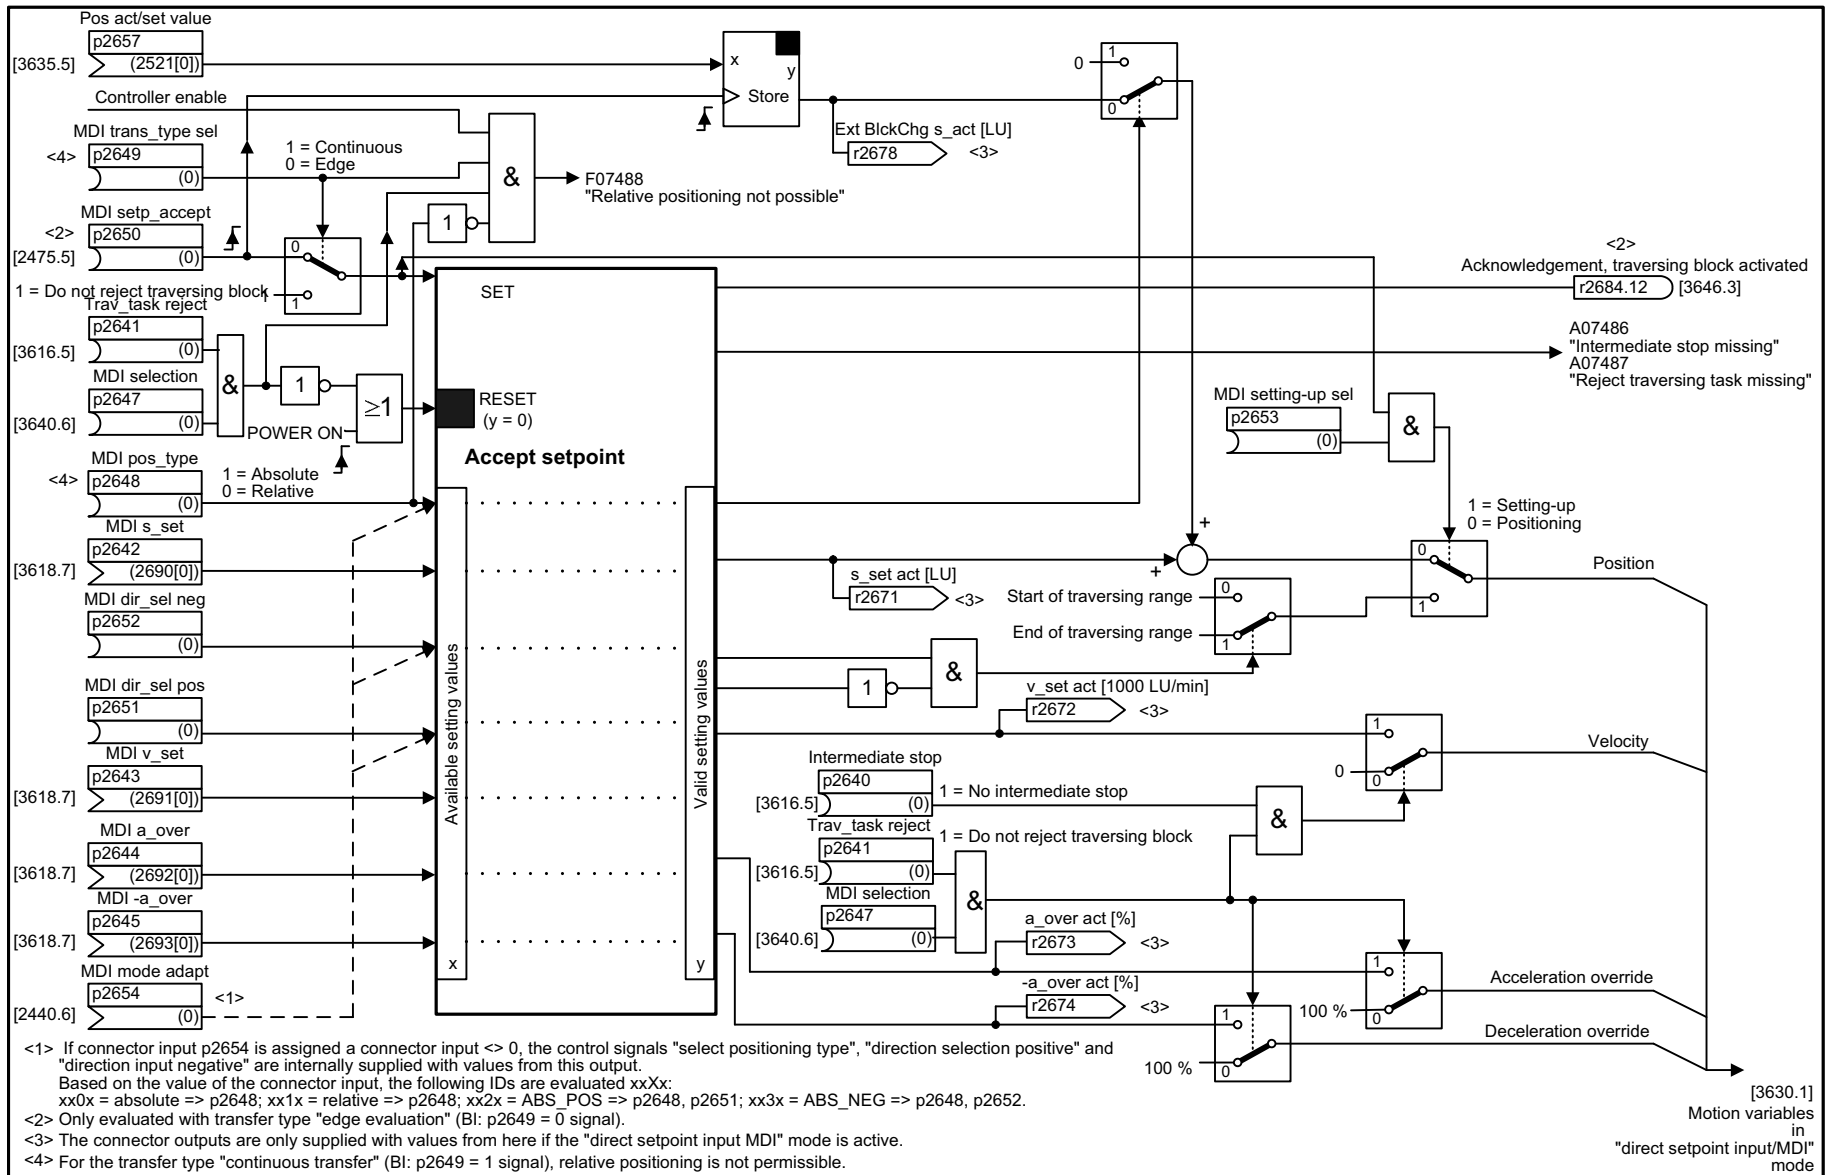


<1> If connector input p2654 is assigned a connector input <> 0, the control signals "select positioning type", "direction selection positive" and "direction input negative" are internally supplied with values from this output.
 Based on the value of the connector input, the following IDs are evaluated xxXx:
 xx0x = absolute => p2648; xx1x = relative => p2648; xx2x = ABS_POS => p2648, p2651; xx3x = ABS_NEG => p2648, p2652.
 <2> Only evaluated with transfer type "edge evaluation" (BI: p2649 = 0 signal).
 <3> The connector outputs are only supplied with values from here if the "direct setpoint input/MDI" mode is active.
 <4> For the transfer type "continuous transfer" (BI: p2649 = 1 signal), relative positioning is not permissible.

1	2	3	4	5	6	7	8
Basic positioner (EPOS)					fp_3620_97_55.vsd	Function diagram	
Direct setpoint input/MDI					12.12.2012 V4.6	G120D CU250D-2	
							- 3620 -


Fig. 2-85 3620 – Direct setpoint specification / MDI mode

Fig. 2-86 3625 – Mode control

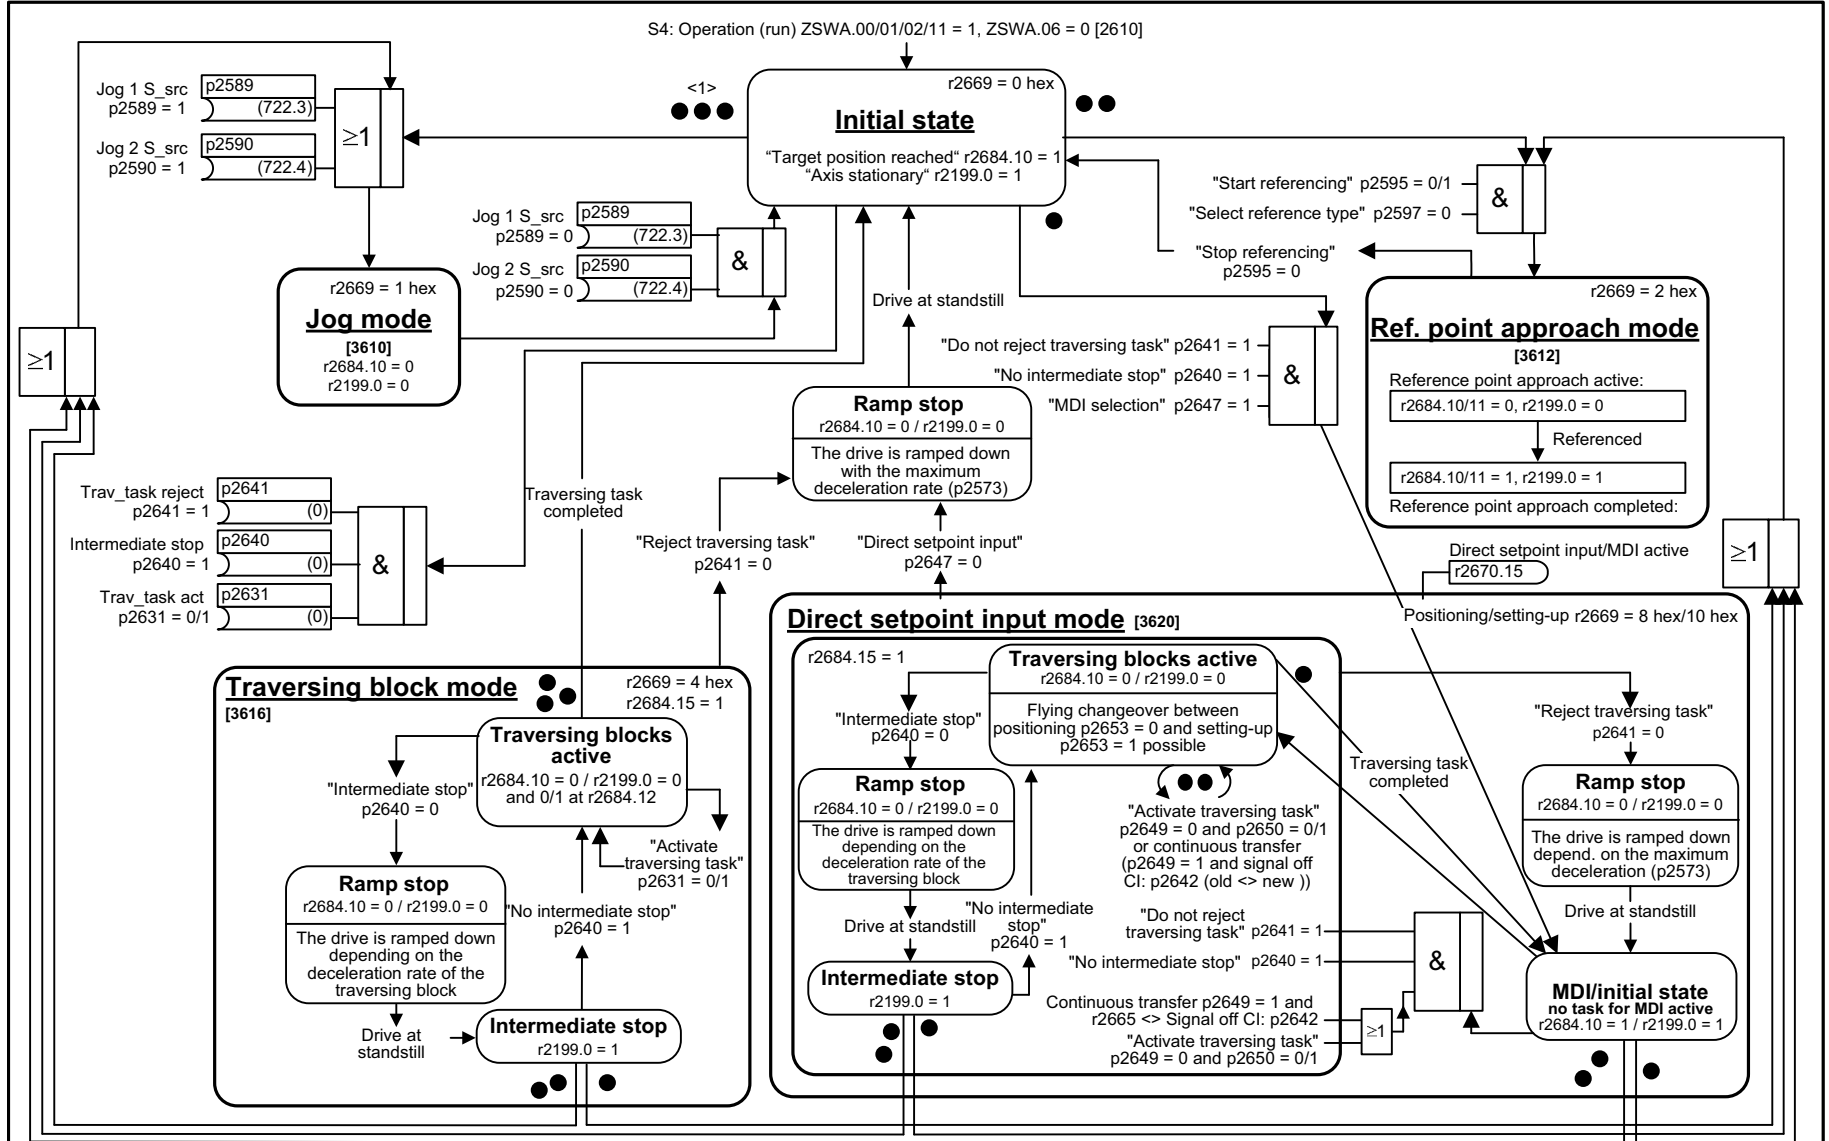

<1> The more points exist at a transition, the higher the priority.

1	2	3	4	5	6	7	8
Basic positioner (EPOS)					fp_3625_97_55.vsd	Function diagram	
Mode control					12.12.2012 V4.6	G120D CU250D-2	
							- 3625 -

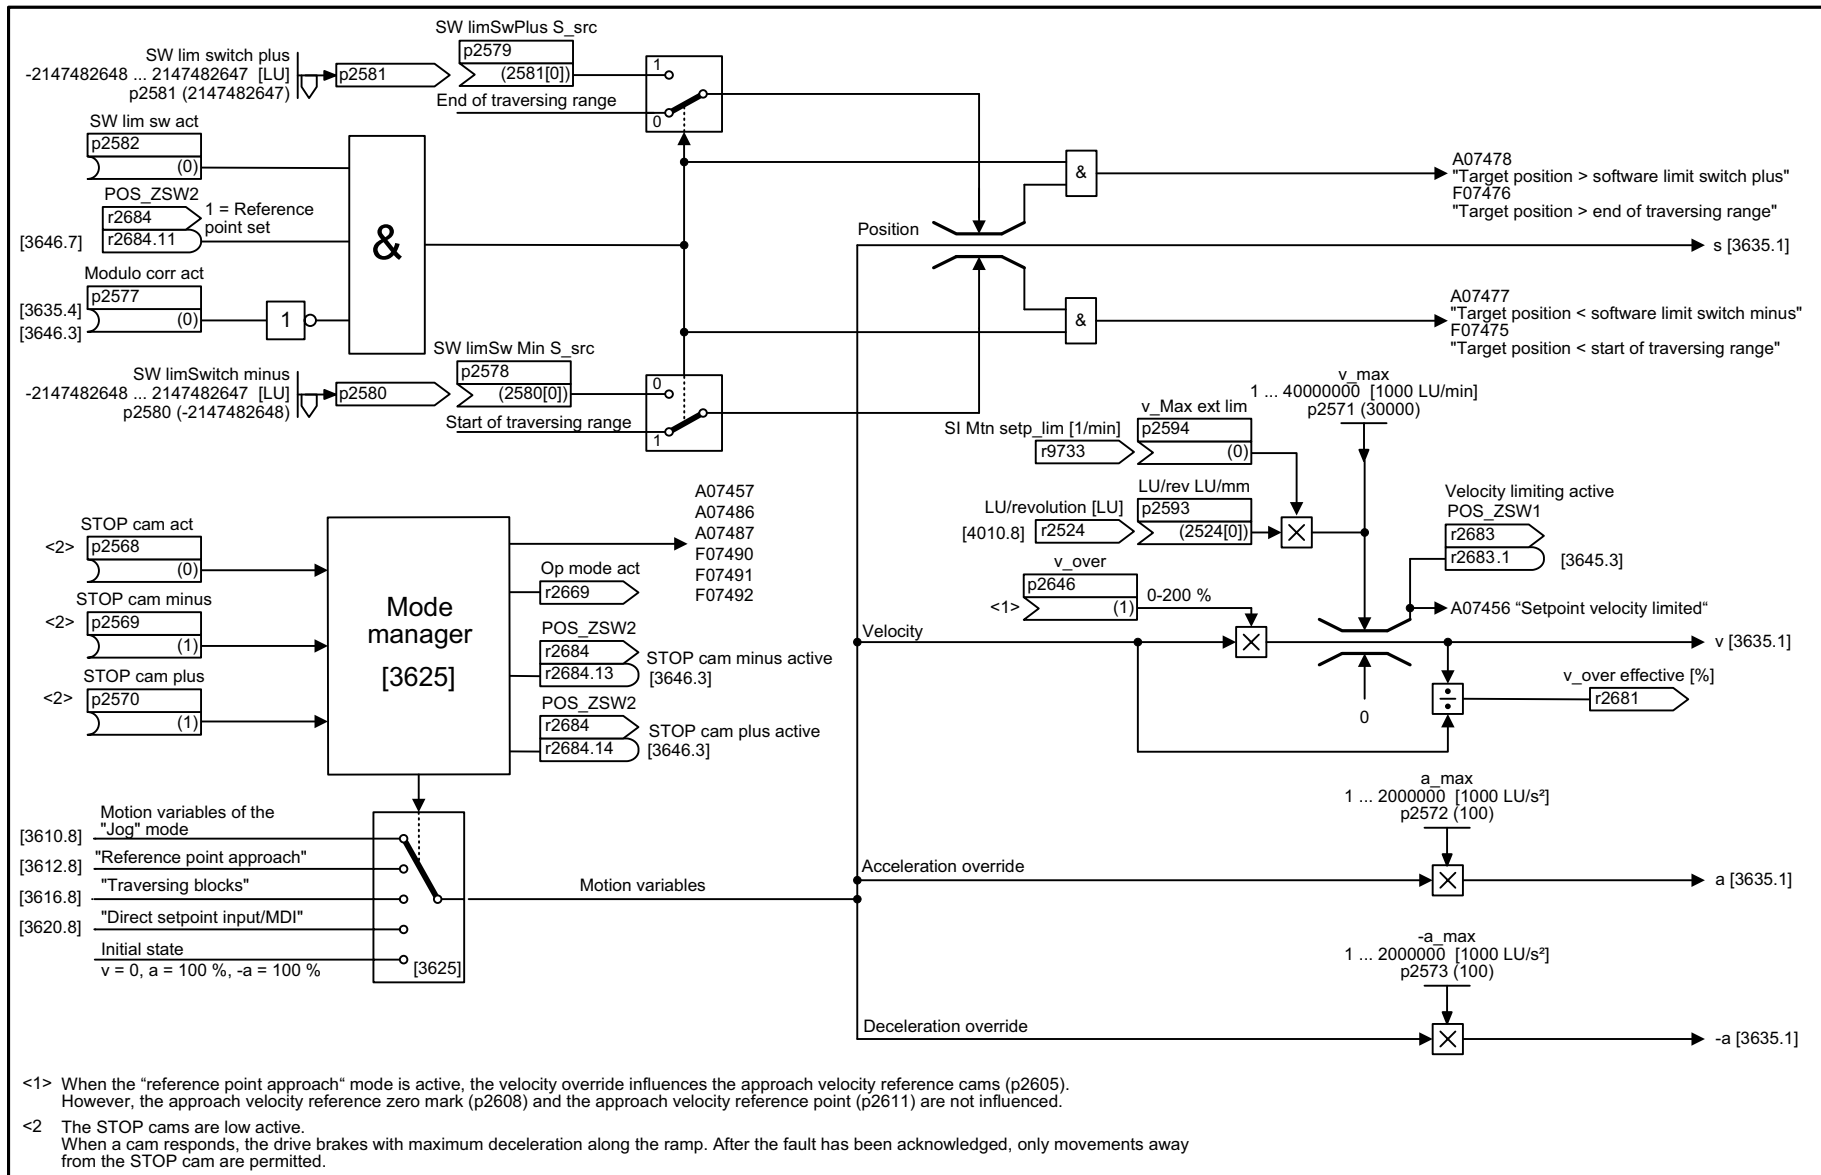

1	2	3	4	5	6	7	8
Basic positioner (EPOS)					fp_3630_97_55.vsd	Function diagram	
Traversing range limits					12.12.2012 V4.6	G120D CU250D-2	
							- 3630 -

Fig. 2-87 3630 – Traversing range limits

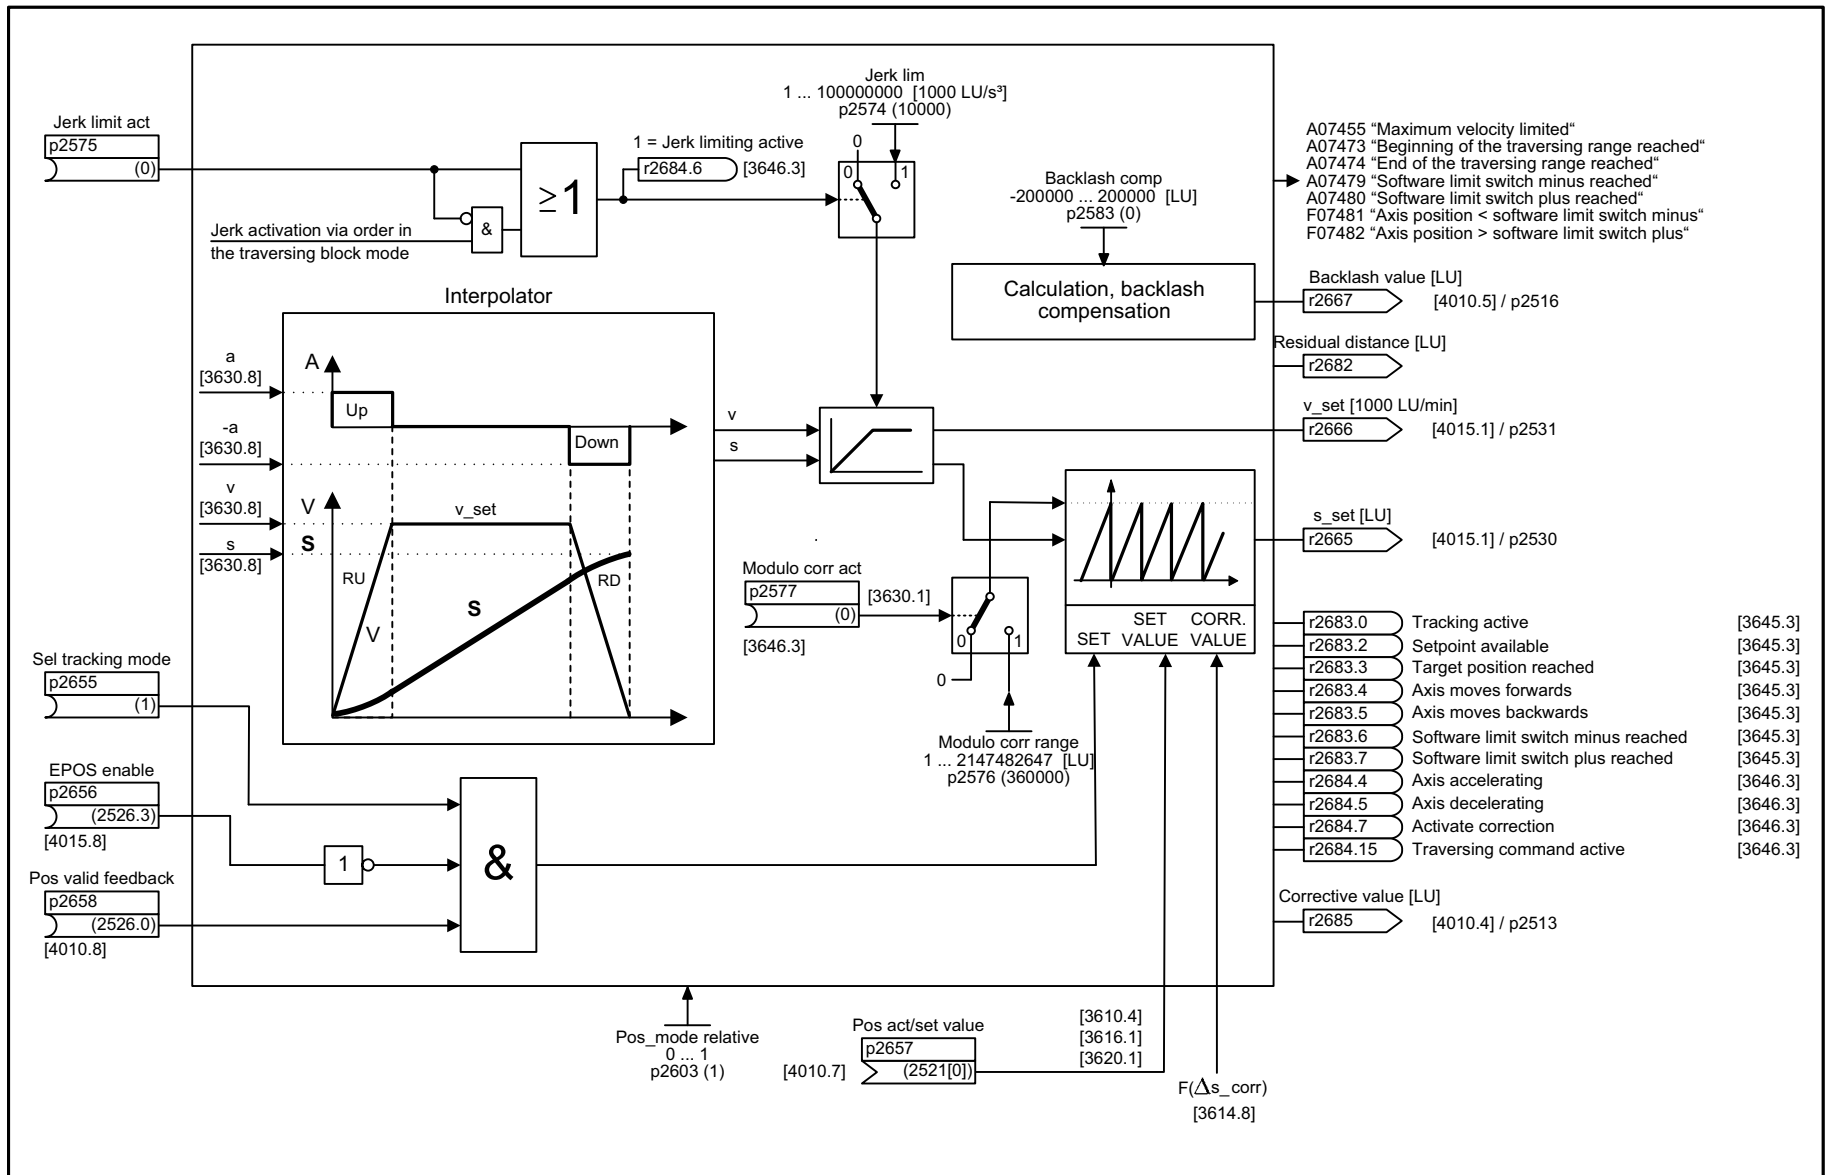


Fig. 2-88 3635 – Interpolator

1	2	3	4	5	6	7	8
Basic positioner (EPOS)					fp_3635_97_55.vsd	Function diagram	
Interpolator					12.12.2012 V4.6	G120D CU250D-2	
							- 3635 -

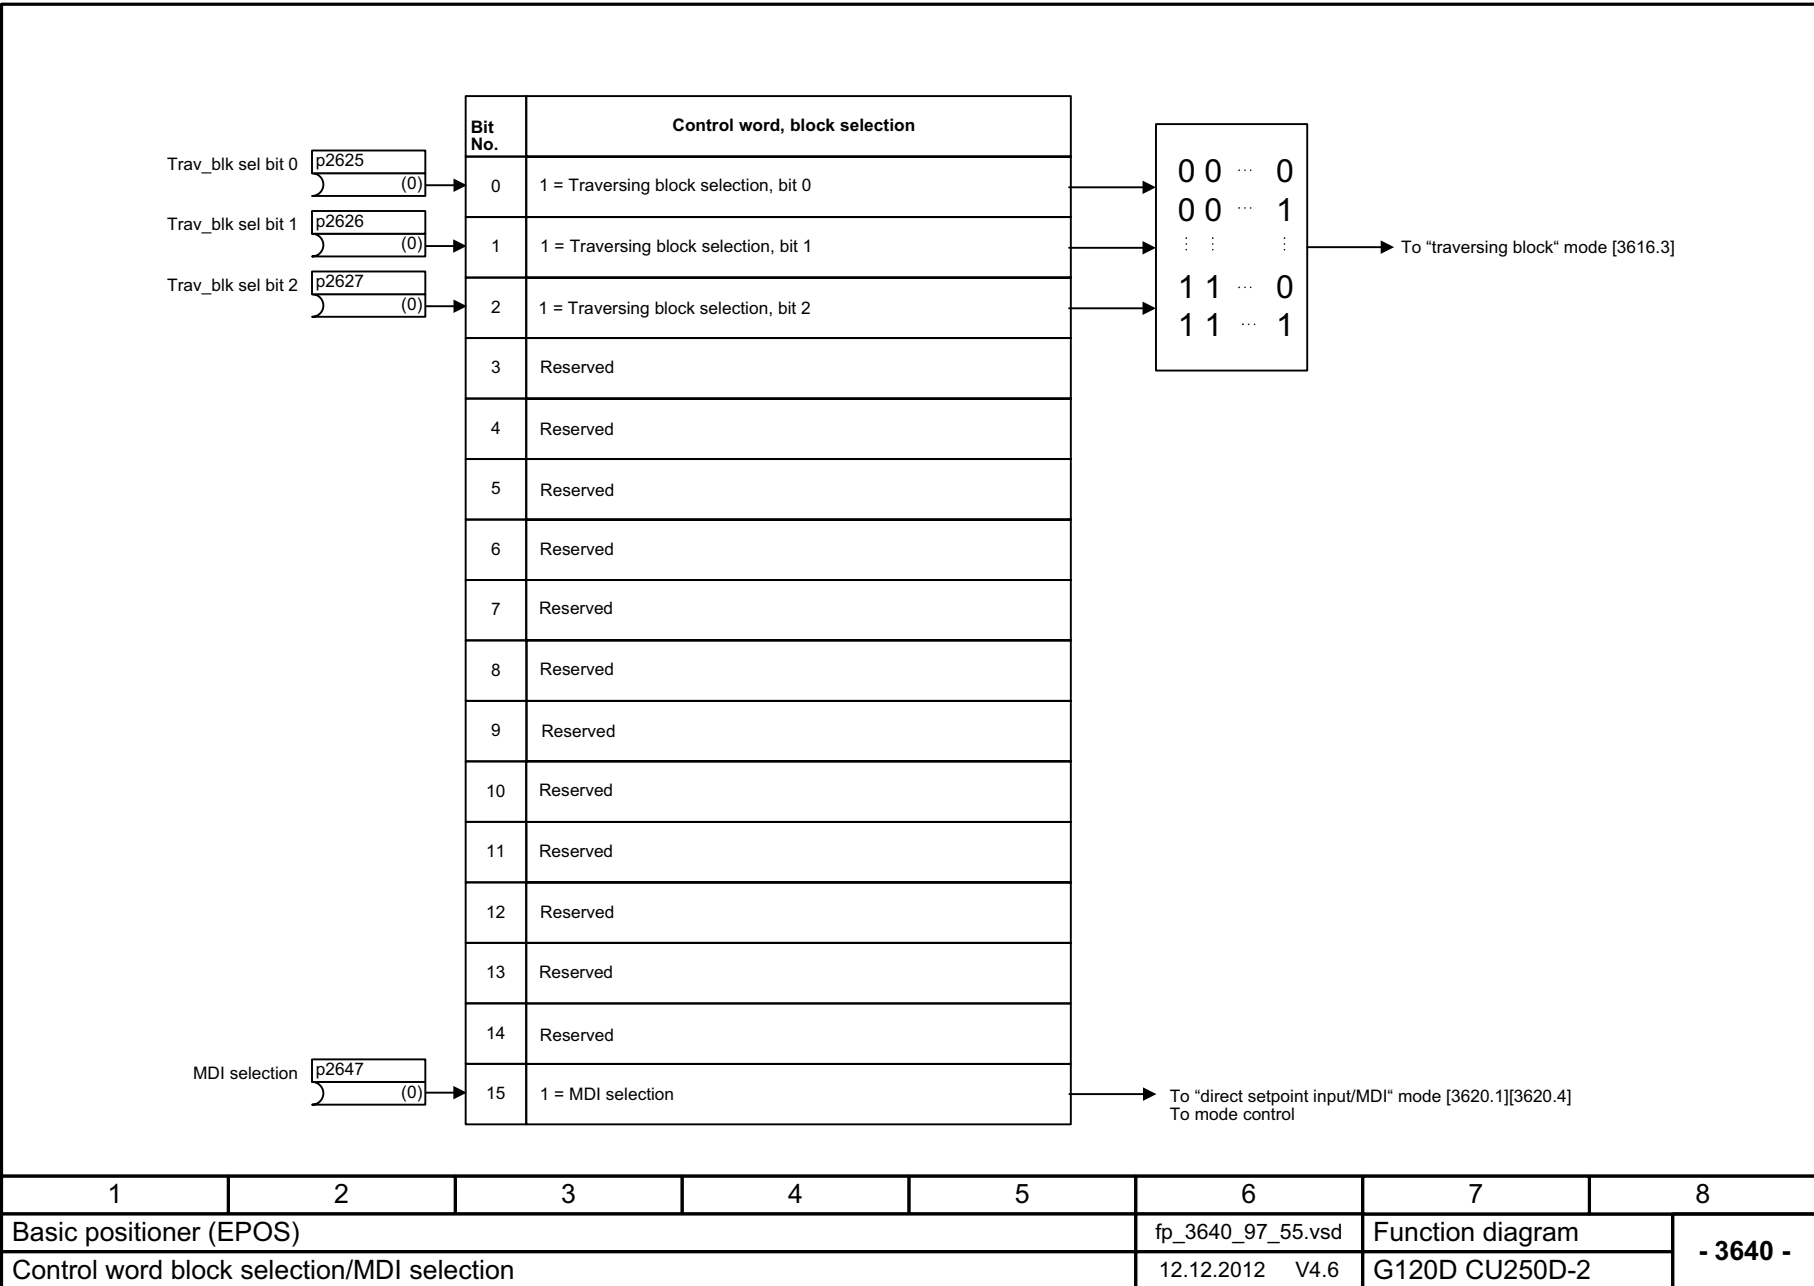


Fig. 2-89 3640 – Control word, block selection / MDI selection


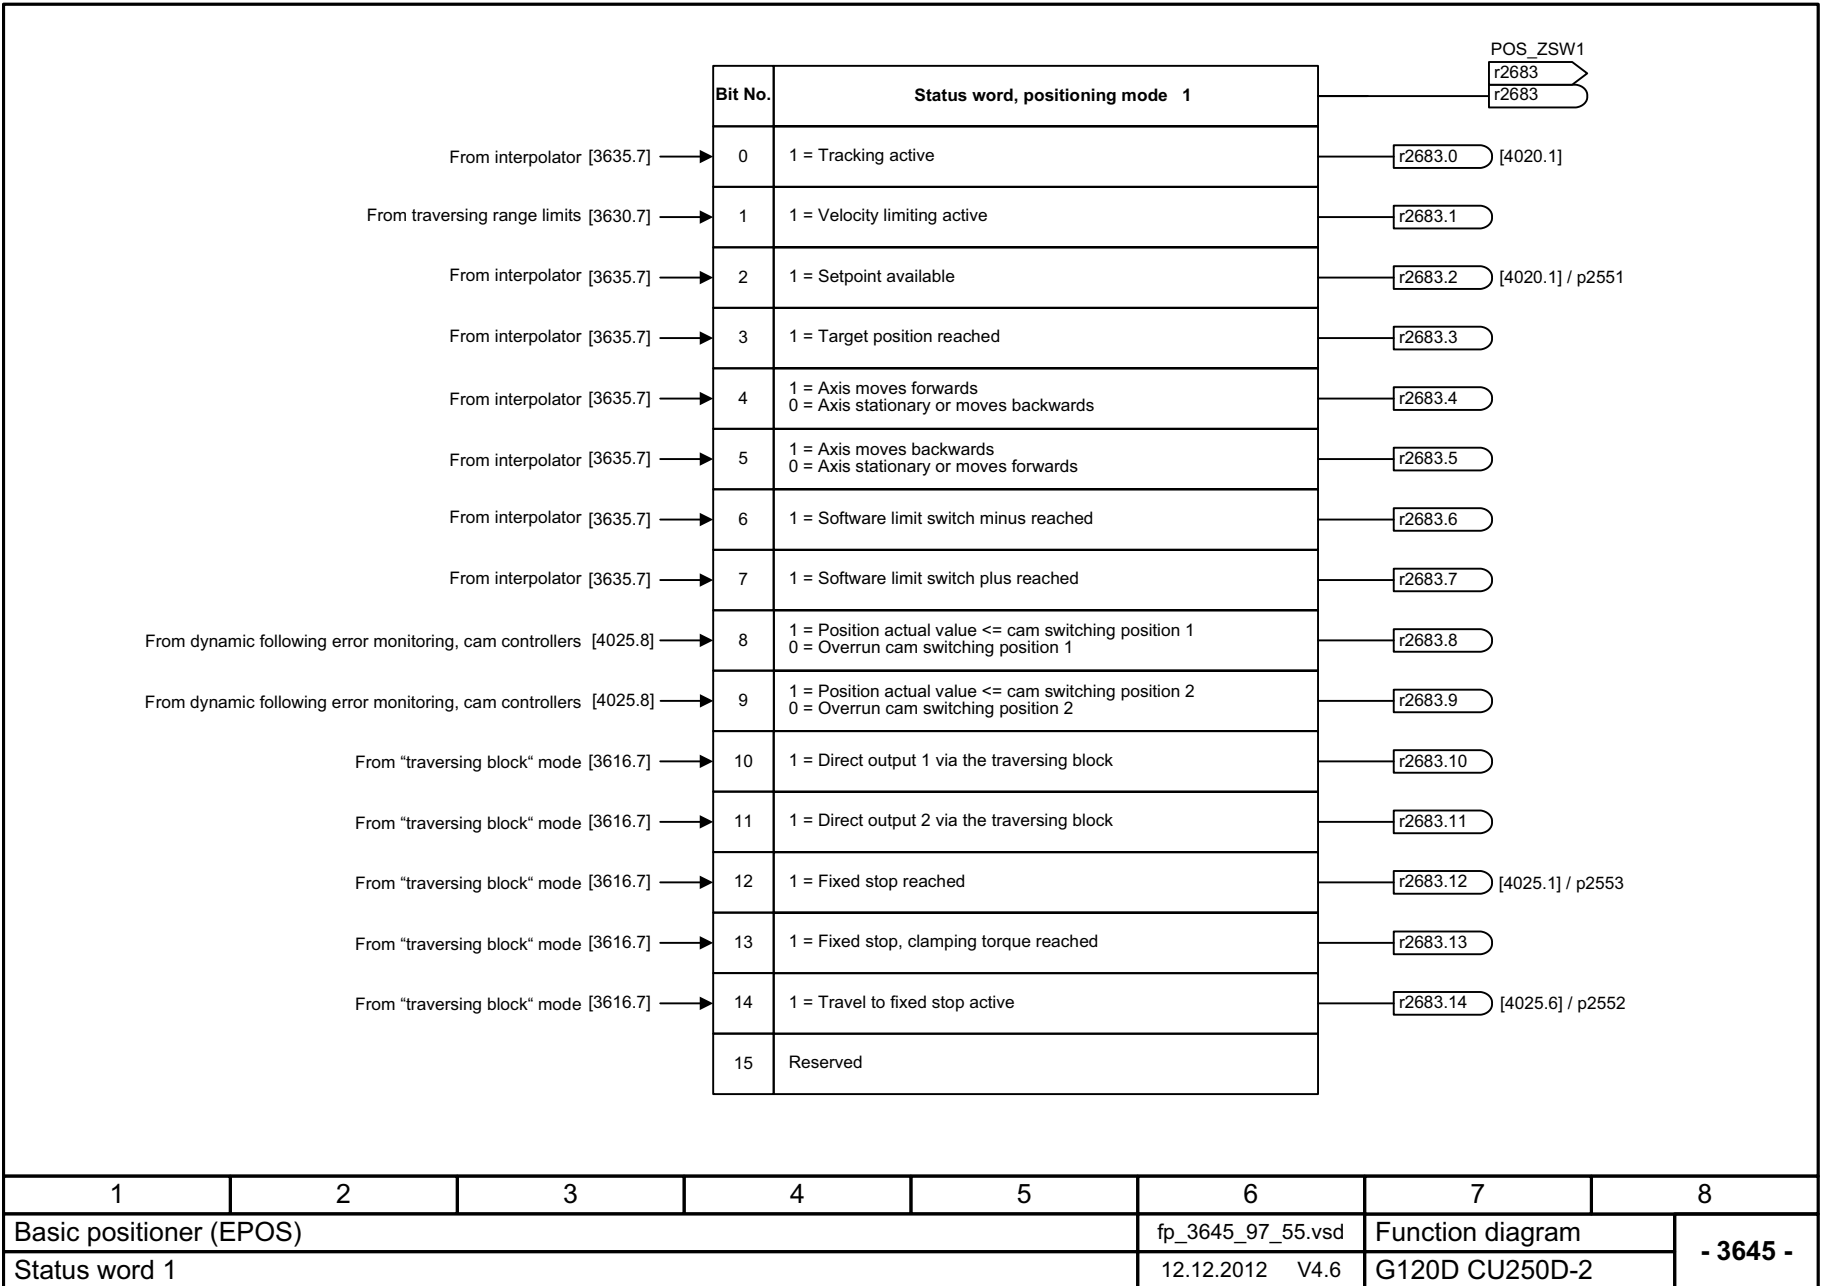


Fig. 2-90 3645 – Status word 1

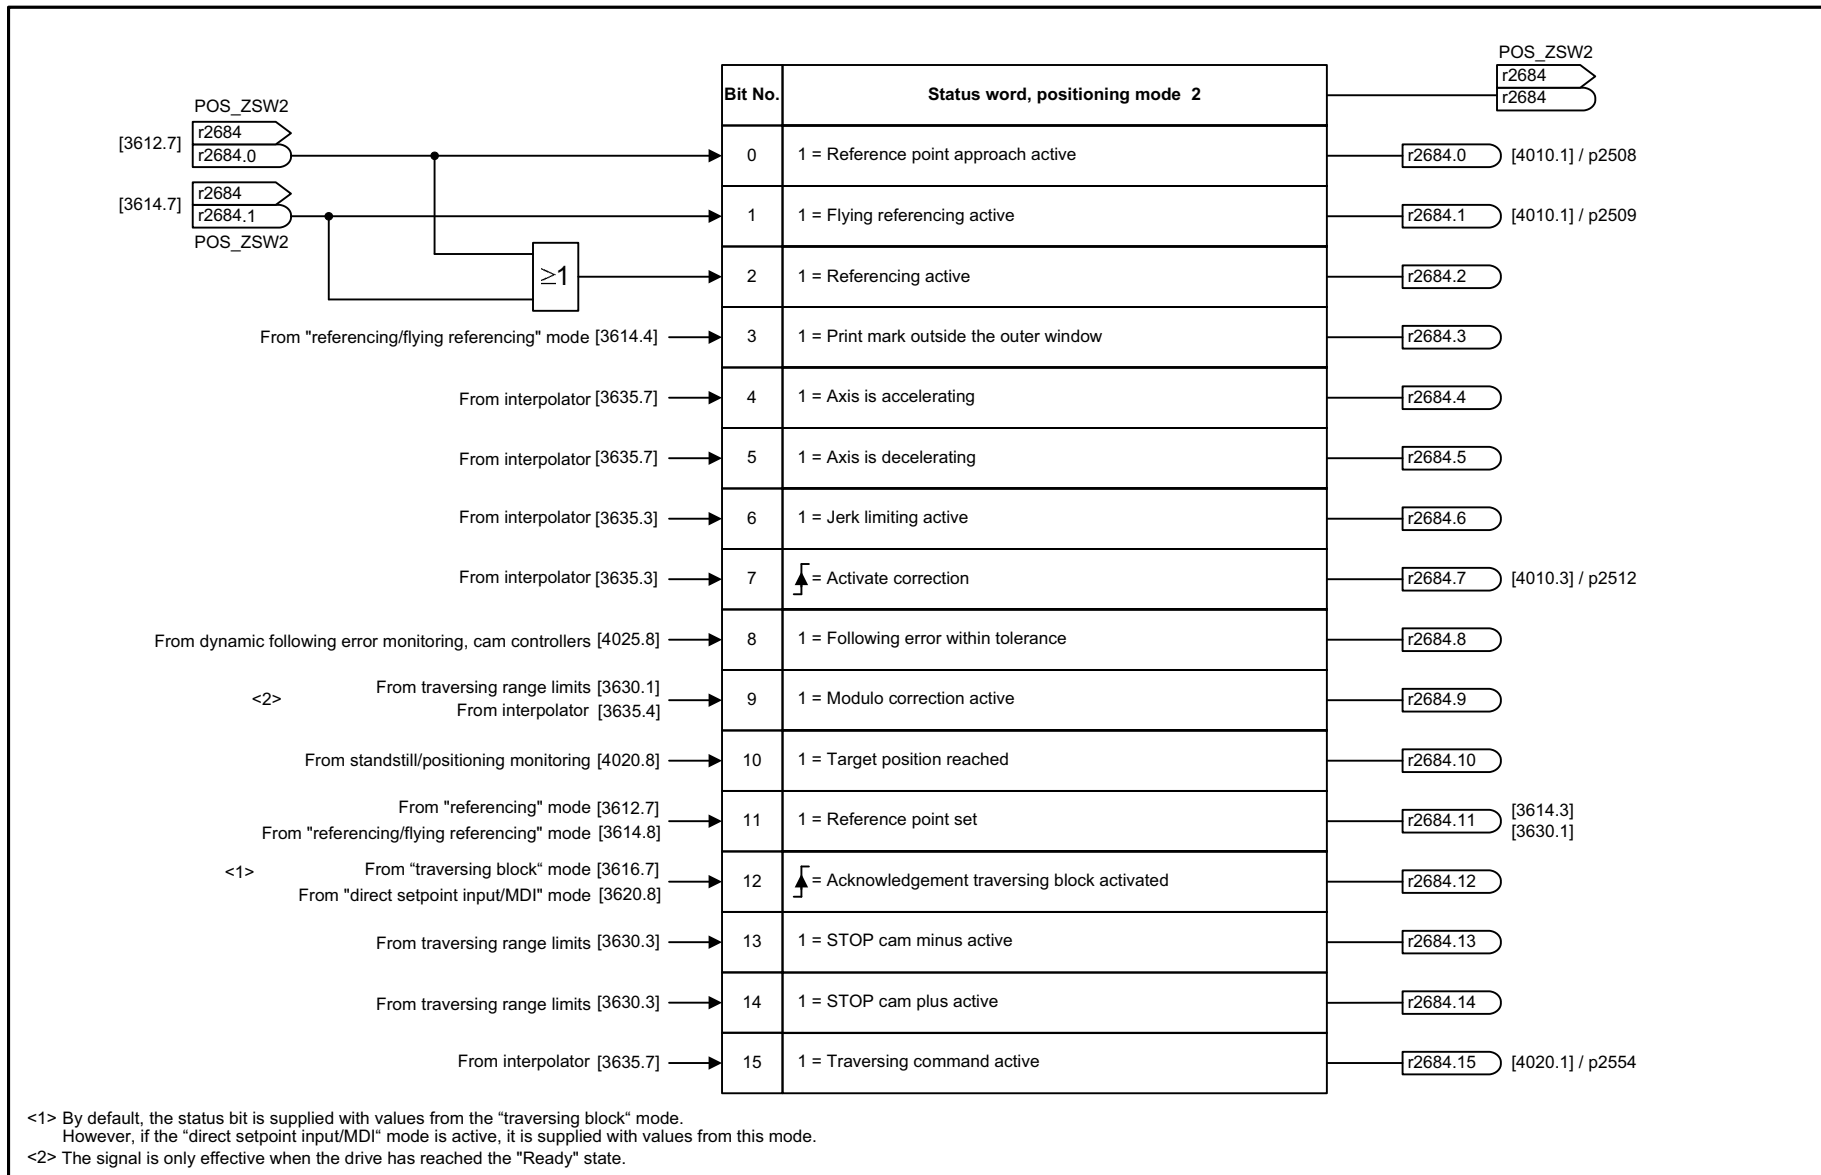

1	2	3	4	5	6	7	8
Basic positioner (EPOS)					fp_3646_97_55.vsd	Function diagram	
Status word 2					12.12.2012 V4.6	G120D CU250D-2	
							- 3646 -

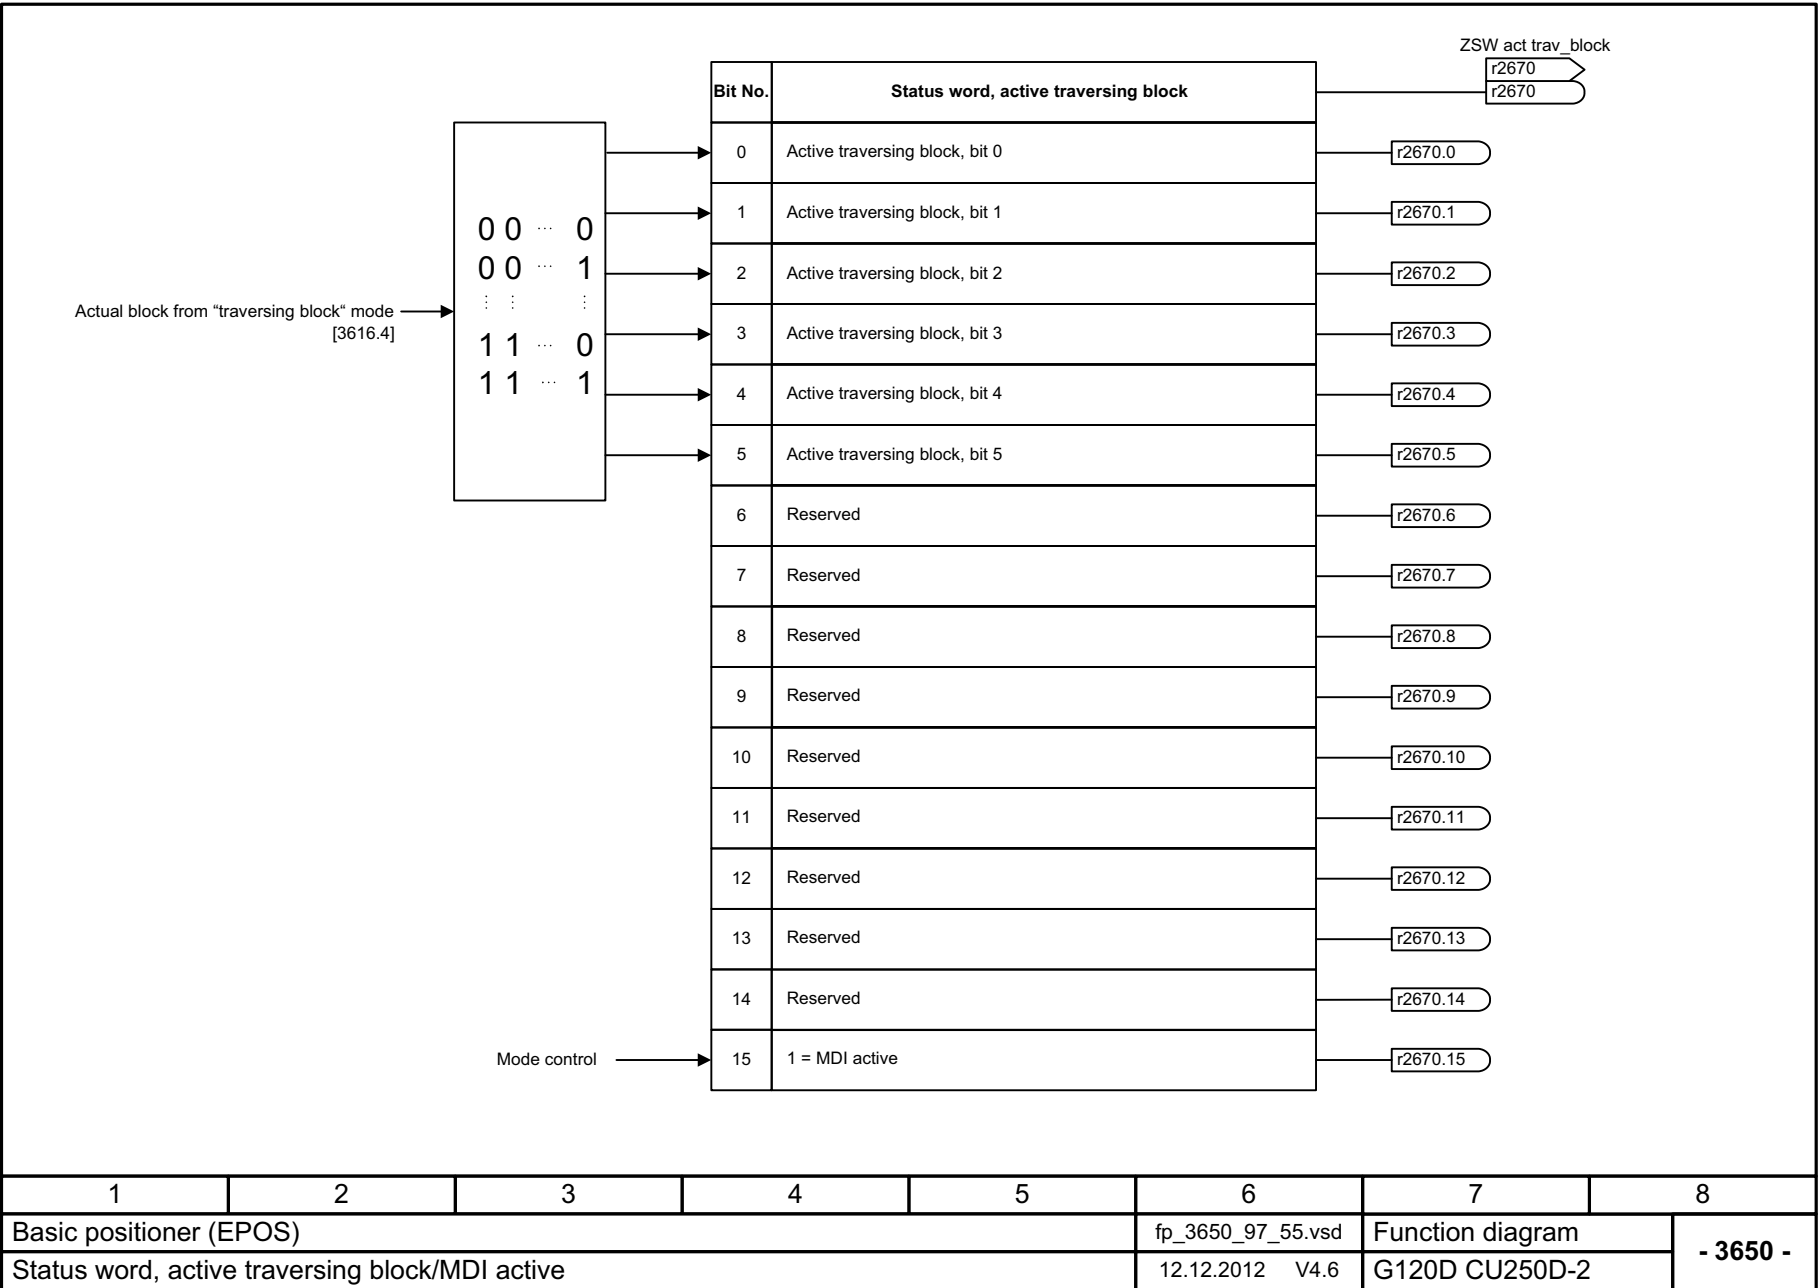



Fig. 2-92 3650 – Status word, active traversing block / MDI active

2.14 Position control

Function diagrams

4010 – Position actual value conditioning	2-683
4015 – Position controller	2-684
4020 – Standstill/positioning monitoring	2-685
4025 – Dynamic following error monitoring, cam controllers	2-686


Fig. 2-93 4010 – Position actual value conditioning

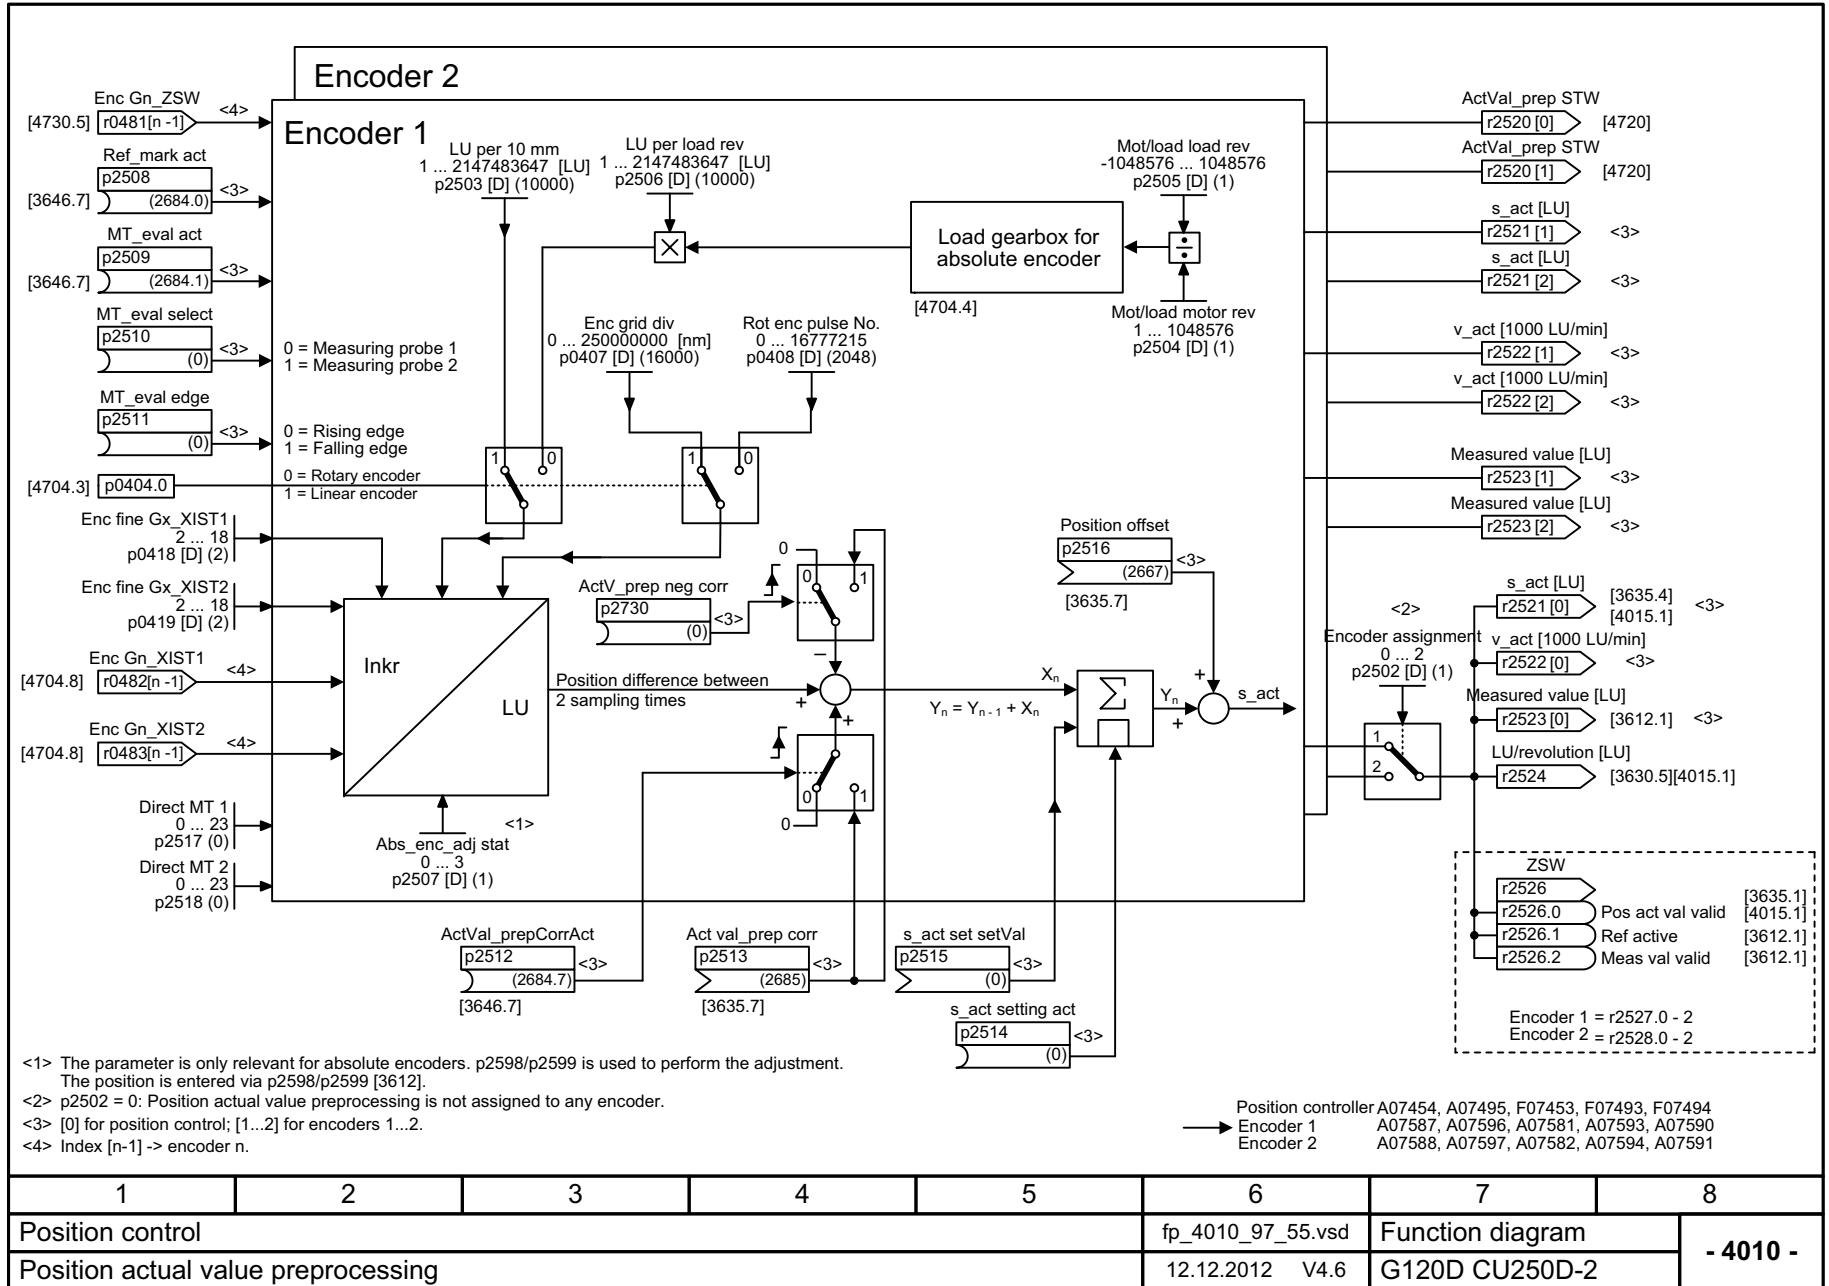

<1> The parameter is only relevant for absolute encoders. p2598/p2599 is used to perform the adjustment. The position is entered via p2598/p2599 [3612].
 <2> p2502 = 0: Position actual value preprocessing is not assigned to any encoder.
 <3> [0] for position control; [1...2] for encoders 1...2.
 <4> Index [n-1] -> encoder n.

Position controller A07454, A07495, F07453, F07493, F07494
 Encoder 1 A07587, A07596, A07581, A07593, A07590
 Encoder 2 A07588, A07597, A07582, A07594, A07591

1	2	3	4	5	6	7	8
Position control					fp_4010_97_55.vsd	Function diagram	
Position actual value preprocessing					12.12.2012 V4.6	G120D CU250D-2	- 4010 -

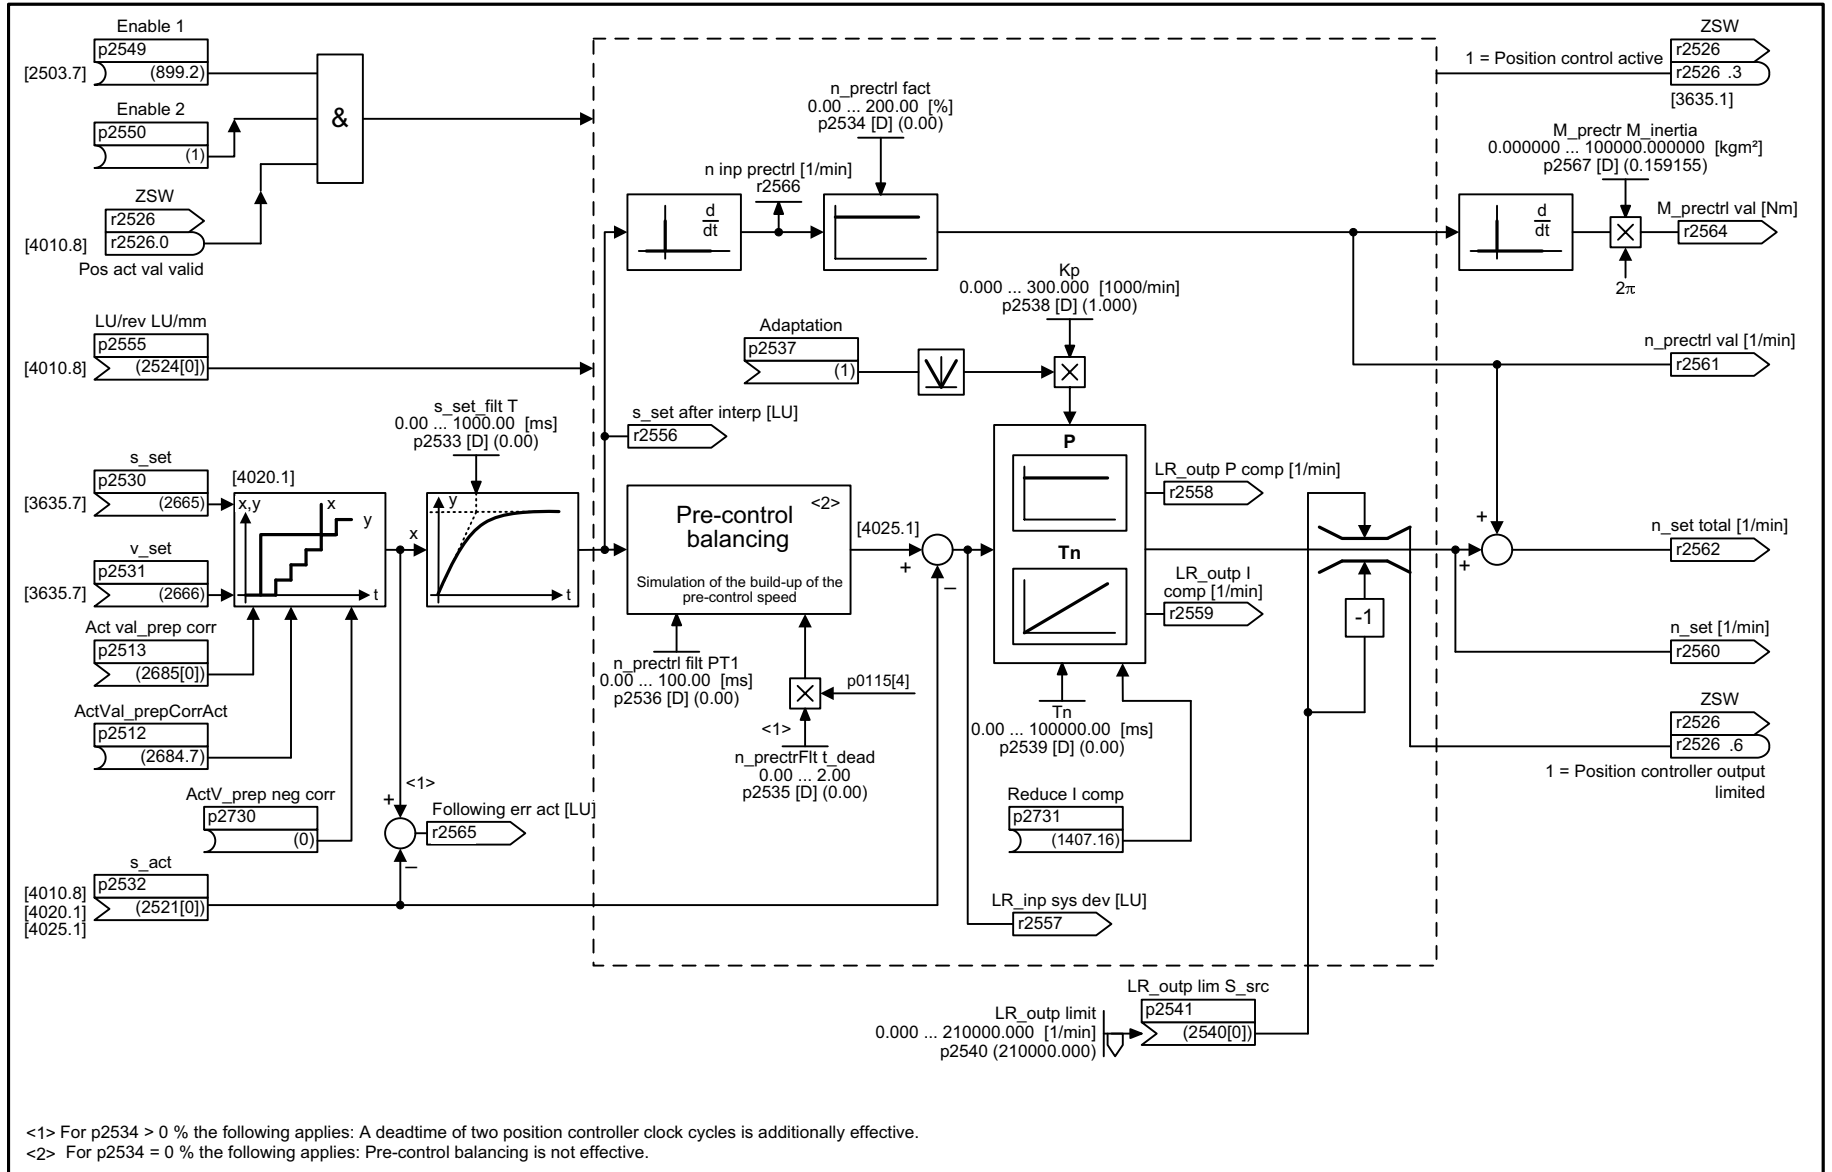


<1> For p2534 > 0 % the following applies: A deadtime of two position controller clock cycles is additionally effective.
 <2> For p2534 = 0 % the following applies: Pre-control balancing is not effective.


1	2	3	4	5	6	7	8
Position control					fp_4015_97_55.vsd	Function diagram	
Position controller					12.12.2012 V4.6	G120D CU250D-2	
							- 4015 -

Fig. 2-94 4015 – Position controller

Fig. 2-95 4020 – Standstill/positioning monitoring

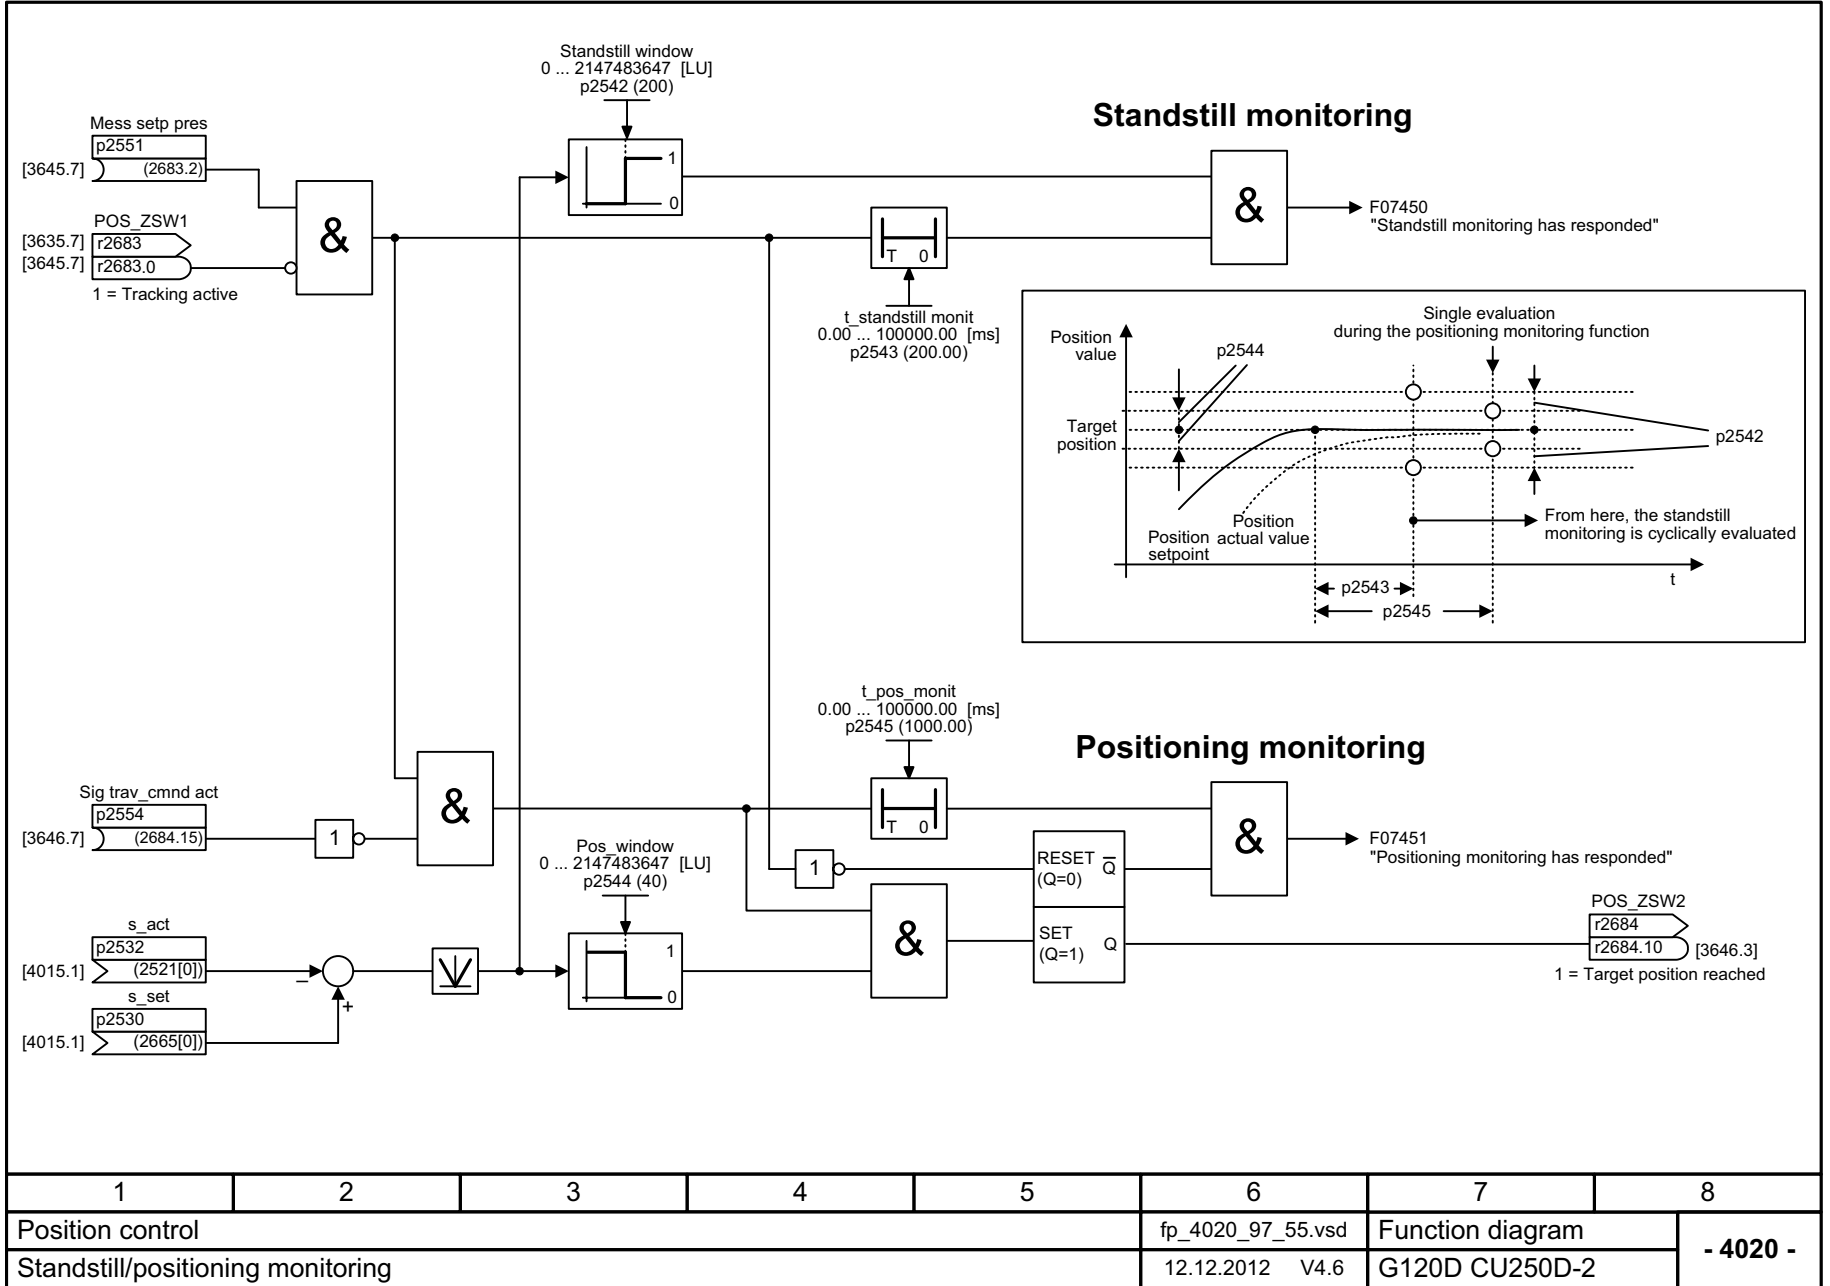

1	2	3	4	5	6	7	8
Position control					fp_4020_97_55.vsd	Function diagram	
Standstill/positioning monitoring					12.12.2012 V4.6	G120D CU250D-2	
							- 4020 -

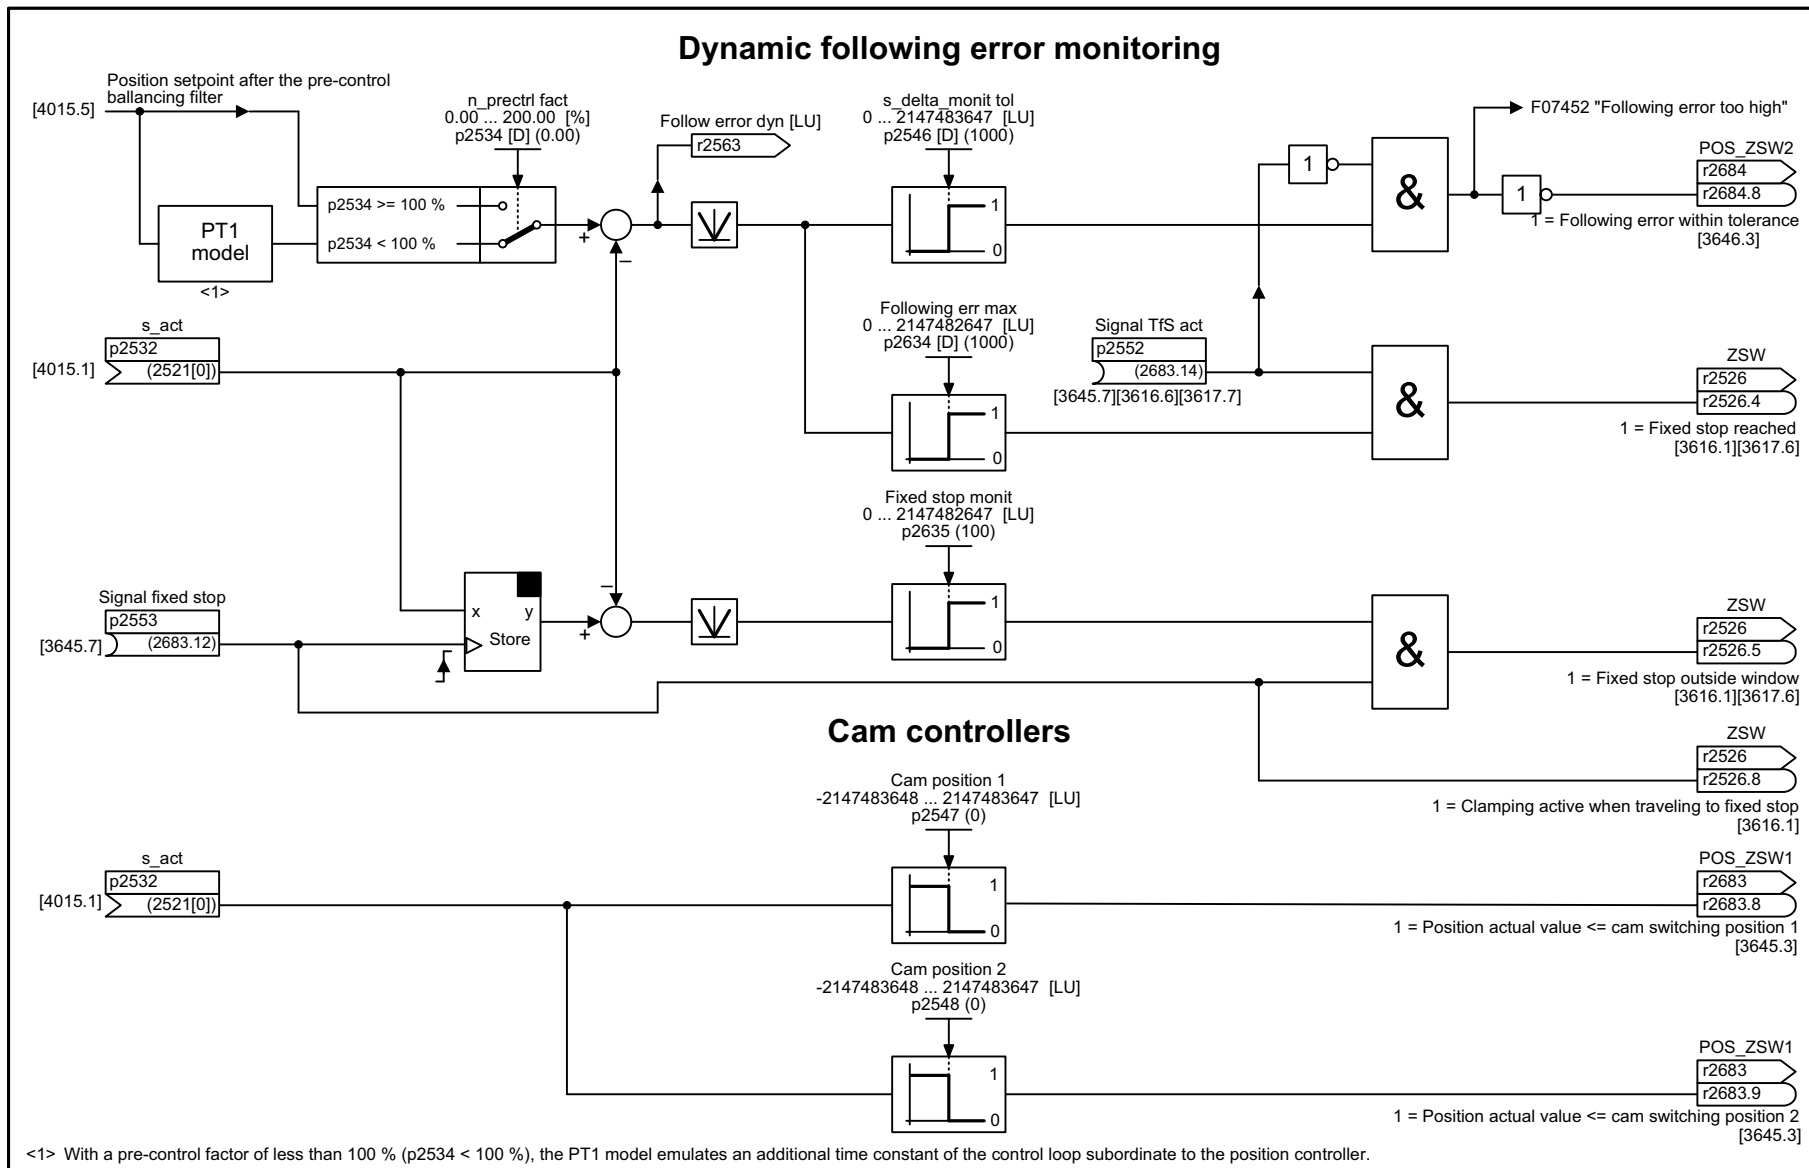


1	2	3	4	5	6	7	8
Position control					fp_4025_97_55.vsd	Function diagram	
Dynamic following error monitoring, cam controllers					12.12.2012 V4.6	G120D CU250D-2	

Fig. 2-96 4025 – Dynamic following error monitoring, cam controllers

2.15 Encoder evaluation

Function diagrams


4704 – Position sensing, encoders 1 ... 2	2-688
4715 – Speed actual value and pole position sensing, motor encoder ASM/SM (encoder 1)	2-689
4720 – Encoder interface, receive signals, encoders 1 ... 2	2-690
4730 – Encoder interface, send signals, encoders 1 ... 2	2-691
4735 – Reference mark search with external zero mark, encoders 1	2-692
4750 – Absolute value for incremental encoder	2-693

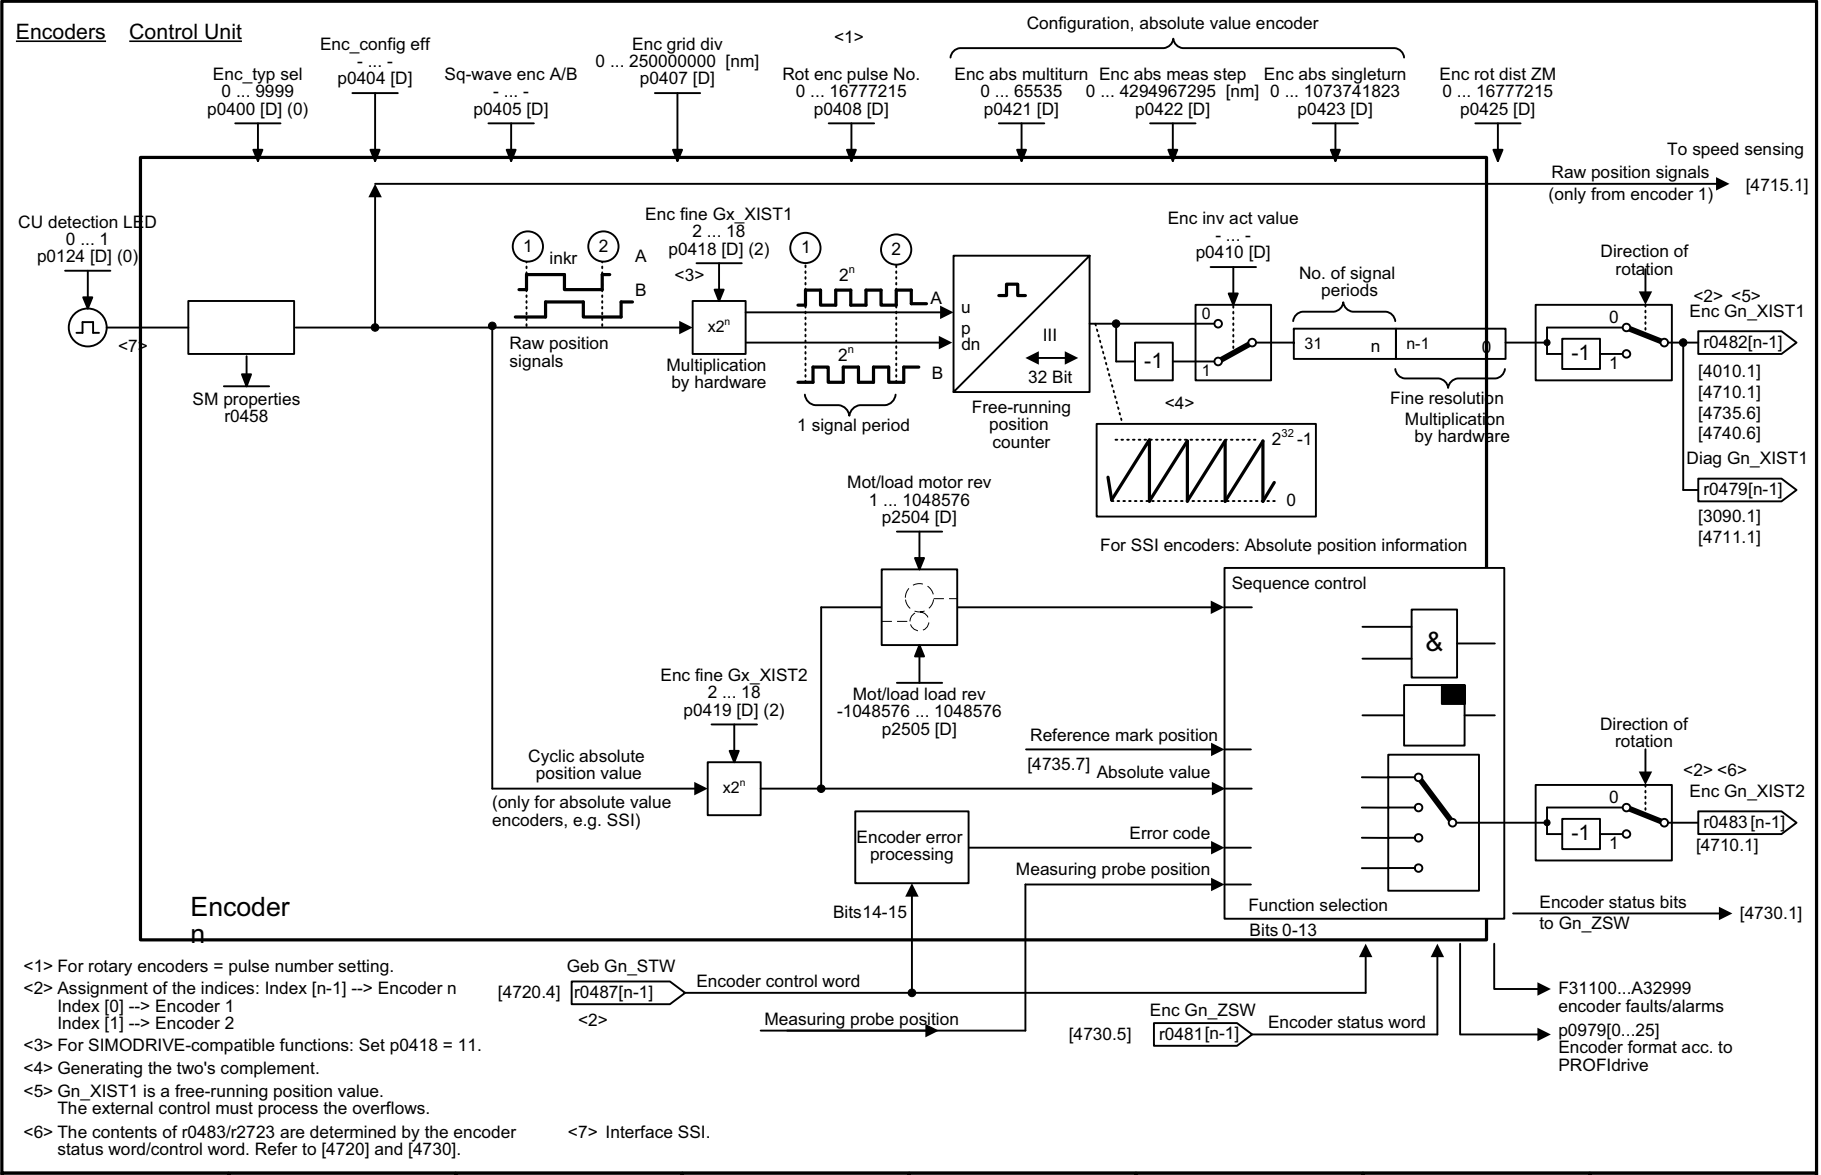


1	2	3	4	5	6	7	8
Encoder evaluation					fp_4704_97_04.vsd	Function diagram	
Position sensing, encoders 1 ... 2					12.12.2012 V4.6	SINAMICS G120D	
							- 4704 -

Fig. 2-97 4704 – Position sensing, encoders 1 ... 2

Fig. 2-98 4715 – Speed actual value and pole position sensing, motor encoder ASM/SM (encoder 1)

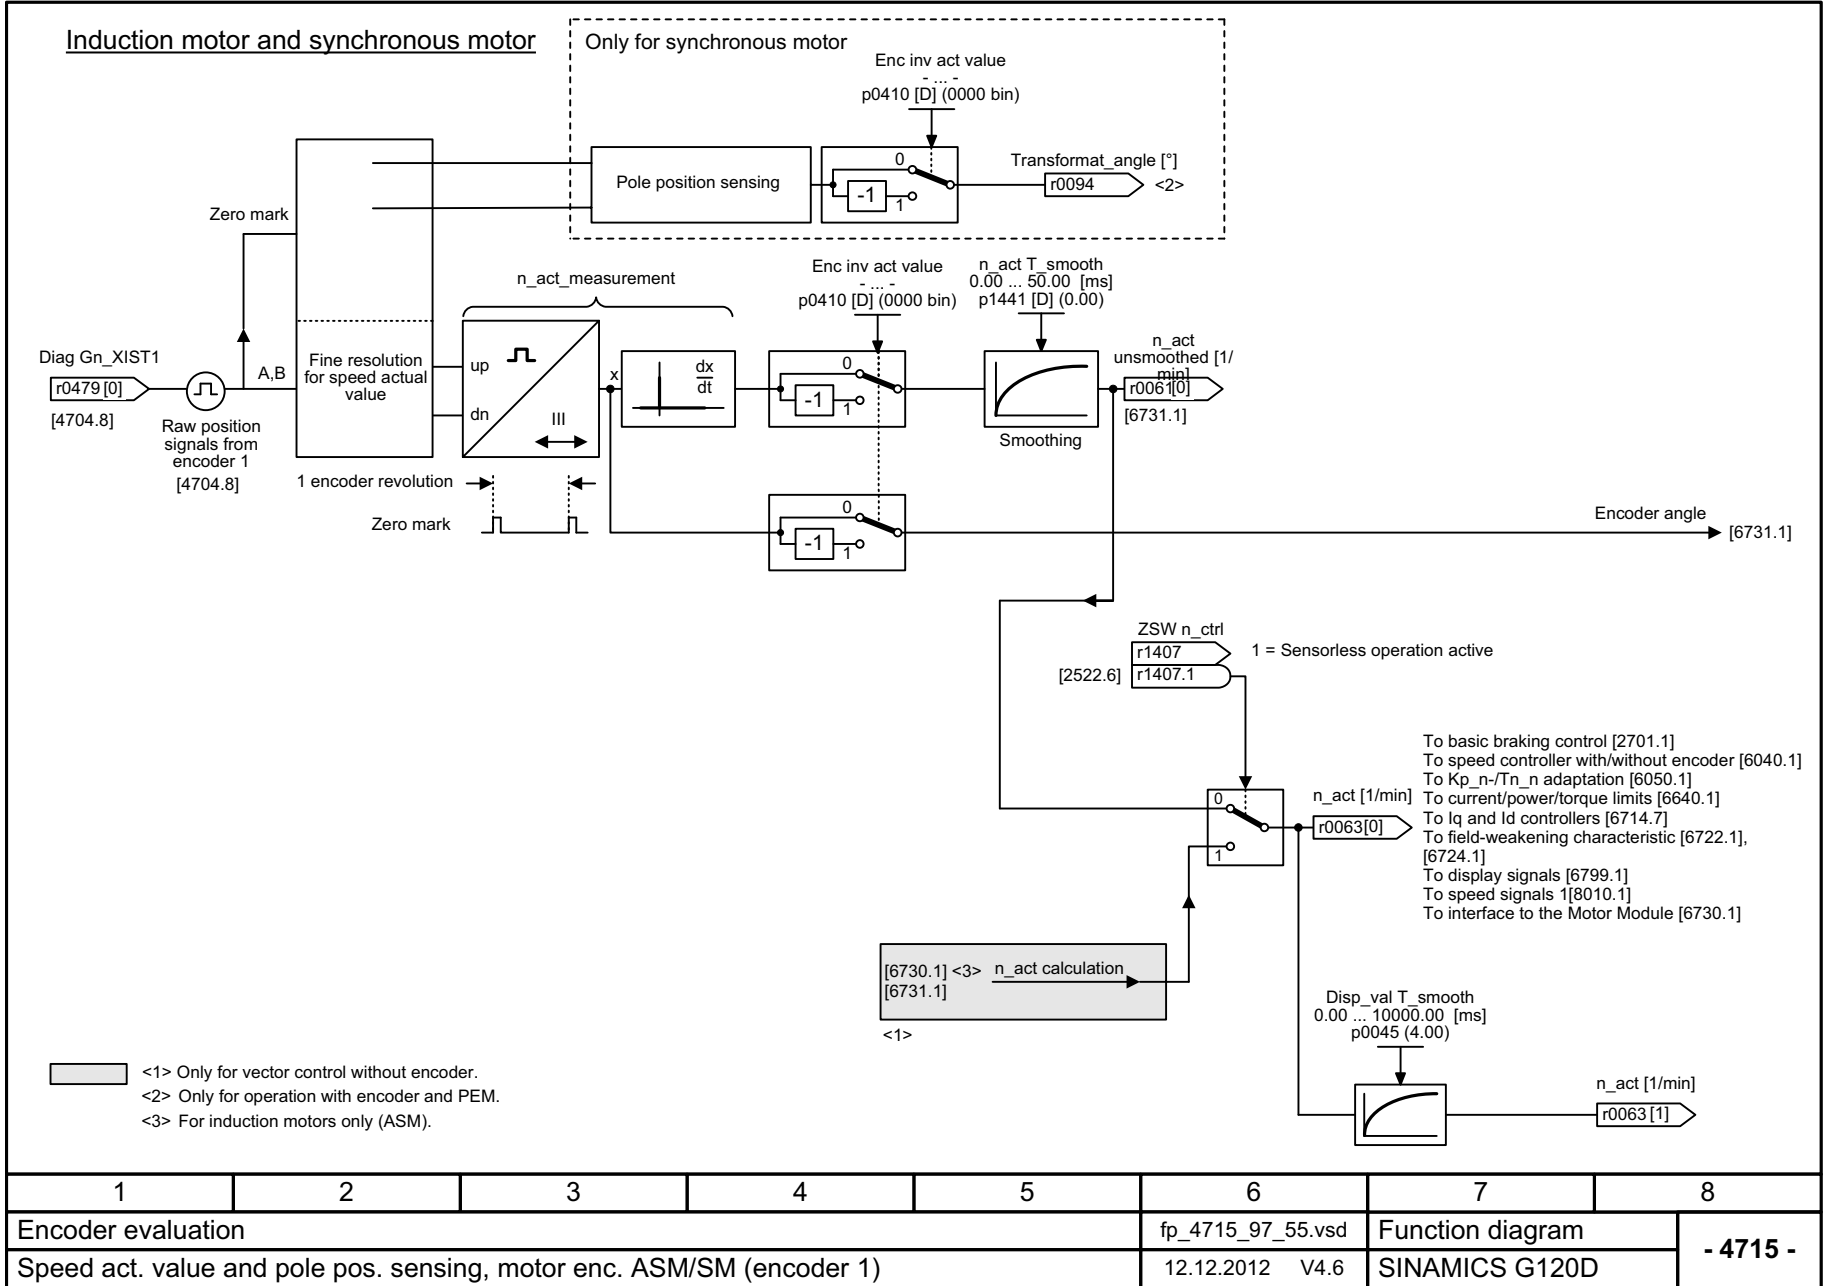


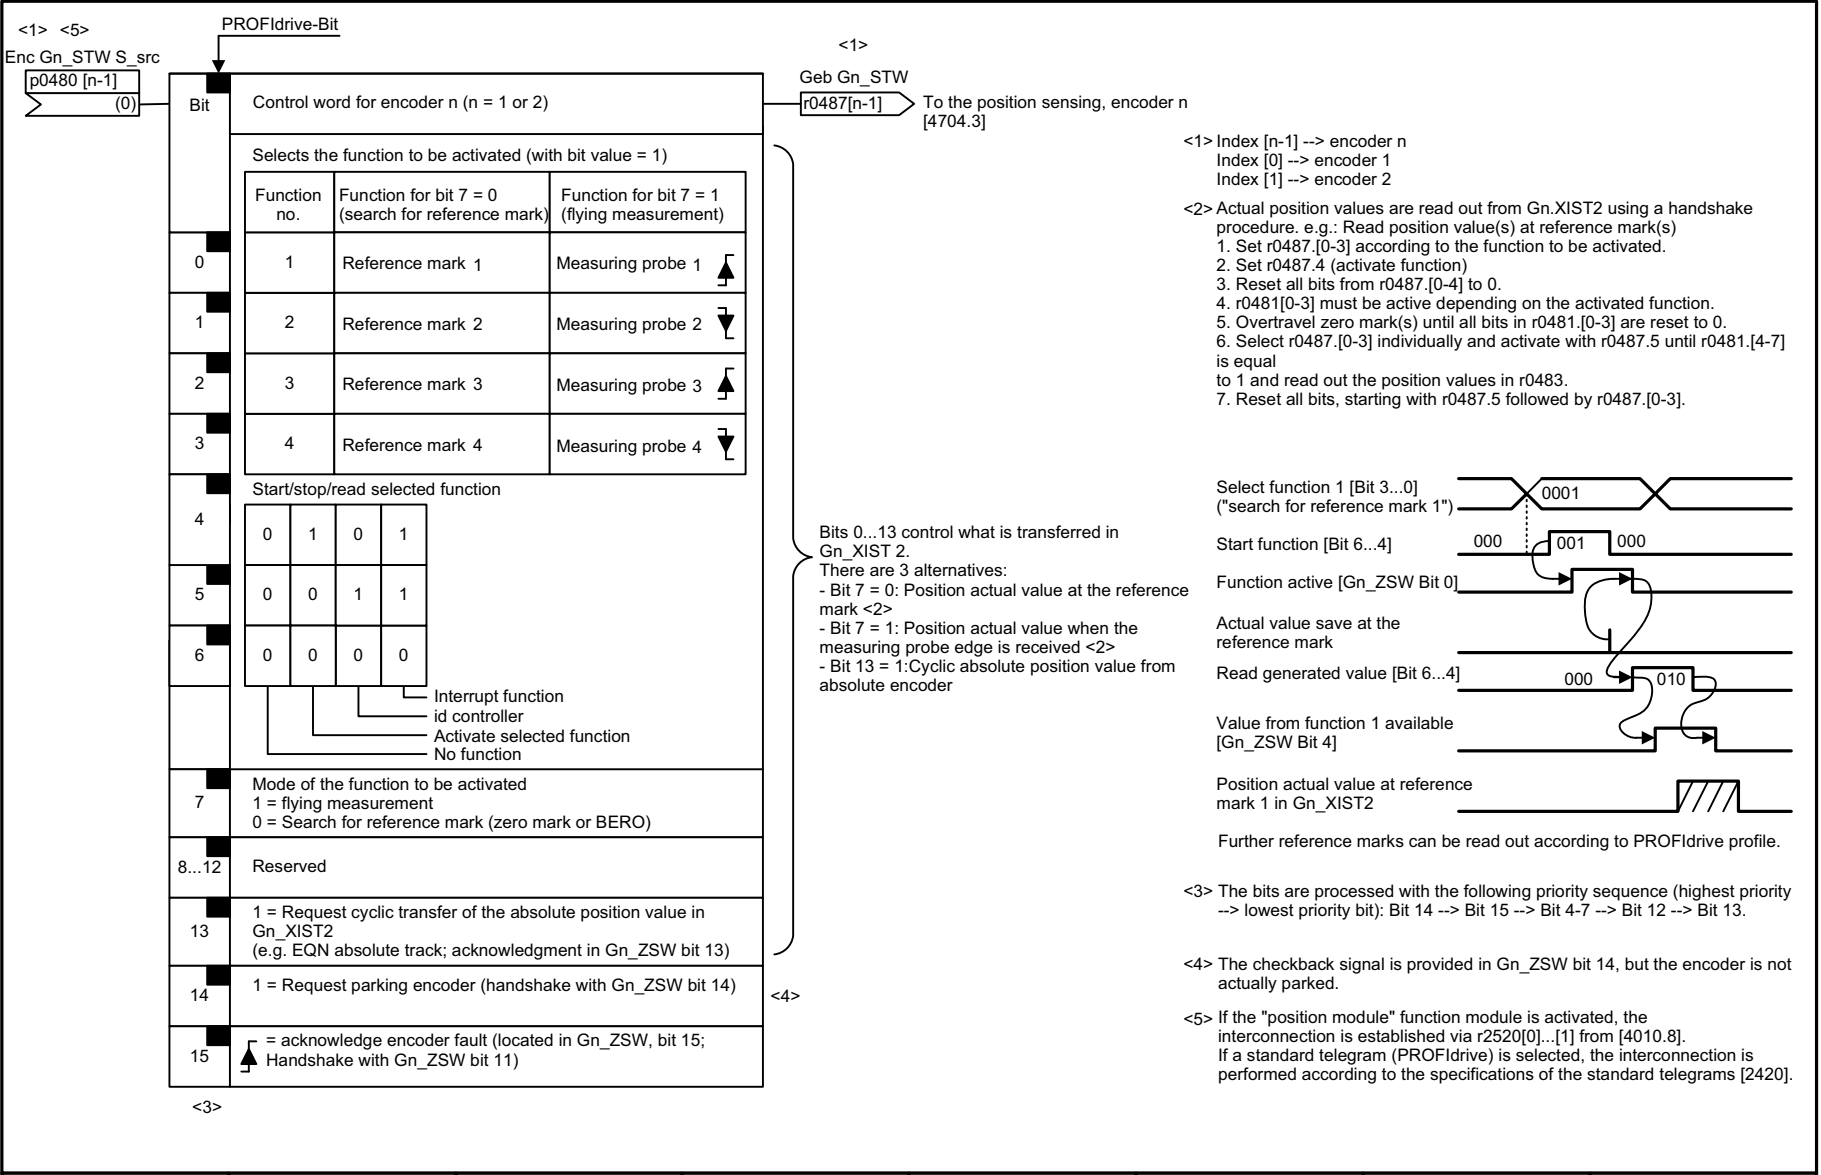

1	2	3	4	5	6	7	8
Encoder evaluation					fp_4720_97_55.vsd	Function diagram	
Encoder interface, receive signals, encoders 1 ... 2					12.12.2012 V4.6	SINAMICS G120D	

Fig. 2-99 4720 – Encoder interface, receive signals, encoders 1 ... 2

Fig. 2-100 4730 – Encoder interface, send signals, encoders 1 ... 2

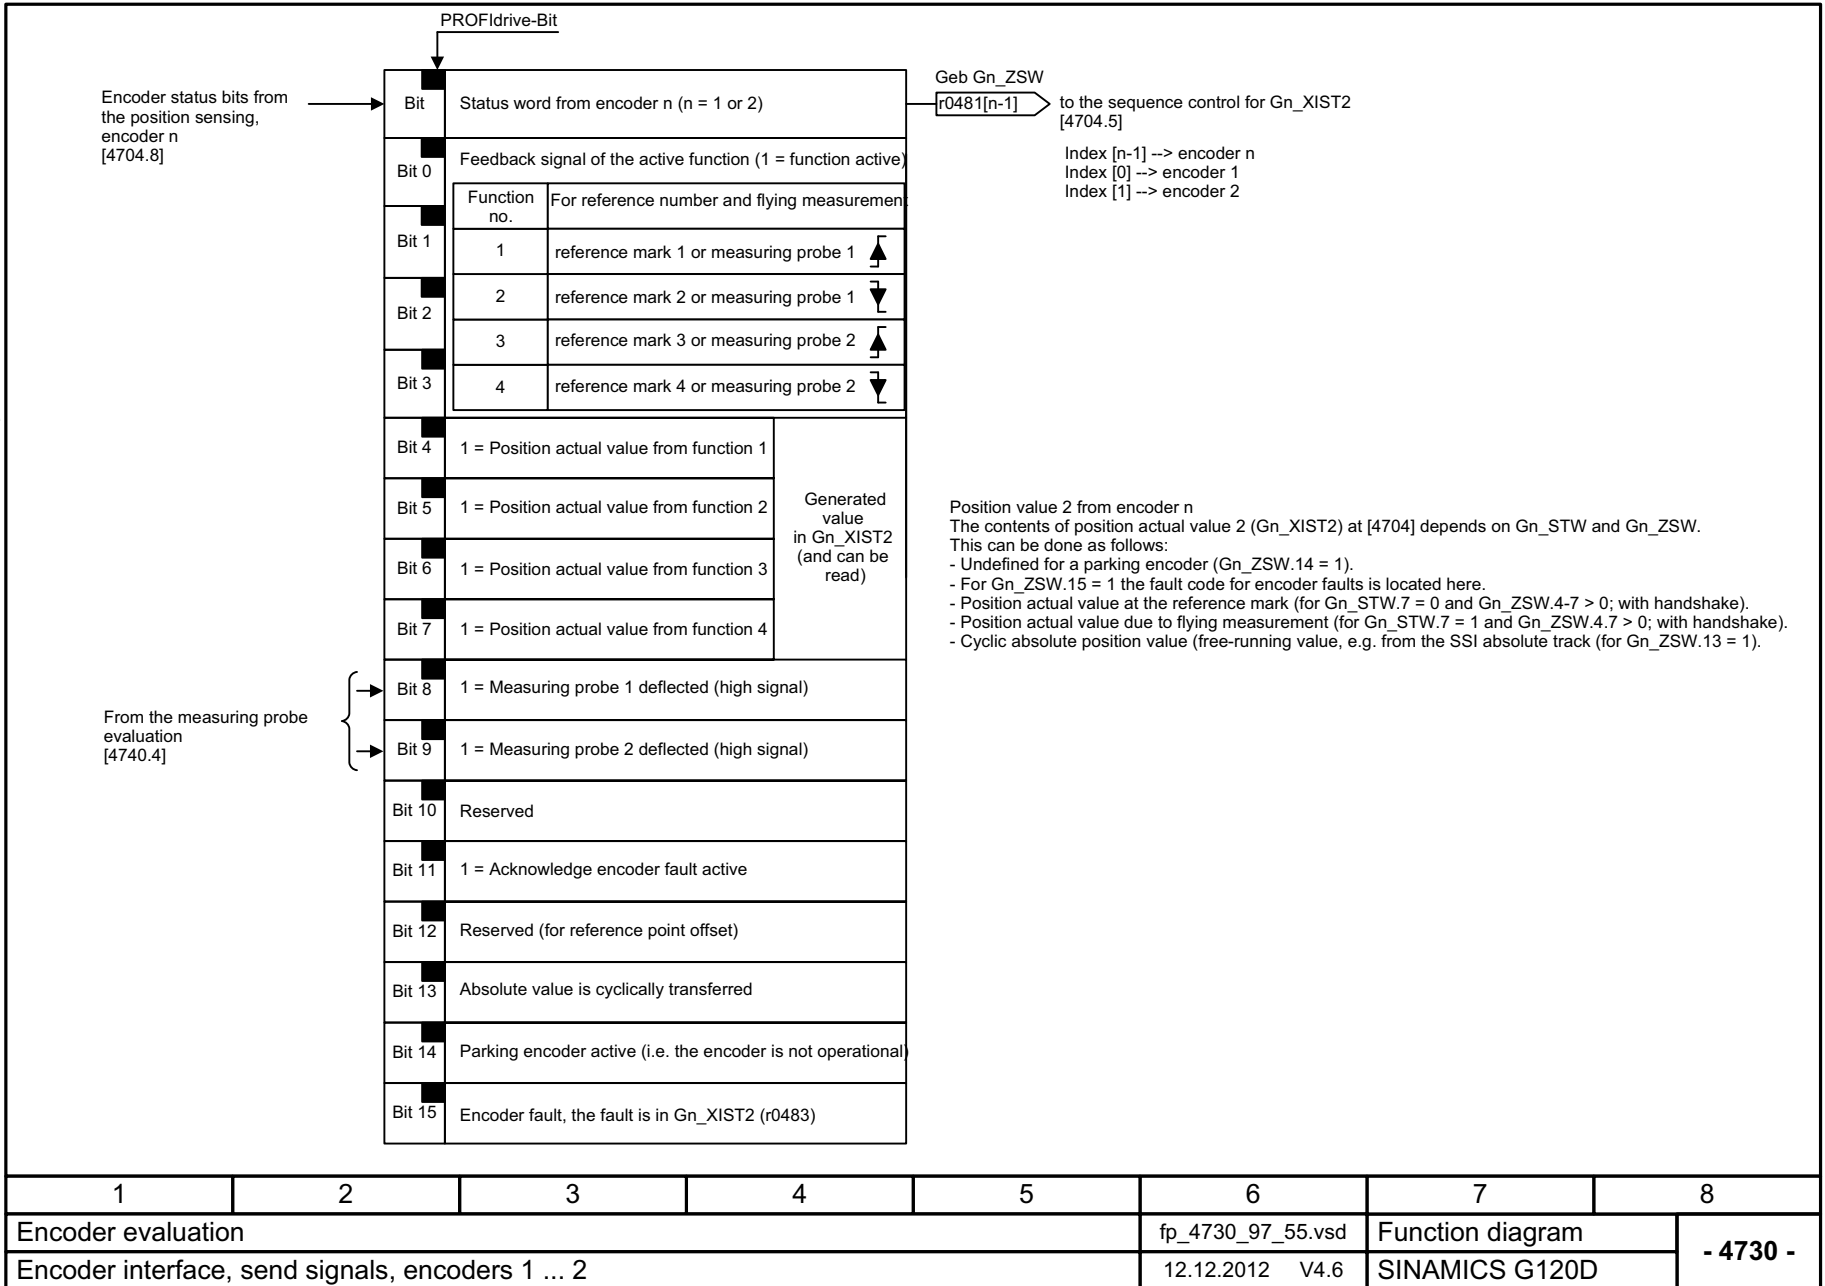



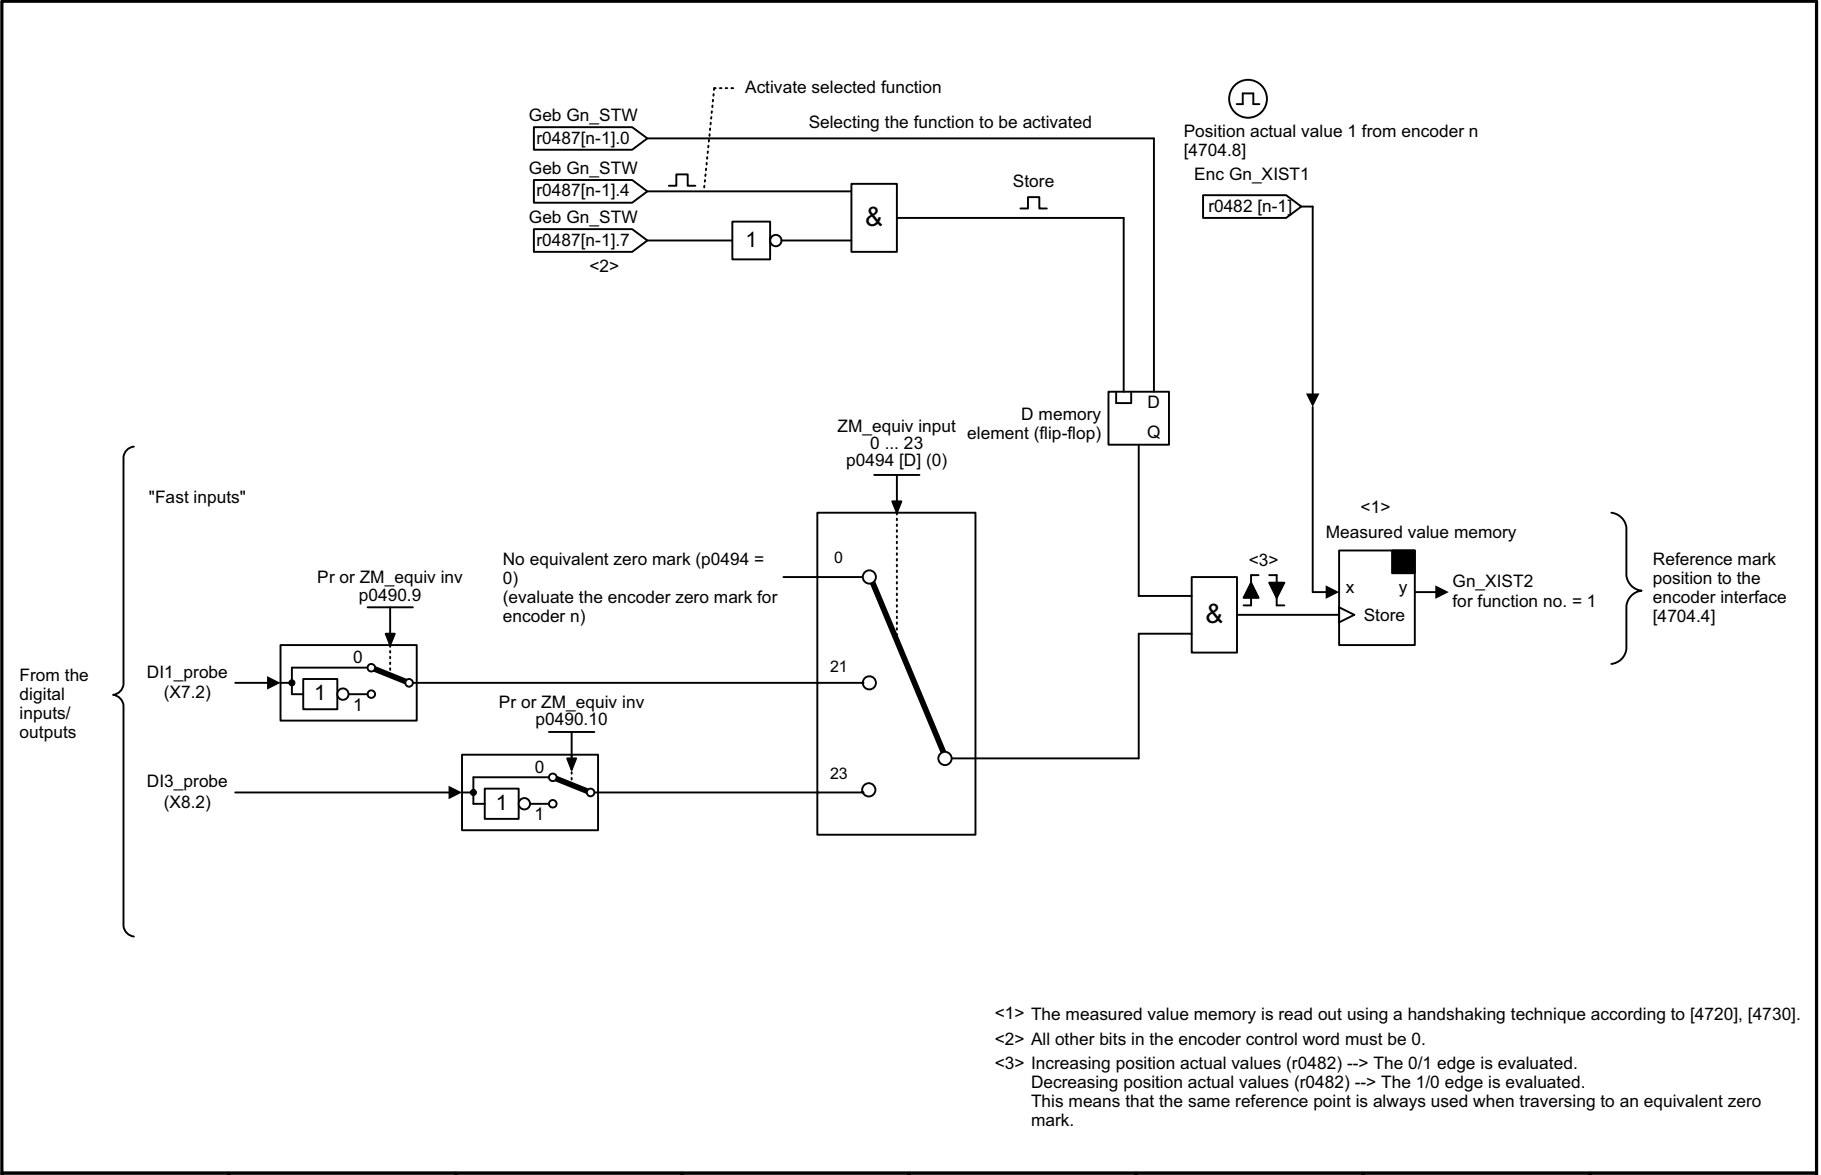


Fig. 2-101 4735 – Reference mark search with external zero mark, encoders 1

1	2	3	4	5	6	7	8
Encoder evaluation					fp_4735_97_55.vsd	Function diagram	
Reference mark search with equivalent zero mark, encoder 1					12.12.2012 V4.6	SINAMICS G120D	

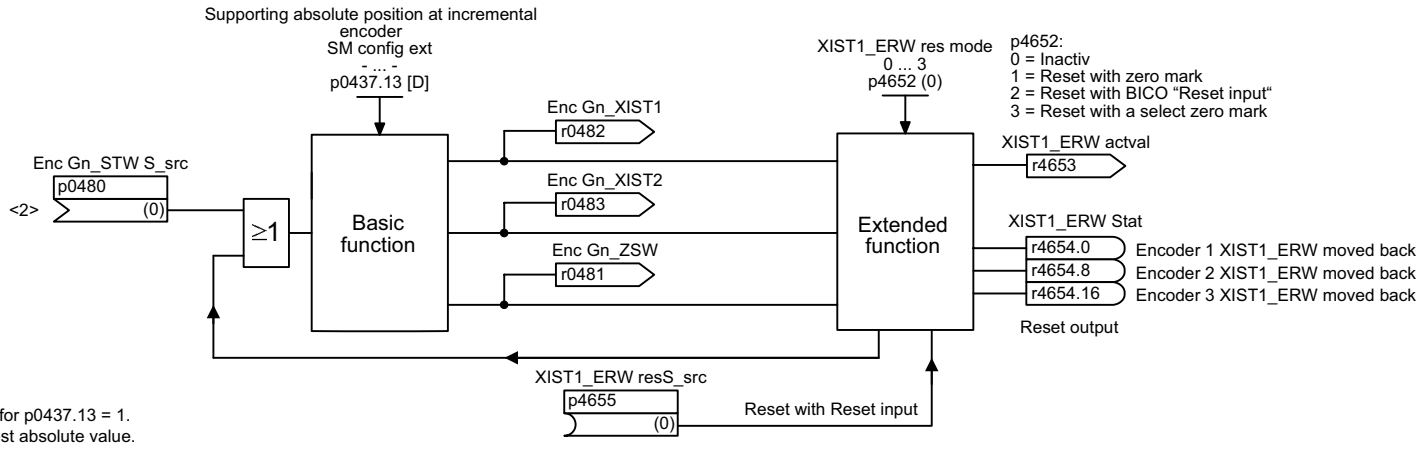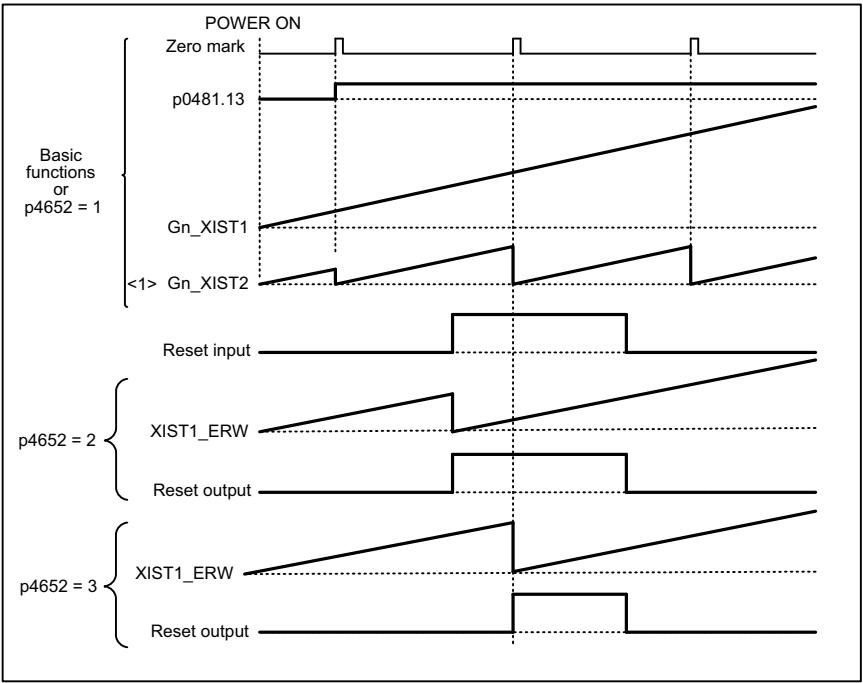

<1> Only applies for p0437.13 = 1.
<2> Bit 13: Request absolute value.

Fig. 2-102 4750 – Absolute value for incremental encoder


1	2	3	4	5	6	7	8
Encoder evaluation					fp_4750_97_55.vsd	Function diagram	
Absolute value at incremental encoder					12.12.2012 V4.6	SINAMICS G120D	
							- 4750 -

2.16 Vector control

Function diagrams

6030 – Speed setpoint, droop	2-695
6031 – Pre-control balancing, acceleration model	2-696
6040 – Speed controller	2-697
6050 – Kp_n/Tn_n adaptation	2-698
6060 – Torque setpoint	2-699
6300 – V/f characteristic and voltage boost	2-700
6310 – Resonance damping and slip compensation (V/f)	2-701
6490 – Speed control configuration	2-702
6491 – Flux control configuration	2-703
6630 – Upper/lower torque limit	2-704
6640 – Current/power/torque limits	2-705
6710 – Current setpoint filter	2-706
6714 – Iq and Id controller	2-707
6721 – Id setpoint (PEM, p0300 = 2xx)	2-708
6722 – Field weakening characteristic, Id setpoint (ASM, p0300 = 1)	2-709
6723 – Field weakening controller, flux controller (ASM, p0300 = 1)	2-710
6724 – Field weakening controller (PEM, p0300 = 2xx)	2-711
6730 – Interface to the Power Module (ASM, p0300 = 1)	2-712
6731 – Interface to the Power Module (PEM, p0300 = 2xx)	2-713
6799 – Display signals	2-714

Fig. 2-103 6030 – Speed setpoint, droop

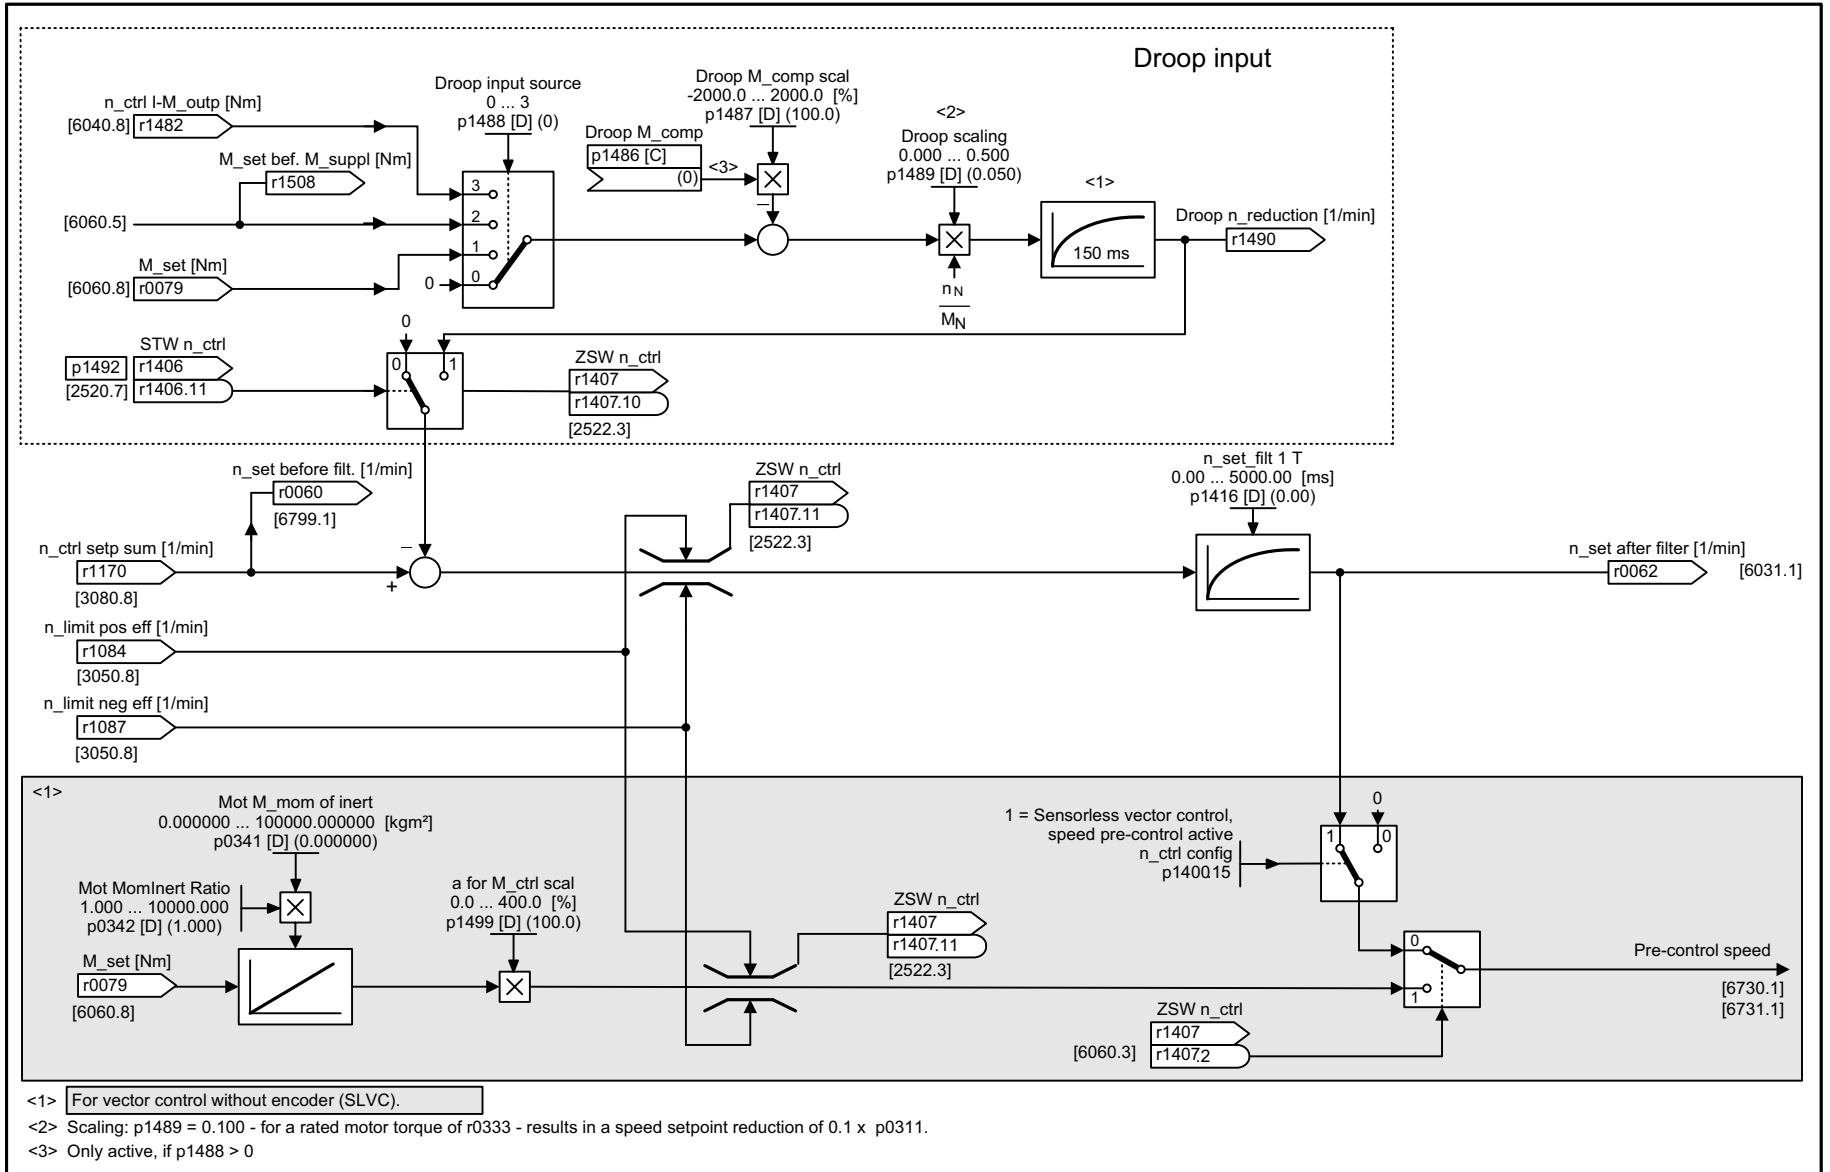

1	2	3	4	5	6	7	8
Vector control					fp_6030_97_55.vsd	Function diagram	
Speed setpoint, droop					12.12.2012 V4.6	SINAMICS G120D	
							- 6030 -


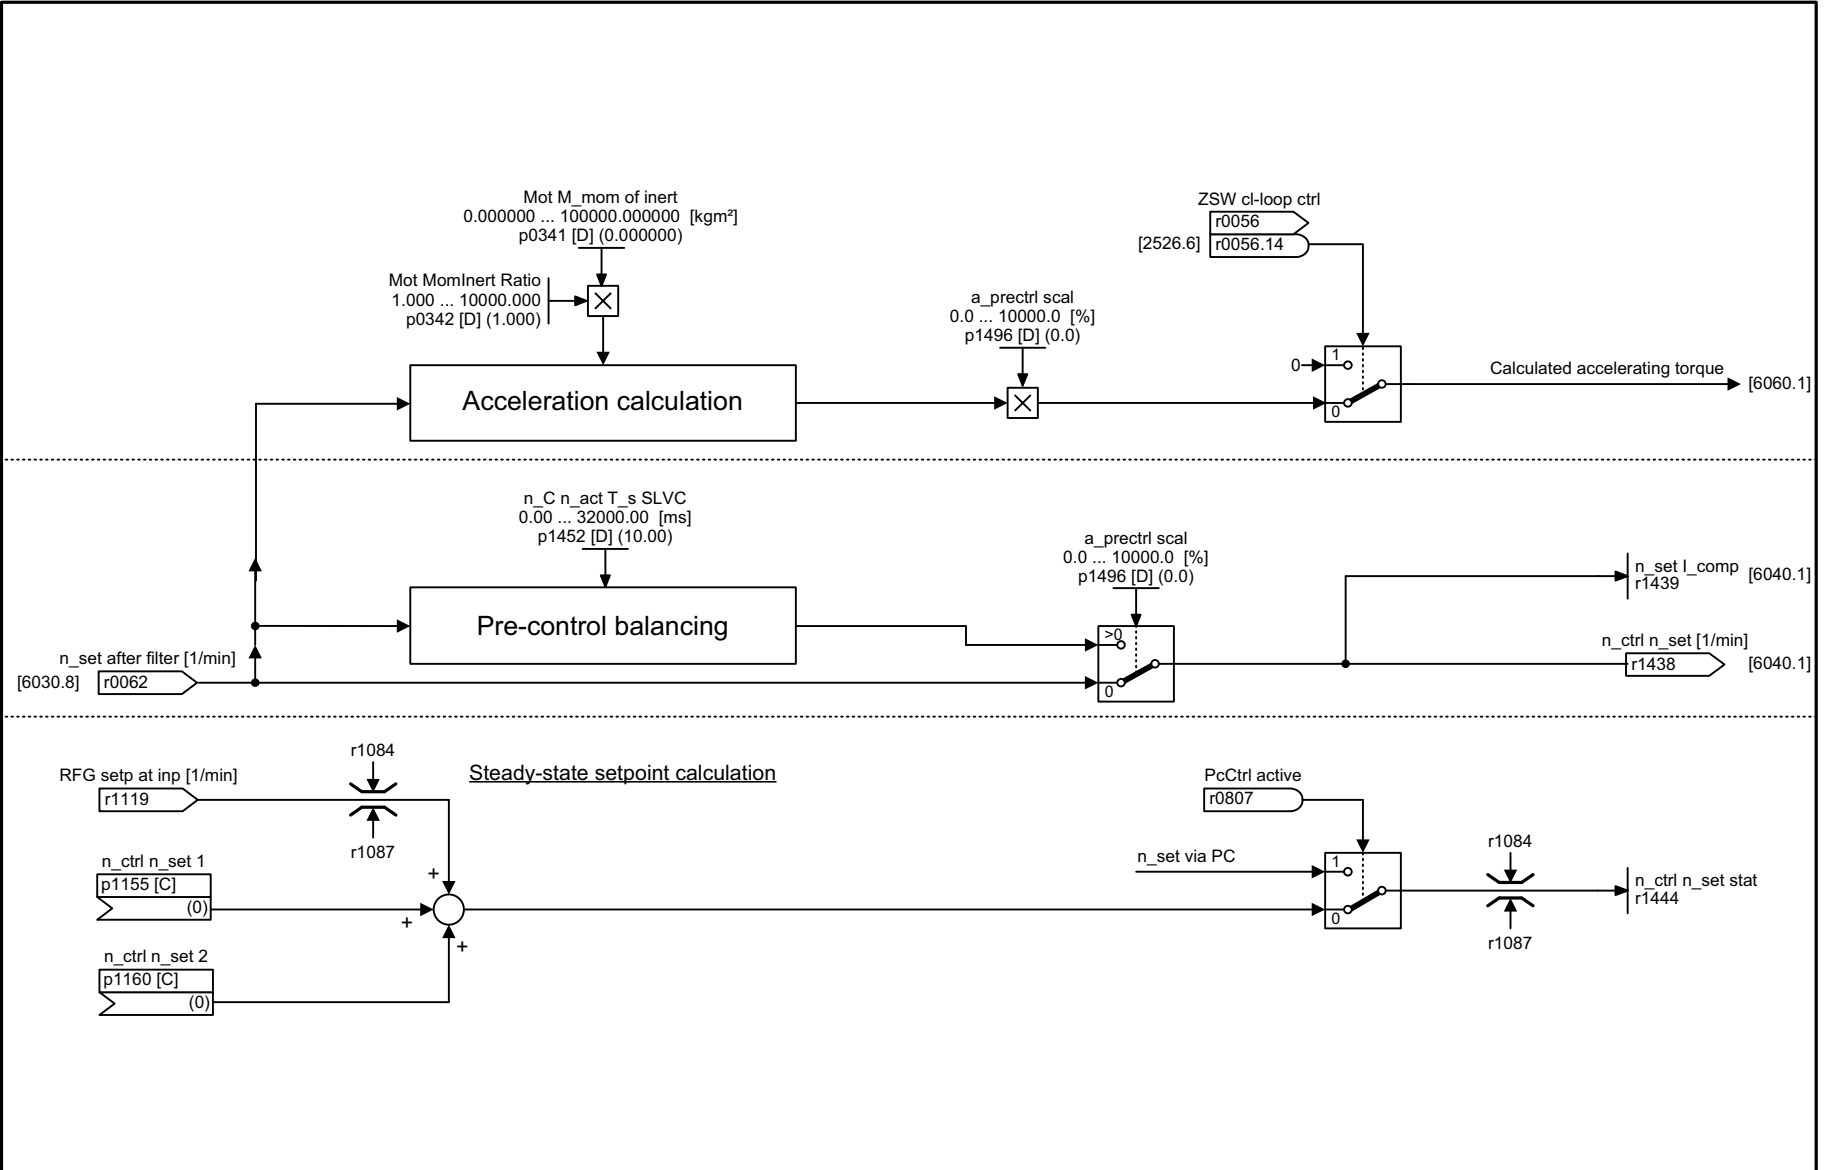


Fig. 2-104 6031 – Pre-control balancing, acceleration model

1	2	3	4	5	6	7	8
Vector control					fp_6031_97_53.vsd	Function diagram	
Pre-control balancing, acceleration model					12.12.2012 V4.6	SINAMICS G120D	
							- 6031 -


Fig. 2-105 6040 – Speed controller

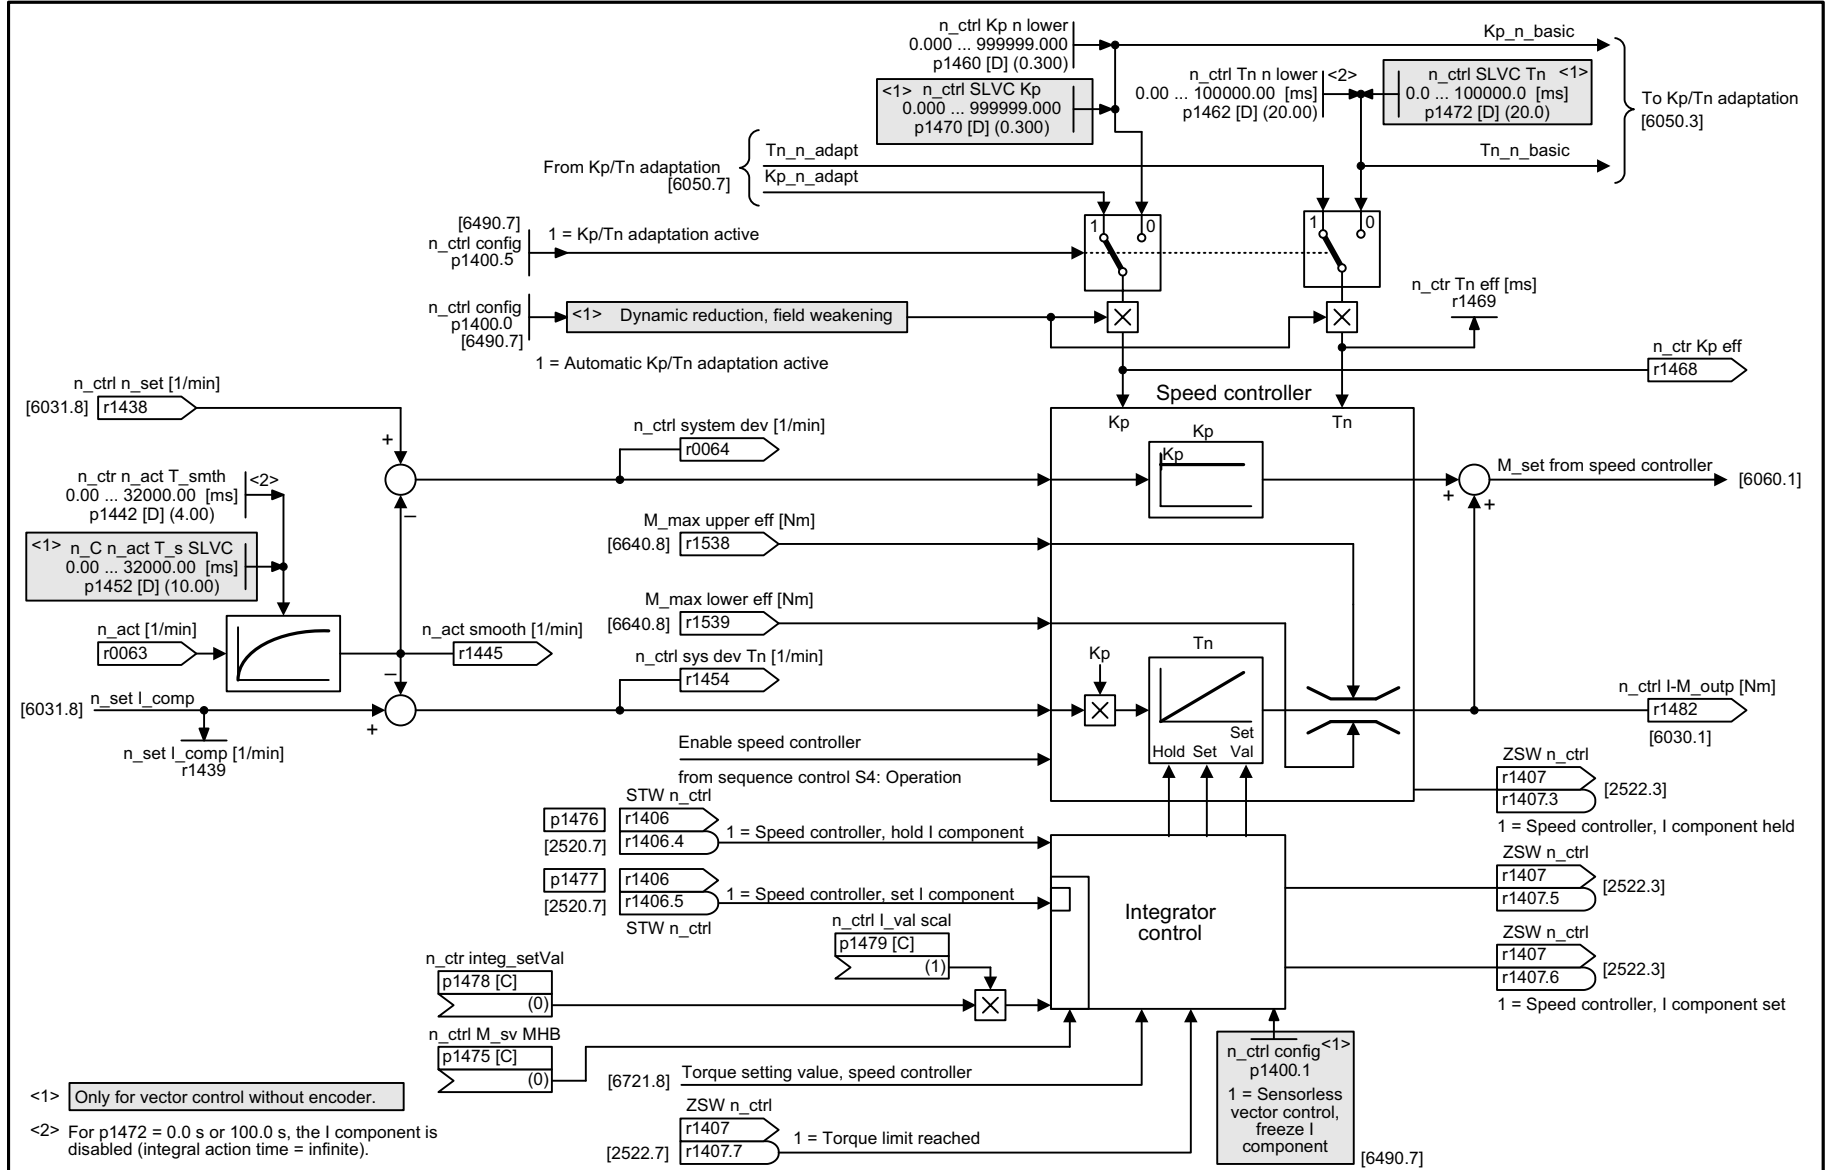


<1> Only for vector control without encoder.
 <2> For p1472 = 0.0 s or 100.0 s, the I component is disabled (integral action time = infinite).

1	2	3	4	5	6	7	8
Vector control					fp_6040_97_55.vsd	Function diagram	
Speed controller					12.12.2012 V4.6	SINAMICS G120D	
							- 6040 -

Free Kp_n adaptation

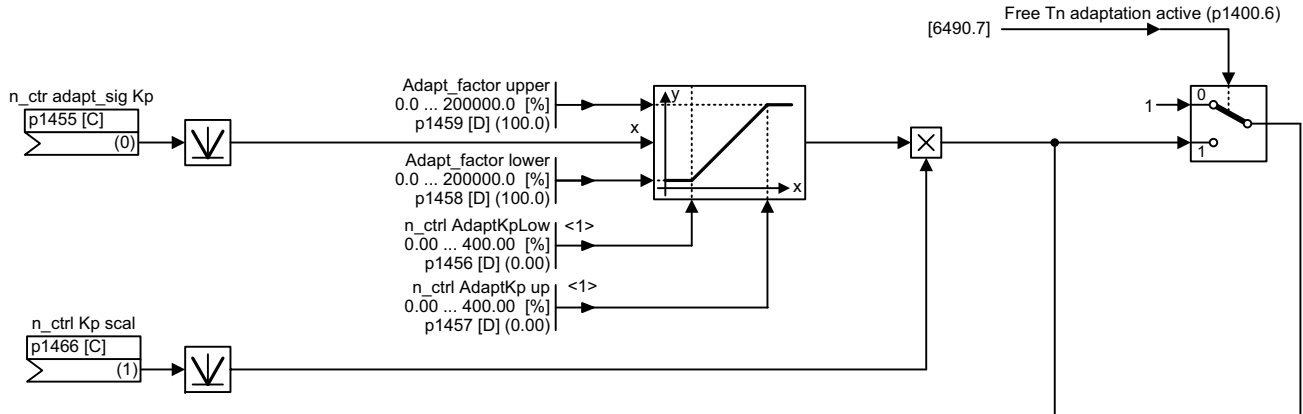

Speed-dependent Kp_n/Tn_n adaptation

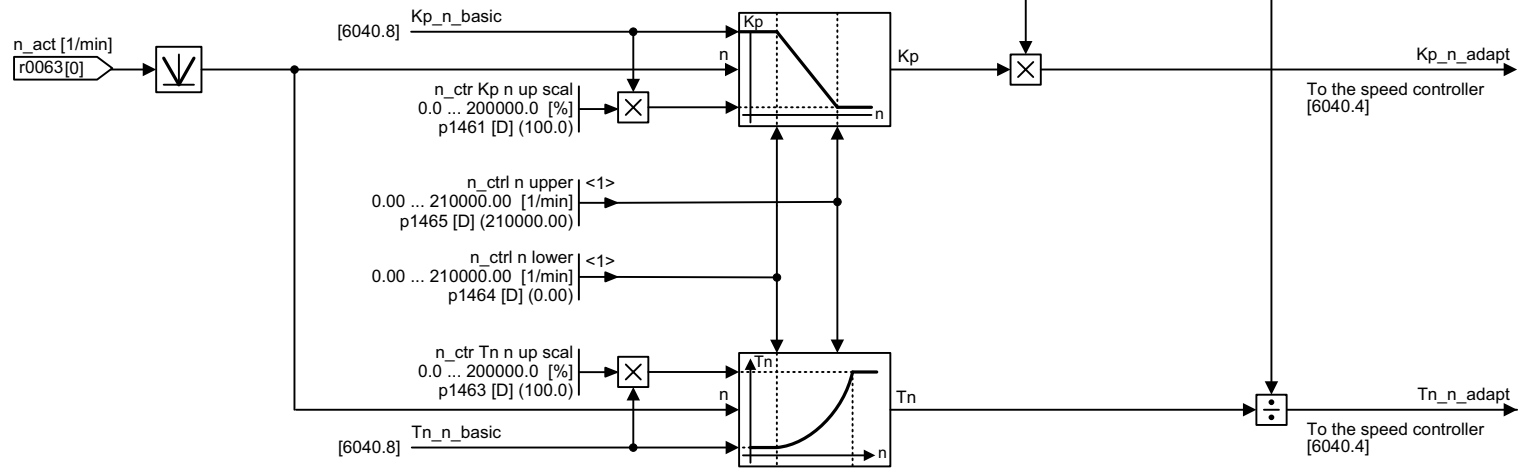


<1> If the lower transition point exceeds the upper transition point, the Kp-adaptation also changes over.


1	2	3	4	5	6	7	8
Vector control					fp_6050_97_53.vsd	Function diagram	
Kp_n/Tn_n adaption					12.12.2012 V4.6	SINAMICS G120D	
- 6050 -							

Fig. 2-106 6050 – Kp_n/Tn_n adaptation

Fig. 2-107 6060 – Torque setpoint

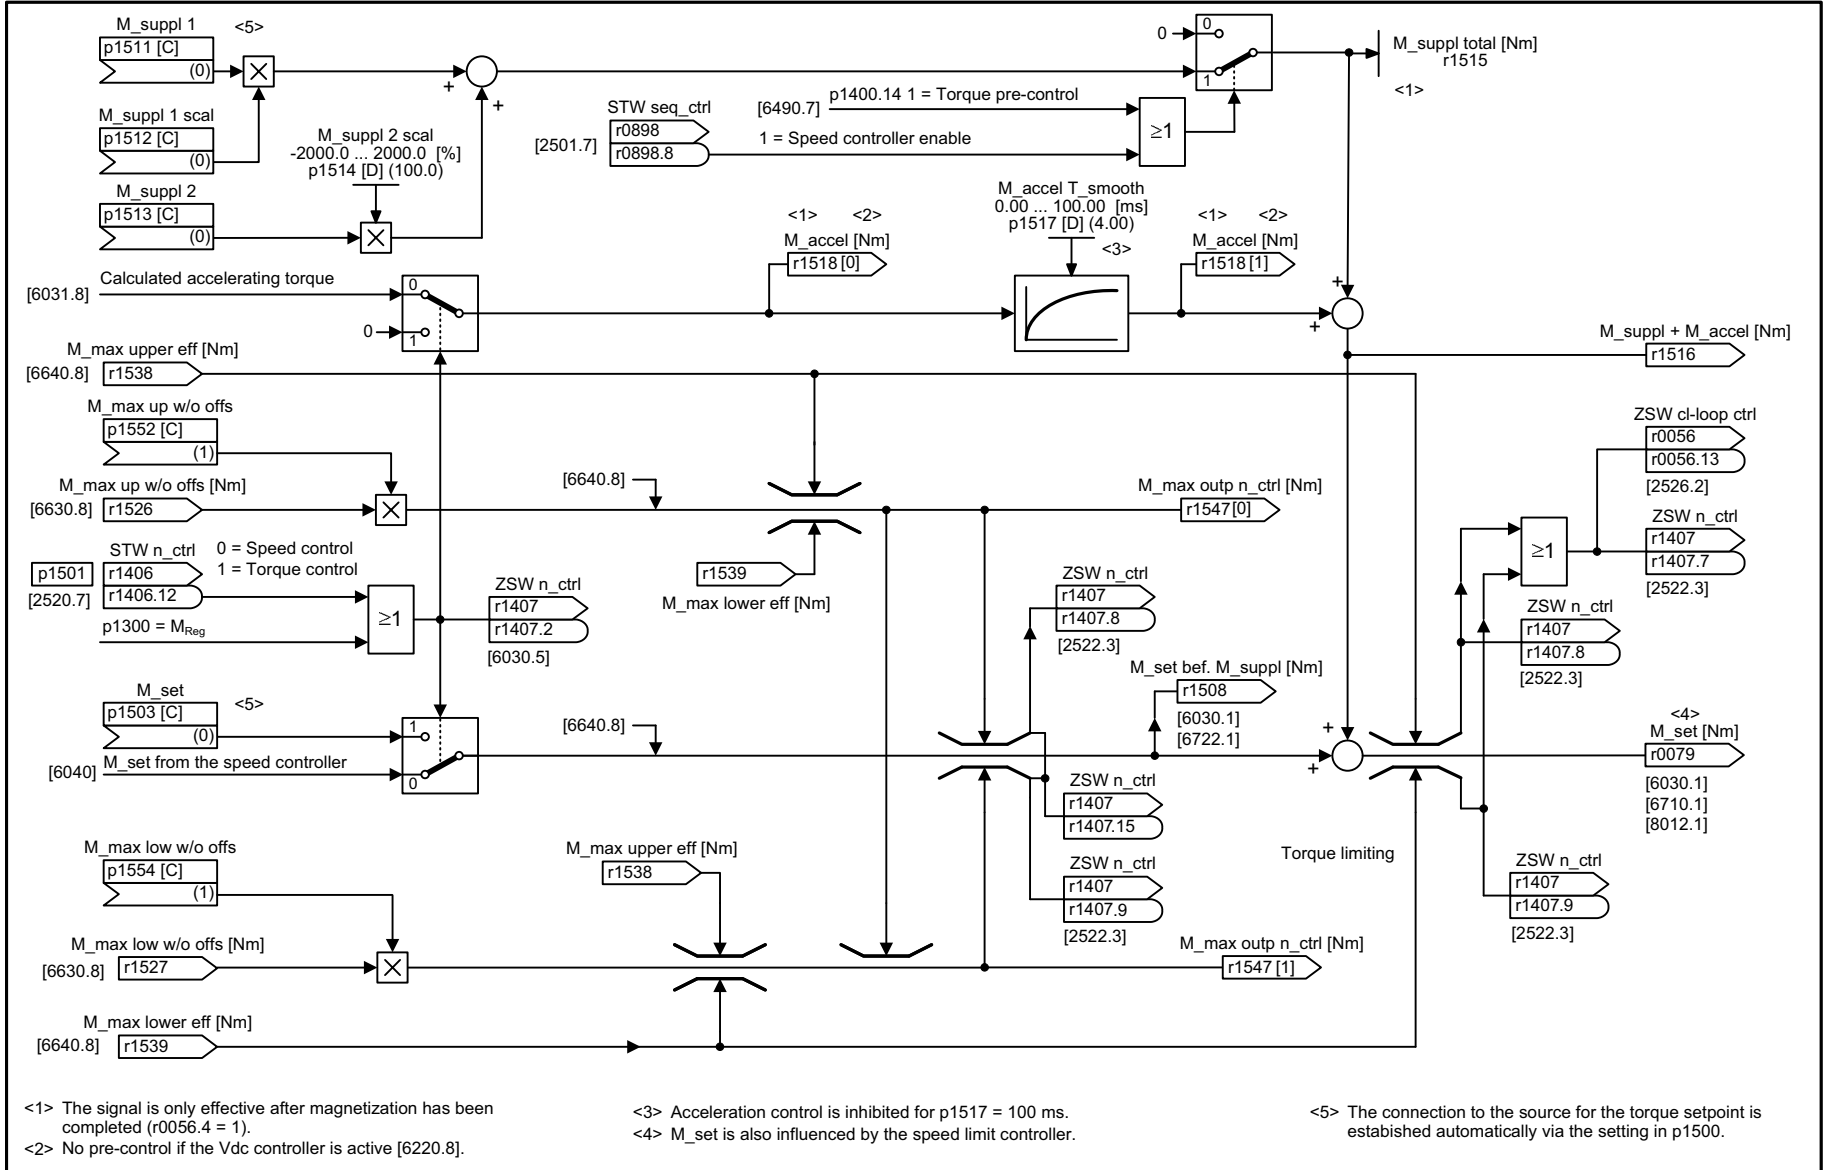

1	2	3	4	5	6	7	8
Vector control					fp_6060_97_53.vsd	Function diagram	
Torque setpoint					12.12.2012 V4.6	SINAMICS G120D	
							- 6060 -

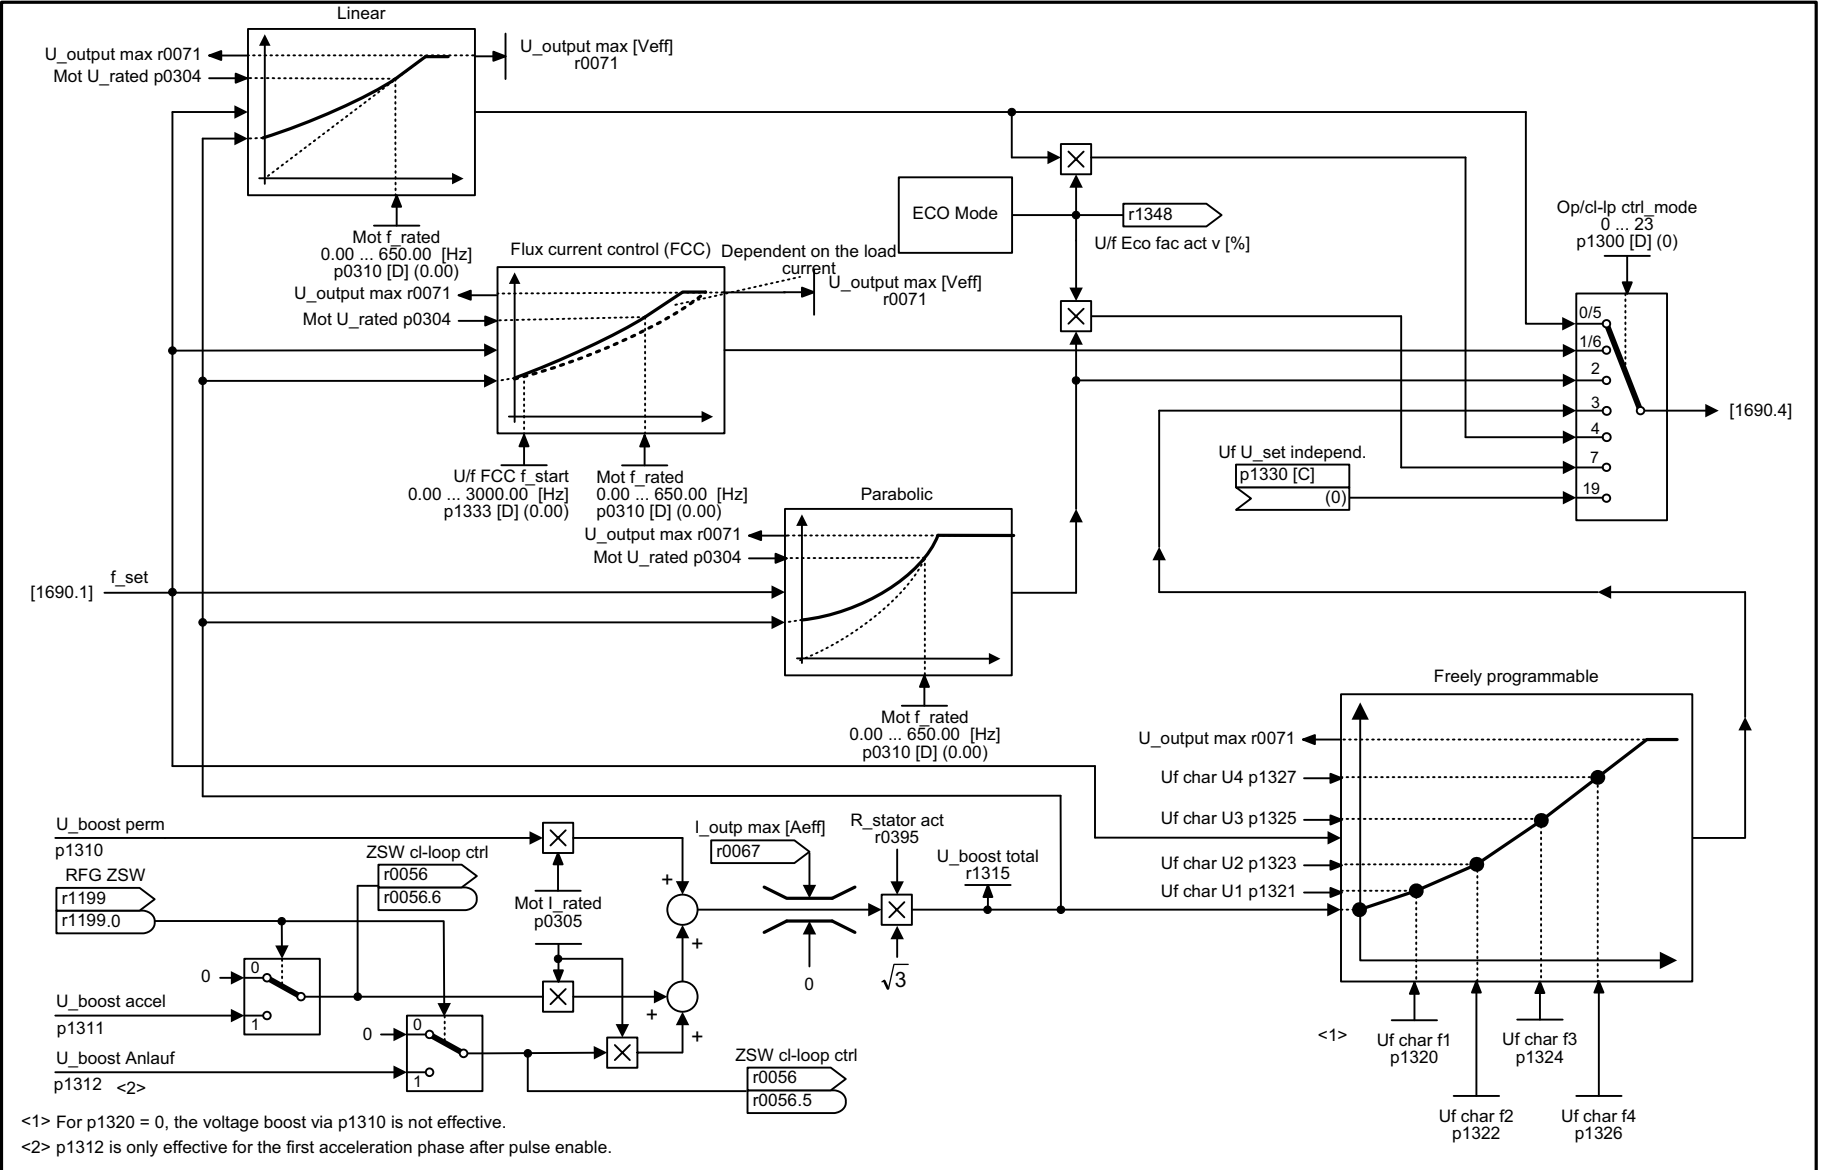


<1> For p1320 = 0, the voltage boost via p1310 is not effective.
<2> p1312 is only effective for the first acceleration phase after pulse enable.

1	2	3	4	5	6	7	8
Vector control					fp_6300_97_53.vsd	Function diagram	
U/f characteristic and voltage boost					12.12.2012 V4.6	SINAMICS G120D	

Fig. 2-108 6300 – V/f characteristic and voltage boost

Fig. 2-109 6310 – Resonance damping and slip compensation (U/f)

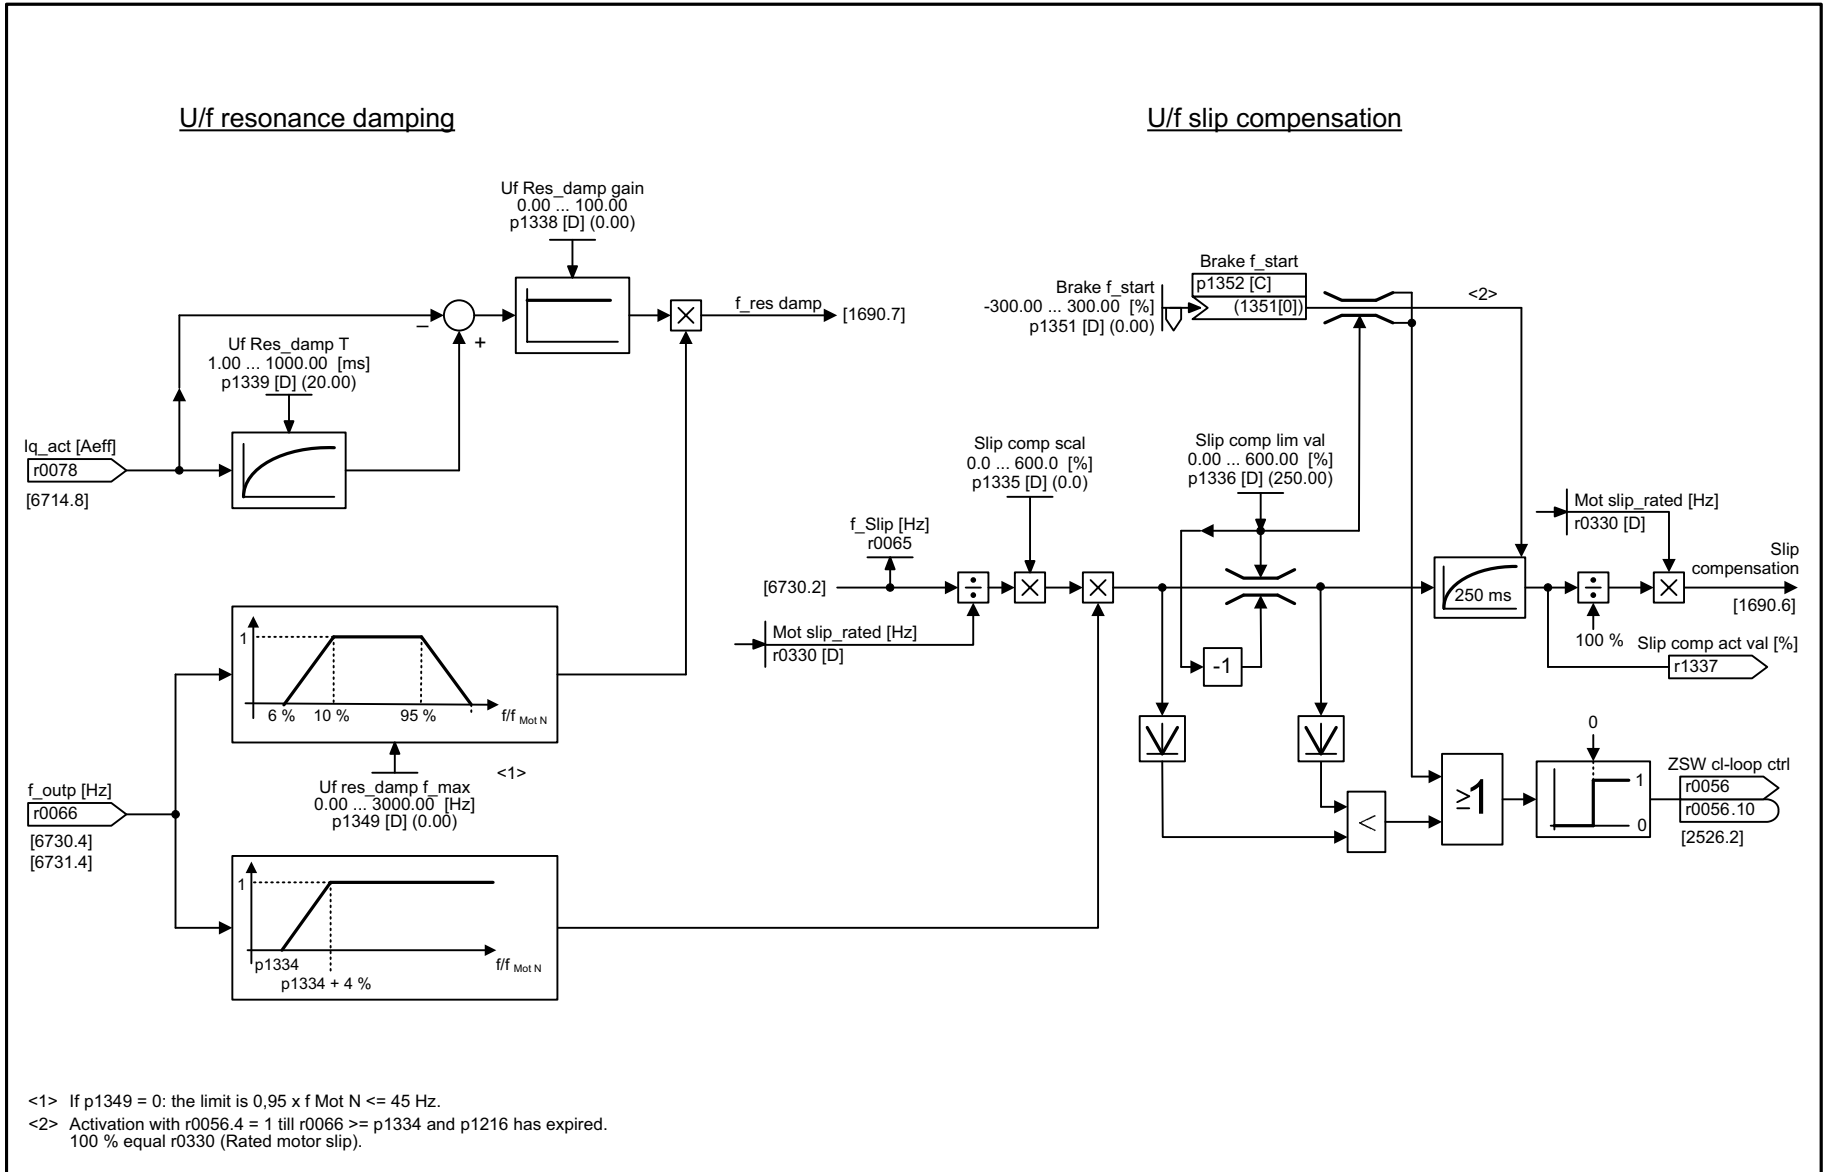

<1> If p1349 = 0: the limit is 0,95 x f Mot N <= 45 Hz.
 <2> Activation with r0056.4 = 1 till r0066 >= p1334 and p1216 has expired.
 100 % equal r0330 (Rated motor slip).

1	2	3	4	5	6	7	8
Vector control					fp_6310_97_53.vsd	Function diagram	
Resonance damping and slip compensation (U/f)					12.12.2012 V4.6	SINAMICS G120D	
							- 6310 -

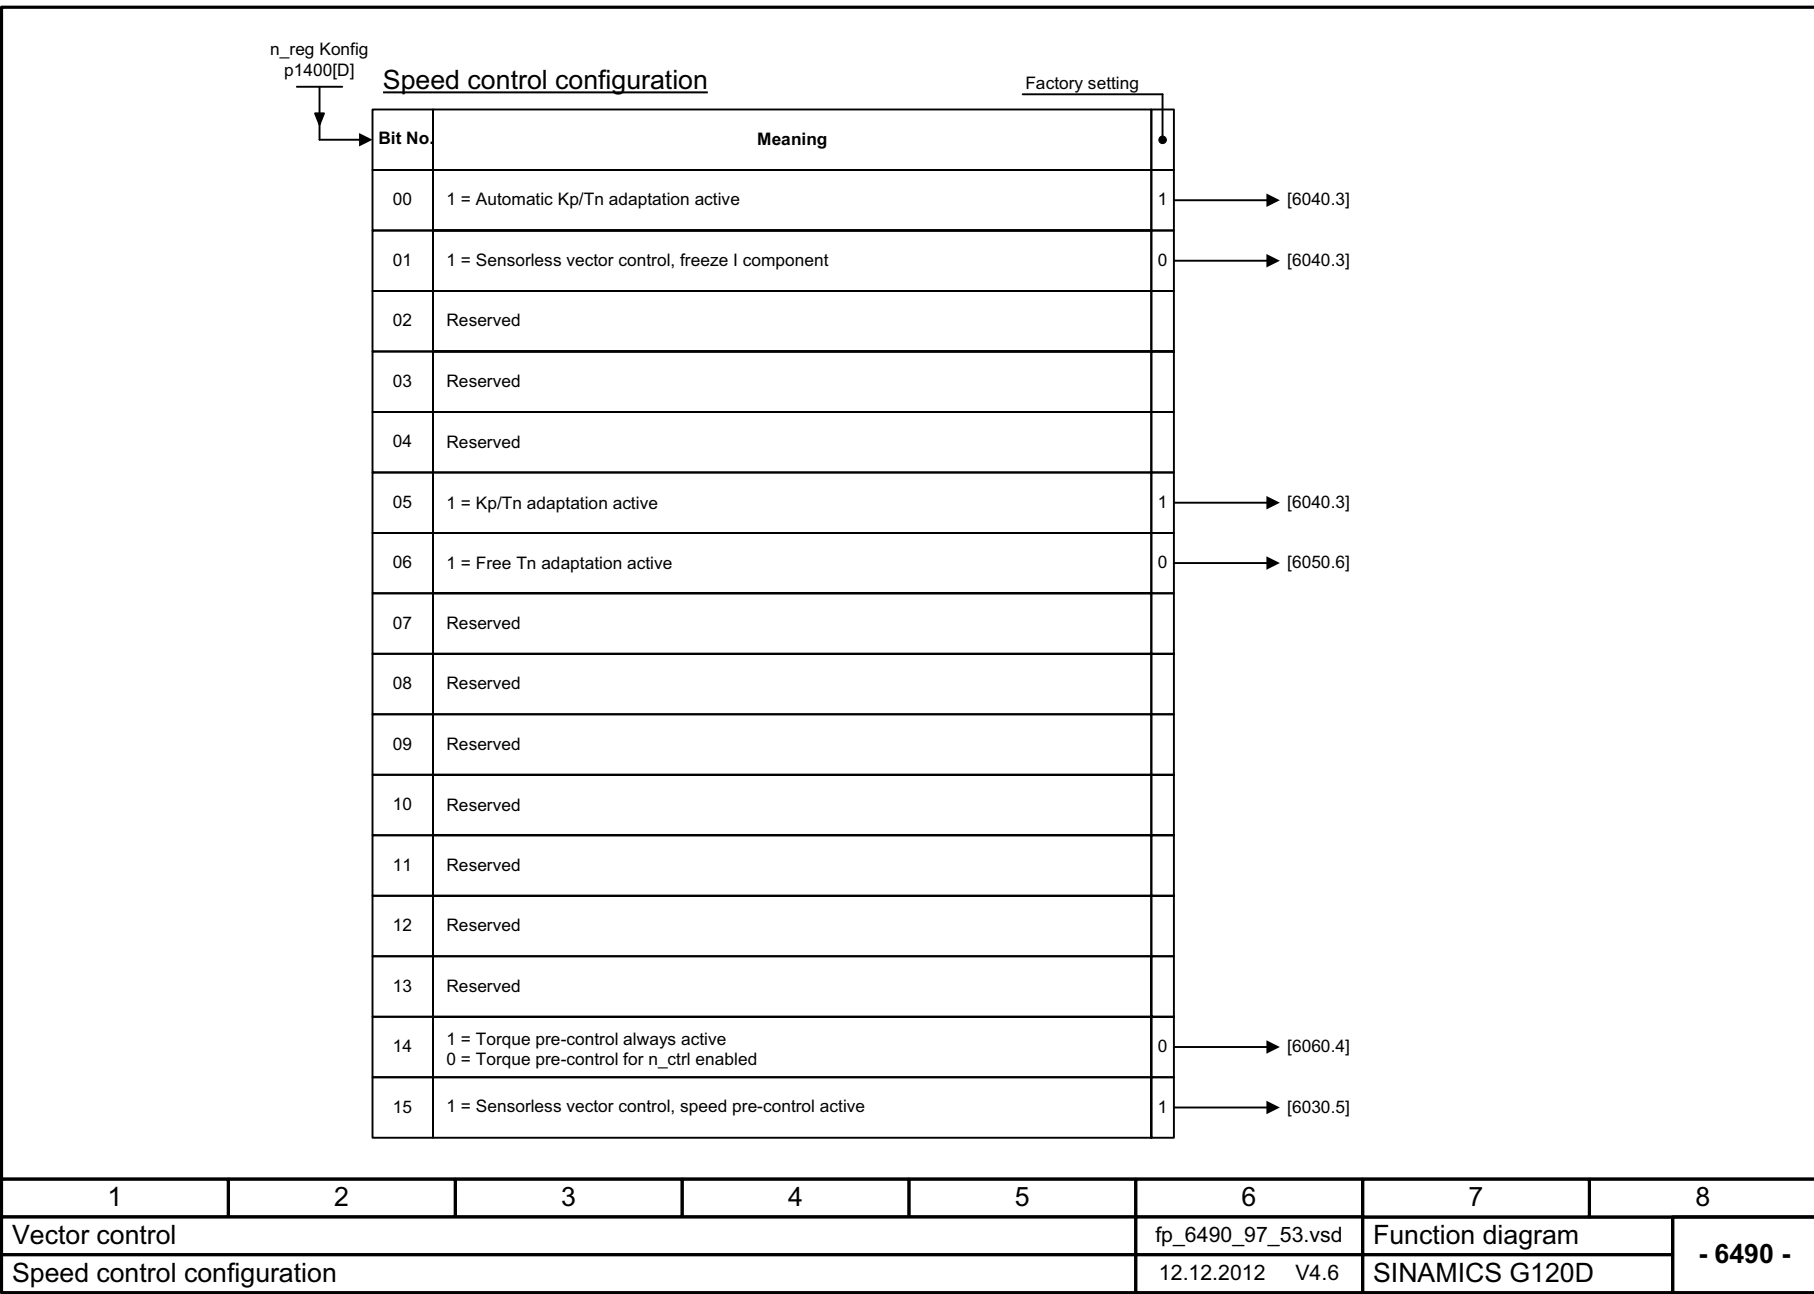


Fig. 2-110 6490 – Speed control configuration

1	2	3	4	5	6	7	8
Vector control					fp_6490_97_53.vsd	Function diagram	
Speed control configuration					12.12.2012 V4.6	SINAMICS G120D	
							- 6490 -

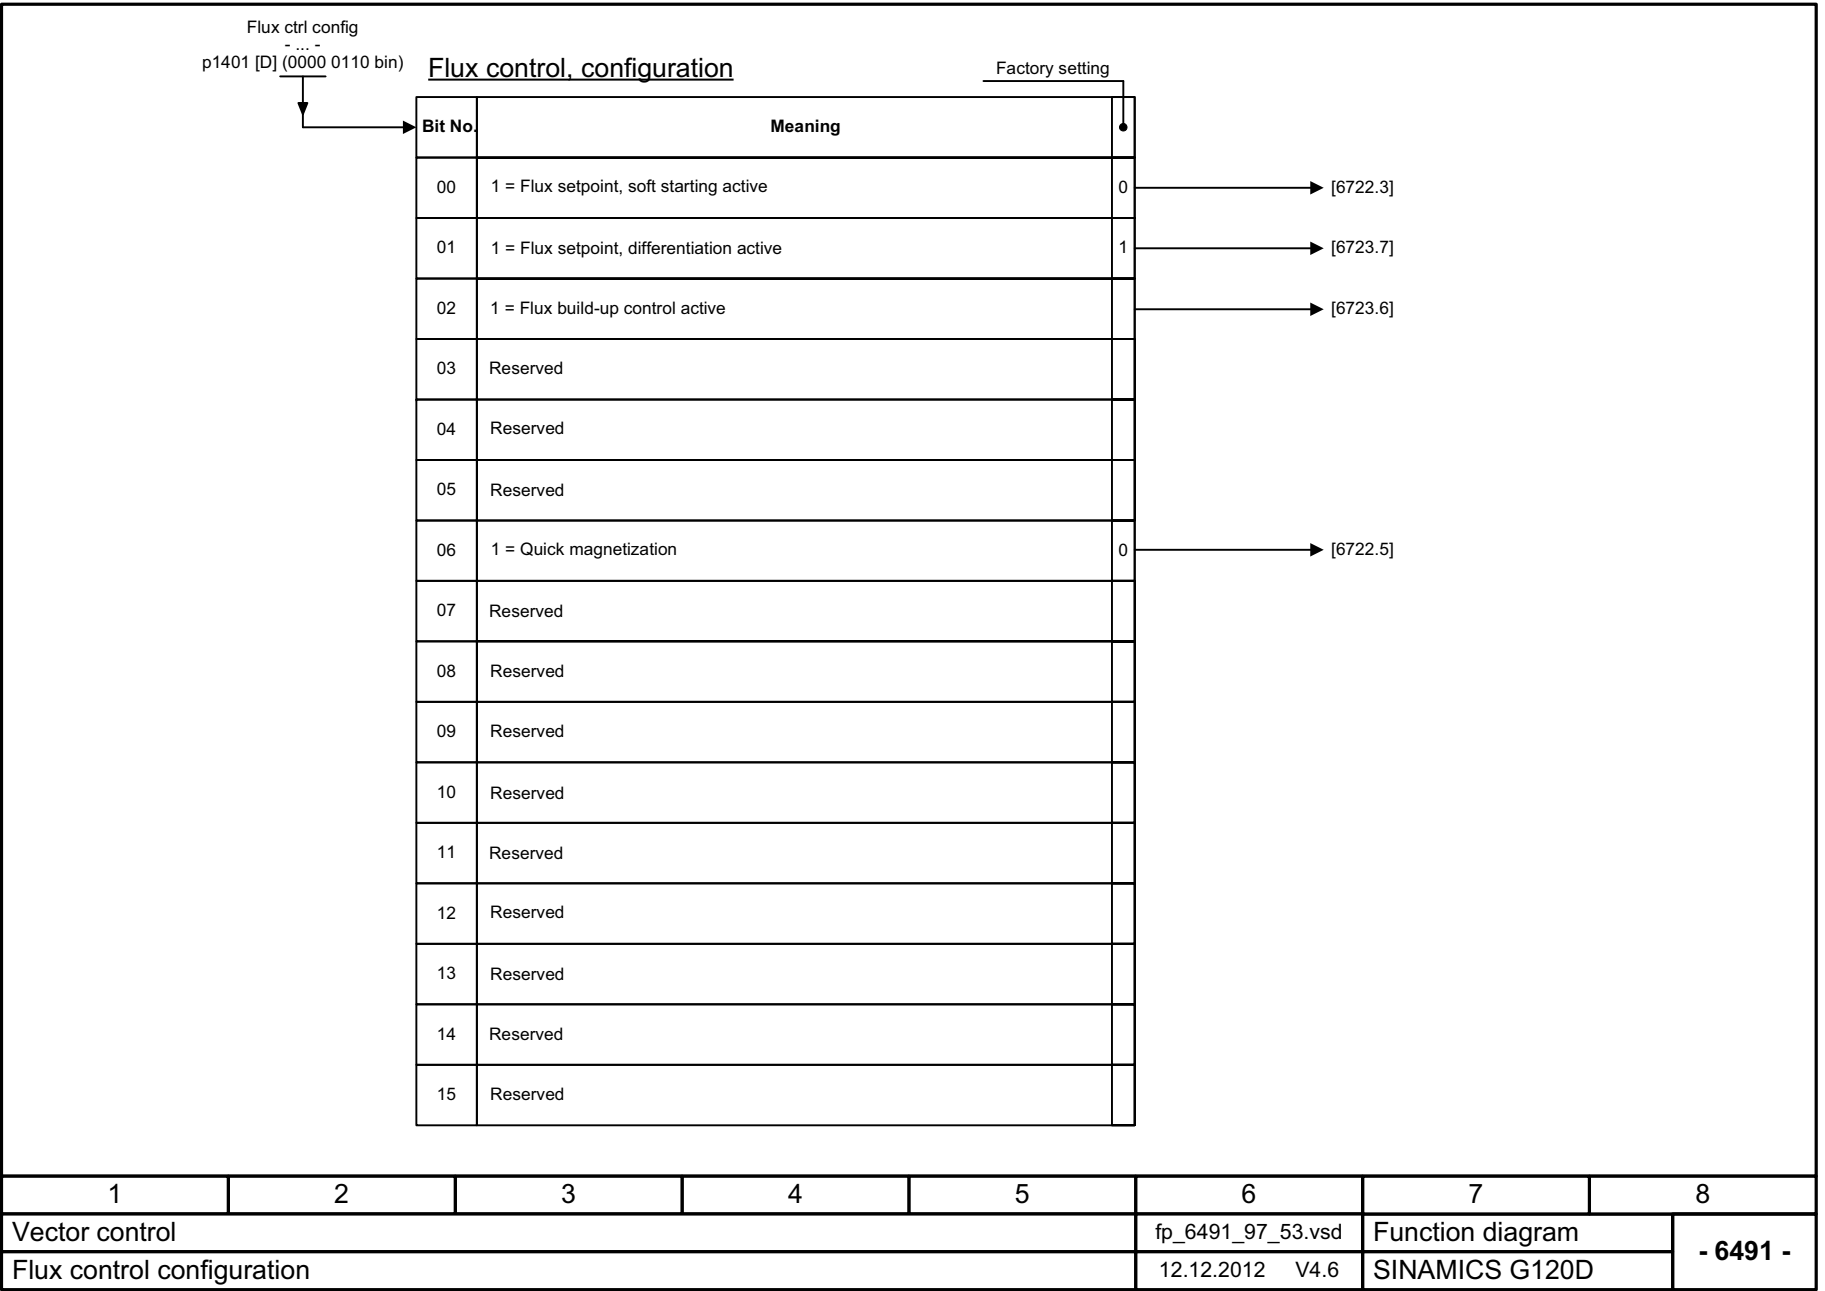


Fig. 2-111 6491 – Flux control configuration

1	2	3	4	5	6	7	8
Vector control					fp_6491_97_53.vsd	Function diagram	
Flux control configuration					12.12.2012 V4.6	SINAMICS G120D	


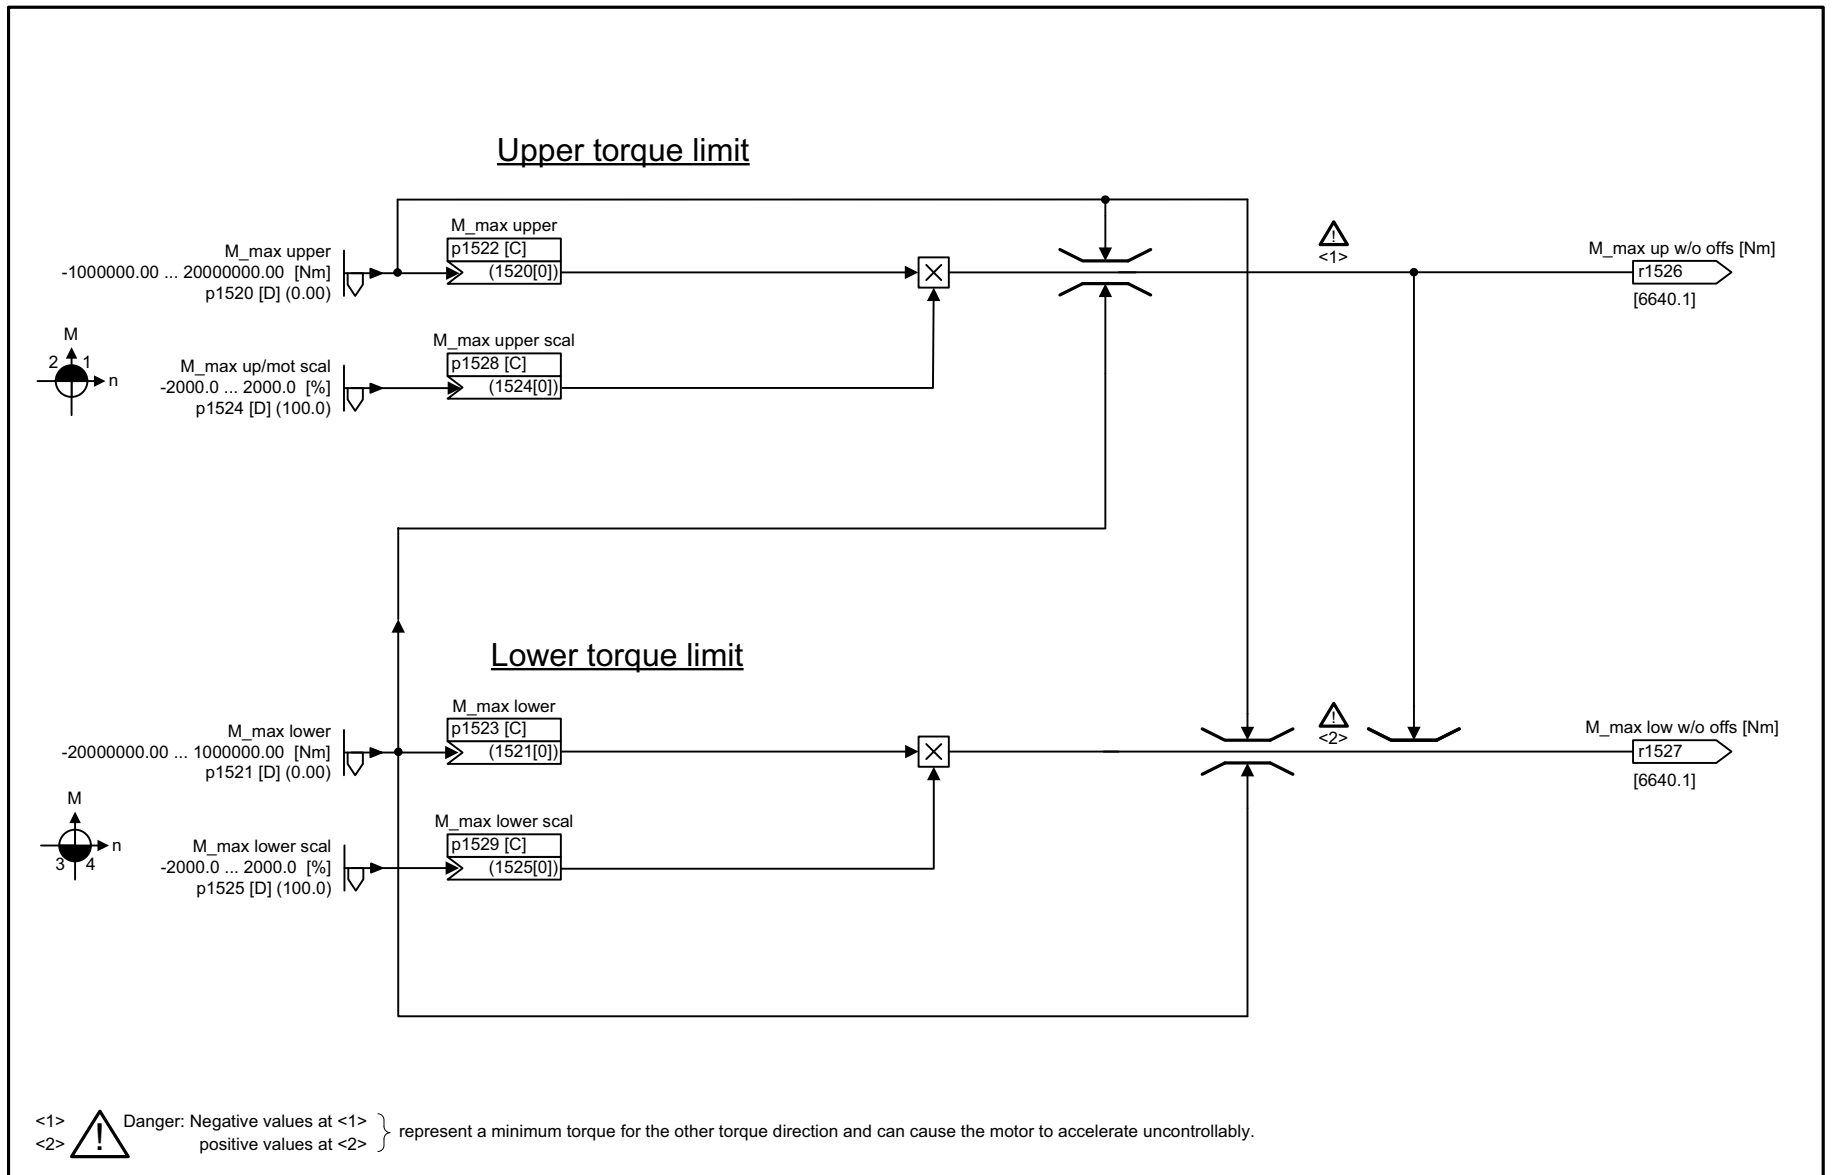


Fig. 2-112 6630 – Upper/lower torque limit

1	2	3	4	5	6	7	8
Vector control					fp_6630_97_53.vsd	Function diagram	
Upper/lower torque limit					12.12.2012 V4.6	SINAMICS G120D	
							- 6630 -

Fig. 2-113 6640 – Current/power/torque limits

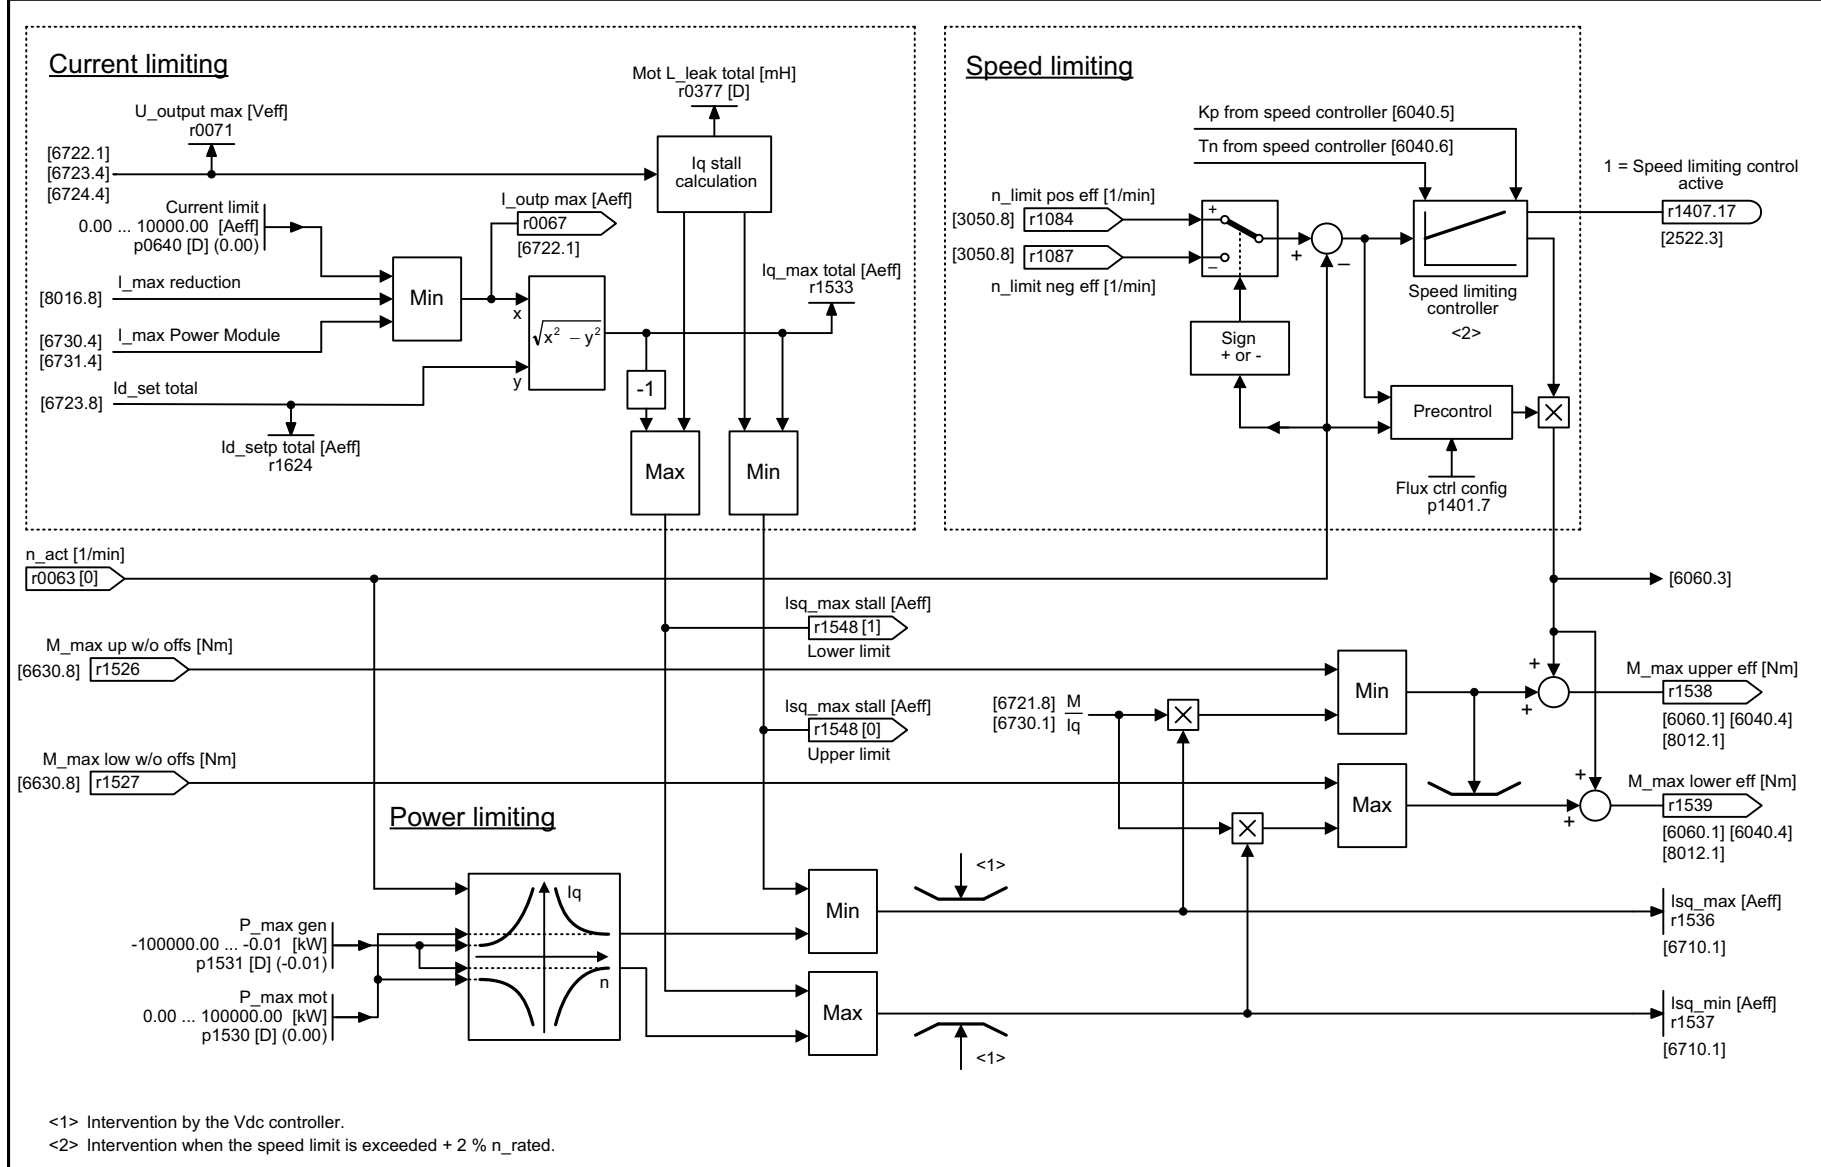

<1> Intervention by the Vdc controller.
 <2> Intervention when the speed limit is exceeded + 2 % n_{rated} .

1	2	3	4	5	6	7	8
Vector control					fp_6640_97_53.vsd	Function diagram	
Current/power/torque limits					12.12.2012 V4.6	SINAMICS G120D	
							- 6640 -


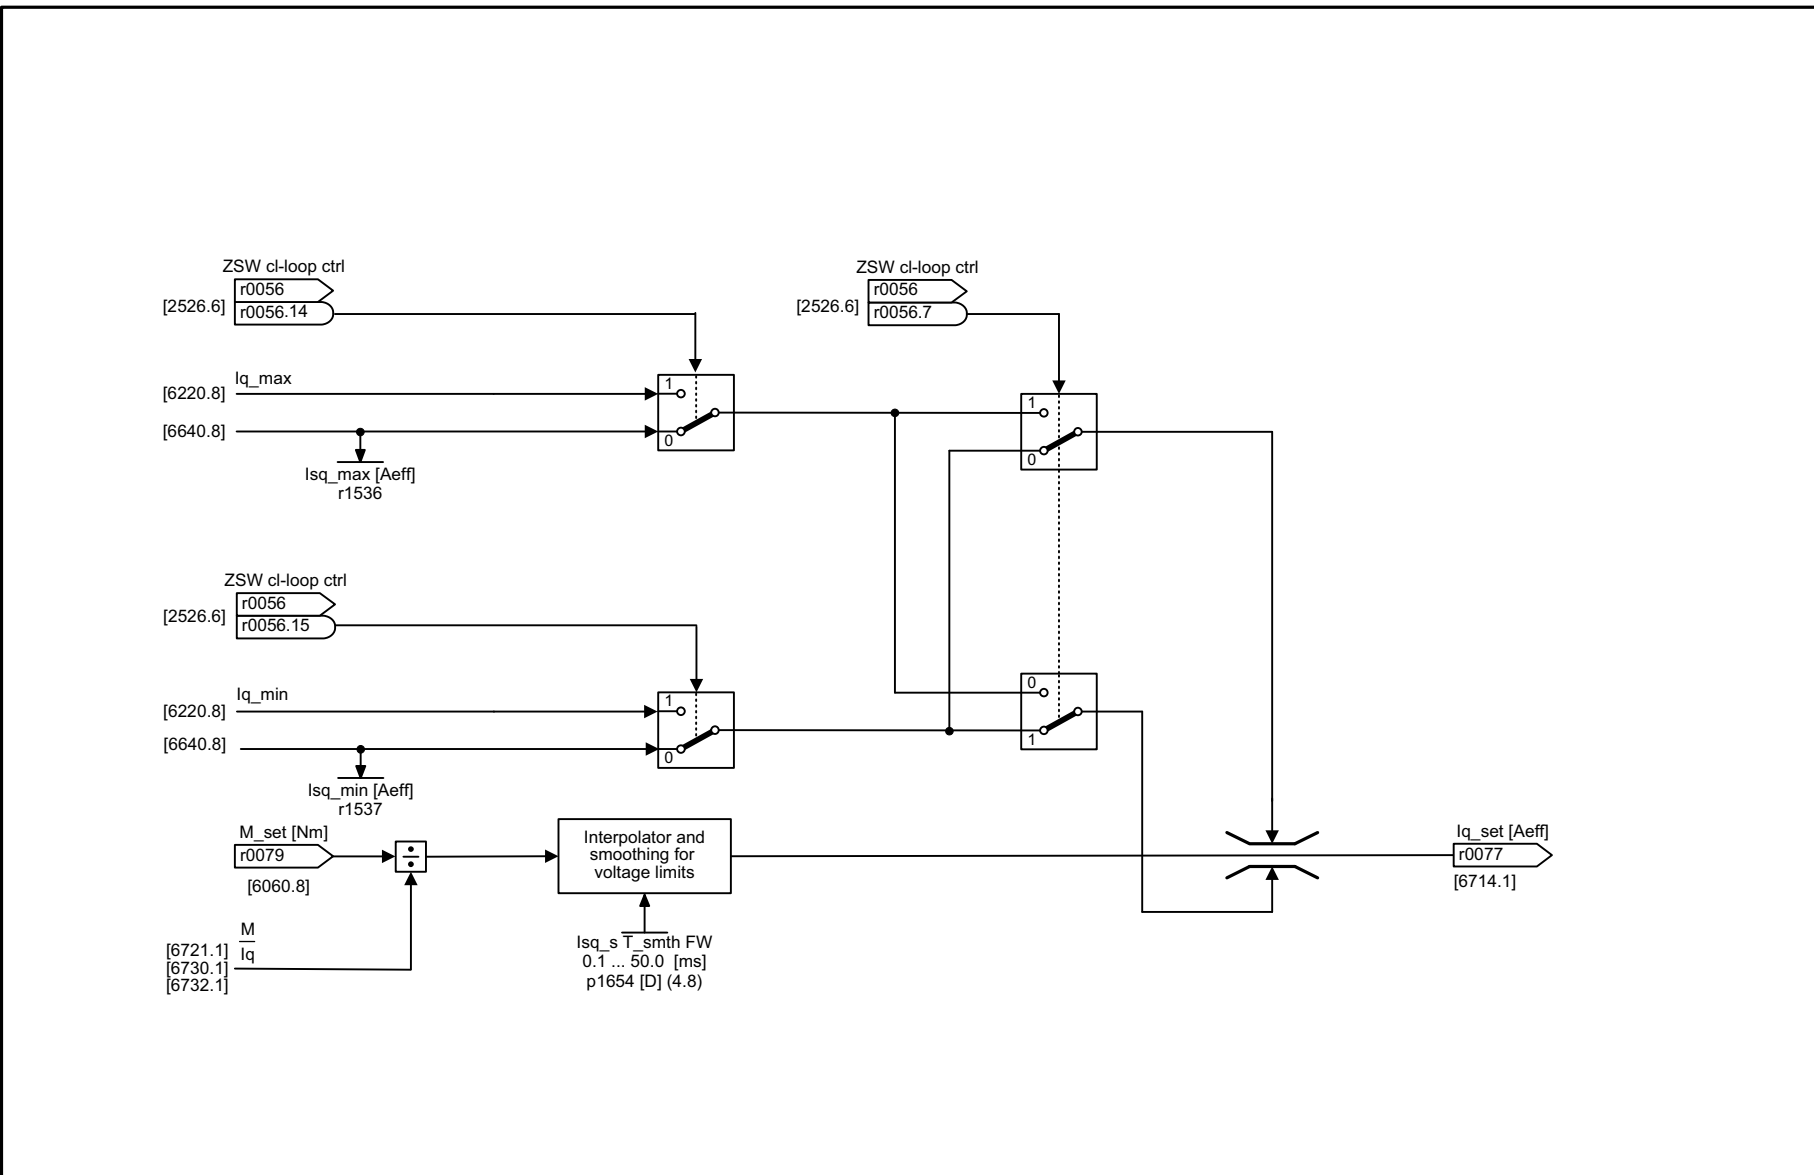


Fig. 2-114 6710 – Current setpoint filter

1	2	3	4	5	6	7	8
Vector control					fp_6710_97_51.vsd	Function diagram	
Current setpoint filter					12.12.2012 V4.6	SINAMICS G120D	
- 6710 -							


Fig. 2-115 6714 – Iq and Id controller

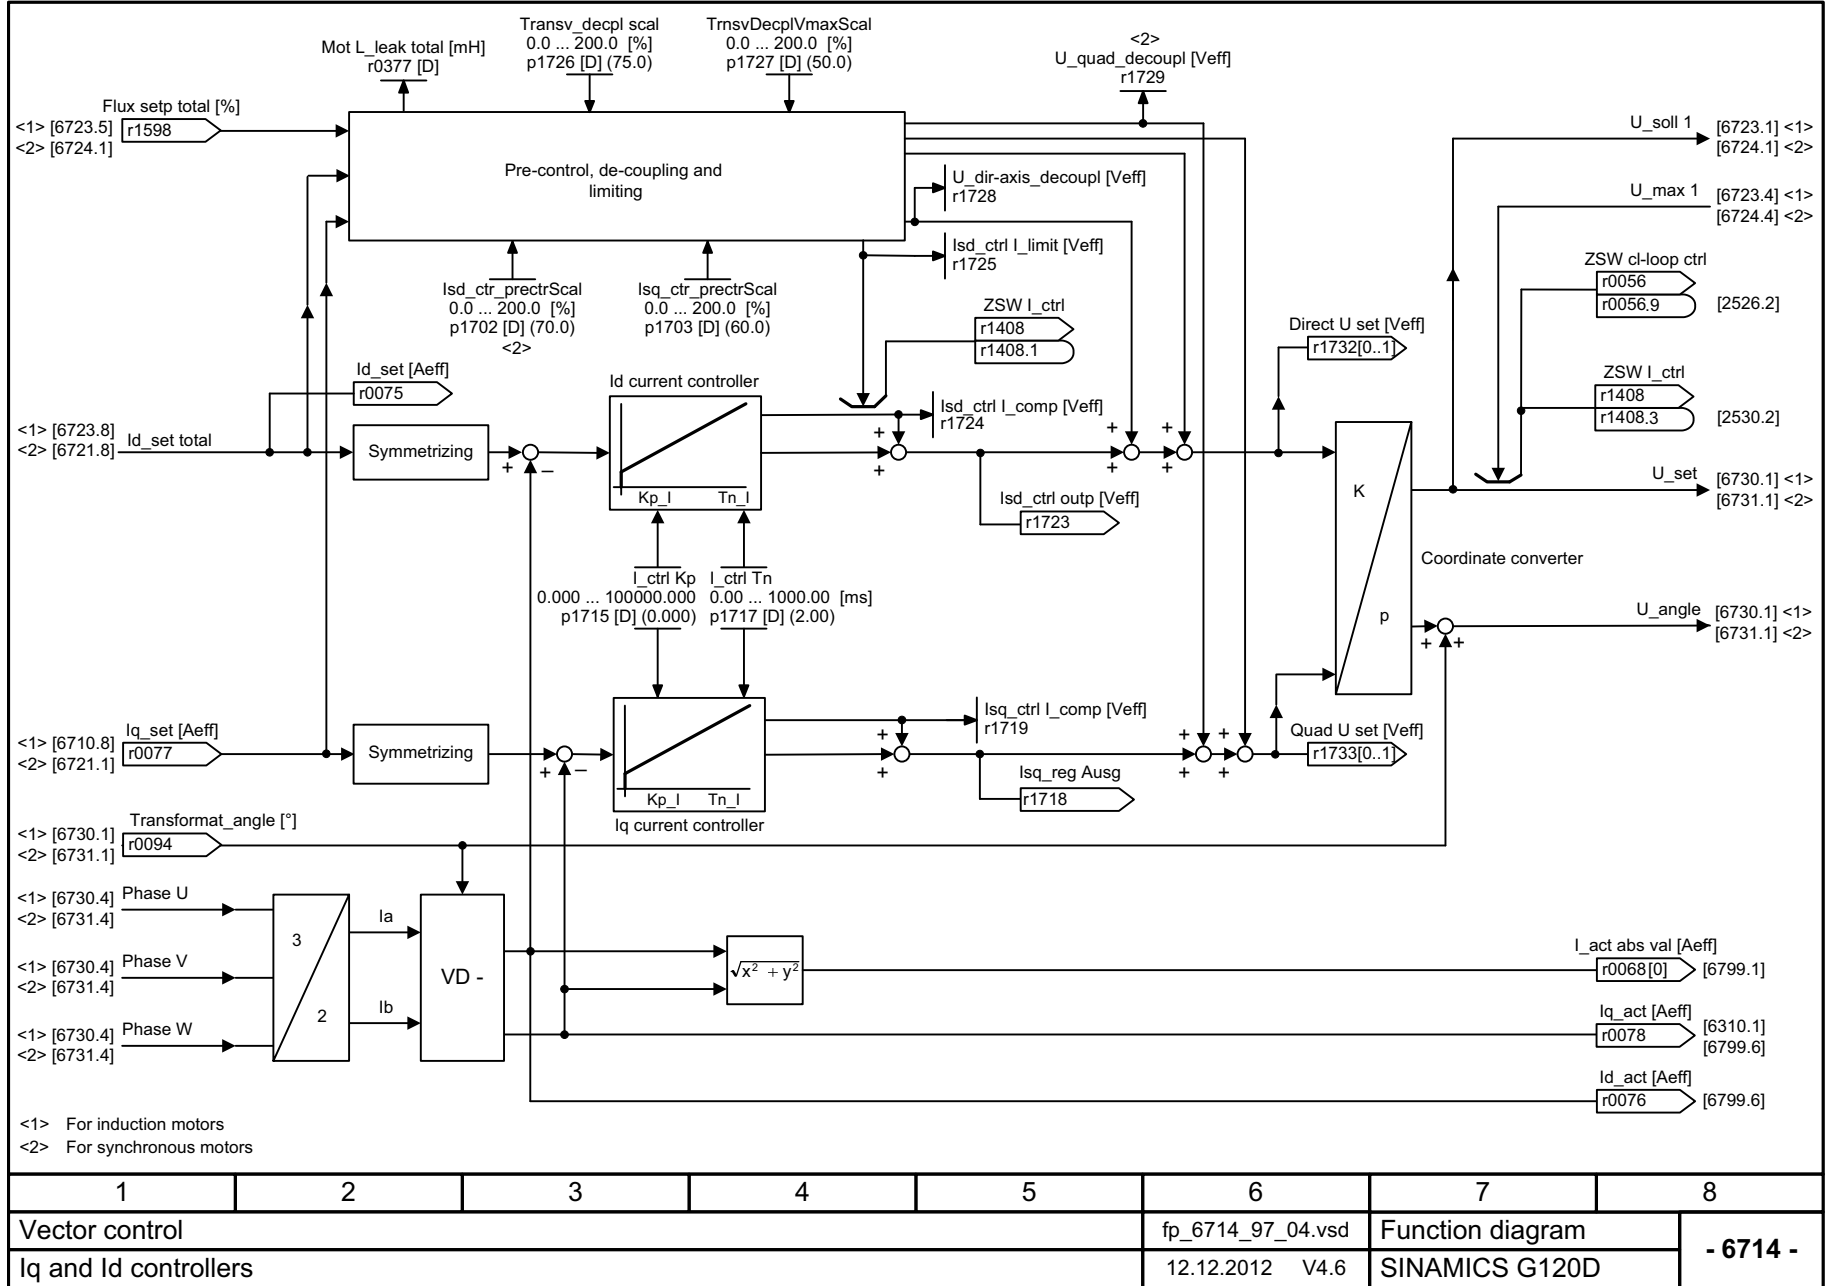


<1> For induction motors
 <2> For synchronous motors

1	2	3	4	5	6	7	8
Vector control					fp_6714_97_04.vsd	Function diagram	
Iq and Id controllers					12.12.2012 V4.6	SINAMICS G120D	
							- 6714 -

Fig. 2-117 6722 – Field weakening characteristic, Id setpoint (ASM, p0300 = 1)

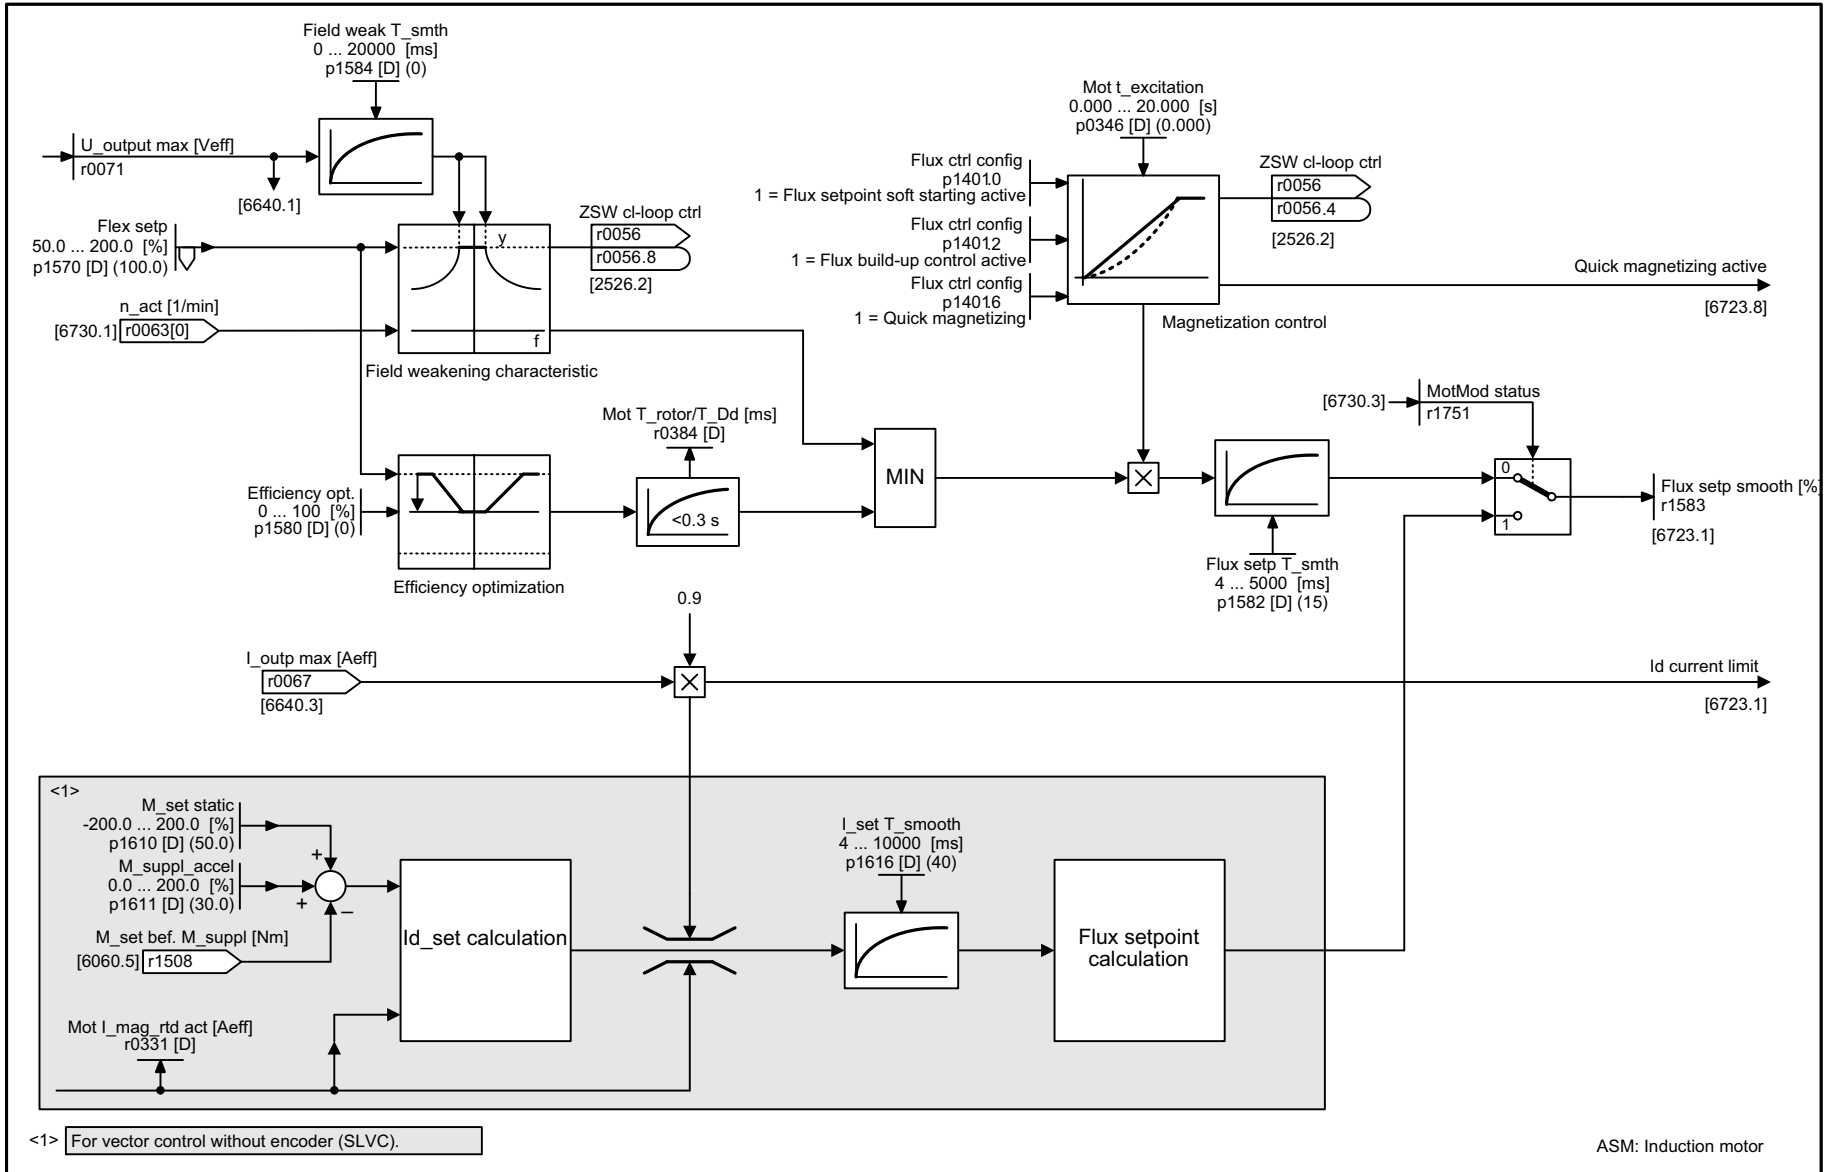

1	2	3	4	5	6	7	8
Vector control					fp_6722_97_55.vsd	Function diagram	
Field weakening characteristic, Id setpoint (ASM, p0300 = 1)					12.12.2012 V4.6	SINAMICS G120D	
							- 6722 -

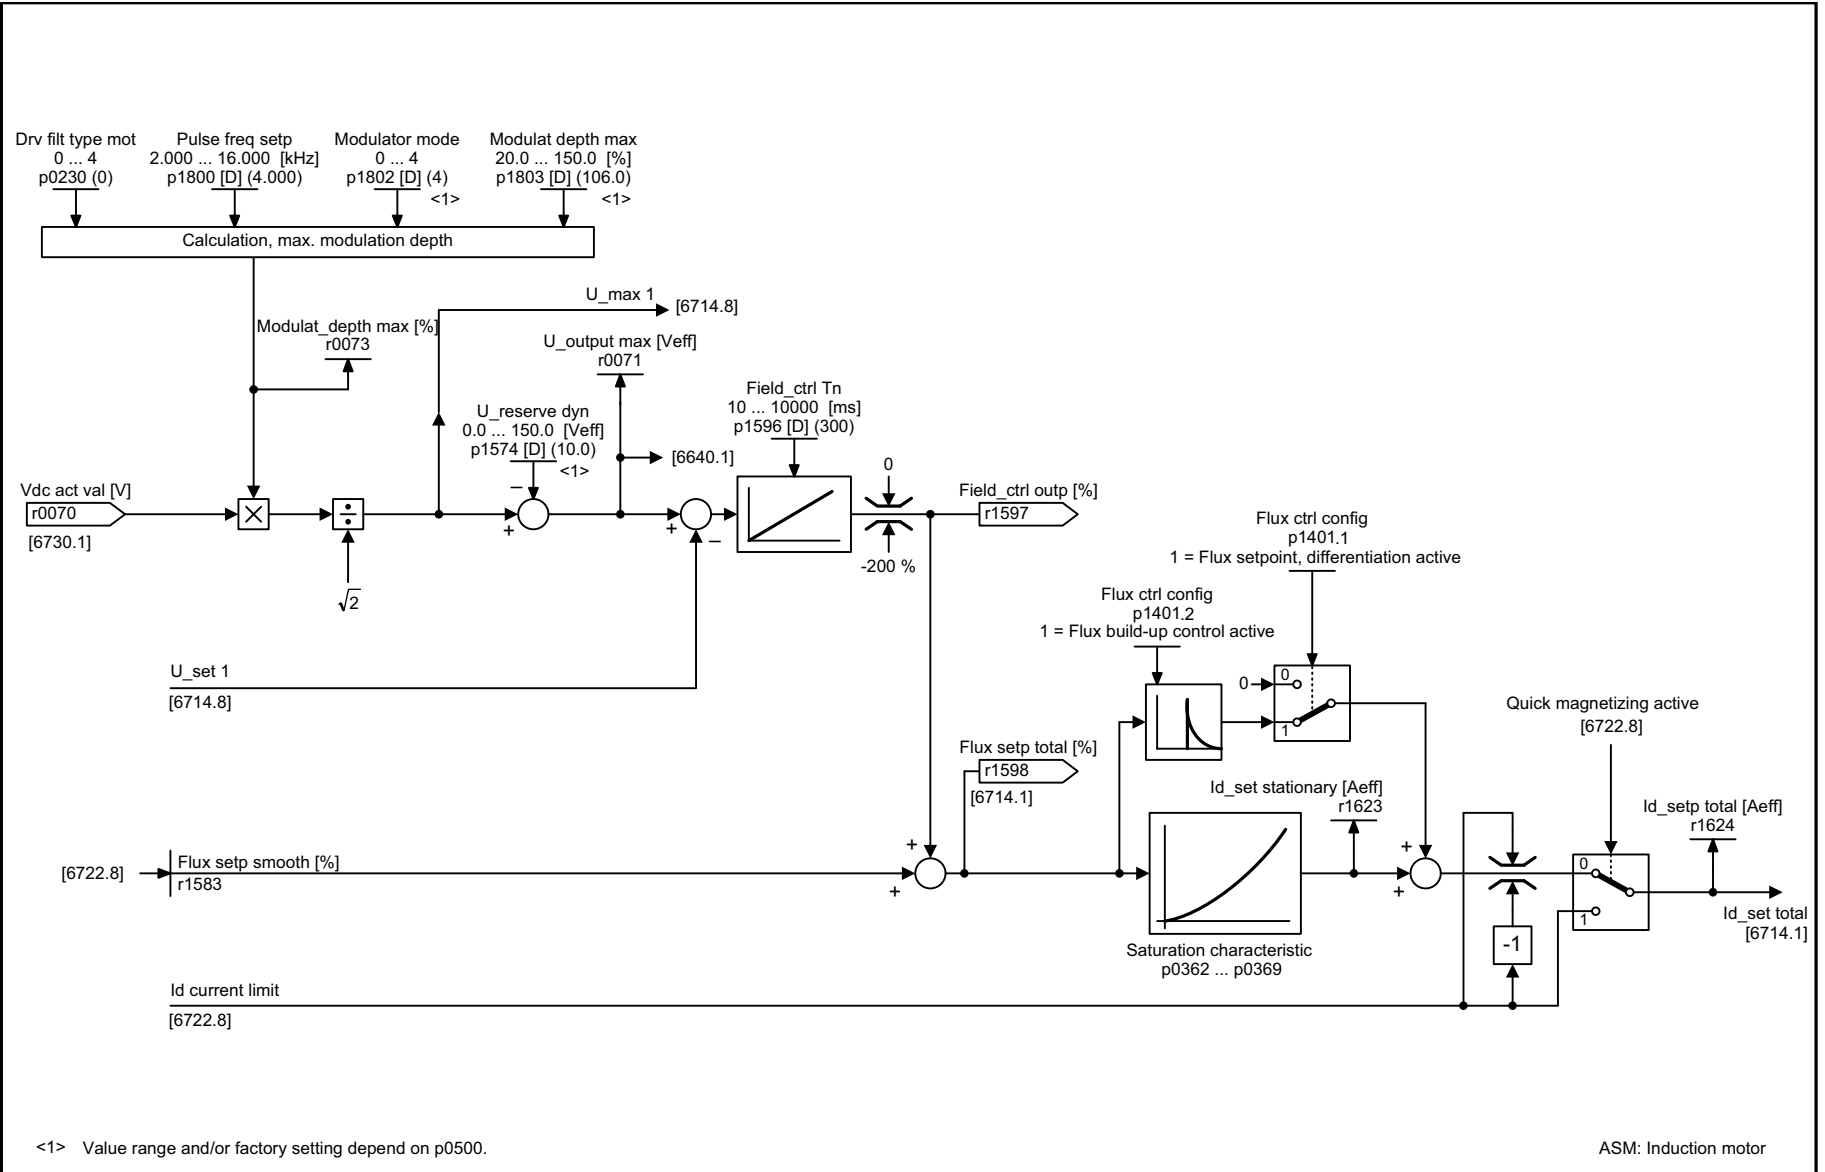


<1> Value range and/or factory setting depend on p0500.

ASM: Induction motor

1	2	3	4	5	6	7	8
Vector control					fp_6723_97_53.vsd	Function diagram	
Field weakening controller, flux controller (ASM, p0300 = 1)					12.12.2012 V4.6	SINAMICS G120D	
							- 6723 -

Fig. 2-118 6723 – Field weakening controller, flux controller (ASM, p0300 = 1)

Fig. 2-119 6724 – Field weakening controller (PEM, p0300 = 2xx)

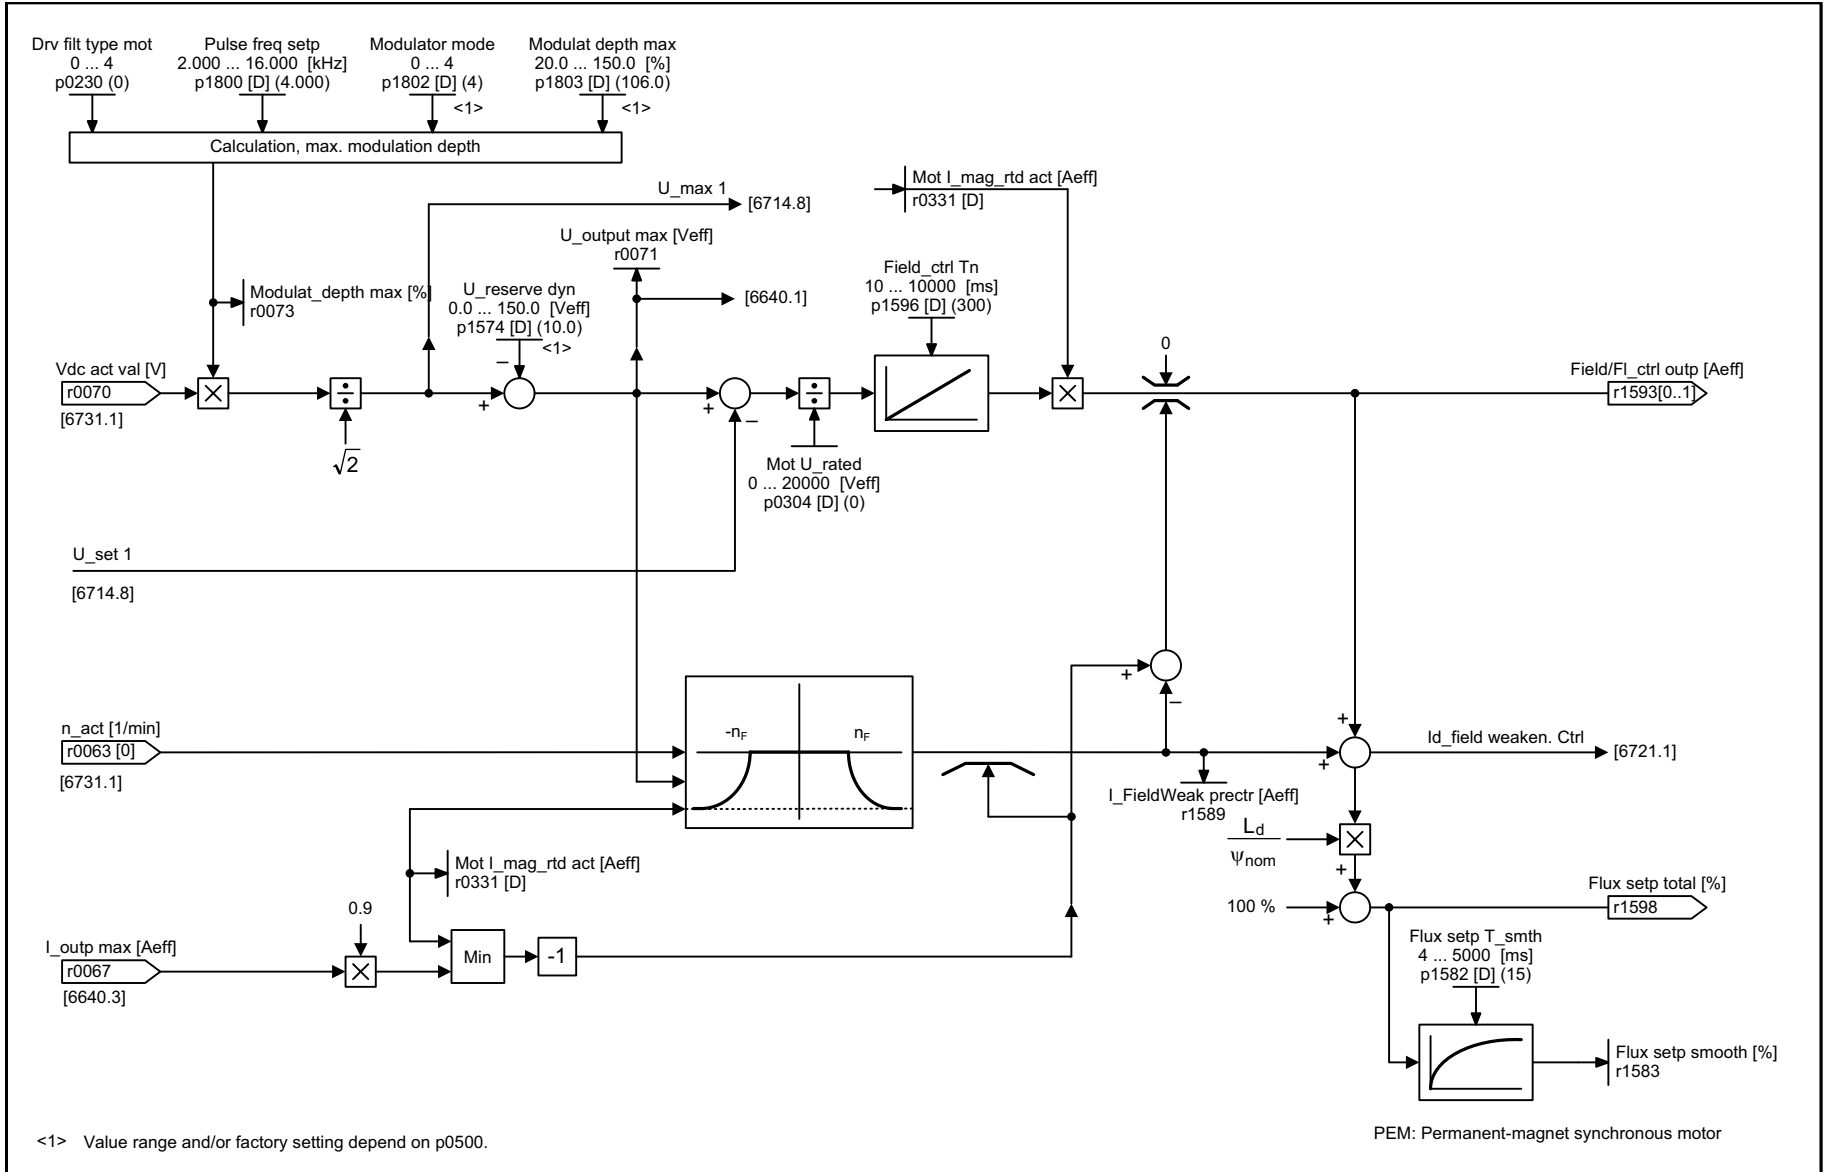

1	2	3	4	5	6	7	8
Vector control					fp_6724_97_53.vsd	Function diagram	
Field weakening controller (PEM, p0300 = 2xx)					12.12.2012 V4.6	SINAMICS G120D	
							- 6724 -

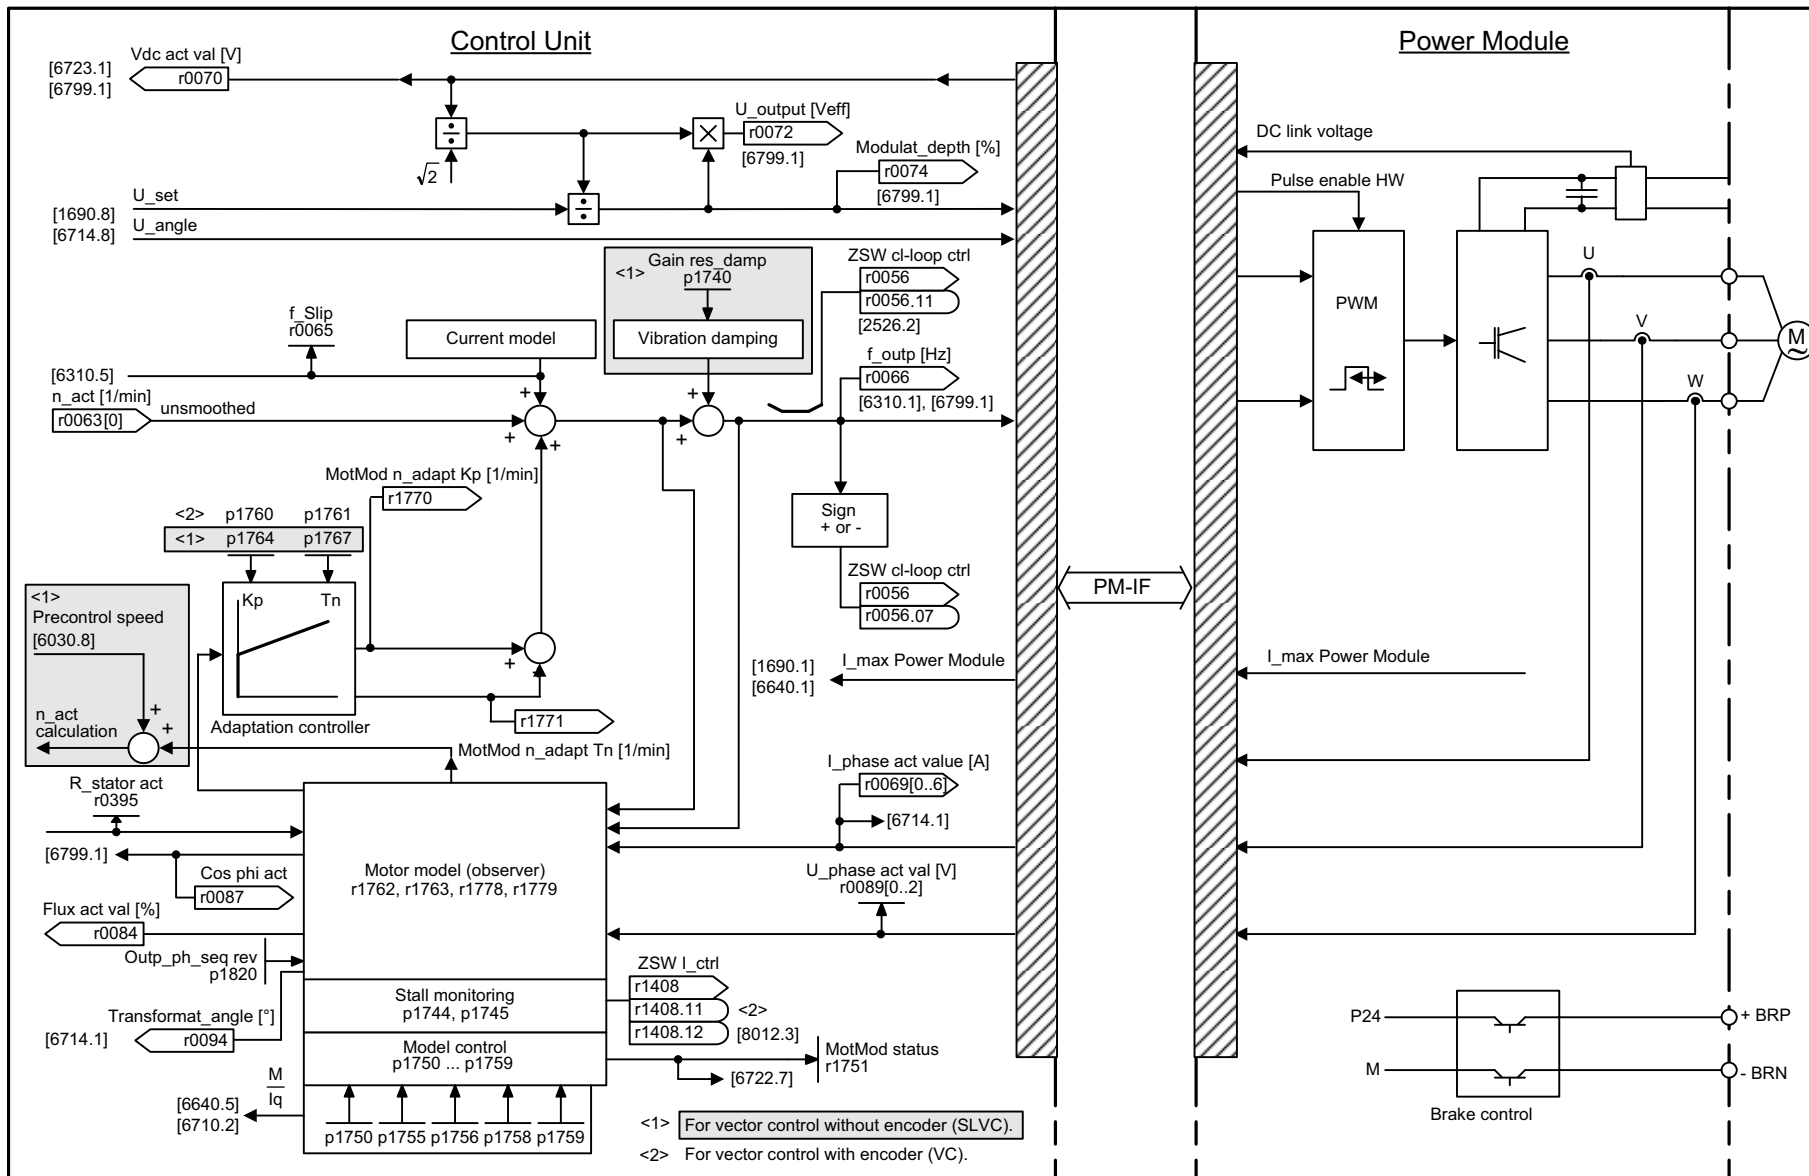
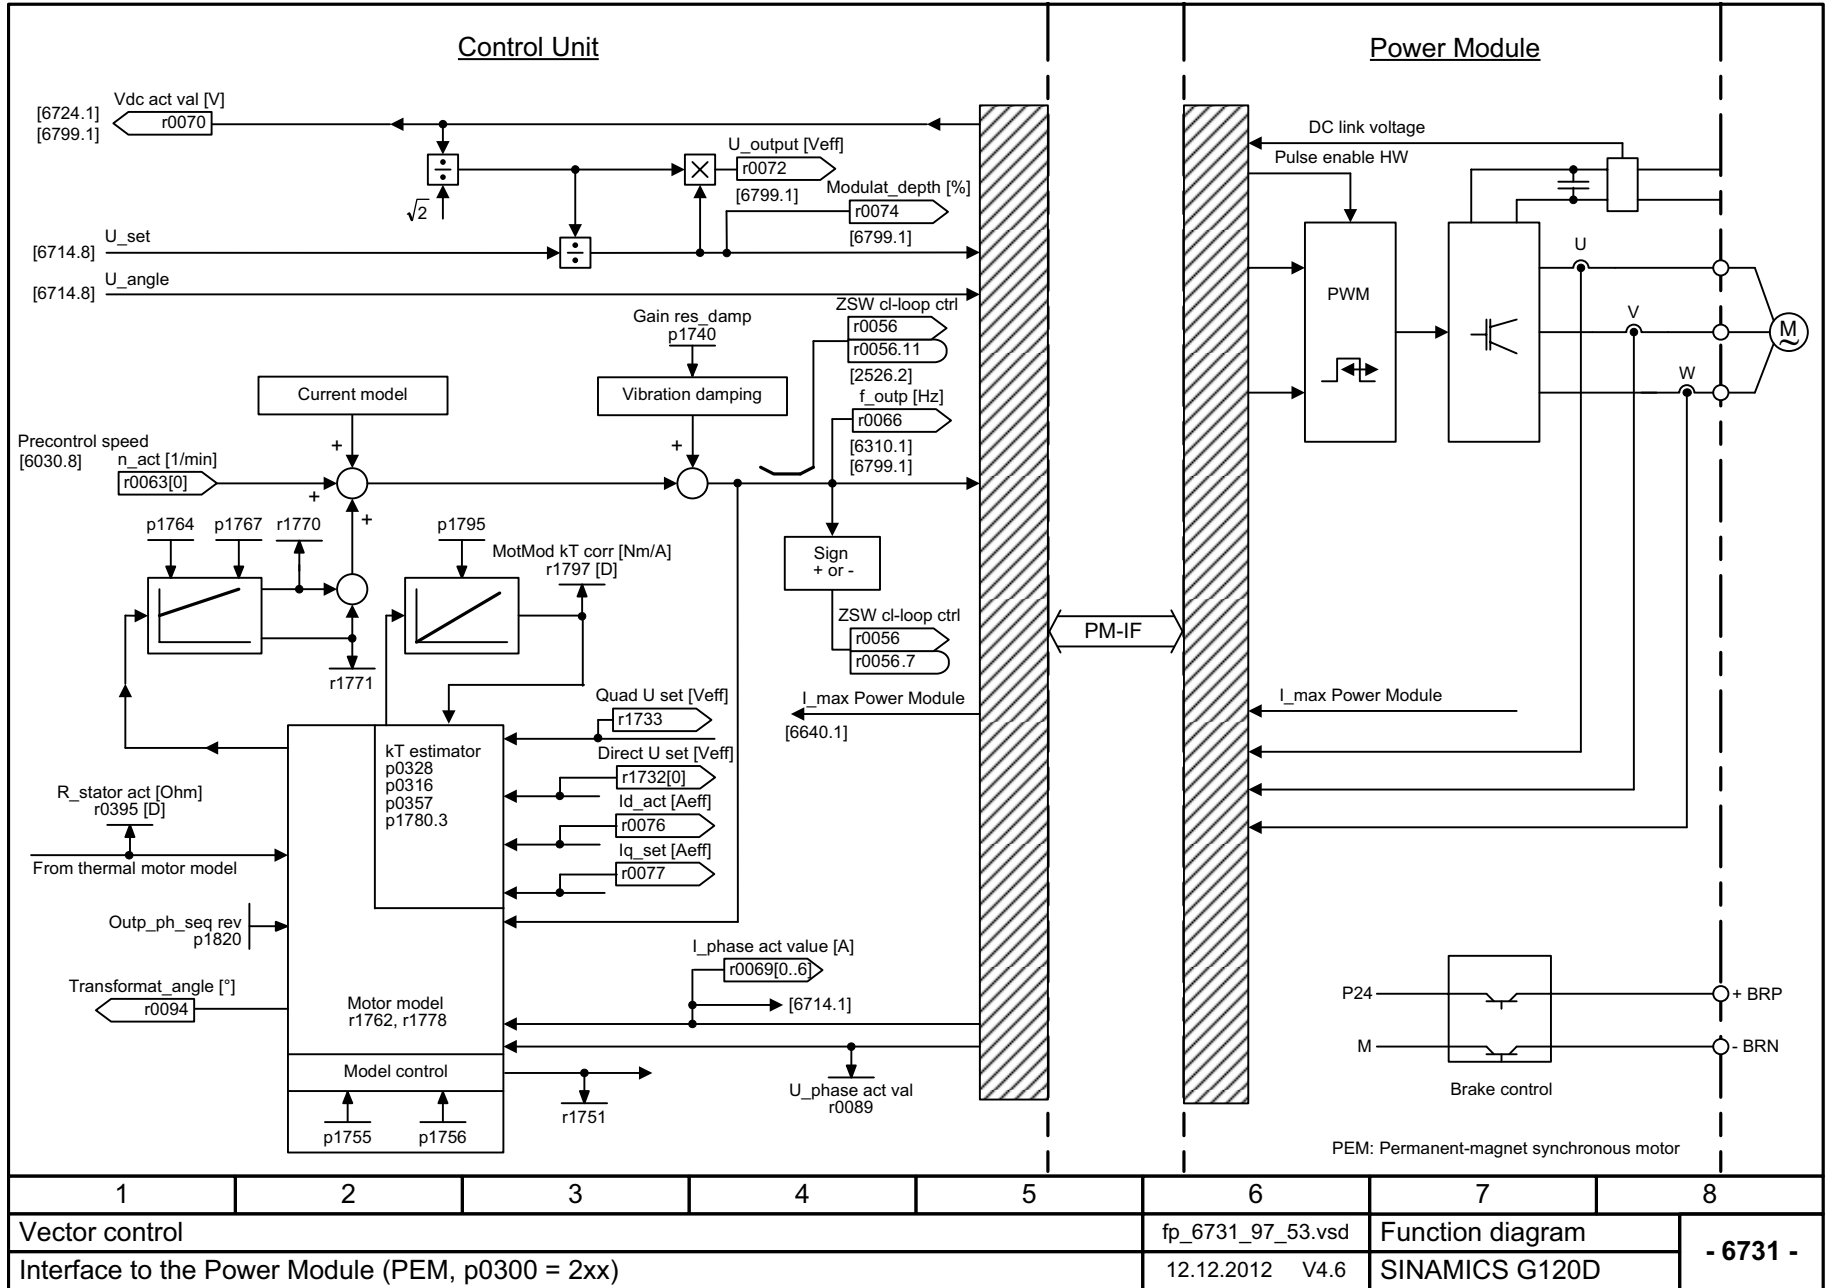


Fig. 2-120 6730 – Interface to the Power Module (ASM; p0300 = 1)

1	2	3	4	5	6	7	8
Vector control					fp_6730_97_55.vsd	Function diagram	
Interface to the Power Module (ASM, p0300 = 1)					12.12.2012 V4.6	SINAMICS G120D	
- 6730 -							

Fig. 2-121 6731 – Interface to the Power Module (PEM; p0300 = 2xx)



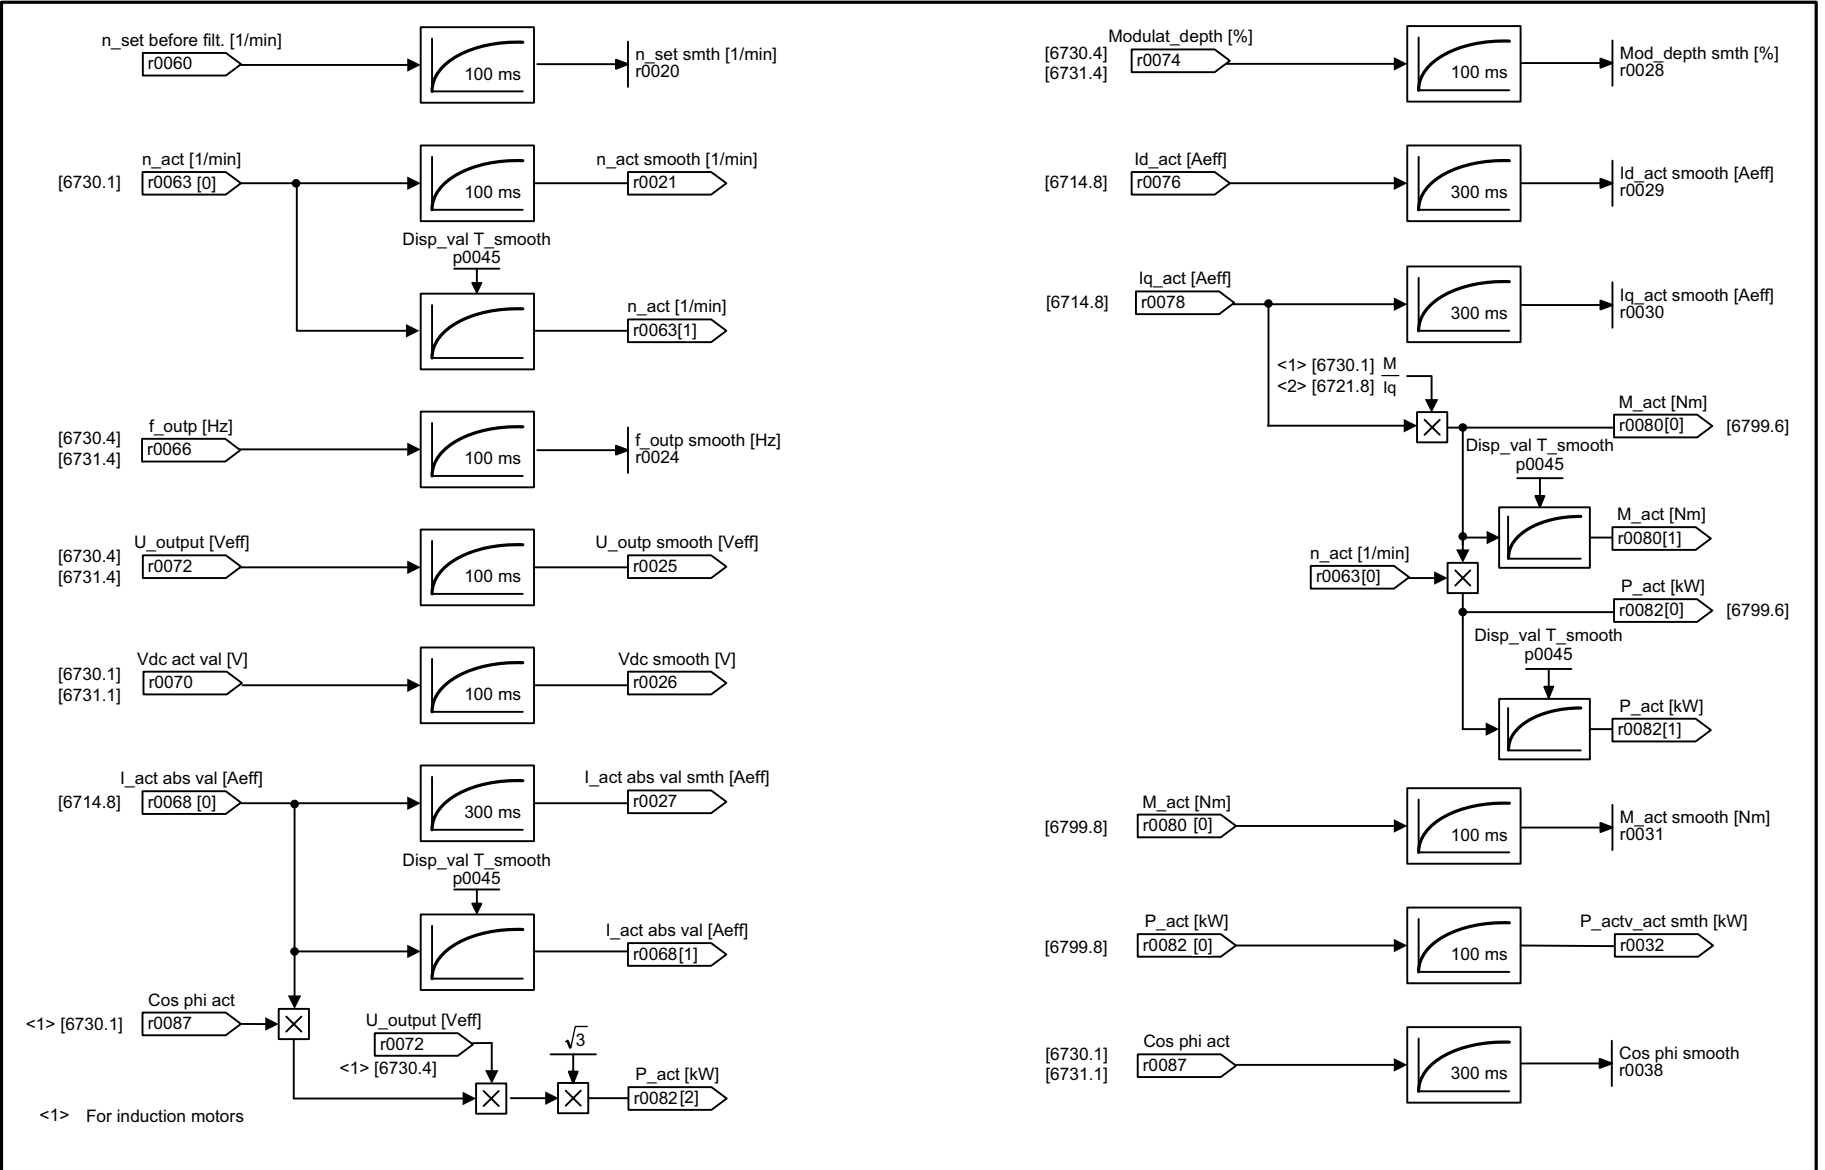


Fig. 2-122 6799 – Display signals

1	2	3	4	5	6	7	8
Vector control					fp_6799_97_04.vsd	Function diagram	
Display signals					12.12.2012 V4.6	SINAMICS G120D	
							- 6799 -

2.17 Free function blocks

Function diagrams

7200 – Sampling times of the runtime groups	2-716
7210 – AND (AND function blocks with 4 inputs)	2-717
7212 – OR (OR function blocks with 4 inputs)	2-718
7214 – XOR (XOR function blocks with 4 inputs)	2-719
7216 – NOT (inverter)	2-720
7220 – ADD (adder with 4 inputs), SUB (subtractor)	2-721
7222 – MUL (multiplier with 4 inputs), DIV (divider)	2-722
7224 – AVA (absolute value generator)	2-723
7225 – NCM (numeric comparator)	2-724
7226 – PLI (polyline scaling)	2-725
7230 – MFP (pulse generator), PCL (pulse contractor)	2-726
7232 – PDE (ON delay)	2-727
7233 – PDF (OFF delay)	2-728
7234 – PST (pulse stretcher)	2-729
7240 – RSR (RS flip-flop), DFR (D flip-flop)	2-730
7250 – BSW (binary change-over switch), NSW (numeric change-over switch)	2-731
7260 – LIM (limiter)	2-732
7262 – PT1 (smoothing element)	2-733
7264 – INT (integrator), DIF (derivative-action element)	2-734
7270 – LVM (double-sided limit monitor with hysteresis)	2-735

	Run-time group						RTG sampling time [ms] r20001[0..9]
	1	2	3	4	5	6	
	r20001[1] = 8 ms	r20001[2] = 16 ms	r20001[3] = 32 ms	r20001[4] = 64 ms	r20001[5] = 128 ms	r20001[6] = 256 ms	
Logic function blocks AND, OR, XOR, NOT	X	X	X	X	X	X	
Arithmetic function blocks ADD, SUB, MUL, DIV, AVA, NCM, PLI	-	-	-	-	X	X	
Time function blocks MFP, PCL, PDE, PDF, PST	-	-	-	-	X	X	
Memory function blocks RSR, DSR	X	X	X	X	X	X	
Switch function block NSW	-	-	-	-	X	X	
Switch function block BSW	X	X	X	X	X	X	
Control function blocks LIM, PT1, INT, DIF	-	-	-	-	X	X	
Complex function blocks LVM	-	-	-	-	X	X	

Fig. 2-123 7200 – Sampling times of the runtime groups

1	2	3	4	5	6	7	8
Free Function Blocks					fp_7200_97_59.vsd	Function diagram	
Sampling times of run-time groups					12.12.2012 V4.6	G120D CU240D-2	
							- 7200 -

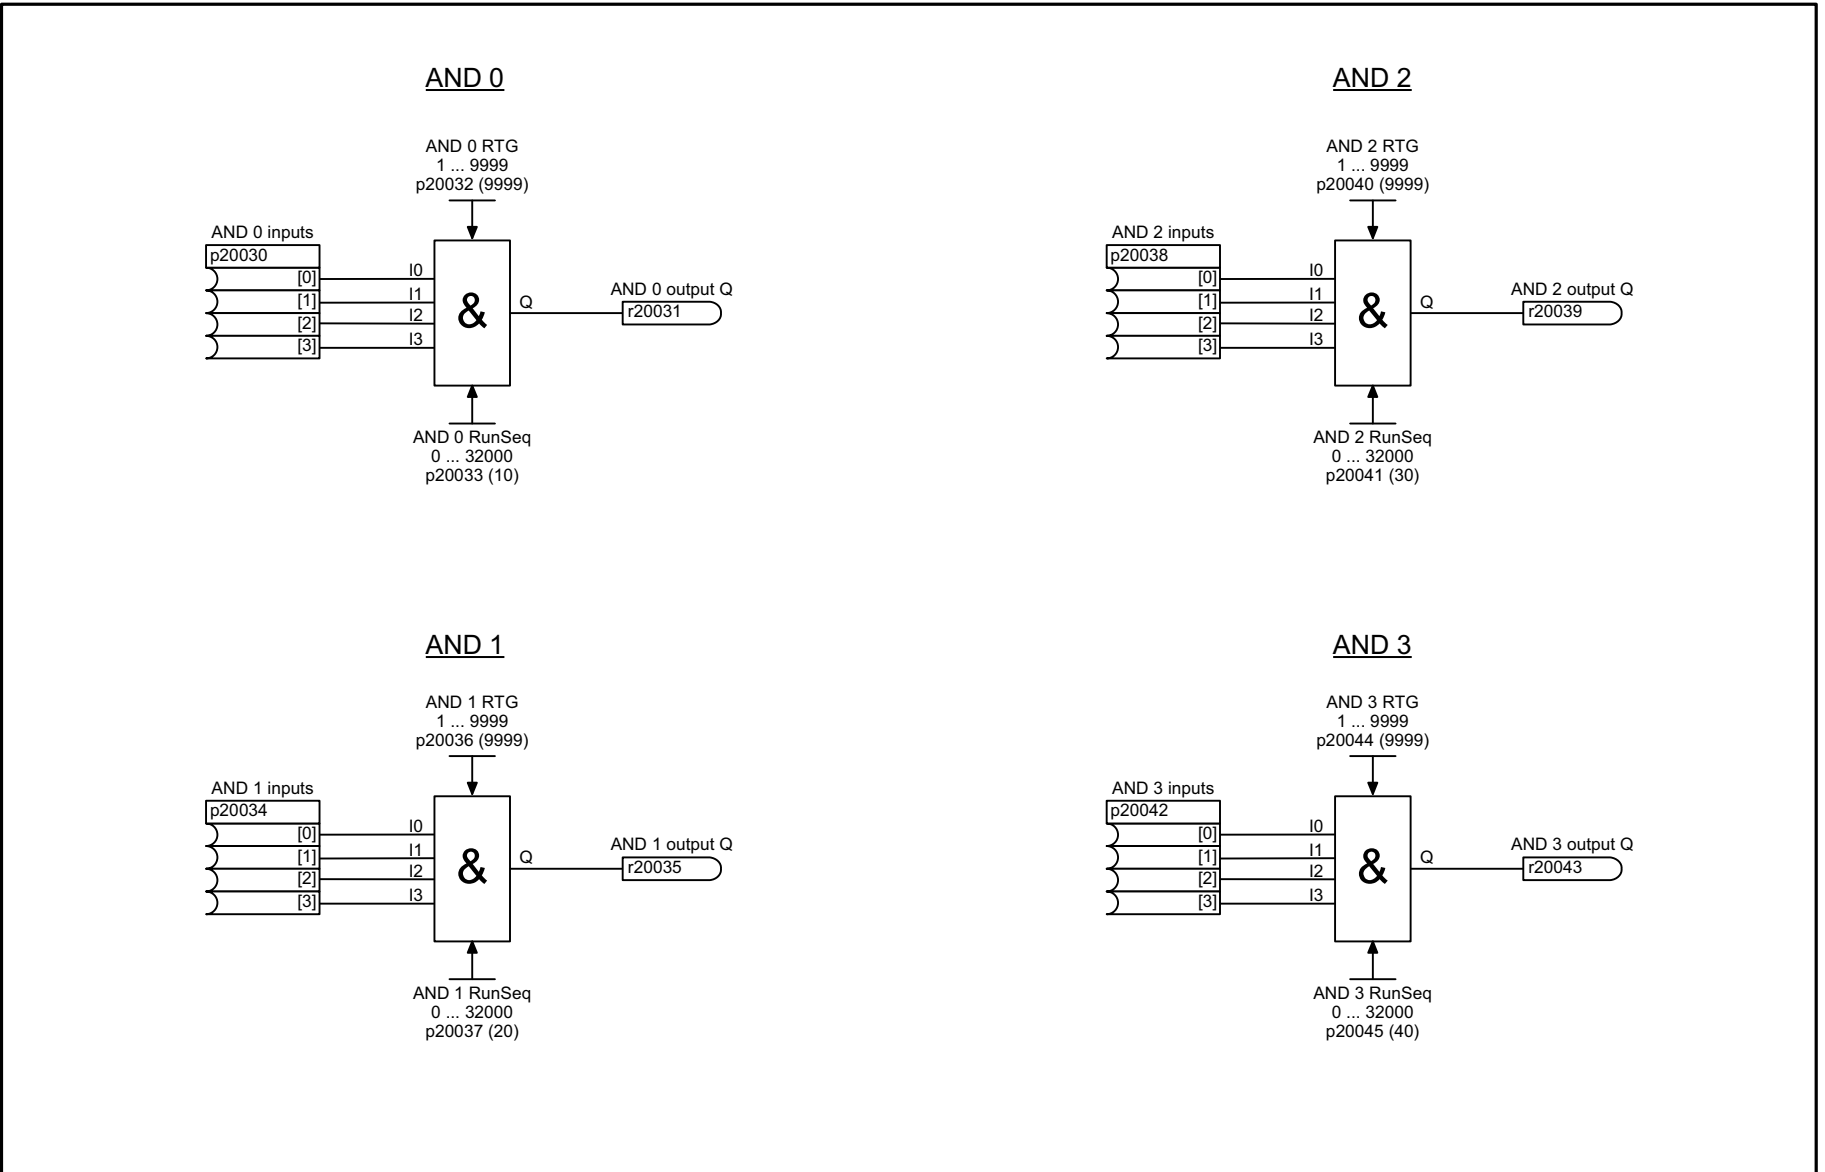


Fig. 2-124 7210 – AND (AND function blocks with 4 inputs)

1	2	3	4	5	6	7	8
Logic function blocks					fp_7210_97_59.vsd	Function diagram	
AND (AND function blocks with 4 inputs)					12.12.2012 V4.6	G120D CU240D-2	
							- 7210 -

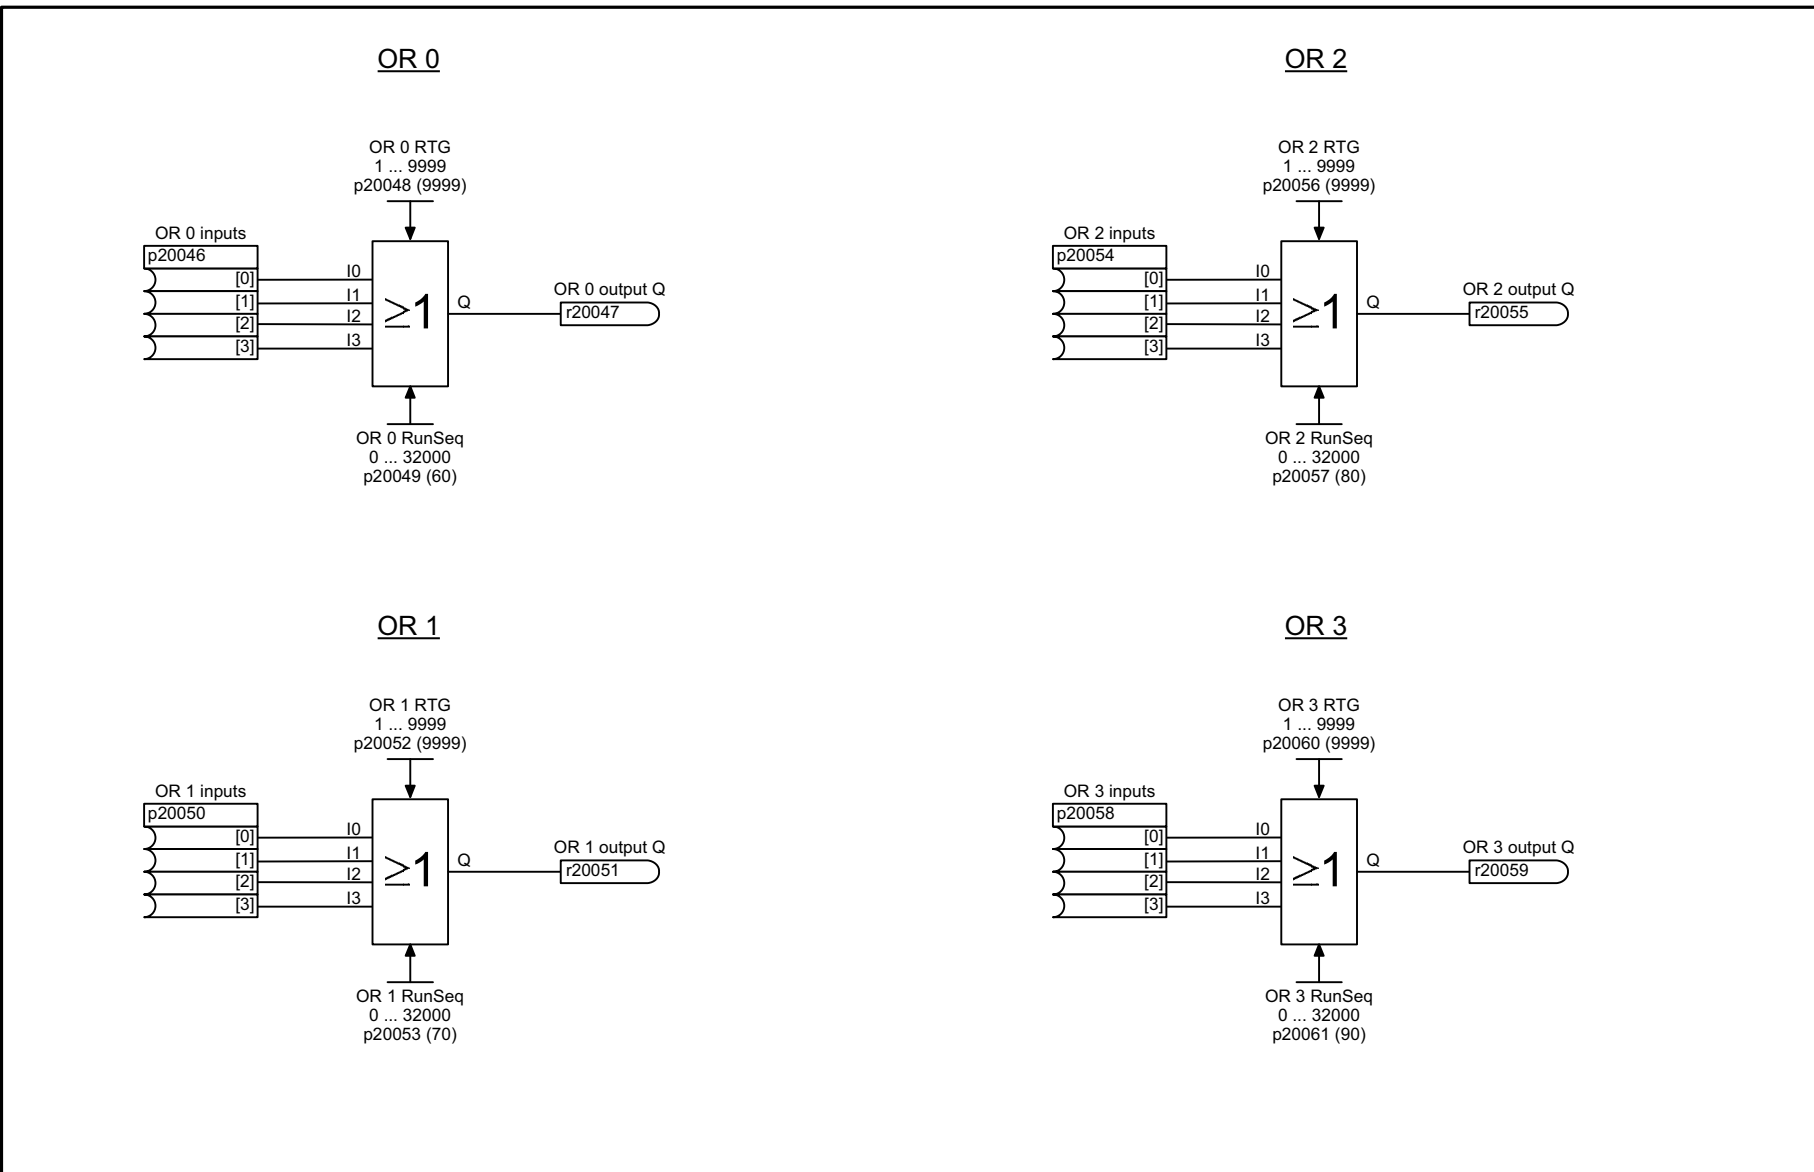


Fig. 2-125 7212 – OR (OR function blocks with 4 inputs)

1	2	3	4	5	6	7	8
Logic function blocks					fp_7212_97_59.vsd	Function diagram	
OR (OR function blocks with 4 inputs)					12.12.2012 V4.6	G120D CU240D-2	
							- 7212 -


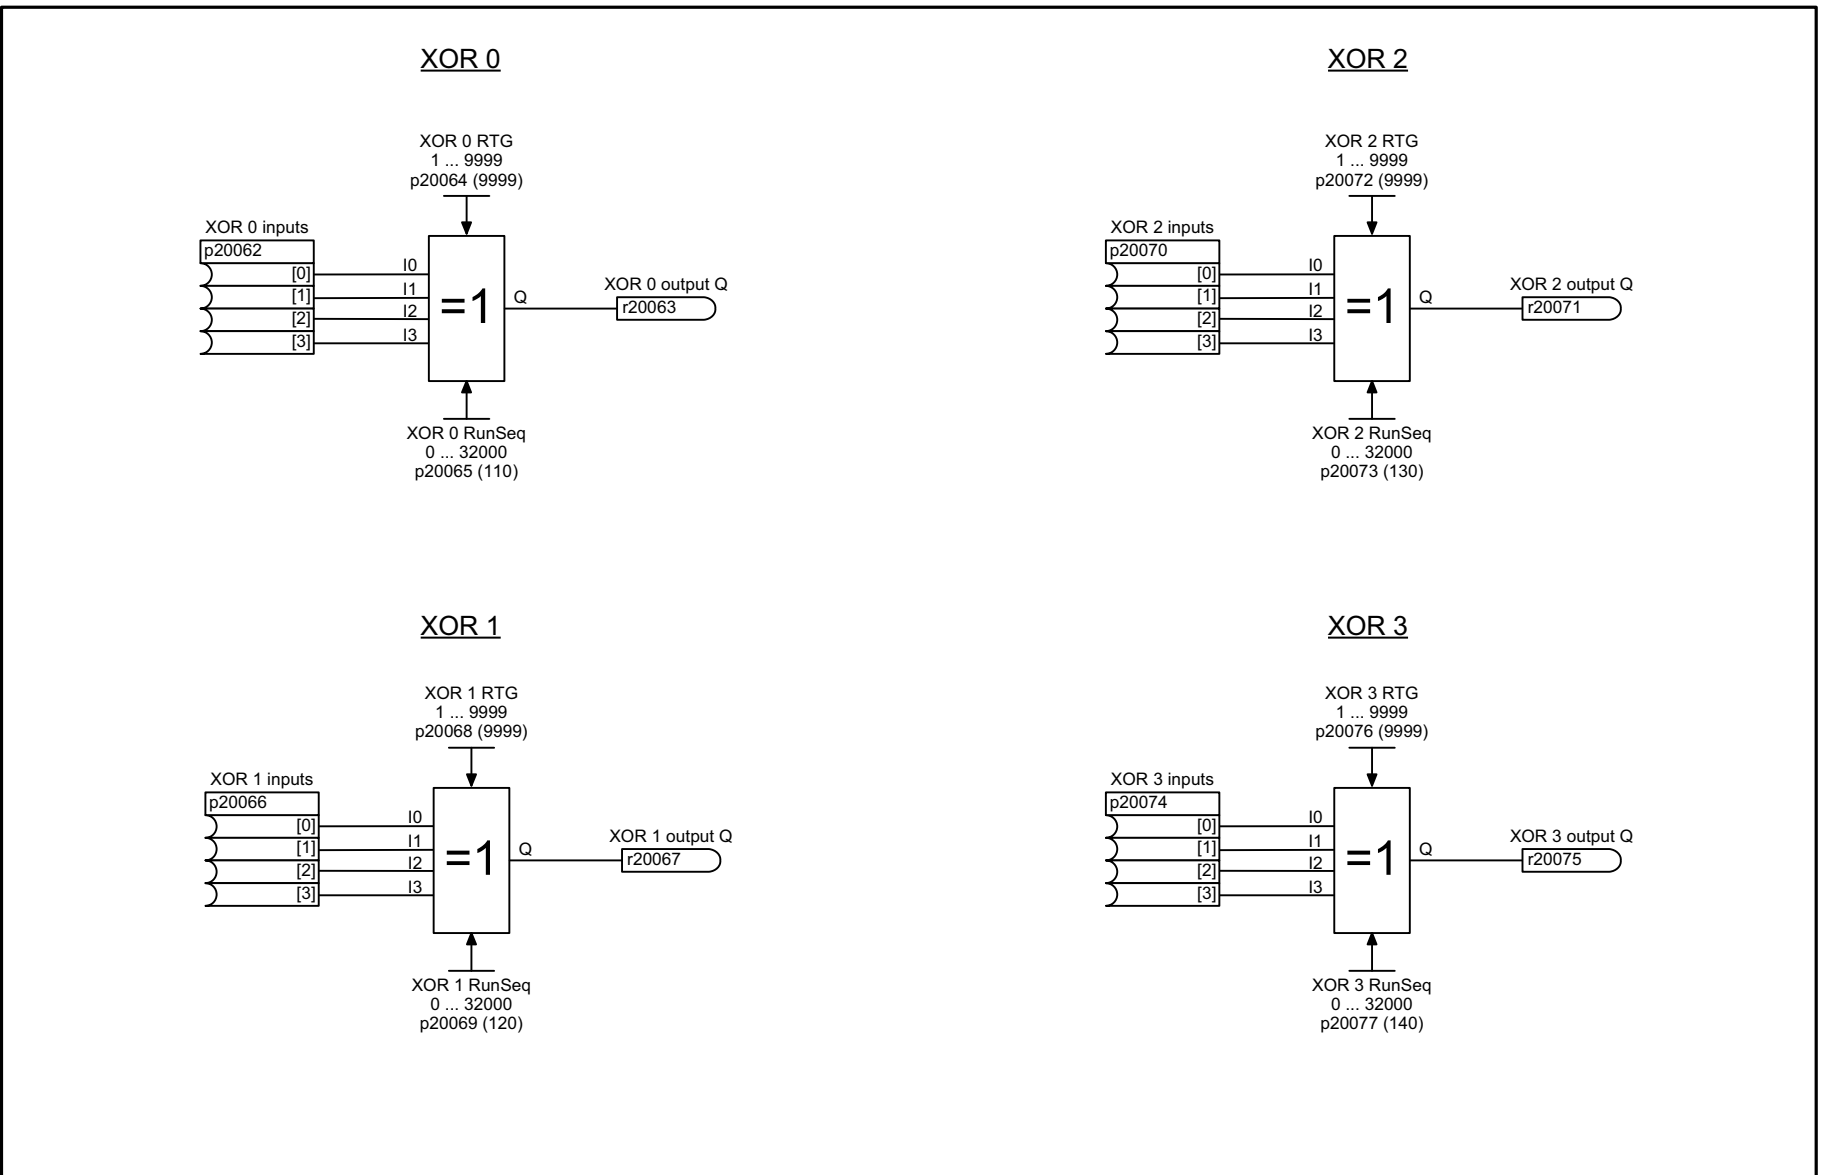


Fig. 2-126 7214 – XOR (XOR function blocks with 4 inputs)

1	2	3	4	5	6	7	8
Logic function blocks					fp_7214_97_59.vsd	Function diagram	
XOR (XOR function blocks with 4 inputs)					12.12.2012 V4.6	G120D CU240D-2	
							- 7214 -

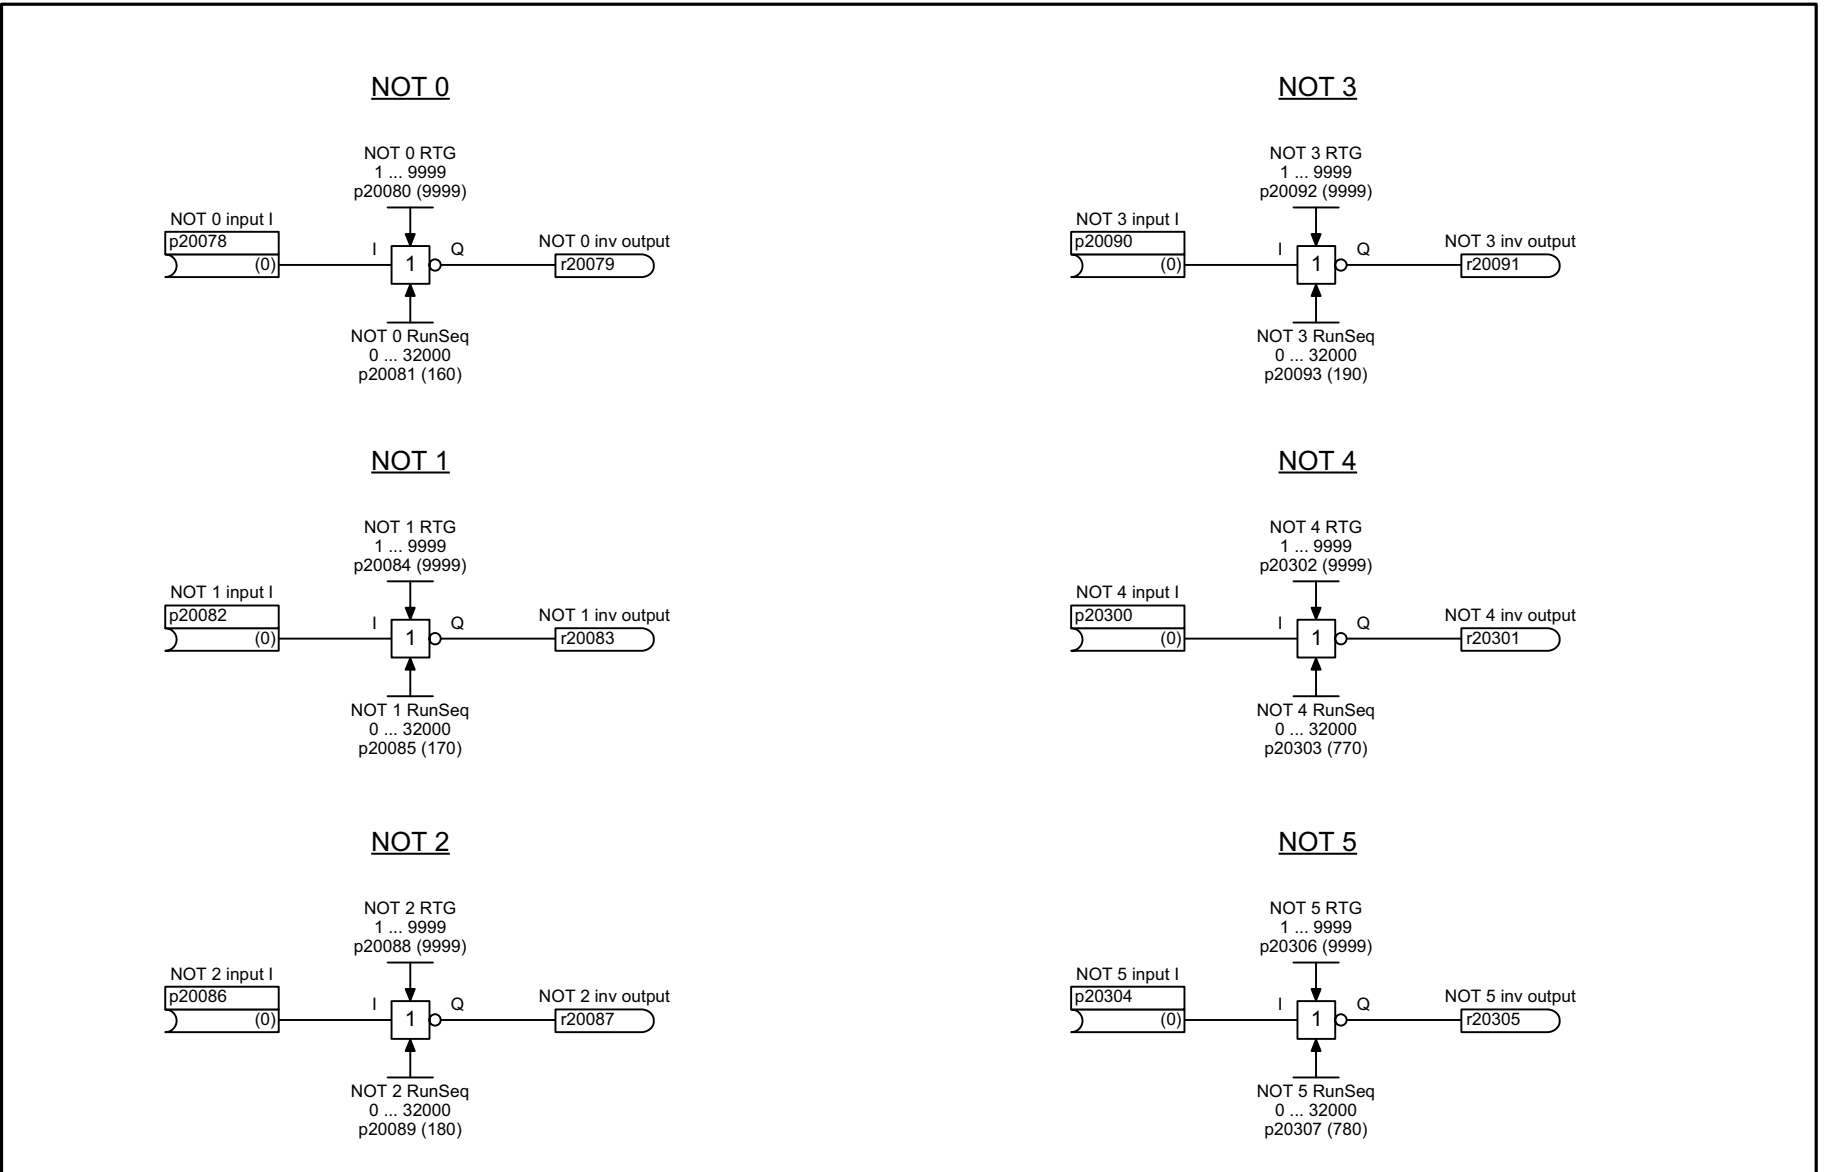

1	2	3	4	5	6	7	8
Logic function blocks					fp_7216_97_59.vsd	Function diagram	
NOT (inverter)					12.12.2012 V4.6	G120D CU240D-2	

Fig. 2-127 7216 – NOT (inverter)

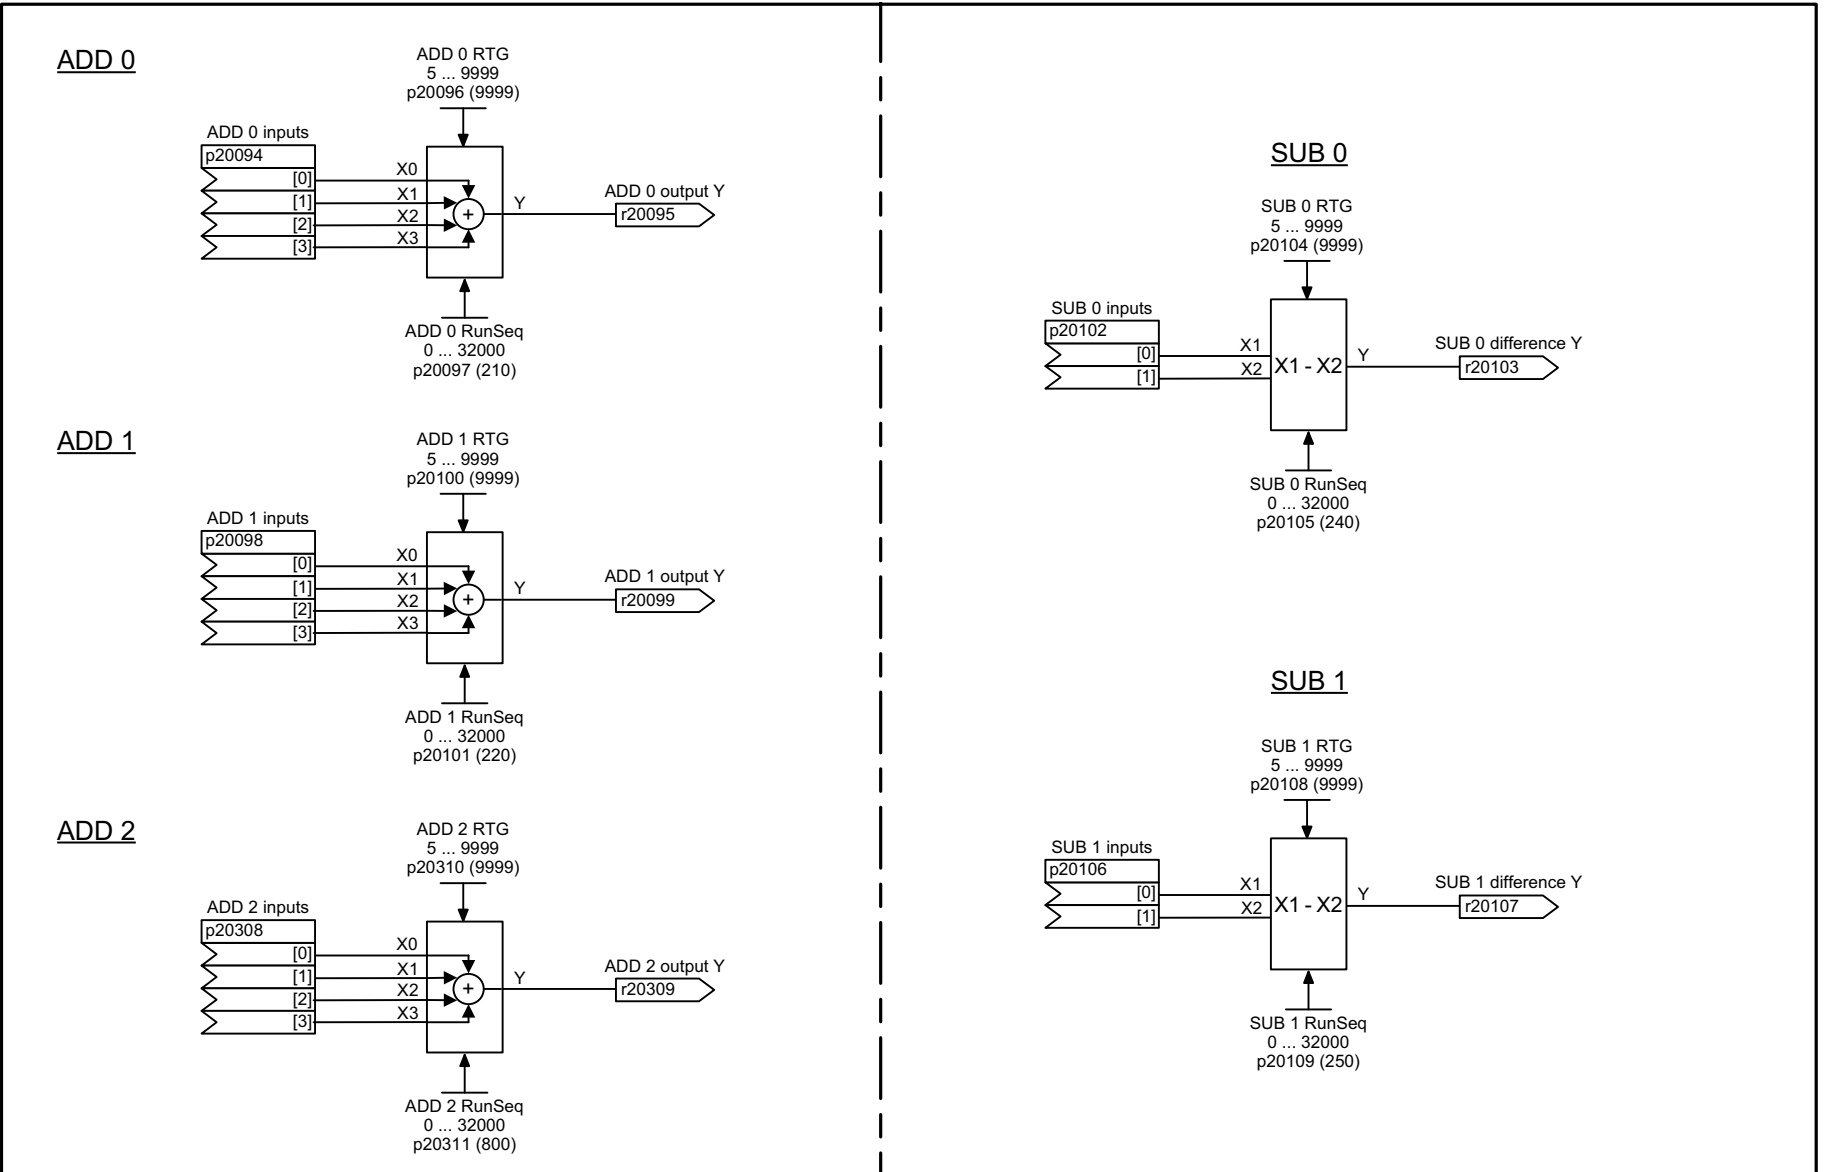


Fig. 2-128 7220 – ADD (adder with 4 inputs), SUB (subtractor)

1	2	3	4	5	6	7	8
Arithmetic function blocks					fp_7220_97_59.vsd	Function diagram	
ADD (adder with 4 inputs), SUB (subtractor)					12.12.2012 V4.6	G120D CU240D-2	
							- 7220 -

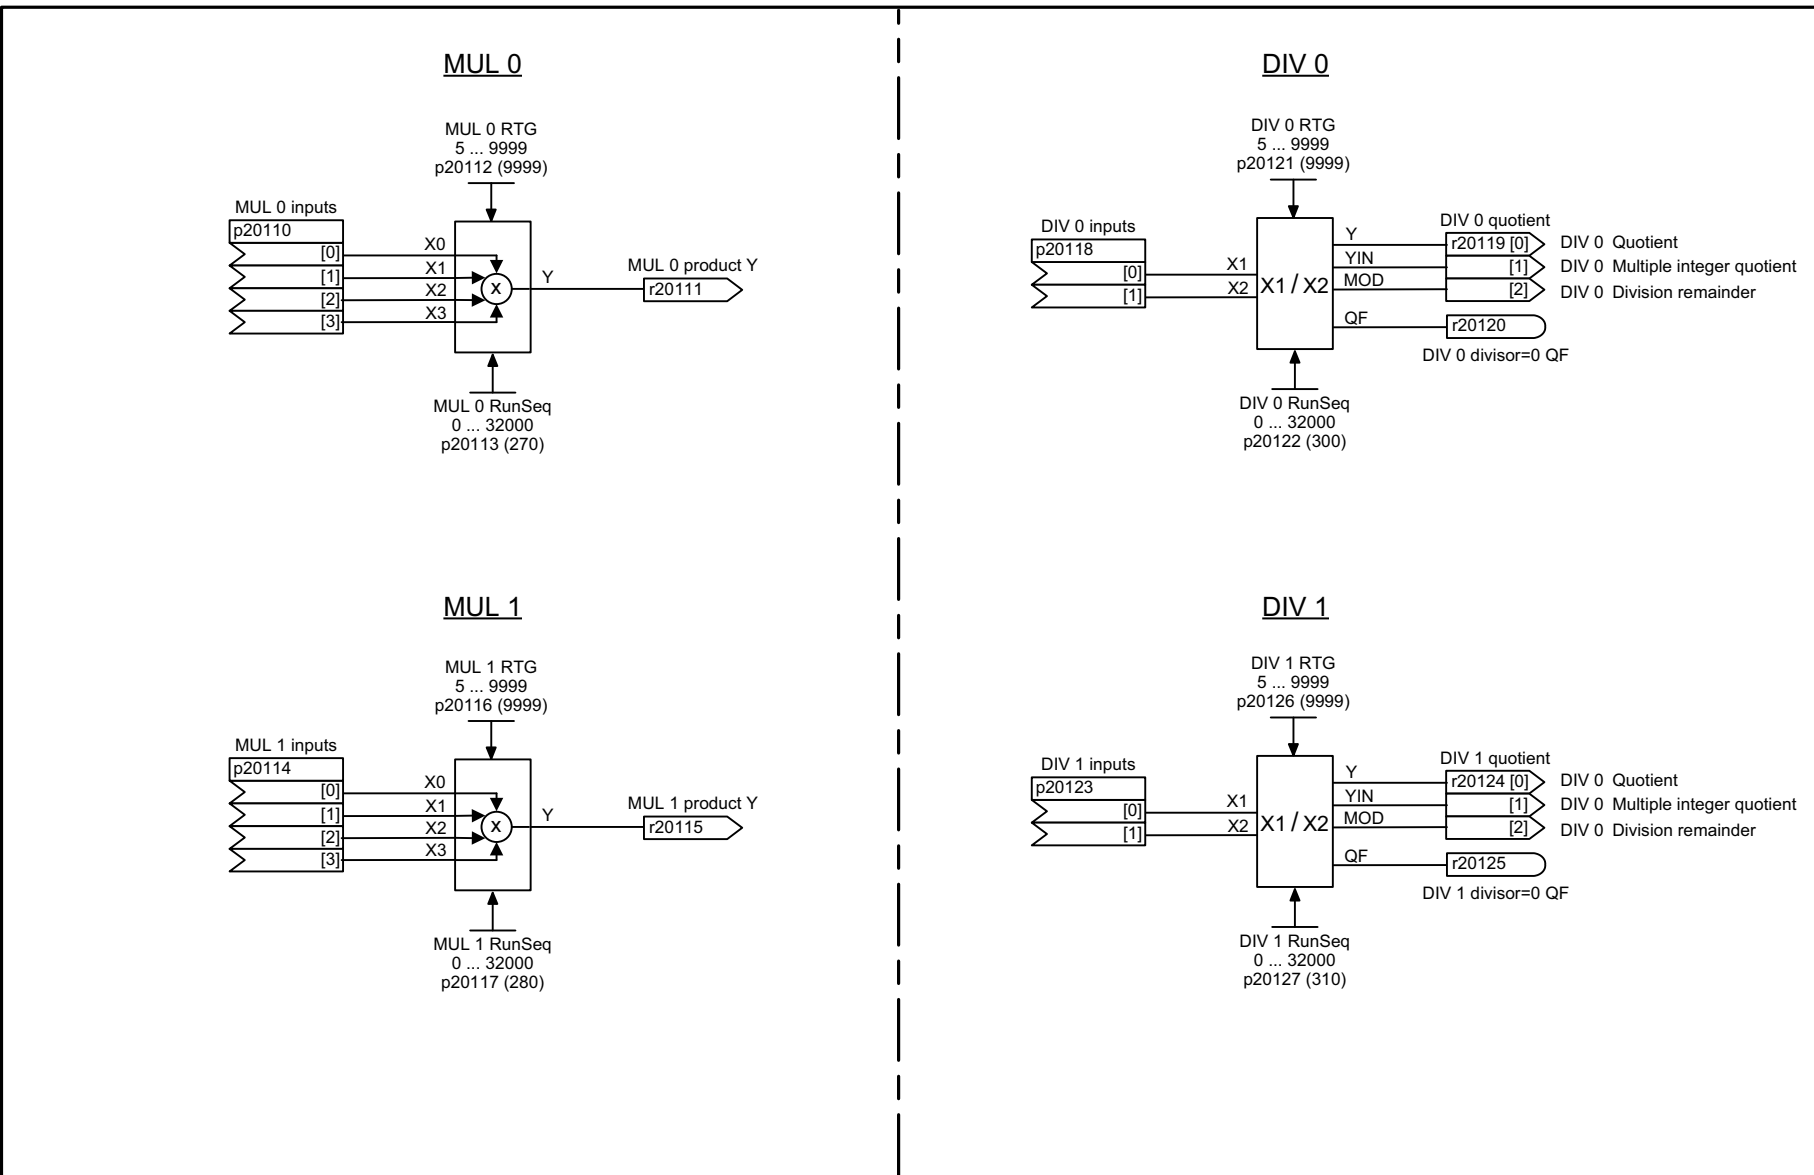


Fig. 2-129 7222 – MUL (multiplier with 4 inputs), DIV (divider)

2-722

© Siemens AG 2012 - 2013 All Rights Reserved
 SINAMICS G120D List Manual (LH14), 01/2013

1	2	3	4	5	6	7	8
Arithmetic function blocks					fp_7222_97_59.vsd	Function diagram	
MUL (multiplier with 4 inputs), DIV (divider)					12.12.2012 V4.6	G120D CU240D-2	
							- 7222 -

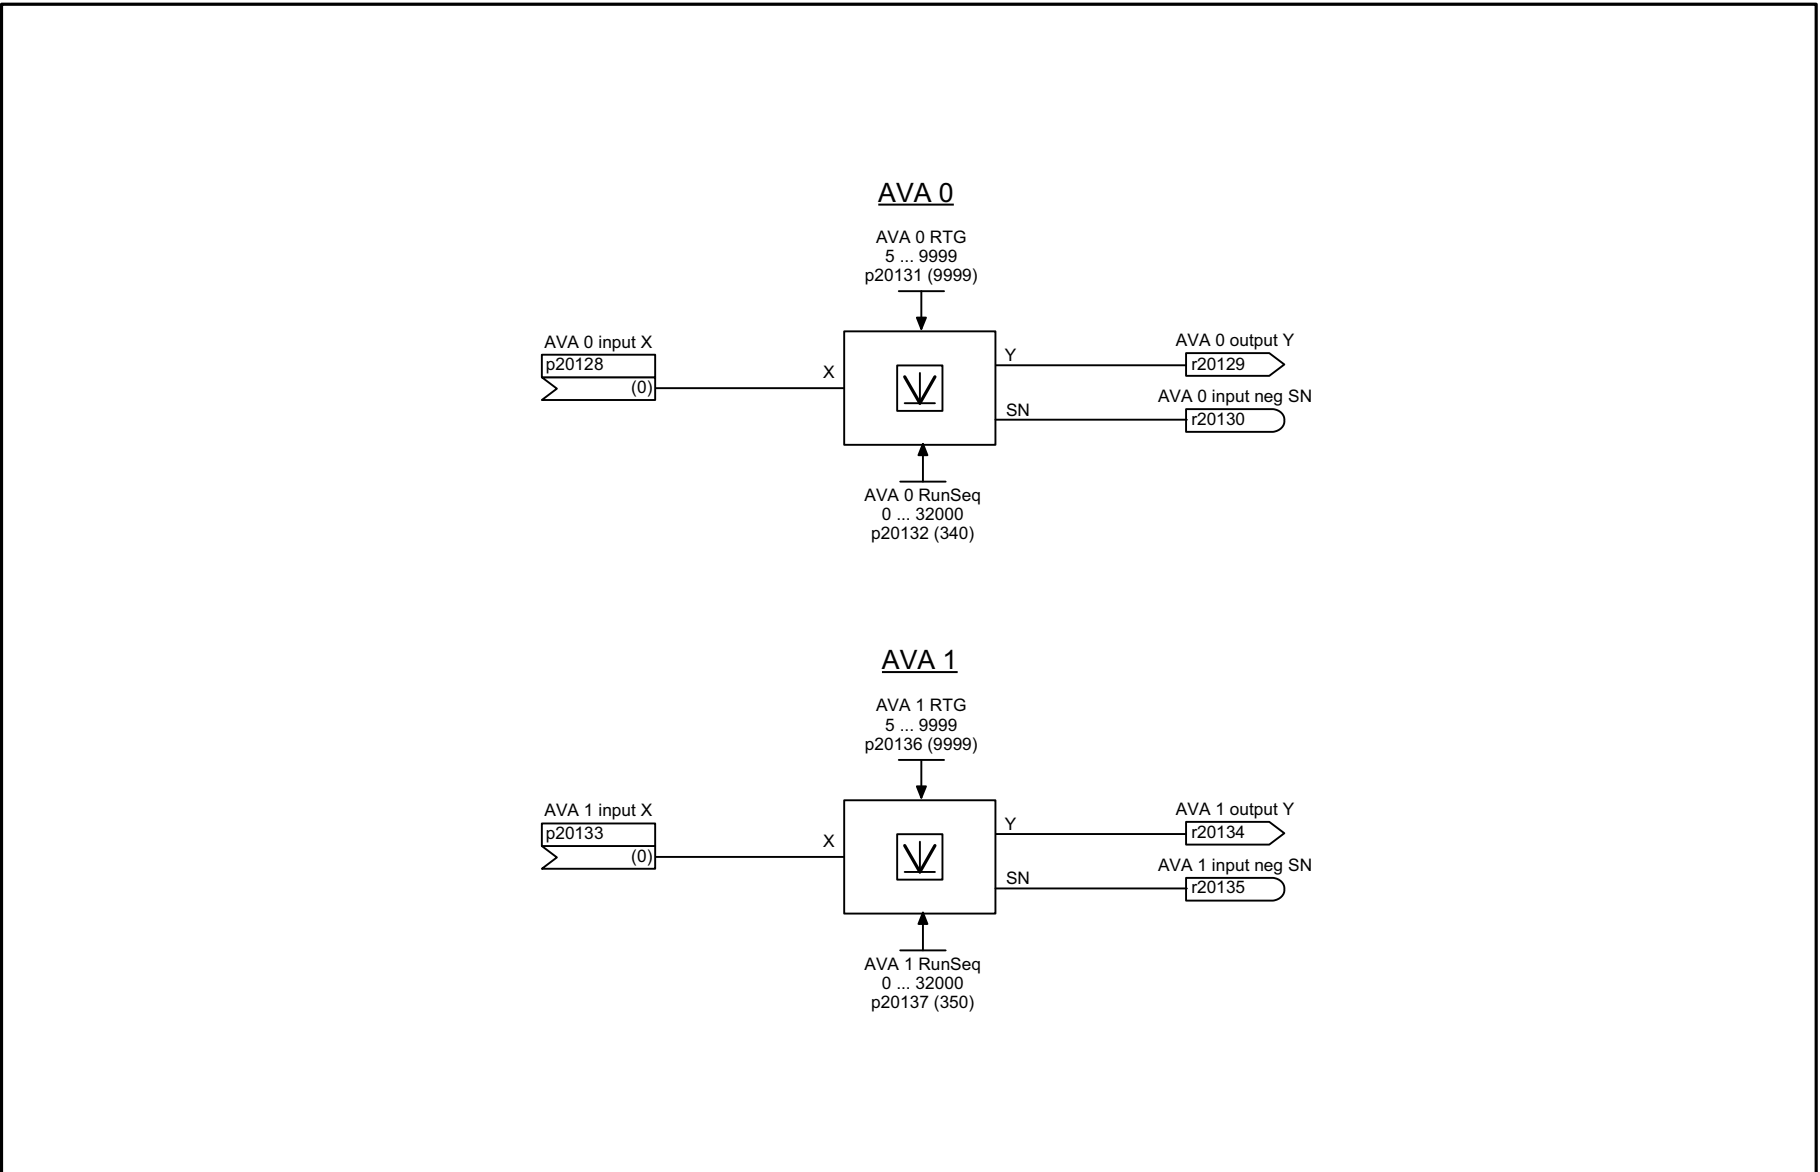


Fig. 2-130 7224 – AVA (absolute value generator)

1	2	3	4	5	6	7	8
Arithmetic function blocks					fp_7224_97_59.vsd	Function diagram	
AVA (absolute value generators)					12.12.2012 V4.6	G120D CU240D-2	
							- 7224 -

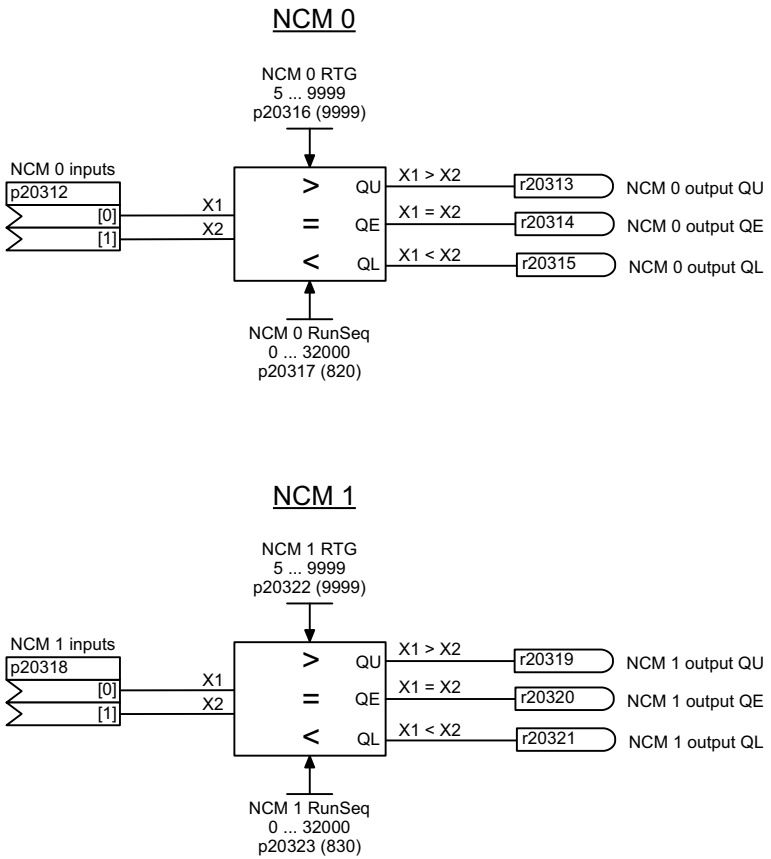


Fig. 2-131 7225 – NCM (numeric comparator)

1	2	3	4	5	6	7	8
Arithmetic function blocks					fp_7225_97_59.vsd	Function diagram	
NCM (numerical comparator)					12.12.2012 V4.6	G120D CU240D-2	
							- 7225 -

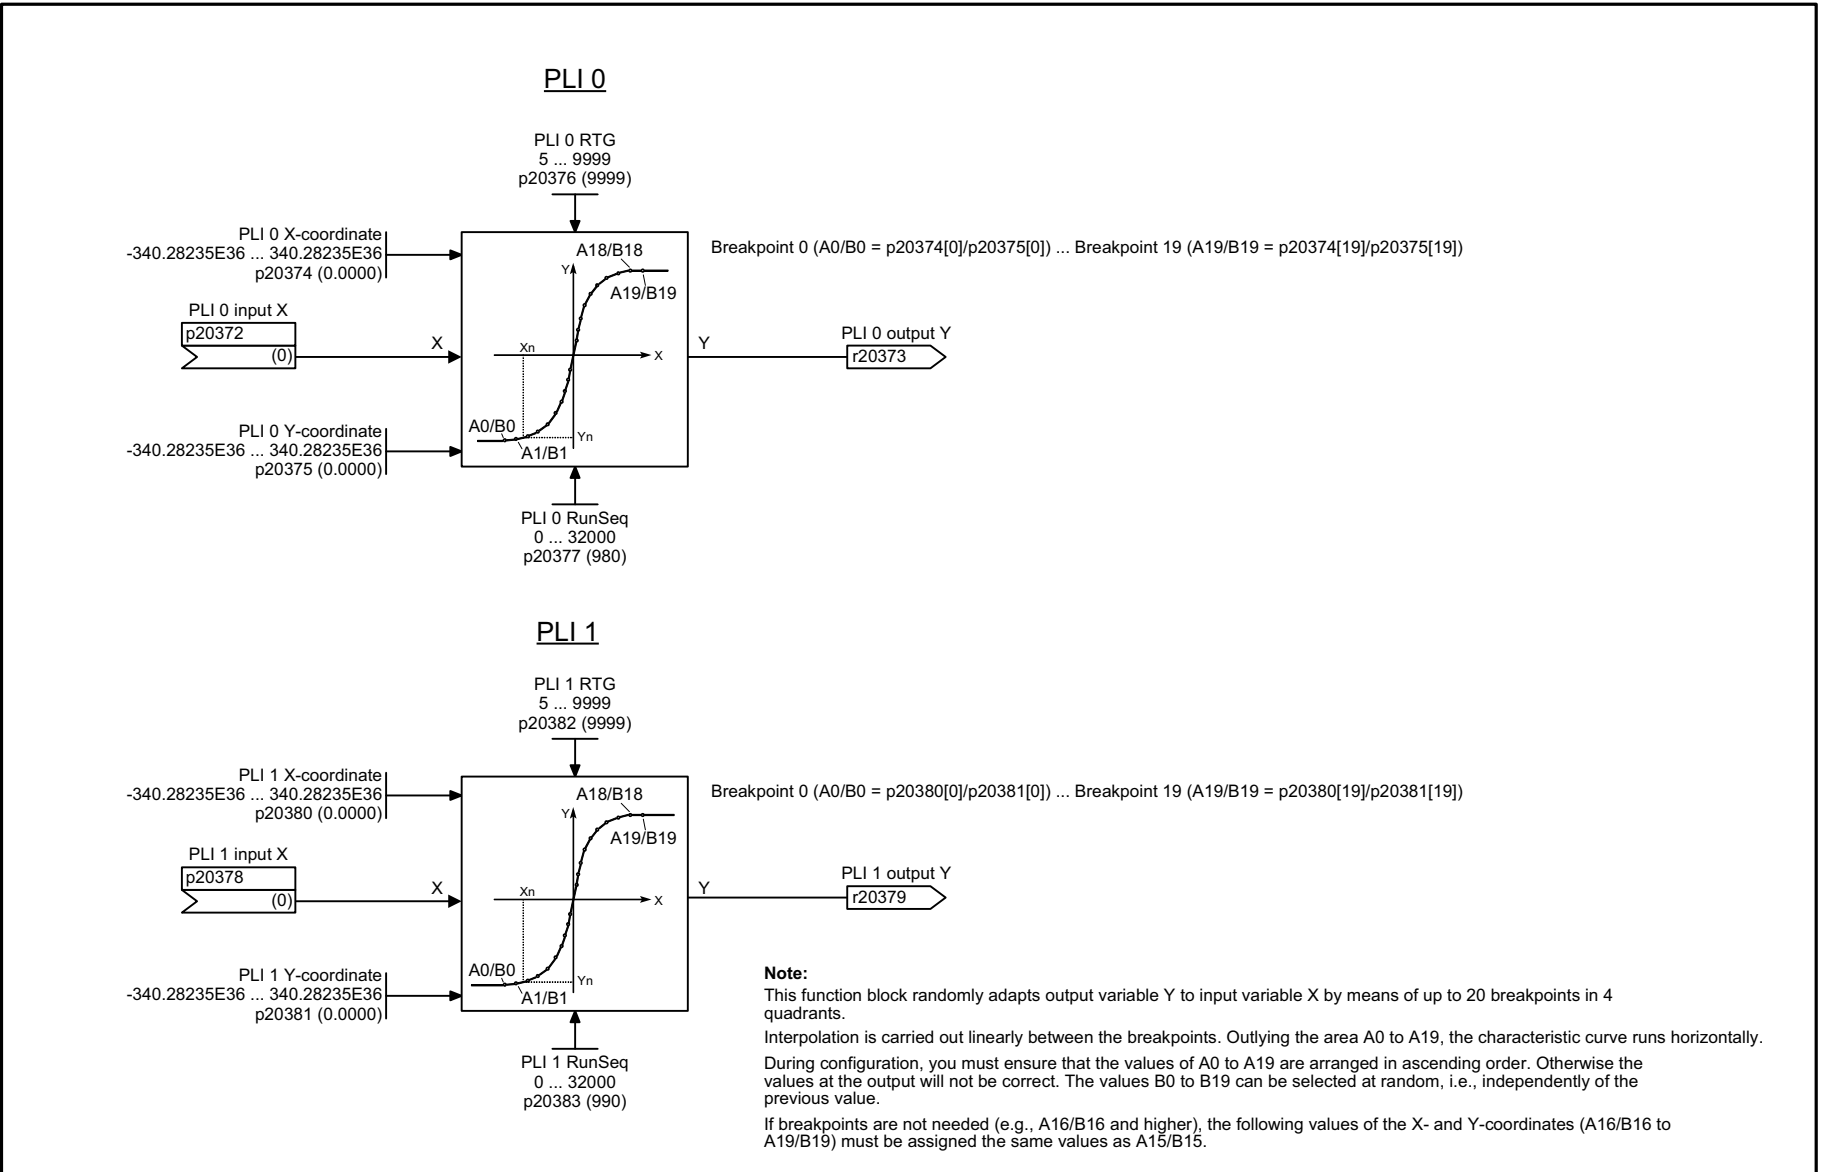


Fig. 2-132 7226 – PLI (polyline scaling)

1	2	3	4	5	6	7	8
Arithmetic function blocks					fp_7226_97_59.vsd	Function diagram	
PLI (scaling polyline)					12.12.2012 V4.6	G120D CU240D-2	
							- 7226 -

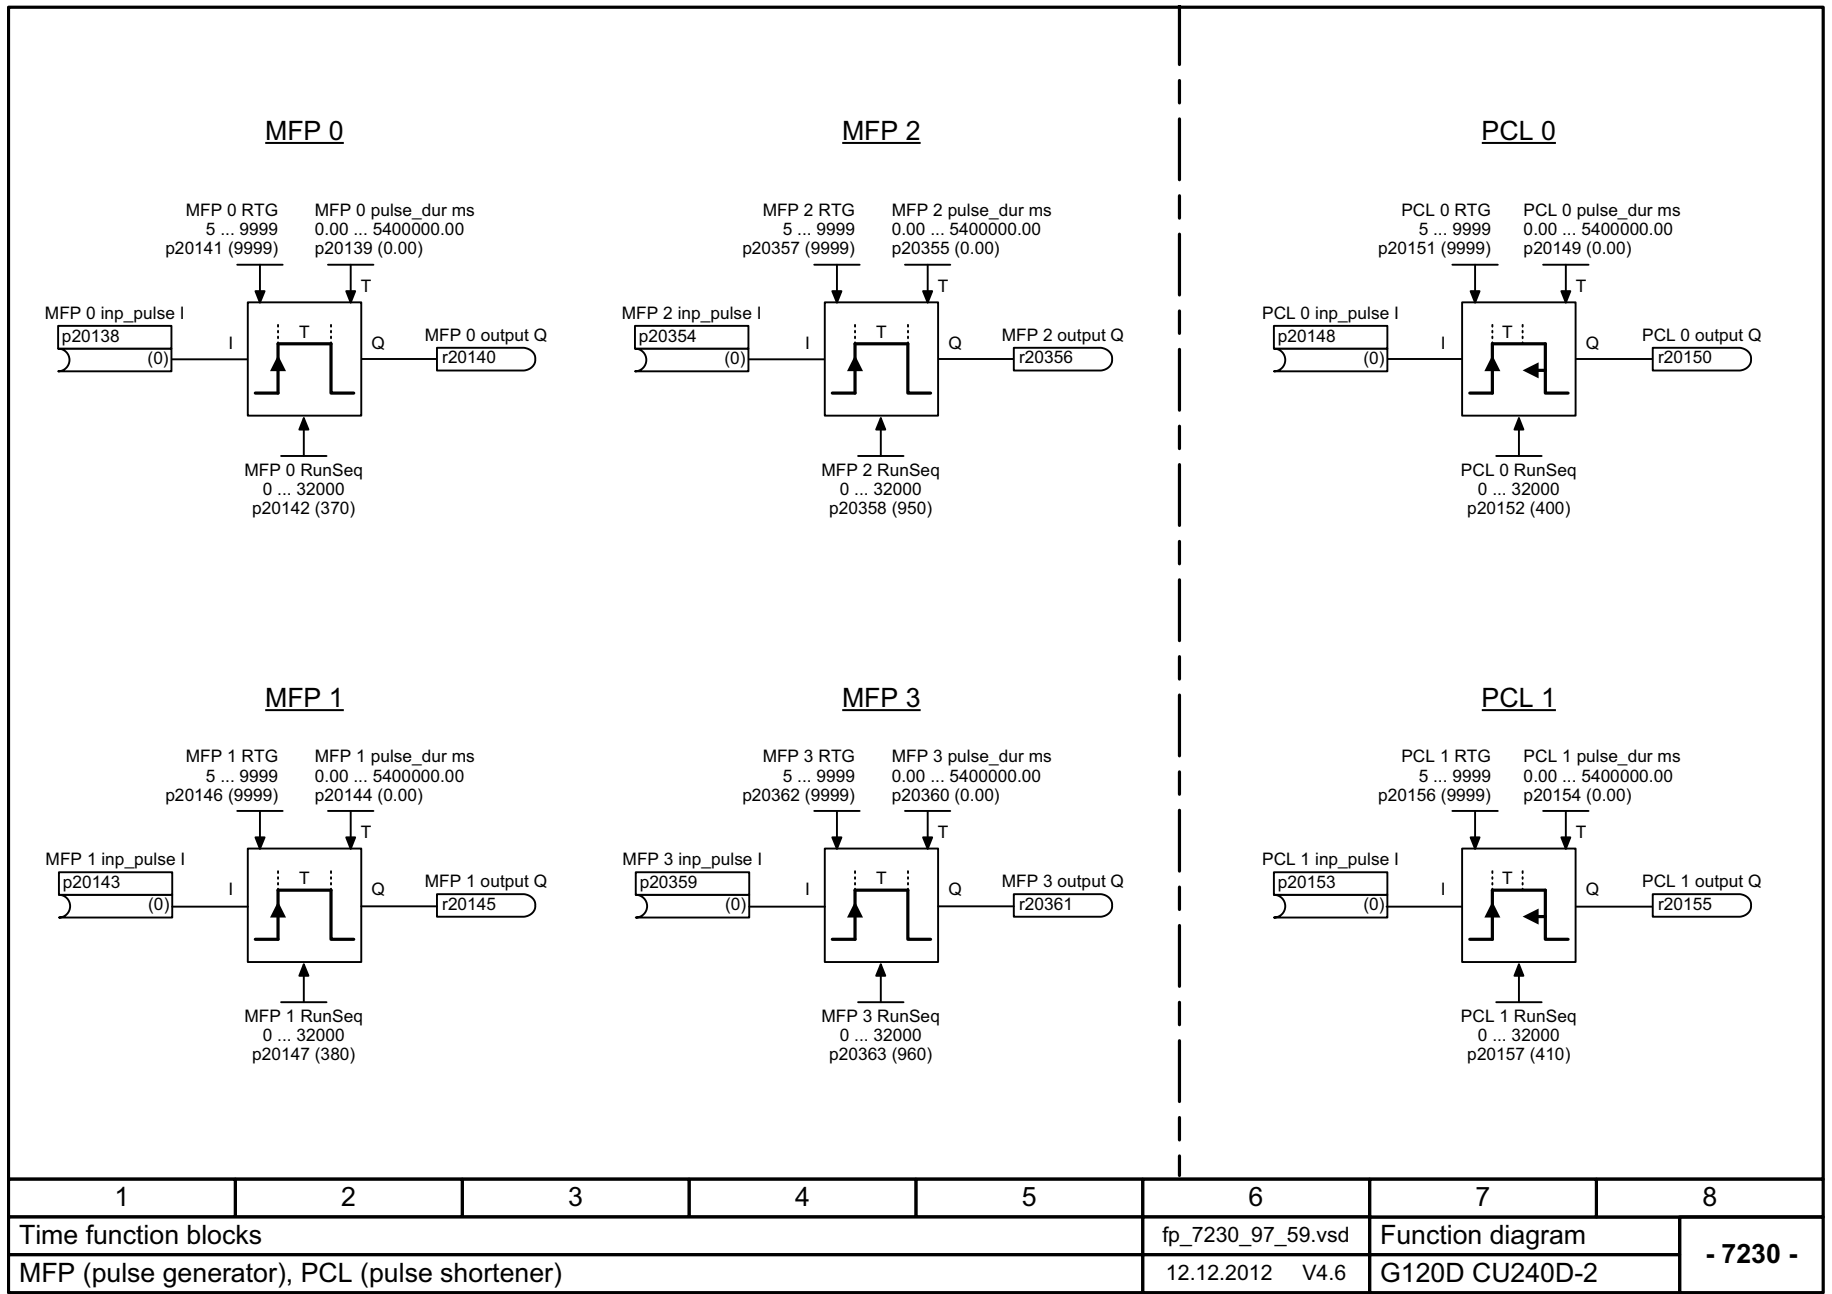


Fig. 2-133 7230 – MFP (pulse generator), PCL (pulse contractor)

1	2	3	4	5	6	7	8
Time function blocks					fp_7230_97_59.vsd	Function diagram	
MFP (pulse generator), PCL (pulse shortener)					12.12.2012 V4.6	G120D CU240D-2	
							- 7230 -

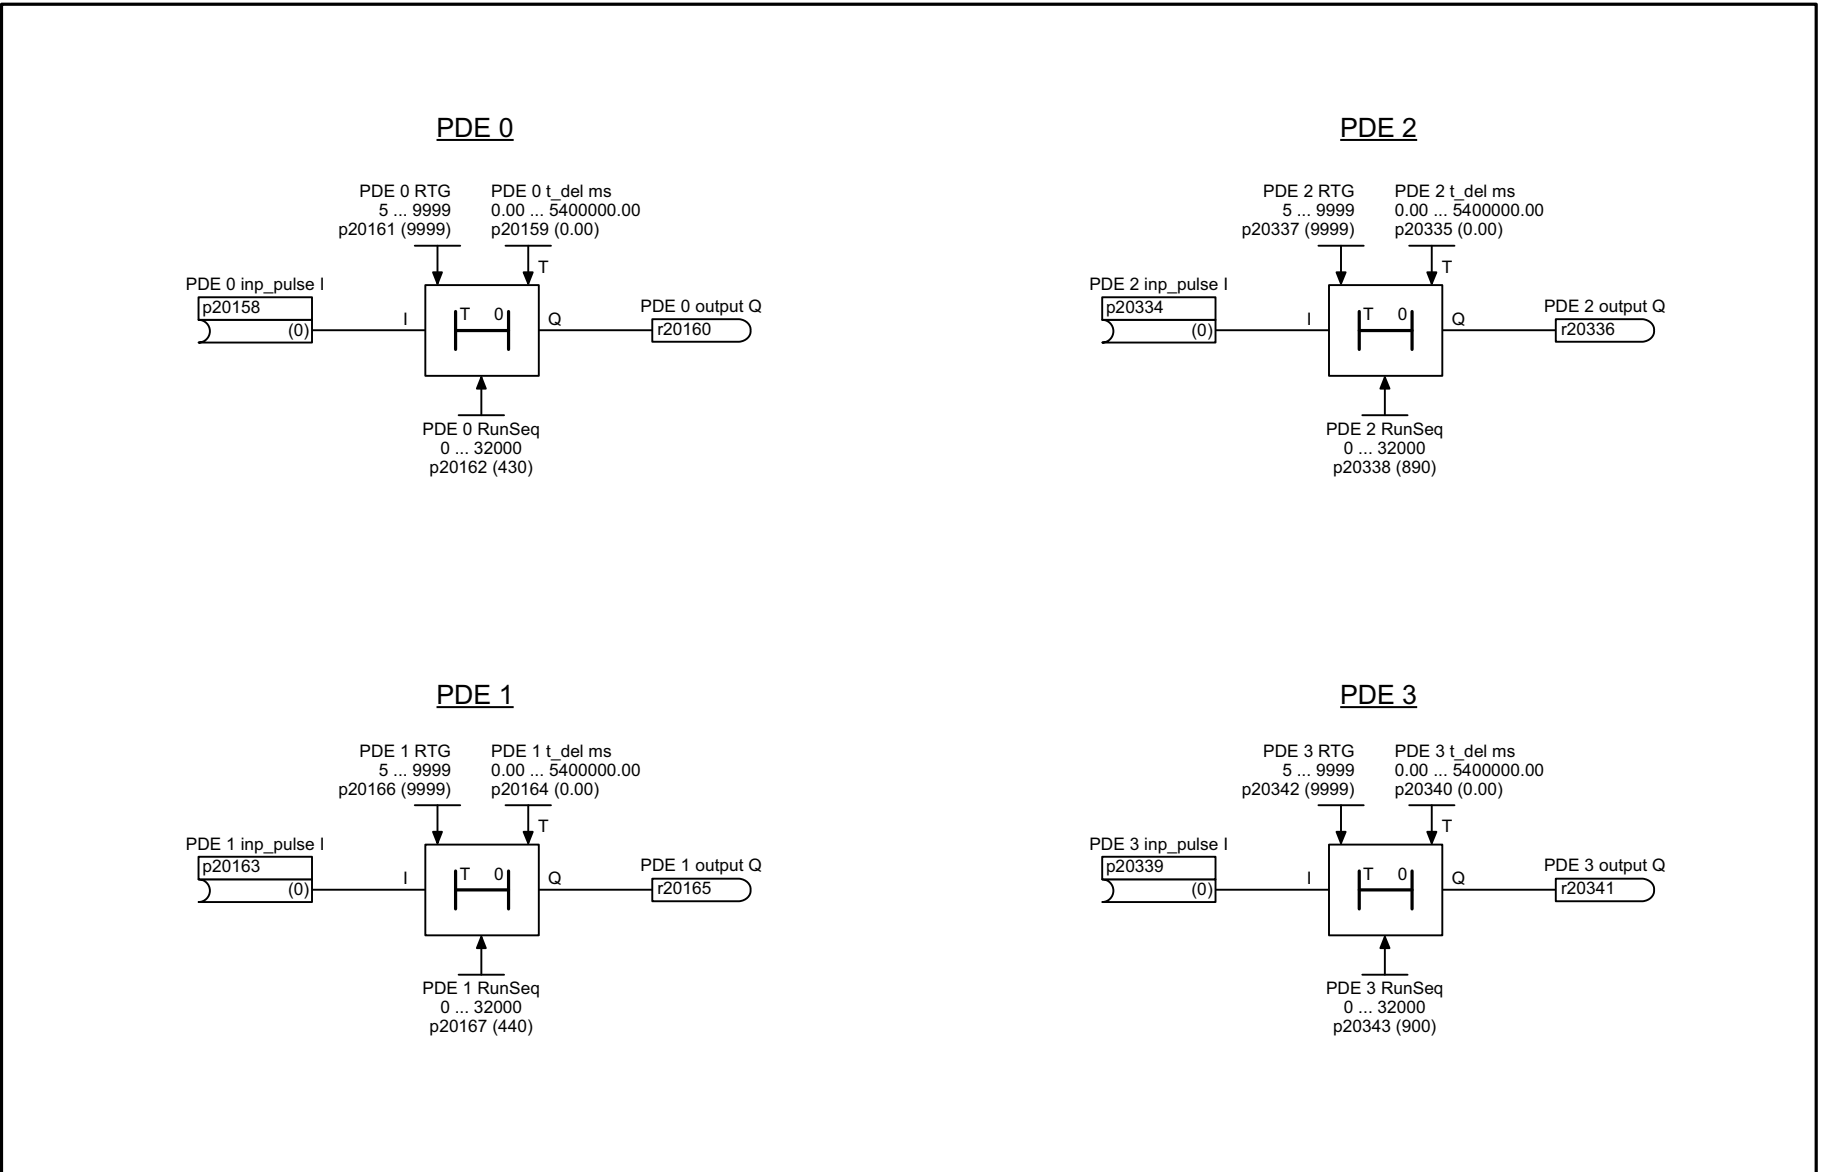


Fig. 2-134 7232 – PDE (ON delay)

1	2	3	4	5	6	7	8
Time function blocks					fp_7232_97_59.vsd	Function diagram	
PDE (switch-in delay)					12.12.2012 V4.6	G120D CU240D-2	
							- 7232 -

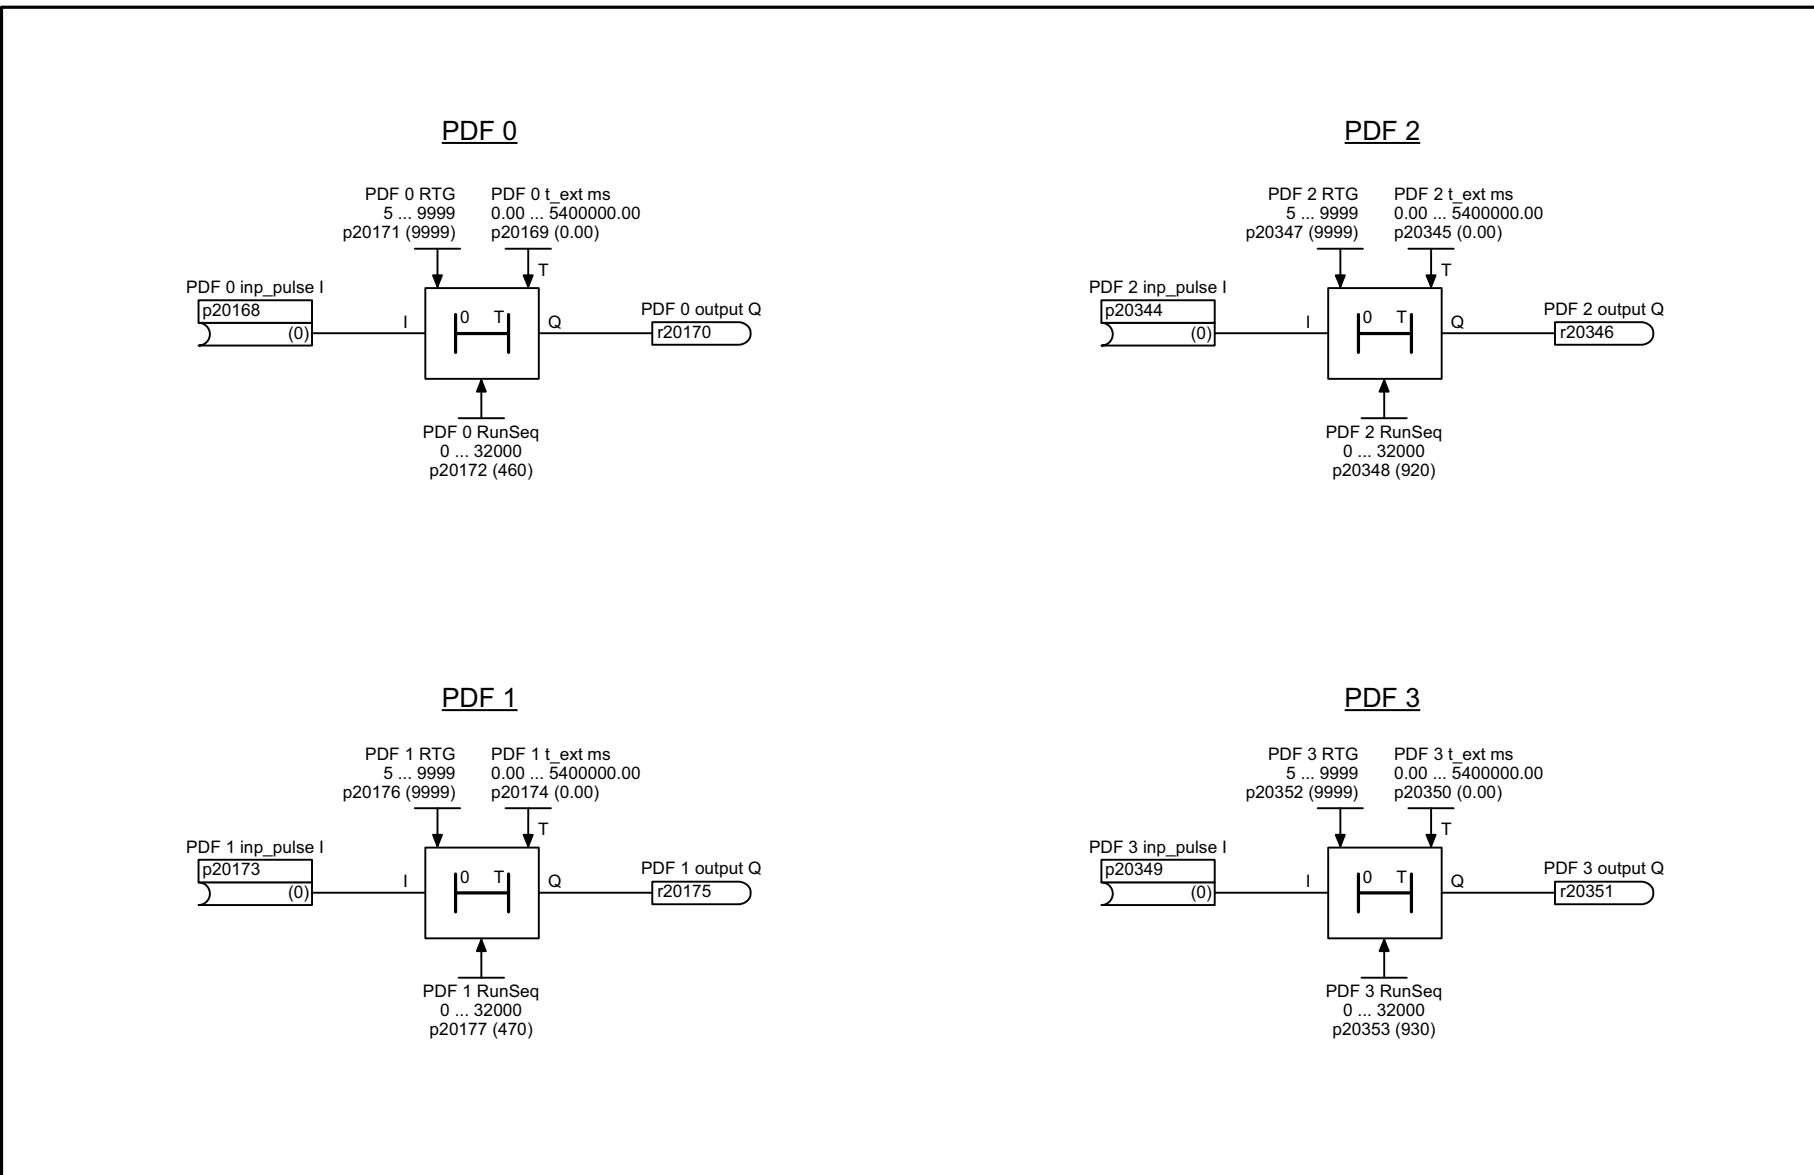


Fig. 2-135 7233 – PDF (OFF delay)

1	2	3	4	5	6	7	8
Time function blocks					fp_7233_97_59.vsd	Function diagram	
PDF (switch-out delay)					12.12.2012 V4.6	G120D CU240D-2	
							- 7233 -

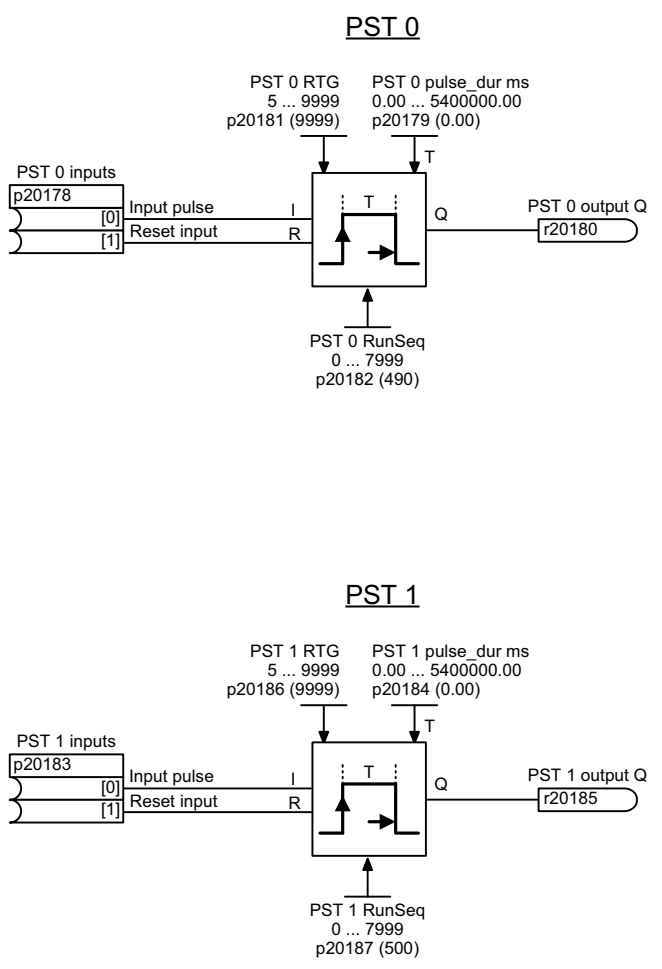


Fig. 2-136 7234 – PST (pulse stretcher)

1	2	3	4	5	6	7	8
Time function blocks					fp_7234_97_59.vsd	Function diagram	
PST (pulse extender)					12.12.2012 V4.6	G120D CU240D-2	
							- 7234 -

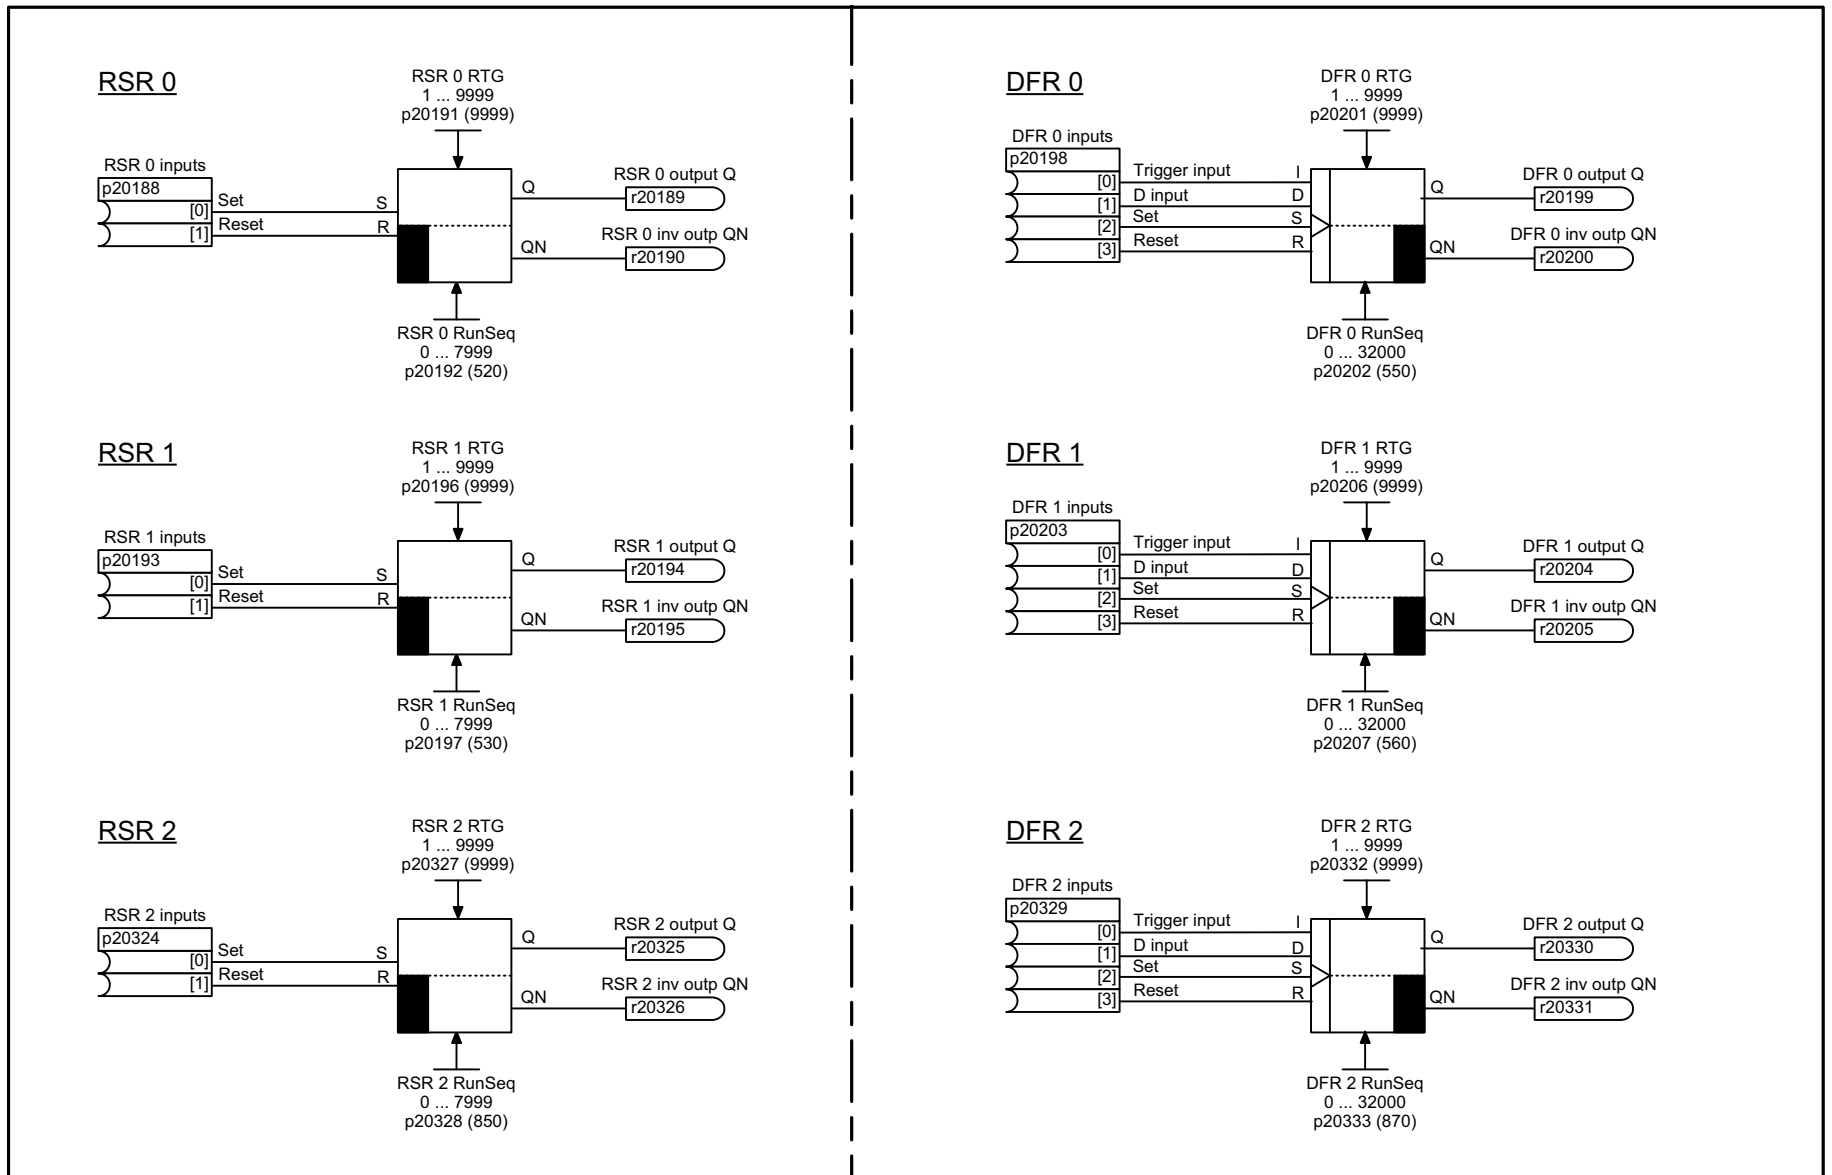


Fig. 2-137 7240 – RSR (RS flip-flop), DFR (D flip-flop)

1	2	3	4	5	6	7	8
Flipflop function blocks					fp_7240_97_59.vsd	Function diagram	
RSR (RS flipflop), DFR (D flipflop)					12.12.2012 V4.6	G120D CU240D-2	
- 7240 -							

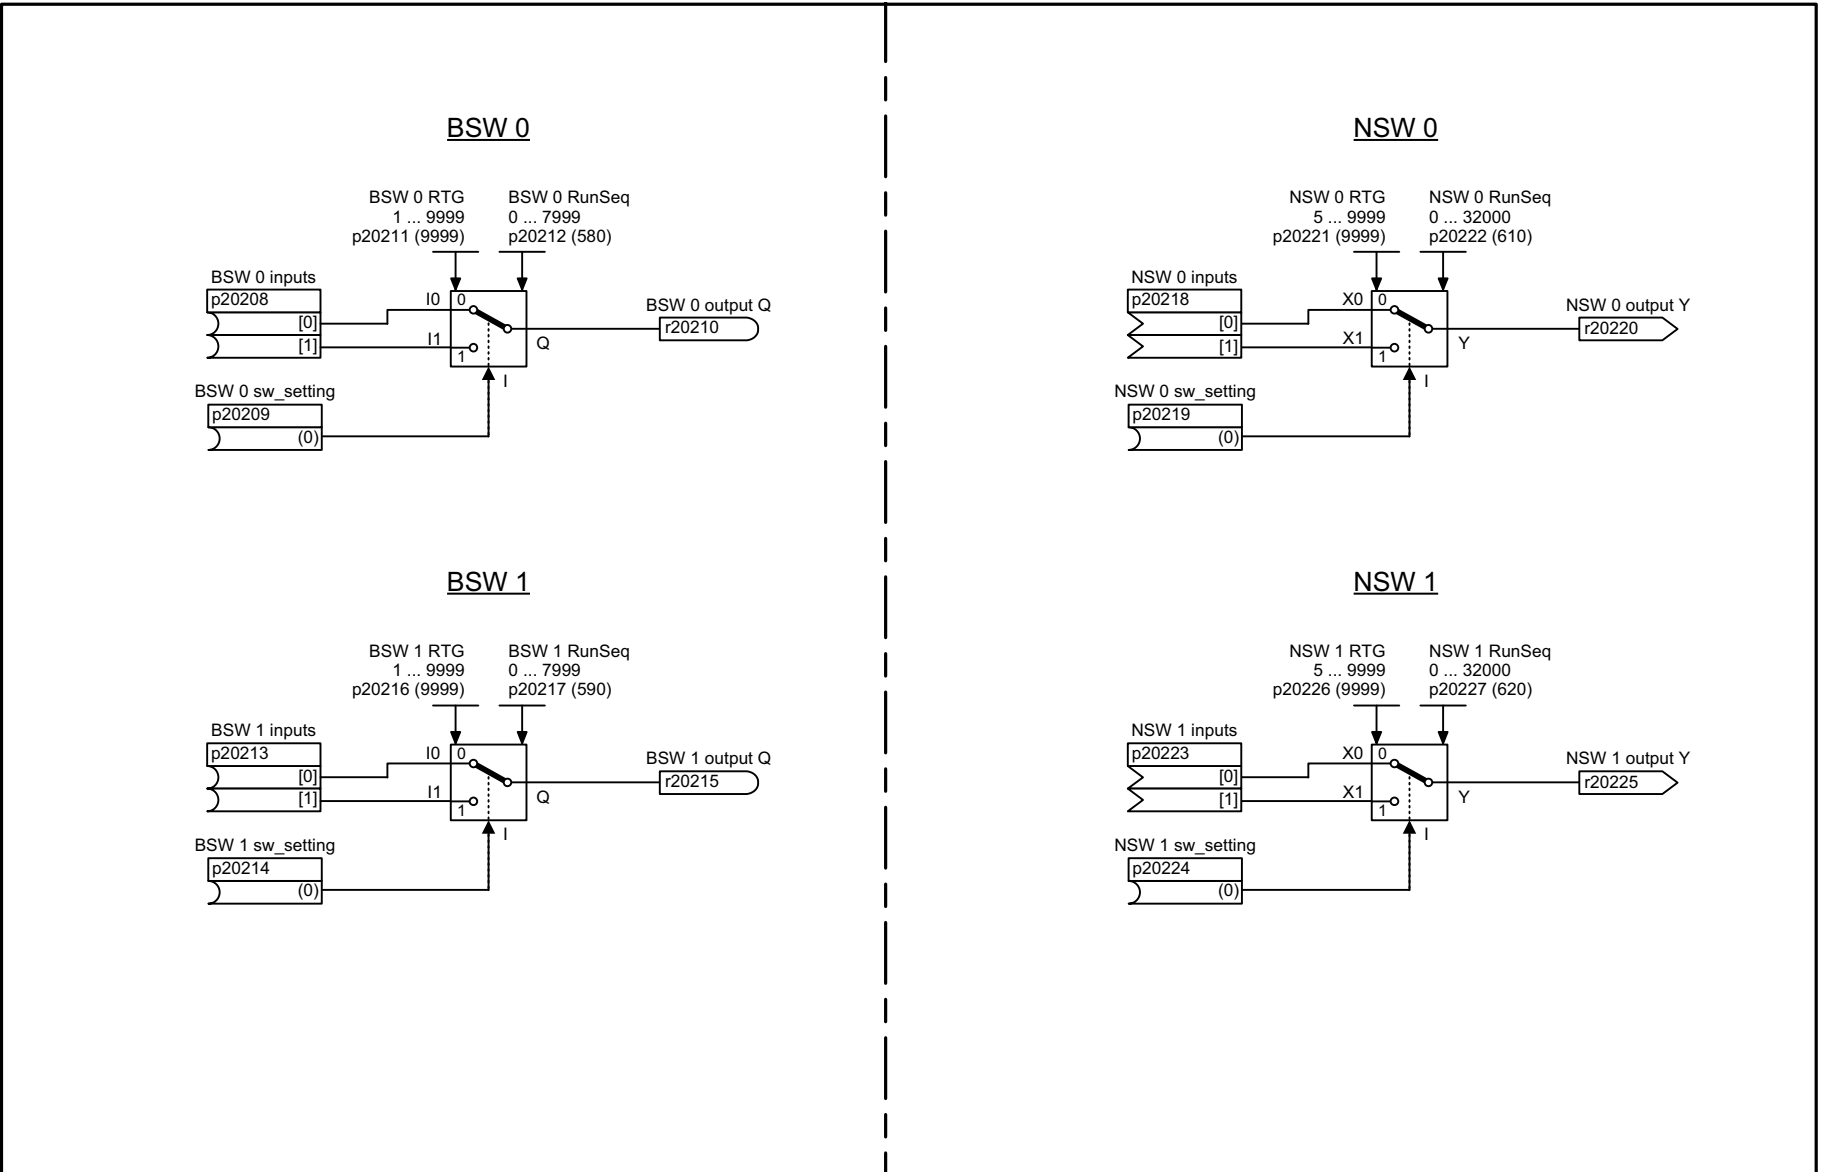


Fig. 2-138 7250 – BSW (binary change-over switch), NSW (numeric change-over switch)

1	2	3	4	5	6	7	8
Switch function blocks					fp_7250_97_59.vsd	Function diagram	
BSW (binary changeover switch), NSW (numerical changeover switch)					12.12.2012 V4.6	G120D CU240D-2	
							- 7250 -

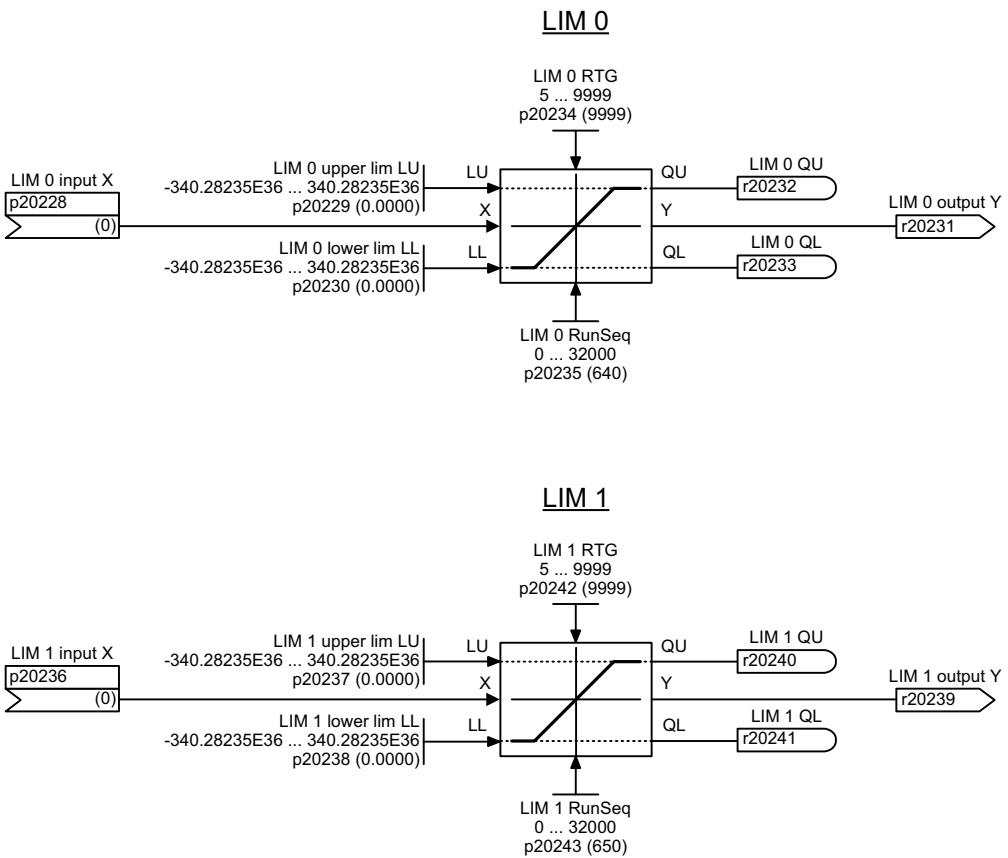


Fig. 2-139 7260 – LIM (limiter)

1	2	3	4	5	6	7	8
Control function blocks					fp_7260_97_59.vsd	Function diagram	
LIM (limiter)					12.12.2012 V4.6	G120D CU240D-2	
							- 7260 -

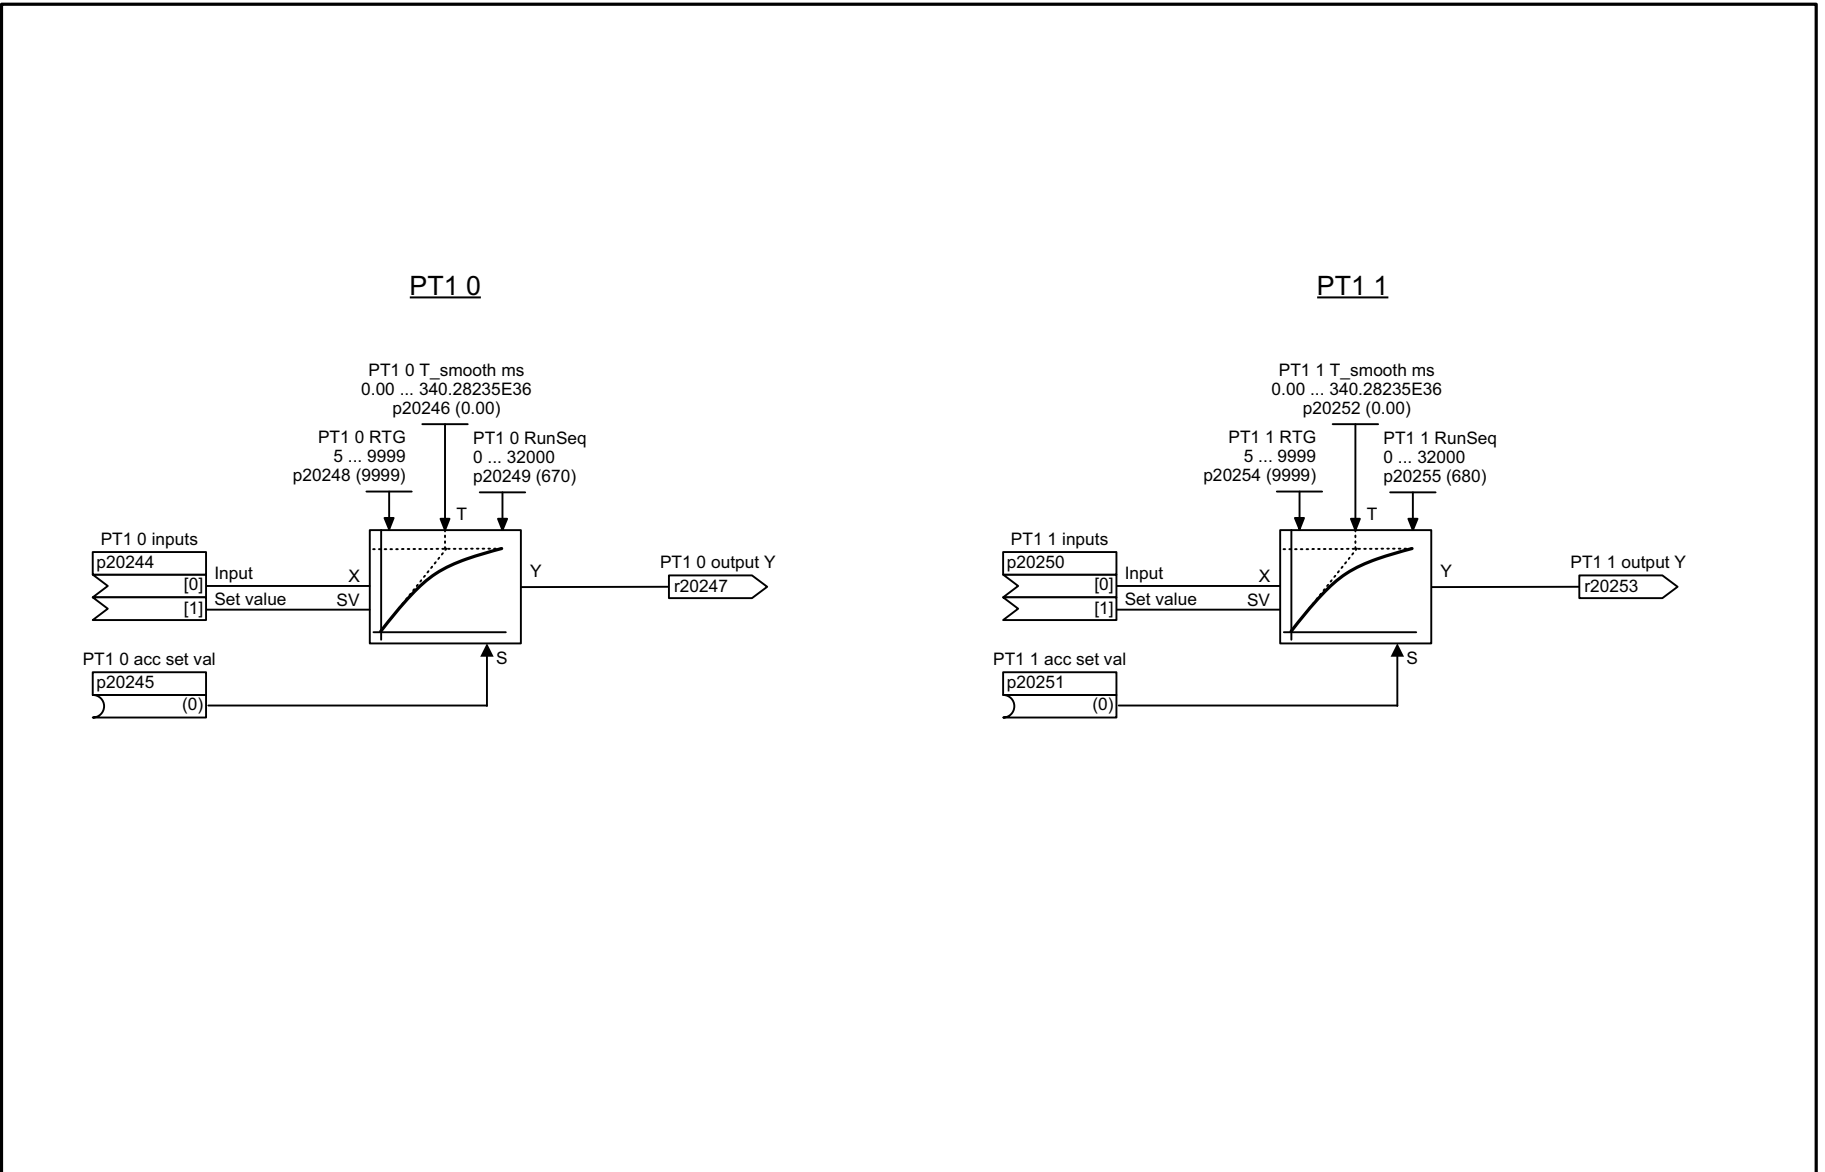


Fig. 2-140 7262 – PT 1 (smoothing element)

1	2	3	4	5	6	7	8
Control function blocks					fp_7262_97_59.vsd	Function diagram	
PT1 (smoothing element)					12.12.2012 V4.6	G120D CU240D-2	
							- 7262 -

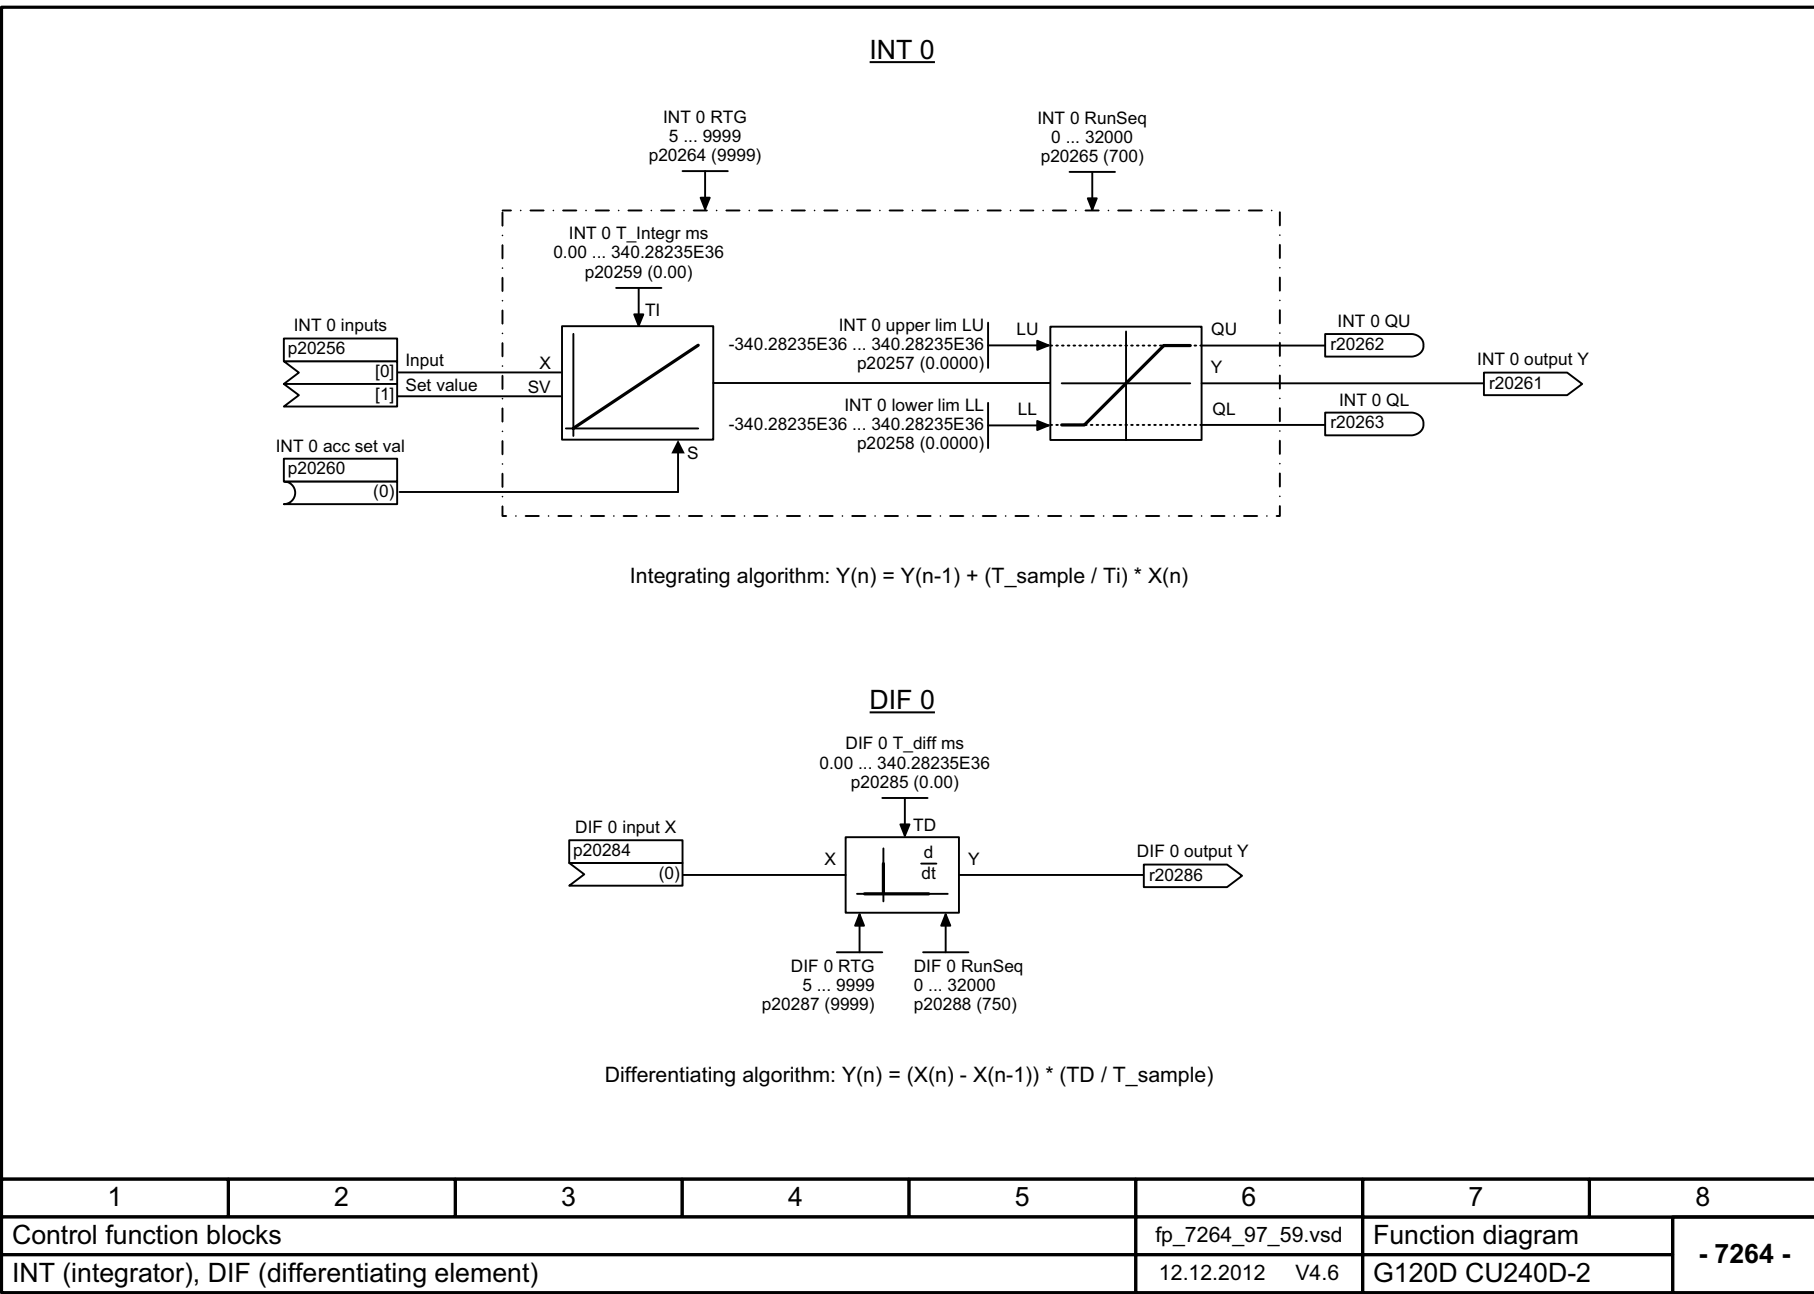


Fig. 2-141 7264 – INT (integrator), DIF (derivative-action element)

2-734

1	2	3	4	5	6	7	8
Control function blocks					fp_7264_97_59.vsd	Function diagram	
INT (integrator), DIF (differentiating element)					12.12.2012 V4.6	G120D CU240D-2	
							- 7264 -

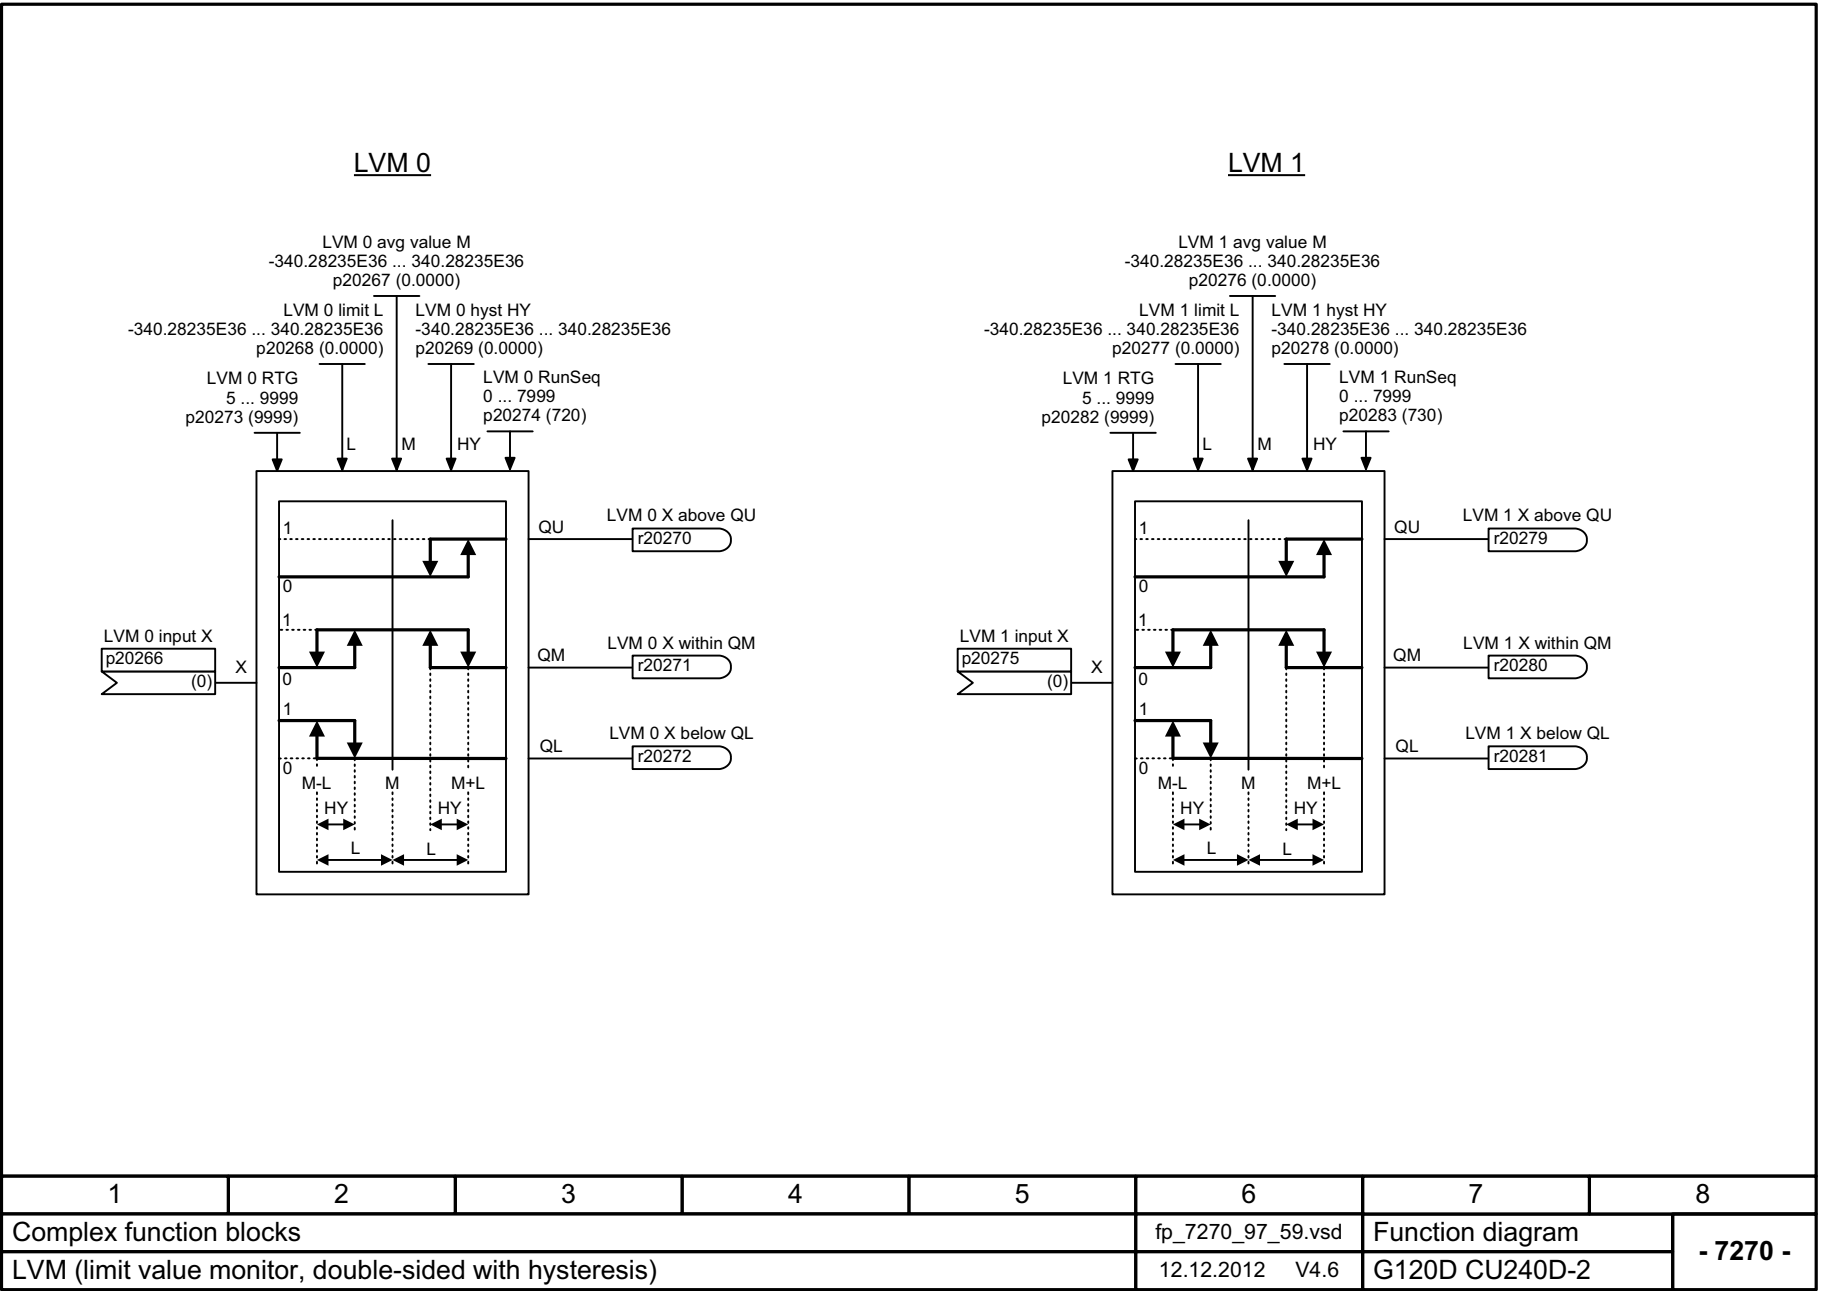


Fig. 2-142 7270 – LVM (double-sided limit monitor with hysteresis)

1	2	3	4	5	6	7	8
Complex function blocks					fp_7270_97_59.vsd	Function diagram	
LVM (limit value monitor, double-sided with hysteresis)					12.12.2012 V4.6	G120D CU240D-2	
							- 7270 -


2.18 Technology functions

Function diagrams

7017 – DC braking (p0300 = 1)

2-737

Fig. 2-143 7017 – DC braking (p0300 = 1)

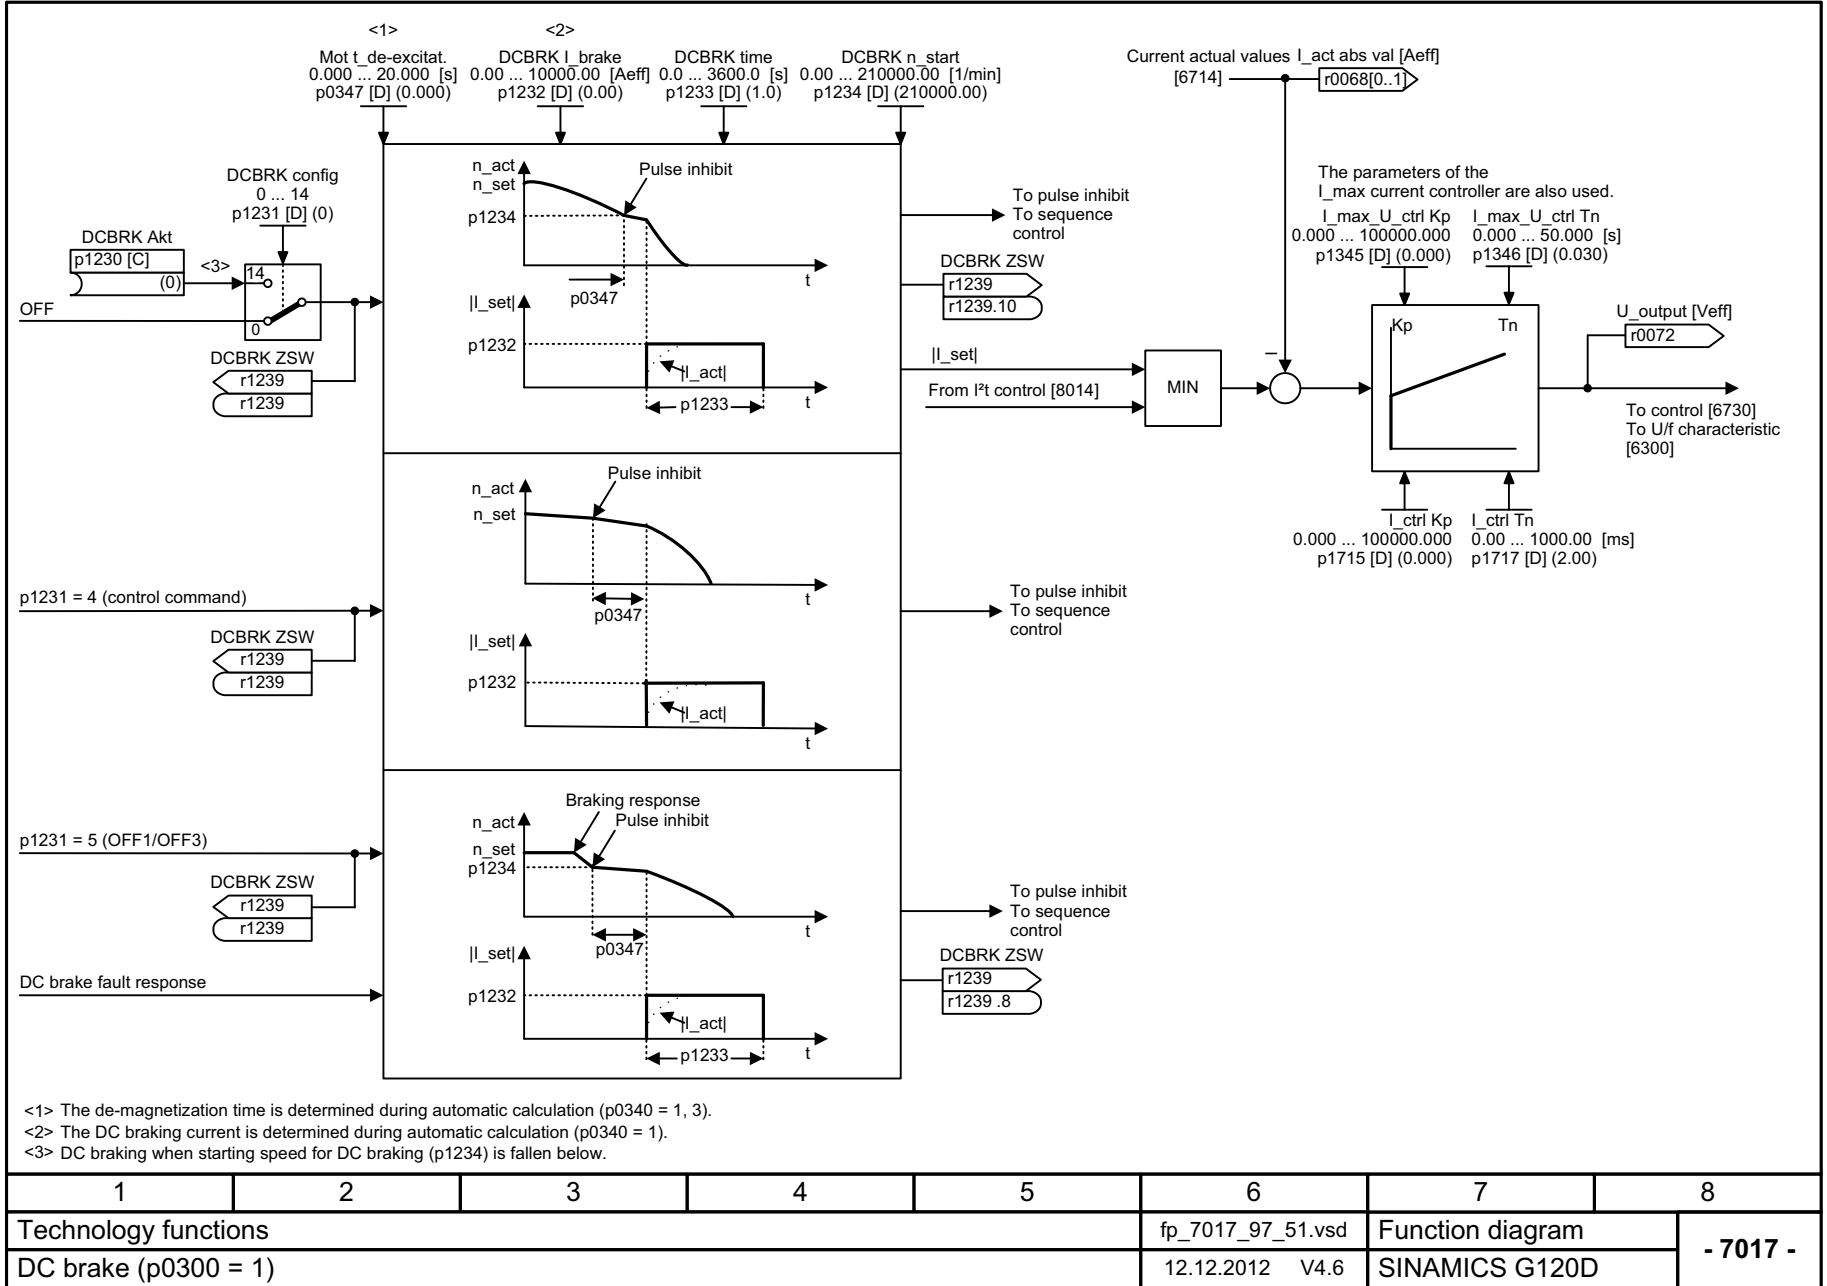

2.19 Technology controller

Function diagrams

7950 – Fixed values, binary selection (p2216 = 2)	2-740
7951 – Fixed values, direct selection (p2216 = 1)	2-741
7954 – Motorized potentiometer	2-742
7958 – Closed-loop control	2-743

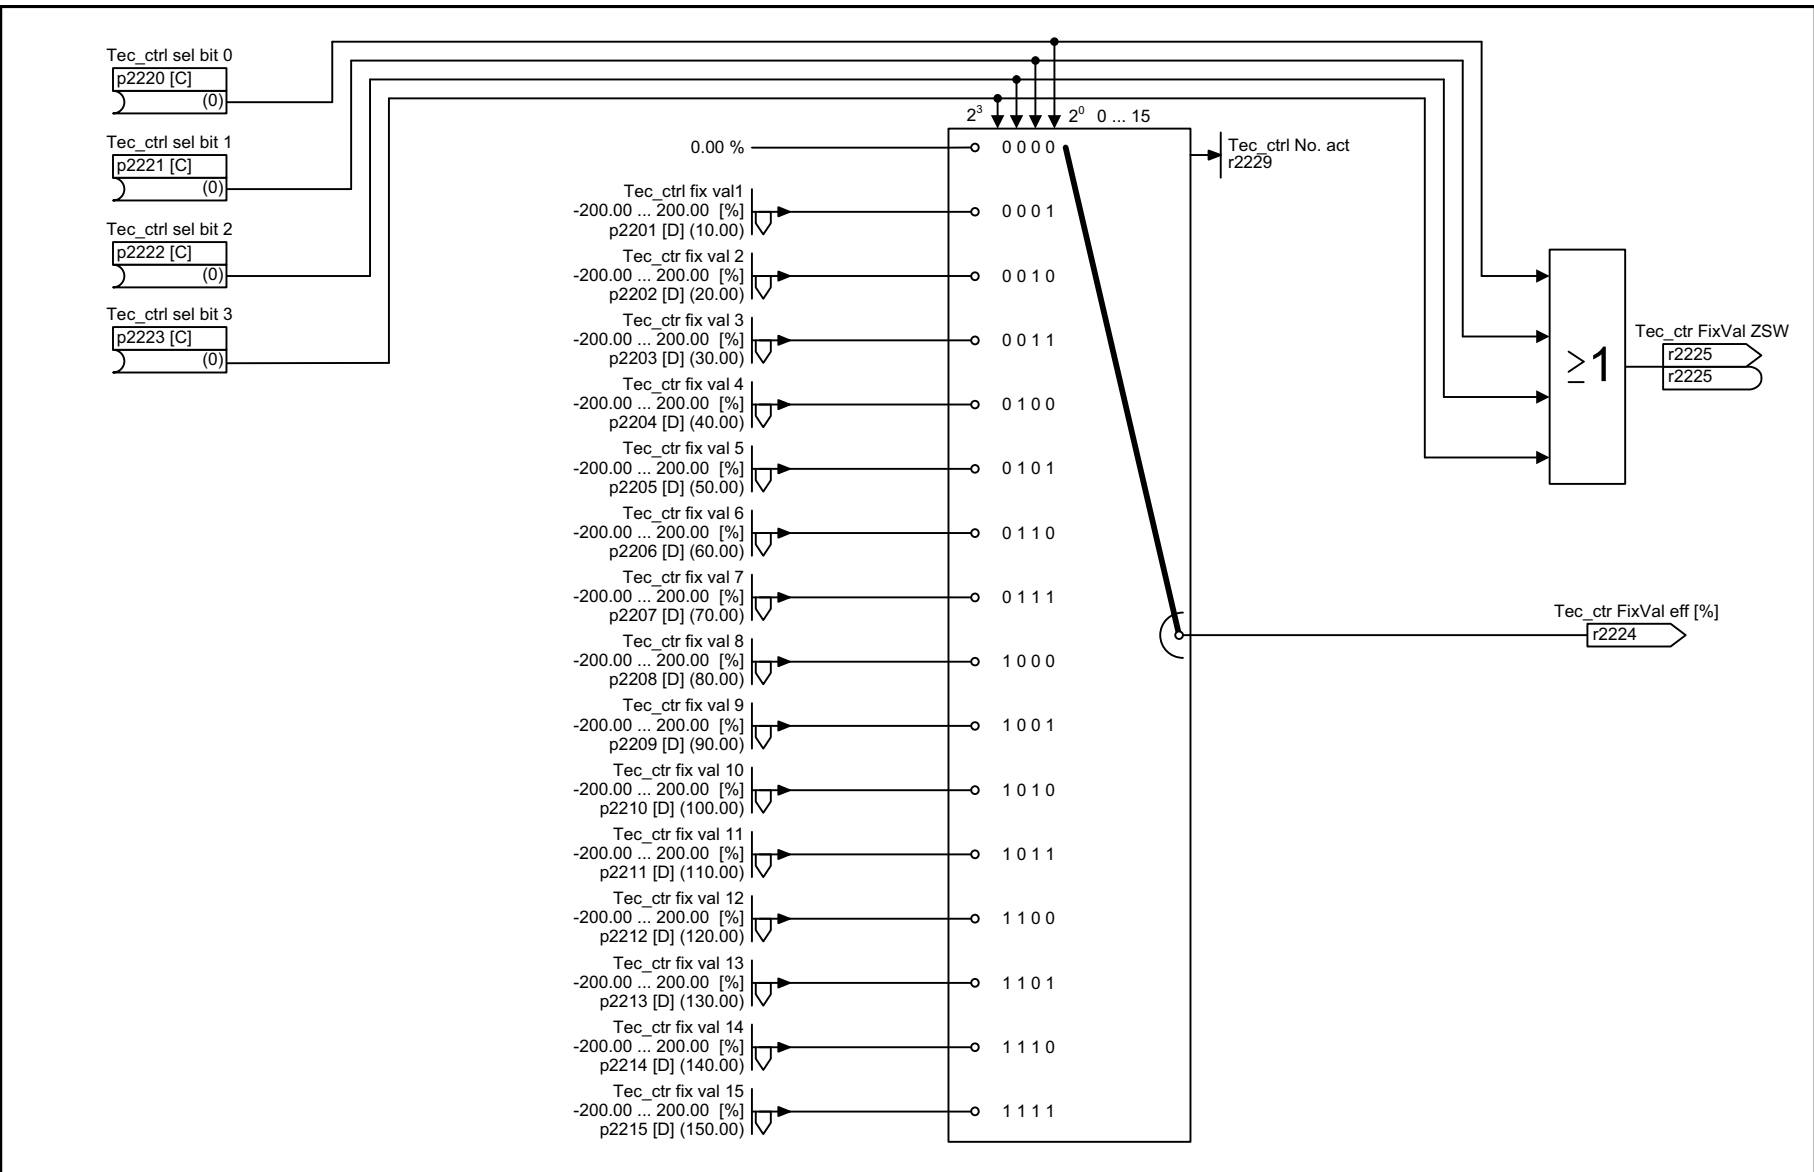


Fig. 2-144 7950 – Fixed values, binary selection (p2216 = 2)

1	2	3	4	5	6	7	8
Technology controller					fp_7950_97_51.vsd	Function diagram	
Fixed values, binary selection (p2216 = 2)					12.12.2012 V4.6	G120D CU240D-2	
							- 7950 -


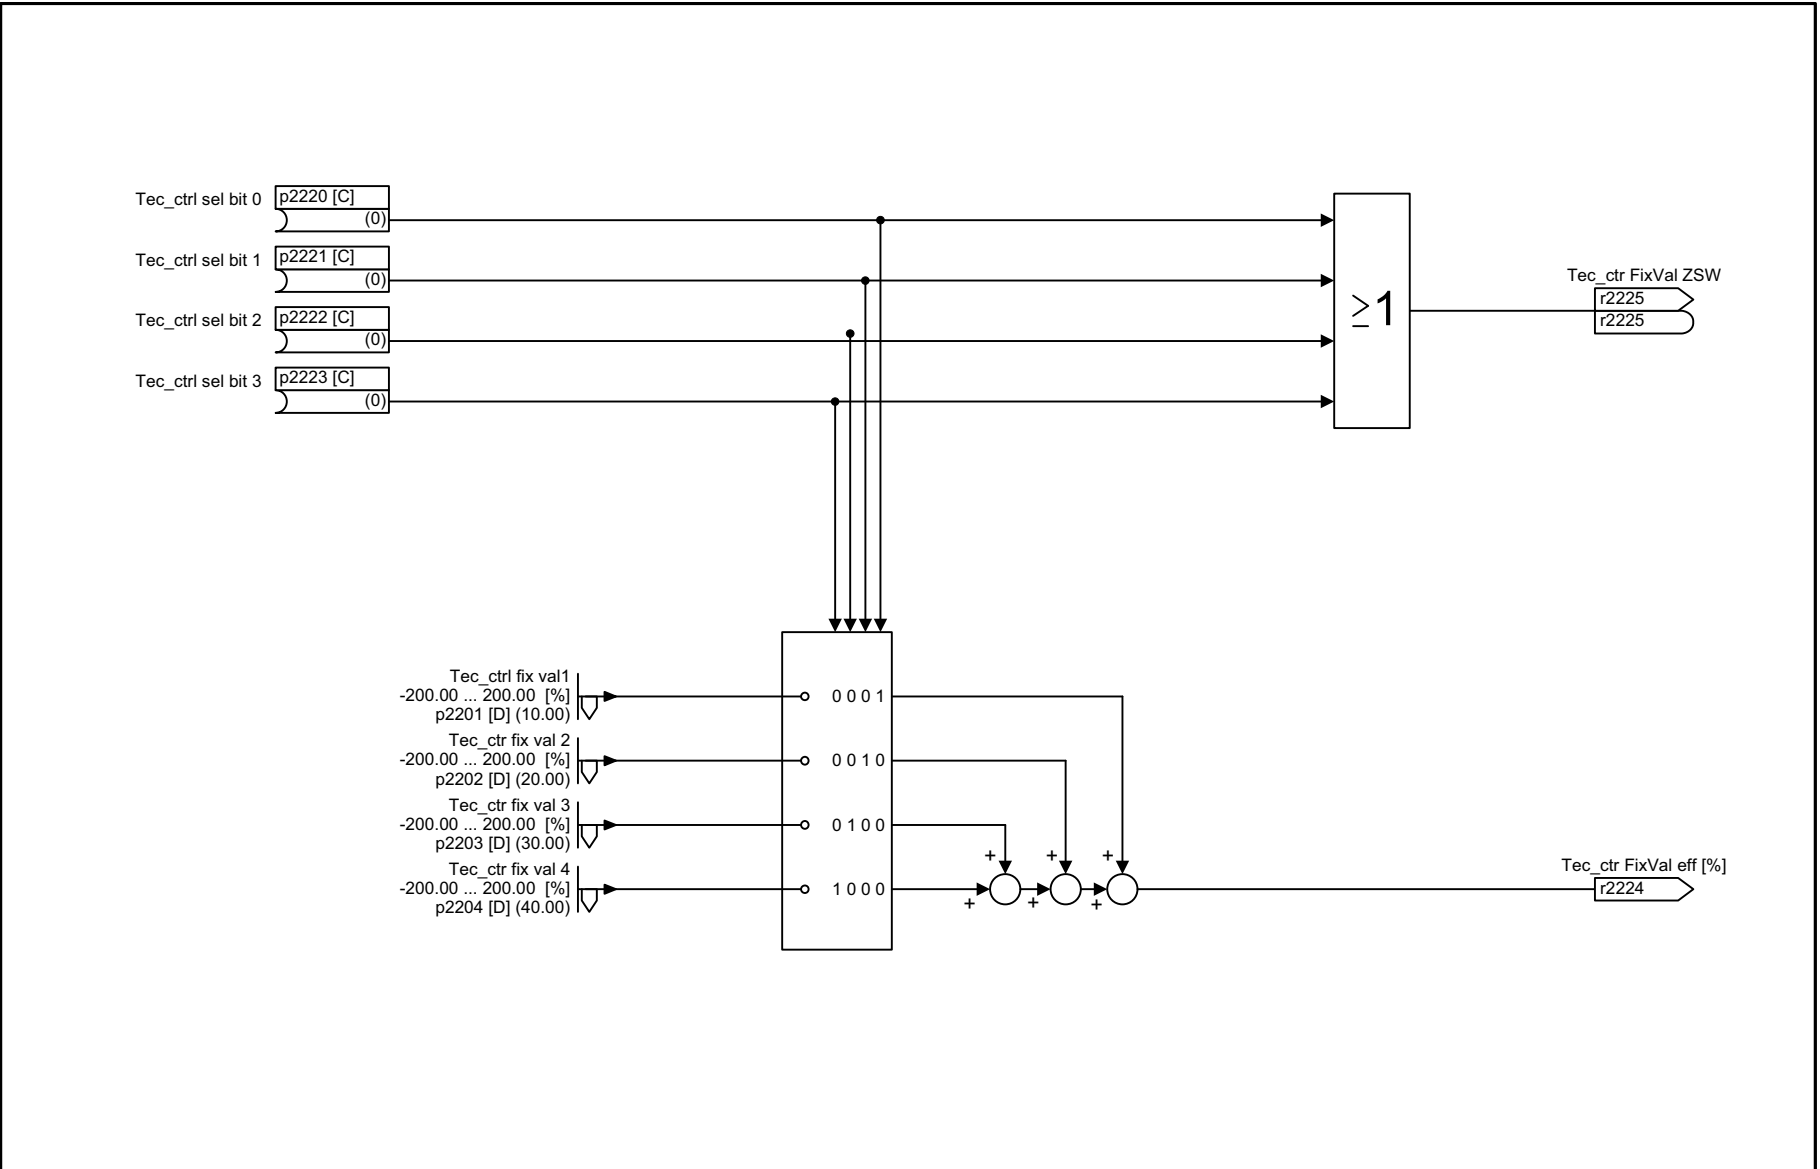


Fig. 2-145 7951 – Fixed values, direct selection (p2216 = 1)

1	2	3	4	5	6	7	8
Technology controller					fp_7951_97_51.vsd	Function diagram	
Fixed values, direct selection (p2216 = 1)					12.12.2012 V4.6	SINAMICS G120D	
							- 7951 -

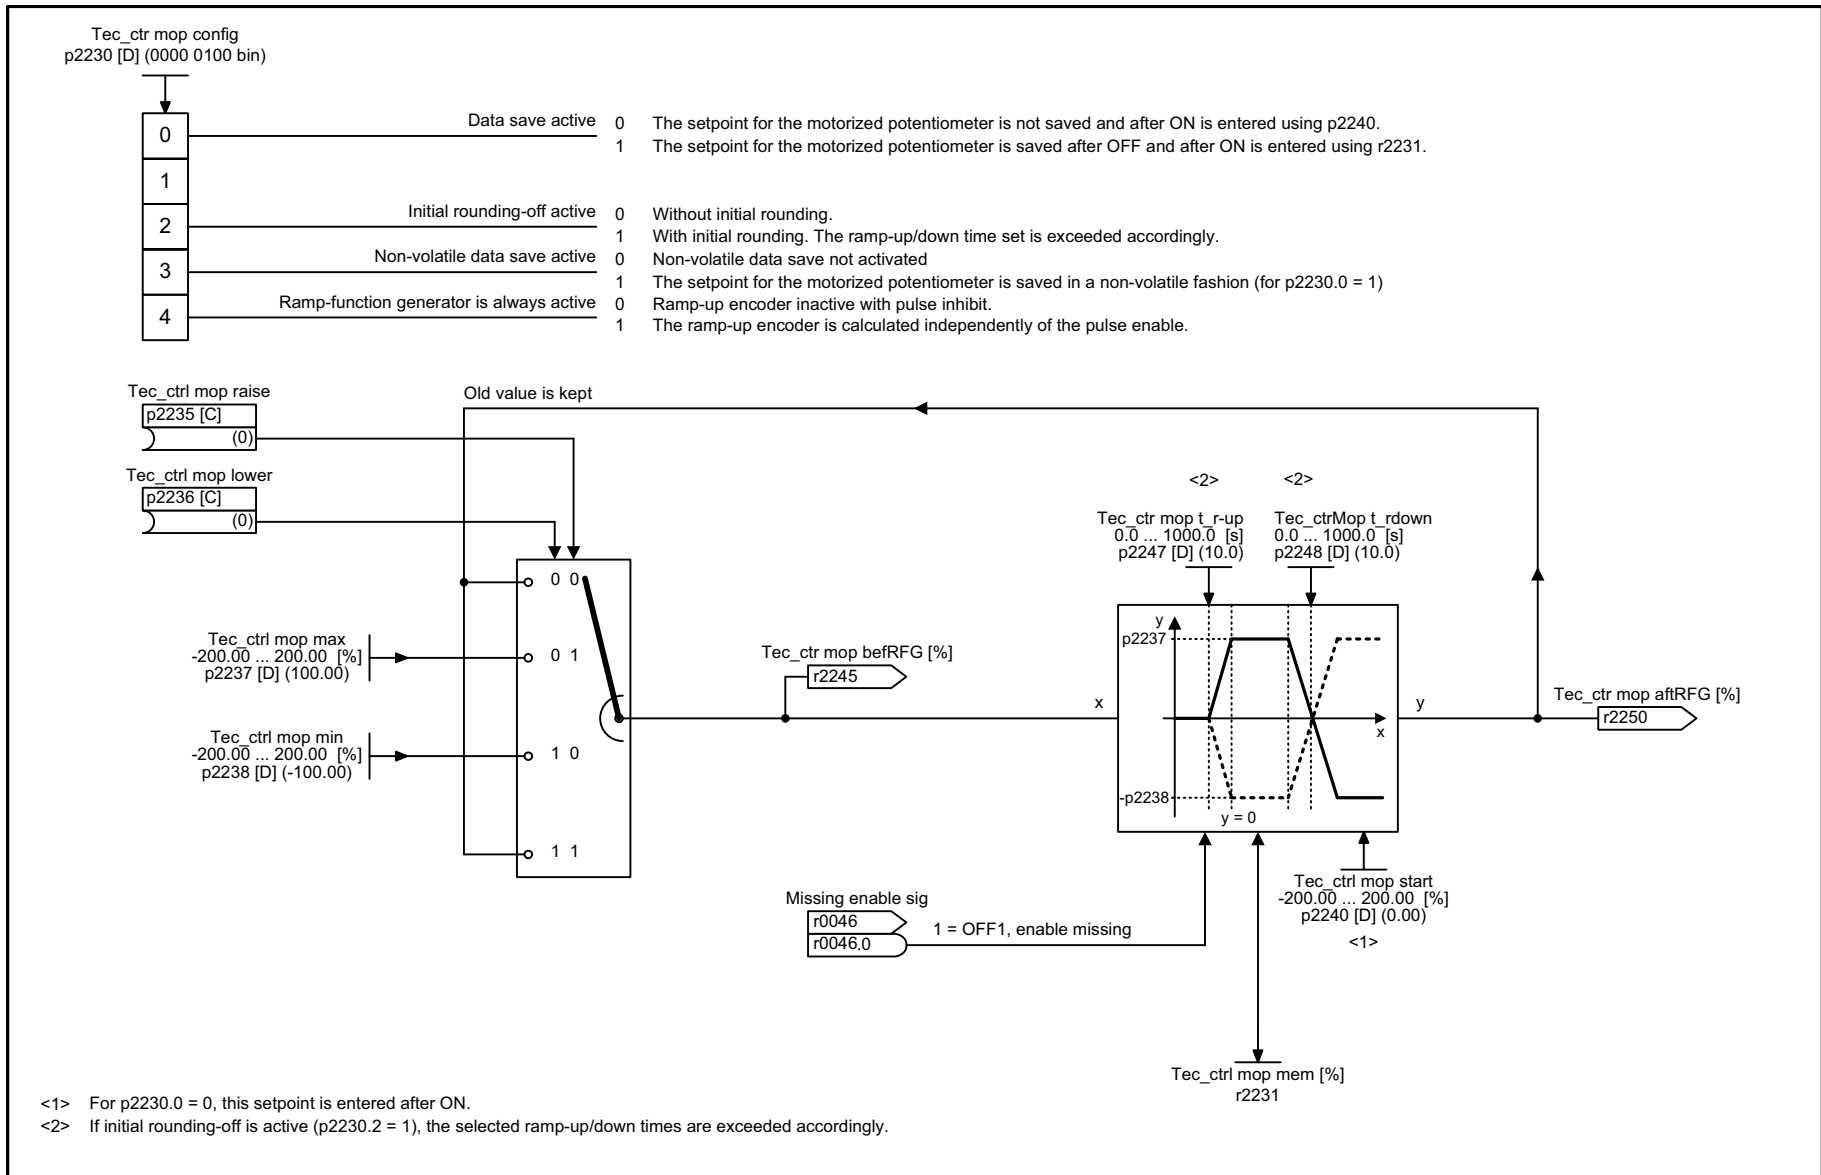


<1> For p2230.0 = 0, this setpoint is entered after ON.
<2> If initial rounding-off is active (p2230.2 = 1), the selected ramp-up/down times are exceeded accordingly.

1	2	3	4	5	6	7	8
Technology controller					fp_7954_97_61.vsd	Function diagram	
Motorized potentiometer					12.12.2012 V4.6	SINAMICS G120D	
							- 7954 -

Fig. 2-146 7954 – Motorized potentiometer

Fig. 2-147 7958 – Closed-loop control

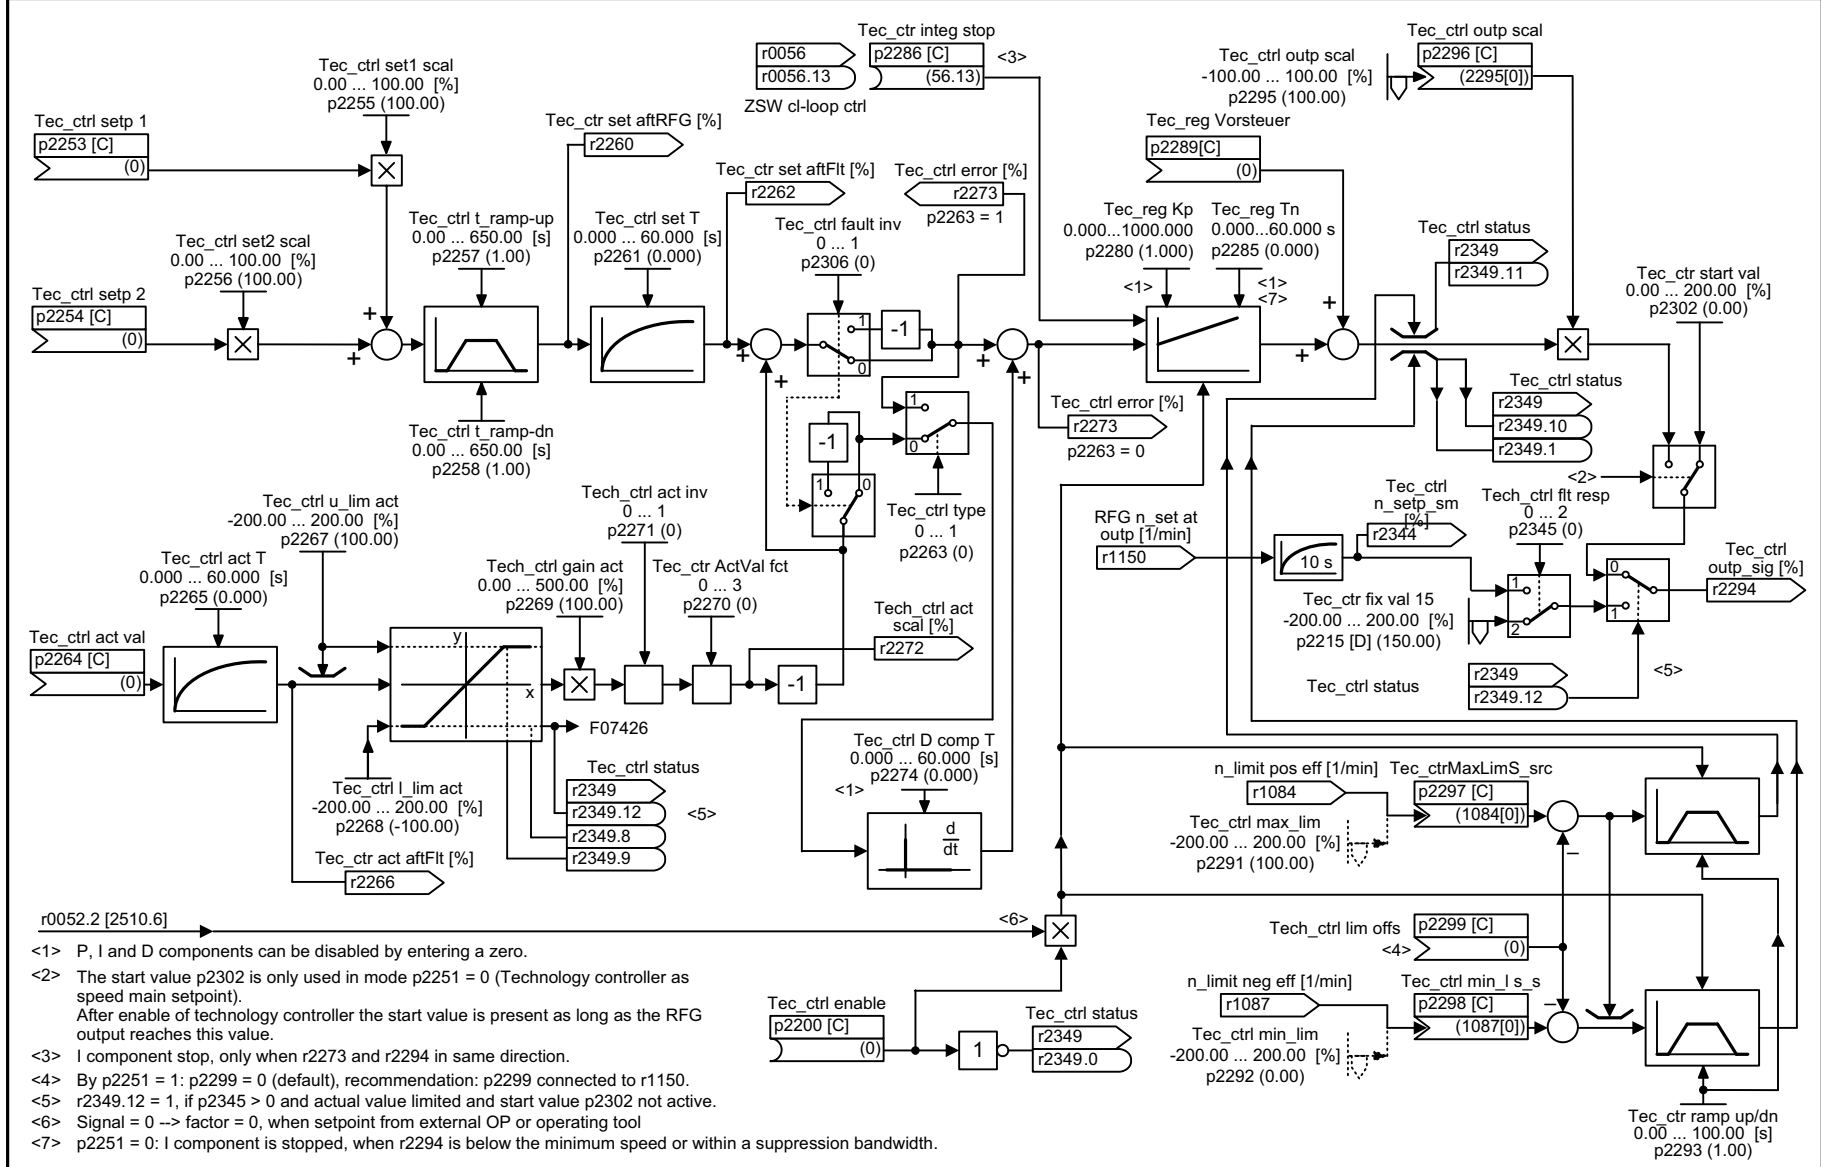

- <1> P, I and D components can be disabled by entering a zero.
- <2> The start value p2302 is only used in mode p2251 = 0 (Technology controller as speed main setpoint).
 After enable of technology controller the start value is present as long as the RFG output reaches this value.
- <3> I component stop, only when r2273 and r2294 in same direction.
- <4> By p2251 = 1: p2299 = 0 (default), recommendation: p2299 connected to r1150.
- <5> r2349.12 = 1, if p2345 > 0 and actual value limited and start value p2302 not active.
- <6> Signal = 0 -> factor = 0, when setpoint from external OP or operating tool
- <7> p2251 = 0: I component is stopped, when r2294 is below the minimum speed or within a suppression bandwidth.

1	2	3	4	5	6	7	8
Technology controller					fp_7958_97_53.vsd	Function diagram	
Closed-loop control					12.12.2012 V4.6	SINAMICS G120D	
							- 7958 -

2.20 Signals and monitoring functions

Function diagrams

8005 – Overview	2-745
8010 – Speed signals 1	2-746
8011 – Speed signals 2	2-747
8012 – Torque signals, motor locked/stalled	2-748
8013 – Load monitoring	2-749
8014 – Thermal monitoring, power unit	2-750
8016 – Thermal monitoring, motor	2-751
8017 – Thermal motor models	2-752
8020 – Monitoring functions 1	2-753
8021 – Monitoring functions 2	2-754


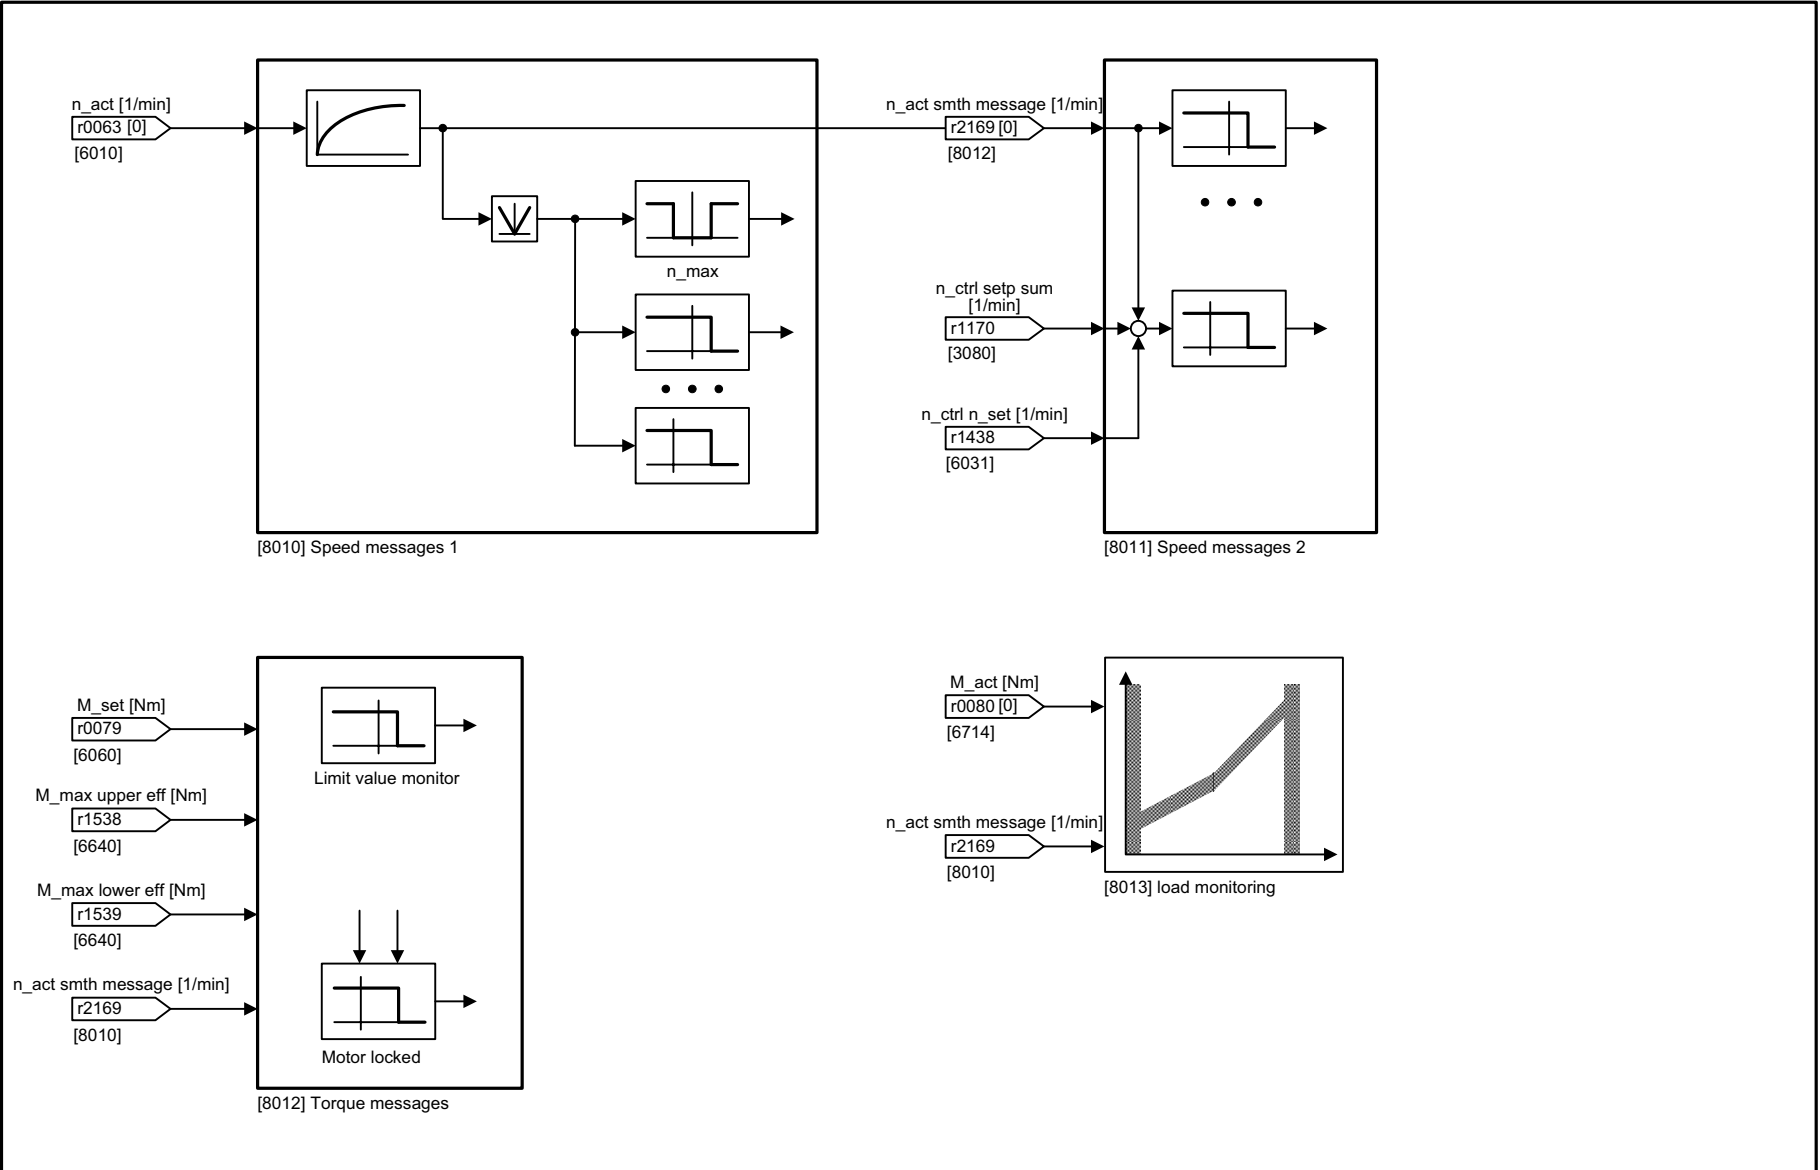


Fig. 2-148 8005 – Overview

1	2	3	4	5	6	7	8
Signals and monitoring functions					fp_8005_97_51.vsd	Function diagram	
Overview					12.12.2012 V4.6	SINAMICS G120D	
							- 8005 -

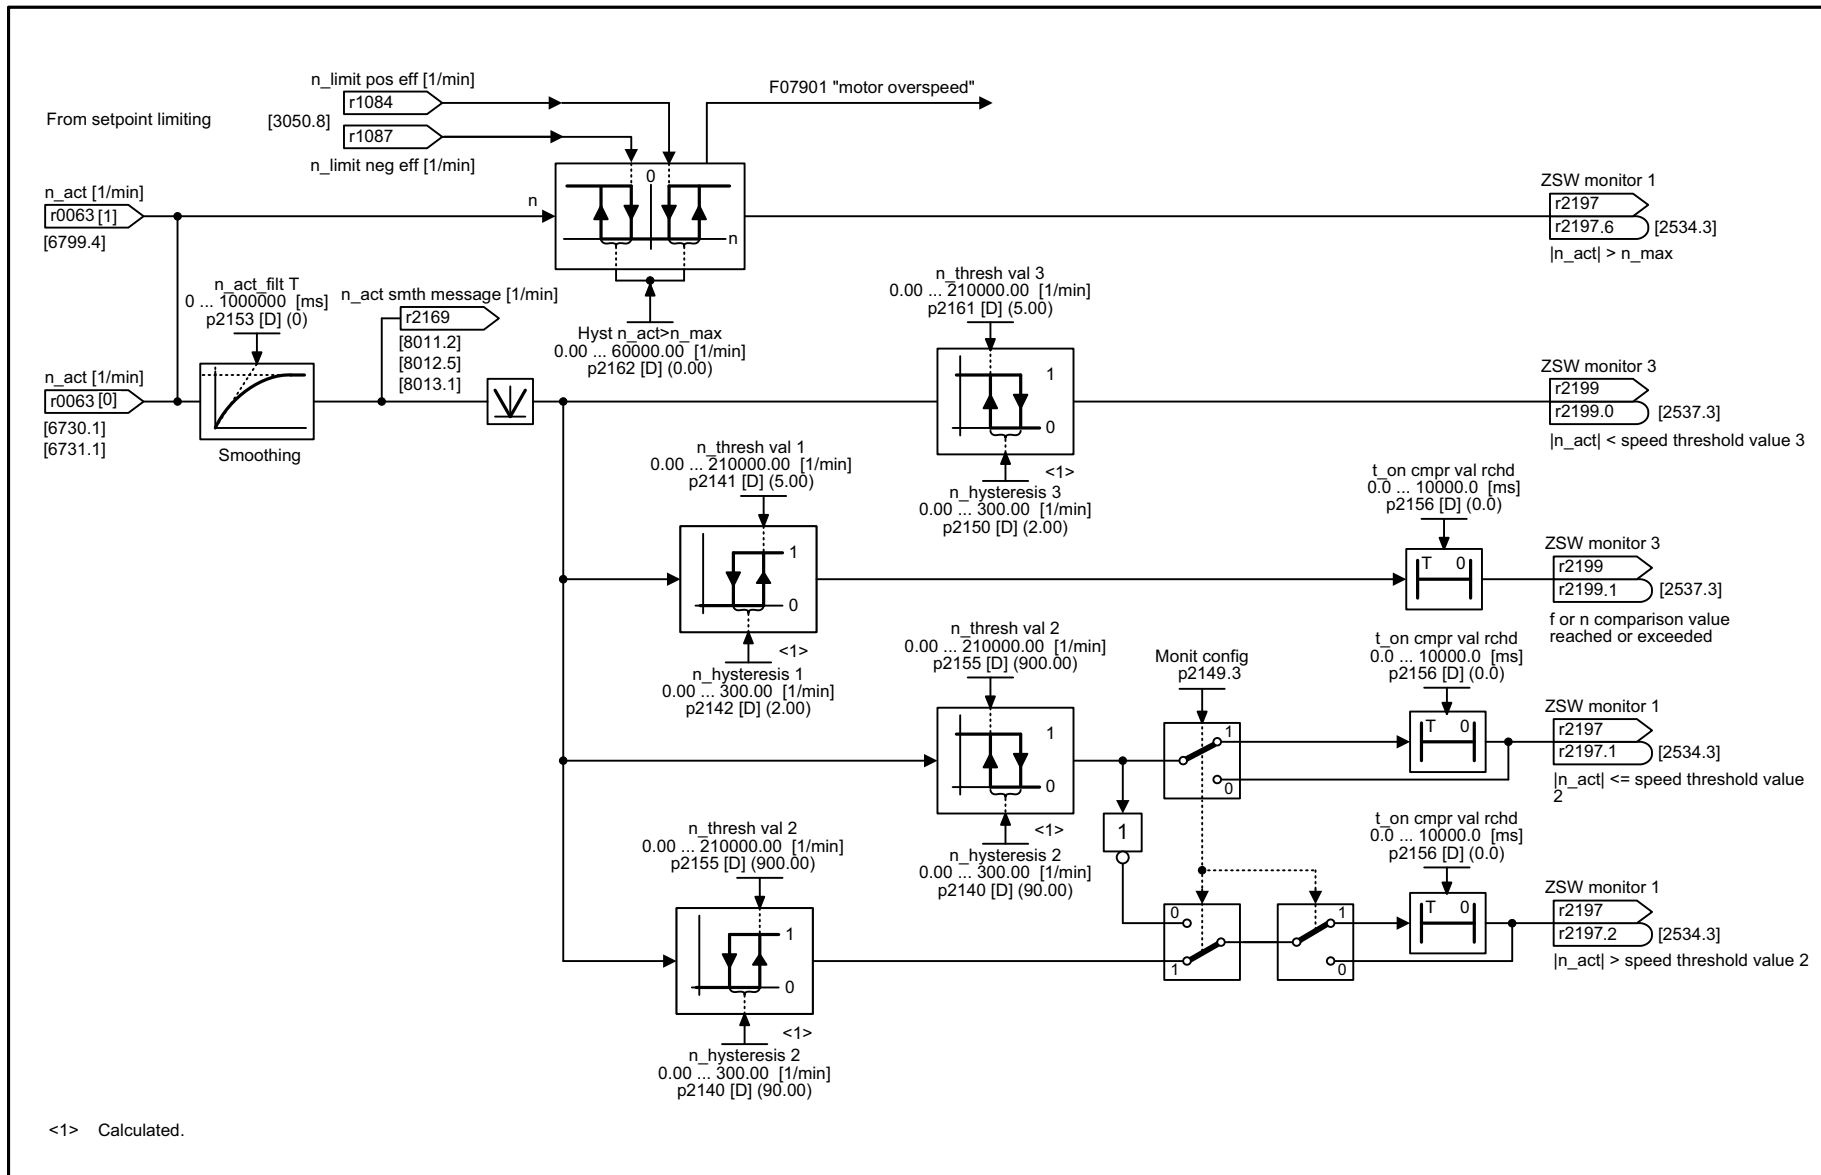


<1> Calculated.


1	2	3	4	5	6	7	8
Signals and monitoring functions					fp_8010_97_51.vsd	Function diagram	
Speed signals 1					12.12.2012 V4.6	SINAMICS G120D	
							- 8010 -

Fig. 2-149 8010 – Speed signals 1

Fig. 2-150 8011 – Speed signals 2

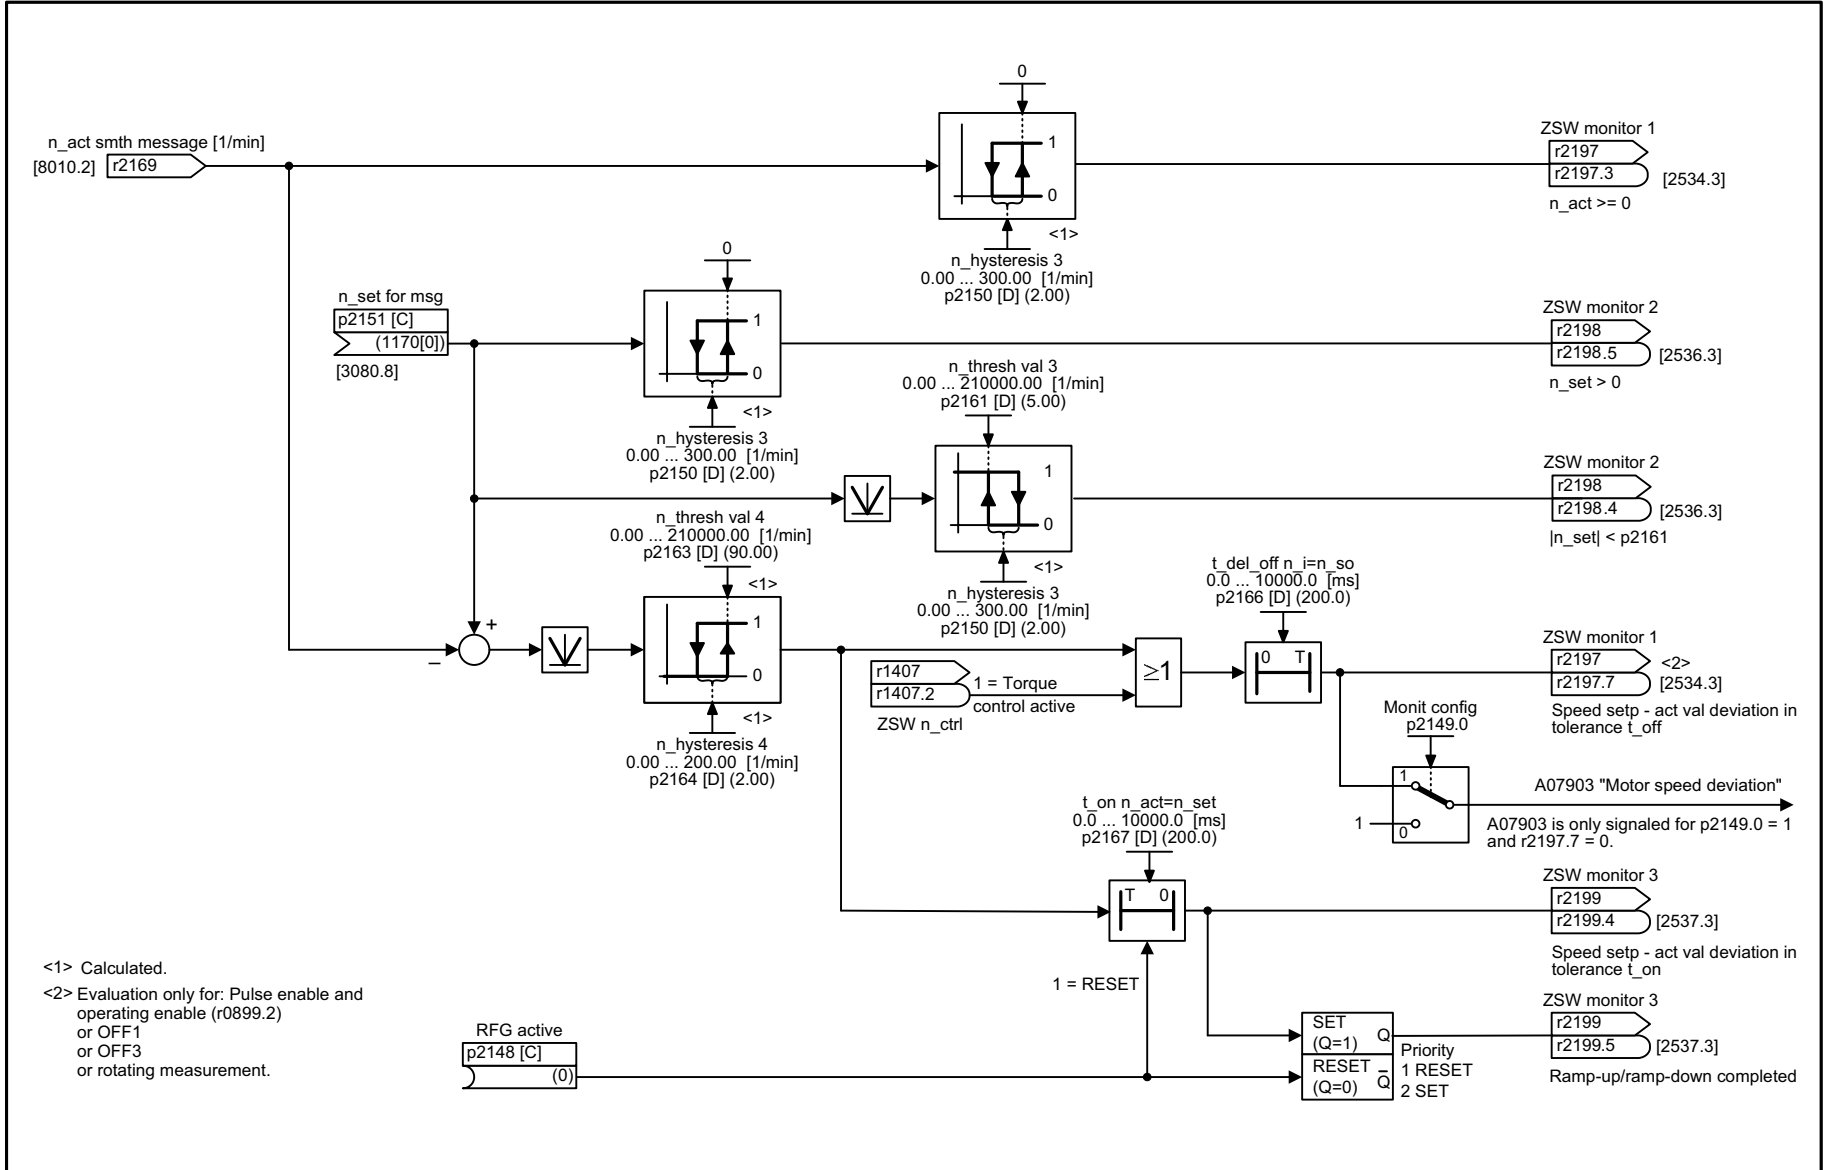


1	2	3	4	5	6	7	8
Signals and monitoring functions					fp_8011_97_53.vsd	Function diagram	
Speed signals 2					12.12.2012 V4.6	SINAMICS G120D	
							- 8011 -

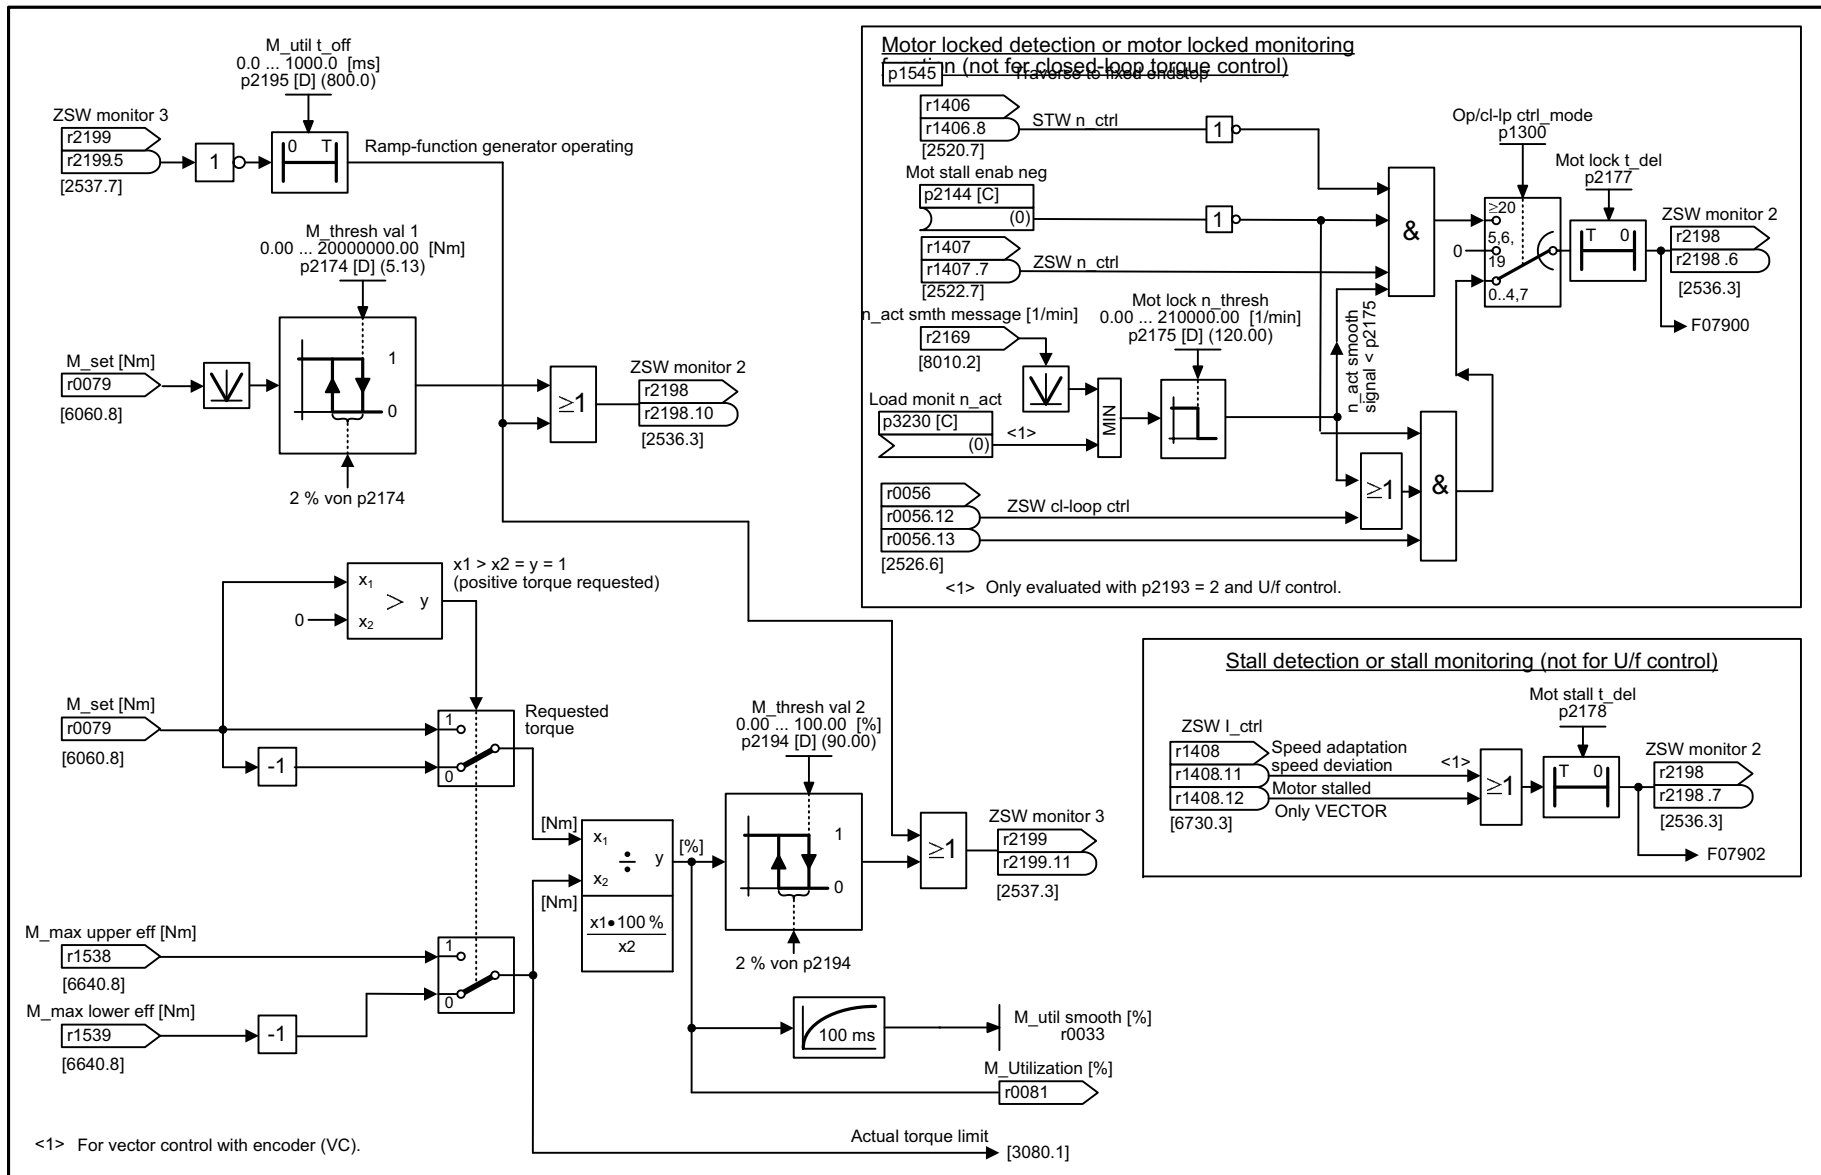

1	2	3	4	5	6	7	8
Signals and monitoring functions					fp_8012_97_55.vsd	Function diagram	
Torque signals, motor locked/stalled					12.12.2012 V4.6	SINAMICS G120D	


Fig. 2-151 8012 – Torque signals, motor locked/stalled

Fig. 2-152 8013 – Load monitoring

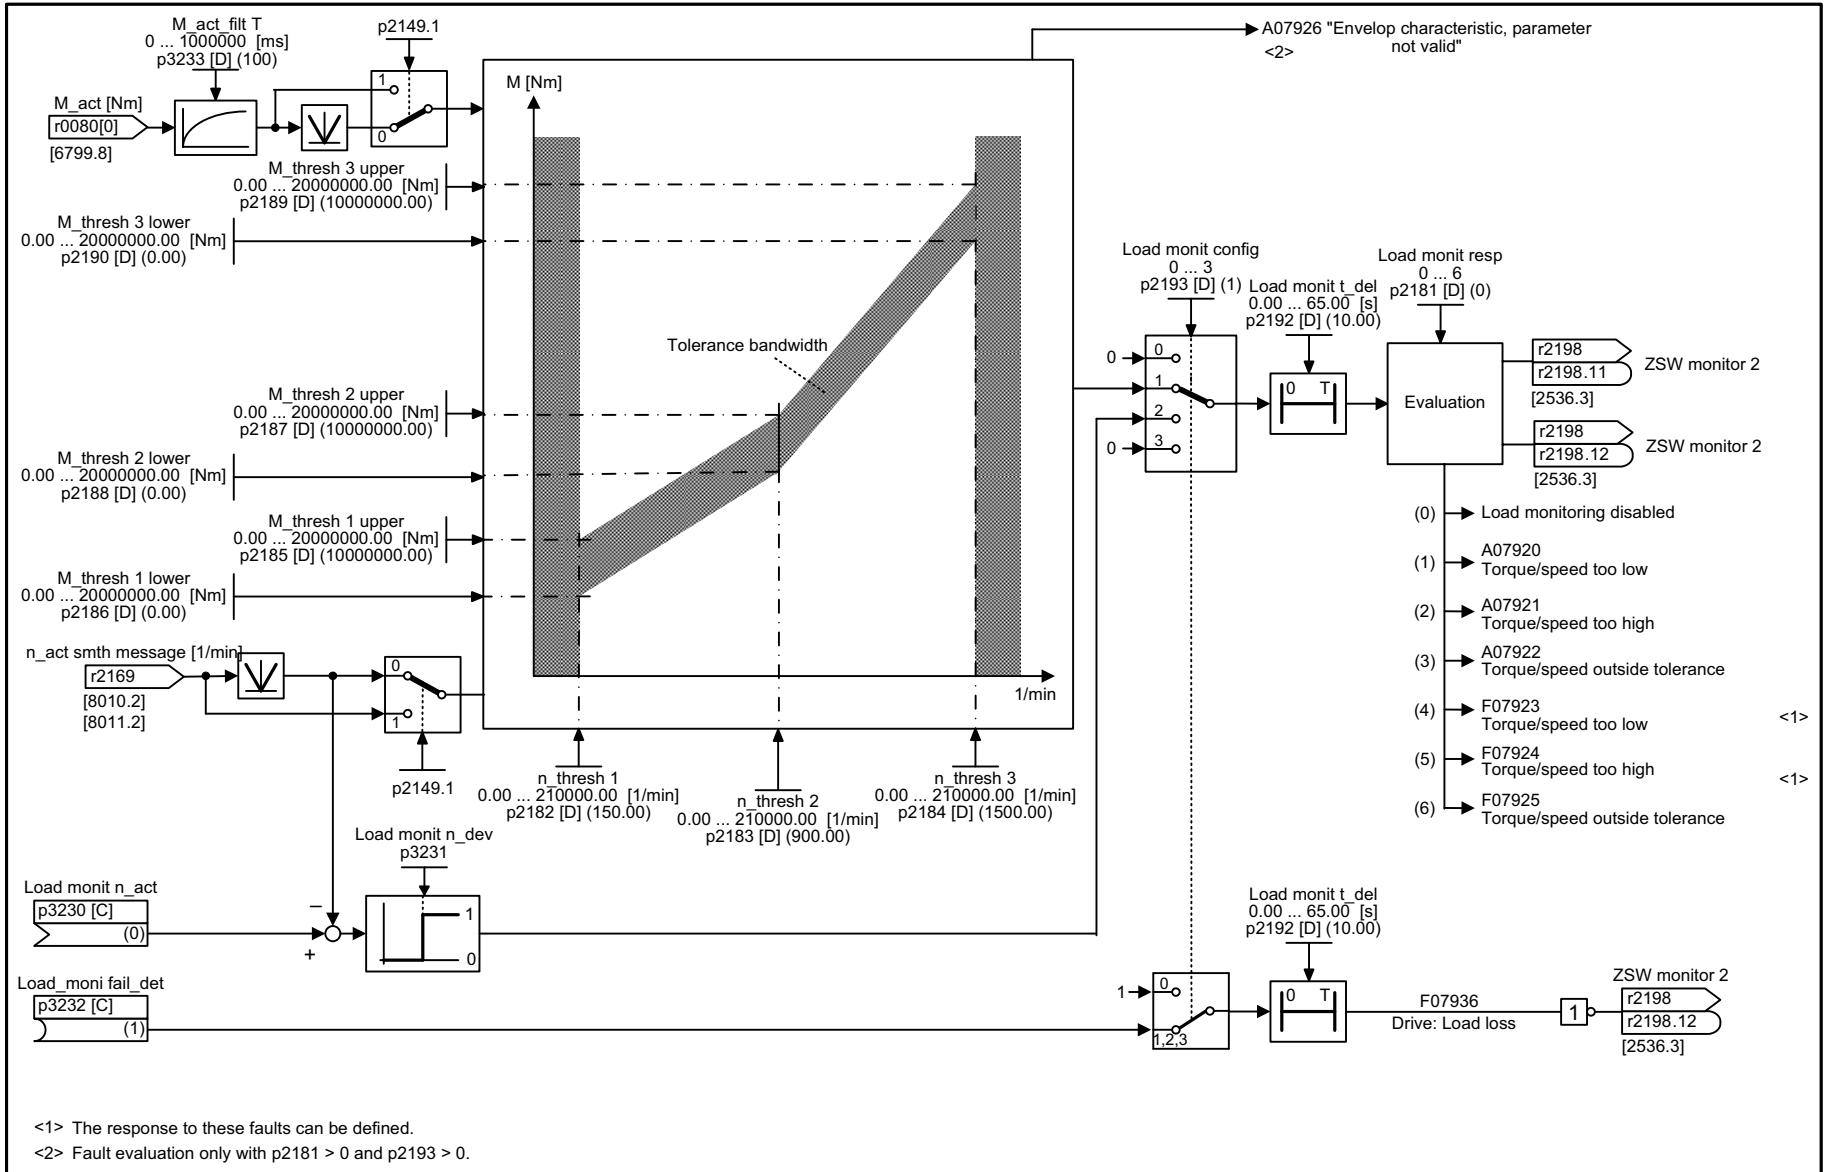


Function diagrams
 Signals and monitoring functions

1	2	3	4	5	6	7	8
Signals and monitoring functions					fp_8013_97_51.vsd	Function diagram	
Load monitoring					12.12.2012 V4.6	SINAMICS G120D	
							- 8013 -

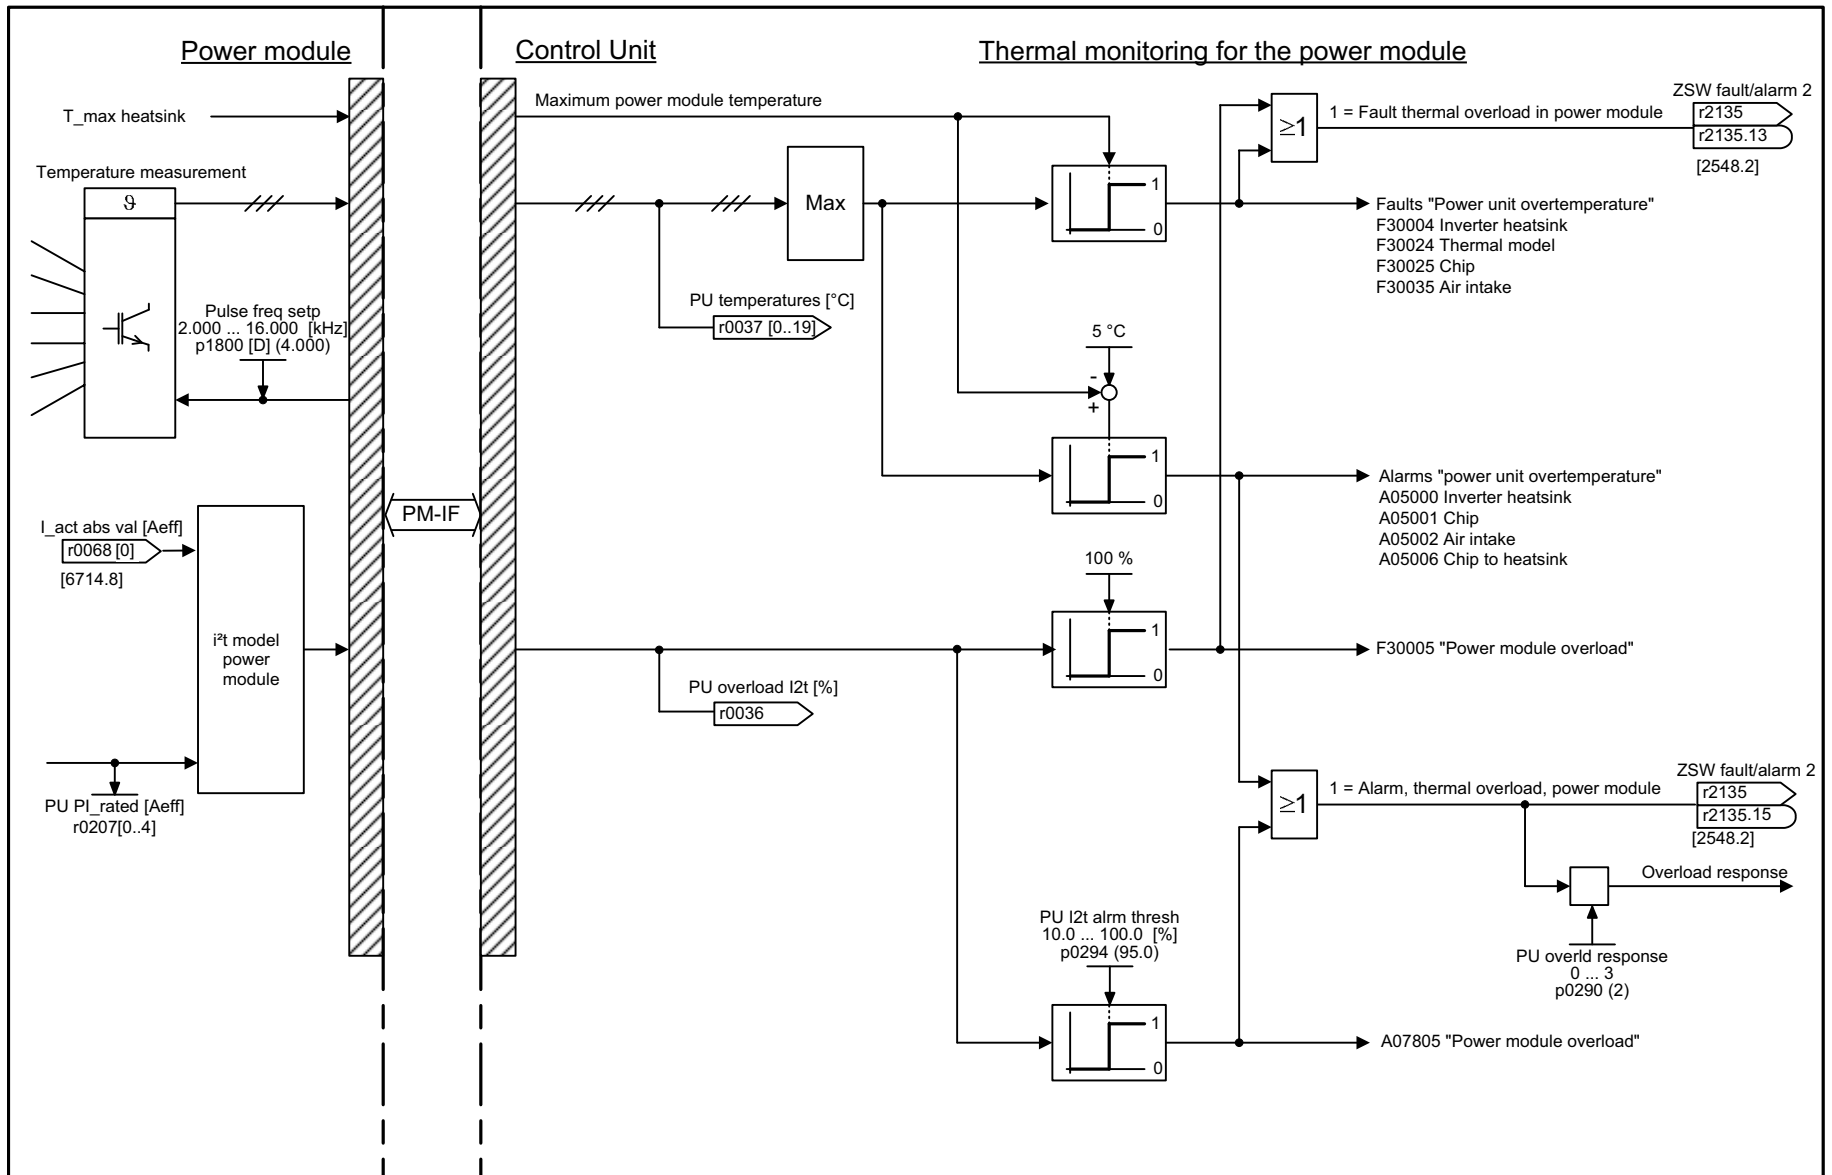

1	2	3	4	5	6	7	8
Signals and monitoring functions					fp_8014_97_51.vsd	Function diagram	
Thermal monitoring, power module					12.12.2012 V4.6	SINAMICS G120D	
- 8014 -							


Fig. 2-153 8014 – Thermal monitoring, power unit

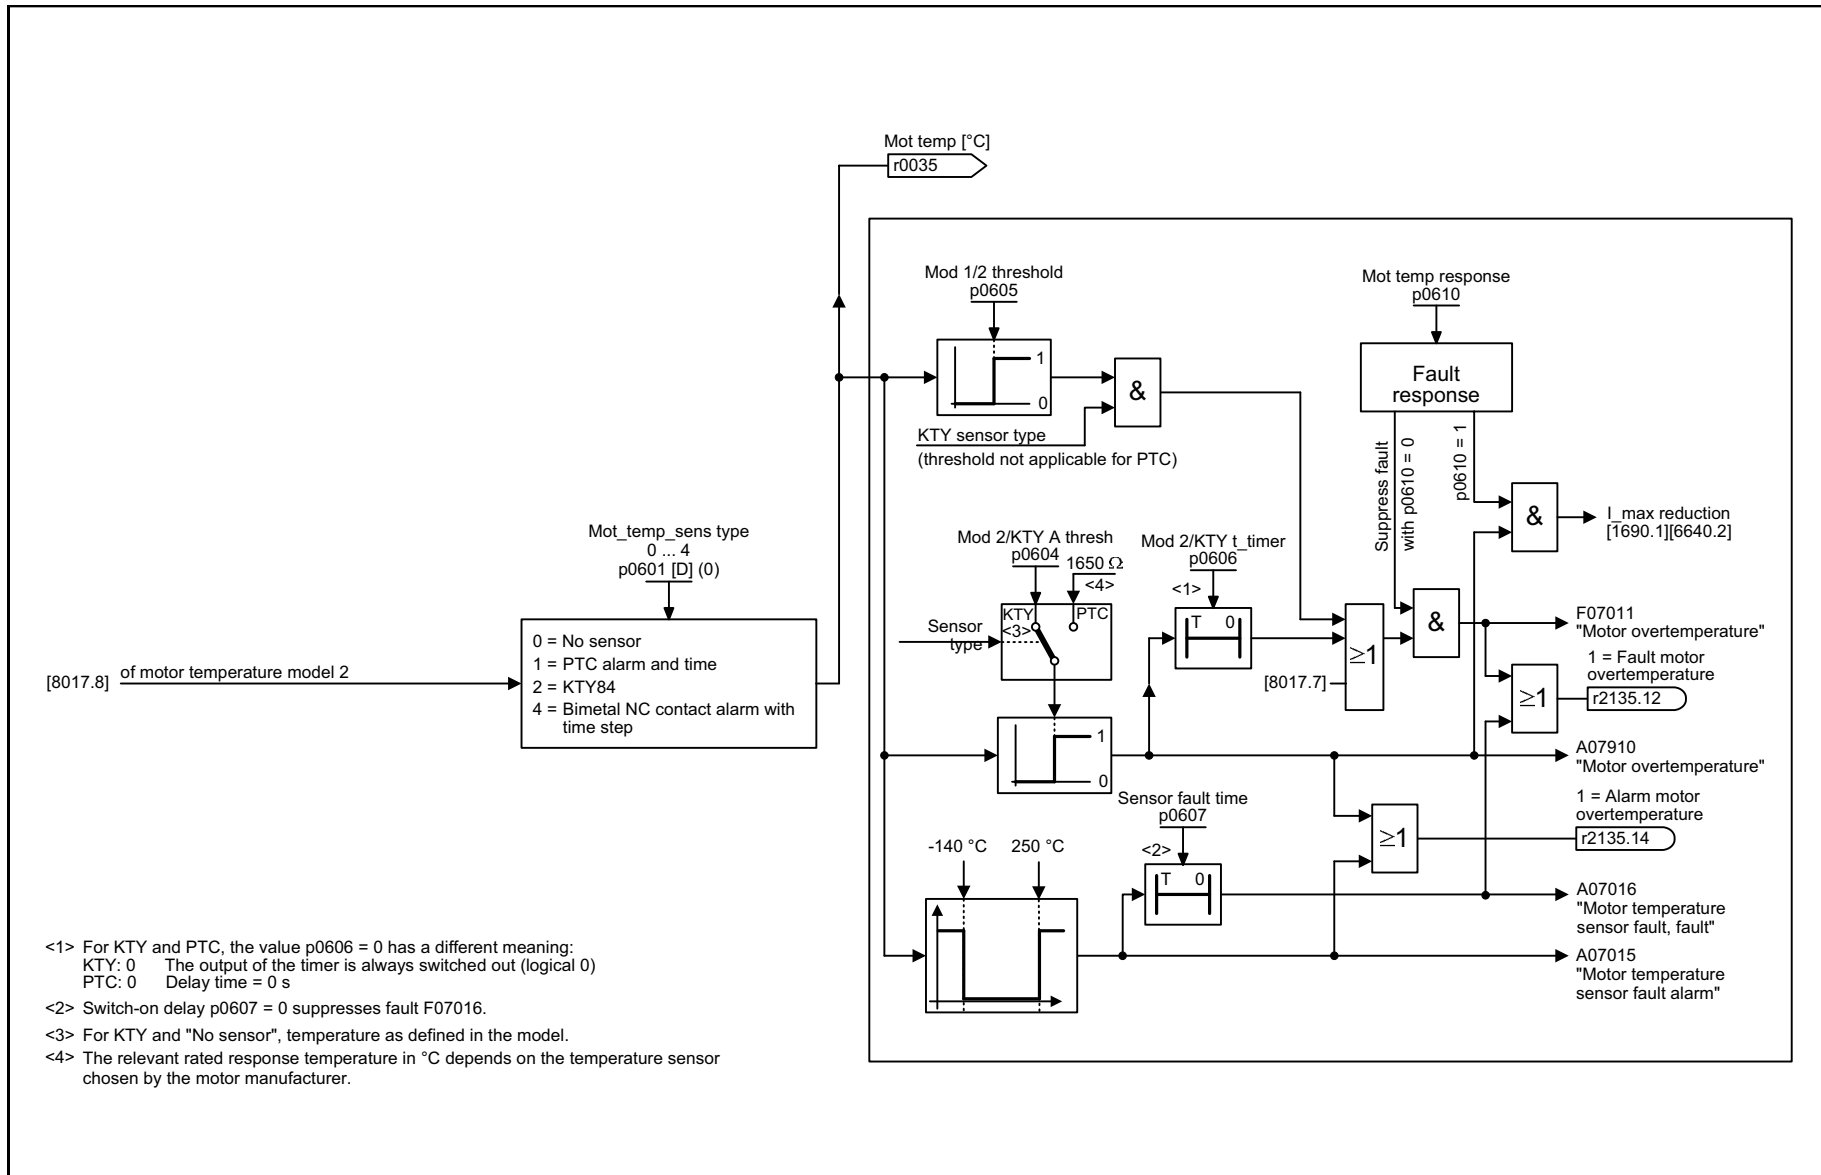

1	2	3	4	5	6	7	8
Signals and monitoring functions					fp_8016_97_04.vsd	Function diagram	
Thermal monitoring, motor					12.12.2012 V4.6	SINAMICS G120D	

- 8016 -


Fig. 2-154 8016 – Thermal monitoring, motor

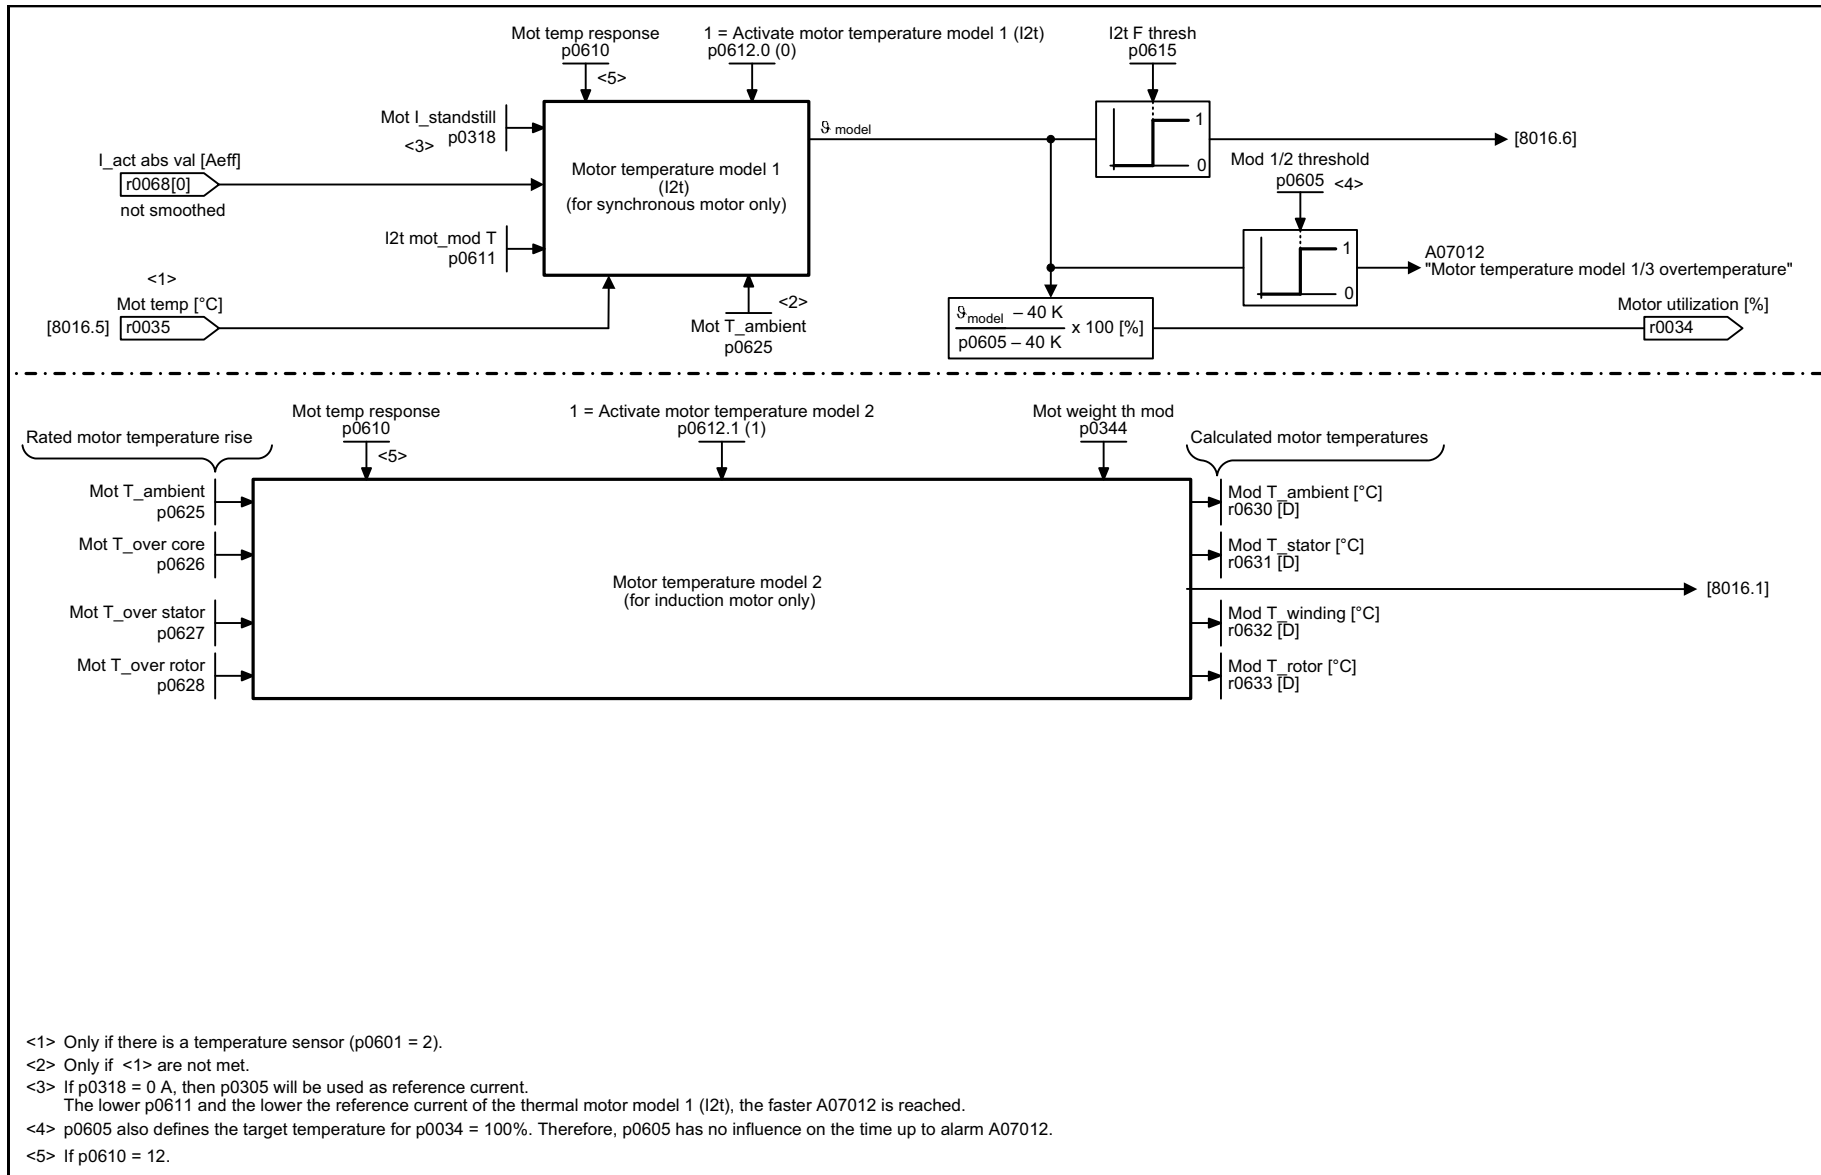

<1> Only if there is a temperature sensor (p0601 = 2).
 <2> Only if <1> are not met.
 <3> If p0318 = 0 A, then p0305 will be used as reference current.
 The lower p0611 and the lower the reference current of the thermal motor model 1 (I2t), the faster A07012 is reached.
 <4> p0605 also defines the target temperature for p0034 = 100%. Therefore, p0605 has no influence on the time up to alarm A07012.
 <5> If p0610 = 12.

1	2	3	4	5	6	7	8
Signals and monitoring functions					fp_8017_97_04.vsd	Function diagram	
Thermal motor models					12.12.2012 V4.6	SINAMICS G120D	
							- 8017 -


Fig. 2-155 8017 – Thermal motor models

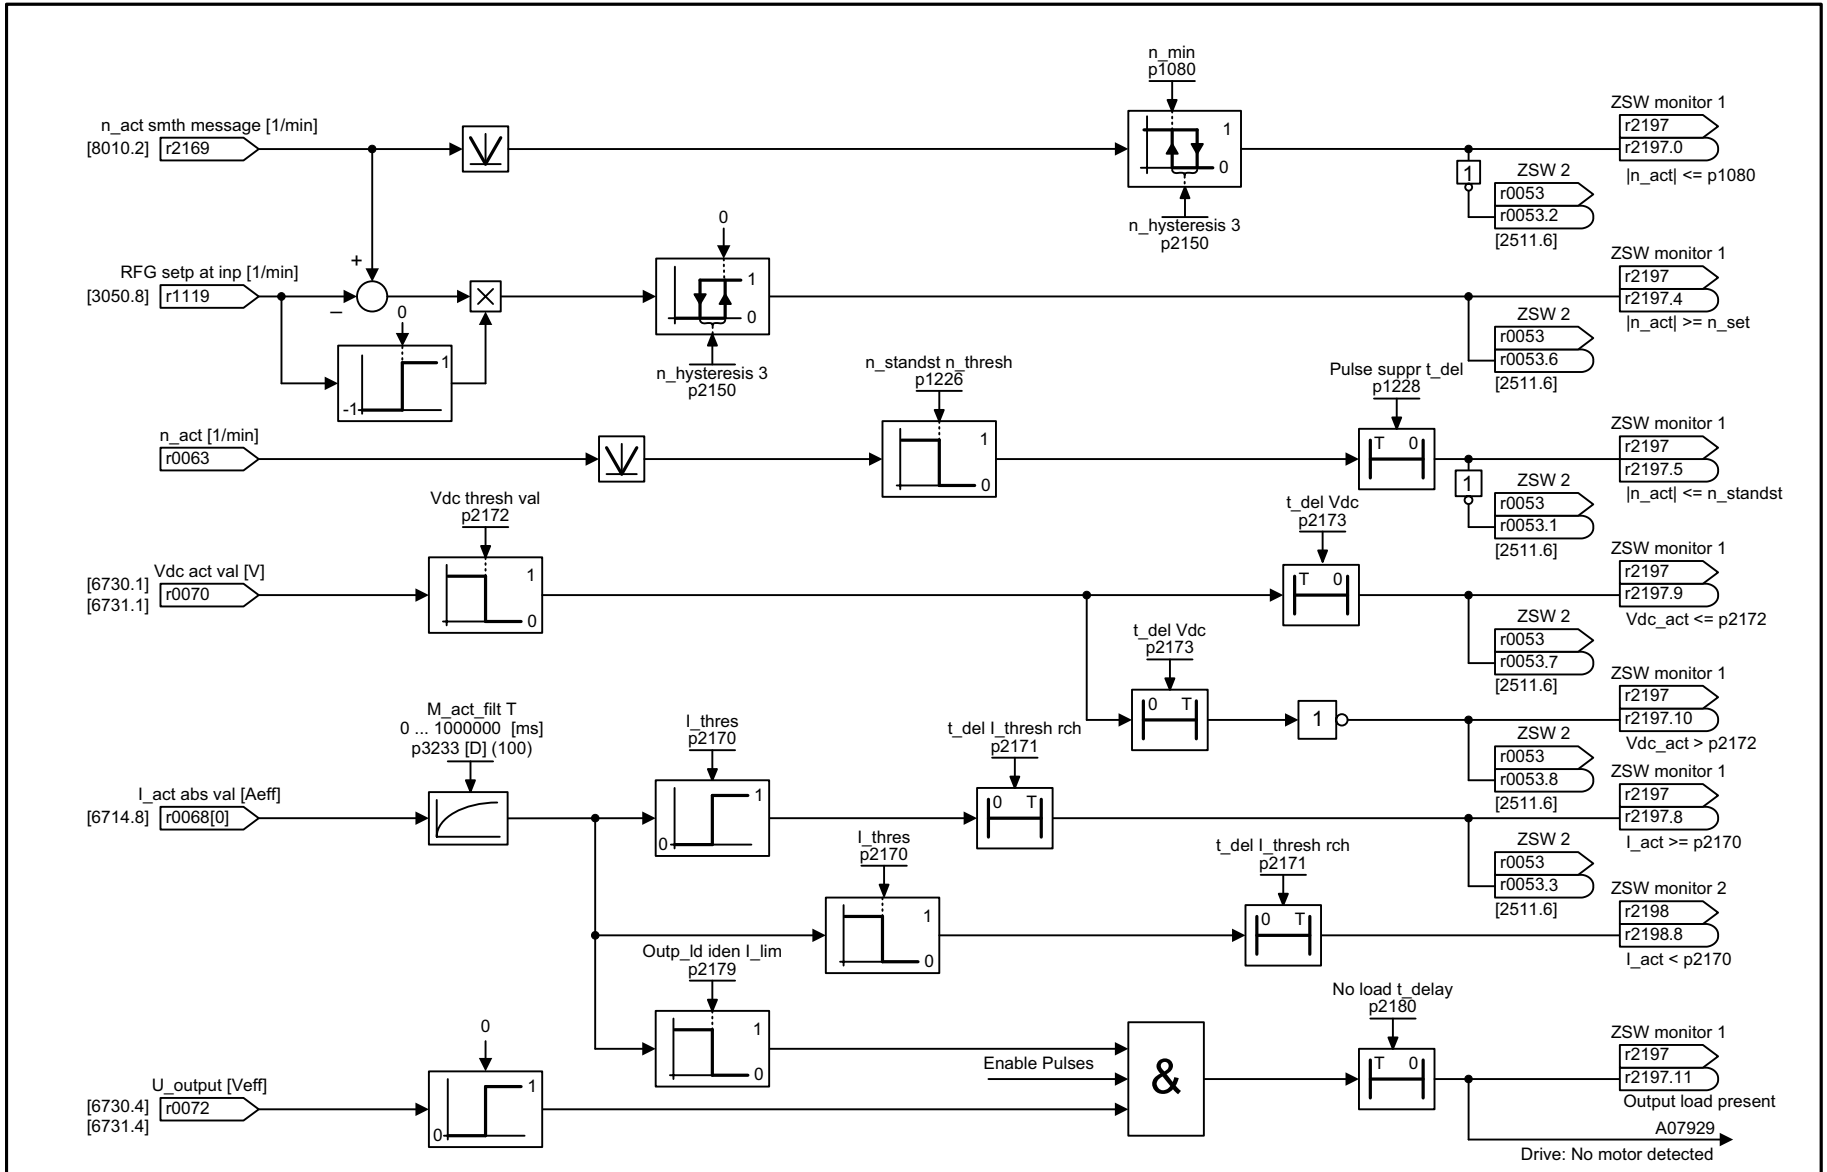

1	2	3	4	5	6	7	8
Signals and monitoring functions					fp_8020_97_57.vsd	Function diagram	
Monitoring functions 1					12.12.2012 V4.6	SINAMICS G120D	

- 8020 -

Fig. 2-156 8020 – Monitoring functions 1

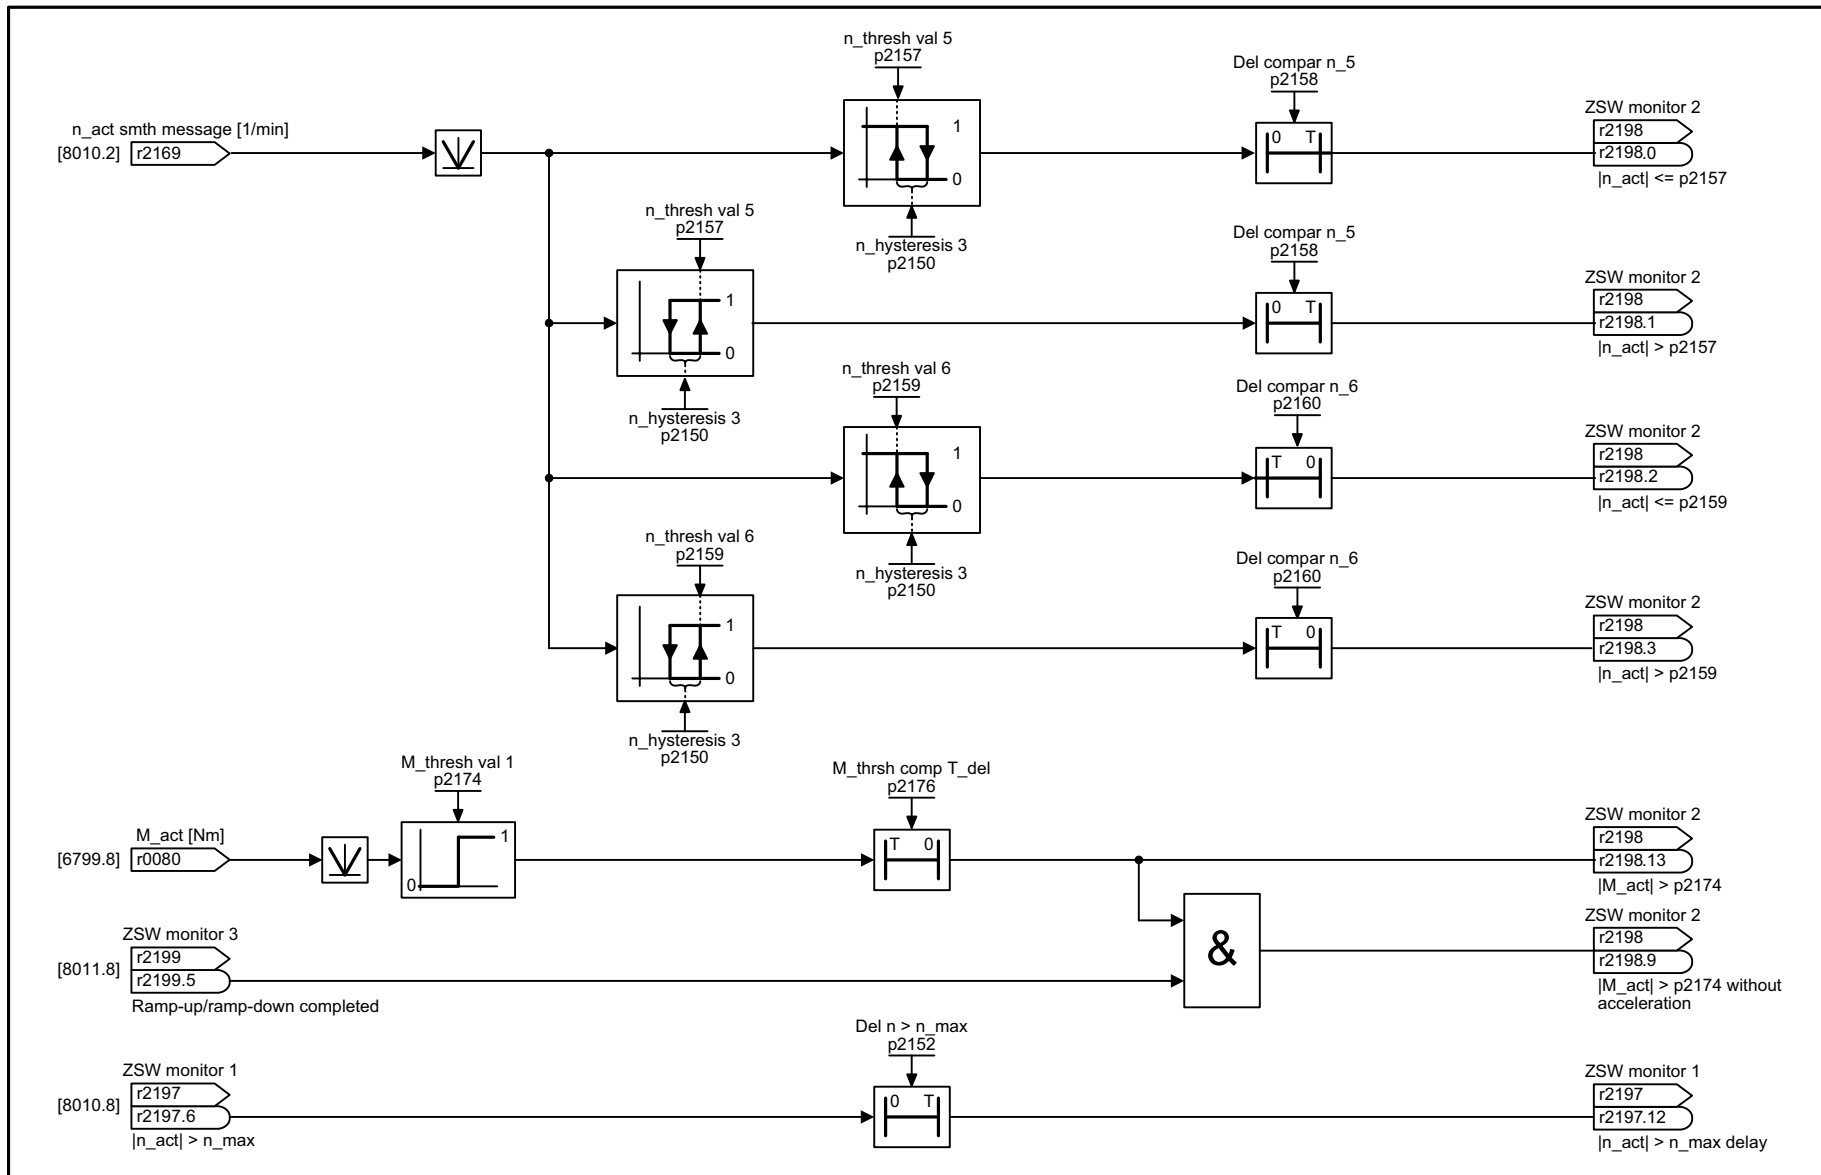

1	2	3	4	5	6	7	8
Signals and monitoring functions					fp_8021_97_53.vsd	Function diagram	
Monitoring functions 2					12.12.2012 V4.6	SINAMICS G120D	
- 8021 -							

Fig. 2-157 8021 – Monitoring functions 2

2.21 **Faults and alarms**

Function diagrams

8050 – Overview	2-756
8060 – Fault buffer	2-757
8065 – Alarm buffer	2-758
8070 – Fault/alarm trigger word (r2129)	2-759
8075 – Fault/alarm configuration	2-760


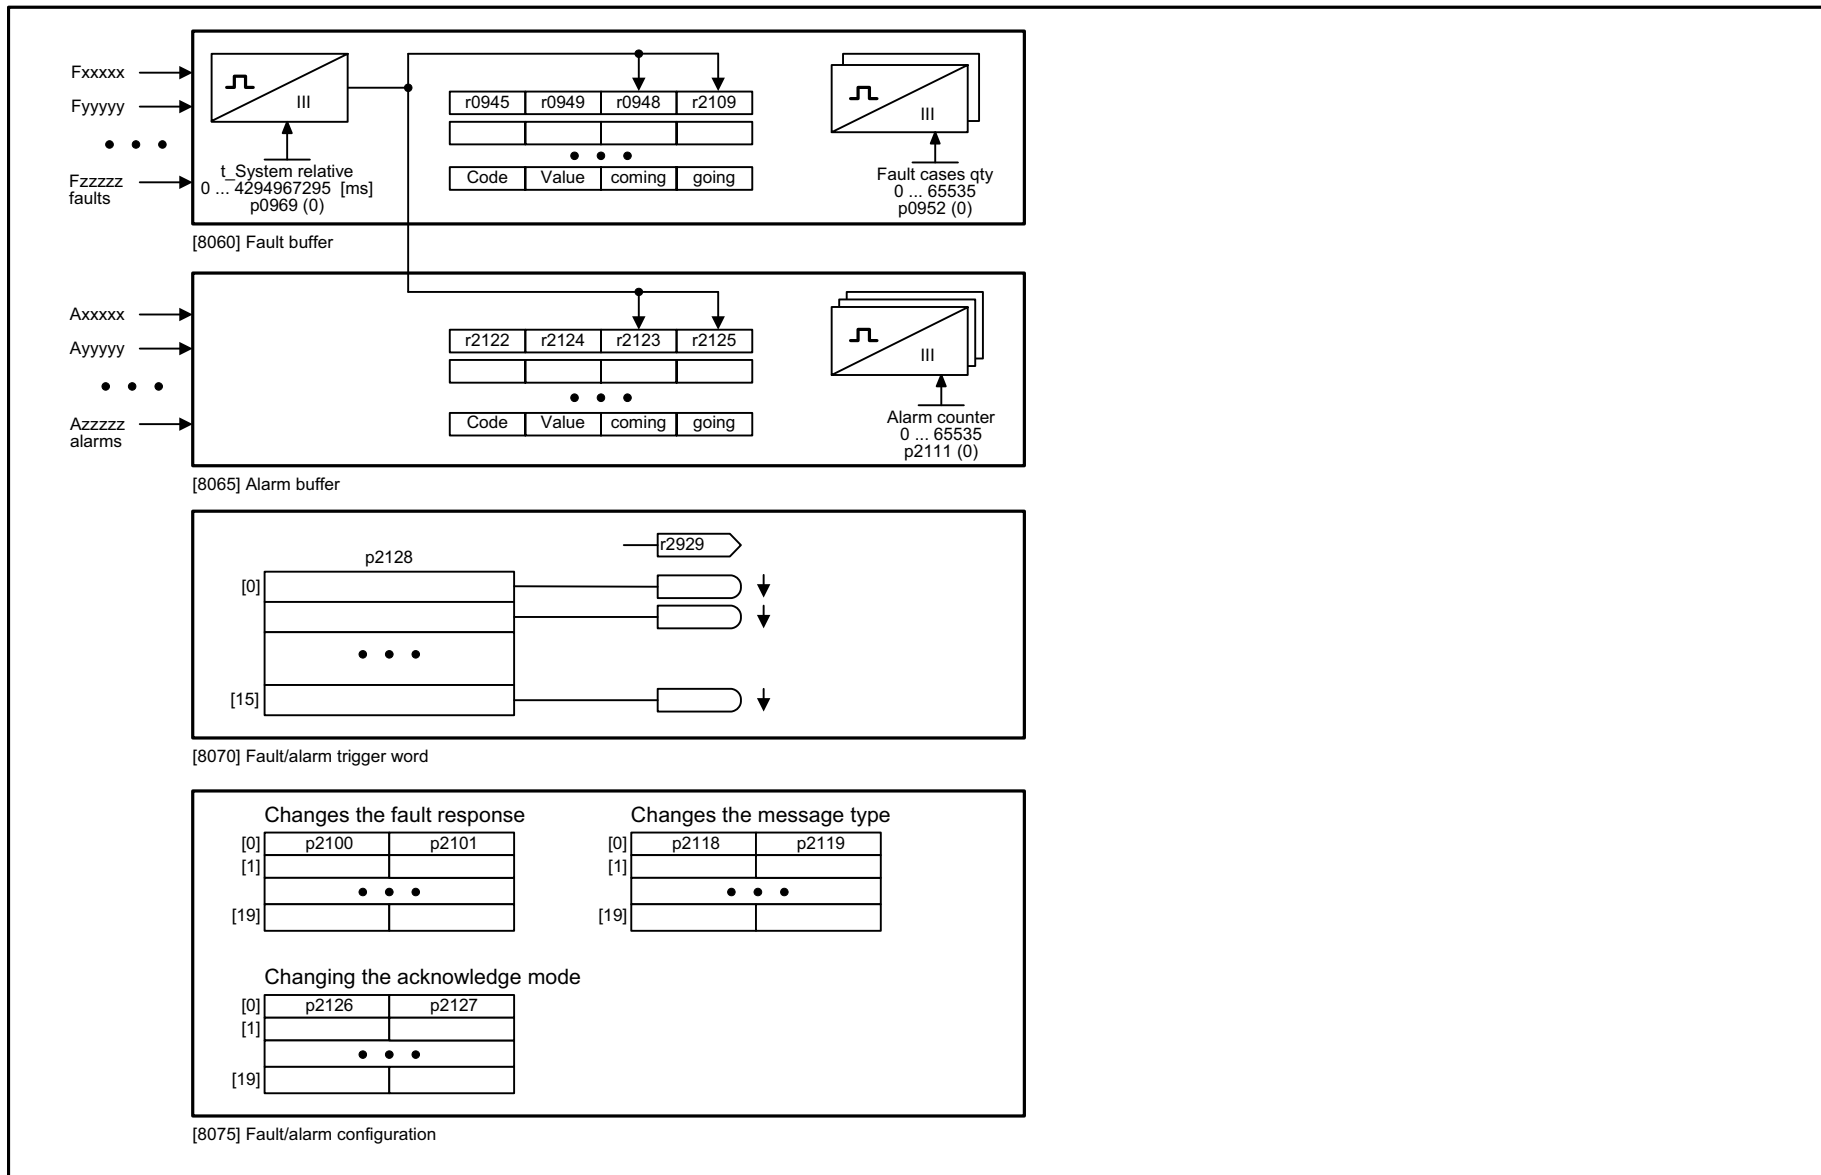



Fig. 2-158 8050 – Overview

1	2	3	4	5	6	7	8
Faults and warnings					fp_8050_97_51.vsd	Function diagram	
Overview					12.12.2012 V4.6	SINAMICS G120D	
							- 8050 -

Fig. 2-159 8060 – Fault buffer

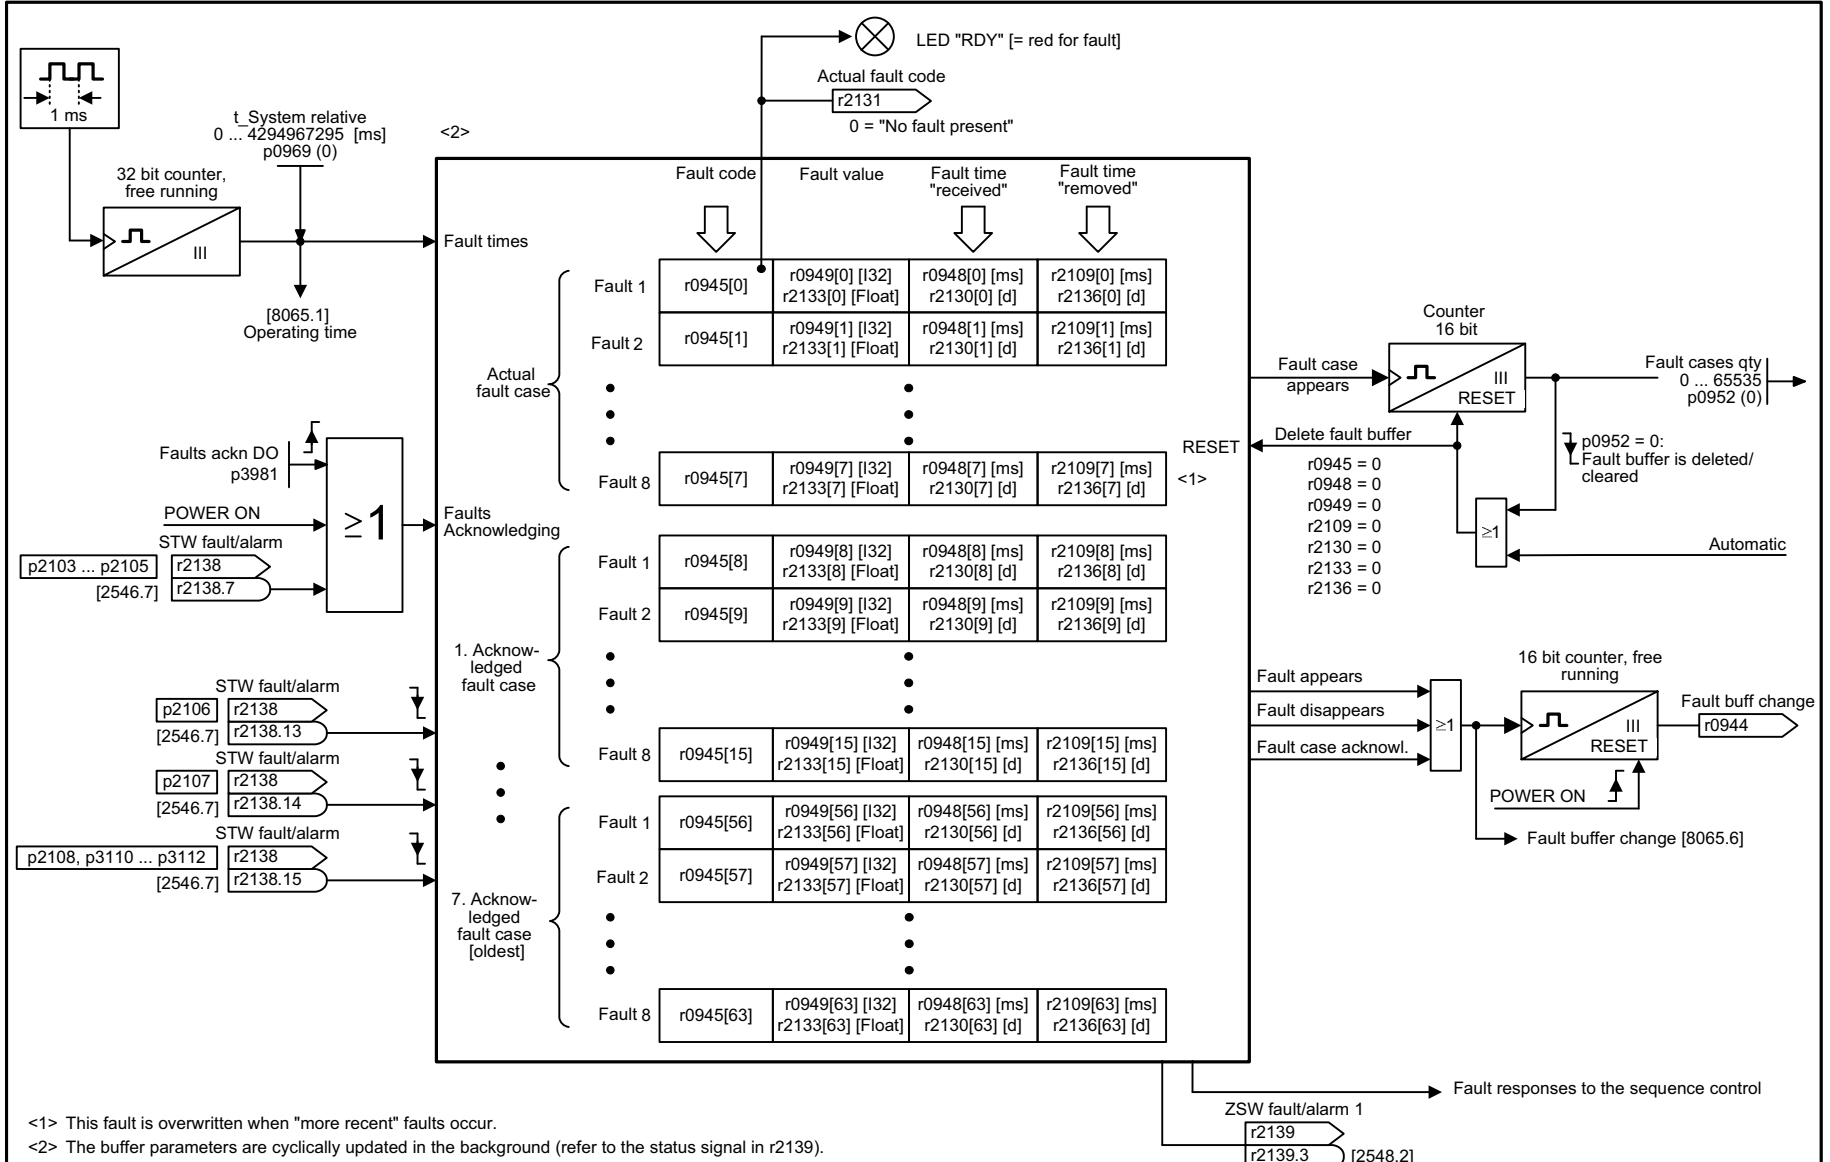

1	2	3	4	5	6	7	8
Faults and warnings					fp_8060_97_51.vsd	Function diagram	
Fault buffer					12.12.2012 V4.6	SINAMICS G120D	
- 8060 -							

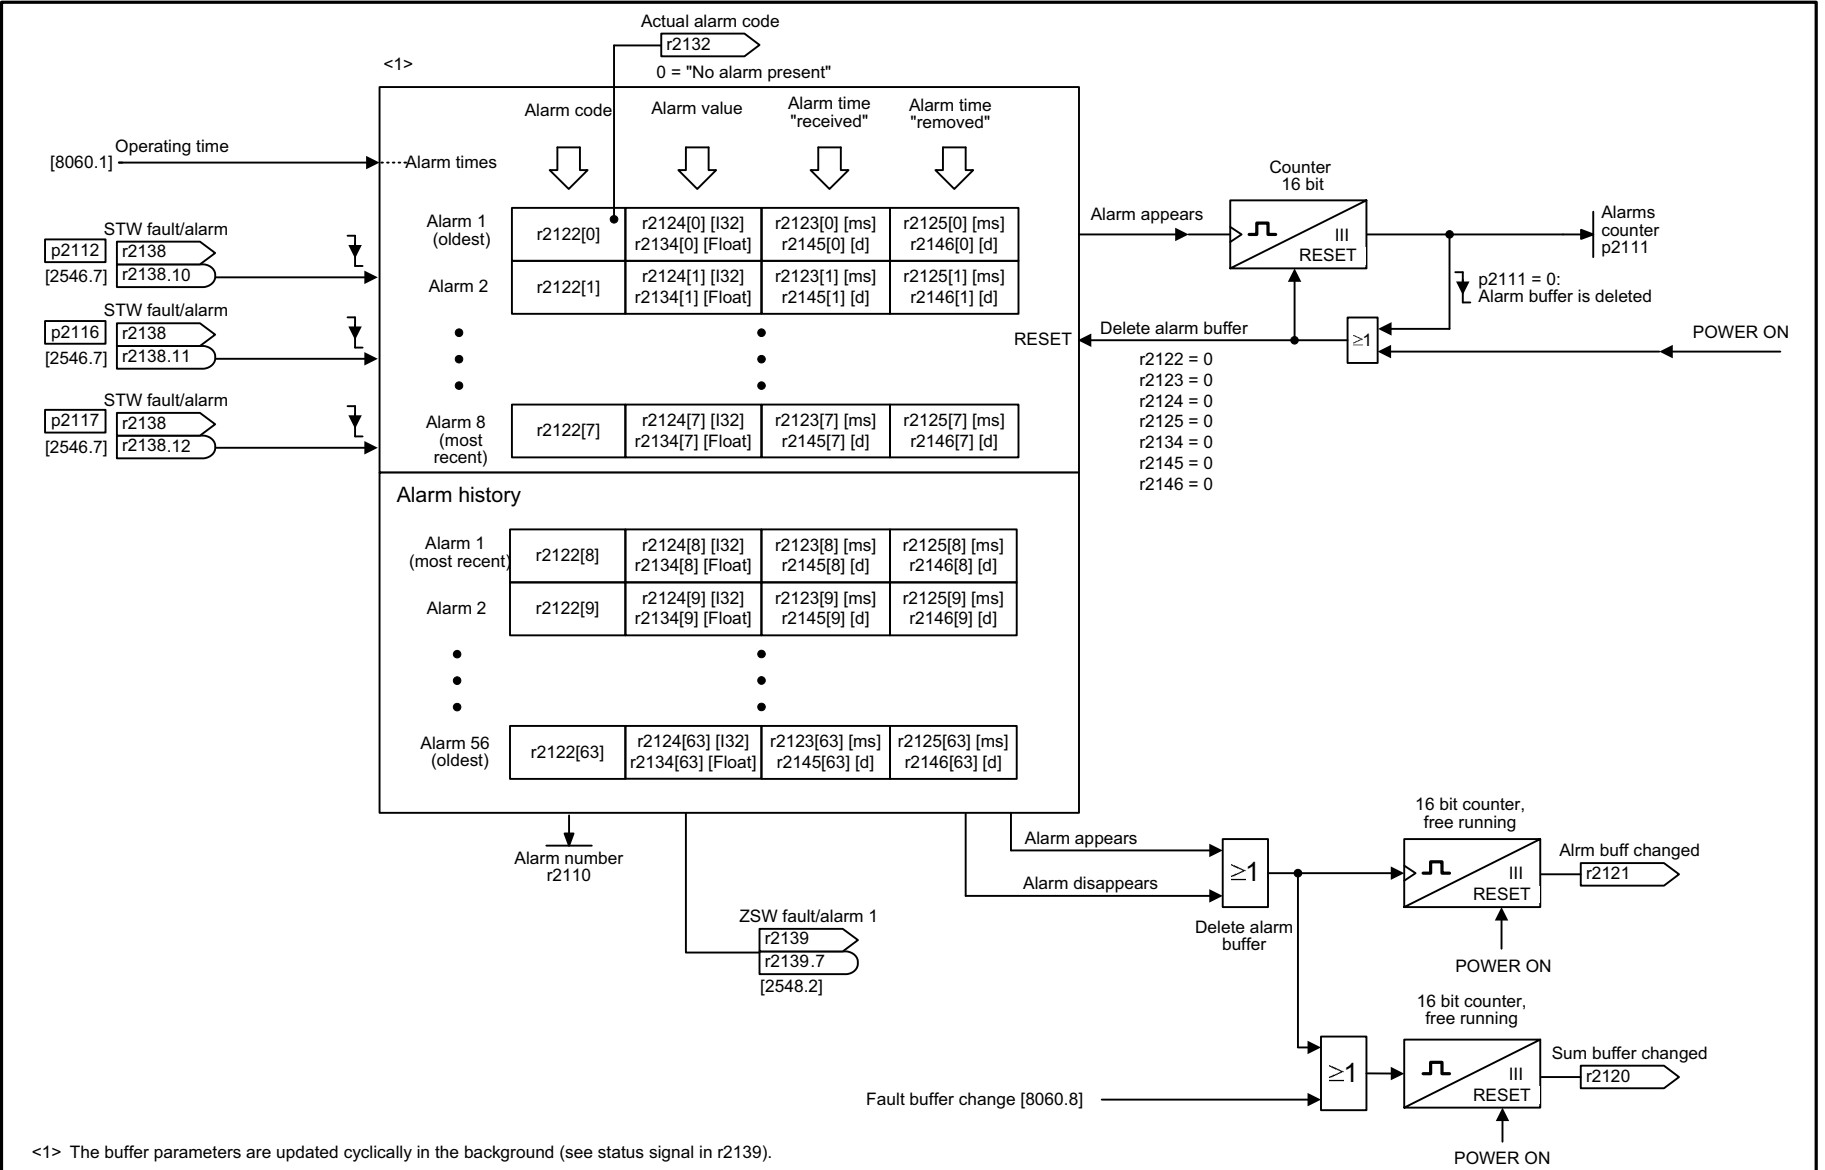

<1> The buffer parameters are updated cyclically in the background (see status signal in r2139).

1	2	3	4	5	6	7	8
Faults and warnings					fp_8065_97_51.vsd	Function diagram	
Warning buffer					12.12.2012 V4.6	SINAMICS G120D	
							- 8065 -

Fig. 2-160 8065 – Alarm buffer


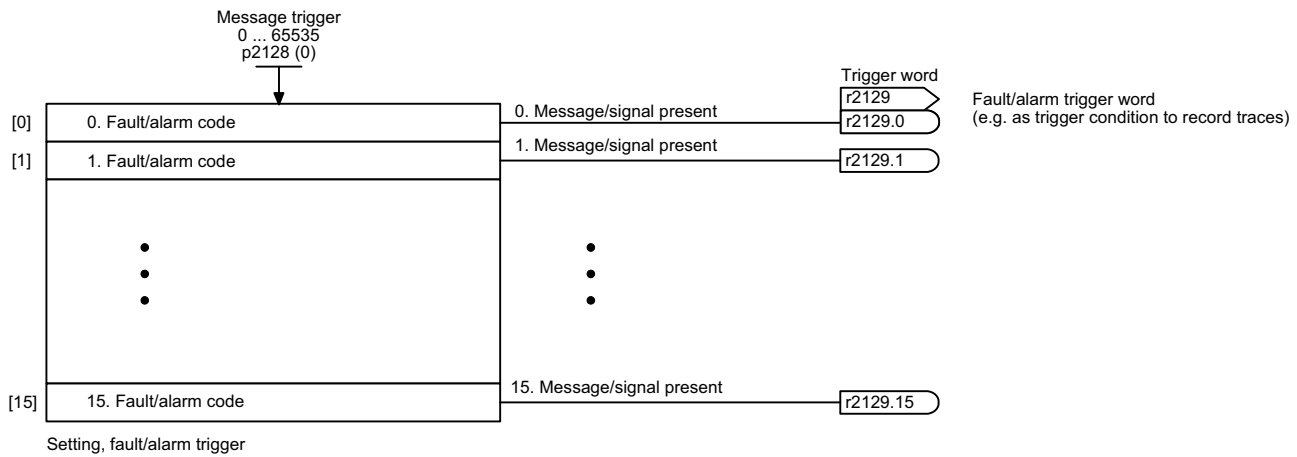



Fig. 2-161 8070 – Fault/alarm trigger word (r2129)

1	2	3	4	5	6	7	8
Faults and warnings					fp_8070_97_61.vsd	Function diagram	
Fault/warning trigger word (r2129)					12.12.2012 V4.6	SINAMICS G120D	
- 8070 -							


Changing the message type - fault <==> alarm for maximum 20 faults/alarms <1>

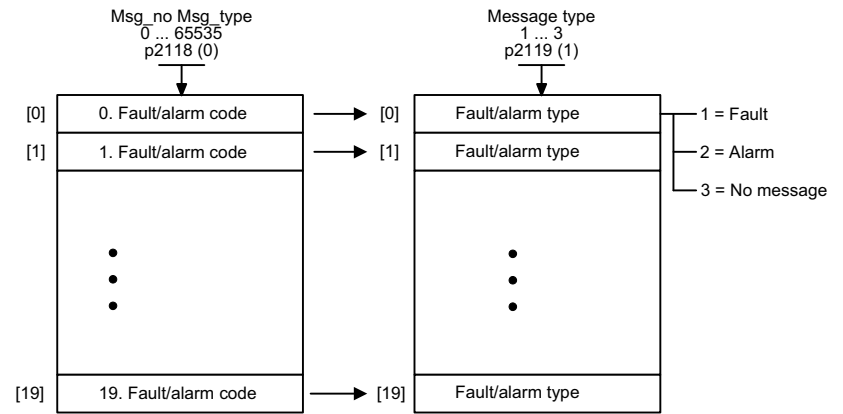

Changing the fault response for maximum 20 faults <1>

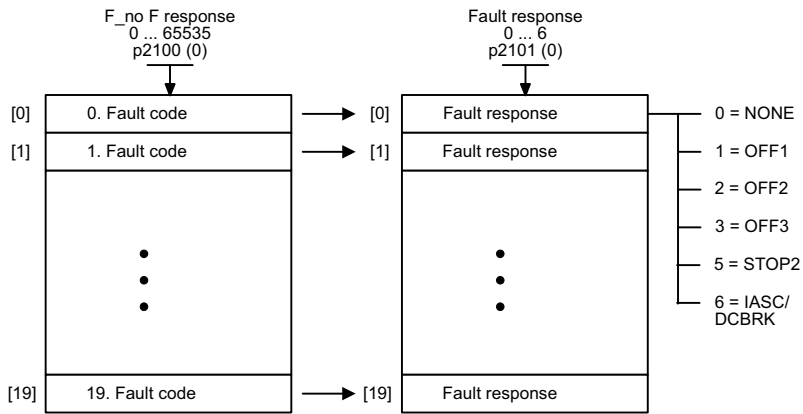

Changing the acknowledge mode for maximum 20 faults <1>

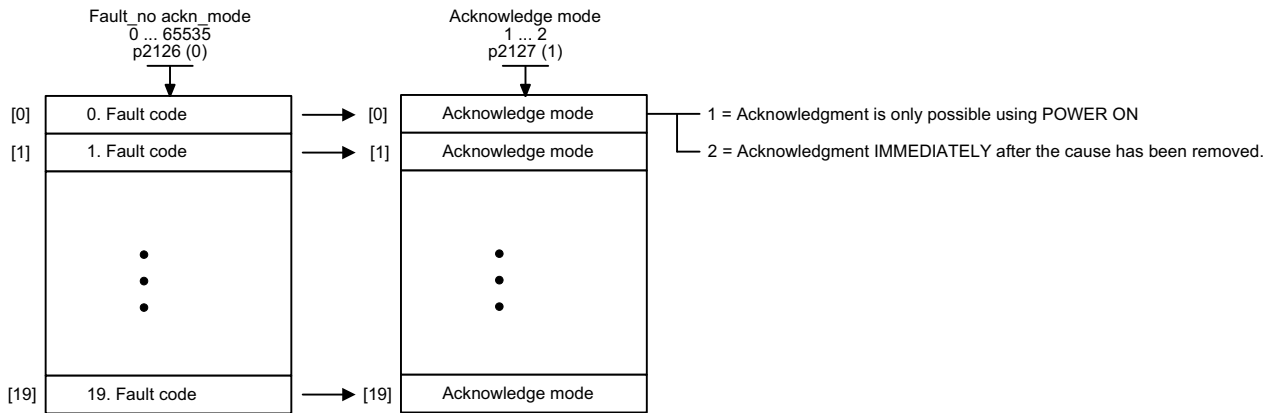

<1> The fault response, acknowledge mode and message type for all faults and alarms are set to meaningful default values in the factory setting. Changes are only possible in specific value ranges specified by SIEMENS. When the message type is changed, the supplementary information is transferred from fault value r0949 to alarm value r2124 and vice versa.

1	2	3	4	5	6	7	8
Faults and warnings					fp_8075_97_51.vsd	Function diagram	
Fault/warning configuration					12.12.2012 V4.6	SINAMICS G120D	
							- 8075 -


Fig. 2-162 8075 – Fault/alarm configuration

2.22 Data sets

Function diagrams

8550 – Overview	2-762
8560 – Command Data Sets (CDS)	2-763
8565 – Drive Data Sets (DDS)	2-764
8570 – Encoder Data Sets (EDS)	2-765

CDS - Command Data Sets

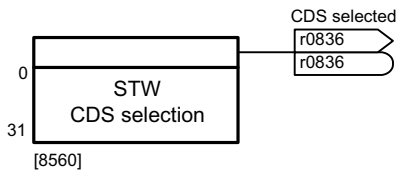

DDS - Drive Data Sets



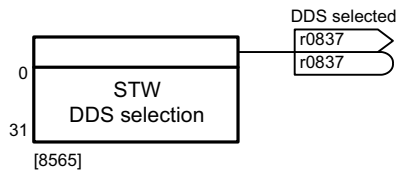


Fig. 2-163 8550 – Overview

1	2	3	4	5	6	7	8
Data sets					fp_8550_97_54.vsd	Function diagram	
Overview					12.12.2012 V4.6	SINAMICS G120D	
							- 8550 -

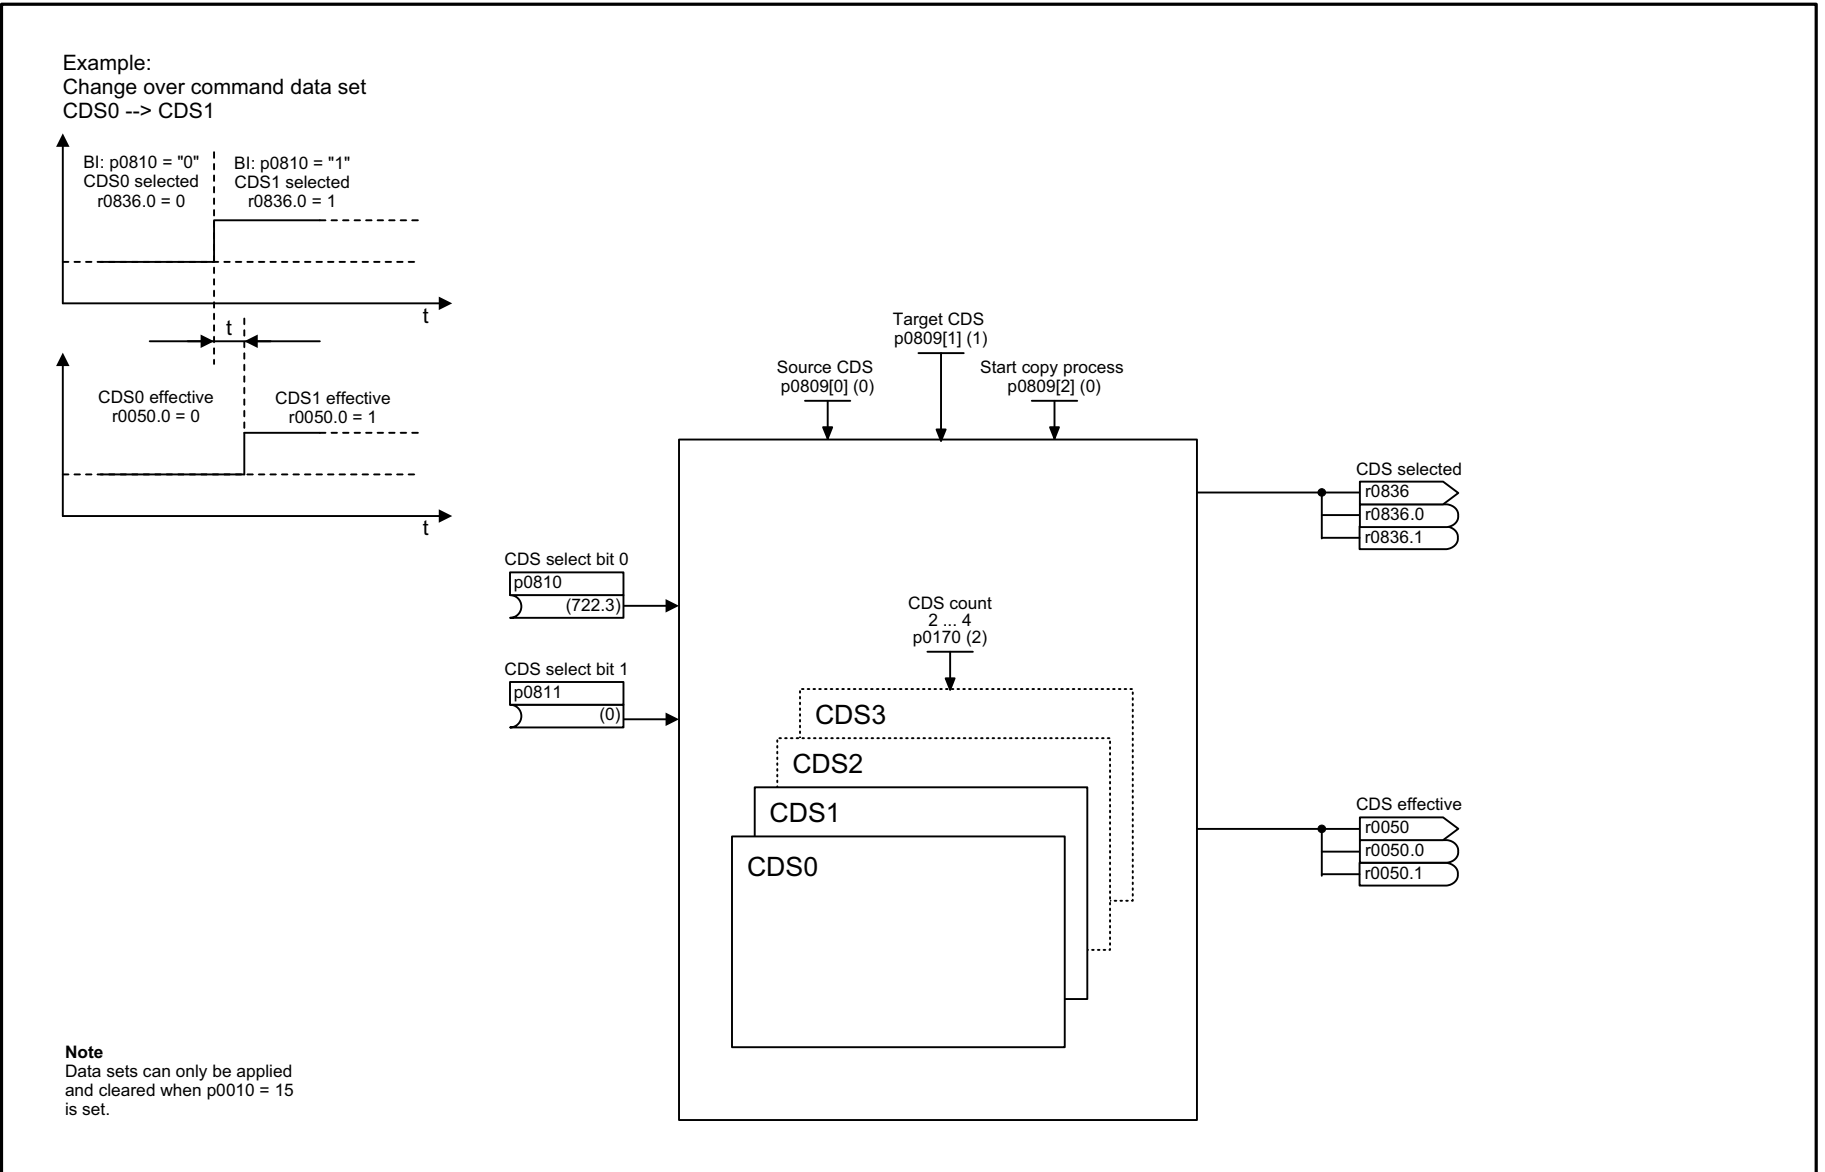

Example:
Change over command data set
CDS0 --> CDS1

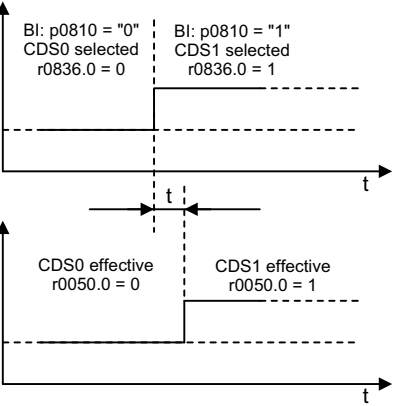

Note
Data sets can only be applied and cleared when p0010 = 15 is set.

Fig. 2-164 8560 – Command Data Sets (CDS)

1	2	3	4	5	6	7	8
Data sets					fp_8560_97_51.vsd	Function diagram	
Command Data Sets (CDS)					12.12.2012 V4.6	SINAMICS G120D	
							- 8560 -

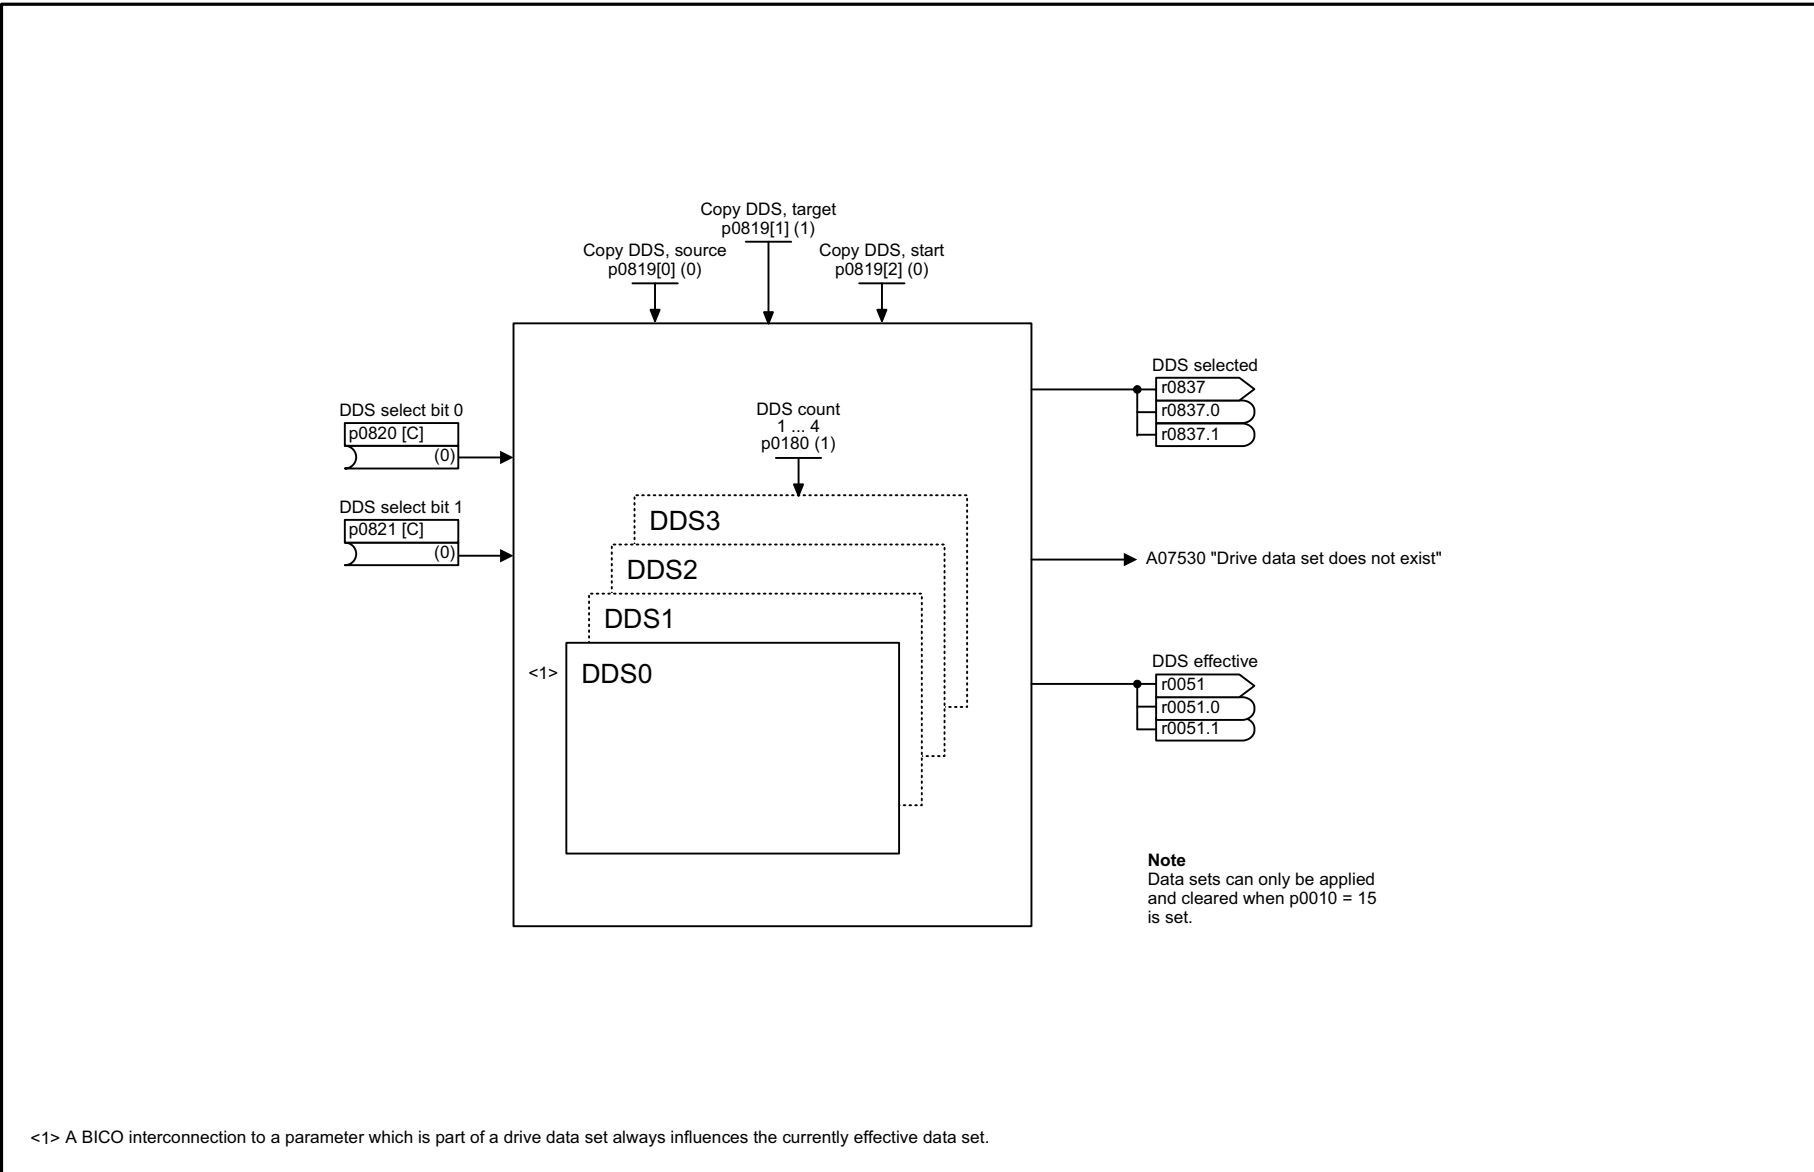


Fig. 2-165 8565 – Drive Data Sets (DDS)

2-764

1	2	3	4	5	6	7	8
Data sets					fp_8565_97_54.vsd	Function diagram	
Drive Data Sets (DDS)					12.12.2012 V4.6	SINAMICS G120D	
							- 8565 -

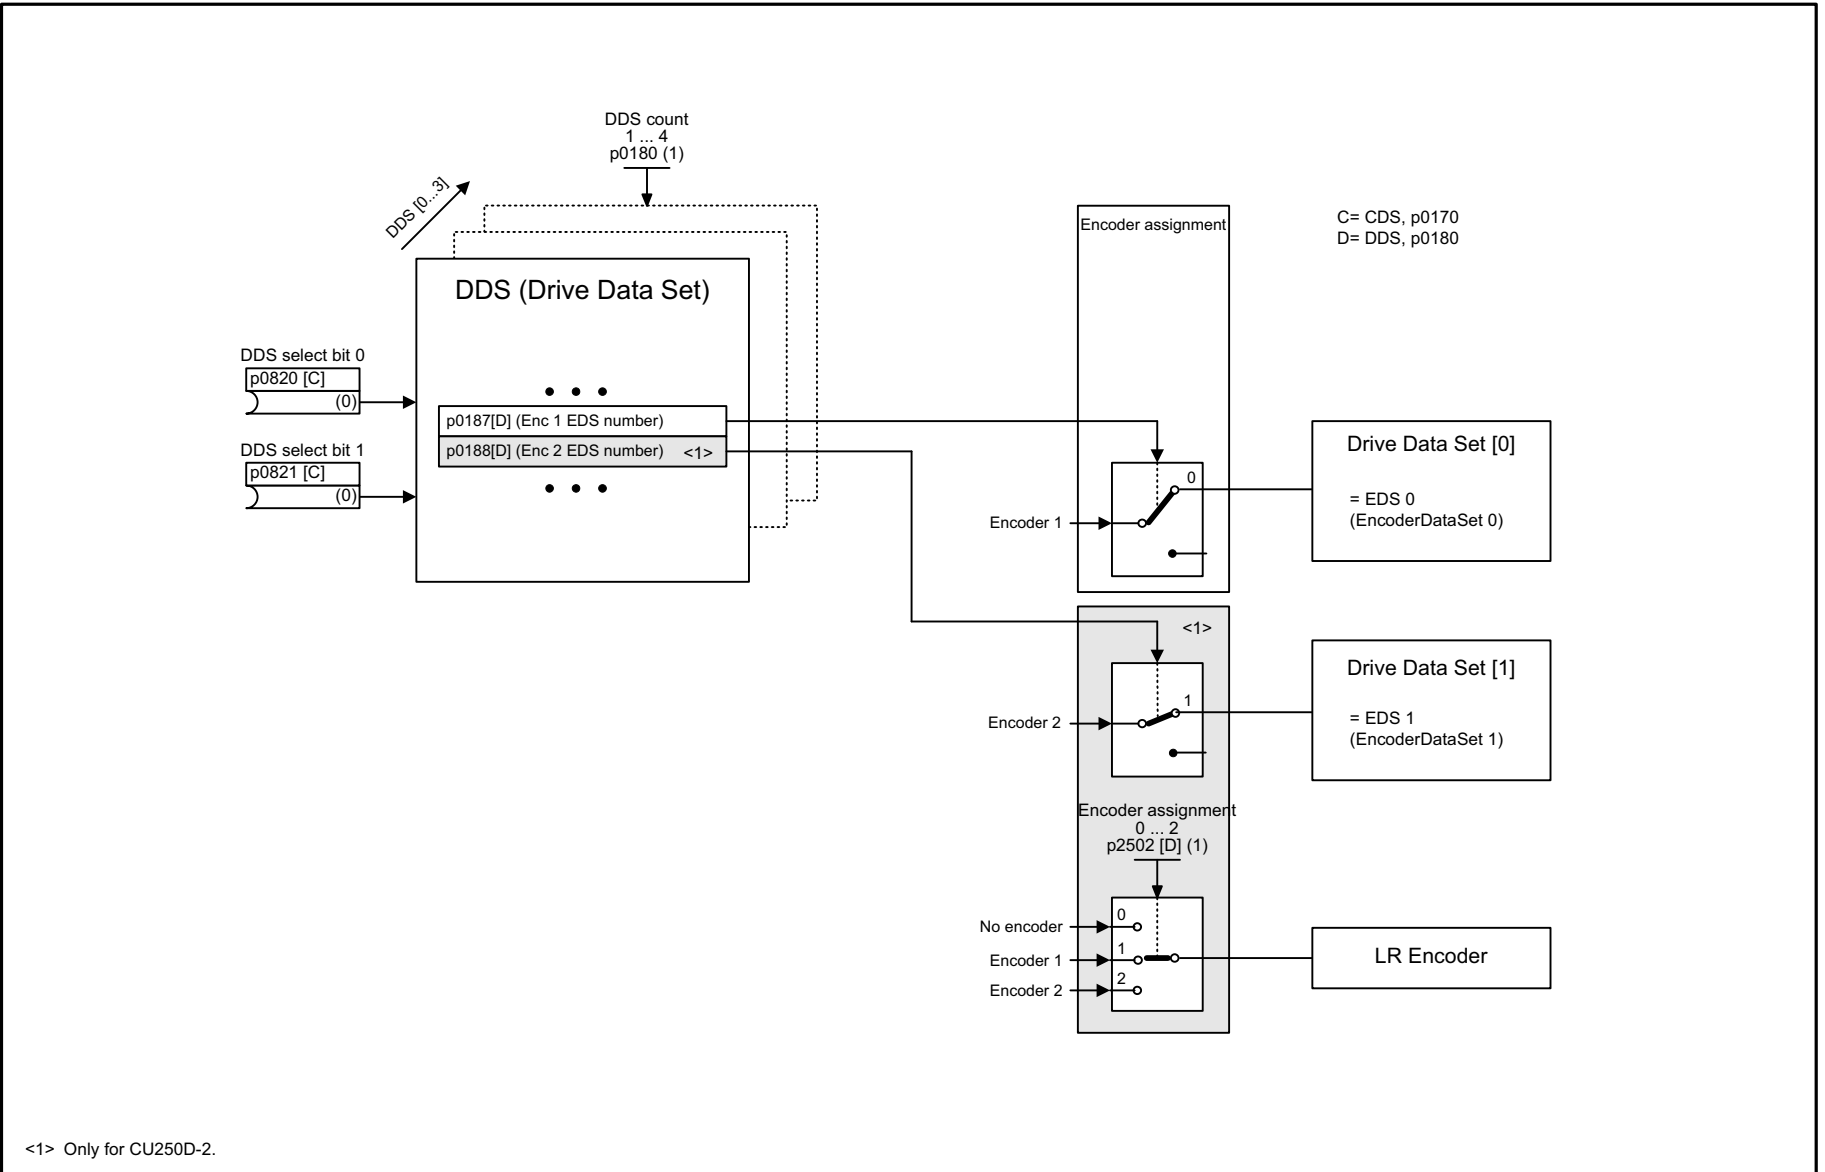


Fig. 2-166 8570 – Encoder Data Sets (EDS)

1	2	3	4	5	6	7	8
Data sets					fp_8570_97_04.vsd	Function diagram	
Encoder Data Sets (EDS)					12.12.2012 V4.6	SINAMICS G120D	
							- 8570 -

Faults and alarms

3

Contents

3.1	Overview of faults and alarms	3-768
3.2	List of faults and alarms	3-777

3.1 Overview of faults and alarms

3.1.1 General information

Display of faults/alarms (messages)

If a fault occurs, the drive indicates the corresponding fault(s) and/or alarm(s).

For example, the following methods for displaying faults and alarms are available:

- Display via the fault and alarm buffer with PROFIBUS/PROFINET
- Display online via the commissioning software
- Display and operating unit (e.g. BOP, AOP)

Differences between faults and alarms

The differences between faults and alarms are as follows:

Tabelle 3-1 Differences between faults and alarms

Type	Description
faults	<p>What happens when a fault occurs?</p> <ul style="list-style-type: none"> • The appropriate fault reaction is initiated. • Status signal ZSW1.3 is set. • The fault is entered in the fault buffer. <p>How are faults eliminated?</p> <ul style="list-style-type: none"> • Remove the original cause of the fault. • Acknowledge the fault.
Alarms	<p>What happens when an alarm occurs?</p> <ul style="list-style-type: none"> • Status signal ZSW1.7 is set. • The alarm is entered in the alarm buffer. <p>How are alarms eliminated?</p> <ul style="list-style-type: none"> • Alarms acknowledge themselves. If the cause of the alarm is no longer present, they automatically reset themselves.

Fault reactions

The following fault reactions are defined:

Table 3-2 Fault reactions

List	PROFI-drive	Response	Description
NONE	-	None	<p>No response when a fault occurs.</p> <p>Note: With the "Basic positioner" (r0108.4 = 1), the following applies: When a fault occurs with fault reaction "NONE", an active traversing task is interrupted and the system switches to tracking mode until the fault has been rectified and acknowledged.</p>
OFF1	ON/ OFF	Brake along the ramp-function generator down ramp followed by pulse inhibit	<p>Closed loop speed control (p1300 = 20, 21)</p> <ul style="list-style-type: none"> n_set = 0 is input immediately to brake the drive along the ramp-function generator deceleration ramp (p1121). When zero speed is detected, the motor holding brake (if parameterized) is closed (p1215). The pulses are suppressed when the brake application time (p1217) expires. <p>Zero speed is detected if the actual speed drops below the threshold (p1226) or if the monitoring time (p1227) started when the speed setpoint <= speed threshold (p1226) has expired.</p> <p>Torque control (p1300 = 22, 23)</p> <ul style="list-style-type: none"> The following applies for torque control: Reaction as for OFF2 When the system switches to torque control with p1501, the following applies: No separate braking reaction. If the actual speed value drops below the speed threshold (p1226) or the timer stage (p1227) has expired, the motor holding brake (if one is being used) is closed. The pulses are suppressed when the brake application time (p1217) expires.
OFF1_ DELAYED	-	As for OFF1, however delayed	<p>Faults with this fault response only become effective after the delay time in p3136 has expired.</p> <p>The remaining time up to OFF1 is displayed in r3137.</p>
OFF2	COAST STOP	Internal/external pulse inhibit	<p>Closed-loop speed and torque control</p> <ul style="list-style-type: none"> Instantaneous pulse suppression, the drive "coasts" to a standstill. The motor holding brake (if one is being used) is closed immediately. Switching on inhibited is activated.

Table 3-2 Fault reactions, continued

List	PROFI-drive	Response	Description
OFF3	QUICK STOP	Brake along the OFF3 down ramp followed by pulse inhibit	<p>Closed loop speed control (p1300 = 20, 21)</p> <ul style="list-style-type: none"> n_set = 0 is input immediately to brake the drive along the OFF3 down ramp (p1135). When zero speed is detected, the motor holding brake (if parameterized) is closed. The pulses are suppressed at the end of the holding brake closing time (p1217). Zero speed is detected if the actual speed drops below the threshold (p1226) or if the monitoring time (p1227) started when the speed setpoint <= speed threshold (p1226) has expired. Switching on inhibited is activated. <p>Torque control (p1300 = 22, 23)</p> <ul style="list-style-type: none"> Changeover to speed-controlled operation and other reactions as described for speed-controlled operation.
STOP1	-	-	Under development.
STOP2	-	n_set = 0	<ul style="list-style-type: none"> n_set = 0 is input immediately to brake the drive along the OFF3 down ramp (p1135). The drive remains in the closed-loop speed control mode.
IASC/ DCBRAKE	-	-	<ul style="list-style-type: none"> For synchronous motors, the following applies: If a fault occurs with this fault reaction, an internal armature short-circuit is triggered. The conditions for p1231 = 4 must be observed. For induction motors, the following applies: If a fault occurs with this fault reaction, DC braking is triggered. DC braking must have been commissioned (p1230 to p1239).
ENCODER	-	Internal/external pulse inhibit (p0491)	<p>The fault reaction ENCODER is applied as a function of the setting in p0491. Factory setting: p0491 = 0 --> Encoder fault causes OFF2</p> <p>Notice: When changing p0491, it is imperative that the information in the description of this parameter is carefully observed.</p>

Acknowledging faults

The list of faults and alarms specifies how to acknowledge each fault after the cause has been remedied.

Table 3-3 Acknowledging faults

Acknowledge-ment	Description
POWER ON	<p>The fault is acknowledged by a POWER ON process (switch drive unit off and on again).</p> <p>Note: If this action has not eliminated the fault cause, the fault is displayed again immediately after power-up.</p>
IMMEDIATELY	<p>Faults can be acknowledged on one drive object (Points 1 to 3) or on all drive objects (Point 4) as follows:</p> <p>1 Acknowledge by setting parameter: p3981 = 0 --> 1</p> <p>2 Acknowledge via binector inputs:</p> <p>p2103 BI: 1. Acknowledge faults p2104 BI: 2. Acknowledge faults p2105 BI: 3. Acknowledge faults</p> <p>3 Acknowledge using PROFIBUS control signal: STW1.7 = 0 --> 1 (edge)</p> <p>Note:</p> <ul style="list-style-type: none"> • These faults can also be acknowledged by a POWER ON operation. • If this action has not eliminated the fault cause, the fault will continue to be displayed after acknowledgment. • Safety Integrated faults The "Safe Torque Off" (STO) function must be deselected before these faults are acknowledged.
PULSE INHIBIT	<p>The fault can only be acknowledged with a pulse inhibit (r0899.11 = 0). The same possibilities are available for acknowledging as described under acknowledge IMMEDIATELY.</p>

3.1.2 Explanation of the list of faults and alarms

The data in the following example has been chosen at random. The information listed below is the maximum amount of information that a description can contain: Some of the information is optional.

The list of faults and alarms (See Chapter 3.2) is structured as follows:

----- **Start of example** -----

Axxxxx (F, N)	Fault location (optional): Name
Reaction:	NONE
Acknowledgment:	NONE
Cause:	Description of possible causes Fault value (r0949, interpret format): or alarm value (r2124, interpret format): (optional) Information about fault or alarm values (optional)
Remedy:	Description of possible remedies

----- **End of example** -----

Axxxxx	Alarm xxxxx
Axxxxx (F, N)	Alarm xxxxx (message type can be changed to F or N)
Fxxxxx	Fault xxxxx
Fxxxxx (A, N)	Fault xxxxx (report type can be changed to A or N)
Nxxxxx	No message
Nxxxxx (A)	No message (message type can be changed to A)
Cxxxxx	Safety message (separate message buffer)

A message comprises a letter followed by the relevant number.

The meaning of the letters is as follows:

- A means "Alarm".
- F means "Fault".
- N means "No message" or "Internal message".
- C means "Safety message"

The optional parentheses indicate whether the type specified for this message can be changed and which message types can be adjusted via parameters (p2118, p2119).

Information on reaction and acknowledgment is specified independently for a message with an adjustable message type (e.g. reaction to F, acknowledgement for F).

Note:

You can change the default properties of a fault or alarm by setting parameters.

References: /BA10/ SINAMICS G120 Operating Instructions
Frequency Converter with CU240D-2 Control Units,
Section "Alarms, faults, and system messages"

References: /BA11/ SINAMICS G120 Operating Instructions
Frequency Converter with CU250D-2 Control Units,
Section "Alarms, faults, and system messages"

The list of faults and alarms (see Chapter 3.2) provides information in relation to the properties of a message that have been set as standard. If the properties of a specific message are changed, the corresponding information may have to be modified in this list.

Fault location (optional): Name

The fault location (optional), the name of the fault or alarm and the message number are all used to identify the message (e.g. with the commissioning software).

Reaction: Default fault reaction (adjustable fault reaction)

Specifies the default reaction in the event of a fault.

The optional parentheses indicate whether the default fault reactions can be changed and which fault reactions can be adjusted via parameters (p2100, p2101).

Note:

See Table 3-2

Acknowledgment: Default acknowledgment (adjustable acknowledgment)

Specifies the default method of acknowledging faults after the cause has been eliminated.

The optional parentheses indicate whether the default acknowledgment can be changed and which acknowledgment can be adjusted via parameters (p2126, p2127).

Note:

See Table 3-3

Cause:

Describes the possible causes of the fault/alarm. A fault or alarm value can also be specified (optional).

Fault value (r0949, format):

The fault value is entered in the fault buffer in r0949[0...63] and specifies additional, more precise information about a fault.

Alarm value (r2124, format):

The alarm value specifies additional, more precise information about an alarm.

The alarm value is entered in the alarm buffer in r2124[0...7] and specifies additional, more precise information about an alarm.

Remedy:

Description of the methods available for eliminating the cause of the active fault/alarm



Warning

In certain cases, servicing and maintenance personnel are responsible for choosing a suitable method for eliminating the cause of faults.

3.1.3 Number ranges of faults and alarms

Note:

The following number ranges represent an overview of all faults and alarms used in the SINAMICS drive family.

The faults and alarms for the product described in this List Manual are described in detail in Chapter 3.2.

Faults and alarms are organized into the following number ranges:

Tabelle 3-4 Number ranges of faults and alarms

from	to	Range
1000	3999	Control Unit
4000	4999	Reserved
5000	5999	Power unit
6000	6899	Infeed
6900	6999	Braking Module
7000	7999	Drive
8000	8999	Option Board
9000	12999	Reserved
13000	13020	Licensing
13021	13099	Reserved
13100	13102	Know-how protection
13103	19999	Reserved
20000	29999	OEM
30000	30999	DRIVE-CLiQ component power unit
31000	31999	DRIVE-CLiQ component encoder 1
32000	32999	DRIVE-CLiQ component encoder 2 Note: Faults that occur are automatically output as an alarm if the encoder is parameterized as a direct measuring system and does not intervene in the motor control.
33000	33999	DRIVE-CLiQ component encoder 3 Note: Faults that occur are automatically output as an alarm if the encoder is parameterized as a direct measuring system and does not intervene in the motor control.
34000	34999	Voltage Sensing Module (VSM)
35000	35199	Terminal Module 54F (TM54F)

Tabelle 3-4 Number ranges of faults and alarms, continued

from	to	Range
35200	35999	Terminal Module 31 (TM31)
36000	36999	DRIVE-CLiQ Hub Module
37000	37999	HF Damping Module
40000	40999	Controller Extension 32 (CX32)
41000	48999	Reserved
49000	49999	SINAMICS GM/SM/GL
50000	50499	Communication Board (COMM BOARD)
50500	59999	OEM Siemens
60000	65535	SINAMICS DC MASTER (DC current control)

3.2 List of faults and alarms

Product: SINAMICS G120D, Version: 4601800, Language: eng
 Objects: CU240D-2_DP, CU240D-2_DP_F, CU240D-2_PN, CU240D-2_PN_F, CU250D-2_DP_F, CU250D-2_PN_F

F01000	Internal software error
Reaction:	OFF2
Acknowledge:	POWER ON
Cause:	An internal software error has occurred. Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.
Remedy:	<ul style="list-style-type: none"> - evaluate fault buffer (r0945). - carry out a POWER ON (power off/on) for all components. - if required, check the data on the non-volatile memory (e.g. memory card). - upgrade firmware to later version. - contact the Hotline. - replace the Control Unit.
F01001	FloatingPoint exception
Reaction:	OFF2
Acknowledge:	POWER ON
Cause:	An exception occurred during an operation with the FloatingPoint data type. The error may be caused by the basic system or an OA application (e.g., FBLOCKS, DCC). Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting. Note: Refer to r9999 for further information about this fault. r9999[0]: Fault number. r9999[1]: Program counter at the time when the exception occurred. r9999[2]: Cause of the FloatingPoint exception. Bit 0 = 1: Operation invalid Bit 1 = 1: Division by zero Bit 2 = 1: Overflow Bit 3 = 1: Underflow Bit 4 = 1: Inaccurate result
Remedy:	<ul style="list-style-type: none"> - carry out a POWER ON (power off/on) for all components. - check configuration and signals of the blocks in FBLOCKS. - check configuration and signals of DCC charts. - upgrade firmware to later version. - contact the Hotline.
F01002	Internal software error
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	An internal software error has occurred. Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.
Remedy:	<ul style="list-style-type: none"> - carry out a POWER ON (power off/on) for all components. - upgrade firmware to later version. - contact the Hotline.
F01003	Acknowledgement delay when accessing the memory
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	A memory area was accessed that does not return a "READY". Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.
Remedy:	<ul style="list-style-type: none"> - carry out a POWER ON (power off/on) for all components. - contact the Hotline.

N01004 (F, A)	Internal software error
Reaction:	NONE
Acknowledge:	NONE
Cause:	An internal software error has occurred. Fault value (r0949, hexadecimal): Only for internal Siemens troubleshooting.
Remedy:	- read out diagnostics parameter (r9999). - contact the Hotline. See also: r9999 (Software error internal supplementary diagnostics)
F01005	File upload/download error
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	The upload or download of EEPROM data was unsuccessful. Fault value (r0949, interpret hexadecimal): yyxxxx hex: yy = component number, xxxx = fault cause xxxx = 000B hex = 11 dec: Power unit component has detected a checksum error. xxxx = 000F hex = 15 dec: The selected power unit will not accept the content of the EEPROM file. xxxx = 0011 hex = 17 dec: Power unit component has detected an internal access error. xxxx = 0012 hex = 18 dec: After several communication attempts, no response from the power unit component. xxxx = 008B hex = 140 dec: EEPROM file for the power unit component not available on the memory card. xxxx = 008D hex = 141 dec: An inconsistent length of the firmware file was signaled. It is possible that the download/upload has been interrupted. xxxx = 0090 hex = 144 dec: When checking the file that was loaded, the component detected a fault (checksum). It is possible that the file on the memory card is defective. xxxx = 0092 hex = 146 dec: This SW or HW does not support the selected function. xxxx = 009C hex = 156 dec: Component with the specified component number is not available (p7828). xxxx = Additional values: Only for internal Siemens troubleshooting.
Remedy:	Save a suitable firmware file or EEPROM file for upload or download in folder "/ee_sac/" on the memory card.
A01009 (N)	CU: Control module overtemperature
Reaction:	NONE
Acknowledge:	NONE
Cause:	The temperature (r0037[0]) of the control module (Control Unit) has exceeded the specified limit value.
Remedy:	- check the air intake for the Control Unit. - check the Control Unit fan. Note: The alarm automatically disappears after the limit value has been undershot.
F01010	Drive type unknown
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	An unknown drive type was found.
Remedy:	- replace Power Module. - carry out a POWER ON (power off/on). - upgrade firmware to later version. - contact the Hotline.

F01015	Internal software error
Reaction:	OFF2
Acknowledge:	POWER ON
Cause:	An internal software error has occurred. Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.
Remedy:	- carry out a POWER ON (power off/on) for all components. - upgrade firmware to later version. - contact the Hotline.

A01016 (F)	Firmware changed
Reaction:	NONE
Acknowledge:	NONE
Cause:	At least one firmware file in the directory was illegally changed on the non-volatile memory (memory card/device memory) with respect to the version when shipped from the factory. Alarm value (r2124, interpret decimal): 0: Checksum of one file is incorrect. 1: File missing. 2: Too many files. 3: Incorrect firmware version. 4: Incorrect checksum of the back-up file.
Remedy:	For the non-volatile memory for the firmware (memory card/device memory), restore the delivery condition. Note: The file involved can be read out using parameter r9925. The status of the firmware check is displayed using r9926. See also: r9925 (Firmware file incorrect), r9926 (Firmware check status)

A01017	Component lists changed
Reaction:	NONE
Acknowledge:	NONE
Cause:	On the memory card, one file in the directory /SIEMENS/SINAMICS/DATA or /ADDON/SINAMICS/DATA has been illegally changed with respect to that supplied from the factory. No changes are permitted in this directory. Alarm value (r2124, interpret decimal): zyx dec: x = Problem, y = Directory, x = File name x = 1: File does not exist. x = 2: Firmware version of the file does not match the software version. x = 3: File checksum is incorrect. y = 0: Directory /SIEMENS/SINAMICS/DATA/ y = 1: Directory /ADDON/SINAMICS/DATA/ z = 0: File MOTARM.ACX z = 1: File MOTSRM.ACX z = 2: File MOTSLM.ACX z = 3: File ENCDATA.ACX z = 4: File FILTDATA.ACX z = 5: File BRKDATA.ACX z = 6: File DAT_BEAR.ACX z = 7: File CFG_BEAR.ACX
Remedy:	For the file on the memory card involved, restore the status originally supplied from the factory.

F01018	Bootling has been interrupted several times
Reaction:	NONE
Acknowledge:	POWER ON
Cause:	Module bootling was interrupted several times. As a consequence, the module boots with the factory setting. Possible reasons for bootling being interrupted: - power supply interrupted. - CPU crashed. - parameterization invalid.

List of faults and alarms

Remedy:

- carry out a POWER ON (power off/on). After switching on, the module reboots from the valid parameterization (if available).
- restore the valid parameterization.

Examples:

- a) Carry out a first commissioning, save, carry out a POWER ON (switch-off/switch-on).
- b) Load another valid parameter backup (e.g. from the memory card), save, carry out a POWER ON (switch-off/switch-on).

Note:

If the fault situation is repeated, then this fault is again output after several interrupted boots.

A01019 Writing to the removable data medium unsuccessful

Reaction: NONE
Acknowledge: NONE
Cause: The write access to the removable data medium was unsuccessful.
Remedy: Remove and check the removable data medium. Then run the data backup again.

A01020 Writing to RAM disk unsuccessful

Reaction: NONE
Acknowledge: NONE
Cause: A write access to the internal RAM disk was unsuccessful.
Remedy: Adapt the file size for the system logbook to the internal RAM disk (p9930).
 See also: p9930 (System logbook activation)

A01021 Removable data medium as USB data storage medium from the PC used

Reaction: NONE
Acknowledge: NONE
Cause: The removable data medium is used as USB data storage medium from a PC
 As a consequence, the drive cannot access the removable data medium. When backing up, the configuration data cannot be saved on the removable data medium.
 Fault value (r0949, interpret decimal):
 1: The know-how protection as well as the copy protection for the removable data medium is active. Backup is inhibited.
 2: The configuration data are only backed up in the Control Unit.
 See also: r7760 (Write protection/know-how protection status), r9401 (Safely remove memory card status)
Remedy: Deactivate the USB connection to the PC and back up the configuration data.
 Note:
 The alarm is automatically canceled when disconnecting the USB connection or when removing the removable data medium.
 See also: r9401 (Safely remove memory card status)

F01023 Software timeout (internal)

Reaction: NONE
Acknowledge: IMMEDIATELY
Cause: An internal software timeout has occurred.
 Fault value (r0949, interpret decimal):
 Only for internal Siemens troubleshooting.
Remedy:

- carry out a POWER ON (power off/on) for all components.
- upgrade firmware to later version.
- contact the Hotline.

A01028 Configuration error

Reaction: NONE
Acknowledge: NONE
Cause: The parameterization that was downloaded was generated with a different module type (Order No., MLFB).
Remedy: Save parameters in a non-volatile fashion (p0971 = 1).

F01030 Sign-of-life failure for master control

Reaction: OFF3 (IASC/DCBRK, NONE, OFF1, OFF2, STOP2)

Acknowledge: IMMEDIATELY

Cause: For active PC master control, no sign-of-life was received within the monitoring time.
The master control was returned to the active BICO interconnection.

Remedy: Set the monitoring time higher at the PC or, if required, completely disable the monitoring function.
For the commissioning software, the monitoring time is set as follows:
<Drive> -> Commissioning -> Control panel -> Button "Fetch master control" -> A window is displayed to set the monitoring time in milliseconds.
Notice:
The monitoring time should be set as short as possible. A long monitoring time means a late response when the communication fails!

F01033 Units changeover: Reference parameter value invalid

Reaction: NONE

Acknowledge: IMMEDIATELY

Cause: When changing over the units to the referred representation type, it is not permissible for any of the required reference parameters to be equal to 0.0
Fault value (r0949, parameter):
Reference parameter whose value is 0.0.
See also: p0505 (Selecting the system of units), p0595 (Technological unit selection)

Remedy: Set the value of the reference parameter to a number different than 0.0.
See also: p0304, p0305, p0310, p0596, p2000, p2001, p2002, p2003, r2004

F01034 Units changeover: Calculation parameter values after reference value change unsuccessful

Reaction: NONE

Acknowledge: IMMEDIATELY

Cause: The change of a reference parameter meant that for an involved parameter the selected value was not able to be re-calculated in the per unit representation. The change was rejected and the original parameter value restored.
Fault value (r0949, parameter):
Parameter whose value was not able to be re-calculated.
See also: p0304, p0305, p0310, p0596, p2000, p2001, p2002, p2003, r2004

Remedy: Select the value of the reference parameter such that the parameter involved can be calculated in the per unit representation.
See also: p0304, p0305, p0310, p0596, p2000, p2001, p2002, p2003, r2004

A01035 (F) ACX: Parameter back-up file corrupted

Reaction: NONE

Acknowledge: NONE

Cause: When the Control Unit is booted, no complete data set was found from the parameter back-up files. The last time that the parameterization was saved, it was not completely carried out.
It is possible that the backup was interrupted by switching off or withdrawing the memory card.
Alarm value (r2124, interpret hexadecimal):
ddccbbaa hex:
aa = 01 hex:
Power up was realized without data backup. The drive is in the factory setting.
aa = 02 hex:
The last available internal backup data record was loaded. The parameterization must be checked. It is recommended that the parameterization is downloaded again.
aa = 03 hex:
The last available data record from the memory card was loaded. The parameterization must be checked.
aa = 04 hex:
An invalid data backup was loaded from the memory card into the drive. The drive is in the factory setting.
dd, cc, bb:
Only for internal Siemens troubleshooting.
See also: p0971 (Save parameters)

Remedy: - Download the project again with the commissioning software.
- save all parameters (p0971 = 1 or "copy RAM to ROM").

F01036 (A)	ACX: Parameter back-up file missing
Reaction:	NONE (OFF1, OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	<p>When downloading the device parameterization, a parameter back-up file PSxxxxxy.ACX associated with a drive object cannot be found.</p> <p>Fault value (r0949, interpret hexadecimal): Byte 1: yyy in the file name PSxxxxxy.ACX yyy = 000 --> consistency back-up file yyy = 001 ... 062 --> drive object number yyy = 099 --> PROFIBUS parameter back-up file Byte 2, 3, 4: Only for internal Siemens troubleshooting.</p>
Remedy:	<p>If you have saved the project data using the commissioning software, carry out a new download for your project. Save using the function "Copy RAM to ROM" or with P0971 = 1 This means that the parameter files are again completely written into the non-volatile memory.</p> <p>Note: If the project data have not been backed up, then a new first commissioning is required.</p>
F01038 (A)	ACX: Loading the parameter back-up file unsuccessful
Reaction:	NONE (OFF1, OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	<p>An error has occurred when downloading PSxxxxxy.ACX or PTxxxxxy.ACX files from the non-volatile memory.</p> <p>Fault value (r0949, interpret hexadecimal): Byte 1: yyy in the file name PSxxxxxy.ACX yyy = 000 --> consistency back-up file yyy = 001 ... 062 --> drive object number yyy = 099 --> PROFIBUS parameter back-up file Byte 2: 255: Incorrect drive object type. 254: Topology comparison unsuccessful -> drive object type was not able to be identified. Reasons could be: - Incorrect component type in the actual topology - Component does not exist in the actual topology. - Component not active. Additional values: Only for internal Siemens troubleshooting. Byte 4, 3: Only for internal Siemens troubleshooting.</p>
Remedy:	<p>- If you have saved the project data using the commissioning software, download the project again. Save using the function "Copy RAM to ROM" or with p0971 = 1 so that all of the parameter files are again completely written to the non-volatile memory. - replace the memory card or Control Unit.</p>
F01039 (A)	ACX: Writing to the parameter back-up file was unsuccessful
Reaction:	NONE (OFF1, OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	<p>Writing to at least one parameter back-up file PSxxxxyy.** in the non-volatile memory was unsuccessful.</p> <ul style="list-style-type: none"> - In the directory /USER/SINAMICS/DATA/ at least one parameter back-up file PSxxxxyy.** has the "read only" file attribute and cannot be overwritten. - There is not sufficient free memory space available. - The non-volatile memory is defective and cannot be written to. <p>Fault value (r0949, interpret hexadecimal): dcba hex a = yyy in the file names PSxxxxyy.** a = 000 --> consistency back-up file a = 001 ... 062 --> drive object number a = 099 --> PROFIBUS parameter back-up file b = xxx in the file names PSxxxxyy.** b = 000 --> data save started with p0971 = 1 b = 010 --> data save started with p0971 = 10</p>

b = 011 --> data save started with p0971 = 11
 b = 012 --> data save started with p0971 = 12
 d, c:

Only for internal Siemens troubleshooting.

- Remedy:**
- check the file attribute of the files (PSxxxxyy.***, CAxxxxyy.***, CCxxxxyy.***) and, if required, change from "read only" to "writeable".
 - check the free memory space in the non-volatile memory. Approx. 80 kbyte of free memory space is required for every drive object in the system.
 - replace the memory card or Control Unit.

F01040 Save parameter settings and carry out a POWER ON

Reaction: OFF2

Acknowledge: POWER ON

Cause: A parameter has been changed that requires the parameters to be backed up and the Control Unit to be switched OFF and ON again.

- Remedy:**
- Save parameters (p0971).
 - carry out a POWER ON (power off/on) for the Control Unit.

F01042 Parameter error during project download

Reaction: OFF2 (NONE, OFF1, OFF3)

Acknowledge: IMMEDIATELY

Cause: An error was detected when downloading a project using the commissioning software (e.g. incorrect parameter value).
 For the specified parameter, it was detected that dynamic limits were exceeded that may possibly depend on other parameters.

Fault value (r0949, interpret hexadecimal):

ccbbaaaa hex

aaaa = Parameter

bb = Index

cc = fault cause

0: Parameter number illegal.

1: Parameter value cannot be changed.

2: Lower or upper value limit exceeded.

3: Sub-index incorrect.

4: No array, no sub-index.

5: Data type incorrect.

6: Setting not permitted (only resetting).

7: Descriptive element cannot be changed.

9: Descriptive data not available.

11: No master control.

15: No text array available.

17: Task cannot be executed due to operating state.

20: Illegal value.

21: Response too long.

22: Parameter address illegal.

23: Format illegal.

24: Number of values not consistent.

108: Unit unknown.

Additional values:

Only for internal Siemens troubleshooting.

- Remedy:**
- enter the correct value in the specified parameter.
 - identify the parameter that restricts the limits of the specified parameter.

F01043 Fatal error at project download

Reaction: OFF2 (OFF1, OFF3)

Acknowledge: IMMEDIATELY

Cause: A fatal error was detected when downloading a project using the commissioning software.

Fault value (r0949, interpret decimal):

1: Device status cannot be changed to Device Download (drive object ON?).

2: Incorrect drive object number.

8: Maximum number of drive objects that can be generated exceeded.

List of faults and alarms

- 11: Error while generating a drive object (global component).
 - 12: Error while generating a drive object (drive component).
 - 13: Unknown drive object type.
 - 14: Drive status cannot be changed to "ready for operation" (r0947 and r0949).
 - 15: Drive status cannot be changed to drive download.
 - 16: Device status cannot be changed to "ready for operation".
 - 18: A new download is only possible if the factory settings are restored for the drive unit.
 - 20: The configuration is inconsistent.
 - 21: Error when accepting the download parameters.
 - 22: SW-internal download error.
 - 100: The download was canceled, because no write requests were received from the commissioning client. (e.g. for interrupted communication).
- Additional values: only for internal Siemens troubleshooting.

Remedy:

- use the current version of the commissioning software.
- modify the offline project and download again (e.g. compare the motor and Power Module in the offline project and on the drive).
- change the drive state (is a drive rotating or is there a message/signal?).
- carefully note any other messages/signals and remove their cause.
- boot from previously saved files (power-down/power-up or p0970=10,..).

F01044 CU: Descriptive data error

Reaction: OFF2
Acknowledge: POWER ON
Cause: An error was detected when loading the descriptive data saved in the non-volatile memory.
Remedy: Replace the memory card or Control Unit.

A01045 Configuring data invalid

Reaction: NONE
Acknowledge: NONE
Cause: An error was detected when evaluating the parameter files PSxxxxxyy.ACX, PTxxxxyy.ACX, CAxxxxyy.ACX, or CCxxxxyy.ACX saved in the non-volatile memory. Because of this, under certain circumstances, several of the saved parameter values were not able to be accepted. Also see r9406 up to r9408.
 Alarm value (r2124, interpret hexadecimal):
 Only for internal Siemens troubleshooting.

Remedy:

- Check the parameters displayed in r9406 up to r9408, and correct these if required.
- Restore the factory setting using (p0970 = 1) and re-load the project into the drive unit. Then save the parameterization in STARTER using the "Copy RAM to ROM" function or with p0971 = 1. This overwrites the incorrect parameter files in the non-volatile memory – and the alarm is withdrawn.

A01049 It is not possible to write to file

Reaction: NONE
Acknowledge: NONE
Cause: It is not possible to write into a write-protected file (PSxxxxxx.acx). The write request was interrupted.
 Alarm value (r2124, interpret decimal):
 Drive object number.

Remedy: Check whether the "write protected" attribute has been set for the files in the non-volatile memory under .../USER/SINAMICS/DATA/... When required, remove write protection and save again (e.g. set p0971 to 1).

F01054 CU: System limit exceeded

Reaction: OFF2
Acknowledge: IMMEDIATELY
Cause: At least one system overload has been identified.
 Fault value (r0949, interpret decimal):
 1: Computing time load too high (r9976[1]).
 5: Peak load too high (r9976[5]).
 As long as this fault is present, it is not possible to save the parameters (p0971).
 See also: r9976 (System utilization)

Remedy: Re fault value = 1, 5:

- reduce the computing time load of the drive unit (r9976[1] and r9976[5]) to under 100 %.
- check the sampling times and adjust if necessary (p0115, p0799, p4099).
- de-activate function modules.
- de-activate drive objects.
- remove drive objects from the target topology.
- note the DRIVE-CLiQ topology rules and if required, change the DRIVE-CLiQ topology.

When using the Drive Control Chart (DCC) or free function blocks (FBLOCKS), the following applies

- the computing time load of the individual run-time groups on a drive object can be read out in r21005 (DCC) or r20005 (FBLOCKS).
- if necessary, the assignment of the run-time group (p21000, p20000) can be changed in order to increase the sampling time (r21001, r20001).
- if necessary, reduce the number of cyclically calculated blocks (DCC) and/or function blocks (FBLOCKS).

A01064 (F) CU: Internal error (CRC)

Reaction: NONE
Acknowledge: NONE
Cause: CRC error in the Control Unit program memory
Remedy:

- carry out a POWER ON (power off/on) for all components.
- upgrade firmware to later version.
- contact the Hotline.

A01066 Buffer memory: 70% fill level reached or exceeded

Reaction: NONE
Acknowledge: NONE
Cause: The non-volatile buffer memory for parameter changes is filled to at least 70%. This can also occur if the buffer memory is active (p0014 = 1) and parameters are continually changed via a fieldbus system.
Remedy: If required, de-activate and clear the buffer memory (p0014 = 0).
 If required, clear the buffer memory (p0014 = 2).
 In the following cases, the entries in the buffer memory are transferred into the ROM and then the buffer memory is cleared:

- p0971 = 1
- power down/power up the Control Unit

See also: p0014 (Buffer memory mode)

A01067 Buffer memory: 100 % fill level reached

Reaction: NONE
Acknowledge: NONE
Cause: The non-volatile buffer memory for parameter changes is filled to 100%. All additional parameter changes will no longer be taken into account in the non-volatile buffer memory. However, parameter changes can still be made in the volatile memory (RAM). This can also occur if the buffer memory is active (p0014 = 1) and parameters are continually changed via a fieldbus system.
Remedy: If required, de-activate and clear the buffer memory (p0014 = 0).
 If required, clear the buffer memory (p0014 = 2).
 In the following cases, the entries in the buffer memory are transferred into the ROM and then the buffer memory is cleared:

- p0971 = 1
- power down/power up the Control Unit

See also: p0014 (Buffer memory mode)

F01068 CU: Data memory memory overflow

Reaction: OFF2
Acknowledge: IMMEDIATELY
Cause: The utilization for a data memory area is too large.
 Fault value (r0949, interpret binary):
 Bit 0 = 1: High-speed data memory 1 overloaded
 Bit 1 = 1: High-speed data memory 2 overloaded

Bit 2 = 1: High-speed data memory 3 overloaded
 Bit 3 = 1: High-speed data memory 4 overloaded

Remedy:

- de-activate the function module.
- de-activate drive object.
- remove the drive object from the target topology.

A01069 Parameter backup and device incompatible

Reaction: NONE

Acknowledge: NONE

Cause: The parameter backup on the memory card and the drive unit do not match.
 The module boots with the factory settings.
 Example:
 Devices A and B. are not compatible and a memory card with the parameter backup for device A is inserted in device B.

Remedy:

- insert a memory card with compatible parameter backup and carry out a POWER ON.
- insert a memory card without parameter backup and carry out a POWER ON.
- If required, withdraw the memory card and carry out POWER ON.
- save the parameters (p0971 = 1).

F01072 Memory card restored from the backup copy

Reaction: NONE

Acknowledge: IMMEDIATELY

Cause: The Control Unit was switched-off while writing to the memory card. This is why the visible partition became defective.
 After switching on, the data from the non-visible partition (backup copy) were written to the visible partition.

Remedy: Check that the firmware and parameterization is up-to-date.

A01073 POWER ON required for backup copy on memory card

Reaction: NONE

Acknowledge: NONE

Cause: The parameter assignment on the visible partition of the memory card has changed.
 In order that the backup copy on the memory card is updated on the non-visible partition, it is necessary to carry out a POWER ON or hardware reset (p0972) of the Control Unit.
 Note:
 It is possible that a new POWER ON is requested via this alarm (e.g. after saving with p0971 = 1).

Remedy:

- carry out a POWER ON (power off/on) for the Control Unit.
- carry out a hardware reset (RESET button, p0972).

F01105 (A) CU: Insufficient memory

Reaction: OFF1

Acknowledge: POWER ON

Cause: Too many data sets are configured on this Control Unit.
 Fault value (r0949, interpret decimal):
 Only for internal Siemens troubleshooting.

Remedy: - reduce the number of data sets.

F01107 Save to memory card unsuccessful

Reaction: NONE

Acknowledge: IMMEDIATELY

Cause: A data save to the memory card was not able to be successfully carried out.

- Memory card is defective.
- Insufficient space on memory card.

Fault value (r0949, interpret decimal):

- 1: The file on the RAM was not able to be opened.
- 2: The file on the RAM was not able to be read.
- 3: A new directory could not be created on the memory card.
- 4: A new file could not be created on the memory card.
- 5: A new file could not be written on the memory card.

Remedy: - try to save again.
- replace the memory card or Control Unit.

F01112 CU: Power unit not permissible

Reaction: NONE
Acknowledge: IMMEDIATELY
Cause: The connected power unit cannot be used together with this Control Unit.
 Fault value (r0949, interpret decimal):
 1: Power unit is not supported (e.g. PM340).
Remedy: Replace the power unit that is not permissible by a component that is permissible.

F01120 (A) Terminal initialization has failed

Reaction: OFF1 (OFF2)
Acknowledge: IMMEDIATELY (POWER ON)
Cause: An internal software error occurred while the terminal functions were being initialized.
 Fault value (r0949, interpret hexadecimal):
 Only for internal Siemens troubleshooting.
Remedy: - carry out a POWER ON (power off/on) for all components.
 - upgrade firmware to later version.
 - contact the Hotline.
 - replace the Control Unit.

F01122 (A) Frequency at the measuring probe input too high

Reaction: OFF1 (OFF2)
Acknowledge: IMMEDIATELY
Cause: The frequency of the pulses at the measuring probe input is too high.
 Fault value (r0949, interpret decimal):
 1: DI 1
 2: DI 3
Remedy: Reduce the frequency of the pulses at the measuring probe input.

F01205 CU: Time slice overflow

Reaction: OFF2
Acknowledge: POWER ON
Cause: Insufficient computation time.
 Fault value (r0949, interpret hexadecimal):
 Only for internal Siemens troubleshooting.
Remedy: Contact the Hotline.

F01250 CU: CU-EEPROM incorrect read-only data

Reaction: NONE (OFF2)
Acknowledge: POWER ON
Cause: Error when reading the read-only data of the EEPROM in the Control Unit.
 Fault value (r0949, interpret decimal):
 Only for internal Siemens troubleshooting.
Remedy: - carry out a POWER ON.
 - replace the Control Unit.

A01251 CU: CU-EEPROM incorrect read-write data

Reaction: NONE
Acknowledge: NONE
Cause: Error when reading the read-write data of the EEPROM in the Control Unit.
 Alarm value (r2124, interpret decimal):
 Only for internal Siemens troubleshooting.
Remedy: For alarm value r2124 < 256, the following applies:
 - carry out a POWER ON.
 - replace the Control Unit.

For alarm value r2124 >= 256, the following applies:

- clear the fault memory (p0952 = 0).
- replace the Control Unit.

F01257	CU: Firmware version out of date
Reaction:	OFF2
Acknowledge:	POWER ON
Cause:	The Control Unit firmware is too old. Fault value (r0949, interpret hexadecimal): bbbbbbbaa hex: aa = unsupported component aa = 01 hex = 1 dec: The firmware being used does not support the Control Unit. aa = 02 hex = 2 dec: The firmware being used does not support the Control Unit. aa = 03 hex = 3 dec: The firmware being used does not support the Power Module. aa = 04 hex = 4 dec: The firmware being used does not support the Control Unit.
Remedy:	Re fault value = 1, 2, 4: - Upgrade the firmware of the Control Unit. For fault value = 3: - Upgrade the firmware of the Control Unit. - Replace the Power Module by a component that is supported.

F01340	Topology: Too many components on one line
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	For the selected communications clock cycle, too many DRIVE-CLiQ components are connected to one line of the Control Unit. Fault value (r0949, interpret hexadecimal): xyy hex: x = fault cause, yy = component number or connection number. 1yy: The communications clock cycle of the DRIVE-CLiQ connection on the Control Unit is not sufficient for all read transfers. 2yy: The communications clock cycle of the DRIVE-CLiQ connection on the Control Unit is not sufficient for all write transfers. 3yy: Cyclic communication is fully utilized. 4yy: The DRIVE-CLiQ cycle starts before the earliest end of the application. An additional dead time must be added to the control. Sign-of-life errors can be expected. The conditions of operation with a current controller sampling time of 31.25 µs have not been maintained. 5yy: Internal buffer overflow for net data of a DRIVE-CLiQ connection. 6yy: Internal buffer overflow for receive data of a DRIVE-CLiQ connection. 7yy: Internal buffer overflow for send data of a DRIVE-CLiQ connection. 8yy: The component clock cycles cannot be combined with one another 900: The lowest common multiple of the clock cycles in the system is too high to be determined. 901: The lowest common multiple of the clock cycles in the system cannot be generated with the hardware.
Remedy:	- check the DRIVE-CLiQ connection. - Reduce the number of components on the DRIVE-CLiQ line involved and distribute these to other DRIVE-CLiQ sockets of the Control Unit. This means that communication is uniformly distributed over several lines. Re fault value = 1yy - 4yy in addition: - increase the sampling times (p0112, p0115, p4099). If necessary, for DCC or FBLOCKS, change the assignment of the run-time group (p21000, p20000) so that the sampling time (r21001, r20001) is increased. - if necessary, reduce the number of cyclically calculated blocks (DCC) and/or function blocks (FBLOCKS).

- reduce the function modules (r0108).
 - establish the conditions for operation with a current controller sampling time of 31.25 µs (at the DRIVE-CLiQ line, only operate Motor Modules and Sensor Modules with this sampling time and only use a permitted Sensor Module (e.g. SMC20, this means a 3 at the last position of the order number)).
 - For an NX, the corresponding Sensor Module for a possibly existing second measuring system should be connected to a free DRIVE-CLiQ socket of the NX.
- Re fault value = 8yy in addition:
- check the clock cycles settings (p0112, p0115, p4099). Clock cycles on a DRIVE-CLiQ line must be perfect integer multiples of one another. As clock cycle on a line, all clock cycles of all drive objects in the previously mentioned parameters apply, which have components on the line involved.
- Re fault value = 9yy in addition:
- check the clock cycles settings (p0112, p0115, p4099). The lower the numerical value difference between two clock cycles, the higher the lowest common multiple. This behavior has a significantly stronger influence, the higher the numerical values of the clock cycles.

F01505 (A)	BICO: Interconnection cannot be established
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	A PROFIdrive telegram has been set (p0922). An interconnection contained in the telegram was not able to be established. Fault value (r0949, interpret decimal): Parameter receiver that should be changed.
Remedy:	Establish another interconnection.
F01510	BICO: Signal source is not float type
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	The requested connector output does not have the correct data type. This interconnection is not established. Fault value (r0949, interpret decimal): Parameter number to which an interconnection should be made (connector output).
Remedy:	Interconnect this connector input with a connector output having a float data type.
F01511 (A)	BICO: Interconnection with different scalings
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	The requested BICO interconnection was established. However, a conversion is made between the BICO output and BICO input using the reference values. - the BICO output has different normalized units than the BICO input. - message only for interconnections within a drive object. Example: The BICO output has, as normalized unit, voltage and the BICO input has current. This means that the factor p2002/p2001 is calculated between the BICO output and the BICO input. p2002: contains the reference value for current p2001: contains the reference value for voltage Fault value (r0949, interpret decimal): Parameter number of the BICO input (signal sink).
Remedy:	Not necessary.
F01512	BICO: No scaling available
Reaction:	OFF2
Acknowledge:	POWER ON
Cause:	An attempt was made to determine a conversion factor for a scaling that does not exist. Fault value (r0949, interpret decimal): Unit (e.g. corresponding to SPEED) for which an attempt was made to determine a factor.
Remedy:	Apply scaling or check the transfer value.

F01513 (N, A)	BICO: Interconnection cross DO with different scalings
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	The requested BICO interconnection was established. However, a conversion is made between the BICO output and BICO input using the reference values. An interconnection is made between different drive objects and the BICO output has different normalized units than the BICO input or the normalized units are the same but the reference values are different. Example 1: BICO output with voltage normalized unit, BICO input with current normalized unit, BICO output and BICO input lie in different drive objects. This means that the factor p2002/p2001 is calculated between the BICO output and the BICO input. p2002: contains the reference value for current p2001: contains the reference value for voltage Example 2: BICO output with voltage normalized unit in drive object 1 (DO1), BICO input with voltage normalized unit in drive object 2 (DO2). The reference values for voltage (p2001) of the two drive objects have different values. This means that the factor p2001(DO1)/p2001(DO2) is calculated between the BICO output and the BICO input. p2001: contains the reference value for voltage, drive objects 1, 2 Fault value (r0949, interpret decimal): Parameter number of the BICO input (signal sink).
Remedy:	Not necessary.
A01514 (F)	BICO: Error when writing during a reconnect
Reaction:	NONE
Acknowledge:	NONE
Cause:	During a reconnect operation (e.g. while booting or downloading - but can also occur in normal operation) a parameter was not able to be written to. Example: When writing to BICO input with double word format (DWORD), in the second index, the memory areas overlap (e.g. p8861). The parameter is then reset to the factory setting. Alarm value (r2124, interpret decimal): Parameter number of the BICO input (signal sink).
Remedy:	Not necessary.
F01515 (A)	BICO: Writing to parameter not permitted as the master control is active
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	When changing the number of CDS or when copying from CDS, the master control is active.
Remedy:	If required, return the master control and repeat the operation.
A01590 (F)	Drive: Motor maintenance interval expired
Reaction:	NONE
Acknowledge:	NONE
Cause:	The selected service/maintenance interval for this motor was reached. Alarm value (r2124, interpret decimal): Motor data set number. See also: p0650 (Actual motor operating hours), p0651 (Motor operating hours maintenance interval)
Remedy:	carry out service/maintenance and reset the service/maintenance interval (p0651).
F01600	SI P1: STOP A initiated
Reaction:	OFF2
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The drive-integrated "Safety Integrated" function on processor 1 has detected an error and initiated a STOP A. - forced checking procedure of the safety shutdown path on processor 1 unsuccessful. - subsequent response to fault F01611 (defect in a monitoring channel). Fault value (r0949, interpret decimal): 0: Stop request from processor 2. 1005: Pulses suppressed although STO not selected and there is no internal STOP A present.

1010: Pulses enabled although STO is selected or an internal STOP A is present.
 9999: Subsequent response to fault F01611.

Remedy:

- select Safe Torque Off and de-select again.

For fault value = 9999:

- carry out diagnostics for fault F01611.

Note:
 STO: Safe Torque Off

F01611 (A) SI P1: Defect in a monitoring channel

Reaction: NONE (OFF1, OFF2, OFF3)

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The drive-integrated "Safety Integrated" function on processor 1 has detected a fault in the crosswise data comparison between the two monitoring channels and has initiated a STOP F.

Fault F01600 (SI P1: STOP A initiated) is output as a consequence of this fault.

Fault value (r0949, interpret decimal):

0: Stop request from processor 2.

1 ... 999:

Number of the cross-compared data that resulted in this fault. This number is also displayed in r9795.

2: SI enable safety functions (p9601, p9801). Crosswise data comparison is only carried out for the supported bits.

3: SI F-DI changeover tolerance time (p9650, p9850).

8: SI PROFIsafe address (p9610, p9810).

9: SI debounce time for STO (p9651, p9851).

1000: Watchdog timer has expired.

Within the time of approx. 5 x p9650, alternatively, the following was defined:

- Too many signal changes have occurred at the F-DI.

- Via PROFIsafe, STO was too frequently initiated (also as subsequent response).

1001, 1002: Initialization error, change timer / check timer.

2000: Status of the STO selection for both monitoring channels are different.

2001: Feedback of the safe pulse suppression on the two monitoring channels are different.

2003: Status of the STO terminal on the processor 1 and processor 2 are different.

6000 ... 6166:

PROFIsafe fault values (PROFIsafe driver for PROFIBUS DP V1/V2 and PROFINET).

For these fault values, the failsafe control signals (failsafe values) are transferred to the safety functions.

6000: An internal software error has occurred (only for internal Siemens troubleshooting).

6064 ... 6071: Error when evaluating the F parameters. The values of the transferred F parameters do not match the expected values in the PROFIsafe driver.

6064: Destination address and PROFIsafe address are different (F_Dest_Add).

6065: Destination address not valid (F_Dest_Add).

6066: Source address not valid (F_Source_Add).

6067: Watchdog time not valid (F_WD_Time).

6068: Incorrect SIL level (F_SIL).

6069: Incorrect F-CRC length (F_CRC_Length).

6070: Incorrect F parameter version (F_Par_Version).

6071: CRC error for the F parameters (CRC1). The transferred CRC value of the F parameters does not match the value calculated in the PROFIsafe driver.

6072: F parameterization is inconsistent.

6165: A communications error was identified when receiving the PROFIsafe telegram. The fault may also occur if an inconsistent or out-of-date PROFIsafe telegram has been received after switching the Control Unit off and on or after plugging in the PROFIBUS/PROFINET cable.

6166: A time monitoring error (timeout) was identified when receiving the PROFIsafe telegram.

Remedy: Re fault values 1 ... 999 described in "Cause":

- check the cross data comparison that resulted in a STOP F.

- carry out a POWER ON (power off/on).

For fault value = 1000:

- check the wiring of the F-DI (contact problems).

- PROFIsafe: Remove contact problems/faults at the PROFIBUS master/PROFINET controller.

Re fault value = 1001, 1002:

- carry out a POWER ON (power off/on).

Re fault value = 2000, 2001, 2003:

- check the tolerance time F-DI changeover and if required, increase the value (p9650/p9850).
- check the wiring of the F-DI (contact problems).
- check the causes of the STO selection in r9772. When the SI Motion functions are active (p9501 = 1), STO can also be selected using these functions.

For fault value = 6000:

- carry out a POWER ON (power off/on).
- upgrade firmware to later version.
- contact the Hotline.
- replace Control Unit.

For fault value = 6064:

- check the setting of the value in the F parameter F_Dest_Add at the PROFIsafe slave.
- check the setting of the PROFIsafe address on processor 1 (p9610) and on processor 2 (p9810).

For fault value = 6065:

- check the setting of the value in the F parameter F_Dest_Add at the PROFIsafe slave. It is not permissible for the destination address to be either 0 or FFFF!

For fault value = 6066:

- check the setting of the value in the F parameter F_Source_Add at the PROFIsafe slave. It is not permissible for the source address to be either 0 or FFFF!

For fault value = 6067:

- check the setting of the value in the F parameter F_WD_Time at the PROFIsafe slave. It is not permissible for the watch time to be 0!

For fault value = 6068:

- check the setting of the value in the F parameter F_SIL at the PROFIsafe slave. The SIL level must correspond to SIL2!

For fault value = 6069:

- check the setting of the value in the F parameter F_CRC_Length at the PROFIsafe slave. The setting of the CRC2 length is 2-byte CRC in the V1 mode and 3-byte CRC in the V2 mode!

For fault value = 6070:

- check the setting of the value in the F parameter F_Par_Version at the PROFIsafe slave. The value for the F parameter version is 0 in the V1 mode and 1 in the V2 mode!

For fault value = 6071:

- check the settings of the values of the F parameters and the F parameter CRC (CRC1) calculated from these at the PROFIsafe slave and, if required, update.

For fault value = 6072:

- check the settings of the values for the F parameters and, if required, correct.

The following combinations are permissible for F parameters F_CRC_Length and F_Par_Version:

F_CRC_Length = 2-byte CRC and F_Par_Version = 0

F_CRC_Length = 3-byte CRC and F_Par_Version = 1

For fault value = 6165:

- if the fault occurs after powering up or after inserting the PROFIBUS/PROFINET cable, acknowledge the fault.
- check the configuration and communication at the PROFIsafe slave.
- check the setting of the value for F parameter F_WD_Time on the PROFIsafe slave and increase if necessary.

For fault value = 6166:

- check the configuration and communication at the PROFIsafe slave.
- check the setting of the value for F parameter F_WD_Time on the PROFIsafe slave and increase if necessary.
- evaluate diagnostic information in the F host.
- check PROFIsafe connection.

Re fault values that are described in "Cause":

- carry out a POWER ON (power off/on).
- contact the Hotline.
- replace Control Unit.

Note:

F-DI: Failsafe Digital Input

STO: Safe Torque Off

N01620 (F, A) SI P1: Safe Torque Off active

Reaction: NONE

Acknowledge: NONE

Cause: The "Safe Torque Off" (STO) function has been selected on processor 1 using the input terminal and is active.

Note:

This message does not result in a safety stop response.

Remedy: Not necessary.
 Note:
 STO: Safe Torque Off

F01625 SI P1: Sign-of-life error in safety data

Reaction: OFF2

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The drive-integrated "Safety Integrated" function on processor 1 has detected an error in the sign-of-life of the safety data and initiated a STOP A.
 - there is a communication error between processor 1 and processor 2 or communication has failed.
 - a time slice overflow of the safety software has occurred.
 Fault value (r0949, interpret decimal):
 Only for internal Siemens troubleshooting.

Remedy:
 - select Safe Torque Off and de-select again.
 - carry out a POWER ON (power off/on).
 - check whether additional faults are present and if required, perform diagnostics.
 - check the electrical cabinet design and cable routing for EMC compliance

F01649 SI P1: Internal software error

Reaction: OFF2

Acknowledge: IMMEDIATELY (POWER ON)

Cause: An internal error in the Safety Integrated software on processor 1 has occurred.
 Note:
 This fault results in a STOP A that cannot be acknowledged.
 Fault value (r0949, interpret hexadecimal):
 Only for internal Siemens troubleshooting.

Remedy:
 - carry out a POWER ON (power off/on).
 - re-commission the "Safety Integrated" function and carry out a POWER ON.
 - contact the Hotline.
 - replace Control Unit.

F01650 SI P1: Acceptance test required

Reaction: OFF2

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The drive-integrated "Safety Integrated" function on processor 1 requires an acceptance test.
 Note:
 This fault results in a STOP A that can be acknowledged.
 Fault value (r0949, interpret decimal):
 130: Safety parameters for processor 2 not available.
 Note:

This fault value is always output when Safety Integrated is commissioned for the first time.
 1000: Reference and actual checksum on processor 1 are not identical (booting).
 - at least one checksum-checked piece of data is defective.
 - Safety parameters set offline and loaded into the Control Unit.
 2000: Reference and actual checksum on processor 1 are not identical (commissioning mode).
 - reference checksum incorrectly entered on processor 1 (p9799 not equal to r9798).
 - when de-activating the safety functions, p9501 was not deleted.
 2001: Reference and actual checksum on processor 2 are not identical (commissioning mode).
 - reference checksum incorrectly entered on processor 2 (p9899 not equal to r9898).
 - when de-activating the safety functions, p9501 was not deleted.
 2002: Enable of safety-related functions between the processor 1 and processor 2 differ (p9601 not equal to p9801).
 2003: Acceptance test is required as a safety parameter has been changed.
 2004: An acceptance test is required because a project with enabled safety-functions has been downloaded.
 2005: The Safety logbook has identified that a functional safety checksum has changed. An acceptance test is required.
 2020: Error when saving the safety parameters for the processor 2.
 9999: Subsequent response of another safety-related fault that occurred when booting that requires an acceptance test.

Remedy: For fault value = 130:
 - carry out safety commissioning routine.

For fault value = 1000:
 - again carry out safety commissioning routine.
 - replace the memory card or Control Unit.
 - Using STARTER, activate the safety parameters for the drive involved (change settings, copy parameters, activate settings).
 For fault value = 2000:
 - check the safety parameters on processor 1 and adapt the reference checksum (p9799).
 For fault value = 2001:
 - check the safety parameters on processor 2 and adapt the reference checksum (p9899).
 For fault value = 2002:
 - enable the safety-related functions on processor 1 and check processor 2 (p9601 = p9801).
 Re fault value = 2003, 2004, 2005:
 - Carry out an acceptance test and generate an acceptance report.
 The fault with fault value 2005 can only be acknowledged when the "STO" function is de-selected.
 For fault value = 2020:
 - again carry out safety commissioning routine.
 - replace the memory card or Control Unit.
 For fault value = 9999:
 - carry out diagnostics for the other safety-related fault that is present.
 Note:
 STO: Safe Torque Off
 See also: p9799 (SI setpoint checksum SI parameters (processor 1)), p9899 (SI setpoint checksum SI parameters (processor 2))

F01651 **SI P1: Synchronization safety time slices unsuccessful**
Reaction: OFF2
Acknowledge: IMMEDIATELY (POWER ON)
Cause: The "Safety Integrated" function requires synchronization of the safety time slices between processor 1 and processor 2. This synchronization was unsuccessful.
 Note:
 This fault results in a STOP A that cannot be acknowledged.
 Fault value (r0949, interpret decimal):
 Only for internal Siemens troubleshooting.
Remedy: Carry out a POWER ON (power off/on).

F01653 **SI P1: PROFIBUS/PROFINET configuration error**
Reaction: NONE (OFF1, OFF2, OFF3)
Acknowledge: IMMEDIATELY (POWER ON)
Cause: There is a PROFIBUS/PROFINET configuration error for using Safety Integrated monitoring functions with a higher-level control.
 Note:
 For safety functions that have been enabled, this fault results in a STOP A that cannot be acknowledged.
 Fault value (r0949, interpret decimal):
 200: A safety slot for receive data from the control has not been configured.
 210, 220: The configured safety slot for the receive data from the control has an unknown format.
 230: The configured safety slot for the receive data from the F-PLC has the incorrect length.
 231: The configured safety slot for the receive data from the F-PLC has the incorrect length.
 250: A PROFIsafe slot is configured in the higher-level F control, however PROFIsafe is not enabled in the drive.
 300: A safety slot for the send data to the control has not been configured.
 310, 320: The configured safety slot for the send data to the control has an unknown format.
 330: The configured safety slot for the send data to the F-PLC has the incorrect length.
 331: The configured safety slot for the send data to the F-PLC has the incorrect length.
Remedy: The following generally applies:
 - check and, if necessary, correct the PROFIBUS/PROFINET configuration of the safety slot on the master side.
 - upgrade the Control Unit software.
 For fault value = 250:
 - remove the PROFIsafe configuring in the higher-level F control or enable PROFIsafe in the drive.
 Re fault value = 231, 331:
 - configure the PROFIsafe telegram matching the parameterization in the F-PLC.
 The following applies for p9501.30 = 1 (F-DI via PROFIsafe is enabled):
 - PROFIsafe telegram 900 must be configured.

For p9501.30 = 0 (F-DI not enabled via PROFIsafe), the following applies:
 - PROFIsafe telegram 30 must be configured.

A01654 (F)	SI P1: Deviating PROFIsafe configuration
Reaction:	NONE
Acknowledge:	NONE
Cause:	The configuration of a PROFIsafe telegram in the higher-level control (F-PLC) does not match the parameterization in the drive. Note: This message does not result in a safety stop response. Alarm value (r2124, interpret decimal): 1: A PROFIsafe telegram is configured in the higher-level control, however PROFIsafe is not enabled in the drive (p9601.3). 2: PROFIsafe is parameterized in the drive; however, a PROFIsafe telegram has not been configured in the higher-level control.
Remedy:	The following generally applies: - check and, if necessary, correct the PROFIsafe configuration in the higher-level control. Re alarm value = 1: - remove the PROFIsafe configuring in the higher-level F control or enable PROFIsafe in the drive. Re alarm value = 2: - configure the PROFIsafe telegram to match the parameterization in the higher-level F-control.

F01655	SI P1: Align monitoring functions
Reaction:	OFF2
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	An error has occurred when aligning the Safety Integrated monitoring functions on processor 1 and processor 2. No common set of supported SI monitoring functions was able to be determined. - there is a communication error between processor 1 and processor 2 or communication has failed. Note: This fault results in a STOP A that cannot be acknowledged. Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.
Remedy:	- carry out a POWER ON (power off/on). - check the electrical cabinet design and cable routing for EMC compliance

F01656	SI P1: Parameter processor 2 parameter error
Reaction:	OFF2
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	When accessing the Safety Integrated parameters for the processor 2 in the non-volatile memory, an error has occurred. Note: This fault results in a STOP A that can be acknowledged. Fault value (r0949, interpret decimal): 129: Safety parameters for processor 2 corrupted. 131: Internal software error 132: Communication errors when uploading or downloading the safety parameters. 255: Internal software error on the Control Unit.
Remedy:	- re-commission the safety functions. - replace the memory card or Control Unit. For fault value = 129: - activate the safety commissioning mode (p0010 = 95). - adapt the PROFIsafe address (p9610). - start the copy function for SI parameters (p9700 = D0 hex). - acknowledge data change (p9701 = DC hex). - exit the safety commissioning mode (p0010 = 0). - save all parameters (p0971 = 1 or "copy RAM to ROM"). - carry out a POWER ON (power off/on) for the Control Unit. For fault value = 132: - check the electrical cabinet design and cable routing for EMC compliance

F01658	SI P1: PROFIsafe telegram number not suitable
Reaction:	OFF2
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	<p>The PROFIsafe telegram number in p60022 is unsuitable for the enabled safety functions.</p> <p>Possible causes:</p> <ul style="list-style-type: none"> - When PROFIsafe is not enabled (p9601.3 = 0), then it is not permissible to select a PROFIsafe telegram in p60022. - When PROFIsafe is enabled (p9601.3 = 1), then a PROFIsafe telegram must be selected in p60022. - When the transfer of the F-DIs via PROFIsafe (p9501.30 = 1) is selected, then telegram 900 must be selected in p60022 (this only applies to Control Units, which support Extended Functions via PROFIsafe (r9771.4 = 1)). <p>Note:</p> <p>This fault does not result in a safety stop response.</p> <p>See also: p9501 (SI Motion enable safety functions (Control Unit)), p9601 (SI enable functions integrated in the drive (processor 1)), p60022 (PROFIsafe telegram selection)</p>
Remedy:	Select the telegram number that matches the Safety functions that have been enabled.
F01659	SI P1: Write request for parameter rejected
Reaction:	OFF2
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	<p>The write request for one or several Safety Integrated parameters on processor 1 was rejected.</p> <p>Note:</p> <p>This fault does not result in a safety stop response.</p> <p>Fault value (r0949, interpret decimal):</p> <ol style="list-style-type: none"> 1: The Safety Integrated password is not set. 2: A reset of the drive parameters was selected. However, the Safety Integrated parameters were not reset, as Safety Integrated is presently enabled. 3: The interconnected STO input is in the simulation mode. 10: An attempt was made to enable the STO function although this cannot be supported. 14: An attempt was made to enable the PROFIsafe communications although this cannot be supported. 15: An attempt was made to enable the motion monitoring functions integrated in the drive although these cannot be supported. 18: An attempt was made to enable the PROFIsafe function for Basic Functions although this cannot be supported. 20: An attempt was made to simultaneously enable both the drive-integrated motion monitoring functions via integrated F-DI and STO via terminals, even though these cannot be supported at the same time. 21: An attempt was made to enable the Safety Integrated functions although these cannot be supported by the connected Power Module. 26: At a digital input of the Control Unit, an attempt was made to activate the simulation mode (p0795), which is used by Safety Integrated (p10049). <p>See also: p0970 (Reset drive parameters), p3900 (Completion of quick commissioning), r9771 (SI common functions (processor 1)), r9871 (SI common functions (processor 2))</p>
Remedy:	<p>For fault value = 1:</p> <ul style="list-style-type: none"> - set the Safety Integrated password (p9761). <p>For fault value = 2:</p> <ul style="list-style-type: none"> - Inhibit Safety Integrated (p9501, p9601) or reset safety parameters (p0970 = 5), then reset the drive parameters again. <p>For fault value = 3:</p> <ul style="list-style-type: none"> - end the simulation mode for the digital input (p0795). <p>Re fault value = 10, 14, 15, 18, 20:</p> <ul style="list-style-type: none"> - check whether there are faults in the safety function alignment (F01655, F30655) and if required, carry out diagnostics for the faults involved. - use a Control Unit that supports the required function. <p>For fault value = 21:</p> <ul style="list-style-type: none"> - use a Power Module that supports the Safety Integrated functions. <p>For fault value = 26:</p> <ul style="list-style-type: none"> - check whether p10049 is set. Also check p10006 and p10009. Check whether in p10046, p10047 a test top of the FDO with a read back input is parameterized. <p>Note:</p> <p>STO: Safe Torque Off</p> <p>See also: p9501 (SI Motion enable safety functions (Control Unit)), p9601 (SI enable functions integrated in the drive (processor 1)), p9761 (SI password input), p9801 (SI enable functions integrated in the drive (processor 2))</p>

F01660	SI P1: Safety-related functions not supported
Reaction:	OFF2
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The Power Module does not support the safety-related functions. Safety Integrated cannot be commissioned. Note: This fault does not result in a safety stop response.
Remedy:	- use a Power Module that supports the safety-related functions.
F01661	SI P1: Simulation of the safety inputs active
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	The simulation of the digital inputs of the Control Unit (p0795) is active. It is not permissible that safety inputs are simulated. Fault value (r0949, interpret binary): The displayed bits indicate which digital inputs must not be simulated.
Remedy:	- Deactivate the simulation of the digital inputs of the Control Unit for the safety inputs (p0795). - acknowledge fault.
F01662	Error internal communications
Reaction:	OFF2
Acknowledge:	POWER ON
Cause:	A module-internal communication error has occurred. Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.
Remedy:	- carry out a POWER ON (power off/on). - upgrade firmware to later version. - contact the Hotline.
F01663	SI P1: Copying the SI parameters rejected
Reaction:	OFF2
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	One of the following values is saved in p9700 or was entered offline: 87 or 208. This is the reason that when booting, an attempt is made to copy SI parameters from processor 1 to processor 2. However, no safety-relevant function has been selected on processor 1 (p9501 = 0, p9601 = 0). This is the reason that copying is not possible. Note: This fault does not result in a safety stop response. See also: p9700 (SI copy function)
Remedy:	- Set p9700 to 0. - Check p9501 and/or p9601 and if required, correct. - Restart the copying function by entering the corresponding value into p9700.
F01665	SI P1: System is defective
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	A system defect was detected before the last boot or in the actual one. The system might have been rebooted (reset). Fault value (r0949, interpret hexadecimal): 200000 hex, 400000 hex, 8000yy hex (yy any): - Fault in the actual booting/operation. Additional values: - defect before the last time that the system booted.
Remedy:	- carry out a POWER ON (power off/on). - upgrade firmware to later version. - contact the Hotline. Re fault value = 200000 hex, 400000 hex, 8000yy hex (yy any): - ensure that the Control Unit is connected to the Power Module.

A01666 (F)	SI Motion P1: Steady-state (static) 1 signal at the F-DI for safety-relevant acknowledgement
Reaction:	NONE
Acknowledge:	NONE
Cause:	A logical 1 signal is present at the F-DI configured in p10006 for more than 10 seconds. If, at the F-DI no acknowledgment was performed for safe acknowledgment, then a steady-state logical and 0 signal must be present. This avoids unintentional safety-relevant acknowledgement (or the "Internal Event Acknowledge" signal) if a wire breaks or one of the two digital inputs bounces.
Remedy:	Set the fail-safe digital input (F-DI) to a logical 0 signal (p10006). Note: F-DI: Failsafe Digital Input
A01669 (F, N)	SI Motion: Unfavorable combination of motor and power unit
Reaction:	NONE
Acknowledge:	NONE
Cause:	The combination of motor and power unit used is not suitable for using safe motion monitoring functions without an encoder. The ratio between the power unit rated current (r0207[0]) and rated motor current (p0305) is greater than 5. Alarm value (r2124, interpret decimal): Number of the motor data set, which caused the fault. Notice: If this alarm is not observed, then message C01711 or C30711 – with the value 1041 ... 1044 – can sporadically occur.
Remedy:	Use a suitable power unit with a lower power rating or a motor with a higher power rating.
F01680	SI Motion P1: Checksum error safety monitoring functions
Reaction:	OFF2
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The actual checksum calculated by the drive and entered in r9728 via the safety-relevant parameters does not match the reference checksum saved in p9729 at the last machine acceptance. Safety-relevant parameters have been changed or a fault is present. Note: This fault results in a STOP A that can be acknowledged. Fault value (r0949, interpret decimal): 0: Checksum error for SI parameters for motion monitoring. 1: Checksum error for SI parameters for actual values. 2: Checksum error for SI parameters for component assignment.
Remedy:	- check the safety-relevant parameters and if required, correct. - execute the function "Copy RAM to ROM". - perform a POWER ON if safety parameters requiring a POWER ON have been modified. - carry out an acceptance test.
F01681	SI Motion P1: Incorrect parameter value
Reaction:	OFF2
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The parameter cannot be parameterized with this value. Note: This fault does not result in a safety stop response. Fault value (r0949, interpret decimal): yyyyxxxx dec: yyyy = supplementary information, xxxx = parameter yyyy = 0: No information available. xxxx = 9501: It is not permissible to enable the function "n < nx hysteresis and filtering" (p9501.16) in conjunction with the function "Extended functions without selection" (p9601.5). xxxx = 9522: The gear stage was set too high. xxxx = 9547: Parameter p9547 has been set too low.

xxxx = 9585:
 For Safety without encoder and synchronous motor, p9585 must be set to 4.
Remedy: Correct the parameter value.
 If xxxx = 9547:
 With hysteresis/filtering enabled (p9501.16 = 1), the following applies:
 Set parameters p9546/p9346 and p9547/p9347 acc. to the following rule: p9546 >= 2 x p9547; p9346 >= 2 x p9347
 If xxxx = 9522 and 9585:
 Correct parameters.

F01682 SI Motion P1: Monitoring function not supported

Reaction: OFF2
Acknowledge: IMMEDIATELY (POWER ON)
Cause: The monitoring function enabled in p9501, p9601 or p9801 is not supported in this firmware version.
Note:
 This fault results in a STOP A that cannot be acknowledged.
 Fault value (r0949, interpret decimal):
 1: Monitoring function SLP not supported (p9501.1).
 2: Monitoring function SCA not supported (p9501.7 and p9501.8 ... 15).
 3: Monitoring function SLS override not supported (p9501.5).
 4: Monitoring function external ESR activation not supported (p9501.4).
 5: Monitoring function F-DI in PROFIsafe not supported (p9501.30).
 6: Enable actual value synchronization not supported (p9501.3).
 9: Monitoring function not supported by the firmware or enable bit not used.
 11: Only encoderless monitoring functions integrated in the drive are supported.
 12: Safety Integrated for SINUMERIK is not supported on this Control Unit.
 20: Motion monitoring functions integrated in the drive are only supported in conjunction with PROFIsafe (p9501/p9601.1 ... 2 and p9801.1 ... 2).
 21: PROFIsafe only supported in conjunction with motion monitoring functions integrated in the drive (p9501/p9601.1 ... 2 and p9801.1 ... 2).
 23: CU240 does not support monitoring functions requiring an encoder.
 25: Drive-integrated motion monitoring functions not supported (p9501, p9601.2).
 28: Encoderless monitoring functions are not supported for synchronous motors (p9507.2).
Remedy: De-select the monitoring function involved (p9501, p9601, p9801).
Note:
 SCA: Safe Cam
 SDI: Safe Direction
 SLP: Safely-Limited Position
 SLS: Safely-Limited Speed
 See also: p9501 (SI Motion enable safety functions (Control Unit)), r9771 (SI common functions (processor 1))

F01683 SI Motion P1: SLS enable missing

Reaction: OFF2
Acknowledge: IMMEDIATELY (POWER ON)
Cause: The safety-relevant function "SLS" is not enabled in p9501 although other safety-relevant monitoring functions are enabled.
Note:
 This fault does not result in a safety stop response.
Remedy: Enable the function "SLS" (p9501.0) and carry out a POWER ON.
Note:
 Save the changes before POWER ON (copy from RAM to ROM).
 SLS: Safely-Limited Speed
 See also: p9501 (SI Motion enable safety functions (Control Unit))

F01690 SI Motion: Data save problem for the NVRAM

Reaction: NONE (OFF1, OFF2, OFF3)
Acknowledge: POWER ON
Cause: There is not sufficient memory space in the NVRAM on the drive to save parameters r9781 and r9782 (safety log-book).
Note:
 This fault does not result in a safety stop response.

Fault value (r0949, interpret decimal):
0: There is no physical NVRAM available in the drive.
1: There is no longer any free memory space in the NVRAM.

Remedy: For fault value = 0:
- use a Control Unit NVRAM.
For fault value = 1:
- de-select functions that are not required and that take up memory space in the NVRAM.
- contact the Hotline.
Note:
NVRAM: Non-Volatile Random Access Memory (non-volatile read and write memory)

F01692 SI Motion P1: Parameter value not permitted for encoderless

Reaction: OFF2
Acknowledge: IMMEDIATELY (POWER ON)
Cause: For encoderless motion monitoring functions, the parameter cannot be parameterized with this value.
Note:
This fault does not result in a safety stop response.
Fault value (r0949, interpret decimal):
Parameter number with the incorrect value.
See also: p9501 (SI Motion enable safety functions (Control Unit))
Remedy: Correct the parameter specified in the fault value.
See also: p9501 (SI Motion enable safety functions (Control Unit))

A01693 (F) SI Motion P1: Safety parameter setting changed, POWER ON required

Reaction: NONE
Acknowledge: NONE
Cause: Safety parameters have been changed; these will only take effect following a POWER ON.
Notice:
All changed parameters of the safety motion monitoring functions will only take effect following a POWER ON.
Alarm value (r2124, interpret decimal):
Parameter number of the safety parameter which has changed, necessitating a POWER ON.
Remedy: - execute the function "Copy RAM to ROM".
- carry out a POWER ON (power off/on).

A01696 (F) SI Motion: Testing of the motion monitoring functions selected when booting

Reaction: NONE
Acknowledge: NONE
Cause: The test of the motion monitoring functions was already illegally active when booting.
This is the reason that the test is only carried out again after selecting the forced checking procedure parameterized in p9705.
Note:
This message does not result in a safety stop response.
See also: p9705 (SI Motion: Test stop signal source)
Remedy: De-select the forced checking procedure of the safety motion monitoring functions and then select again.
The signal source for initiation is parameterized in binector input p9705.
See also: p9705 (SI Motion: Test stop signal source)

A01697 (F) SI Motion: Motion monitoring functions must be tested

Reaction: NONE
Acknowledge: NONE
Cause: The time set in p9559 for the forced checking procedure of the safety motion monitoring functions has been exceeded. A new test is required.
After next selecting the forced checking procedure parameterized in p9705, the message is withdrawn and the monitoring time is reset.
Note:
- This message does not result in a safety stop response.
- As the shutdown paths are not automatically checked during booting, an alarm is always issued once booting is complete.

- The test must be performed within a defined, maximum time interval (p9559, maximum of 9000 hours) in order to comply with the requirements as laid down in the standards for timely fault detection and the conditions to calculate the failure rates of safety functions (PFH value). Operation beyond this maximum time period is permissible if it can be ensured that the forced checking procedure is performed before persons enter the hazardous area and who are depending on the safety functions correctly functioning.

See also: p9559 (SI Motion forced checking procedure timer (processor 1)), p9705 (SI Motion: Test stop signal source)

Remedy: Carry out the forced checking procedure of the safety motion monitoring functions.
The signal source for initiation is parameterized in binector input p9705.
See also: p9705 (SI Motion: Test stop signal source)

A01698 (F) SI P1: Commissioning mode active

Reaction: NONE

Acknowledge: NONE

Cause: The commissioning of the "Safety Integrated" function is selected.
This message is withdrawn after the safety functions have been commissioned.

Note:

- This message does not result in a safety stop response.
 - In the safety commissioning mode, the "STO" function is internally selected.
- See also: p0010 (Drive commissioning parameter filter)

Remedy: Not necessary.

A01699 (F) SI P1: Shutdown path must be tested

Reaction: NONE

Acknowledge: NONE

Cause: The time set in p9659 for the forced checking procedure of the safety shutdown paths has been exceeded. The safety shutdown paths must be re-tested.

After the next time the "STO" function is de-selected, the message is withdrawn and the monitoring time is reset.

Note:

- This message does not result in a safety stop response.
- The test must be performed within a defined, maximum time interval (p9659, maximum of 9000 hours) in order to comply with the requirements as laid down in the standards for timely fault detection and the conditions to calculate the failure rates of safety functions (PFH value).

Operation beyond this maximum time period is permissible if it can be ensured that the forced checking procedure is performed before persons enter the hazardous area and who are depending on the safety functions correctly functioning.

See also: p9659 (SI forced checking procedure timer)

Remedy: Select STO and then de-select again.

Note:

STO: Safe Torque Off

C01700 SI Motion P1: STOP A initiated

Reaction: OFF2

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The drive is stopped via a STOP A (pulses are suppressed via the safety shutdown path of processor 1).

Possible causes:

- stop request from processor 2.
- Pulses not suppressed after test stop selection.
- subsequent response to the message C01706 "SI Motion P1: SAM/SBR limit exceeded".
- Subsequent response to the message C01714 "SI Motion P1: Safely-Limited Speed exceeded".
- Subsequent response to the message C01701 "SI Motion P1: STOP B initiated".

Remedy:

- remove the cause of the fault on the monitoring channel of processor 2.
- carry out a diagnostics routine for message C01706.
- carry out a diagnostics routine for message C01714.
- carry out a diagnostics routine for message C01701.
- check the shutdown path of processor 1.
- replace Power Module.
- replace Control Unit.

This message can be acknowledged without a POWER ON as follows:

- via F-DI or PROFIsafe.

Note:

F-DI: Failsafe Digital Input

SAM: Safe Acceleration Monitor (safe acceleration monitoring)

SBR: Safe Brake Ramp (safe brake ramp monitoring)

C01701 SI Motion P1: STOP B initiated

Reaction: NONE (OFF3)

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The drive is stopped via a STOP B (braking along the OFF3 deceleration ramp).
As a result of this fault, after the speed threshold parameterized in p9560 is fallen below, message C01700 "STOP A initiated" is output.

Possible causes:

- stop request from processor 2.
- Subsequent response to the message C01714 "SI Motion P1: Safely-Limited Speed exceeded".
- subsequent response to the message C01711 "SI Motion P1: Defect in a monitoring channel".
- subsequent response to the message C01707 "SI Motion P1: tolerance for safe operating stop exceeded".

Remedy: - remove the cause of the fault on the monitoring channel of processor 2.
- carry out a diagnostics routine for message C01714.
- carry out a diagnostics routine for message C01711.
- carry out a diagnostics routine for message C01707.

This message can be acknowledged without a POWER ON as follows:

- motion monitoring functions integrated in the drive: F-DI or PROFIsafe.

Note:

F-DI: Failsafe Digital Input

C01706 SI Motion P1: SAM/SBR limit exceeded

Reaction: NONE

Acknowledge: IMMEDIATELY (POWER ON)

Cause: Motion monitoring functions with set acceleration monitoring (SAM, p9506 = 3):
- after initiating STOP B (SS1) the velocity has exceeded the selected tolerance.
Motion monitoring functions with set brake ramp monitoring (SBR, p9506 = 1):
- after initiating STOP B (SS1) or SLS changeover to the lower speed stage, the speed has exceeded the selected tolerance.

The drive is shut down by the message C01700 "SI Motion: STOP A initiated".

Remedy: Check the braking behavior and, if necessary, adapt the parameterization of the parameter settings of the "SAM" or the "SBR" function.

This message can be acknowledged without a POWER ON as follows:

- motion monitoring functions integrated in the drive: via F-DI or PROFIsafe.

Note:

F-DI: Failsafe Digital Input

SAM: Safe Acceleration Monitor (safe acceleration monitoring)

SBR: Safe Brake Ramp (safe brake ramp monitoring)

SI: Safety Integrated

See also: p9548 (SI Motion SAM actual velocity tolerance (processor 1)), p9581 (SI Motion brake ramp reference value (processor 1)), p9582 (SI Motion brake ramp delay time (processor 1)), p9583 (SI Motion brake ramp monitoring time (processor 1))

C01711 SI Motion P1: Defect in a monitoring channel

Reaction: NONE

Acknowledge: IMMEDIATELY (POWER ON)

Cause: When cross-comparing the two monitoring channels, the drive detected a difference between the input data or results of the monitoring functions and initiated a STOP F. One of the monitoring functions no longer reliably functions - i.e. safe operation is no longer possible.

If at least one monitoring function is active, then message C01701 "SI Motion: STOP B initiated" is output.

The message value that resulted in a STOP F is displayed in r9725. The message values described involve the crosswise data comparison between processor 1 and processor 2.

The following message values may also occur in the following cases if the cause that is explicitly mentioned does not apply:

- synchronization error between processor 1 and processor 2.

Message value (r2124, interpret decimal):

0 to 999: Number of the cross-compared data that resulted in this fault.

0: Stop request from the other monitoring channel.

1: Status image of monitoring functions SLS or SAM/SBR (result list 1) (r9710[0], r9710[1]).

2: Status image of monitoring function $n < nx$ (result list 2) (r9711[0], r9711[1]).

3: The position actual value differential (r9713) between the two monitoring channels is greater than the tolerance in p9542/p9342.

4: Error when synchronizing the crosswise data comparison between the two channels.

5: Function enable signals (p9501/p9301) Safety monitoring clock cycle too small (p9500/p9300).

6: Limit value for SLS1 (p9531[0]/p9331[0])

7: Limit value for SLS2 (p9531[1]/p9331[1])

8: Limit value for SLS3 (p9531[2]/p9331[2])

9: Limit value for SLS4 (p9531[3]/p9331[3])

31: Position tolerance (p9542/p9342).

42: Shutdown speed, pulse canc. (p9560/p9360)

43: Memory test, stop response (STOP A).

44 ... 57: General

Possible cause 1 (during commissioning or parameter modification)

The tolerance value for the monitoring function is not the same on the two monitoring channels.

Possible cause 2 (during active operation)

The limit values are based on the actual value (r9713). If the safe actual values on the two monitoring channels do not match, the limit values, which have been set at a defined interval, will also be different (i.e. corresponding to fault value 3). This can be ascertained by checking the safe actual positions.

44: Position actual value (r9713) + limit value for SLS1 (p9531[0]/p9331[0])

45: Position actual value (r9713) - limit value for SLS1 (p9531[0]/p9331[0])

46: Position actual value (r9713) + limit value for SLS2 (p9531[1]/p9331[1])

47: Position actual value (r9713) - limit value for SLS2 (p9531[1]/p9331[1])

48: Position actual value (r9713) + limit value for SLS3 (p9531[2]/p9331[2])

49: Position actual value (r9713) - limit value for SLS3 (p9531[2]/p9331[2])

50: Position actual value (r9713) + limit value for SLS4 (p9531[3]/p9331[3])

51: Position actual value (r9713) - limit value for SLS4 (p9531[3]/p9331[3])

54: Position actual value (r9713) + limit value nx (p9546/p9346) + tolerance (p9542/p9342)

55: Position actual value (r9713) + limit value nx (p9546/p9346)

56: Position actual value (r9713) - limit value nx (p9546/p9346)

57: Position actual value (r9713) - limit value nx (p9546/p9346) - tolerance (p9542/p9342)

58: Actual stop request.

75: Velocity limit nx (p9546, p9346).

76: Stop response for SLS1 (p9563[0]/p9363[0])

77: Stop response for SLS2 (p9563[1]/p9363[1])

78: Stop response for SLS3 (p9563[2]/p9363[2])

79: Stop response for SLS4 (p9563[3]/p9363[3])

81: Velocity tolerance for SAM (p9548/p9348)

83: Acceptance test timer (p9558/p9358)

230: Filter time constant for $n < nx$.

231: Hysteresis tolerance for $n < nx$.

232: Smoothed velocity actual value.

233: Smoothed velocity actual value + limit value nx / safety monitoring clock cycle + hysteresis tolerance.

234: Smoothed velocity actual value + limit value nx / safety monitoring clock cycle.

235: Smoothed velocity actual value - limit value nx / safety monitoring clock cycle.

236: Smoothed velocity actual value - limit value nx / safety monitoring clock cycle - hysteresis tolerance.

237: SGA $n < nx$.

238: Speed limit value for SAM (p9568/p9368).

239: Acceleration for SBR (p9581/p9381 and p9583/p9383).

240: Inverse value of acceleration for SBR (p9581/p9381 and p9583/p9383).

241: Deceleration time for SBR (p9582/p9382).

244: Encoderless actual value sensing filter time (p9587/p9387).

245: Encoderless actual value sensing minimum current (p9588/p9388).

246: Voltage tolerance acceleration (p9589/p9389).

247: SDI tolerance (p9564/p9364).

248: SDI positive upper limit (7FFFFFFF hex).

249: Position actual value (r9713) - SDI tolerance.

250: Position actual value (r9713) + SDI tolerance.

251: SDI negative lower limit (80000001 hex).

252: SDI stop response (p9566/p9366).
253: SDI delay time (p9565/p9365).
254: Setting, behavior during pulse suppression (p9509/p9309).
1000: Watchdog timer has expired. Too many signal changes have occurred at the F-DI.
1001: Initialization error of watchdog timer.
1005: Pulses already suppressed for test stop selection.
1011: Acceptance test status between the monitoring channels differ.
1020: Cyc. communication failure between the monit. cycles.
1041: Current absolute value too low (encoderless)
1042: Current/voltage plausibility error
1043: Too many acceleration phases
1044: Actual current values plausibility error.
6000 ... 6999:
Error in the PROFIsafe control.
For these message values, the failsafe control signals (failsafe values) are transferred to the safety functions.
The significance of the individual message values is described in safety fault F01611.
Message values that have not been listed are only for internal Siemens troubleshooting.
See also: r9725 (SI Motion diagnostics STOP F)

Remedy:

Re message value = 0:
- no error was identified in this monitoring channel. Note the error message of the other monitoring channel (for processor 2: C30711).
Re message value = 3:
Commissioning phase:
- check the setting of the gear parameters on both monitoring channels (p9521/p9321, p9522/p9322).
- check the numerator of the gear ratio to ensure that it takes into account the motor pole pair number (p9522/p9322).
In operation:
- increase the ramp-function generator ramp-up/down time (p1120/p1121), reduce the dynamic performance of the drive.
Re message value = 1 ... 999:
- if the message value is listed under cause: Check the crosswise-compared parameters to which the message value refers.
- copy the safety parameters.
- carry out a POWER ON (power off/on).
- upgrade the Control Unit software.
Re message value = 1000:
- investigate the signal associated with the F-DI (contact problems).
Re message value = 1001:
- carry out a POWER ON (power off/on).
- upgrade the Control Unit software.
Re message value = 1005:
- check the conditions for pulse enable.
Re message value = 1011:
- for diagnostics, refer to parameter (r9571).
Re message value = 1020:
- carry out a POWER ON (power off/on).
- replace Control Unit.
Re message value = 1041:
- reduce the minimum current (p9588).
Re message value = 1042:
- increase the ramp-function generator ramp-up/down time (p1120/p1121).
- check that the current/speed control is set correctly (torque-generating/field-generating current and actual speed value may not fluctuate).
- reduce the dynamic response of the setpoint value.
- increase the minimum current (p9588).
Re message value = 1043:
- increase the voltage tolerance (p9589).
- increase the ramp-function generator ramp-up/down time (p1120/p1121).
- check that the current/speed control is set correctly (torque-generating/field-generating current and actual speed value may not fluctuate).
- reduce the dynamic response of the setpoint value.

Re message value = 6000 ... 6999:
 Refer to the description of the message values in safety fault F01611.
 This message can be acknowledged as follows:
 - motion monitoring functions integrated in the drive: via F-DI or PROFIsafe

C01712	SI Motion P1: Defect in F-IO processing
Reaction:	NONE
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	<p>When cross checking and comparing the two monitoring channels, the drive detected a difference between parameters or results of the F-IO processing and initiated a STOP F. One of the monitoring functions no longer reliably functions - i.e. safe operation is no longer possible.</p> <p>The safety message C01711 with message value 0 is also displayed due to initiation of STOP F.</p> <p>If at least one monitoring function is active, then safety message C01701 "SI Motion: STOP B initiated" is output.</p> <p>Message value (r2124, interpret decimal):</p> <p>Number of the cross-compared data that resulted in this message.</p> <p>1: SI discrepancy monitoring time inputs (p10002, p10102).</p> <p>2: SI acknowledgement internal event input terminal (p10006, p10106).</p> <p>3: SI STO input terminal (p10022, p10122).</p> <p>4: SI SS1 input terminal (p10023, p10123).</p> <p>7: SI SLS input terminal (p10026, p10126).</p> <p>13: Different states for static inactive signal sources (p10006, p10022 ... p10026).</p> <p>14: SI discrepancy monitoring time outputs (p10002, p10102).</p> <p>15: SI acknowledgment internal event (p10006, p10106).</p> <p>46: SI digital inputs debounce time (p10017, p10117)</p> <p>47: Selection F-DI for PROFIsafe (p10050, p10150)</p> <p>48: Selection F-DI for PROFIsafe (p10050, p10150)</p> <p>49: SI SDI positive input terminal (p10030, p10130).</p> <p>50: SI SDI negative input terminal (p10031, p10131).</p>
Remedy:	<p>- check parameterization in the parameters involved and correct if required.</p> <p>- ensure equality by copying the SI data to processor 2 and then carry out an acceptance test.</p> <p>Note: This message can be acknowledged via F-DI or PROFIsafe.</p> <p>Note: F-DI: Failsafe Digital Input SLS: Safely-Limited Speed SS1: Safe Stop 1 STO: Safe Torque Off</p>

C01714	SI Motion P1: Safely-Limited Speed exceeded
Reaction:	NONE
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	<p>The drive has moved faster than that specified by the velocity limit value (p9531). The drive is stopped as a result of the configured stop response (p9563).</p> <p>Message value (r2124, interpret decimal):</p> <p>100: SLS1 exceeded.</p> <p>200: SLS2 exceeded.</p> <p>300: SLS3 exceeded.</p> <p>400: SLS4 exceeded.</p>
Remedy:	<p>- check the traversing/motion program in the control.</p> <p>- check the limits for "Safely-Limited Speed (SLS) and if required, adapt (p9531).</p> <p>This message can be acknowledged as follows:</p> <p>- via F-DI or PROFIsafe.</p> <p>Note: SLS: Safely-Limited Speed</p> <p>See also: p9531 (SI Motion SLS limit values (processor 1)), p9563 (SI Motion SLS-specific stop response (processor 1))</p>

C01716	<p>SI Motion P1: Tolerance for safe motion direction exceeded</p> <p>Reaction: NONE</p> <p>Acknowledge: IMMEDIATELY (POWER ON)</p> <p>Cause: The tolerance for the "safe motion direction" function was exceeded. The drive is stopped as a result of the configured stop response (p9566). Message value (r9749, interpret decimal): 0: Tolerance for the "safe motion direction positive" function exceeded. 1: Tolerance for the "safe motion direction negative" function exceeded.</p> <p>Remedy:</p> <ul style="list-style-type: none"> - check the traversing/motion program in the control. - check the tolerance for "SDI" function and if required, adapt (p9564). <p>This message can be acknowledged as follows:</p> <ul style="list-style-type: none"> - Deselect the "SDI" function and select again. - Perform a safe acknowledgment via F-DI or PROFIsafe. <p>Note: SDI: Safe Direction SI: Safety Integrated See also: p9564 (SI Motion SDI tolerance (processor 1)), p9565 (SI Motion SDI delay time (processor 1)), p9566 (SI Motion SDI stop response (processor 1))</p>
C01770	<p>SI Motion P1: Discrepancy error of the failsafe inputs</p> <p>Reaction: NONE</p> <p>Acknowledge: IMMEDIATELY (POWER ON)</p> <p>Cause: The fail-safe digital inputs (F-DI) show a different state longer than that parameterized in p10002 / p10102. Fault value (r0949, interpret binary): Bit 0: Discrepancy error for F-DI 0 Bit 1: Discrepancy error for F-DI 1 ...</p> <p>Note: If several discrepancy errors occur consecutively, then this fault is only signaled for the first error that occurs.</p> <p>Remedy:</p> <ul style="list-style-type: none"> - check the wiring of the F-DI (contact problems). <p>Note: This message can be acknowledged via F-DI or PROFIsafe. Discrepancy errors of an F-DI can only be completely acknowledged if safe acknowledgement was carried out once the cause of the error was resolved (p10006 or acknowledgment via PROFIsafe). As long as safety acknowledgement was not carried out, the corresponding F-DI stays in the safe state internally. For cyclic switching operations at the F-DI, it may be necessary to adapt the discrepancy time to the switching frequency. If the period of a cyclic switching pulse corresponds to twice the value of p10002, then the following formulas should be checked: - $p10002 < (tp / 2) - td$ (discrepancy time must be less than half the period minus the actual discrepancy time) - $p10002 \geq p9500$ (discrepancy time must be no less than p9500) - $p10002 > td$ (discrepancy time must be greater than the switch discrepancy time which may actually apply) td = possible actual discrepancy time (in ms) that can occur with a switching operation. This must correspond to at least 1 SI monitoring cycle (see p9500). tp = period for a switching operation in ms. When debounce p10017 is active, the discrepancy time is directly specified by the debounce time. If the period of a cyclic switching pulse corresponds to twice the debounce time, then the following formulas should be checked. - $p10002 < p10017 + 1 \text{ ms} - td$ - $p10002 > td$ - $p10002 \geq p9500$</p> <p>Example: For a 12 ms SI monitoring cycle and a switching frequency of 110 ms (p10017 = 0), the maximum discrepancy time which can be set is as follows: $p10002 \leq (110/2 \text{ ms}) - 12 \text{ ms} = 43 \text{ ms}$ Rounded-off, p10002 $\leq 36 \text{ ms}$ is obtained (since the discrepancy time can only be accepted as a whole SI monitoring cycle, the value will need to be rounded up or down to a whole SI monitoring cycle if the result is not an exact multiple of an SI monitoring cycle).</p> <p>Note: F-DI: Failsafe Digital Input</p>

A01772 **SI Motion P1: Test stop failsafe inputs/outputs active**

Reaction: NONE

Acknowledge: NONE

Cause: The test stop for the fail-safe digital inputs (F-DI) and/or fail-safe digital outputs (F-DO) is presently being performed.
 Note:
 F-DI: Failsafe Digital Input
 F-DO: Failsafe Digital Output

Remedy: The alarm disappears automatically after successfully ending or canceling (when a fault condition occurs) the test stop.

F01773 **SI Motion P1: Test stop error**

Reaction: NONE

Acknowledge: IMMEDIATELY (POWER ON)

Cause: A fault has occurred on processor 1 (P1) during the test stop for the fail-safe outputs.
 Fault value (r0949, interpret hexadecimal):
 RRRVWXYZ hex:
 R: Reserved.
 V: Actual state of the DO channel concerned (see X) on P1 (corresponds to the states read back from the hardware, bit 0 = DO 0, bit 1 = DO 1, etc.).
 W: Required state of the DO channel concerned (see X, bit 0 = DO 0, bit 1 = DO 1, etc.).
 X: DO channels involved, which indicate an error (bit 0 = DO 0, bit 1 = DO 1, etc.).
 Y: Reason for the test stop fault.
 Z: State of the test stop in which the fault has occurred.
 Y: Reason for the test stop fault
 Y = 1: MM side in incorrect test stop state (internal fault).
 Y = 2: Expected states of the DOs were not fulfilled (CU240D-2: readback via DI 5 / CU250S-2 readback via DI 6).
 Y = 3: Incorrect timer state on CU side (internal fault).
 Y = 4: Expected states of the diag DOs were not fulfilled (CU240D-2: internal readback on P2 channel / CU250S-2 readback via DI 6).
 Y = 5: Expected states of the second diag DOs were not fulfilled (CU240D-2: internal readback on P1 channel).
 X and V indicate the DI or Diag-DO state dependent upon the reason for the fault (2, 4 or 5).
 In the event of multiple test stop faults, the first one that occurred is shown.
 Z: Test stop state and associated test actions
 Z = 0 ... 3: Synchronization phase of test stop between P1 and P2 no switching operations
 Z = 4: DO + OFF and DO - OFF
 Z = 5: Check to see if states are as expected
 Z = 6: DO + ON and DO - ON
 Z = 7: Check to see if states are as expected
 Z = 8: DO + OFF and DO - ON
 Z = 9: Check to see if states are as expected
 Z = 10: DO + ON and DO - OFF
 Z = 11: Check to see if states are as expected
 Z = 12: DO + OFF and DO - OFF
 Z = 13: Check to see if states are as expected
 Z = 14: End of test stop
 Diag expected states in table format:
 Test stop state: Expectation Mode 1 / Mode 2 / Mode 3 / Mode 4
 5: 0/-/-/1
 7: 0/-/-/0
 9: 0/-/-/0
 11: 1/-/-/1
 13: 0/-/-/1
 Second diag expected states in table format:
 Test stop state: Expectation Mode 1 / Mode 2 / Mode 3 / Mode 4
 5: -/-/-/1
 7: -/-/-/0
 9: -/-/-/1
 11: -/-/-/0
 13: -/-/-/1

DI expected states in table format:

Test stop state: Expectation Mode 1 / Mode 2 / Mode 3 / Mode 4

5: -/1/1/-

7: -/0/0/-

9: -/0/1/-

11: -/0/1/-

13: -/1/1/-

Example:

Fault F01773 (P1) is signaled with fault value = 0001_0127 and fault F30773 (P2) is signaled with fault value 0000_0127.

This means that in state 7 (Z = 7) the state of the external readback signal was not set correctly (Y = 2) after DO-0 (X = 1) was switched to ON/ON.

Fault value 0001_0127 indicates that 0 was expected (W = 0) and 1 (V = 1) was read back from the hardware.

Fault value 0000_0127 on the P2 indicates that the states were as expected.

In the case of fault F30773, W and V are always identical; a value of 0 always means that 0 was expected at the readback input but was not present on the other channel (P1).

Remedy:

Check the wiring of the F-DOs and restart the test stop.

Note:

The fault is withdrawn if the test stop is successfully completed.

In the event of multiple test stop faults, the first one that occurred is shown.

Once the test stop has been restarted the next queued test stop fault will be signaled (if there is one).

A01774 SI Motion P1: Test stop necessary

Reaction: NONE

Acknowledge: NONE

Cause:

- after powering up the drive, a test stop has still not been carried out.
- a new test stop is required after commissioning.
- the time to carry out the forced checking procedure (test stop) has expired (p10003).

Note:

- The test must be performed within a defined, maximum time interval (p10003, maximum of 8760 hours) in order to comply with the requirements as laid down in the standards for timely fault detection and the conditions to calculate the failure rates of safety functions (PFH value). Operation beyond this maximum time period is permissible if it can be ensured that the forced checking procedure is performed before persons enter the hazardous area and who are depending on the safety functions correctly functioning.

Remedy:

Initiate test stop (BI: p10007).

A01796 (F, N) SI P1: Wait for communication

Reaction: NONE

Acknowledge: NONE

Cause: The drive waits for communication to be established to execute the safety-relevant motion monitoring functions.

Note:

In this state, the pulses are safely suppressed.

Alarm value (r2124, interpret decimal):

3: Wait for communication to be established to PROFIsafe F-Host.

Remedy:

If, after a longer period of time, the message is not automatically withdrawn, the following checks have to be made:

- Check any other PROFIsafe communication messages/signals present and evaluate them.

- check the operating state of the F-Host.

- Check the communication connection to the F Host.

See also: p9601 (SI enable functions integrated in the drive (processor 1)), p9801 (SI enable functions integrated in the drive (processor 2))

C01798 SI Motion P1: Test stop running

Reaction: NONE

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The test stop is active.

Remedy:

Not necessary.

The message is withdrawn when the test stop is finished.

C01799	SI Motion P1: Acceptance test mode active
Reaction:	NONE
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The acceptance test mode is active.
Remedy:	Not necessary. The message is withdrawn when exiting the acceptance test mode.

A01900 (F)	PROFIBUS: Configuration telegram error
Reaction:	NONE
Acknowledge:	NONE
Cause:	A PROFIBUS master attempts to establish a connection using an incorrect configuring telegram. Alarm value (r2124, interpret decimal): 2: Too many PZD data words for input or output. The number of possible PZD is specified by the number of indices in r2050/p2051. 3: Uneven number of bytes for input or output. 211: Unknown parameterizing block. 501: PROFIsafe parameter error (e.g. F_dest). 502: PROFIsafe telegram does not match. Additional values: Only for internal Siemens troubleshooting.
Remedy:	Check the bus configuration on the master and slave sides. Re alarm value = 2: Check the number of data words for input and output. Re alarm value = 211: Ensure offline version <= online version. Re alarm value = 501: Check the set PROFIsafe address (p9610). Re alarm value = 502: Check the enable of F-DI (p9501.30).

F01910 (N, A)	Fieldbus interface setpoint timeout
Reaction:	OFF3 (IASC/DCBRK, NONE, OFF1, OFF2, STOP2)
Acknowledge:	IMMEDIATELY
Cause:	The reception of setpoints from the fieldbus interface has been interrupted. - bus connection interrupted. - communication partner switched off. For PROFIBUS: - PROFIBUS master set into the STOP state. See also: p2040 (Fieldbus interface monitoring time), p2047 (PROFIBUS additional monitoring time)
Remedy:	Ensure bus connection has been established and switch on communication peer. - if required, adapt p2040. For PROFIBUS: - set the PROFIBUS master to the RUN state. - slave redundancy: For operation on a Y link, it must be ensured that "DP alarm mode = DPV1" is set in the slave parameterization.

A01920 (F)	PROFIBUS: Interruption cyclic connection
Reaction:	NONE
Acknowledge:	NONE
Cause:	The cyclic connection to the PROFIBUS master is interrupted.
Remedy:	Establish the PROFIBUS connection and activate the PROFIBUS master in the cyclic mode.

A01945	PROFIBUS: Connection to the Publisher failed
Reaction:	NONE
Acknowledge:	NONE
Cause:	For PROFIBUS peer-to-peer data transfer, the connection to at least one Publisher has failed. Alarm value (r2124, interpret binary): Bit 0 = 1: Publisher with address in r2077[0], connection failed. ... Bit 15 = 1: Publisher with address in r2077[15], connection failed.
Remedy:	Check the PROFIBUS cables. See also: r2077 (PROFIBUS diagnostics peer-to-peer data transfer addresses)
F01946 (A)	PROFIBUS: Connection to the Publisher aborted
Reaction:	OFF1 (NONE, OFF2, OFF3)
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The connection to at least one Publisher for PROFIBUS peer-to-peer data transfer in cyclic operation has been aborted. Fault value (r0949, interpret binary): Bit 0 = 1: Publisher with address in r2077[0], connection aborted. ... Bit 15 = 1: Publisher with address in r2077[15], connection aborted.
Remedy:	- check the PROFIBUS cables. - check the state of the Publisher that has the aborted connection. See also: r2077 (PROFIBUS diagnostics peer-to-peer data transfer addresses)
F01951	CU SYNC: Synchronization application clock cycle missing
Reaction:	OFF2 (NONE)
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	Internal synchronization of the application cycles unsuccessful. Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.
Remedy:	- carry out a POWER ON (power off/on) for all components. - upgrade the Control Unit software.
A01953	CU SYNC: Synchronization not completed
Reaction:	NONE
Acknowledge:	NONE
Cause:	After the drive system was powered up, synchronization between the basic clock cycle and application clock cycle was started but was not completed within the selected time tolerance. Alarm value (r2124, interpret decimal): Only for internal Siemens troubleshooting.
Remedy:	Carry out a POWER ON (power off/on).
A02050	Trace: Start not possible
Reaction:	NONE
Acknowledge:	NONE
Cause:	The trace has already been started.
Remedy:	Stop the trace and, if necessary, start again.
A02055	Trace: Recording time too short
Reaction:	NONE
Acknowledge:	NONE
Cause:	The trace duration is too short. The minimum is twice the value of the trace clock cycle.
Remedy:	Check the selected recording time and, if necessary, adjust.

A02056	Trace: Recording cycle too short
Reaction:	NONE
Acknowledge:	NONE
Cause:	The selected recording cycle is shorter than the selected basic clock cycle 0 (p0110[0]).
Remedy:	Increase the value for the trace cycle.
A02057	Trace: Time slice clock cycle invalid
Reaction:	NONE
Acknowledge:	NONE
Cause:	The time slice clock cycle selected does not match any of the existing time slices.
Remedy:	Enter an existing time slice clock cycle. The existing time slices can be read out via p7901. See also: r7901 (Sampling times)
A02058	Trace: Time slice clock cycle for endless trace not valid
Reaction:	NONE
Acknowledge:	NONE
Cause:	The selected time slice clock cycle cannot be used for the endless trace
Remedy:	Enter the clock cycle of an existing time slice with a cycle time ≥ 2 ms for up to 4 recording channels or ≥ 4 ms from 5 recording channels per trace. The existing time slices can be read out via p7901. See also: r7901 (Sampling times)
A02059	Trace: Time slice clock cycle for 2 x 8 recording channels not valid
Reaction:	NONE
Acknowledge:	NONE
Cause:	The selected time slice clock cycle cannot be used for more than 4 recording channels.
Remedy:	Enter the clock cycle of an existing time slice with a cycle time ≥ 4 ms or reduce the number of recording channels to 4 per trace. The existing time slices can be read out via p7901. See also: r7901 (Sampling times)
A02060	Trace: Signal to be traced missing
Reaction:	NONE
Acknowledge:	NONE
Cause:	- a signal to be traced was not specified. - the specified signals are not valid.
Remedy:	- specify the signal to be traced. - check whether the relevant signal can be traced.
A02061	Trace: Invalid signal
Reaction:	NONE
Acknowledge:	NONE
Cause:	- the specified signal does not exist. - the specified signal can no longer be traced (recorded).
Remedy:	- specify the signal to be traced. - check whether the relevant signal can be traced.
A02062	Trace: Invalid trigger signal
Reaction:	NONE
Acknowledge:	NONE
Cause:	- a trigger signal was not specified. - the specified signal does not exist. - the specified signal is not a fixed-point signal. - the specified signal cannot be used as a trigger signal for the trace.
Remedy:	Specify a valid trigger signal.

A02063	Trace: Invalid data type
Reaction:	NONE
Acknowledge:	NONE
Cause:	The specified data type to select a signal using a physical address is invalid.
Remedy:	Use a valid data type.
A02070	Trace: Parameter cannot be changed
Reaction:	NONE
Acknowledge:	NONE
Cause:	The trace parameter settings cannot be changed when the trace is active.
Remedy:	- stop the trace before parameterization. - if required, start the trace.
A02075	Trace: Pretrigger time too long
Reaction:	NONE
Acknowledge:	NONE
Cause:	The selected pretrigger time must be shorter than the trace time.
Remedy:	Check the pretrigger time setting and change if necessary.
F02080	Trace: Parameterization deleted due to unit changeover
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	The trace parameterization in the drive unit was deleted due to a unit changeover or a change in the reference parameters.
Remedy:	Restart trace.
A02097	MTrace: multiple trace cannot be activated
Reaction:	NONE
Acknowledge:	NONE
Cause:	The following functions or settings are not permissible in conjunction with a multiple trace: - measuring function. - long-time trace - trigger condition "immediate recording start" (IMMEDIATE) - trigger condition "start with function generator" (FG_START).
Remedy:	- Deactivate multiple trace. - Deactivate function or setting that is not permissible.
A02098	MTrace: cannot be saved
Reaction:	NONE
Acknowledge:	NONE
Cause:	It is not possible to save the measurement results of a multiple trace on the memory card. A multiple trace is not started or is canceled. Alarm value (r2124, interpret decimal): 1: memory card cannot be accessed (not inserted or blocked by a mounted USB drive). 3: data save operation too slow. A second trace has been completed before the measurement results of the first trace were able to be saved. 4: data save operation canceled (e.g. a file required for the save operation was no longer able to be found).
Remedy:	- insert or remove the memory card. - use a larger memory card. - configure the trace with a longer trace time or use an endless trace. - avoid saving parameters while the multiple trace is running. Saving parameters can block writing measurement result files to the card, so that this alarm is output with alarm value 3 - check whether other functions are presently accessing measurement result files of the multiple trace.

A02099	Trace: Insufficient Control Unit memory
Reaction:	NONE
Acknowledge:	NONE
Cause:	The memory space still available on the Control Unit is no longer sufficient for the trace function.
Remedy:	Reduce the memory required, e.g. as follows: <ul style="list-style-type: none"> - reduce the trace time. - increase the trace clock cycle. - reduce the number of signals to be traced.
A02150	OA: Application cannot be loaded
Reaction:	NONE
Acknowledge:	NONE
Cause:	The system was not able to load an OA application. Alarm value (r2124, interpret hexadecimal): Only for internal Siemens troubleshooting.
Remedy:	<ul style="list-style-type: none"> - carry out a POWER ON (power off/on) for all components. - upgrade firmware to later version. - contact the Hotline. <p>Note: OA: Open Architecture</p>
F02151 (A)	OA: Internal software error
Reaction:	OFF2 (NONE, OFF1, OFF3)
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	An internal software error has occurred within an OA application. Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.
Remedy:	<ul style="list-style-type: none"> - carry out a POWER ON (power off/on) for all components. - upgrade firmware to later version. - contact the Hotline. - replace the Control Unit. <p>Note: OA: Open Architecture</p>
F02152 (A)	OA: Insufficient memory
Reaction:	OFF1
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	Too many functions have been configured on this Control Unit (e.g. too many drives, function modules, data sets, OA applications, blocks, etc). Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.
Remedy:	<ul style="list-style-type: none"> - change the configuration on this Control Unit (e.g. fewer drives, function modules, data sets, OA applications, blocks, etc). - use an additional Control Unit. <p>Note: OA: Open Architecture</p>
F03000	NVRAM fault on action
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	A fault occurred during execution of action p7770 = 1 or 2 for the NVRAM data. Fault value (r0949, interpret hexadecimal): yyxx hex: yy = fault cause, xx = application ID yy = 1: The action p7770 = 1 is not supported by this version if Drive Control Chart (DCC) is activated for the drive object concerned. yy = 2: The data length of the specified application is not the same in the NVRAM and the backup.

yy = 3:
The data checksum in p7774 is not correct.
yy = 4:
No data available to load.

Remedy:
- Perform the remedy according to the results of the troubleshooting.
- If necessary, start the action again.

F03001 NVRAM checksum incorrect

Reaction: NONE
Acknowledge: IMMEDIATELY
Cause: A checksum error occurred when evaluating the non-volatile data (NVRAM) on the Control Unit. The NVRAM data affected was deleted.
Remedy: Carry out a POWER ON (power off/on) for all components.

F03505 (N, A) CU: Analog input wire breakage

Reaction: OFF1 (NONE, OFF2)
Acknowledge: IMMEDIATELY (POWER ON)
Cause: The wire-break monitoring for an analog input has responded. The input current of the analog input has undershot the threshold value parameterized in p0761[0...3].
p0756[0]: analog input 0 (only CU240D-2)
p0756[1]: analog input 1 (only CU240D-2)
Fault value (r0949, interpret decimal):
yxxx dec
y = analog input (0 = analog input 0 (AI 0), 1 = analog input 1 (AI 1))
xxx = component number (p0151)
Note:

For the following analog input type, the wire breakage monitoring is active:
p0756[0...1] = 1 (2 ... 10 V with monitoring)

Remedy: Check the connection to the signal source for interruptions.
Check the magnitude of the injected current - it is possible that the infed signal is too low.
The input current measured by the analog input can be read in r0752[x].

A03510 (F, N) CU: Calibration data not plausible

Reaction: NONE
Acknowledge: NONE
Cause: During booting, the calibration data for the analog inputs is read and checked with respect to plausibility. At least one calibration data point was determined to be invalid.
Remedy:
- power down/power up the power supply for the Control Unit.
If it reoccurs, replace the module.
In principle, operation could continue.
The analog channel involved possibly does not achieve the specified accuracy.

A05000 (N) Power unit: Overtemperature heat sink AC inverter

Reaction: NONE
Acknowledge: NONE
Cause: The alarm threshold for overtemperature at the inverter heat sink has been reached. The response is set using p0290.
If the temperature of the heat sink increases by an additional 5 K, then fault F30004 is initiated.
Remedy: Check the following:
- is the ambient temperature within the defined limit values?
- have the load conditions and the load duty cycle been appropriately dimensioned?
- has the cooling failed?

A05001 (N)	Power unit: Overtemperature depletion layer chip
Reaction:	NONE
Acknowledge:	NONE
Cause:	Alarm threshold for overtemperature of the power semiconductor in the AC converter has been reached. Note: - The response is set using p0290. - If the depletion layer temperature increases by an additional 15 K, then fault F30025 is triggered.
Remedy:	Check the following: - is the ambient temperature within the defined limit values? - have the load conditions and the load duty cycle been appropriately dimensioned? - has the cooling failed? - pulse frequency too high? See also: r0037 (Power unit temperatures), p0290 (Power unit overload response)
A05002 (N)	Power unit: Air intake overtemperature
Reaction:	NONE
Acknowledge:	NONE
Cause:	For chassis power units, the following applies: The alarm threshold for the air intake overtemperature has been reached. For air-cooled power units, the threshold is 42 °C (hysteresis 2 K). The response is set using p0290. If the air intake temperature increases by an additional 13 K, then fault F30035 is output.
Remedy:	Check the following: - is the ambient temperature within the defined limit values? - has the fan failed? Check the direction of rotation.
A05004 (N)	Power unit: Rectifier overtemperature
Reaction:	NONE
Acknowledge:	NONE
Cause:	The alarm threshold for the overtemperature of the rectifier has been reached. The response is set using p0290. If the temperature of the rectifier increases by an additional 5 K, then fault F30037 is triggered.
Remedy:	Check the following: - is the ambient temperature within the defined limit values? - have the load conditions and the load duty cycle been appropriately dimensioned? - has the fan failed? Check the direction of rotation. - has a phase of the line supply failed? - is an arm of the supply (incoming) rectifier defective?
A05006 (N)	Power unit: Overtemperature thermal model
Reaction:	NONE
Acknowledge:	NONE
Cause:	The temperature difference between the chip and heat sink has exceeded the permissible limit value (blocksize power units only). Depending on p0290, an appropriate overload response is initiated. See also: r0037 (Power unit temperatures)
Remedy:	Not necessary. The alarm disappears automatically once the limit value is undershot. Note: If the alarm does not disappear automatically and the temperature continues to rise, this can result in fault F30024. See also: p0290 (Power unit overload response)
F06310 (A)	Supply voltage (p0210) incorrectly parameterized
Reaction:	NONE (OFF1, OFF2)
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The measured DC voltage lies outside the tolerance range after pre-charging has been completed. The following applies for the tolerance range: $1.16 * p0210 < r0070 < 1.6 * p0210$ Note: The fault can only be acknowledged when the drive is powered down. See also: p0210 (Drive unit line supply voltage)

Remedy:

- check the parameterized supply voltage and if required change (p0210).
- check the line supply voltage.

See also: p0210 (Drive unit line supply voltage)

A06921 (N) Braking resistor phase unsymmetry

Reaction: NONE
Acknowledge: NONE
Cause: The three resistors of the braking chopper are not symmetrical.
Remedy:

- check the feeder cables to the braking resistors.
- If required, increase the value for detecting dissymmetry (p1364).

F06922 Braking resistor phase failure

Reaction: NONE
Acknowledge: IMMEDIATELY
Cause: A phase failure for the brake resistor was detected.
Fault value (r0949, interpret decimal):
11: Phase U
12: Phase V
13: Phase W
See also: p3235 (Phase failure signal motor monitoring time)
Remedy: Check the feeder cables to the braking resistors.

F07011 Drive: Motor overtemperature

Reaction: OFF2 (NONE, OFF1, OFF3, STOP2)
Acknowledge: IMMEDIATELY
Cause: KTY:
The motor temperature has exceeded the fault threshold (p0605) or the timer (p0606) after the alarm threshold was exceeded (p0604) has expired. The response parameterized in p0610 becomes active. The alarm is withdrawn if the response threshold for wire breakage or sensor not connected is exceeded ($R > 2120 \text{ Ohm}$).
PTC or bimetallic NC contact:
The response threshold of 1650 Ohm was exceeded or the NC contact opened and the timer (p0606) has expired. The response parameterized in p0610 becomes active.
Possible causes:
- Motor is overloaded
- motor ambient temperature too high.
- Wire break or sensor not connected
Fault value (r0949, interpret decimal):
200: The motor temperature model 1 (I2t) signals an overtemperature (p0612.0 = 1, p0611 > 0, p0615 reached).
See also: p0604, p0605, p0606, p0612, p0625, p0626, p0627, p0628
Remedy:

- Reduce the motor load.
- check the ambient temperature and the motor ventilation.
- check the wiring and the connection of the PTC or bimetallic NC contact.

See also: p0604, p0605, p0606, p0612, p0625, p0626, p0627, p0628

A07012 (N) Drive: Motor temperature model 1 overtemperature

Reaction: NONE
Acknowledge: NONE
Cause: The thermal I2t motor model for synchronous motors identified that the alarm threshold was exceeded.
See also: r0034 (Motor utilization), p0605 (Mot_temp_mod 1/2 threshold), p0611 (I2t motor model thermal time constant), p0612 (Mot_temp_mod activation)
Remedy:

- check the motor load and if required, reduce.
- check the motor ambient temperature.
- check the thermal time constant (p0611).

Note:
p0605 has no influence on the time up to an alarm being issued.
See also: r0034 (Motor utilization), p0605 (Mot_temp_mod 1/2 threshold), p0611 (I2t motor model thermal time constant), p0612 (Mot_temp_mod activation)

A07014 (N)	Drive: Motor temperature model configuration alarm
Reaction:	NONE
Acknowledge:	NONE
Cause:	A fault has occurred in the configuration of the motor temperature model. Alarm value (r2124, interpret decimal): 1: All motor temperature models: It is not possible to save the model temperature See also: p0610 (Motor overtemperature response)
Remedy:	- set the response for motor overtemperature to "Alarm and fault, no reduction of I_max" (p0610 = 2). See also: p0610 (Motor overtemperature response)
A07015	Drive: Motor temperature sensor alarm
Reaction:	NONE
Acknowledge:	NONE
Cause:	An error was detected when evaluating the temperature sensor set in p0601. With the fault, the time in p0607 is started. If the fault is still present after this time has expired, then fault F07016 is output; however, at the earliest, 50 ms after alarm A07015. Possible causes: - wire breakage or sensor not connected (KTY: R > 2120 Ohm). - measured resistance too low (PTC: R < 20 Ohm, KTY: R < 50 Ohm).
Remedy:	- make sure that the sensor is connected correctly. - check the parameterization (p0601). See also: r0035 (Motor temperature), p0601 (Motor temperature sensor type), p0607 (Temperature sensor fault timer)
F07016	Drive: Motor temperature sensor fault
Reaction:	OFF1 (NONE, OFF2, OFF3, STOP2)
Acknowledge:	IMMEDIATELY
Cause:	An error was detected when evaluating the temperature sensor set in p0601. Possible causes: - wire breakage or sensor not connected (KTY: R > 2120 Ohm). - measured resistance too low (PTC: R < 20 Ohm, KTY: R < 50 Ohm). Note: If alarm A07015 is present, the time in p0607 is started. If the fault is still present after this time has expired, then fault F07016 is output; however, at the earliest, 50 ms after alarm A07015. See also: p0607 (Temperature sensor fault timer)
Remedy:	- make sure that the sensor is connected correctly. - check the parameterization (p0601). - induction motors: De-activate temperature sensor fault (p0607 = 0). See also: r0035 (Motor temperature), p0601 (Motor temperature sensor type), p0607 (Temperature sensor fault timer)
F07080	Drive: Incorrect control parameter
Reaction:	NONE
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The closed-loop control parameters have been parameterized incorrectly (e.g. p0356 = L_spread = 0). Fault value (r0949, interpret decimal): The fault value includes the parameter number involved. The following parameter numbers only occur as fault values for vector drives: p0310, for synchronous motors: p0341, p0344, p0350, p0357 The following parameter numbers do not occur as fault values for synchronous motors: p0354, p0358, p0360 See also: p0310, p0311, p0341, p0344, p0350, p0354, p0356, p0357, p0358, p0360, p0400, p0404, p0408, p0640, p1082, p1300
Remedy:	Modify the parameter indicated in the fault value (r0949) (e.g. p0640 = current limit > 0). See also: p0311, p0341, p0344, p0350, p0354, p0356, p0358, p0360, p0400, p0404, p0408, p0640, p1082

F07082	Macro: Execution not possible
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	<p>The macro cannot be executed.</p> <p>Fault value (r0949, interpret hexadecimal): ccccbbaa hex: cccc = preliminary parameter number, bb = supplementary information, aa = fault cause</p> <p>Fault causes for the trigger parameter itself:</p> <p>19: Called file is not valid for the trigger parameter. 20: Called file is not valid for parameter 15. 21: Called file is not valid for parameter 700. 22: Called file is not valid for parameter 1000. 23: Called file is not valid for parameter 1500. 24: Data type of a TAG is incorrect (e.g. Index, number or bit is not U16).</p> <p>Fault causes for the parameters to be set:</p> <p>25: Error level has an undefined value. 26: Mode has an undefined value. 27: A value was entered as string in the tag value that is not "DEFAULT". 31: Entered drive object type unknown. 32: A device was not able to be found for the determined drive object number. 34: A trigger parameter was recursively called. 35: It is not permissible to write to the parameter via macro. 36: Check, writing to a parameter unsuccessful, parameter can only be read, not available, incorrect data type, value range or assignment incorrect. 37: Source parameter for a BICO interconnection was not able to be determined. 38: An index was set for a non-indexed (or CDS-dependent) parameter. 39: No index was set for an indexed parameter. 41: A bit operation is only permissible for parameters with the parameter format DISPLAY_BIN. 42: A value not equal to 0 or 1 was set for a BitOperation. 43: Reading the parameter to be changed by the BitOperation was unsuccessful. 51: Factory setting for DEVICE may only be executed on the DEVICE. 61: The setting of a value was unsuccessful.</p>
Remedy:	<p>- check the parameter involved. - check the macro file and BICO interconnection. See also: p0015 (Macro drive unit), p1000 (Speed setpoint selection), p1500 (Torque setpoint selection)</p>
F07083	Macro: ACX file not found
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	<p>The ACX file (macro) to be executed was not able to be found in the appropriate directory.</p> <p>Fault value (r0949, interpret decimal): Parameter number with which the execution was started.</p> <p>See also: p0015 (Macro drive unit), p1000 (Speed setpoint selection), p1500 (Torque setpoint selection)</p>
Remedy:	<p>- check whether the file is saved in the appropriate directory on the memory card.</p>
F07084	Macro: Condition for WaitUntil not fulfilled
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	<p>The WaitUntil condition set in the macro was not fulfilled in a certain number of attempts.</p> <p>Fault value (r0949, interpret decimal): Parameter number for which the condition was set.</p>
Remedy:	<p>Check and correct the conditions for the WaitUntil loop.</p>
F07086	Units changeover: Parameter limit violation due to reference value change
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	<p>A reference parameter was changed in the system. This resulted in the fact that for the parameters involved, the selected value was not able to be written in the per unit notation.</p>

The values of the parameters were set to the corresponding violated minimum limit/maximum limit or to the factory setting.

Possible causes:

- the steady-state minimum limit/maximum limit or that defined in the application was violated.

Fault value (r0949, parameter):

Diagnostics parameter to display the parameters that were not able to be re-calculated.

See also: p0304, p0305, p0310, p0596, p2000, p2001, p2002, p2003, r2004

Remedy: Check the adapted parameter value and if required correct.

F07088 Units changeover: Parameter limit violation due to units changeover

Reaction: NONE

Acknowledge: IMMEDIATELY

Cause: A changeover of units was initiated. This resulted in a violation of a parameter limit

Possible causes for the violation of a parameter limit:

- When rounding off a parameter corresponding to its decimal places, the steady-state minimum limit or maximum limit was violated.

- inaccuracies for the data type "FloatingPoint".

In these cases, when the minimum limit is violated then the parameter value is rounded up and when the maximum limited is violated the parameter value is rounded down.

Fault value (r0949, interpret decimal):

Diagnostics parameter r9451 to display all parameters whose value had to be adapted.

See also: p0100 (IEC/NEMA mot stds), p0505 (Selecting the system of units), p0595 (Technological unit selection)

Remedy: Check the adapted parameter values and if required correct.

See also: r9451 (Units changeover adapted parameters)

A07089 Changing over units: Function module activation is blocked because the units have been changed over

Reaction: NONE

Acknowledge: NONE

Cause: An attempt was made to activate a function module. This is not permissible if the units have already been changed over.

See also: p0100 (IEC/NEMA mot stds), p0505 (Selecting the system of units)

Remedy: Restore units that have been changed over to the factory setting.

A07200 Drive: Master control ON command present

Reaction: NONE

Acknowledge: NONE

Cause: The ON/OFF1 command is present (no 0 signal).

The command is either influenced via binector input p0840 (current CDS) or control word bit 0 via the master control.

Remedy: Switch the signal via binector input p0840 (current CDS) or control word bit 0 via the master control to 0.

F07220 (N, A) Drive: Master control by PLC missing

Reaction: OFF1 (NONE, OFF2, OFF3, STOP2)

Acknowledge: IMMEDIATELY

Cause: The "master control by PLC" signal was missing in operation.

- interconnection of the binector input for "master control by PLC" is incorrect (p0854).

- the higher-level control has withdrawn the "master control by PLC" signal.

- data transfer via the fieldbus (master/drive) was interrupted.

Remedy: - check the interconnection of the binector input for "master control by PLC" (p0854).

- check the "master control by PLC" signal and, if required, switch in.

- check the data transfer via the fieldbus (master/drive).

Note:

If the drive should continue to operate after withdrawing "master control by PLC" then fault response must be parameterized to NONE or the message type should be parameterized as alarm.

F07300 (A)	Drive: Line contactor feedback signal missing
Reaction:	OFF2 (NONE)
Acknowledge:	IMMEDIATELY
Cause:	<ul style="list-style-type: none"> - the line contactor was not able to be closed within the time in p0861. - the line contactor was not able to be opened within the time in p0861. - the line contactor dropped out during operation - the line contactor has closed although the drive converter is powered down.
Remedy:	<ul style="list-style-type: none"> - check the setting of p0860. - check the feedback circuit from the line contactor. - increase the monitoring time in p0861. <p>See also: p0860 (Line contactor feedback signal), p0861 (Line contactor monitoring time)</p>
F07320	Drive: Automatic restart interrupted
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	<ul style="list-style-type: none"> - The specified number of restart attempts (p1211) has been completely used up because within the monitoring time (p1213) the faults were not able to be acknowledged. The number of restart attempts (p1211) is decremented at each new start attempt. - there is no active ON command. - the monitoring time for the power unit has expired (p0857). - when exiting commissioning or at the end of the motor identification routine or the speed controller optimization, the drive unit is not automatically powered up again. <p>Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.</p>
Remedy:	<ul style="list-style-type: none"> - increase the number of restart attempts (p1211). The actual number of starting attempts is displayed in r1214. - increase the delay time in p1212 and/or the monitoring time in p1213. - issue an ON command (p0840). - either increase or disable the monitoring time of the power unit (p0857). - Reduce the delay time for resetting the start counter (p1213[1]) so that fewer faults are registered in the time interval.
A07321	Drive: Automatic restart active
Reaction:	NONE
Acknowledge:	NONE
Cause:	<p>The automatic restart (AR) is active. When the line supply returns and/or the causes of the existing faults are removed the drive is automatically restarted. The pulses are enabled and the motor starts to rotate.</p> <p>For p1210 = 26, the alarm after the line supply returns is also displayed if there is no fault and there is no ON command. Restarting is realized with the delayed setting of the ON command.</p>
Remedy:	<ul style="list-style-type: none"> - the automatic restart (AR) should, if required, be inhibited (p1210 = 0). - an automatic restart can be directly interrupted by withdrawing the power-on command (BI: p0840). - for p1210 = 26: by withdrawing the OFF2- / OFF3 control commands.
F07330	Flying restart: Measured search current too low
Reaction:	OFF2 (NONE, OFF1)
Acknowledge:	IMMEDIATELY
Cause:	<p>During a flying restart, it was identified that the search current reached is too low.</p> <p>It is possible that the motor is not connected.</p>
Remedy:	Check the motor feeder cables.
F07331	Flying restart: Function not supported
Reaction:	OFF2 (NONE, OFF1)
Acknowledge:	IMMEDIATELY
Cause:	<p>It is not possible to power up with the motor rotating (no flying restart). In the following cases, the "flying restart" function is not supported:</p> <p>Perm.-magnet synch. motors (PEM): operation with U/f char. and sensorless vector control.</p>
Remedy:	De-activate the "flying restart" function (p1200 = 0).

A07400 (N)	Drive: DC link voltage maximum controller active
Reaction:	NONE
Acknowledge:	NONE
Cause:	The DC link voltage controller has been activated because the upper switch-in threshold has been exceeded (r1242, r1282). The ramp-down times are automatically increased in order to maintain the DC link voltage (r0070) within the permissible limits. There is a system deviation between the setpoint and actual speeds. When the DC link voltage controller is switched out (disabled), this is the reason that the ramp-function generator output is set to the speed actual value. See also: r0056 (Status word, closed-loop control)
Remedy:	If the controller is not to intervene: - increase the ramp-down times. - switch-off the Vdc_max controller (p1240 = 0 for vector control, p1280 = 0 for U/f control). If the ramp-down times are not to be changed: - use a chopper or regenerative feedback unit.
A07401 (N)	Drive: DC link voltage maximum controller de-activated
Reaction:	NONE
Acknowledge:	NONE
Cause:	The Vdc_max controller can no longer maintain the DC link voltage (r0070) below the limit value (r1242, r1282) and was therefore switched out (disabled). - the line supply voltage is permanently higher than specified for the power unit. - the motor is permanently in the regenerative mode as a result of a load that is driving the motor.
Remedy:	- check whether the input voltage is within the permissible range. - check whether the load duty cycle and load limits are within the permissible limits.
A07402 (N)	Drive: DC link voltage minimum controller active
Reaction:	NONE
Acknowledge:	NONE
Cause:	The DC link voltage controller has been activated as the lower switch-in threshold has been undershot (r1246, r1286). The kinetic energy of the motor is used to buffer the DC link. The drive is therefore braked. See also: r0056 (Status word, closed-loop control)
Remedy:	The alarm disappears when power supply returns.
F07404	Drive: DC link voltage monitoring Vdc_Max
Reaction:	OFF2 (NONE, OFF1, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	The monitoring of the DC link voltage p1284 has responded (only U/f control).
Remedy:	- check the line supply voltage. - check the braking module. - adapt the device supply voltage (p0210). - adapt the DC link voltage monitoring (p1284).
F07405 (N, A)	Drive: Kinetic buffering minimum speed not reached
Reaction:	OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)
Acknowledge:	IMMEDIATELY
Cause:	During kinetic buffering the speed fell below minimum speed (p1257 or p1297 for vector drives with U/f control) and the line supply did not return.
Remedy:	Check the speed threshold for the Vdc_min controller (kinetic buffering) (p1257, p1297).
F07406 (N, A)	Drive: Kinetic buffering maximum time exceeded
Reaction:	OFF3 (IASC/DCBRK, NONE, OFF1, OFF2, STOP2)
Acknowledge:	IMMEDIATELY
Cause:	The maximum buffer time (p1255 and p1295 for vector drives with U/f control) has been exceeded without the line supply having returned.
Remedy:	Check the time threshold for Vdc-min controller (kinetic buffering) (p1255, p1295).

A07409	Drive: U/f control, current limiting controller active
Reaction:	NONE
Acknowledge:	NONE
Cause:	The current limiting controller of the U/f control was activated because the current limit was exceeded.
Remedy:	The alarm automatically disappears after one of the following measures: - increase current limit (p0640). - reduce the load. - slow down the ramp up to the setpoint speed.
F07410	Drive: Current controller output limited
Reaction:	OFF2 (NONE, OFF1)
Acknowledge:	IMMEDIATELY
Cause:	The condition " $I_{act} = 0$ and $U_q_set_1$ longer than 16 ms at its limit" is present and can be caused by the following: - motor not connected or motor contactor open. - motor data and motor configuration (star-delta) do not match. - no DC link voltage present. - power unit defective. - the "flying restart" function is not activated.
Remedy:	- connect the motor or check the motor contactor. - check the motor parameterization and the connection type (star-delta). - check the DC link voltage (r0070). - check the power unit. - activate the "flying restart" function (p1200).
F07411	Drive: Flux controller output limited
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	When quick magnetizing is configured ($p1401.6 = 1$) the specified flux setpoint is not reached although 90% of the maximum current is specified. - incorrect motor data. - motor data and motor configuration (star-delta) do not match. - the current limit has been set too low for the motor. - induction motor (encoderless, open-loop controlled) in I _{2t} limiting. - power unit is too small. - the magnetizing time is too short.
Remedy:	- correct the motor data. Perform motor data identification and rotating measurement. - check the motor configuration. - correct the current limits (p0640). - reduce the induction motor load. - if necessary, use a larger power unit. - check motor supply cable. - check power unit. - increase p0346.
A07416	Drive: Flux controller configuration
Reaction:	NONE
Acknowledge:	NONE
Cause:	The configuration of the flux control (p1401) is contradictory. Alarm value (r2124, interpret hexadecimal): ccbbaaaa hex aaaa = Parameter bb = Index cc = fault cause 1: Quick magnetizing (p1401.6) for soft starting (p1401.0). 2: Quick magnetizing for flux build-up control (p1401.2). 3: Quick magnetizing (p1401.6) for R _s identification after restart (p0621 = 2).
Remedy:	Re fault cause = 1: - Shut down soft start (p1401.0 = 0). - Shut down quick magnetizing (p1401.6 = 0).

- Re fault cause = 2:
 - De-energize flux build-up control (p1401.2 = 0).
 - Shut down quick magnetizing (p1401.6 = 0).
 Re fault cause = 3:
 - Re-parameterize Rs identification (p0621 = 0, 1)
 - Shut down quick magnetizing (p1401.6 = 0).

F07426 (A) Technology controller actual value limited
Reaction: OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
Acknowledge: IMMEDIATELY
Cause: The actual value for the technology controller, interconnected via connector input p2264, has reached a limit.
 Fault value (r0949, interpret decimal):
 1: upper limit reached.
 2: lower limit reached.
Remedy:
 - adapt the limits to the signal level (p2267, p2268).
 - Check the actual value normalization (p0595, p0596).
 - Deactivate evaluation of the limits (p2252 bit 3)
 See also: p0595 (Technological unit selection), p0596 (Technological unit reference quantity), p2264 (Technology controller actual value), p2267 (Technology controller upper limit actual value), p2268 (Technology controller lower limit actual value)

A07428 (N) Technology controller parameterizing error
Reaction: NONE
Acknowledge: NONE
Cause: The technology controller has a parameterizing error.
 Alarm value (r2124, interpret decimal):
 1:
 The upper output limit in p2291 is set lower than the lower output limit in p2292.
Remedy:
 Re alarm value = 1:
 Set the output limit in p2291 higher than in p2292.
 See also: p2291 (Technology controller maximum limiting), p2292 (Technology controller minimum limiting)

F07435 (N) Drive: Setting the ramp-function generator for sensorless vector control
Reaction: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3)
Acknowledge: IMMEDIATELY
Cause: During operation with sensorless vector control (r1407.1) the ramp-function generator was stopped (p1141). An internal setting command of the ramp-function generator output caused the set setpoint speed to be frozen.
Remedy:
 - de-activate the holding command for the ramp-function generator (p1141).
 - suppress the fault (p2101, p2119). This is necessary if the ramp-function generator is held using jogging and the speed setpoint is simultaneously inhibited (r0898.6).

A07440 EPOS: Jerk time is limited
Reaction: NONE
Acknowledge: NONE
Cause: The calculation of the jerk time $T_r = \max(p2572, p2573) / p2574$ resulted in an excessively high value so that the jerk time is internally limited to 1000 ms.
 Note:
 The alarm is also output if jerk limiting is not active.
Remedy:
 - increase the jerk limiting (p2574).
 - reduce maximum acceleration or maximum deceleration (p2572, p2573).
 See also: p2572 (EPOS maximum acceleration), p2573 (EPOS maximum deceleration), p2574 (EPOS jerk limiting)

A07441 LR: Save the position offset of the absolute encoder adjustment
Reaction: NONE
Acknowledge: NONE
Cause: The status of the absolute encoder adjustment has changed.
 In order to permanently save the determined position offset (p2525) it must be saved in a non-volatile fashion (p0971).

Remedy: Not necessary.
 This alarm automatically disappears after the offset has been saved.
 See also: p2507 (LR absolute encoder adjustment status), p2525 (LR encoder adjustment offset)

F07442 (A) LR: Multiturn does not match the modulo range

Reaction: OFF1 (OFF2, OFF3)

Acknowledge: IMMEDIATELY

Cause: The ratio between the multiturn resolution and the modulo range (p2576) is not an integer number.
 This results in the adjustment being set back, as the position actual value cannot be reproduced after power-off/power-on.

Remedy: Make the ration between the multiturn resolution and the modulo range an integer number.
 The ratio v is calculated as follows:

1. Motor encoder

$$v = (p0421 * p2506 * p2505) / (p2504 * p2576)$$
2. Direct encoder

$$v = (p0421 * p2506) / p2576$$

See also: p2504 (LR motor/load motor revolutions), p2505 (LR motor/load load revolutions), p2506 (LR length unit LU per load revolution), p2576 (EPOS modulo correction modulo range)

F07443 (A) LR: Reference point coordinate not in the permissible range

Reaction: OFF1 (OFF2, OFF3)

Acknowledge: IMMEDIATELY

Cause: The reference point coordinate received when adjusting the encoder via connector input p2599 lies outside the half of the encoder range and cannot be set as actual axis position.
 Fault value (r0949, interpret decimal):
 Maximum permissible value for the reference point coordinate.

Remedy: Set the reference point coordinate to a lower value than specified in the fault value.
 See also: p2598 (EPOS reference point coordinate signal source), p2599 (EPOS reference point coordinate value)

F07450 (A) LR: Standstill monitoring has responded

Reaction: OFF1 (OFF2, OFF3)

Acknowledge: IMMEDIATELY

Cause: After the standstill monitoring time (p2543) expired, the drive left the standstill window (p2542).
 - position actual value inversion incorrectly set (p0410).
 - standstill window set too small (p2542).
 - standstill monitoring time set too low (p2543).
 - position loop gain too low (p2538).
 - position loop gain too high (instability/oscillation, p2538).
 - mechanical overload.
 - Connecting cable, motor/drive converter incorrect (phase missing, interchanged).
 - when selecting motor identification, select tracking mode (BI: p2655[0] = 1 signal).

Remedy: Check the causes and resolve.

F07451 (A) LR: Position monitoring has responded

Reaction: OFF1 (OFF2, OFF3)

Acknowledge: IMMEDIATELY

Cause: When the position monitoring time (p2545) expired, the drive had still not reached the positioning window (p2544).
 - positioning window parameterized too small (p2544).
 - position monitoring time parameterized too short (p2545).
 - position loop gain too low (p2538).
 - position loop gain too high (instability/oscillation, p2538).
 - drive mechanically locked.

Remedy: Check the causes and resolve.

F07452 (A)	LR: Following error too high
Reaction:	OFF1 (OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	The difference between the position setpoint position actual value (following error dynamic model, r2563) is higher than the tolerance (p2546). <ul style="list-style-type: none"> - the drive torque or accelerating capacity exceeded. - position measuring system fault. - position control sense incorrect. - mechanical system locked. - excessively high traversing velocity or excessively high position reference value (setpoint) differences
Remedy:	Check the causes and resolve.

F07453	LR: Position actual value preprocessing error
Reaction:	OFF1 (OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	An error has occurred during the position actual value preprocessing.
Remedy:	Check the encoder for the position actual value preprocessing. See also: p2502 (LR encoder assignment)

A07454	LR: Position actual value preprocessing does not have a valid encoder
Reaction:	NONE
Acknowledge:	NONE
Cause:	One of the following problems has occurred with the position actual value preprocessing: <ul style="list-style-type: none"> - an encoder is not assigned for the position actual value preprocessing (p2502 = 0). - an encoder an an encoder data set have been assigned, however, the encoder data set does not contain any encoder data (p0400 = 0) or invalid data (e.g. p0408 = 0).
Remedy:	Check the drive data sets, encoder data sets and encoder assignment. See also: p0187 (Encoder 1 encoder data set number), p0188 (Encoder 2 encoder data set number), p0400 (Encoder type selection), p2502 (LR encoder assignment)

A07455	EPOS: Maximum velocity limited
Reaction:	NONE
Acknowledge:	NONE
Cause:	The maximum velocity (p2571) is too high to correctly calculate the modulo correction. Within the sampling time for positioning (p0115[5]), with the maximum velocity, a maximum of the half modulo length must be moved through. p2571 was limited to this value.
Remedy:	- reduce the maximum velocity (p2571).

A07456	EPOS: Setpoint velocity limited
Reaction:	NONE
Acknowledge:	NONE
Cause:	The actual setpoint velocity is greater than the parameterized maximum velocity (p2571) and is therefore limited.
Remedy:	- check the entered setpoint velocity. - reduce the velocity override (CI: p2646). - increase the maximum velocity (p2571). - check the signal source for the externally limited velocity (CI: p2594).

A07457	EPOS: Combination of input signals illegal
Reaction:	NONE
Acknowledge:	NONE
Cause:	An illegal combination of input signals that are simultaneously set was identified. Alarm value (r2124, interpret decimal): <ul style="list-style-type: none"> 0: Jog 1 and jog 2 (p2589, p2590). 1: Jog 1 or jog 2 and direct setpoint input/MDI (p2589, p2590, p2647). 2: Jog 1 or jog 2 and start referencing (p2589, p2590, p2595). 3: Jog 1 or jog 2 and activate traversing task (p2589, p2590, p2631). 4: Direct setpoint input/MDI and starting referencing (p2647, p2595).

- 5: Direct setpoint input/MDI and activate traversing task (p2647, p2631).
- 6: Start referencing and activate traversing task (p2595, p2631).

Remedy: Check the appropriate input signals and correct.

F07458 EPOS: Reference cam not found

Reaction: OFF1 (OFF2, OFF3)

Acknowledge: IMMEDIATELY

Cause: After starting the search for reference, the axis moved through the maximum permissible distance to search for the reference cam without actually finding the reference cam.

Remedy:

- check the "reference cam" binector input (BI: p2612).
- check the maximum permissible distance to the reference cam (p2606).
- if axis does not have any reference cam, then set p2607 to 0.

See also: p2606 (EPOS search for reference reference cam maximum distance), p2607 (EPOS search for reference reference cam present), p2612 (EPOS search for reference reference cam)

F07459 EPOS: No zero mark

Reaction: OFF1 (OFF2, OFF3)

Acknowledge: IMMEDIATELY

Cause: After leaving the reference cam, the axis has traversed the maximum permissible distance between the reference cam and zero mark without finding the zero mark.

Remedy:

- check the encoder regarding the zero mark
- check the maximum permissible distance between the reference cam and zero mark (p2609).
- use an external encoder zero mark (equivalent zero mark) (p0494).

See also: p0494 (Equivalent zero mark input terminal), p2609 (EPOS search for reference max. distance ref. cam and zero mark)

F07460 EPOS: End of reference cam not found

Reaction: OFF1 (OFF2, OFF3)

Acknowledge: IMMEDIATELY

Cause: During the search for reference, when the axis reached the zero mark it also reached the end of the traversing range without detecting an edge at the binector input "reference cam" (BI: p2612).
Maximum traversing range: -2147483648 [LU] ... -2147483647 [LU]

Remedy:

- check the "reference cam" binector input (BI: p2612).
- repeat the search for reference.

See also: p2612 (EPOS search for reference reference cam)

A07461 EPOS: Reference point not set

Reaction: NONE

Acknowledge: NONE

Cause: When starting a traversing block/direct setpoint input, a reference point is not set (r2684.11 = 0).

Remedy: Reference the system (search for reference, flying referencing, set reference point).

A07462 EPOS: Selected traversing block number does not exist

Reaction: NONE

Acknowledge: NONE

Cause: A traversing block selected via binector input p2625 ... p2630 was started via binector input p2631 = 0/1 edge "Activate traversing task".

- the number of the started traversing block is not contained in p2616[0...n].
- the started traversing block is suppressed.

Alarm value (r2124, interpret decimal):
Number of the selected traversing block that is also not available.

Remedy:

- correct the traversing program.
- select an available traversing block number.

A07463 (F)	EPOS: External block change not requested in the traversing block
Reaction:	NONE
Acknowledge:	NONE
Cause:	For a traversing block with the block change enable CONTINUE_EXTERNAL_ALARM, the external block change was not requested. Alarm value (r2124, interpret decimal): Number of the traversing block.
Remedy:	Resolve the reason as to why the edge is missing at binector input (BI: p2632).
F07464	EPOS: Traversing block is inconsistent
Reaction:	OFF1 (OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	The traversing block does not contain valid information. Alarm value (r2124, interpret decimal): Number of the traversing block with invalid information.
Remedy:	Check the traversing block and where relevant, take into consideration alarms that are present.
A07465	EPOS: Traversing block does not have a subsequent block
Reaction:	NONE
Acknowledge:	NONE
Cause:	There is no subsequent block in the traversing block. Alarm value (r2124, interpret decimal): Number of the traversing block with the missing subsequent block.
Remedy:	- parameterize this traversing block with the block change enable END. - parameterize additional traversing blocks with a higher block number and for the last block, using the block change enable END.
A07466	EPOS: Traversing block number assigned a multiple number of times
Reaction:	NONE
Acknowledge:	NONE
Cause:	The same traversing block number was assigned a multiple number of times. Alarm value (r2124, interpret decimal): Number of the traversing block that was assigned a multiple number of times.
Remedy:	Correct the traversing blocks.
A07467	EPOS: Traversing block has illegal task parameters
Reaction:	NONE
Acknowledge:	NONE
Cause:	The task parameter in the traversing block contains an illegal value. Alarm value (r2124, interpret decimal): Number of the traversing block with an illegal task parameter.
Remedy:	Correct the task parameter in the traversing block.
A07468	EPOS: Traversing block jump destination does not exist
Reaction:	NONE
Acknowledge:	NONE
Cause:	In a traversing block, a jump was programmed to a non-existent block. Alarm value (r2124, interpret decimal): Number of the traversing block with a jump destination that does not exist.
Remedy:	- correct the traversing block. - add the missing traversing block.

A07469	EPOS: Traversing block < target position < software limit switch minus
Reaction:	NONE
Acknowledge:	NONE
Cause:	In the traversing block the specified absolute target position lies outside the range limited by the software limit switch minus. Alarm value (r2124, interpret decimal): Number of the traversing block with illegal target position.
Remedy:	- correct the traversing block. - change software limit switch minus (CI: p2578, p2580).
A07470	EPOS: Traversing block > target position > software limit switch plus
Reaction:	NONE
Acknowledge:	NONE
Cause:	In the traversing block the specified absolute target position lies outside the range limited by the software limit switch plus. Alarm value (r2124, interpret decimal): Number of the traversing block with illegal target position.
Remedy:	- correct the traversing block. - change software limit switch plus (CI: p2579, p2581).
A07471	EPOS: Traversing block target position outside the modulo range
Reaction:	NONE
Acknowledge:	NONE
Cause:	In the traversing block the target position lies outside the modulo range. Alarm value (r2124, interpret decimal): Number of the traversing block with illegal target position.
Remedy:	- in the traversing block, correct the target position. - change the modulo range (p2576).
A07472	EPOS: Traversing block ABS_POS/ABS_NEG not possible
Reaction:	NONE
Acknowledge:	NONE
Cause:	In the traversing block the positioning mode ABS_POS or ABS_NEG were parameterized with the modulo correction not activated. Alarm value (r2124, interpret decimal): Number of the traversing block with the illegal positioning mode.
Remedy:	Correct the traversing block.
A07473 (F)	EPOS: Beginning of traversing range reached
Reaction:	NONE
Acknowledge:	NONE
Cause:	When traversing, the axis has moved to the traversing range limit.
Remedy:	Move away in the positive direction.
A07474 (F)	EPOS: End of traversing range reached
Reaction:	NONE
Acknowledge:	NONE
Cause:	When traversing, the axis has moved to the traversing range limit.
Remedy:	Move away in the negative direction.
F07475 (A)	EPOS: Target position < start of traversing range
Reaction:	OFF1 (OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	The target position for relative traversing lies outside the traversing range.
Remedy:	Correct the target position.

F07476 (A)	EPOS: Target position > end of the traversing range
Reaction:	OFF1 (OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	The target position for relative traversing lies outside the traversing range.
Remedy:	Correct the target position.
A07477 (F)	EPOS: Target position < software limit switch minus
Reaction:	NONE
Acknowledge:	NONE
Cause:	In the actual traversing operation, the target position is less than the software limit switch minus.
Remedy:	- correct the target position. - change software limit switch minus (CI: p2578, p2580). See also: p2578 (EPOS software limit switch minus signal source), p2580 (EPOS software limit switch minus), p2582 (EPOS software limit switch activation)
A07478 (F)	EPOS: Target position > software limit switch plus
Reaction:	NONE
Acknowledge:	NONE
Cause:	In the actual traversing operation, the target position is greater than the software limit switch plus.
Remedy:	- correct the target position. - change software limit switch plus (CI: p2579, p2581). See also: p2579 (EPOS software limit switch plus signal source), p2581 (EPOS software limit switch plus), p2582 (EPOS software limit switch activation)
A07479	EPOS: Software limit switch minus reached
Reaction:	NONE
Acknowledge:	NONE
Cause:	The axis is at the position of the software limit switch minus. An active traversing block was interrupted.
Remedy:	- correct the target position. - change software limit switch minus (CI: p2578, p2580). See also: p2578 (EPOS software limit switch minus signal source), p2580 (EPOS software limit switch minus), p2582 (EPOS software limit switch activation)
A07480	EPOS: Software limit switch plus reached
Reaction:	NONE
Acknowledge:	NONE
Cause:	The axis is at the position of the software limit switch plus. An active traversing block was interrupted.
Remedy:	- correct the target position. - change software limit switch plus (CI: p2579, p2581). See also: p2579 (EPOS software limit switch plus signal source), p2581 (EPOS software limit switch plus), p2582 (EPOS software limit switch activation)
F07481 (A)	EPOS: Axis position < software limit switch minus
Reaction:	OFF1 (OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	The actual position of the axis is less than the position of the software limit switch minus.
Remedy:	- correct the target position. - change software limit switch minus (CI: p2578, p2580). See also: p2578 (EPOS software limit switch minus signal source), p2580 (EPOS software limit switch minus), p2582 (EPOS software limit switch activation)
F07482 (A)	EPOS: Axis position > software limit switch plus
Reaction:	OFF1 (OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	The actual position of the axis is greater than the position of the software limit switch plus.

Remedy:

- correct the target position.
- change software limit switch plus (CI: p2579, p2581).

See also: p2579 (EPOS software limit switch plus signal source), p2581 (EPOS software limit switch plus), p2582 (EPOS software limit switch activation)

A07483 EPOS: Travel to fixed stop clamping torque not reached

Reaction: NONE
Acknowledge: NONE
Cause: The fixed stop in the traversing block was reached without the clamping torque/clamping force having been achieved.
Remedy:

- Check the maximum torque-generating current (r1533).
- check the torque limits (p1520, p1521).
- check the power limits (p1530, p1531).
- check the BICO interconnections of the torque limits (p1522, p1523, p1528, p1529).

F07484 EPOS: Fixed stop outside the monitoring window

Reaction: OFF3 (OFF1, OFF2)
Acknowledge: IMMEDIATELY
Cause: In the "fixed stop reached" state, the axis has moved outside the defined monitoring window (p2635).
Remedy:

- check the monitoring window (p2635).
- check the mechanical system.

F07485 (A) EPOS: Fixed stop not reached

Reaction: OFF1 (OFF2, OFF3)
Acknowledge: IMMEDIATELY
Cause: In a traversing block with the task FIXED STOP, the end position was reached without detecting a fixed stop.
Remedy:

- check the traversing block and locate the target position further into the workpiece.
- check the "fixed stop reached" control signal (p2637).
- if required, reduce the maximum following error window to detect the fixed stop (p2634).

A07486 EPOS: Intermediate stop missing

Reaction: NONE
Acknowledge: NONE
Cause: In the modes "traversing blocks" or "direct setpoint input/MDI" at the start of motion, the binector input "no intermediate stop/intermediate stop" (BI: p2640) did not have a 1 signal.
Remedy: Connect a 1 signal to the binector input "no intermediate stop/intermediate stop" (BI: p2640) and re-start motion. See also: p2640 (EPOS intermediate stop (0 signal))

A07487 EPOS: Reject traversing task missing

Reaction: NONE
Acknowledge: NONE
Cause: In the modes "traversing blocks" or "direct setpoint input/MDI" at the start of motion, the binector input "do not reject traversing task/reject traversing task" (BI: p2641) does not have a 1 signal.
Remedy: Connect a 1 signal to the binector input "do not reject traversing task/reject traversing task" (BI: p2641) and restart motion. See also: p2641 (EPOS reject traversing task (0 signal))

F07488 EPOS: Relative positioning not possible

Reaction: OFF1 (OFF2, OFF3)
Acknowledge: IMMEDIATELY
Cause: In the mode "direct setpoint input/MDI", for continuous transfer (p2649 = 1) relative positioning was selected (BI: p2648 = 0 signal).
Remedy: Check the control.

A07489	EPOS: Reference point correction outside the window
Reaction:	NONE
Acknowledge:	NONE
Cause:	For the function "flying referencing" the difference between the measured position at the measuring probe and the reference point coordinate lies outside the parameterized window.
Remedy:	- check the mechanical system. - check the parameterization of the window (p2602).
F07490 (N)	EPOS: Enable signal withdrawn while traversing
Reaction:	OFF1 (OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	- for a standard assignment, another fault may have occurred as a result of withdrawing the enable signals. - the drive is in the "switching on inhibited" state (for a standard assignment).
Remedy:	- set the enable signals or check the cause of the fault that first occurred and then result (for a standard assignment). - check the assignment to enable the basic positioning function.
F07491 (A)	EPOS: STOP cam minus reached
Reaction:	OFF3
Acknowledge:	IMMEDIATELY
Cause:	A 0 signal was detected at binector input BI: p2569, i.e. the STOP cam minus was reached. For a positive traversing direction, the STOP cam minus was reached - i.e. the wiring of the STOP cam is incorrect. See also: p2569 (EPOS STOP cam minus)
Remedy:	- leave the STOP cam minus in the positive traversing direction and return the axis to the valid traversing range. - check the wiring of the STOP cam.
F07492 (A)	EPOS: STOP cam plus reached
Reaction:	OFF3
Acknowledge:	IMMEDIATELY
Cause:	A 0 signal was detected at binector input BI: p2570, i.e. the STOP cam plus was reached. For a negative traversing direction, the STOP cam plus was reached - i.e. the wiring of the STOP cam is incorrect. See also: p2570 (EPOS STOP cam plus)
Remedy:	- leave the STOP cam plus in the negative traversing direction and return the axis to the valid traversing range. - check the wiring of the STOP cam.
F07493	LR: Overflow of the value range for position actual value
Reaction:	OFF1 (OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	The value range (-2147483648 ... 2147483647) for the position actual value representation was exceeded. When the overflow occurs, the "referenced" or "adjustment absolute measuring system" status is reset. Fault value (r0949, interpret decimal): 1: The position actual value (r2521) has exceeded the value range. 2: The encoder position actual value Gn_XIST2 (r0483) or the absolute value after the load gear (r2723) has exceeded the value range. 3: The maximum encoder value times the factor to convert the absolute position (r0483 and/or r2723) from increments to length units (LU) has exceeded the value range for displaying the position actual value. Note: For a linear encoder, the following must be maintained: - $p0407 * p2503 / (2^{p0418} * 10^7) < 1$ - $p0407 * p2503 / (2^{p0419} * 10^7) < 1$
Remedy:	If required, reduce the traversing range or position resolution (p2506). Increase the fine resolution of absolute position actual value (p0419). Note for fault value = 3: If the value for the maximum possible absolute position (LU) is greater than 4294967296, then it is not possible to make an adjustment due to an overflow. For rotary encoders, the maximum possible absolute position (LU) is calculated as follows: 1. Motor encoder $p2506 * p2505 / p2504$ $p2506 * p2505 * p0421 / p2504$ for multiturn encoders

2. Direct encoder
 p2506
 p2506 * p0421 for multiturn encoders

F07494	LR: Drive Data Set changeover in operation
Reaction:	OFF1 (OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	A Drive Data Set changeover (DDS) with a change of the mechanical relationships (p2503 ... 2506), direction of rotation (p1821) or the encoder assignment (p2502) was requested in operation. Note: DDS: Drive Data Set
Remedy:	To changeover the drive data set, initially, exit the "operation" mode.
A07495 (F)	LR: Reference function interrupted
Reaction:	NONE
Acknowledge:	NONE
Cause:	An activated reference function (reference mark search or measuring probe evaluation) was interrupted. Possible causes: - an encoder fault has occurred (Gn_ZSW.15 = 1). - position actual value was set during an activated reference function. - simultaneously activate reference mark search and measuring probe evaluation (BI: p2508 and BI: p2509 = 1 signal). - activated reference function (reference mark search or measuring probe evaluation) was de-activated (BI: p2508 and BI: p2509 = 0 signal).
Remedy:	- check the causes and resolve. - reset the control (BI: p2508 and BI: p2509 = 0 signal) and activate the requested function.
A07496	EPOS: Enable not possible
Reaction:	NONE
Acknowledge:	NONE
Cause:	It is not possible to enable the basic positioner because at least one signal is missing. Alarm value (r2124, interpret decimal): 1: EPOS enable missing (BI: p2656). 2: Position actual value, valid feedback signal missing (BI: p2658). See also: p2656 (EPOS enable basic positioner), p2658 (EPOS pos. actual value valid feedback signal)
Remedy:	Check the appropriate binector inputs and signals.
A07497	LR: Position setting value activated
Reaction:	NONE
Acknowledge:	NONE
Cause:	The position actual value is set to the value received via CI: p2515 while BI: p2514 = 1 signal. A possible system deviation cannot be corrected.
Remedy:	Not necessary. The alarm automatically disappears with BI: p2514 = 0 signal.
A07498 (F)	LR: Measuring probe evaluation not possible
Reaction:	NONE
Acknowledge:	NONE
Cause:	When evaluating the measuring probe, an error occurred. Alarm value (r2124, interpret decimal): 6: The input terminal for the measuring probe is not set. 4098: Error when initializing the measuring probe. 4100: The measuring pulse frequency is too high. > 50000: The measuring clock cycle is not a multiple integer of the position controller clock cycle.

Remedy: De-activate the measuring probe evaluation (BI: p2509 = 0 signal).
 Re alarm value = 6:
 Set the input terminal for the measuring probe (p0488, p0489 or p2517, p2518).
 Re alarm value = 4098:
 Check the Control Unit hardware.
 Re alarm value = 4100:
 Reduce the frequency of the measuring pulses at the measuring probe.
 Re alarm value > 50000:
 Set the clock cycle ratio of the measuring clock cycle to the position controller clock cycle to an integer multiple.
 To do this, the currently effective measuring clock cycle can be determined from the alarm value as follows:
 $T_{meas} [125 \mu s] = \text{alarm value} - 50000$
 With PROFIBUS, the measuring clock cycle corresponds to the PROFIBUS clock cycle (r2064[1]).
 Without PROFIBUS, the measuring clock cycle is an internal cycle time that cannot be influenced.

F07499 (A) EPOS: Reversing cam approached with the incorrect traversing direction

Reaction: OFF3
Acknowledge: IMMEDIATELY
Cause: The reversing cam MINUS was approached in the positive traversing direction or the reversing cam PLUS was approached in the negative traversing direction.
 See also: p2613 (EPOS search for reference reversing cam minus), p2614 (EPOS search for reference reversing cam plus)
Remedy: - check the wiring of the reversing cam (BI: p2613, BI: p2614).
 - check the traversing direction to approach the reversing cam.

F07503 EPOS: STOP cam approached with the incorrect traversing direction

Reaction: NONE
Acknowledge: IMMEDIATELY
Cause: The STOP cam MINUS was approached in the positive traversing direction or the STOP cam PLUS was approached in the negative traversing direction.
Remedy: - check the wiring of the STOP cam (BI: p2569, BI: p2570).
 - check the traversing direction to approach the STOP cam.

A07505 EPOS: Task fixed stop not possible in the U/f/SLVC mode

Reaction: NONE
Acknowledge: NONE
Cause: In the U/f/SLVC mode, an attempt was made to execute a traversing block with the "fixed stop" task. This is not possible.
 Alarm value (r2124, interpret decimal):
 Number of the traversing block with an illegal task parameter.
Remedy: - Check the traversing block and change the task.
 - change the open-loop/closed-loop control mode (p1300).
 See also: p1300 (Open-loop/closed-loop control operating mode), p2621 (EPOS traversing block task)

A07530 Drive: Drive Data Set DDS not present

Reaction: NONE
Acknowledge: NONE
Cause: The selected drive data set is not available (p0837 > p0180). The drive data set was not changed over.
 See also: p0180 (Number of Drive Data Sets (DDS)), p0820 (Drive Data Set selection DDS bit 0), p0821 (Drive Data Set selection DDS bit 1), r0837 (Drive Data Set DDS selected)
Remedy: - select the existing drive data set.
 - set up additional drive data sets.

A07531 Drive: Command Data Set CDS not present

Reaction: NONE
Acknowledge: NONE
Cause: The selected command data set is not available (p0836 > p0170). The command data set was not changed over.
 See also: p0810 (Command data set selection CDS bit 0), p0811 (Command data set selection CDS bit 1), r0836 (Command Data Set CDS selected)

Remedy:

- select the existing command data set.
- set up additional command data sets.

A07550 (F, N) Drive: Not possible to reset encoder parameters

Reaction: NONE

Acknowledge: NONE

Cause: When carrying out a factory setting (e.g. using p0970 = 1), it was not possible to reset the encoder parameters.
Alarm value (r2124, interpret decimal):
Component number of the encoder involved.

Remedy: Repeat the operation.

F07552 (A) Drive encoder: Encoder configuration not supported

Reaction: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP1, STOP2)

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The requested encoder configuration is not supported. Only bits may be requested in p0404 that are signaled as being supported by the encoder evaluation in r0456.

Fault value (r0949, interpret decimal):

ccccbbaa hex: cccc = fault cause, bb = component number, aa = encoder data set

cccc = 1: encoder sin/cos with absolute track (is supported by SME25).

cccc = 3: Squarewave encoder (this is supported by SMC30).

cccc = 4: sin/cos encoder (this is supported by SMC20, SMI20, SME20, SME25).

cccc = 10: DRIVE-CLiQ encoder (is supported by DQI).

cccc = 12: sin/cos encoder with reference mark (this is supported by SME20).

cccc = 15: Commutation with zero mark for separately-excited synchronous motors with VECTORMV.

cccc = 23: Resolver (this is supported by SMC10, SMI10).

cccc = 65535: Other function (compare r0456 and p0404).

See also: p0404 (Encoder configuration effective), r0456 (Encoder configuration supported)

Remedy:

- check the encoder parameterization (p0400, p0404).
- use the matching encoder evaluation (r0456).

F07553 (A) Drive encoder: Sensor Module configuration not supported

Reaction: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP1, STOP2)

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The Sensor Module does not support the requested configuration.

For incorrect p0430 (cc = 0), the following applies:

- In p0430 (requested functions), at least 1 bit was set that is not set in r0458 (supported functions) (exception: Bit 19, 28, 29, 30, 31).

- p1982 > 0 (pole position identification requested), but r0458.16 = 0 (pole position identification not supported).

For incorrect p0437 (cc = 1), the following applies:

- In p0437 (requested functions), at least 1 bit was set that is not set in r0459 (supported functions).

Fault value (r0949, interpret hexadecimal):

ddccbbaa hex

aa: encoder data set number

bb: first incorrect bit

cc: incorrect parameter

cc = 0: incorrect parameter is p0430

cc = 1: incorrect parameter is p0437

cc = 2: incorrect parameter is r0459

dd: reserved (always 0)

Remedy:

- check the encoder parameterization (p0430, p0437).
- check the pole position identification routine (p1982).
- use the matching encoder evaluation (r0458, r0459).

See also: p0430 (Sensor Module configuration), p0437 (Sensor Module configuration extended), r0458 (Sensor Module properties), r0459 (Sensor Module properties extended)

A07557 (F)	Encoder 1: Reference point coordinate not in the permissible range
Reaction:	NONE
Acknowledge:	NONE
Cause:	The reference point coordinate received when adjusting the encoder via connector input CI:p2599 lies outside the half of the encoder range and cannot be set as actual axis position. The maximum permissible value is displayed in the supplementary information.
Remedy:	Set the reference point coordinate less than the value from the supplementary information. See also: p2598 (EPOS reference point coordinate signal source)
A07558 (F)	Encoder 2: Reference point coordinate not in the permissible range
Reaction:	NONE
Acknowledge:	NONE
Cause:	The reference point coordinate received when adjusting the encoder via connector input CI:p2599 lies outside the half of the encoder range and cannot be set as actual axis position. The maximum permissible value is displayed in the supplementary information.
Remedy:	Set the reference point coordinate less than the value from the supplementary information. See also: p2598 (EPOS reference point coordinate signal source)
F07563 (A)	Drive encoder: XIST1_ERW configuration incorrect
Reaction:	OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP1, STOP2)
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	An incorrect configuration was identified for the "Absolute position for incremental encoder" function. Fault value (r0949, interpret decimal): Fault cause: 1 (= 01 hex): The "Absolute value for incremental encoder" function is not supported (r0459.13 = 0). Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): yyxx dec: yy = fault cause, xx = encoder data set See also: r0459 (Sensor Module properties extended), p4652 (XIST1_ERW reset mode)
Remedy:	For fault value = 1: - upgrade the Sensor Module firmware version. - check the mode (p4652 = 1, 3 requires the property r0459.13 = 1).
A07565 (F, N)	Drive: Encoder error in PROFIdrive encoder interface 1
Reaction:	NONE
Acknowledge:	NONE
Cause:	An encoder error was signaled for encoder 1 via the PROFIdrive encoder interface (G1_ZSW.15). Alarm value (r2124, interpret decimal): Error code from G1_XIST2, refer to the description regarding r0483. Note: This alarm is only output if p0480[0] is not equal to zero.
Remedy:	Acknowledge the encoder error using the encoder control word (G1_STW.15 = 1).
A07566 (F, N)	Drive: Encoder error in PROFIdrive encoder interface 2
Reaction:	NONE
Acknowledge:	NONE
Cause:	An encoder error was signaled for encoder 2 via the PROFIdrive encoder interface (G2_ZSW.15). Alarm value (r2124, interpret decimal): Error code from G2_XIST2, refer to the description regarding r0483. Note: This alarm is only output if p0480[1] is not equal to zero.
Remedy:	Acknowledge the encoder error using the encoder control word (G2_STW.15 = 1).

A07577 (F)	Encoder 1: Measuring probe evaluation not possible
Reaction:	NONE
Acknowledge:	NONE
Cause:	When evaluating the measuring probe, an error occurred. Alarm value (r2124, interpret decimal): 6: The input terminal for the measuring probe is not set. 4098: Error when initializing the measuring probe. 4100: The measuring pulse frequency is too high. 4200: The PROFIBUS clock cycle is not a multiple of integer of the position controller clock cycle.
Remedy:	De-activate the measuring probe evaluation (BI: p2509 = 0 signal). Re alarm value = 6: Set the input terminal for the measuring probe (p0488, p0489 or p2517, p2518). Re alarm value = 4098: Check the Control Unit hardware. Re alarm value = 4100: Reduce the frequency of the measuring pulses at the measuring probe. Re alarm value = 4200: Set the clock cycle ratio between the PROFIBUS clock cycle and the position controller clock cycle to an integer multiple.
A07578 (F)	Encoder 2: Measuring probe evaluation not possible
Reaction:	NONE
Acknowledge:	NONE
Cause:	When evaluating the measuring probe, an error occurred. Alarm value (r2124, interpret decimal): 6: The input terminal for the measuring probe is not set. 4098: Error when initializing the measuring probe. 4100: The measuring pulse frequency is too high. 4200: The PROFIBUS clock cycle is not a multiple of integer of the position controller clock cycle.
Remedy:	De-activate the measuring probe evaluation (BI: p2509 = 0 signal). Re alarm value = 6: Set the input terminal for the measuring probe (p0488, p0489 or p2517, p2518). Re alarm value = 4098: Check the Control Unit hardware. Re alarm value = 4100: Reduce the frequency of the measuring pulses at the measuring probe. Re alarm value = 4200: Set the clock cycle ratio between the PROFIBUS clock cycle and the position controller clock cycle to an integer multiple.
A07581 (F)	Encoder 1: Position actual value preprocessing error
Reaction:	NONE
Acknowledge:	NONE
Cause:	An error has occurred during the position actual value preprocessing.
Remedy:	Check the encoder for the position actual value preprocessing. See also: p2502 (LR encoder assignment)
A07582 (F)	Encoder 2: Position actual value preprocessing error
Reaction:	NONE
Acknowledge:	NONE
Cause:	An error has occurred during the position actual value preprocessing.
Remedy:	Check the encoder for the position actual value preprocessing. See also: p2502 (LR encoder assignment)

A07584	Encoder 1: Position setting value activated
Reaction:	NONE
Acknowledge:	NONE
Cause:	The position actual value is set to the value received via CI: p2515while BI: p2514 = 1 signal. A possible system deviation cannot be corrected.
Remedy:	Not necessary. The alarm automatically disappears with BI: p2514 = 0 signal.
A07585	Encoder 2: Position setting value activated
Reaction:	NONE
Acknowledge:	NONE
Cause:	The position actual value is set to the value received via CI: p2515while BI: p2514 = 1 signal. A possible system deviation cannot be corrected.
Remedy:	Not necessary. The alarm automatically disappears with BI: p2514 = 0 signal.
A07587	Encoder 1: Position actual value preprocessing does not have a valid encoder
Reaction:	NONE
Acknowledge:	NONE
Cause:	The following problem has occurred during the position actual value preprocessing. - an encoder data set has been assigned, however, the encoder data set does not contain any encoder data (p0400 = 0) or invalid data (e.g. p0408 = 0).
Remedy:	Check the drive data sets, encoder data sets. See also: p0187 (Encoder 1 encoder data set number), p0188 (Encoder 2 encoder data set number), p0400 (Encoder type selection), p2502 (LR encoder assignment)
A07588	Encoder 2: Position actual value preprocessing does not have a valid encoder
Reaction:	NONE
Acknowledge:	NONE
Cause:	The following problem has occurred during the position actual value preprocessing. - an encoder data set has been assigned, however, the encoder data set does not contain any encoder data (p0400 = 0) or invalid data (e.g. p0408 = 0).
Remedy:	Check the drive data sets, encoder data sets. See also: p0187 (Encoder 1 encoder data set number), p0188 (Encoder 2 encoder data set number), p0400 (Encoder type selection), p2502 (LR encoder assignment)
A07590 (F)	Encoder 1: Drive Data Set changeover in operation
Reaction:	NONE
Acknowledge:	NONE
Cause:	A Drive Data Set changeover (DDS) with a change of the mechanical relationships and the encoder assignment (p2502) was requested in operation.
Remedy:	To changeover the drive data set, initially, exit the "operation" mode.
A07591 (F)	Encoder 2: Drive Data Set changeover in operation
Reaction:	NONE
Acknowledge:	NONE
Cause:	A Drive Data Set changeover (DDS) with a change of the mechanical relationships and the encoder assignment (p2502) was requested in operation.
Remedy:	To changeover the drive data set, initially, exit the "operation" mode.
A07593 (F, N)	Encoder 1: Value range for position actual value exceeded
Reaction:	NONE
Acknowledge:	NONE
Cause:	The value range (-2147483648 ... 2147483647) for the position actual value representation was exceeded. When the overflow occurs, the "referenced" or "absolute encoder adjusted" status is reset.

Fault value (r0949, interpret decimal):

1: The position actual value (r2521) has exceeded the value range.

2: The encoder position actual value Gn_XIST2 (r0483) or the absolute value after the load gear (r2723) has exceeded the value range.

3: The maximum encoder value multiplied by the factor to convert the absolute position (r0483 and/or r2723) from increments to length units (LU) has exceeded the value range for displaying the position actual value.

Remedy:

If required, reduce the traversing range or position resolution.

Re alarm value = 3:

Reducing the position resolution and conversion factor:

- reduce the length unit (LU) per load revolution for rotary encoders (p2506).

- increase the fine resolution of absolute position actual values (p0419).

A07594 (F, N) Encoder 2: Value range for position actual value exceeded

Reaction: NONE

Acknowledge: NONE

Cause: The value range (-2147483648 ... 2147483647) for the position actual value representation was exceeded. When the overflow occurs, the "referenced" or "absolute encoder adjusted" status is reset.

Fault value (r0949, interpret decimal):

1: The position actual value (r2521) has exceeded the value range.

2: The encoder position actual value Gn_XIST2 (r0483) or the absolute value after the load gear (r2723) has exceeded the value range.

3: The maximum encoder value times the factor to convert the absolute position (r0483 and/or r2723) from increments to length units (LU) has exceeded the value range for displaying the position actual value.

Remedy:

If required, reduce the traversing range or position resolution.

Re alarm value = 3:

Reducing the position resolution and conversion factor:

- reduce the length unit (LU) per load revolution for rotary encoders (p2506).

- increase the fine resolution of absolute position actual values (p0419).

A07596 (F) Encoder 1: Reference function interrupted

Reaction: NONE

Acknowledge: NONE

Cause: An activated reference function (reference mark search or measuring probe evaluation) was interrupted.

- an encoder fault has occurred (Gn_ZSW.15 = 1).

- position actual value was set during an activated reference function.

- simultaneously activate reference mark search and measuring probe evaluation (BI: p2508 and BI: p2509 = 1 signal).

- activated reference function (reference mark search or measuring probe evaluation) was de-activated (BI: p2508 and BI: p2509 = 0 signal).

Remedy:

- check the causes and resolve.

- reset the control (BI: p2508 and BI: p2509 = 0 signal) and activate the requested function.

A07597 (F) Encoder 2: Reference function interrupted

Reaction: NONE

Acknowledge: NONE

Cause: An activated reference function (reference mark search or measuring probe evaluation) was interrupted.

- an encoder fault has occurred (Gn_ZSW.15 = 1).

- position actual value was set during an activated reference function.

- simultaneously activate reference mark search and measuring probe evaluation (BI: p2508 and BI: p2509 = 1 signal).

- activated reference function (reference mark search or measuring probe evaluation) was de-activated (BI: p2508 and BI: p2509 = 0 signal).

Remedy:

- check the causes and resolve.

- reset the control (BI: p2508 and BI: p2509 = 0 signal) and activate the requested function.

F07599 (A)	Encoder 1: Adjustment not possible
Reaction:	OFF1 (NONE, OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	The maximum encoder value times the factor to convert the absolute position (r0483 and/or r2723) from increments to length units (LU) has exceeded the value range (-2147483648 ... 2147483647) for displaying the position actual value.
Remedy:	If the value for the maximum possible absolute position (LU) is greater than 4294967296, then it is not possible to make an adjustment due to an overflow. For rotary encoders, the maximum possible absolute position (LU) is calculated as follows: 1. Motor encoder: $p2506 * p2505 / p2504$ $p2506 * p2505 * p0421 / p2504$ for multiturn encoders 2. Direct encoder: $p2506$ $p2506 * p0421$ for multiturn encoders
F07600 (A)	Encoder 2: Adjustment not possible
Reaction:	OFF1 (NONE, OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	The maximum encoder value times the factor to convert the absolute position (r0483 and/or r2723) from increments to length units (LU) has exceeded the value range (-2147483648 ... 2147483647) for displaying the position actual value.
Remedy:	If the value for the maximum possible absolute position (LU) is greater than 4294967296, then it is not possible to make an adjustment due to an overflow. For rotary encoders, the maximum possible absolute position (LU) is calculated as follows: 1. Motor encoder: $p2506 * p2505 / p2504$ $p2506 * p2505 * p0421 / p2504$ for multiturn encoders 2. Direct encoder: $p2506$ $p2506 * p0421$ for multiturn encoders
F07800	Drive: No power unit present
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	The power unit parameters cannot be read or no parameters are stored in the power unit. It is possible that the DRIVE-CLiQ cable between the Control Unit and power unit is interrupted or defective. Note: This fault also occurs if an incorrect topology was selected in the commissioning software and this parameterization is then downloaded to the Control Unit. See also: r0200 (Power unit code number actual)
Remedy:	- carry out a POWER ON (power off/on) for all components. - check the DRIVE-CLiQ cable between the Control Unit and power unit. - Check the power unit and replace if necessary. - check the Control Unit, and if required replace it. - after correcting the topology, the parameters must be again downloaded using the commissioning software.
F07801	Drive: Motor overcurrent
Reaction:	OFF2 (NONE, OFF1, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	The permissible motor limit current was exceeded. - effective current limit set too low. - current controller not correctly set. - U/f operation: Up ramp was set too short or the load is too high. - U/f operation: Short-circuit in the motor cable or ground fault. - U/f operation: Motor current does not match current of power unit. - Switch to rotating motor without flying restart function (p1200). Note: Limit current = $2 \times \text{minimum} (p0640, 4 \times p0305 \times p0306) \geq 2 \times p0305 \times p0306$

- Remedy:**
- check the current limits (p0640).
 - vector control: Check the current controller (p1715, p1717).
 - U/f control: Check the current limiting controller (p1340 ... p1346).
 - increase the up ramp (p1120) or reduce the load.
 - check the motor and motor cables for short-circuit and ground fault.
 - check the motor for the star-delta configuration and rating plate parameterization.
 - check the power unit and motor combination.
 - Choose "flying restart" function (p1200) if switched to rotating motor.

F07802 Drive: Infeed or power unit not ready

- Reaction:** OFF2 (NONE)
Acknowledge: IMMEDIATELY
Cause: After an internal power-on command, the infeed or drive does not signal ready.
- monitoring time is too short.
 - DC link voltage is not present.
 - associated infeed or drive of the signaling component is defective.
 - supply voltage incorrectly set.
- Remedy:**
- increase the monitoring time (p0857).
 - ensure that there is a DC link voltage. Check the DC link busbar. Enable the infeed.
 - replace the associated infeed or drive of the signaling component.
 - check the line supply voltage setting (p0210).
- See also: p0857 (Power unit monitoring time)

A07805 (N) Drive: Power unit overload I2t

- Reaction:** NONE
Acknowledge: NONE
Cause: Alarm threshold for I2t overload (p0294) of the power unit exceeded.
 The response parameterized in p0290 becomes active.
 See also: p0290 (Power unit overload response)
- Remedy:**
- reduce the continuous load.
 - adapt the load duty cycle.
 - check the assignment of the motor and power unit rated currents.

F07806 Drive: Regenerative power limit exceeded (F3E)

- Reaction:** OFF2 (IASC/DCBRK)
Acknowledge: IMMEDIATELY
Cause: For blocksize power units, types PM250 and PM260, the regenerative rated power r0206[2] was exceeded for more than 10 s.
 See also: r0206 (Rated power unit power), p1531 (Power limit regenerative)
- Remedy:**
- increase the down ramp.
 - reduce the driving load.
 - use a power unit with a higher regenerative feedback capability.
 - for vector control, the regenerative power limit in p1531 can be reduced so that the fault is no longer triggered.

F07807 Drive: Short-circuit/ground fault detected

- Reaction:** OFF2 (NONE)
Acknowledge: IMMEDIATELY
Cause: A phase-phase short-circuit or ground fault was detected at the motor-side output terminals of the converter.
 Fault value (r0949, interpret decimal):
 1: Short-circuit, phases U-V
 2: Short-circuit, phases U-W
 3: Short-circuit, phases V-W
 4: Ground fault with overcurrent
 1xxxx: Ground fault with current in phase U detected (xxxx = component of the current in phase V in per mille)
 2xxxx: Ground fault with current in phase V detected (xxxx = component of the current in phase U in per mille)
 Note:
 Also when interchanging the line and motor cables is identified as a motor-side short circuit.
 Connecting to a motor that is either not de-energized or partially de-energized is possibly detected as ground fault.

Remedy:

- check the motor-side converter connection for a phase-phase short-circuit.
- rule-out interchanged line and motor cables.
- check for a ground fault.

For a ground fault:

- do not enable the pulses when connecting to a rotating motor without the "Flying restart" function activated (p1200).
- increase the de-energization time (p0347).
- If required, deactivate the monitoring (p1901).

F07808 (A) HF damping module: damping not ready

Reaction: OFF2 (NONE, OFF1, OFF3)
Acknowledge: IMMEDIATELY
Cause: When switching on or in the switched-on state, the HF damping module does not return a ready signal.
Remedy:

- Check the DRIVE-CLiQ wiring to the HF damping module.
- check the 24 V supply voltage.
- if required, replace the HF damping module.

Note:
 HF Damping Module

F07810 Drive: Power unit EEPROM without rated data

Reaction: NONE
Acknowledge: IMMEDIATELY
Cause: No rated data are stored in the power unit EEPROM.
 See also: p0205 (Power unit application), r0206 (Rated power unit power), r0207 (Rated power unit current), r0208 (Rated power unit line supply voltage), r0209 (Power unit maximum current)
Remedy: Replace the power unit or inform Siemens Customer Service.

A07850 (F) External alarm 1

Reaction: NONE
Acknowledge: NONE
Cause: The BICO signal for "external alarm 1" was triggered.
 The condition for this external alarm is fulfilled.
 See also: p2112 (External alarm 1)
Remedy: Eliminate the causes of this alarm.

A07851 (F) External alarm 2

Reaction: NONE
Acknowledge: NONE
Cause: The BICO signal for "external alarm 2" was triggered.
 The condition for this external alarm is fulfilled.
 See also: p2116 (External alarm 2)
Remedy: Eliminate the causes of this alarm.

A07852 (F) External alarm 3

Reaction: NONE
Acknowledge: NONE
Cause: The BICO signal for "external alarm 3" was triggered.
 The condition for this external alarm is fulfilled.
 See also: p2117 (External alarm 3)
Remedy: Eliminate the causes of this alarm.

F07860 (A) External fault 1

Reaction: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)
Acknowledge: IMMEDIATELY (POWER ON)
Cause: The BICO signal "external fault 1" was triggered.
 See also: p2106 (External fault 1)
Remedy: Eliminate the causes of this fault.

F07861 (A)	External fault 2
Reaction:	OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The BICO signal "external fault 2" was triggered. See also: p2107 (External fault 2)
Remedy:	Eliminate the causes of this fault.
F07862 (A)	External fault 3
Reaction:	OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The BICO signal "external fault 3" was triggered. See also: p2108 (External fault 3), p3111 (External fault 3 enable), p3112 (External fault 3 enable negated)
Remedy:	Eliminate the causes of this fault.
F07900 (N, A)	Drive: Motor blocked
Reaction:	OFF2 (NONE, OFF1, OFF3, STOP2)
Acknowledge:	IMMEDIATELY
Cause:	Motor has been operating at the torque limit longer than the time specified in p2177 and below the speed threshold set in p2175. This signal can also be triggered if the speed is oscillating and the speed controller output repeatedly goes to its limit. It may also be the case that thermal monitoring of the power unit reduces the current limit (see p0290), thereby causing the motor to decelerate. See also: p2175 (Motor blocked speed threshold), p2177 (Motor blocked delay time)
Remedy:	- check that the motor can freely move. - check the effective torque limit (r1538, r1539). - check the parameter, message "Motor blocked" and if required, correct (p2175, p2177). - check the direction of rotation enable signals for a flying restart of the motor (p1110, p1111). - for U/f control: check the current limits and acceleration times (p0640, p1120).
F07901	Drive: Motor overspeed
Reaction:	OFF2 (IASC/DCBRK)
Acknowledge:	IMMEDIATELY
Cause:	The maximum permissible speed was either positively or negatively exceeded. The maximum permissible positive speed is formed as follows: Minimum (p1082, Cl: p1085) + p2162 The maximum permissible negative speed is formed as follows: Maximum (-p1082, Cl: 1088) - p2162
Remedy:	The following applies for a positive direction of rotation: - check r1084 and if required, correct p1082, Cl:p1085 and p2162. The following applies for a negative direction of rotation: - check r1087 and if required, correct p1082, Cl:p1088 and p2162. Activate pre-control of the speed limiting controller (p1401.7 = 1). Increase the hysteresis for the overspeed signal p2162. This upper limit is dependent upon the maximum motor speed p0322 and the maximum speed p1082 of the setpoint channel.
F07902 (N, A)	Drive: Motor stalled
Reaction:	OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)
Acknowledge:	IMMEDIATELY
Cause:	For a vector drive the system has identified that the motor has stall for a time longer than is set in p2178. Fault value (r0949, interpret decimal): 1: Stall detection using r1408.11 (p1744 or p0492) vector control with encoder. 2: Stall detection using r1408.12 (p1745) or (r0084 - r0083). See also: p1744 (Motor model speed threshold stall detection), p2178 (Motor stalled delay time)
Remedy:	Steps should always be taken to ensure that both motor data identification and the rotating measurement were carried out (see p1900, r3925). For closed-loop speed and torque control with speed encoder, the following applies: - check the speed signal (interrupted cable, polarity, pulse number, broken encoder shaft). - check the speed encoder, if another speed encoder was selected using the data set changeover. This must be connected to the same motor that is controlled for the data set changeover.

If there is no fault, then the fault tolerance (p1744 and p0492) can be increased.
 For closed-loop speed and torque control without speed encoder, the following applies:
 - check whether the drive stalls solely due to the load in controlled mode or when the speed setpoint is still zero. If yes, then increase the current setpoint using p1610.
 - if the motor excitation time (p0346) was significantly reduced and the drive stalls when it is switched on and run immediately, p0346 should be increased again.
 If there is no fault, then the fault tolerance can be increased (p1745).
 - check the current limits (p0640, r0067, r0289). If the current limits are too low, then the drive cannot be magnetized.
 - If the fault occurs with fault value 2 when the motor accelerates very quickly to the field weakening range, the deviation between the flux setpoint and flux actual value can be reduced and, in turn, the message prevented, by reducing p1596 or p1553.
 The following generally apply for closed-loop and torque control:
 - check whether a line phase failure is affecting power unit PM250D.
 - check whether the motor cables are disconnected (see A07929).
 If there is no fault, then the delay time can be increased (p2178).

A07903 **Drive: Motor speed deviation**
Reaction: NONE
Acknowledge: NONE
Cause: The absolute value of the speed difference from the setpoint (p2151) and the speed actual value (r2169) exceeds the tolerance threshold (p2163) longer than tolerated (p2164, p2166).
 The alarm is only enabled for p2149.0 = 1.
 Possible causes:
 - the load torque is greater than the torque setpoint.
 - when accelerating, the torque/current/power limit is reached. If the limits are not sufficient, then it is possible that the drive has been dimensioned too small.
 - for closed-loop torque control, the speed setpoint does not track the speed actual value.
 - for active Vdc controller.
 For U/f control, the overload condition is detected as the I_max controller is active.
 See also: p2149 (Monitoring configuration)
Remedy: - increase p2163 and/or p2166.
 - increase the torque/current/power limits.
 - for closed-loop torque control: The speed setpoint should track the speed actual value.
 - de-activate alarm with p2149.0 = 0.

A07910 (N) **Drive: Motor overtemperature**
Reaction: NONE
Acknowledge: NONE
Cause: KTY or no sensor:
 The measured motor temperature or the temperature of the motor temperature model 2 has exceeded the alarm threshold (p0604). The response parameterized in p0610 becomes active.
 PTC or bimetallic NC contact:
 The response threshold of 1650 Ohm was exceeded or the NC contact opened.
 Alarm value (r2124, interpret decimal):
 11: No output current reduction.
 12: Output current reduction active.
 See also: p0604 (Mot_temp_mod 2/KTY alarm threshold), p0610 (Motor overtemperature response)
Remedy: - check the motor load.
 - check the motor ambient temperature.
 - check KTY84.
 - check overtemperatures of the motor temperature model 2 (p0626 ... p0628).
 See also: p0612 (Mot_temp_mod activation), p0625 (Motor ambient temperature), p0626 (Motor overtemperature, stator core), p0627 (Motor overtemperature, stator winding), p0628 (Motor overtemperature rotor winding)

A07920 **Drive: Torque/speed too low**
Reaction: NONE
Acknowledge: NONE
Cause: For p2193 = 1:
 The torque deviates from the torque/speed envelope characteristic (too low).

For p2193 = 2:
 The speed signal from the external encoder (refer to p3230) deviates from the speed (r2169) (too low).
 See also: p2181 (Load monitoring response)

Remedy:

- check the connection between the motor and load.
- adapt the parameterization corresponding to the load.

A07921 Drive: Torque/speed too high

Reaction: NONE

Acknowledge: NONE

Cause:

For p2193 = 1:
 The torque deviates from the torque/speed envelope characteristic (too high).
 For p2193 = 2:
 The speed signal from the external encoder (refer to p3230) deviates from the speed (r2169) (too high).

Remedy:

- check the connection between the motor and load.
- adapt the parameterization corresponding to the load.

A07922 Drive: Torque/speed out of tolerance

Reaction: NONE

Acknowledge: NONE

Cause:

For p2193 = 1:
 The torque deviates from the torque/speed envelope characteristic.
 For p2193 = 2:
 The speed signal from the external encoder (refer to p3230) deviates from the speed (r2169).

Remedy:

- check the connection between the motor and load.
- adapt the parameterization corresponding to the load.

F07923 Drive: Torque/speed too low

Reaction: OFF1 (NONE, OFF2, OFF3)

Acknowledge: IMMEDIATELY

Cause:

For p2193 = 1:
 The torque deviates from the torque/speed envelope characteristic (too low).
 For p2193 = 2:
 The speed signal from the external encoder (refer to p3230) deviates from the speed (r2169) (too low).

Remedy:

- check the connection between the motor and load.
- adapt the parameterization corresponding to the load.

F07924 Drive: Torque/speed too high

Reaction: OFF1 (NONE, OFF2, OFF3)

Acknowledge: IMMEDIATELY

Cause:

For p2193 = 1:
 The torque deviates from the torque/speed envelope characteristic (too high).
 For p2193 = 2:
 The speed signal from the external encoder (refer to p3230) deviates from the speed (r2169) (too high).

Remedy:

- check the connection between the motor and load.
- adapt the parameterization corresponding to the load.

F07925 Drive: Torque/speed out of tolerance

Reaction: OFF1 (NONE, OFF2, OFF3)

Acknowledge: IMMEDIATELY

Cause:

For p2193 = 1:
 The torque deviates from the torque/speed envelope characteristic.
 For p2193 = 2:
 The speed signal from the external encoder (refer to p3230) deviates from the speed (r2169).

Remedy:

- check the connection between the motor and load.
- adapt the parameterization corresponding to the load.

A07927	DC braking active
Reaction:	NONE
Acknowledge:	NONE
Cause:	The motor is braked with DC current. DC braking is active. 1) A message with response DCBRK is active. The motor is braked with the braking current set in p1232 for the duration set in in p1233. If the standstill threshold p1226 is undershot, then braking is prematurely canceled. 2) DC braking has been activated at binector input p1230 with the DC braking set (p1230 = 4). Braking current p1232 is injected until this binector input becomes inactive.
Remedy:	Not necessary. The alarm automatically disappears once DC braking has been executed.
A07929 (F)	Drive: No motor detected
Reaction:	NONE
Acknowledge:	NONE
Cause:	The absolute current value is so small after enabling the inverter pulses that no motor is detected. Note: In the case of vector control and an induction motor, this alarm is followed by the fault F07902. See also: p2179 (Output load identification current limit)
Remedy:	- check the motor feeder cables. - reduce the threshold value (p2179), e.g. for synchronous motors. - check the voltage boost of the U/f control (p1310). - carry out a standstill measurement to set the stator resistance (p0350).
F07936	Drive: load failure
Reaction:	OFF1 (NONE, OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	The load monitoring has detected a load failure.
Remedy:	- check the sensor. - if necessary, de-activate the load monitoring (p2193). See also: p2193 (Load monitoring configuration), p3232 (Load monitoring failure detection)
F07950 (A)	Motor parameter incorrect
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	The motor parameters were incorrectly entered while commissioning (e.g. p0300 = 0, no motor) Fault value (r0949, interpret decimal): Parameter number involved. See also: p0300, p0301, p0304, p0305, p0307, p0310, p0311, p0314, p0316, p0320, p0322, p0323
Remedy:	Compare the motor data with the rating plate data and if required, correct.
F07967	Drive: Pole position identification internal fault
Reaction:	OFF2 (NONE, OFF1)
Acknowledge:	IMMEDIATELY
Cause:	A fault has occurred during the pole position identification routine. Only for internal Siemens troubleshooting.
Remedy:	Carry out a POWER ON.
F07968	Drive: Lq-Ld measurement incorrect
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	A fault has occurred during the Lq-Ld measurement. Fault value (r0949, interpret decimal): 10: Stage 1: The ratio between the measured current and zero current is too low. 12: Stage 1: The maximum current was exceeded. 15: Second harmonic too low.

16: Drive converter too small for the measuring technique.
 17: Abort due to pulse inhibit.

Remedy:
 For fault value = 10:
 Check whether the motor is correctly connected.
 Replace the power unit involved.
 De-activate technique (p1909).
 For fault value = 12:
 Check whether motor data have been correctly entered.
 De-activate technique (p1909).
 For fault value = 16:
 De-activate technique (p1909).
 For fault value = 17:
 Repeat technique.

F07969 Drive: Incorrect pole position identification

Reaction: OFF2

Acknowledge: IMMEDIATELY

Cause: A fault has occurred during the pole position identification routine.
 Fault value (r0949, interpret decimal):
 1: Current controller limited
 2: Motor shaft locked.
 10: Stage 1: The ratio between the measured current and zero current is too low.
 11: Stage 2: The ratio between the measured current and zero current is too low.
 12: Stage 1: The maximum current was exceeded.
 13: Stage 2: The maximum current was exceeded.
 14: Current difference to determine the +d axis too low.
 15: Second harmonic too low.
 16: Drive converter too small for the measuring technique.
 17: Abort due to pulse inhibit.
 18: First harmonic too low.
 20: Pole position identification requested with the motor shaft rotating and activated "flying restart" function.

Remedy:
 For fault value = 1:
 Check whether the motor is correctly connected.
 Check whether motor data have been correctly entered.
 Replace the power unit involved.
 For fault value = 2:
 Bring the motor into a no-load condition.
 For fault value = 10:
 When selecting p1980 = 4: Increase the value for p0325.
 When selecting p1980 = 1: Increase the value for p0329.
 Check whether the motor is correctly connected.
 Replace the power unit involved.
 For fault value = 11:
 Increase the value for p0329.
 Check whether the motor is correctly connected.
 Replace the power unit involved.
 For fault value = 12:
 When selecting p1980 = 4: Reduce the value for p0325.
 When selecting p1980 = 1: Reduce the value for p0329.
 Check whether motor data have been correctly entered.
 For fault value = 13:
 Reduce the value for p0329.
 Check whether motor data have been correctly entered.
 For fault value = 14:
 Increase the value for p0329.
 For fault value = 15:
 Increase the value for p0325.
 Motor not sufficiently anisotropic, change the technique (p1980 = 1 or 10).
 For fault value = 16:
 Change the technique (p1980).
 For fault value = 17:
 Repeat technique.

For fault value = 18:
 Increase the value for p0329.
 Saturation not sufficient, change the technique (p1980 = 10).
 For fault value = 20:
 Before carrying out a pole position identification routine ensure that the motor shaft is absolutely stationary (zero speed).

A07975 (N) Drive: Travel to the zero mark - setpoint input expected

Reaction: NONE
Acknowledge: NONE
Cause: The zero mark must be evaluated in order to adjust the encoder.
 It is expected that a speed or torque setpoint is entered.
Remedy: Not necessary.
 The alarm disappears once the zero mark has been detected.

A07976 Drive: Fine encoder calibration activated

Reaction: NONE
Acknowledge: NONE
Cause: The alarm indicates the phases of the fine encoder calibration using the alarm value.
 Alarm value (interpret decimal):
 1: Fine encoder calibration active.
 2: Rotating measurement started (set the setpoint speed > 40 % rated motor speed).
 3: Rotating measurement lies within the speed and torque range.
 4: Rotating measurement successful: pulse inhibit can be initiated to accept the values.
 5: Fine encoder calibration is calculated.
 10: Speed too low, rotating measurement interrupted.
 12: Torque too high, rotating measurement interrupted.
Remedy: Re alarm value = 10:
 Increase the speed.
 Re alarm value = 12:
 Bring the drive into a no-load condition.

A07980 Drive: Rotating measurement activated

Reaction: NONE
Acknowledge: NONE
Cause: The rotating measurement (automatic speed controller optimization) is activated.
 The rotating measurement is carried out at the next power-on command.
 Note:
 During the rotating measurement it is not possible to save the parameters (p0971).
 See also: p1960 (Rotating measurement selection)
Remedy: Not necessary.
 The alarm disappears automatically after the speed controller optimization has been successfully completed or for the setting p1900 = 0.

A07981 Drive: Enable signals for the rotating measurement missing

Reaction: NONE
Acknowledge: NONE
Cause: The rotating measurement cannot be started due to missing enable signals.
 For p1959.13 = 1, the following applies:
 - enable signals for the ramp-function generator missing (see p1140 ... p1142).
 - enable signals for the speed controller integrator missing (see p1476, p1477).
Remedy:
 - acknowledge faults that are present.
 - establish missing enable signals.
 See also: r0002 (Drive operating display), r0046 (Missing enable sig)

F07983	Drive: Rotating measurement saturation characteristic
Reaction:	OFF1 (NONE, OFF2)
Acknowledge:	IMMEDIATELY
Cause:	<p>A fault has occurred while determining the saturation characteristic. Fault value (r0949, interpret decimal):</p> <ol style="list-style-type: none"> 1: The speed did not reach a steady-state condition. 2: The rotor flux did not reach a steady-state condition. 3: The adaptation circuit did not reach a steady-state condition. 4: The adaptation circuit was not enabled. 5: Field weakening active. 6: The speed setpoint was not able to be approached as the minimum limiting is active. 7: The speed setpoint was not able to be approached as the suppression (skip) bandwidth is active. 8: The speed setpoint was not able to be approached as the maximum limiting is active. 9: Several values of the determined saturation characteristic are not plausible. 10: Saturation characteristic could not be sensibly determined because load torque too high.
Remedy:	<p>For fault value = 1:</p> <ul style="list-style-type: none"> - the total drive moment of inertia is far higher than that of the motor (p0341, p0342). <p>De-select rotating measurement (p1960), enter the moment of inertia p0342, re-calculate the speed controller p0340 = 4 and repeat the measurement.</p> <p>Re fault value = 1 ... 2:</p> <ul style="list-style-type: none"> - increase the measuring speed (p1961) and repeat the measurement. <p>Re fault value = 1 ... 4:</p> <ul style="list-style-type: none"> - check the motor parameters (rating plate data). After the change: Calculate p0340 = 3. - check the moment of inertia (p0341, p0342). After the change: Calculate p0340 = 3. - carry out a motor data identification routine (p1910). - if required, reduce the dynamic factor (p1967 < 25 %). <p>For fault value = 5:</p> <ul style="list-style-type: none"> - the speed setpoint (p1961) is too high. Reduce the speed. <p>For fault value = 6:</p> <ul style="list-style-type: none"> - adapt the speed setpoint (p1961) or minimum limiting (p1080). <p>For fault value = 7:</p> <ul style="list-style-type: none"> - adapt the speed setpoint (p1961) or suppression (skip) bandwidths (p1091 ... p1094, p1101). <p>For fault value = 8:</p> <ul style="list-style-type: none"> - adapt the speed setpoint (p1961) or maximum limit (p1082, p1083 and p1086). <p>Re fault value = 9, 10:</p> <ul style="list-style-type: none"> - the measurement was carried out at an operating point where the load torque is too high. Select a more suitable operating point, either by changing the speed setpoint (p1961) or by reducing the load torque. The load torque may not be varied while making measurements. <p>Note:</p> <p>The saturation characteristic identification routine can be disabled using p1959.1. See also: p1959 (Rotating measurement configuration)</p>
F07984	Drive: Speed controller optimization, moment of inertia
Reaction:	OFF1 (NONE, OFF2)
Acknowledge:	IMMEDIATELY
Cause:	<p>A fault has occurred while identifying the moment of inertia. Fault value (r0949, interpret decimal):</p> <ol style="list-style-type: none"> 1: The speed did not reach a steady-state condition. 2: The speed setpoint was not able to be approached as the minimum limiting is active. 3: The speed setpoint was not able to be approached as the suppression (skip) bandwidth is active. 4: The speed setpoint was not able to be approached as the maximum limiting is active. 5: It is not possible to increase the speed by 10% as the minimum limiting is active. 6: It is not possible to increase the speed by 10% as the suppression (skip) bandwidth is active. 7: It is not possible to increase the speed by 10% as the maximum limiting is active. 8: The torque difference after the speed setpoint step is too low in order to be able to still reliably identify the moment of inertia. 9: Too few data to be able to reliably identify the moment of inertia. 10: After the setpoint step, the speed either changed too little or in the incorrect direction. 11: The identified moment of inertia is not plausible.

Remedy:

- For fault value = 1:
 - check the motor parameters (rating plate data). After the change: Calculate p0340 = 3.
 - check the moment of inertia (p0341, p0342). After the change: Calculate p0340 = 3.
 - carry out a motor data identification routine (p1910).
 - if required, reduce the dynamic factor (p1967 < 25 %).
- Re fault value = 2, 5:
 - adapt the speed setpoint (p1965) or adapt the minimum limit (p1080).
- Re fault value = 3, 6:
 - adapt the speed setpoint (p1965) or suppression (skip) bandwidths (p1091 ... p1094, p1101).
- Re fault value = 4, 7:
 - adapt the speed setpoint (p1965) or maximum limit (p1082, p1083 and p1086).
- For fault value = 8:
 - the total drive moment of inertia is far higher than that of the motor (refer to p0341, p0342). De-select rotating measurement (p1960), enter the moment of inertia p0342, re-calculate the speed controller p0340 = 4 and repeat the measurement.
- For fault value = 9:
 - check the moment of inertia (p0341, p0342). After the change, re-calculate (p0340 = 3 or 4).
- For fault value = 10:
 - check the moment of inertia (p0341, p0342). After the change: Calculate p0340 = 3.

Note:
 The moment of inertia identification routine can be disabled using p1959.2.
 See also: p1959 (Rotating measurement configuration)

F07985 Drive: Speed controller optimization (oscillation test)

Reaction: OFF1 (NONE, OFF2)
Acknowledge: IMMEDIATELY
Cause: A fault has occurred during the vibration test.
 Fault value (r0949, interpret decimal):
 1: The speed did not reach a steady-state condition.
 2: The speed setpoint was not able to be approached as the minimum limiting is active.
 3: The speed setpoint was not able to be approached as the suppression (skip) bandwidth is active.
 4: The speed setpoint was not able to be approached as the maximum limiting is active.
 5: Torque limits too low for a torque step.
 6: No suitable speed controller setting was found.

Remedy:

- For fault value = 1:
 - check the motor parameters (rating plate data). After the change: Calculate p0340 = 3.
 - check the moment of inertia (p0341, p0342). After the change: Calculate p0340 = 3.
 - carry out a motor data identification routine (p1910).
 - if required, reduce the dynamic factor (p1967 < 25 %).
- For fault value = 2:
 - adapt the speed setpoint (p1965) or adapt the minimum limit (p1080).
- For fault value = 3:
 - adapt the speed setpoint (p1965) or suppression (skip) bandwidths (p1091 ... p1094, p1101).
- For fault value = 4:
 - adapt the speed setpoint (p1965) or maximum limit (p1082, p1083 and p1086).
- For fault value = 5:
 - increase the torque limits (e.g. p1520, p1521).
- For fault value = 6:
 - reduce the dynamic factor (p1967).
 - disable the vibration test (p1959.4 = 0) and repeat the rotating measurement.

See also: p1959 (Rotating measurement configuration)

F07986 Drive: Rotating measurement ramp-function generator

Reaction: OFF1 (NONE, OFF2)
Acknowledge: IMMEDIATELY
Cause: During the rotating measurements, problems with the ramp-function generator occurred.
 Fault value (r0949, interpret decimal):
 1: The positive and negative directions are inhibited.

Remedy:

- For fault value = 1:
 - Enable the direction (p1110 or p1111).

F07988	Drive: Rotating measurement, no configuration selected
Reaction:	OFF2 (NONE, OFF1)
Acknowledge:	IMMEDIATELY
Cause:	When configuring the rotating measurement (p1959), no function was selected.
Remedy:	Select at least one function for automatic optimization of the speed controller (p1959). See also: p1959 (Rotating measurement configuration)
F07990	Drive: Incorrect motor data identification
Reaction:	OFF2 (NONE, OFF1)
Acknowledge:	IMMEDIATELY
Cause:	A fault has occurred during the identification routine. Fault value (r0949, interpret decimal): 1: Current limit value reached. 2: Identified stator resistance lies outside the expected range 0.1 ... 100% of Zn. 3: Identified rotor resistance lies outside the expected range 0.1 ... 100% of Zn. 4: Identified stator reactance lies outside the expected range 50 ... 500 % of Zn. 5: Identified magnetizing reactance lies outside the expected range 50 ... 500 % of Zn. 6: Identified rotor time constant lies outside the expected range 10 ms ... 5 s. 7: Identified total leakage reactance lies outside the expected range 4 ... 50 % of Zn. 8: Identified stator leakage reactance lies outside the expected range 2 ... 50% of Zn. 9: Identified rotor leakage reactance lies outside the expected range 2 ... 50% of Zn. 10: Motor has been incorrectly connected. 11: Motor shaft rotates. 12: Ground fault detected. 20: Identified threshold voltage of the semiconductor devices lies outside the expected range 0 ... 10 V. 30: Current controller in voltage limiting. 40: At least one identification contains errors. The identified parameters are not saved to prevent inconsistencies. 50: The selected sampling time is too low for the motor identification (p0115[0]). Note: Percentage values are referred to the rated motor impedance: $Z_n = V_{mot,nom} / \sqrt{3} / I_{mot,nom}$
Remedy:	Re fault value = 1 ... 40: - check whether motor data have been correctly entered in p0300, p0304 ... p0311. - is there an appropriate relationship between the motor power rating and that of the power unit? The ratio of the power unit to the rated motor current should not be less than 0.5 and not be greater than 4. - check connection type (star-delta). Re fault value = 4, 7: - check whether the inductance in p0233 is correctly set. - check whether motor has been correctly connected (star-delta). Re fault value = 11 in addition: - Deactivate oscillation monitoring (p1909.7 = 1). For fault value = 12: - check the power cable connections. - check the motor. - check the CT. For fault value = 50: - Perform a motor data identification with a higher sampling time, and after this, change to the required higher sampling time (p0115[0]).
A07991 (N)	Drive: Motor data identification activated
Reaction:	NONE
Acknowledge:	NONE
Cause:	The motor data identification routine is activated. The motor data identification routine is carried out at the next power-on command. If rotating measurement is selected (see p1900, p1960), it will not be possible to save the parameter assignment. Once motor data identification has been completed or de-activated, the option to save the parameter assignment will be made available again. See also: p1910 (Motor data identification selection)

Remedy: Not necessary.
The alarm automatically disappears after the motor data identification routine has been successfully completed or for the setting p1900 = 0.

A07994 (F, N) Drive: motor data identification not performed

Reaction: NONE

Acknowledge: NONE

Cause: The "vector control" mode has been selected and a motor data identification has still not been performed. The alarm is initiated when changing the drive data set (see r0051) in the following cases:
- vector control is parameterized in the actual drive data set (p1300 >= 20).
and
- motor data identification has still not been performed in the actual drive data set (see r3925).

Note:

For SINAMICS G120, a check is made and an alarm is output also when exiting commissioning and when the system powers up.

Remedy:
- Perform motor data identification (see p1900).
- If required, parameterize "U/f control" (p1300 < 20).
- switch over to a drive data set, in which the conditions do not apply.

F08010 (N, A) CU: Analog-to-digital converter

Reaction: OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP1, STOP2)

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The analog-to-digital converter on the Control Unit has not supplied any converted data.

Remedy:
- check the power supply.
- replace Control Unit.

F08501 (N, A) PROFINET: Setpoint timeout

Reaction: OFF3 (IASC/DCBRK, NONE, OFF1, OFF2, STOP1, STOP2)

Acknowledge: IMMEDIATELY

Cause: The reception of setpoints from PROFINET has been interrupted.
- bus connection interrupted.
- controller switched off.
- controller set into the STOP state.

Remedy:
- Restore the bus connection and set the controller to RUN.
- check the set monitoring time if the error persists.

F08502 (A) PROFINET: Monitoring time sign-of-life expired

Reaction: OFF1 (OFF2, OFF3)

Acknowledge: IMMEDIATELY

Cause: The monitoring time for the sign-of-life counter has expired. The connection to the PROFINET interface was interrupted.

Remedy:
- carry out a POWER ON (power off/on).
- contact the Hotline.

A08511 (F) PROFINET: Receive configuration data invalid

Reaction: NONE

Acknowledge: NONE

Cause: The drive unit did not accept the receive configuration data.
Alarm value (r2124, interpret decimal):
Return value of the receive configuration data check.
2: Too many PZD data words for output or input to a drive object. Maximum of 12 words are possible.
3: Uneven number of bytes for input or output.
501: PROFIsafe parameter error (e.g. F_dest).
502: PROFIsafe telegram does not match.

Remedy: Check the receive configuration data.
Re alarm value = 2:
- Check the number of data words for output and input to a drive object.
Re alarm value = 501:
- Check the set PROFIsafe address (p9610).

Re alarm value = 502:
Check the enable of F-DI (p9501.30).

A08526 (F)	PROFINET: No cyclic connection
Reaction:	NONE
Acknowledge:	NONE
Cause:	There is no connection to a PROFINET controller.
Remedy:	Establish the cyclic connection and activate the controller with cyclic operation. Check the parameters "Name of Station" and "IP of Station" (r61000, r61001).
A08565	PROFINET: Consistency error affecting adjustable parameters
Reaction:	NONE
Acknowledge:	NONE
Cause:	A consistency error was detected when activating the configuration (p8925 = 1) for the PROFINET interface. The currently set configuration has not been activated. Possible causes: - IP address, subnet mask or default gateway is not correct - IP address or station name used twice in the network - station name contains invalid characters, etc. See also: p8920 (PN Name of Station), p8921 (PN IP address of station), p8922 (PN Default Gateway of Station), p8923 (PN Subnet Mask of Station)
Remedy:	Check the required interface configuration (p8920 and following), correct if necessary, and activate (p8925 = 1). See also: p8925 (PN interface configuration)
A08760	CAN: maximum size of the PZD IF exceeded
Reaction:	NONE
Acknowledge:	NONE
Cause:	The maximum size of the PZD interface exceeded. Fault value 1: receiving Fault value 2: sending Deleting the alarm: - Power Off/On - Warm restart - CANopen NMT state change - reset alarm with p2111
Remedy:	Map fewer process data in PDO.
A08800	PROFInergy energy-saving mode active
Reaction:	NONE
Acknowledge:	NONE
Cause:	The PROFInergy energy-saving mode is active Alarm value (r2124, interpret decimal): Mode ID of the active PROFInergy energy-saving mode. See also: r5600 (Pe energy saving mode ID)
Remedy:	The alarm automatically disappears when the energy-saving mode is exited. Note: After receiving the PROFInergy command "End_Pause" via PROFINET, the energy-saving mode is exited.
A08802	PROFInergy not possible to switch off incremental encoder supply
Reaction:	NONE
Acknowledge:	NONE
Cause:	The incremental encoder is used for the closed-loop position control. This means that its power supply cannot be switched off during the PROFInergy energy-saving mode, otherwise it would lose its position actual value. Alarm value (r2124, interpret decimal): Encoder number
Remedy:	The alarm automatically disappears when the energy-saving mode is exited. Note: After receiving the PROFInergy command "End_Pause" via PROFINET, the energy-saving mode is exited.

F13009	Licensing OA application not licensed
Reaction:	OFF1
Acknowledge:	IMMEDIATELY
Cause:	At least one OA application which is under license does not have a license. Note: Refer to r4955 and p4955 for information about the installed OA applications.
Remedy:	- enter and activate the license key for OA applications under license (p9920, p9921). - if necessary, de-activate unlicensed OA applications (p4956).
F13100	Know-how protection: Copy protection error
Reaction:	OFF1
Acknowledge:	IMMEDIATELY
Cause:	The know-how protection with copy protection for the memory card is active. An error has occurred when checking the memory card. Fault value (r0949, interpret decimal): 0: A memory card is not inserted. 1: An invalid memory card is inserted (not SIEMENS). 2: An invalid memory card is inserted. 3: The memory card is being used in another Control Unit. 12: An invalid memory card is inserted (OEM input incorrect, p7769). 13: The memory card is being used in another Control Unit (OEM input incorrect, p7759). See also: p7765 (KHP memory card copy protection)
Remedy:	Re fault value = 0, 1: - Insert the correct memory card and carry out POWER ON. Re fault value = 2, 3, 12, 13: - contact the responsible OEM. - Deactivate copy protection (p7765) and acknowledge the fault (p3981). - Deactivate know-how protection (p7766 ... p7768) and acknowledge the fault (p3981). Note: In general, the copy protection can only be changed when know-how protection is deactivated. KHP: Know-How Protection See also: p3981 (Faults acknowledge drive object), p7765 (KHP memory card copy protection)
F13101	Know-how protection: Copy protection cannot be activated
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	An error occurred when attempting to activate the copy protection for the memory card. Fault value (r0949, interpret decimal): 0: A memory card is not inserted. 1: An invalid memory card is inserted (not SIEMENS). Note: KHP: Know-How Protection
Remedy:	- Insert a valid memory card. - Try to activate copy protection again (p7765). See also: p7765 (KHP memory card copy protection)
F13102	Know-how protection: Consistency error of the protected data
Reaction:	OFF1
Acknowledge:	IMMEDIATELY
Cause:	An error was identified when checking the consistency of the protected files. As a consequence, the project on the memory card cannot be run. Fault value (r0949, interpret hexadecimal): yyyyxxxx hex: yyyy = object number, xxxx = fault cause xxxx = 1: A file has a checksum error. xxxx = 2: The files are not consistent with one another.

xxxx = 3:

The project files, which were loaded into the file system via load (download from the memory card), are inconsistent.

Note:

KHP: Know-How Protection

- Remedy:**
- Replace the project on the memory card or replace project files for download from the memory card.
 - Restore the factory setting and download again.
-

F30001 Power unit: Overcurrent

Reaction: OFF2

Acknowledge: IMMEDIATELY

Cause: The power unit has detected an overcurrent condition.

- closed-loop control is incorrectly parameterized.
- motor has a short-circuit or fault to ground (frame).
- U/f operation: Up ramp set too low.
- U/f operation: rated current of motor much greater than that of power unit.
- High discharge and post-charging current for line supply voltage interruptions.
- High post-charging currents for overload when motoring and DC link voltage dip.
- Short-circuit currents at power-on due to the missing line reactor.
- power cables are not correctly connected.
- power cables exceed the maximum permissible length.
- power unit defective.
- line phase interrupted.

Fault value (r0949, interpret bitwise binary):

Bit 0: Phase U.

Bit 1: Phase V.

Bit 2: Phase W.

Bit 3: Overcurrent in the DC link.

Note:

Fault value = 0 means that the phase with overcurrent is not recognized.

- Remedy:**
- check the motor data - if required, carry out commissioning.
 - check the motor circuit configuration (star/delta).
 - U/f operation: Increase up ramp.
 - U/f operation: Check assignment of rated currents of motor and power unit.
 - check the line supply quality.
 - Reduce motor load.
 - Correct connection of line reactor.
 - check the power cable connections.
 - check the power cables for short-circuit or ground fault.
 - check the length of the power cables.
 - replace power unit.
 - check the line supply phases.
-

F30002 Power unit: DC link voltage overvoltage

Reaction: OFF2

Acknowledge: IMMEDIATELY

Cause: The power unit has detected an overvoltage condition in the DC link.

- motor regenerates too much energy.
- line supply voltage too high.
- line phase interrupted.
- DC-link voltage control switched off.
- dynamic response of DC-link voltage controller excessive or insufficient.

Fault value (r0949, interpret decimal):

DC link voltage at the time of trip [0.1 V].

- Remedy:**
- increase the ramp-down time (p1121).
 - set the rounding times (p1130, p1136). This is particularly recommended in U/f operation to relieve the DC link voltage controller with rapid ramp-down times of the ramp-function generator.
 - Activate the DC link voltage controller (p1240, p1280).
 - adapt the dynamic response of the DC-link voltage controller (p1243, p1247, p1283, p1287).
 - check the line supply voltage and setting in p0210.

- check and correct the phase assignment at the power unit.
 - check the line supply phases.
- See also: p0210 (Drive unit line supply voltage)

F30003 Power unit: DC link voltage undervoltage

Reaction: OFF2
Acknowledge: IMMEDIATELY
Cause: The power unit has detected an undervoltage condition in the DC link.
 - line supply failure
 - line supply voltage below the permissible value.
 - line phase interrupted.
Note:
 The monitoring threshold for the DC link undervoltage is the minimum of the following values:
 - for a calculation, refer to p0210.
Remedy:
 - check the line supply voltage
 - check the line supply phases.
 See also: p0210 (Drive unit line supply voltage)

F30004 Power unit: Overtemperature heat sink AC inverter

Reaction: OFF2
Acknowledge: IMMEDIATELY
Cause: The temperature of the power unit heat sink has exceeded the permissible limit value.
 - insufficient cooling, fan failure.
 - overload.
 - ambient temperature too high.
 - pulse frequency too high.
Fault value (r0949):
 Temperature [1 bit = 0.01 °C].
Remedy:
 - check whether the fan is running.
 - check the fan elements.
 - check whether the ambient temperature is in the permissible range.
 - check the motor load.
 - reduce the pulse frequency if this is higher than the rated pulse frequency.
Notice:
 This fault can only be acknowledged after this alarm threshold for alarm A05000 has been undershot.
 See also: p1800 (Pulse frequency setpoint)

F30005 Power unit: Overload I2t

Reaction: OFF2
Acknowledge: IMMEDIATELY
Cause: The power unit was overloaded (r0036 = 100 %).
 - the permissible rated power unit current was exceeded for an inadmissibly long time.
 - the permissible load duty cycle was not maintained.
Fault value (r0949, interpret decimal):
 I2t [100 % = 16384].
Remedy:
 - reduce the continuous load.
 - adapt the load duty cycle.
 - check the motor and power unit rated currents.
 - reduce the current limit (p0640).
 - during operation with U/f characteristic: reduce the integral time of the current limiting controller (p1341).
 See also: r0036 (Power unit overload I2t), r0206 (Rated power unit power), p0307 (Rated motor power)

F30011 Power unit: Line phase failure in main circuit

Reaction: OFF2 (OFF1)
Acknowledge: IMMEDIATELY
Cause: At the power unit, the DC link voltage ripple has exceeded the permissible limit value.
Possible causes:
 - A line phase has failed.
 - The 3 line phases are inadmissibly unsymmetrical.

- the fuse of a phase of a main circuit has ruptured.
 - A motor phase has failed.
- Fault value (r0949, interpret decimal):
Only for internal Siemens troubleshooting.

Remedy:

- check the main circuit fuses.
- Check whether a single-phase load is distorting the line voltages.
- check the motor feeder cables.

F30015 (N, A) Power unit: Phase failure motor cable

Reaction: OFF2 (NONE, OFF1, OFF3)

Acknowledge: IMMEDIATELY

Cause: A phase failure in the motor feeder cable was detected.

The signal can also be output in the following cases:

- The motor is correctly connected, but the drive has stalled in U/f control. In this case, a current of 0 A is possibly measured in one phase due to asymmetry of the currents.
- the motor is correctly connected, however the closed-speed control is instable and therefore an oscillating torque is generated.

Note:

Chassis power units do not feature phase failure monitoring.

Remedy:

- check the motor feeder cables.
- increase the ramp-up or ramp-down time (p1120) if the drive has stalled in U/f control.
- check the speed controller settings.

A30016 (N) Power unit: Load supply switched out

Reaction: NONE

Acknowledge: NONE

Cause: The DC link voltage is too low.

Alarm value (r2124, interpret decimal):

DC link voltage at the time of trip [0.1 V].

Remedy: Under certain circumstances, the AC line supply is not switched on.

F30017 Power unit: Hardware current limit has responded too often

Reaction: OFF2

Acknowledge: IMMEDIATELY

Cause: The hardware current limitation in the relevant phase (see A30031, A30032, A30033) has responded too often. The number of times the limit has been exceeded depends on the design and type of power unit.

- closed-loop control is incorrectly parameterized.
- fault in the motor or in the power cables.
- the power cables exceed the maximum permissible length.
- motor load too high
- power unit defective.

Fault value (r0949, interpret binary):

Bit 0: Phase U

Bit 1: Phase V

Bit 2: Phase W

Remedy:

- check the motor data.
- check the motor circuit configuration (star-delta).
- check the motor load.
- check the power cable connections.
- check the power cables for short-circuit or ground fault.
- check the length of the power cables.
- replace power unit.

F30021 Power unit: Ground fault

Reaction: OFF2

Acknowledge: IMMEDIATELY

Cause: Power unit has detected a ground fault.

- ground fault in the power cables.
- winding fault or ground fault at the motor.

- CT defective.
 - when the brake is applied, this causes the hardware DC current monitoring to respond.
- Fault value (r0949, interpret decimal):
 Absolute value, summation current [32767 = 271 % rated current].

Remedy:

- check the power cable connections.
 - check the motor.
 - check the CT.
 - check the cables and contacts of the brake connection (a wire is possibly broken).
- See also: p0287 (Ground fault monitoring thresholds)

F30022 Power unit: Monitoring U_{ce}

Reaction: OFF2

Acknowledge: POWER ON

Cause: In the power unit, the monitoring of the collector-emitter voltage (U_{ce}) of the semiconductor has responded.

- Possible causes:
- fiber-optic cable interrupted.
 - power supply of the IGBT gating module missing.
 - short-circuit at the power unit output.
 - defective semiconductor in the power unit.

Fault value (r0949, interpret binary):
 Bit 0: Short-circuit in phase U
 Bit 1: Short circuit in phase V
 Bit 2: Short-circuit in phase W
 Bit 3: Light transmitter enable defective
 Bit 4: U_{ce} group fault signal interrupted
 See also: r0949 (Fault value)

Remedy:

- check the fiber-optic cable and if required, replace.
- check the power supply of the IGBT gating module (24 V).
- check the power cable connections.
- select the defective semiconductor and replace.

F30024 Power unit: Overtemperature thermal model

Reaction: OFF2

Acknowledge: IMMEDIATELY

Cause: The temperature difference between the heat sink and chip has exceeded the permissible limit value.

- the permissible load duty cycle was not maintained.
- insufficient cooling, fan failure.
- overload.
- ambient temperature too high.
- pulse frequency too high.

See also: r0037 (Power unit temperatures)

Remedy:

- adapt the load duty cycle.
- check whether the fan is running.
- check the fan elements.
- check whether the ambient temperature is in the permissible range.
- check the motor load.
- reduce the pulse frequency if this is higher than the rated pulse frequency.
- if DC braking is active: reduce braking current (p1232).

F30025 Power unit: Chip overtemperature

Reaction: OFF2

Acknowledge: IMMEDIATELY

Cause: The chip temperature of the semiconductor has exceeded the permissible limit value.

- the permissible load duty cycle was not maintained.
- insufficient cooling, fan failure.
- overload.
- ambient temperature too high.
- pulse frequency too high.

Fault value (r0949, interpret decimal):
 Temperature difference between the heat sink and chip [0.01 °C].

- Remedy:**
- adapt the load duty cycle.
 - check whether the fan is running.
 - check the fan elements.
 - check whether the ambient temperature is in the permissible range.
 - check the motor load.
 - reduce the pulse frequency if this is higher than the rated pulse frequency.

Notice:

This fault can only be acknowledged after this alarm threshold for alarm A05001 has been undershot.
See also: r0037 (Power unit temperatures)

F30027 Power unit: Precharging DC link time monitoring

Reaction: OFF2

Acknowledge: IMMEDIATELY

Cause: The power unit DC link was not able to be pre-charged within the expected time.

- 1) There is no line supply voltage connected.
- 2) The line contactor/line side switch has not been closed.
- 3) The line supply voltage is too low.
- 4) Line supply voltage incorrectly set (p0210).
- 5) The pre-charging resistors are overheated as there were too many pre-charging operations per time unit.
- 6) The pre-charging resistors are overheated as the DC link capacitance is too high.
- 7) The DC link has either a ground fault or a short-circuit.
- 8) Pre-charging circuit may be defective.

Fault value (r0949, interpret binary):

yyyyxxxx hex:

yyyy = power unit state

0: Fault status (wait for OFF and fault acknowledgement).

1: Restart inhibit (wait for OFF).

2: Overvoltage condition detected -> change into the fault state.

3: Undervoltage condition detected -> change into the fault state.

4: Wait for bridging contactor to open -> change into the fault state.

5: Wait for bridging contactor to open -> change into restart inhibit.

6: Commissioning.

7: Ready for pre-charging.

8: Pre-charging started, DC link voltage less than the minimum switch-on voltage.

9: Pre-charging, DC link voltage end of pre-charging still not detected.

10: Wait for the end of the de-bounce time of the main contactor after pre-charging has been completed.

11: Pre-charging completed, ready for pulse enable.

12: Reserved.

xxxx = Missing internal enable signals, power unit (inverted bit-coded, FFFF hex -> all internal enable signals available)

Bit 0: Power supply of the IGBT gating shut down.

Bit 1: Ground fault detected.

Bit 2: Peak current intervention.

Bit 3: I_{2t} exceeded.

Bit 4: Thermal model overtemperature calculated.

Bit 5: (heat sink, gating module, power unit) overtemperature measured.

Bit 6: Reserved.

Bit 7: Overvoltage detected.

Bit 8: Power unit has completed pre-charging, ready for pulse enable.

Bit 9: Reserved.

Bit 10: Overcurrent detected.

Bit 11: Reserved.

Bit 12: Reserved.

Bit 13: Vce fault detected, transistor de-saturated due to overcurrent/short-circuit.

Bit 14: Undervoltage detected.

See also: p0210 (Drive unit line supply voltage)

Remedy:

In general:

- check the line supply voltage at the input terminals.

- check the line supply voltage setting (p0210).

- wait until the pre-charging resistors have cooled down. For this purpose, preferably disconnect the infeed unit from the line supply.

Re 5):

- carefully observe the permissible pre-charging frequency (refer to the appropriate Equipment Manual).

Re 6):

- check the capacitance of the DC link and, if necessary, reduce it in accordance with the maximum permissible DC link capacitance (see relevant Equipment Manual).

Re 7):

- check the DC link for a ground fault or short circuit.

See also: p0210 (Drive unit line supply voltage)

A30031 Power unit: Hardware current limiting in phase U

Reaction: NONE

Acknowledge: NONE

Cause: Hardware current limit for phase U responded. The pulsing in this phase is inhibited for one pulse period.

- closed-loop control is incorrectly parameterized.
- fault in the motor or in the power cables.
- the power cables exceed the maximum permissible length.
- motor load too high
- power unit defective.

Note:

Alarm A30031 is always output if, for a Power Module, the hardware current limiting of phase U, V or W responds.

Remedy:

- check the motor data and if required, recalculate the control parameters (p0340 = 3). As an alternative, run a motor data identification (p1910 = 1, p1960 = 1).
- check the motor circuit configuration (star/delta).
- check the motor load.
- check the power cable connections.
- check the power cables for short-circuit or ground fault.
- check the length of the power cables.

A30032 Power unit: Hardware current limiting in phase V

Reaction: NONE

Acknowledge: NONE

Cause: Hardware current limit for phase V responded. The pulsing in this phase is inhibited for one pulse period.

- closed-loop control is incorrectly parameterized.
- fault in the motor or in the power cables.
- the power cables exceed the maximum permissible length.
- motor load too high
- power unit defective.

Note:

Alarm A30031 is always output if, for a Power Module, the hardware current limiting of phase U, V or W responds.

Remedy:

- Check the motor data and if required, recalculate the control parameters (p0340 = 3). As an alternative, run a motor data identification (p1910 = 1, p1960 = 1).
- check the motor circuit configuration (star/delta).
- check the motor load.
- check the power cable connections.
- check the power cables for short-circuit or ground fault.
- check the length of the power cables.

A30033 Power unit: Hardware current limiting in phase W

Reaction: NONE

Acknowledge: NONE

Cause: Hardware current limit for phase W responded. The pulsing in this phase is inhibited for one pulse period.

- closed-loop control is incorrectly parameterized.
- fault in the motor or in the power cables.
- the power cables exceed the maximum permissible length.
- motor load too high
- power unit defective.

Note:

Alarm A30031 is always output if, for a Power Module, the hardware current limiting of phase U, V or W responds.

- Remedy:**
- check the motor data and if required, recalculate the control parameters (p0340 = 3). As an alternative, run a motor data identification (p1910 = 1, p1960 = 1).
 - check the motor circuit configuration (star/delta).
 - check the motor load.
 - check the power cable connections.
 - check the power cables for short-circuit or ground fault.
 - check the length of the power cables.

A30034 Power unit: Internal overtemperature

Reaction: NONE

Acknowledge: NONE

Cause: The alarm threshold for internal overtemperature has been reached.
If the temperature inside the unit continues to increase, fault F30036 may be triggered.

- ambient temperature might be too high.
- insufficient cooling, fan failure.

Fault value (r0949, interpret decimal):
Only for internal Siemens troubleshooting.

- Remedy:**
- check the ambient temperature.
 - check the fan for the inside of the unit.

A30042 Power unit: Fan has reached the maximum operating hours

Reaction: NONE

Acknowledge: NONE

Cause: The maximum operating time of at least one fan will soon be reached, or has already been exceeded.
Fault value (r0949, interpret binary):
Bit 0: heat sink fan will reach the maximum operating time in 500 hours.
Bit 1: heat sink fan has exceeded the maximum operating time.
Bit 8: internal device fan will reach the maximum operating time in 500 hours.
Bit 9: internal device fan has exceeded the maximum operating time.
Note:
The maximum operating time of the heat sink fan in the power unit is displayed in p0252.
The maximum operating time of the internal device fan in the power unit is internally specified and is fixed.

- Remedy:** For the fan involved, carry out the following:
- replace the fan.
 - reset the operating hours counter (p0251, p0254).

F30052 EEPROM data error

Reaction: OFF2

Acknowledge: POWER ON

Cause: EEPROM data error of the power unit module.
Fault value (r0949, interpret decimal):
0, 2, 3, 4:
The EEPROM data read in from the power unit module is inconsistent.
1:
EEPROM data is not compatible to the firmware of the Control Unit.

- Remedy:** Replace power unit module.

A30054 (F) Power unit: Undervoltage when opening the brake

Reaction: NONE

Acknowledge: NONE

Cause: When the brake is being opened, it is detected that the power supply voltage is less than $24\text{ V} - 10\% = 21.6\text{ V}$.
Alarm value (r2124, interpret decimal):
Supply voltage fault [0.1 V].
Example:
Alarm value = 195 --> voltage = 19.5 V

- Remedy:** Check the 24 V voltage for stability and value.

A30057	Power unit: Line asymmetry
Reaction:	NONE
Acknowledge:	NONE
Cause:	Frequencies have been detected on the DC link voltage that would suggest line asymmetry or failure of a line phase. It is also possible that a motor phase has failed. Fault F30011 is output if the alarm is present and at the latest after 5 minutes. The precise duration depends on the power unit type and the particular frequencies. Alarm value (r2124, interpret decimal): Only for internal Siemens troubleshooting.
Remedy:	- check the line phase connection. - check the motor feeder cable connections. If there is no phase failure of the line or motor, then line asymmetry is involved. - reduce the power in order to avoid fault F30011.
F30071	No new actual values received from the Power Module
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	More than one actual value telegram from the power unit module has failed.
Remedy:	Check the interface (adjustment and locking) to the power unit module.
F30072	Setpoints can no longer be transferred to the Power Module
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	More than one setpoint telegram was not able to be transferred to the power unit module.
Remedy:	Check the interface (adjustment and locking) to the power unit module.
F30074 (A)	Communication error between the Control Unit and Power Module
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	Communications between the Control Unit (CU) and Power Module (PM) via the interface no longer possible. The CU may have been withdrawn or is incorrectly inserted. Fault value (r0949, interpret hexadecimal): 0 hex: - a Control Unit with external 24 V supply was withdrawn from the Power Module during operation. - with the Power Module switched off, the external 24 V supply for the Control unit was interrupted for some time. 1 hex: The Control Unit was withdrawn from the Power Module during operation, although the encoderless safe motion monitoring functions are enabled. This is not supported. After re-inserting the Control Unit in operation, communications to the Power Module no longer possible. 20A hex: The Control Unit was inserted on a Power Module, which has another code number. 20B hex: The Control Unit was inserted on a Power Module, which although it has the same code number, has a different serial number. The Control Unit executes an automatic warm restart to accept the new calibration data.
Remedy:	For fault value = 0 and 20A hex: Insert the Control Unit on an appropriate Power Module and continue operation. If required, carry out a POWER ON of the Control Unit. For fault value = 1 hex: Carry out a POWER ON of the Control Unit.
F30080	Power unit: Current increasing too quickly
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	The power unit has detected an excessive rate of rise in the overvoltage range. - closed-loop control is incorrectly parameterized. - motor has a short-circuit or fault to ground (frame). - U/f operation: Up ramp set too low. - U/f operation: rated current of motor much greater than that of power unit.

- power cables are not correctly connected.
 - power cables exceed the maximum permissible length.
 - power unit defective.
- Fault value (r0949, interpret bitwise binary):
 Bit 0: Phase U.
 Bit 1: Phase V.
 Bit 2: Phase W.

- Remedy:**
- check the motor data - if required, carry out commissioning.
 - check the motor circuit configuration (star-delta)
 - U/f operation: Increase up ramp.
 - U/f operation: Check assignment of rated currents of motor and power unit.
 - check the power cable connections.
 - check the power cables for short-circuit or ground fault.
 - check the length of the power cables.
 - replace power unit.

F30081 Power unit: Switching operations too frequent

Reaction: OFF2

Acknowledge: IMMEDIATELY

Cause: The power unit has executed too many switching operations for current limitation.

- closed-loop control is incorrectly parameterized.
- motor has a short-circuit or fault to ground (frame).
- U/f operation: Up ramp set too low.
- U/f operation: rated current of motor much greater than that of power unit.
- power cables are not correctly connected.
- power cables exceed the maximum permissible length.
- power unit defective.

Fault value (r0949, interpret bitwise binary):
 Bit 0: Phase U.
 Bit 1: Phase V.
 Bit 2: Phase W.

- Remedy:**
- check the motor data - if required, carry out commissioning.
 - check the motor circuit configuration (star-delta)
 - U/f operation: Increase up ramp.
 - U/f operation: Check assignment of rated currents of motor and power unit.
 - check the power cable connections.
 - check the power cables for short-circuit or ground fault.
 - check the length of the power cables.
 - replace power unit.

F30105 PU: Actual value sensing fault

Reaction: OFF2

Acknowledge: IMMEDIATELY

Cause: At least one incorrect actual value channel was detected on the Power Stack Adapter (PSA). The incorrect actual value channels are displayed in the following diagnostic parameters.

Remedy: Evaluate the diagnostic parameters.
 If the actual value channel is incorrect, check the components and if required, replace.

A30502 Power unit: DC link overvoltage

Reaction: NONE

Acknowledge: NONE

Cause: The power unit has detected overvoltage in the DC link on a pulse inhibit.

- device connection voltage too high.
- line reactor incorrectly dimensioned.

Alarm value (r0949, interpret decimal):
 DC link voltage [1 bit = 100 mV].
 See also: r0070 (Actual DC link voltage)

- Remedy:**
- check the device supply voltage (p0210).
 - check the dimensioning of the line reactor.
- See also: p0210 (Drive unit line supply voltage)

F30600	SI P2: STOP A initiated
Reaction:	OFF2
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	<p>The drive-integrated "Safety Integrated" function on processor 2 has detected an error and initiated a STOP A.</p> <ul style="list-style-type: none"> - forced checking procedure of the safety shutdown path via processor 2 unsuccessful. - subsequent response to fault F30611 (defect in a monitoring channel). <p>Fault value (r0949, interpret decimal):</p> <ul style="list-style-type: none"> 0: Stop request from processor 1. 1005: Pulses suppressed although STO not selected and there is no internal STOP A present. 1010: Pulses enabled although STO is selected or an internal STOP A is present. 9999: Subsequent response to fault F30611.
Remedy:	<p>Select Safe Torque Off and de-select again.</p> <p>For fault value = 9999:</p> <ul style="list-style-type: none"> - carry out diagnostics for fault F30611. <p>Note:</p> <p>STO: Safe Torque Off</p>
F30611 (A)	SI P2: Defect in a monitoring channel
Reaction:	NONE (OFF1, OFF2, OFF3)
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	<p>The drive-integrated "Safety Integrated" function on processor 2 has detected a fault in the crosswise data comparison between the two monitoring channels and has initiated a STOP F.</p> <p>As a consequence of this fault, fault F30600 (SI P2: STOP A initiated) is output.</p> <p>Fault value (r0949, interpret decimal):</p> <ul style="list-style-type: none"> 0: Stop request from processor 1. 1 ... 999: <p>Number of the cross-compared data that resulted in this fault. This number is also displayed in r9795.</p> <ul style="list-style-type: none"> 2: SI enable safety functions (p9601, p9801). Crosswise data comparison is only carried out for the supported bits. 3: SI F-DI changeover tolerance time (p9650, p9850). 8: SI PROFIsafe address (p9610, p9810). 9: SI debounce time for STO (p9651, p9851). 1000: Watchdog timer has expired. <p>Within the time of approx. 5 x p9650, alternatively, the following was defined:</p> <ul style="list-style-type: none"> - Too many signal changes have occurred at the F-DI. - Via PROFIsafe, STO was too frequently initiated (also as subsequent response). <ul style="list-style-type: none"> 1001, 1002: Initialization error, change timer / check timer. 2000: Status of the STO selection for both monitoring channels are different. 2001: Feedback of the safe pulse suppression on the two monitoring channels are different. 2003: Status of the STO terminal on the processor 1 and processor 2 are different. 6000 ... 6999: <p>Error in the PROFIsafe control.</p> <p>For these fault values, the failsafe control signals (failsafe values) are transferred to the safety functions. The significance of the individual message values is described in safety fault F01611.</p>
Remedy:	<p>Re fault values 1 ... 999 described in "Cause":</p> <ul style="list-style-type: none"> - check the cross data comparison that resulted in a STOP F. - carry out a POWER ON (power off/on). <p>For fault value = 1000:</p> <ul style="list-style-type: none"> - check the wiring of the F-DI (contact problems). - PROFIsafe: Remove contact problems/faults at the PROFIBUS master/PROFINET controller. <p>Re fault value = 1001, 1002:</p> <ul style="list-style-type: none"> - carry out a POWER ON (power off/on). <p>Re fault value = 2000, 2001, 2003:</p> <ul style="list-style-type: none"> - check the tolerance time F-DI changeover and if required, increase the value (p9650/p9850). - check the wiring of the F-DI (contact problems). - check the causes of the STO selection in r9772. When the SI Motion functions are active (p9501 = 1), STO can also be selected using these functions. <p>Re fault value = 6000 ... 6999:</p> <p>Refer to the description of the message values in safety fault F01611.</p>

Re fault values that are described in "Cause":

- carry out a POWER ON (power off/on).
- contact the Hotline
- replace Control Unit.

Note:

F-DI: Failsafe Digital Input

STO: Safe Torque Off

N30620 (F, A) SI P2: Safe Torque Off active

Reaction: NONE

Acknowledge: NONE

Cause: The "Safe Torque Off" (STO) function has been selected on processor 2 using the input terminal and is active.

Note:

This message does not result in a safety stop response.

Remedy: Not necessary.

Note:

STO: Safe Torque Off

F30625 SI P2: Sign-of-life error in safety data

Reaction: OFF2

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The drive-integrated "Safety Integrated" function on processor 2 has detected an error in the sign-of-life of the safety data and initiated a STOP A.

- there is a communication error between processor 1 and processor 2 or communication has failed.
- a time slice overflow of the safety software has occurred.

Fault value (r0949, interpret decimal):

Only for internal Siemens troubleshooting.

Remedy:

- select Safe Torque Off and de-select again.
 - carry out a POWER ON (power off/on).
 - check whether additional faults are present and if required, perform diagnostics.
 - check the electrical cabinet design and cable routing for EMC compliance
-

F30649 SI P2: Internal software error

Reaction: OFF2

Acknowledge: IMMEDIATELY (POWER ON)

Cause: An internal error in the Safety Integrated software on processor 2 has occurred.

Note:

This fault results in a STOP A that cannot be acknowledged.

Fault value (r0949, interpret hexadecimal):

Only for internal Siemens troubleshooting.

Remedy:

- carry out a POWER ON (power off/on).
 - re-commission the "Safety Integrated" function and carry out a POWER ON.
 - contact the Hotline.
 - replace Control Unit.
-

F30650 SI P2: Acceptance test required

Reaction: OFF2

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The drive-integrated "Safety Integrated" function on processor 2 requires an acceptance test.

Note:

This fault results in a STOP A that can be acknowledged.

Fault value (r0949, interpret decimal):

130: Safety parameters for processor 2 not available.

Note:

This fault value is always output when Safety Integrated is commissioned for the first time.

1000: Reference and actual checksum on processor 2 are not identical (booting).

- at least one checksum-checked piece of data is defective.
- Safety parameters set offline and loaded into the Control Unit.

2000: Reference and actual checksum on processor 2 are not identical (commissioning mode).

- reference checksum incorrectly entered on processor 2 (p9899 not equal to r9898).

2003: Acceptance test is required as a safety parameter has been changed.
 9999: Subsequent response of another safety-related fault that occurred when booting that requires an acceptance test.

Remedy:

- For fault value = 130:
 - carry out safety commissioning routine.
- For fault value = 1000:
 - again carry out safety commissioning routine.
 - replace the memory card or Control Unit.
 - Using STARTER, activate the safety parameters for the drive involved (change settings, copy parameters, activate settings).
- For fault value = 2000:
 - check the safety parameters on processor 2 and adapt the reference checksum (p9899).
- For fault value = 2003:
 - Carry out an acceptance test and generate an acceptance report.
- For fault value = 9999:
 - carry out diagnostics for the other safety-related fault that is present.

See also: p9799 (SI setpoint checksum SI parameters (processor 1)), p9899 (SI setpoint checksum SI parameters (processor 2))

F30651 SI P2: Synchronization with Control Unit unsuccessful

Reaction: OFF2
Acknowledge: IMMEDIATELY (POWER ON)
Cause: The drive-integrated "Safety Integrated" function requires synchronization of the safety time slices on processor 1 and processor 2. This synchronization was unsuccessful.
Note:
 This fault results in a STOP A that cannot be acknowledged.
 Fault value (r0949, interpret decimal):
 Only for internal Siemens troubleshooting.
Remedy:

- carry out a POWER ON (power off/on).

F30655 SI P2: Align monitoring functions

Reaction: OFF2
Acknowledge: IMMEDIATELY (POWER ON)
Cause: An error has occurred when aligning the Safety Integrated monitoring functions on processor 1 and processor 2. No common set of supported SI monitoring functions was able to be determined.

- there is a communication error between processor 1 and processor 2 or communication has failed.

Note:
 This fault results in a STOP A that cannot be acknowledged.
 Fault value (r0949, interpret hexadecimal):
 Only for internal Siemens troubleshooting.
Remedy:

- carry out a POWER ON (power off/on).
- check the electrical cabinet design and cable routing for EMC compliance

F30656 SI P2: Parameter processor 2 parameter error

Reaction: OFF2
Acknowledge: IMMEDIATELY (POWER ON)
Cause: When accessing the Safety Integrated parameters for the processor 2 in the non-volatile memory, an error has occurred.
Note:
 This fault results in a STOP A that can be acknowledged.
 Fault value (r0949, interpret decimal):
 129: Safety parameters for processor 2 corrupted.
 131: Internal software error on processor 1.
 255: Internal software error on processor 2.
Remedy:

- re-commission the safety functions.
- replace the memory card or Control Unit.

F30659	SI P2: Write request for parameter rejected
Reaction:	OFF2
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The write request for one or several Safety Integrated parameters on processor 2 was rejected. Note: This fault does not result in a safety stop response. Fault value (r0949, interpret decimal): 10: An attempt was made to enable the STO function although this cannot be supported. 15: An attempt was made to enable the motion monitoring functions integrated in the drive although these cannot be supported. 16: An attempt was made to enable the PROFIsafe communications although this cannot be supported. 18: An attempt was made to enable the PROFIsafe function for Basic Functions although this cannot be supported. 20: An attempt was made to simultaneously enable both the drive-integrated motion monitoring functions via integrated F-DI and STO via terminals, even though these cannot be supported at the same time. See also: r9771 (SI common functions (processor 1)), r9871 (SI common functions (processor 2))
Remedy:	Re fault value = 10, 15, 16, 18: - check whether there are faults in the safety function alignment (F01655, F30655) and if required, carry out diagnostics for the faults involved. - use a Control Unit that supports the required function. Note: STO: Safe Torque Off
F30662	Error in internal communications
Reaction:	OFF2
Acknowledge:	POWER ON
Cause:	A module-internal communication error has occurred. Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.
Remedy:	- carry out a POWER ON (power off/on). - upgrade firmware to later version. - contact the Hotline.
F30664	Error while booting
Reaction:	OFF2
Acknowledge:	POWER ON
Cause:	An error has occurred during booting. Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.
Remedy:	- carry out a POWER ON (power off/on). - upgrade firmware to later version. - contact the Hotline.
F30665	SI P2: System is defective
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	A system defect was detected before the last boot or in the actual one. The system might have been rebooted (reset). Fault value (r0949, interpret hexadecimal): 200000 hex, 400000 hex: - Fault in the actual booting/operation. Additional values: - defect before the last time that the system booted.
Remedy:	- carry out a POWER ON (power off/on). - upgrade firmware to later version. - contact the Hotline. Re fault value = 400000 hex: - ensure that the Control Unit is connected to the Power Module.

A30666 (F)	SI Motion P2: Steady-state (static) 1 signal at the F-DI for safety-relevant acknowledgement
Reaction:	NONE
Acknowledge:	NONE
Cause:	A logical 1 signal is present at the F-DI configured in p10106 for more than 10 seconds. If, at the F-DI no acknowledgment was performed for safe acknowledgment, then a steady-state logical and 0 signal must be present. This avoids unintentional safety-relevant acknowledgement (or the "Internal Event Acknowledge" signal) if a wire breaks or one of the two digital inputs bounces.
Remedy:	Set the fail-safe digital input (F-DI) to a logical 0 signal (p10106). Note: F-DI: Failsafe Digital Input
F30680	SI Motion P2: Checksum error safety monitoring functions
Reaction:	OFF2
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The actual checksum calculated by processor 2 and entered in r9398 over the safety-relevant parameters does not match the reference checksum saved in p9399 at the last machine acceptance. Safety-relevant parameters have been changed or a fault is present. Note: This fault results in a STOP A that can be acknowledged. Fault value (r0949, interpret decimal): 0: Checksum error for SI parameters for motion monitoring. 1: Checksum error for SI parameters for component assignment.
Remedy:	<ul style="list-style-type: none"> - check the safety-relevant parameters and if required, correct. - set the reference checksum to the actual checksum. - execute the function "Copy RAM to ROM". - perform a POWER ON if safety parameters requiring a POWER ON have been modified. - carry out an acceptance test.
F30681	SI Motion P2: Incorrect parameter value
Reaction:	OFF2
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The parameter cannot be parameterized with this value. Note: This message does not result in a safety stop response. Fault value (r0949, interpret decimal): yyyyxxxx dec: yyyy = supplementary information, xxxx = parameter yyyy = 0: No information available. xxxx = 9301: It is not permissible to enable the function "n < nx hysteresis and filtering" (p9301.16) in conjunction with the function "Extended functions without selection" (p9801.5). xxxx = 9385: For Safety without encoder and synchronous motor, p9385 must be set to 4.
Remedy:	Correct the parameter value. Note: For different values in the two monitoring channels, start the copy function for SI parameters on the drive (p9700 = 57 hex).
F30682	SI Motion P2: Monitoring function not supported
Reaction:	OFF2
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The monitoring function enabled in p9301, p9501, p9601 or p9801 is not supported in this firmware version. Note: This message does not result in a safety stop response. Fault value (r0949, interpret decimal): 1: Monitoring function SLP not supported (p9301.1). 2: Monitoring function SCA not supported (p9301.7 and p9301.8 ... 15). 3: Monitoring function SLS override not supported (p9301.5).

- 4: Monitoring function external ESR activation not supported (p9301.4).
- 5: Monitoring function F-DI in PROFIsafe not supported (p9301.30).
- 6: Enable actual value synchronization not supported (p9301.3).
- 9: Monitoring function not supported by the firmware or enable bit not used.
- 24: Monitoring function SDI not supported.

Remedy:

Deselect the monitoring function involved.
 Note:
 SCA: Safe Cam
 SLP: Safely-Limited Position
 SLS: Safely-Limited Speed
 SDI: Safe Direction
 See also: p9301, p9501, p9601, p9801, r9871

F30683 SI Motion P2: SLS enable missing

Reaction: OFF2

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The safety-relevant function "SLS" is not enabled in p9301 although other safety-relevant monitoring functions are enabled.

Note:
 This message does not result in a safety stop response.

Remedy: Enable the function "SLS" (p9301.0) and carry out a POWER ON.

Note:
 Save the changes before POWER ON (copy from RAM to ROM).
 SLS: Safely-Limited Speed
 See also: p9301 (SI Motion enable safety functions (processor 2))

F30692 SI Motion P2: Incorrect parameter value encoderless

Reaction: OFF2

Acknowledge: IMMEDIATELY (POWER ON)

Cause: For encoderless motion monitoring functions, the parameter cannot be parameterized with this value.

Note:
 This message does not result in a safety stop response.
 Fault value (r0949, interpret decimal):
 Parameter number with the incorrect value.
 See also: p9301 (SI Motion enable safety functions (processor 2))

Remedy: Correct the parameter specified in the fault value.
 See also: p9301 (SI Motion enable safety functions (processor 2)), p9501 (SI Motion enable safety functions (Control Unit))

A30693 (F) SI P2: Safety parameter settings changed, POWER ON required

Reaction: NONE

Acknowledge: NONE

Cause: Safety parameters have been changed; these will only take effect following a POWER ON.

Notice:
 All changed parameters of the safety motion monitoring functions will only take effect following a POWER ON.
 Alarm value (r2124, interpret decimal):
 Parameter number of the safety parameter which has changed, necessitating a POWER ON.

Remedy:

- execute the function "Copy RAM to ROM".
- carry out a POWER ON (power off/on).

C30700 SI Motion P2: STOP A initiated

Reaction: OFF2

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The drive is stopped via a STOP A (pulses are suppressed via the safety shutdown path of processor 1).

Possible causes:

- stop request from processor 1.
- Pulses not suppressed after test stop selection.
- subsequent response to the message C30706 "SI Motion P2: SAM/SBR limit exceeded".
- subsequent response to the message C30714 "SI Motion P2: Safely-Limited Speed exceeded".
- subsequent response to the message C30701 "SI Motion P2: STOP B initiated".

- Remedy:**
- remove the cause of the fault on the monitoring channel of processor 1.
 - check the shutdown path of processor 2.
 - carry out a diagnostics routine for message C30706.
 - carry out a diagnostics routine for message C30714.
 - carry out a diagnostics routine for message C30701.
 - replace Power Module.
 - replace Control Unit.

This message can be acknowledged via F-DI or PROFIsafe.

F-DI: Failsafe Digital Input

SAM: Safe Acceleration Monitor (safe acceleration monitoring)

SBR: Safe Brake Ramp (safe brake ramp monitoring)

C30701 SI Motion P2: STOP B initiated

Reaction: NONE (OFF3)

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The drive is stopped via a STOP B (braking along the OFF3 deceleration ramp). As a result of this fault, after the speed threshold parameterized in p9360 is fallen below, message C30700 "STOP A initiated" is output.

Possible causes:

- stop request from processor 1.
- subsequent response to the message C30714 "SI Motion P2: Safely-Limited Speed exceeded".
- subsequent response to the message C30711 "SI Motion P2: Defect in a monitoring channel".
- subsequent response to the message C30707 "SI Motion P2: tolerance for safe operating stop exceeded".

- Remedy:**
- remove the cause of the fault on the monitoring channel of processor 1.
 - carry out a diagnostics routine for message C30714.
 - carry out a diagnostics routine for message C30711.
 - carry out a diagnostics routine for message C30707.

This message can be acknowledged via F-DI or PROFIsafe.

Note:

F-DI: Failsafe Digital Input

C30706 SI Motion P2: SAM/SBR limit exceeded

Reaction: NONE

Acknowledge: IMMEDIATELY (POWER ON)

Cause: Motion monitoring functions with set acceleration monitoring (SAM, p9306 = 3):
 - after initiating STOP B (SS1) the velocity has exceeded the selected tolerance.
 Motion monitoring functions with set brake ramp monitoring (SBR, p9306 = 1):
 - after initiating STOP B (SS1) or SLS changeover to the lower speed stage, the speed has exceeded the selected tolerance.

The drive is shut down by the message C30700 "SI Motion P2: STOP A initiated".

Remedy: Check the braking behavior and, if necessary, adapt the parameterization of the parameter settings of the "SAM" or the "SBR" function.

This message can be acknowledged without a POWER ON as follows:

- motion monitoring functions integrated in the drive: via F-DI or PROFIsafe.

Note:

F-DI: Failsafe Digital Input

SAM: Safe Acceleration Monitor (safe acceleration monitoring)

SBR: Safe Brake Ramp (safe brake ramp monitoring)

SI: Safety Integrated

See also: p9348 (SI Motion SAM actual velocity tolerance (processor 2)), p9381 (SI Motion brake ramp reference value (processor 2)), p9382 (SI Motion brake ramp delay time (processor 2)), p9383 (SI Motion brake ramp monitoring time (processor 2)), p9548 (SI Motion SAM actual velocity tolerance (processor 1))

C30711 SI Motion P2: Defect in a monitoring channel

Reaction: NONE

Acknowledge: IMMEDIATELY (POWER ON)

Cause: When cross-comparing the two monitoring channels, the drive detected a difference between the input data or results of the monitoring functions and initiated a STOP F. One of the monitoring functions no longer reliably functions - i.e. safe operation is no longer possible.

If at least one monitoring function is active, then message C30701 "SI Motion: STOP B initiated" is output.

The following message values may also occur in the following cases if the cause that is explicitly mentioned does not apply:

- synchronization error between processor 1 and processor 2.

Message value (r2124, interpret decimal):

0 ... 999:

Number of the cross-compared data that resulted in this message.

The significance of the individual message values is described in safety message C01711.

1000: Watchdog timer has expired. Too many signal changes have occurred at the F-DI.

1001: Initialization error of watchdog timer.

1011: Acceptance test status between the monitoring channels differ.

1020: Cyc. communication failure between the monit. cycles.

1040: Pulses suppressed with active encoderless monitoring functions.

1041: Current absolute value too low (encoderless)

1042: Current/voltage plausibility error

1043: Too many acceleration phases

1044: Actual current values plausibility error.

6000 ... 6166:

PROFIsafe message values (PROFIsafe driver for PROFIBUS DP V1/V2 and PROFINet).

For these fault values, the failsafe control signals (failsafe values) are transferred to the safety functions.

The significance of the individual message values is described in safety fault F01611.

See also: r9725 (SI Motion diagnostics STOP F)

Remedy:

Re message value = 1040:

- de-select encoderless monitoring functions, select and de-select STO.

- if monitoring function is active, issue "SLS" pulse enable within 5 s of de-selecting STO.

Re message value = 6000 ... 6999:

- The significance of the individual message values is described in safety fault F01611.

Re other message values:

- the significance of the individual message values is described in safety message C01711.

Note:

This message can be acknowledged via F-DI or PROFIsafe.

C30712 SI Motion P2: Defect in F-IO processing

Reaction: NONE

Acknowledge: IMMEDIATELY (POWER ON)

Cause: When cross checking and comparing the two monitoring channels, the drive detected a difference between parameters or results of the F-IO processing and initiated a STOP F. One of the monitoring functions no longer reliably functions - i.e. safe operation is no longer possible.

The safety message C30711 with message value 0 is also displayed due to initiation of STOP F.

If at least one monitoring function is active, then safety message C30701 "SI Motion: STOP B initiated" is output.

Message value (r2124, interpret decimal):

Number of the cross-compared data that resulted in this message.

See safety message C01712 for a description of the message values.

Remedy:

- check parameterization in the parameters involved and correct if required.

- ensure equality by copying the SI data to processor 2 and then carry out an acceptance test.

Note:

This message can be acknowledged via F-DI or PROFIsafe.

C30714 SI Motion P2: Safely-Limited Speed exceeded

Reaction: NONE

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The drive had moved faster than that specified by the velocity limit value (p9331). The drive is stopped as a result of the configured stop response (p9363).

Message value (r2124, interpret decimal):

100: SLS1 exceeded.

200: SLS2 exceeded.

300: SLS3 exceeded.

400: SLS4 exceeded.

Remedy:

- check the traversing/motion program in the control.

- check the limits for "SLS" function and if required, adapt (p9331).

Note:

This message can be acknowledged via F-DI or PROFIsafe.

SLS: Safely-Limited Speed

See also: p9331 (SI Motion SLS limit values (processor 2)), p9363 (SI Motion SLS stop response (processor 2))

C30716	SI Motion P2: Tolerance for safe motion direction exceeded
Reaction:	NONE
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The tolerance for the "safe motion direction" function was exceeded. The drive is stopped as a result of the configured stop response (p9366). Message value (r9749, interpret decimal): 0: Tolerance for the "safe motion direction positive" function exceeded. 1: Tolerance for the "safe motion direction negative" function exceeded.
Remedy:	- check the traversing/motion program in the control. - check the tolerance for "SDI" function and if required, adapt (p9364). This message can be acknowledged as follows: - Deselect the "SDI" function and select again. - Perform a safe acknowledgment via F-DI or PROFIsafe.
	Note: SDI: Safe Direction SI: Safety Integrated See also: p9364 (SI Motion SDI tolerance (processor 2)), p9365 (SI Motion SDI delay time (processor 2)), p9366 (SI Motion SDI stop response (processor 2))

C30770	SI Motion P2: Discrepancy error affecting the failsafe inputs
Reaction:	NONE
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	The fail-safe digital inputs (F-DI) show a different state longer than that parameterized in p10002 / p10102. Fault value (r0949, interpret binary): Bit 0: Discrepancy error for F-DI 0 Bit 1: Discrepancy error for F-DI 1 ...
Remedy:	Note: If several discrepancy errors occur consecutively, then this fault is only signaled for the first error that occurs. - check the wiring of the F-DI (contact problems). Note: This message can be acknowledged via F-DI or PROFIsafe. Discrepancy errors of an F-DI can only be completely acknowledged if safe acknowledgement was carried out once the cause of the error was resolved (p10006 or acknowledgment via PROFIsafe). As long as safety acknowledgement was not carried out, the corresponding F-DI stays in the safe state internally. For cyclic switching operations at the F-DI, it may be necessary to adapt the discrepancy time to the switching frequency. If the period of a cyclic switching pulse corresponds to twice the value of p10002, then the following formulas should be checked: - $p10002 < (tp / 2) - td$ (discrepancy time must be less than half the period minus the actual discrepancy time) - $p10002 \geq p9500$ (discrepancy time must be no less than p9500) - $p10002 > td$ (discrepancy time must be greater than the switch discrepancy time which may actually apply) td = possible actual discrepancy time (in ms) that can occur with a switching operation. This must correspond to at least 1 SI monitoring cycle (see p9500). tp = period for a switching operation in ms. When debounce p10017 is active, the discrepancy time is directly specified by the debounce time. If the period of a cyclic switching pulse corresponds to twice the debounce time, then the following formulas should be checked. - $p10002 < p10017 + 1 \text{ ms} - td$ - $p10002 > td$ - $p10002 \geq p9500$

Example:

For a 12 ms SI monitoring cycle and a switching frequency of 110 ms ($p10017 = 0$), the maximum discrepancy time which can be set is as follows:

$p10002 \leq (110/2 \text{ ms}) - 12 \text{ ms} = 43 \text{ ms}$

Rounded-off, $p10002 \leq 36 \text{ ms}$ is obtained (since the discrepancy time can only be accepted as a whole SI monitoring cycle, the value will need to be rounded up or down to a whole SI monitoring cycle if the result is not an exact multiple of an SI monitoring cycle).

Note:

F-DI: Failsafe Digital Input

A30772	SI Motion P2: Test stop failsafe inputs/outputs active
Reaction:	NONE
Acknowledge:	NONE
Cause:	The test stop for the fail-safe digital inputs (F-DI) and/or fail-safe digital outputs (F-DO) is presently being performed. Note: F-DI: Failsafe Digital Input F-DO: Failsafe Digital Output
Remedy:	The alarm disappears automatically after successfully ending or canceling (when a fault condition occurs) the test stop.

F30773	SI Motion P2: Test stop error
Reaction:	NONE
Acknowledge:	IMMEDIATELY (POWER ON)
Cause:	A fault has occurred on the P2 side during the test stop for the fail-safe outputs. Fault value (r0949, interpret hexadecimal): RRRVWXYZ hex: R: Reserved. V: Actual state of the DO channel concerned (see X) on P1 (corresponds to the states read back from the hardware, bit 0 = DO 0, bit 1 = DO 1, etc.). W: Required state of the DO channel concerned (see X, bit 0 = DO 0, bit 1 = DO 1, etc.). X: DO channels involved, which indicate an error (bit 0 = DO 0, bit 1 = DO 1, etc.). Y: Reason for the test stop fault. Z: State of the test stop in which the fault has occurred. Y: Reason for the test stop fault Y = 1: P2 side in incorrect test stop state (internal fault). Y = 2: Expected states of the DOs were not fulfilled (CU240D-2: readback via DI 5 / CU250S-2 readback via DI 6). Y = 3: Incorrect timer state on P2 side (internal fault). Y = 4: Expected states of the diag DOs were not fulfilled (CU240D-2: internal readback on P1 channel / CU250S-2 readback via DI 6). Y = 5: Expected states of the second diag DOs were not fulfilled (CU240D-2: internal readback on P2 channel). X and V indicate the DI or Diag-DO state dependent upon the reason for the fault (2, 4 or 5). In the event of multiple test stop faults, the first one that occurred is shown. Z: Test stop state and associated test actions Z = 0 ... 3: Synchronization phase of test stop between P1 and P2 no switching operations Z = 4: DO + OFF and DO - OFF Z = 5: Check to see if states are as expected Z = 6: DO + ON and DO - ON Z = 7: Check to see if states are as expected Z = 8: DO + OFF and DO - ON Z = 9: Check to see if states are as expected Z = 10: DO + ON and DO - OFF Z = 11: Check to see if states are as expected Z = 12: DO + OFF and DO - OFF Z = 13: Check to see if states are as expected Z = 14: End of test stop Diag expected states in table format: Test stop state: Expectation Mode 1 / Mode 2 / Mode 3 / Mode 4 5: 0/-/-/1 7: 0/-/-/0 9: 0/-/-/0 11: 1/-/-/1 13: 0/-/-/1

Second diag expected states in table format:

Test stop state: Expectation Mode 1 / Mode 2 / Mode 3 / Mode 4

5: -/-/1

7: -/-/0

9: -/-/1

11: -/-/0

13: -/-/1

DI expected states in table format:

Test stop state: Expectation Mode 1 / Mode 2 / Mode 3 / Mode 4

5: -/1/1/-

7: -/0/0/-

9: -/0/1/-

11: -/0/1/-

13: -/1/1/-

Example:

Fault F01773 (P1) is signaled with fault value = 0001_0127 and fault F30773 (P2) is signaled with fault value 0000_0127.

This means that in state 7 (Z = 7) the state of the external readback signal was not set correctly (Y = 2) after DO-0 (X = 1) was switched to ON/ON.

Fault value 0001_0127 indicates that 0 was expected (W = 0) and 1 (V = 1) was read back from the hardware.

Fault value 0000_0127 on the P2 indicates that the states were as expected.

In the case of fault F30773, W and V are always identical; a value of 0 always means that 0 was expected at the readback input but was not present on the other channel (P2).

Remedy:

Check the wiring of the F-DOs and restart the test stop.

Note:

The fault is withdrawn if the test stop is successfully completed.

In the event of multiple test stop faults, the first one that occurred is shown.

Once the test stop has been restarted the next queued test stop fault will be signaled (if there is one).

C30798 SI Motion P2: Test stop running

Reaction: NONE

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The test stop is active.

Remedy: Not necessary.
The message is withdrawn when the test stop is finished.

C30799 SI Motion P2: Acceptance test mode active

Reaction: NONE

Acknowledge: IMMEDIATELY (POWER ON)

Cause: The acceptance test mode is active.

Remedy: Not necessary.
The message is withdrawn when exiting the acceptance test mode.

N30800 (F) Power unit: Group signal

Reaction: OFF2

Acknowledge: NONE

Cause: The power unit has detected at least one fault.

Remedy: Evaluate the other messages that are presently available.

F30802 Power unit: Time slice overflow

Reaction: OFF2

Acknowledge: IMMEDIATELY

Cause: A time slice overflow has occurred.

Remedy: - carry out a POWER ON (power off/on) for all components.
- upgrade firmware to later version.
- contact the Hotline.

F30804 (N, A)	Power unit: CRC
Reaction:	OFF2 (OFF1, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	A CRC error has occurred for the power unit.
Remedy:	<ul style="list-style-type: none"> - carry out a POWER ON (power off/on) for all components. - upgrade firmware to later version. - contact the Hotline.
F30805	Power unit: EPROM checksum error
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	<p>Internal parameter data is corrupted.</p> <p>Fault value (r0949, interpret hexadecimal):</p> <p>01: EEPROM access error.</p> <p>02: Too many blocks in the EEPROM.</p>
Remedy:	Replace the module.
F30809	Power unit: Switching information not valid
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	<p>For 3P gating unit, the following applies:</p> <p>The last switching status word in the setpoint telegram is identified by the end ID. Such an end ID was not found.</p>
Remedy:	<ul style="list-style-type: none"> - carry out a POWER ON (power off/on) for all components. - upgrade firmware to later version. - contact the Hotline.
A30810 (F)	Power unit: Watchdog timer
Reaction:	NONE
Acknowledge:	NONE
Cause:	When booting it was detected that the cause of the previous reset was an SAC watchdog timer overflow.
Remedy:	<ul style="list-style-type: none"> - carry out a POWER ON (power off/on) for all components. - upgrade firmware to later version. - contact the Hotline.
F30850	Power unit: Internal software error
Reaction:	OFF1 (NONE, OFF2, OFF3)
Acknowledge:	POWER ON
Cause:	<p>An internal software error has occurred in the power unit.</p> <p>Fault value (r0949, interpret decimal):</p> <p>Only for internal Siemens troubleshooting.</p>
Remedy:	<ul style="list-style-type: none"> - replace power unit. - if required, upgrade the firmware in the power unit. - contact the Hotline.
F30875	Power unit DRIVE-CLiQ (CU): Supply voltage failed
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	<p>The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed.</p> <p>Fault cause:</p> <p>9 (= 09 hex):</p> <p>The power supply voltage for the components has failed.</p> <p>Note regarding the message value:</p> <p>The individual information is coded as follows in the message value (r0949/r2124):</p> <p>0000yyxx hex: yy = component number, xx = error cause</p>

- Remedy:**
- carry out a POWER ON (power off/on).
 - check the power supply voltage wiring for the DRIVE-CLiQ component (interrupted cable, contacts, ...).
 - check the dimensioning of the power supply for the DRIVE-CLiQ component.

F30903 Power unit: I2C bus error occurred

Reaction: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)

Acknowledge: IMMEDIATELY

Cause: Communications error with an EEPROM or A/D converter.
 Fault value (r0949, interpret hexadecimal):
 80000000 hex:
 - internal software error.
 00000001 hex ... 0000FFFF hex:
 - module fault.

- Remedy:**
- Re fault value = 80000000 hex:
 - upgrade firmware to later version.
 - Re fault value = 00000001 hex ... 0000FFFF hex:
 - replace the module.

A30920 (F) Temperature sensor fault

Reaction: NONE

Acknowledge: NONE

Cause: When evaluating the temperature sensor, an error occurred.
 Alarm value (r2124, interpret decimal):
 1: Wire breakage or sensor not connected (KTY: R > 2120 Ohm).
 2: Measured resistance too low (PTC: R < 20 Ohm, KTY: R < 50 Ohm).

- Remedy:**
- make sure that the sensor is connected correctly.
 - replace the sensor.

F30950 Power unit: Internal software error

Reaction: OFF2

Acknowledge: POWER ON

Cause: An internal software error has occurred.
 Fault value (r0949, interpret decimal):
 Information about the fault source.
 Only for internal Siemens troubleshooting.

- Remedy:**
- If necessary, upgrade the firmware in the power unit to a later version.
 - contact the Hotline.

A30999 (F, N) Power unit: Unknown alarm

Reaction: NONE

Acknowledge: NONE

Cause: An alarm occurred on the power unit that cannot be interpreted by the Control Unit firmware.
 This can occur if the firmware on this component is more recent than the firmware on the Control Unit.
 Alarm value (r2124, interpret decimal):
 Alarm number.

Note:
 If required, the significance of this new alarm can be read about in a more recent description of the Control Unit.

- Remedy:**
- replace the firmware on the power unit by an older firmware version (r0128).
 - upgrade the firmware on the Control Unit (r0018).

F31100 (N, A) Encoder 1: Zero mark distance error

Reaction: ENCODER (IASC/DCBRK, OFF1, OFF2, OFF3, STOP1, STOP2)

Acknowledge: PULSE INHIBIT

Cause: The measured zero mark distance does not correspond to the parameterized zero mark distance.
 For distance-coded encoders, the zero mark distance is determined from zero marks detected pairs. This means that if a zero mark is missing, depending on the pair generation, this cannot result in a fault and also has no effect in the system.
 The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder).

Fault value (r0949, interpret decimal):
 Last measured zero mark distance in increments (4 increments = 1 encoder pulse).
 The sign designates the direction of motion when detecting the zero mark distance.
 See also: p0491 (Motor encoder fault response ENCODER)

- Remedy:**
- check that the encoder cables are routed in compliance with EMC.
 - check the plug connections
 - . check the encoder type (encoder with equidistant zero marks).
 - adapt the parameter for the distance between zero marks (p0424, p0425).
 - if message output above speed threshold, reduce filter time if necessary (p0438).
 - replace the encoder or encoder cable

F31101 (N, A) Encoder 1: Zero mark failed

Reaction: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP1, STOP2)

Acknowledge: PULSE INHIBIT

Cause: The 1.5 x parameterized zero mark distance was exceeded.
 The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder).
 Fault value (r0949, interpret decimal):
 Number of increments after POWER ON or since the last zero mark that was detected (4 increments = 1 encoder pulse).
 See also: p0491 (Motor encoder fault response ENCODER)

- Remedy:**
- check that the encoder cables are routed in compliance with EMC.
 - check the plug connections
 - . check the encoder type (encoder with equidistant zero marks).
 - adapt the parameter for the clearance between zero marks (p0425).
 - if message output above speed threshold, reduce filter time if necessary (p0438).
 - when p0437.1 is active, check p4686.
 - replace the encoder or encoder cable

F31103 (N, A) Encoder 1: Amplitude error track R

Reaction: ENCODER (IASC/DCBRK, NONE)

Acknowledge: PULSE INHIBIT

Cause: The amplitude of the reference track signal (track R) does not lie within the tolerance bandwidth for encoder 1.
 The fault can be initiated when the unipolar voltage level is exceeded (RP/RN) or if the differential amplitude is under-shot.
 Fault value (r0949, interpret hexadecimal):
 yyyxxxx hex: yyyy = 0, xxxx = Signal level, track R (16 bits with sign)
 The response thresholds of the unipolar signal levels of the encoder are between < 1400 mV and > 3500 mV.
 The response threshold for the differential signal level of the encoder is < -1600 mV.
 A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec.

Note:

The analog value of the amplitude error is not measured at the same time with the hardware fault output by the Sensor Module.

The fault value can only be represented between -32768 ... 32767 dec (-770 ... 770 mV).

The signal level is not evaluated unless the following conditions are satisfied:

- Sensor Module properties available (r0459.31 = 1).
- Monitoring active (p0437.31 = 1).

See also: p0491 (Motor encoder fault response ENCODER)

- Remedy:**
- check the speed range; frequency characteristic (amplitude characteristic) of the measuring equipment might not be sufficient for the speed range
 - check that the encoder cables and shielding are routed in compliance with EMC.
 - check the plug connections and contacts of the encoder cable.
 - . check the encoder type (encoder with zero marks).
 - check whether the zero mark is connected and the signal cables RP and RN have been connected correctly
 - replace the encoder cable.
 - if the coding disk is soiled or the lighting aged, replace the encoder.

F31118 (N, A) Encoder 1: Speed difference outside the tolerance range

Reaction: ENCODER (IASC/DCBRK, NONE)

Acknowledge: PULSE INHIBIT

Cause: For an HTL/TTL encoder, the speed difference has exceeded the value in p0492 over several sampling cycles. The change to the averaged speed actual value - if applicable - is monitored in the current controller sampling time. Encoder 1 is used as motor encoder and can be effective has fault response to change over to encoderless operation.
 Fault value (r0949, interpret decimal):
 Only for internal Siemens troubleshooting.
 See also: p0491 (Motor encoder fault response ENCODER), p0492 (Maximum speed difference per sampling cycle)

Remedy:

- check the tachometer feeder cable for interruptions.
- check the grounding of the tachometer shielding.
- if required, increase the maximum speed difference per sampling cycle (p0492).

F31131 (N, A) Encoder 1: Deviation position incremental/absolute too large

Reaction: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP1, STOP2)

Acknowledge: PULSE INHIBIT

Cause: Absolute encoder:
 When cyclically reading the absolute position, an excessively high difference to the incremental position was detected. The absolute position that was read is rejected.
 Limit value for the deviation:
 - EnDat encoder: Is supplied from the encoder and is a minimum of 2 quadrants (e.g. EQI 1325 > 2 quadrants, EQN 1325 > 50 quadrants).
 - other encoders: 15 pulses = 60 quadrants.
 Incremental encoder:
 When the zero pulse is passed, a deviation in the incremental position was detected.
 For equidistant zero marks, the following applies:
 - The first zero mark passed supplies the reference point for all subsequent checks. The other zero marks must have n times the distance referred to the first zero mark.
 For distance-coded zero marks, the following applies:
 - the first zero mark pair supplies the reference point for all subsequent checks. The other zero mark pairs must have the expected distance to the first zero mark pair.
 Fault value (r0949, interpret decimal):
 Deviation in quadrants (1 pulse = 4 quadrants).
 See also: p0491 (Motor encoder fault response ENCODER)

Remedy:

- check that the encoder cables are routed in compliance with EMC.
- check the plug connections
- replace the encoder or encoder cable
- check whether the coding disk is dirty or there are strong ambient magnetic fields.
- adapt the parameter for the clearance between zero marks (p0425).
- if message output above speed threshold, reduce filter time if necessary (p0438).

F31150 (N, A) Encoder 1: Initialization error

Reaction: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP1, STOP2)

Acknowledge: PULSE INHIBIT

Cause: Encoder functionality selected in p0404 is not operating correctly.
 Fault value (r0949, interpret hexadecimal):
 Encoder malfunction.
 The bit assignment corresponds to that of p0404 (e.g. bit 5 set: Error track C/D).
 See also: p0404 (Encoder configuration effective), p0491 (Motor encoder fault response ENCODER)

Remedy:

- Check that p0404 is correctly set.
- check the encoder type used (incremental/absolute) and for SMCxx, the encoder cable.
- if relevant, note additional fault messages that describe the fault in detail.

A31400 (F, N)	Encoder 1: Alarm threshold zero mark distance error
Reaction:	NONE
Acknowledge:	NONE
Cause:	<p>The measured zero mark distance does not correspond to the parameterized zero mark distance. For distance-coded encoders, the zero mark distance is determined from zero marks detected pairs. This means that if a zero mark is missing, depending on the pair generation, this cannot result in a fault and also has no effect in the system.</p> <p>The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder). Alarm value (r2124, interpret decimal): Last measured zero mark distance in increments (4 increments = 1 encoder pulse). The sign designates the direction of motion when detecting the zero mark distance.</p>
Remedy:	<ul style="list-style-type: none"> - check that the encoder cables are routed in compliance with EMC. - check the plug connections . check the encoder type (encoder with equidistant zero marks). - adapt the parameter for the distance between zero marks (p0424, p0425). - replace the encoder or encoder cable
A31401 (F, N)	Encoder 1: Alarm threshold zero mark failed
Reaction:	NONE
Acknowledge:	NONE
Cause:	<p>The 1.5 x parameterized zero mark distance was exceeded. The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder). Alarm value (r2124, interpret decimal): Number of increments after POWER ON or since the last zero mark that was detected (4 increments = 1 encoder pulse).</p>
Remedy:	<ul style="list-style-type: none"> - check that the encoder cables are routed in compliance with EMC. - check the plug connections . check the encoder type (encoder with equidistant zero marks). - adapt the parameter for the clearance between zero marks (p0425). - replace the encoder or encoder cable
A31418 (F, N)	Encoder 1: Speed difference per sampling rate exceeded
Reaction:	NONE
Acknowledge:	NONE
Cause:	<p>For an HTL/TTL encoder, the speed difference between two sampling cycles has exceeded the value in p0492. The change to the averaged speed actual value - if applicable - is monitored in the current controller sampling time. Alarm value (r2124, interpret decimal): Only for internal Siemens troubleshooting. See also: p0492 (Maximum speed difference per sampling cycle)</p>
Remedy:	<ul style="list-style-type: none"> - check the tachometer feeder cable for interruptions. - check the grounding of the tachometer shielding. - if required, increase the setting of p0492.
A31422 (F, N)	Encoder 1: Pulses per revolution square-wave encoder outside tolerance bandwidth
Reaction:	NONE
Acknowledge:	NONE
Cause:	<p>The measured zero mark distance does not correspond to the parameterized zero mark distance. This alarm is triggered with active square-wave encoder PPR correction and re-parameterized fault 31131 if the accumulator contains larger values than p4683 or p4684. The zero mark distance for zero mark monitoring is set in p0425 (rotary encoder). Alarm value (r2124, interpret decimal): accumulated differential pulses in encoder pulses. See also: p0491 (Motor encoder fault response ENCODER)</p>
Remedy:	<ul style="list-style-type: none"> - check that the encoder cables are routed in compliance with EMC. - check the plug connections . check the encoder type (encoder with equidistant zero marks). - adapt the parameter for the distance between zero marks (p0424, p0425). - replace the encoder or encoder cable

A31431 (F, N)	Encoder 1: Deviation position incremental/absolute too large
Reaction:	NONE
Acknowledge:	NONE
Cause:	When the zero pulse is passed, a deviation in the incremental position was detected. For equidistant zero marks, the following applies: - The first zero mark passed supplies the reference point for all subsequent checks. The other zero marks must have n times the distance referred to the first zero mark. For distance-coded zero marks, the following applies: - the first zero mark pair supplies the reference point for all subsequent checks. The other zero mark pairs must have the expected distance to the first zero mark pair. Alarm value (r2124, interpret decimal): Deviation in quadrants (1 pulse = 4 quadrants). See also: p0491 (Motor encoder fault response ENCODER)
Remedy:	- check that the encoder cables are routed in compliance with EMC. - check the plug connections - replace the encoder or encoder cable - Clean coding disk or remove strong magnetic fields.

F31802 (N, A)	Encoder 1: Time slice overflow
Reaction:	ENCODER (IASC/DCBRK, NONE)
Acknowledge:	IMMEDIATELY
Cause:	A time slice overflow has occurred in encoder 1. Fault value (r0949, interpret hexadecimal): yx hex: y = function involved (Siemens-internal fault diagnostics), x = time slice involved x = 9: Time slice overflow of the fast (current controller clock cycle) time slice. x = A: Time slice overflow of the average time slice. x = C: Time slice overflow of the slow time slice. yx = 3E7: Timeout when waiting for SYNO (e.g. unexpected return to non-cyclic operation). See also: p0491 (Motor encoder fault response ENCODER)
Remedy:	Increase the current controller sampling time Note: For a current controller sampling time = 31.25 µs, use an SMx20 with order number 6SL3055-0AA00-5xA3.

F31805 (N, A)	Encoder 1: EPROM checksum error
Reaction:	ENCODER (IASC/DCBRK, NONE)
Acknowledge:	IMMEDIATELY
Cause:	Internal parameter data is corrupted. Fault value (r0949, interpret hexadecimal): 01: EEPROM access error. 02: Too many blocks in the EEPROM. See also: p0491 (Motor encoder fault response ENCODER)
Remedy:	Replace the module.

F31850 (N, A)	Encoder 1: Encoder evaluation internal software error
Reaction:	ENCODER (IASC/DCBRK, NONE)
Acknowledge:	POWER ON
Cause:	An internal software error has occurred in the Sensor Module of encoder 1. Fault value (r0949, interpret decimal): 1: Background time slice is blocked. 2: Checksum over the code memory is not OK. 10000: OEM memory of the EnDat encoder contains data that cannot be interpreted. 11000 ... 11499: Descriptive data from EEPROM incorrect. 11500 ... 11899: Calibration data from EEPROM incorrect. 11900 ... 11999: Configuration data from EEPROM incorrect. 12000 ... 12008: Communication with AD converter faulted.

16000: DRIVE-CLiQ encoder initialization application error.
 16001: DRIVE-CLiQ encoder initialization ALU error.
 16002: DRIVE-CLiQ encoder HISI / SISI initialization error.
 16003: DRIVE-CLiQ encoder safety initialization error.
 16004: DRIVE-CLiQ encoder internal system error.
 See also: p0491 (Motor encoder fault response ENCODER)

Remedy:

- replace the Sensor Module.
- if required, upgrade the firmware in the Sensor Module.
- contact the Hotline.

F31899 (N, A) Encoder 1: Unknown fault

Reaction: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP1, STOP2)

Acknowledge: IMMEDIATELY (POWER ON)

Cause: A fault occurred on the Sensor Module for encoder 1 that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit.
 Fault value (r0949, interpret decimal):
 Fault number.

Note:
 If required, the significance of this new fault can be read about in a more recent description of the Control Unit.
 See also: p0491 (Motor encoder fault response ENCODER)

Remedy:

- replace the firmware on the Sensor Module by an older firmware version (r0148).
- upgrade the firmware on the Control Unit (r0018).

F31905 (N, A) Encoder 1: Parameterization error

Reaction: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP1, STOP2)

Acknowledge: IMMEDIATELY

Cause: A parameter of encoder 1 was detected as being incorrect.
 It is possible that the parameterized encoder type does not match the connected encoder.
 The parameter involved can be determined as follows:

- determine the parameter number using the fault value (r0949).
- determine the parameter index (p0187).

Fault value (r0949, interpret decimal):
 yyyyxxxx dec: yyyy = supplementary information, xxxx = parameter
 xxxx = 421:
 For an EnDat/SSI encoder, the absolute position in the protocol must be less than or equal to 30 bits.
 yyyy = 0:
 No information available.
 yyyy = 1:
 The component does not support HTL level (p0405.1 = 0) combined with track monitoring A/B <-> -A/B (p0405.2 = 1).
 yyyy = 2:
 A code number for an identified encoder has been entered into p0400, however, no identification was carried out. Please start a new encoder identification.
 yyyy = 3:
 A code number for an identified encoder has been entered into p0400, however, no identification was carried out. Please select a listed encoder in p0400 with a code number < 10000.
 yyyy = 4:
 This component does not support SSI encoders (p0404.9 = 1) without track A/B.
 yyyy = 5:
 For SQW encoder, value in p4686 greater than in p0425.
 yyyy = 6:
 DRIVE-CLiQ encoder cannot be used with this firmware version.
 yyyy = 7:
 For an SQW encoder, the Xact1 correction (p0437.2) is only permitted with equidistant zero marks.
 yyyy = 8:
 The motor pole pair width is not supported by the linear scale being used.
 yyyy = 9:
 The length of the position in the EnDat protocol may be a maximum of 32 bits.
 yyyy = 10:
 The connected encoder is not supported.
 yyyy = 11:
 The hardware does not support track monitoring.
 See also: p0491 (Motor encoder fault response ENCODER)

Remedy:

- check whether the connected encoder type matches the encoder that has been parameterized.
- correct the parameter specified by the fault value (r0949) and p0187.
- re parameter number = 314:
- check the pole pair number and measuring gear ratio. The quotient of the "pole pair number" divided by the "measuring gear ratio" must be less than or equal to 1000 ((r0313 * p0433) / p0432 <= 1000).

A31915 (F, N) Encoder 1: Configuration error

Reaction: NONE

Acknowledge: NONE

Cause: The configuration for encoder 1 is incorrect.
 Alarm value (r2124, interpret decimal):
 1:
 Re-parameterization between fault/alarm is not permissible.
 419:
 When the fine resolution Gx_XIST2 is configured, the encoder identifies a maximum possible absolute position actual value (r0483) that can no longer be represented within 32 bits.

Remedy: Re alarm value = 1:
 No re-parameterization between fault/alarm.
 Re alarm value = 419:
 Reduce the fine resolution (p0419) or deactivate the monitoring (p0437.25), if the complete multiturn range is not required.

A31930 (N) Encoder 1: Data logger has saved data

Reaction: NONE

Acknowledge: NONE

Cause: For the activated function "Data logger" (p0437.0 = 1) a fault has occurred with the Sensor Module. This alarm indicates that the diagnostics data corresponding to the fault was saved on the memory card.
 The diagnostics data is saved in the following folder:
 /USER/SINAMICS/DATA/SMTRC00.BIN
 ...
 /USER/SINAMICS/DATA/SMTRC07.BIN
 /USER/SINAMICS/DATA/SMTRCIDX.TXT
 The following information is contained in the TXT file:
 - Display of the last written BIN file.
 - Number of write operations that are still possible (from 10000 downwards).
Note:
 Only Siemens can evaluate the BIN files.

Remedy: Not necessary.
 The alarm disappears automatically.
 The data logger is ready to record the next fault case.

F31950 Encoder 1: Internal software error

Reaction: ENCODER (OFF2)

Acknowledge: POWER ON

Cause: An internal software error has occurred.
 Fault value (r0949, interpret decimal):
 The fault value contains information regarding the fault source.
 Only for internal Siemens troubleshooting.

Remedy: - If necessary, upgrade the firmware in the Sensor Module to a later version.
 - contact the Hotline.

A31999 (F, N) Encoder 1: Unknown alarm

Reaction: NONE

Acknowledge: NONE

Cause: A alarm has occurred on the Sensor Module for encoder 1 that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit.
 Alarm value (r2124, interpret decimal):
 Alarm number.

Note:

If required, the significance of this new alarm can be read about in a more recent description of the Control Unit.
See also: p0491 (Motor encoder fault response ENCODER)

- Remedy:**
- replace the firmware on the Sensor Module by an older firmware version (r0148).
 - upgrade the firmware on the Control Unit (r0018).

F32110 (N, A) Encoder 2: Serial communications error

Reaction: OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)

Acknowledge: PULSE INHIBIT

Cause: Serial communication protocol transfer error between the encoder and evaluation module.

Fault value (r0949, interpret binary):

Bit 0: Alarm bit in the position protocol.

Bit 1: Incorrect quiescent level on the data line.

Bit 2: Encoder does not respond (does not supply a start bit within 50 ms).

Bit 3: CRC error: The checksum in the protocol from the encoder does not match the data.

Bit 4: Encoder acknowledgement error: The encoder incorrectly understood the task (request) or cannot execute it.

Bit 5: Internal error in the serial driver: An illegal mode command was requested.

Bit 6: Timeout when cyclically reading.

Bit 7: Timeout for the register communication.

Bit 8: Protocol is too long (e.g. > 64 bits).

Bit 9: Receive buffer overflow.

Bit 10: Frame error when reading twice.

Bit 11: Parity error.

Bit 12: Data line signal level error during the monoflop time.

Bit 13: Data line incorrect.

Bit 14: Fault for the register communication.

Note:

For an EnDat 2.2 encoder, the significance of the fault value for F3x135 (x = 1, 2, 3) is described.

Remedy:

Re fault value, bit 0 = 1:

- Enc defect F31111 may provide additional details.

Re fault value, bit 1 = 1:

- Incorrect encoder type / replace the encoder or encoder cable.

Re fault value, bit 2 = 1:

- Incorrect encoder type / replace the encoder or encoder cable.

Re fault value, bit 3 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable.

Re fault value, bit 4 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable, replace the Sensor Module.

Re fault value, bit 5 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable, replace the Sensor Module.

Re fault value, bit 6 = 1:

- Update Sensor Module firmware.

Re fault value, bit 7 = 1:

- Incorrect encoder type / replace the encoder or encoder cable.

Re fault value, bit 8 = 1:

- Check parameterization (p0429.2).

Re fault value, bit 9 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable, replace the Sensor Module.

Re fault value, bit 10 = 1:

- Check parameterization (p0429.2, p0449).

Re fault value, bit 11 = 1:

- Check parameterization (p0436).

Re fault value, bit 12 = 1:

- Check parameterization (p0429.6).

Re fault value, bit 13 = 1:

- Check data line.

Re fault value, bit 14 = 1:

- Incorrect encoder type / replace the encoder or encoder cable.

F32111 (N, A)	Encoder 2: Absolute encoder internal fault
Reaction:	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
Acknowledge:	PULSE INHIBIT
Cause:	<p>The absolute encoder fault word supplies fault bits that have been set. Fault value (r0949, interpret binary): yyyxxxx hex: yyyy = supplementary information, xxxx = fault cause yyyy = 0: Bit 0: Lighting system failed. Bit 1: Signal amplitude too low. Bit 2: Position value incorrect. Bit 3: Encoder power supply overvoltage condition. Bit 4: Encoder power supply undervoltage condition. Bit 5: Encoder power supply overcurrent condition. Bit 6: The battery must be changed. yyyy = 1: Bit 0: Signal amplitude outside the control range. Bit 1: Error multiturn interface Bit 2: Internal data error (singleturn/multiturn not with single steps). Bit 3: Error EEPROM interface. Bit 4: SAR converter error. Bit 5: Fault for the register data transfer. Bit 6: Internal error identified at the error pin (nErr). Bit 7: Temperature threshold exceeded or fallen below.</p>
Remedy:	<p>For yyyy = 0: Re fault value, bit 0 = 1: Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor. Re fault value, bit 1 = 1: Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor. Re fault value, bit 2 = 1: Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor. Re fault value, bit 3 = 1: 5 V power supply voltage fault. When using an SMC: Check the plug-in cable between the encoder and SMC or replace the SMC. When a motor encoder with a direct DRIVE-CLiQ connection is used: Replace the motor. Re fault value, bit 4 = 1: 5 V power supply voltage fault. When using an SMC: Check the plug-in cable between the encoder and SMC or replace the SMC. When using a motor with DRIVE-CLiQ: Replace the motor. Re fault value, bit 5 = 1: Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor. Re fault value, bit 6 = 1: The battery must be changed (only for encoders with battery back-up). For yyyy = 1: Encoder is defective. Replace encoder.</p>

F32112 (N, A)	Encoder 2: Error bit set in the serial protocol
Reaction:	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
Acknowledge:	PULSE INHIBIT
Cause:	<p>The encoder sends a set error bit via the serial protocol. Fault value (r0949, interpret binary): Bit 0: Fault bit in the position protocol.</p>
Remedy:	<p>For fault value, bit 0 = 1: In the case of an EnDat encoder, F31111 may provide further details.</p>

F32150 (N, A)	Encoder 2: Initialization error
Reaction:	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP1, STOP2)
Acknowledge:	PULSE INHIBIT
Cause:	Encoder functionality selected in p0404 is not operating correctly. Fault value (r0949, interpret hexadecimal): Encoder malfunction. The bit assignment corresponds to that of p0404 (e.g. bit 5 set: Error track C/D).
Remedy:	- Check that p0404 is correctly set. - check the encoder type used (incremental/absolute) and for SMCxx, the encoder cable. - if relevant, note additional fault messages that describe the fault in detail.
A32410 (F, N)	Encoder 2: Serial communications
Reaction:	NONE
Acknowledge:	NONE
Cause:	Serial communication protocol transfer error between the encoder and evaluation module. Alarm value (r2124, interpret binary): Bit 0: Alarm bit in the position protocol. Bit 1: Incorrect quiescent level on the data line. Bit 2: Encoder does not respond (does not supply a start bit within 50 ms). Bit 3: CRC error: The checksum in the protocol from the encoder does not match the data. Bit 4: Encoder acknowledgement error: The encoder incorrectly understood the task (request) or cannot execute it. Bit 5: Internal error in the serial driver: An illegal mode command was requested. Bit 6: Timeout when cyclically reading. Bit 8: Protocol is too long (e.g. > 64 bits). Bit 9: Receive buffer overflow. Bit 10: Frame error when reading twice. Bit 11: Parity error. Bit 12: Data line signal level error during the monoflop time.
Remedy:	- check that the encoder cables are routed in compliance with EMC. - check the plug connections - replace encoder.
A32411 (F, N)	Encoder 2: Absolute encoder signals internal alarms
Reaction:	NONE
Acknowledge:	NONE
Cause:	The absolute encoder fault word includes alarm bits that have been set. Alarm value (r2124, interpret binary): yyyyxxxx hex: yyyy = supplementary information, xxxx = fault cause yyyy = 0: Bit 0: Frequency exceeded (speed too high). Bit 1: Temperature exceeded. Bit 2: Control reserve, lighting system exceeded. Bit 3: Battery discharged. Bit 4: Reference point passed. yyyy = 1: Bit 0: Signal amplitude outside the control range. Bit 1: Error multiturn interface Bit 2: Internal data error (singleturn/multiturn not with single steps). Bit 3: Error EEPROM interface. Bit 4: SAR converter error. Bit 5: Fault for the register data transfer. Bit 6: Internal error identified at the error pin (nErr). Bit 7: Temperature threshold exceeded or fallen below.
Remedy:	Replace encoder.

A32412 (F, N)	Encoder 2: Error bit set in the serial protocol
Reaction:	NONE
Acknowledge:	NONE
Cause:	The encoder sends a set error bit via the serial protocol. Alarm value (r2124, interpret binary): Bit 0: Fault bit in the position protocol. Bit 1: Alarm bit in the position protocol.
Remedy:	- carry out a POWER ON (power off/on) for all components. - check that the encoder cables are routed in compliance with EMC. - check the plug connections - replace encoder.

A32442 (F, N)	Encoder 2: Battery voltage pre-alarm
Reaction:	NONE
Acknowledge:	NONE
Cause:	When switched-off, the encoder uses a battery to back up the multiturn information. The battery voltage is no longer sufficient to check the multiturn information.
Remedy:	Replace battery.

F32802 (N, A)	Encoder 2: Time slice overflow
Reaction:	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	A time slice overflow has occurred in encoder 2. Fault value (r0949, interpret hexadecimal): yx hex: y = function involved (Siemens-internal fault diagnostics), x = time slice involved x = 9: Time slice overflow of the fast (current controller clock cycle) time slice. x = A: Time slice overflow of the average time slice. x = C: Time slice overflow of the slow time slice. yx = 3E7: Timeout when waiting for SYNO (e.g. unexpected return to non-cyclic operation).
Remedy:	Increase the current controller sampling time Note: For a current controller sampling time = 31.25 µs, use an SMx20 with order number 6SL3055-0AA00-5xA3.

F32805 (N, A)	Encoder 2: EPROM checksum error
Reaction:	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
Acknowledge:	IMMEDIATELY
Cause:	Internal parameter data is corrupted. Fault value (r0949, interpret hexadecimal): 01: EEPROM access error. 02: Too many blocks in the EEPROM.
Remedy:	Replace the module.

F32850 (N, A)	Encoder 2: Encoder evaluation internal software error
Reaction:	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
Acknowledge:	POWER ON
Cause:	An internal software error has occurred in the Sensor Module of encoder 2. Fault value (r0949, interpret decimal): 1: Background time slice is blocked. 2: Checksum over the code memory is not OK. 10000: OEM memory of the EnDat encoder contains data that cannot be interpreted. 11000 ... 11499: Descriptive data from EEPROM incorrect. 11500 ... 11899: Calibration data from EEPROM incorrect. 11900 ... 11999: Configuration data from EEPROM incorrect. 12000 ... 12008: Communication with AD converter faulted.

16000: DRIVE-CLiQ encoder initialization application error.
 16001: DRIVE-CLiQ encoder initialization ALU error.
 16002: DRIVE-CLiQ encoder HISI / SISI initialization error.
 16003: DRIVE-CLiQ encoder safety initialization error.
 16004: DRIVE-CLiQ encoder internal system error.

Remedy:

- replace the Sensor Module.
- if required, upgrade the firmware in the Sensor Module.
- contact the Hotline.

F32899 (N, A) Encoder 2: Unknown fault

Reaction: OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP1, STOP2)

Acknowledge: IMMEDIATELY (POWER ON)

Cause: A fault occurred on the Sensor Module for encoder 2 that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit.
 Fault value (r0949, interpret decimal):
 Fault number.

Note:
 If required, the significance of this new fault can be read about in a more recent description of the Control Unit.

Remedy:

- replace the firmware on the Sensor Module by an older firmware version (r0148).
- upgrade the firmware on the Control Unit (r0018).

F32905 (N, A) Encoder 2: Parameterization error

Reaction: OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP1, STOP2)

Acknowledge: IMMEDIATELY

Cause: A parameter of encoder 2 was detected as being incorrect. It is possible that the parameterized encoder type does not match the connected encoder. The parameter involved can be determined as follows:

- determine the parameter number using the fault value (r0949).
- determine the parameter index (p0187).

Fault value (r0949, interpret decimal):
 yyyyxxxx dec: yyyy = supplementary information, xxxx = parameter
 xxxx = 421:
 For an EnDat/SSI encoder, the absolute position in the protocol must be less than or equal to 30 bits.
 yyyy = 0:
 No information available.
 yyyy = 1:
 The component does not support HTL level (p0405.1 = 0) combined with track monitoring A/B <-> -A/B (p0405.2 = 1).
 yyyy = 2:
 A code number for an identified encoder has been entered into p0400, however, no identification was carried out. Please start a new encoder identification.
 yyyy = 3:
 A code number for an identified encoder has been entered into p0400, however, no identification was carried out. Please select a listed encoder in p0400 with a code number < 10000.
 yyyy = 4:
 This component does not support SSI encoders (p0404.9 = 1) without track A/B.
 yyyy = 5:
 For SQW encoder, value in p4686 greater than in p0425.
 yyyy = 6:
 DRIVE-CLiQ encoder cannot be used with this firmware version.
 yyyy = 7:
 For an SQW encoder, the Xact1 correction (p0437.2) is only permitted with equidistant zero marks.
 yyyy = 8:
 The motor pole pair width is not supported by the linear scale being used.
 yyyy = 9:
 The length of the position in the EnDat protocol may be a maximum of 32 bits.
 yyyy = 10:
 The connected encoder is not supported.
 yyyy = 11:
 The hardware does not support track monitoring.

Remedy:

- check whether the connected encoder type matches the encoder that has been parameterized.
- correct the parameter specified by the fault value (r0949) and p0187.
- re parameter number = 314:
- check the pole pair number and measuring gear ratio. The quotient of the "pole pair number" divided by the "measuring gear ratio" must be less than or equal to 1000 ((r0313 * p0433) / p0432 <= 1000).

A32915 (F, N) Encoder 2: Configuration error

Reaction: NONE

Acknowledge: NONE

Cause: The configuration for encoder 2 is incorrect.
 Alarm value (r2124, interpret decimal):
 1:
 Re-parameterization between fault/alarm is not permissible.
 419:
 When the fine resolution Gx_XIST2 is configured, the encoder identifies a maximum possible absolute position actual value (r0483) that can no longer be represented within 32 bits.

Remedy: Re alarm value = 1:
 No re-parameterization between fault/alarm.
 Re alarm value = 419:
 Reduce the fine resolution (p0419) or deactivate the monitoring (p0437.25), if the complete multiturn range is not required.

A32930 (N) Encoder 2: Data logger has saved data

Reaction: NONE

Acknowledge: NONE

Cause: For the activated function "Data logger" (p0437.0 = 1) a fault has occurred with the Sensor Module. This alarm indicates that the diagnostics data corresponding to the fault was saved on the memory card.
 The diagnostics data is saved in the following folder:
 /USER/SINAMICS/DATA/SMTRC00.BIN
 ...
 /USER/SINAMICS/DATA/SMTRC07.BIN
 /USER/SINAMICS/DATA/SMTRCIDX.TXT
 The following information is contained in the TXT file:
 - Display of the last written BIN file.
 - Number of write operations that are still possible (from 10000 downwards).
Note:
 Only Siemens can evaluate the BIN files.

Remedy: Not necessary.
 The alarm disappears automatically.
 The data logger is ready to record the next fault case.

F32950 Encoder 2: Internal software error

Reaction: OFF1 (OFF2)

Acknowledge: POWER ON

Cause: An internal software error has occurred.
 Fault value (r0949, interpret decimal):
 Information about the fault source.
 Only for internal Siemens troubleshooting.

Remedy: - If necessary, upgrade the firmware in the Sensor Module to a later version.
 - contact the Hotline.

A32999 (F, N) Encoder 2: Unknown alarm

Reaction: NONE

Acknowledge: NONE

Cause: A alarm has occurred on the Sensor Module for encoder 2 that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit.
 Alarm value (r2124, interpret decimal):
 Alarm number.
Note:
 If required, the significance of this new alarm can be read about in a more recent description of the Control Unit.

Remedy:

- replace the firmware on the Sensor Module by an older firmware version (r0148).
- upgrade the firmware on the Control Unit (r0018).

A50001 (F)	PROFINET configuration error
Reaction:	NONE
Acknowledge:	NONE
Cause:	A PROFINET controller attempts to establish a connection using an incorrect configuring telegram. The "Shared Device" function has been activated (p8929 = 2). Alarm value (r2124, interpret decimal): 10: A/F-CPU configures mixed PZD/PROFIsafe telegram. 13: F-CPU and PROFIsafe is not activated (p9601.3). 15: PROFIsafe telegram of the F-CPU does not match the setting in p9501.30. See also: p9601 (SI enable functions integrated in the drive (processor 1))
Remedy:	Check the configuration of the PROFINET controllers as well as the p8929 setting.
A50010 (F)	PROFINET Name of Station invalid
Reaction:	NONE
Acknowledge:	NONE
Cause:	PROFINET Name of Station is invalid.
Remedy:	Correct the name of the station (p8920) and activate (p8925 = 2). See also: p8920 (PN Name of Station)
A50020 (F)	PROFINET: Second controller missing
Reaction:	NONE
Acknowledge:	NONE
Cause:	The PROFINET function "Shared Device" has been activated (p8929 = 2). However, only the connection to a PROFINET controller is present.
Remedy:	Check the configuration of the PROFINET controllers as well as the p8929 setting.
F50510	FBLOCKS: Logon of the run-time group rejected
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	When the run-time groups of the free function blocks attempted to log on with the sampling time management, the logon of at least one run-time group was rejected. Too many different hardware sampling times may have been assigned to the free function blocks.
Remedy:	- Check number of available hardware sampling times (T_sample < 8 ms) (r7903).
F50511	FBLOCKS: Memory no longer available for free function blocks
Reaction:	OFF2
Acknowledge:	IMMEDIATELY
Cause:	When the free function blocks were activated, more memory was requested than was available on the Control Unit.
Remedy:	Not necessary.
A50513 (F)	FBLOCKS: Run sequence value already assigned
Reaction:	NONE
Acknowledge:	NONE
Cause:	An attempt was made to assign a run sequence value already assigned to a function block on this drive object to another additional function block on the same drive object. A run sequence value can only be precisely assigned to one function block on one drive object.
Remedy:	Set another value that is still available on this drive object for the run sequence.
A50517	FBLOCKS: Int. meas. active
Reaction:	NONE
Acknowledge:	NONE
Cause:	A Siemens internal measurement has been activated.
Remedy:	Carry out a POWER ON (power off/on) for the Control Unit involved.

F50518	FBLOCKS: Sampling time of free run-time group differs at download
Reaction:	NONE
Acknowledge:	IMMEDIATELY
Cause:	<p>In the STARTER/SCOUT project that was downloaded, the hardware sampling time of a free run-time group ($1 \leq p20000[i] \leq 256$) was set to a value that was either too low or too high.</p> <p>The sampling time must be between 1 ms and the value r20003 - r20002.</p> <p>If the sampling time of the selected free run-time group is < 1 ms, the equivalent value of 1 ms is used.</p> <p>If the value $\geq r20003$, then the sampling time is set to the next higher or the same software sampling time $\geq r21003$.</p> <p>Fault value (r0949, decimal interpretation):</p> <p>Number of the p20000 index of the run-time group where the sampling time is incorrectly set.</p> <p>Number of the run-time group = fault value + 1</p>
Remedy:	<ul style="list-style-type: none">- correctly set the sampling time of the run-time group.- if required, take all of the blocks from the run-time group. <p>Note:</p> <p>Fault F50518 only detects an incorrectly parameterized run-time group. If, after correcting p20000[i] in the project, this error occurs again at download, then the run-time group involved should be identified using the fault value (r0949) and the sampling time correctly set.</p>

Appendix

A

Contents

A.1	ASCII table (excerpt)	A-892
A.2	Motor code list	A-892

A.1 ASCII table (excerpt)

The following table includes the decimal and hexadecimal notation of selected ASCII characters.

Table A-1 ASCII table (excerpt)

Character	Decimal	Hexadecimal	Character	Decimal	Hexadecimal
Space characters	32	20	H	72	48
-	45	2D	I	73	49
0	48	30	J	74	4A
1	49	31	K	75	4B
2	50	32	L	76	4C
3	51	33	M	77	4D
4	52	34	N	78	4E
5	53	35	O	79	4F
6	54	36	P	80	50
7	55	37	Q	81	51
8	56	38	R	82	52
9	57	39	S	83	53
A	65	41	T	84	54
B	66	42	U	85	55
C	67	43	V	86	56
D	68	44	W	87	57
E	69	45	X	88	58
F	70	46	Y	89	59
G	71	47	Z	90	5A

A.2 Motor code list

Table A-2 Motor code for synchronous motors

Order No.	Motor type (p0300)	Motor code (p0301)
1LE400x-1ABxx-xxxx	204	20401
1LE400x-1BBxx-xxxx	204	20402

B

List of abbreviations

Abbreviations used with the SINAMICS G120:

Abbreviation	Significance
A	
AC	Alternating Current
A/D	Analog-Digital converter
ADR	Address
AFM	Additional Frequency Modulation
AG	Programmable controller
AI	Analog Input
AK	Request identifier
AO	Analog Output
AOP	Advanced Operator Panel
AR	Automatic Restart
ASIC	Application-Specific Integrated Circuit
ASP	Analog Setpoint
ASVM	Asymmetric Space Vector Modulation
B	
BCC	Block Check Character
BCD	Binary-Coded Decimal
BI	Binector Input
BIA	BG-Institute for Occupational Safety and Health
BICO	Binector-Connector technology
BO	Binector Output
BOP	Basic Operator Panel
C	
C	Commissioning
CB	Communication Board
CCW	Counter-Clockwise
CDS	Command Data Set
CI	Connector Input
CM	Configuration Management
CMD	Command
CO	Connector Output
CO/BO	Connector Output / Binector Output

Abbreviation	Significance
COM	Common contact on a changeover contact (terminal is connected to NO or NC)
CU	Control Unit
CW	Clockwise
D	
D/A	Digital-Analog converter
DC	Direct Current
DDS	Drive Data Set
DI	Digital Input
DIP	DIP switch
DO	Digital Output
DP	Distributed I/O
DS	Drive State
E	
EEC	European Economic Community
EEPROM	Electrically Erasable Programmable Read-Only Memory
ELCB	Earth Leakage Circuit Breaker
EMC	Electromagnetic Compatibility
EMF	Electromagnetic Force
ES	Technical System (Engineering System)
ESB	Equivalent circuit diagram
F	
FAQ	Frequently Asked Questions
FB	Function Block
FCC	Field Current Control
FCL	Fast Current Limitation
FF	Fixed Frequency
FFB	Free Function Block
FLB	Flat-top modulation
FOC	Field-Oriented Control
FP	Function diagram
FREQ	Frequency
FSA	Frame Size A
FSB	Frame Size B
FSC	Frame Size C
FSD	Frame Size D
FSE	Frame Size E
FSF	Frame Size F
G	
GSD	Generic Station Description
GSG	Getting Started Guide
GUI ID	Global Unique Identifier

Abbreviation	Significance
H	
HIW	Main actual value
HMI	Human Machine Interface
HO	High Overload (constant torque)
HSW	Main setpoint
HTL	High-level Transistor Logic
I	
IASC	Internal Armature Short-Circuit
COMM	Commissioning
IGBT	Insulated Gate Bipolar Transistor
I/O	Input/Output
IOP	Intelligent Operator Panel
J	
JOG	Jogging
K	
KDV	Data Cross-Check
KIB	Kinetic Buffering
L	
LCD	Liquid Crystal Display
LED	Light Emitting Diode
LGE	Length
LO	Light Overload (variable torque)
LSTO	Latched Safe Torque Off
LWL	Fiber-Optic Cable
M	
MHB	Motor Holding Brake
MLP	Multi-Language Package
MOP	Motorized Potentiometer
N	
NC	Normally Closed contact
NEMA	National Electrical Manufacturers Association
NO	Normally Open contact
O	
OLM	Optical Link Module
OLP	Optical Link Plug
OP	Operator Panel
OPI	Operating instructions
P	
P1	CPU 1
P2	CPU 2
Pe	PROFInergy

Abbreviation	Significance
PID	Proportional Integral Differential
PKE	Parameter identifier
PIV	Parameter Identifier Value
PLC	Programmable Logic Controller
PM	Power Module
PM-IF	Power Module Interface
PPO	Parameter Process Data Object
PTC	Positive Temperature Coefficient
PWE	Parameter value
PWM	Pulse-Width Modulation
pxxxx	Writable parameters
PZD	Process data
Q	
QC	Quick Commissioning
R	
RAM	Random Access Memory
RCCB	Residual Current Circuit Breaker
RCD	Residual Current Device
RFG	Ramp-Function Generator
RFI	Radio Frequency Interference
ROM	Read-Only Memory
RPM	Revolutions Per Minute
rxxxx	Read-only parameters of analog signals
RZM	Space vector modulation (SVM)
S	
SBC	Safe Brake Control
SLS	Safely-Limited Speed
SLVC	Sensorless Vector Control
SOL	Serial Option Link
SS1	Safe Stop 1
STO	Safe Torque Off
STW	Control word
STX	Start of Text
SVM	Space Vector Modulation
T	
TTL	Transistor-Transistor Logic
U	
U/f	Voltage/frequency
USS	Universal serial interface

Abbreviation	Significance
V	
VC	Vector Control
VT	Variable Torque
Z	
ZSW	Status word
ZUSW	Additional setpoint

Index

C

Numbers

- 1020
 - Explanation of the symbols (Part 1), 2-579
- 1021
 - Explanation of the symbols (Part 2), 2-580
- 1022
 - Explanation of the symbols (Part 3), 2-581
- 1030
 - Handling BICO technology, 2-582
- 1680
 - Vector control, V/f control, 2-584
- 1700
 - Vector control, speed control and generation of the torque limits, 2-585
- 1710
 - Vector control, current control, 2-586
- 2201
 - Connection overview, 2-588
- 2210
 - Digital inputs (DI 0 ... DI 5), 2-589
- 2241
 - Digital outputs (DO 0 ... DO 1), 2-590
- 2251
 - Analog inputs (AI 0 ... AI 1), 2-591
- 2256
 - Analog inputs as digital inputs (DI 11 ... DI 12), 2-592
- 2381
 - Control commands and interrogation commands, 2-594
- 2382
 - States, 2-595
- 2401
 - PROFIdrive overview, 2-597
- 2410
 - PROFIBUS (PB) / PROFINET (PN), addresses and diagnostics, 2-598
- 2420
 - Telegrams and process data (PZD), 2-599
- 2440
 - PZD receive signals interconnection, 2-600
- 2441
 - STW1 control word interconnection (p2038 = 2), 2-601
- 2442
 - STW1 control word interconnection (p2038 = 0), 2-602
- 2446
 - STW3 control word interconnection, 2-603
- 2450
 - PZD send signals interconnection, 2-604
- 2451
 - ZSW1 status word interconnection (p2038 = 2), 2-605
- 2452
 - ZSW1 status word interconnection (p2038 = 0), 2-606
- 2456
 - ZSW3 status word interconnection, 2-607
- 2463
 - POS_STW1 positioning control word 1 interconnection, 2-608
- 2464
 - POS_STW2 positioning control word 2 interconnection, 2-609
- 2468
 - Receive telegram, free interconnection via BICO (p0922 = 999), 2-610
- 2470
 - Send telegram, free interconnection via BICO (p0922 = 999), 2-611
- 2472
 - Status words, free interconnection, 2-612
- 2500
 - Overview of internal control/status words, 2-614
- 2501
 - Control word, sequence control, 2-615
- 2503
 - Status word, sequence control, 2-616
- 2505
 - Control word, setpoint channel, 2-617
- 2510
 - Status word 1 (r0052), 2-618

- 2511
 - Status word 2 (r0053), 2-619
- 2512
 - Control word 1 (r0054), 2-620
- 2513
 - Control word 2 (r0055), 2-621
- 2520
 - Control word, speed controller, 2-622
- 2522
 - Status word, speed controller, 2-623
- 2526
 - Status word, closed-loop control, 2-624
- 2530
 - Status word, current control, 2-625
- 2534
 - Status word, monitoring functions 1, 2-626
- 2536
 - Status word, monitoring functions 2, 2-627
- 2537
 - Status word, monitoring functions 3, 2-628
- 2546
 - Control word, faults/alarms, 2-629
- 2548
 - Status word, faults/alarms 1 and 2, 2-630
- 2634
 - Sequence control - Missing enables, 2-631
- 2701
 - Simple brake control, 2-633
- 2800
 - Parameter manager, 2-635
- 2802
 - Monitoring functions and faults/alarms, 2-636
- 2804
 - Status words, 2-637
- 2810
 - STO, Safe Torque Off, 2-638
- 2812
 - F-DI 0, Fail-safe Digital Input, 2-639
- 2819
 - SS1, Safe Stop 1, internal STOP A, B, F, 2-641
- 2820
 - SLS, Safely-Limited Speed, 2-642
- 2823
 - SSM, Safe Speed Monitor, 2-643
- 2824
 - SDI, Safe Direction, 2-644
- 2840
 - PROFIsafe control and status word, 2-645
- 2850
 - Fail-safe digital inputs (F-DI 0 ... F-DI 2), 2-646
- 2853
 - Fail-safe digital output (F-DO 0), 2-647
- 2855
 - F-DI assignment, 2-648
- 2856
 - Safe state selection, 2-649
- 2857
 - F-DO assignment, 2-650
- 2858
 - Extended functions via PROFIsafe (9601.2 = 1 and 9601.3 = 1), 2-651, 2-654
- 2915
 - Standard telegrams, 2-653
- 3001
 - Overview of setpoint channel, 2-656
- 3010
 - Fixed speed setpoints, binary selection (p1016 = 2), 2-657
- 3011
 - Fixed speed setpoints, direct selection (p1016 = 1), 2-658
- 3020
 - Motorized potentiometer, 2-659
- 3030
 - Main/supplementary setpointsetpoint scaling, jogging, 2-660
- 3040
 - Direction limitation and direction reversal, 2-661
- 3050
 - Skip frequency bands and speed limitations, 2-662
- 3060
 - Simple ramp-function generator, 2-663
- 3070
 - Extended ramp-function generator, 2-664
- 3080
 - Ramp-function generator selection, -status word, -tracking, 2-665
- 3610
 - Jog mode, 2-667
- 3612
 - Homing / active homing mode (p2597 = 0-signal), 2-668
- 3614
 - Passive homing mode (p2597 = 1-signal), 2-669

- 3615
 - Traversing block mode, external block change, 2-670
- 3616
 - Traversing blocks operating mode, 2-671
- 3617
 - Travel to fixed stop, 2-672
- 3618
 - Direct setpoint specification / MDI mode, dynamic values, 2-673
- 3620
 - Direct setpoint specification / MDI mode, 2-674
- 3625
 - Mode control, 2-675
- 3630
 - Traversing range limits, 2-676
- 3635
 - Interpolator, 2-677
- 3640
 - Control word, block selection / MDI selection, 2-678
- 3645
 - Status word 1, 2-679
- 3646
 - Status word 2, 2-680
- 3650
 - Status word, active traversing block / MDI active, 2-681
- 4010
 - Position actual value conditioning, 2-683
- 4015
 - Position controller, 2-684
- 4020
 - Zero-speed / positioning monitoring, 2-685
- 4025
 - Dynamic following error monitoring, cam controllers, 2-686
- 4704
 - Position sensing, encoders 1 ... 2, 2-688
- 4715
 - Speed actual value and pole position sensing, motor encoder ASM/SM (encoder 1), 2-689
- 4720
 - Encoder interface, receive signals, encoders 1 ... 3, 2-690
- 4730
 - Encoder interface, send signals, encoders 1 ... 2, 2-691
- 4735
 - Encoder evaluation, reference mark search with external zero mark, encoder 1, 2-692
- 4750
 - Absolute value for incremental encoder, 2-693
- 6030
 - Speed setpoint, droop, 2-695
- 6031
 - Pre-control balancing, acceleration model, 2-696
- 6040
 - Speed controller, 2-697
- 6050
 - Kp_n/Tn_n adaptation, 2-698
- 6060
 - Torque setpoint, 2-699
- 6300
 - V/f characteristic and voltage boost, 2-700
- 6310
 - Resonance damping and slip-compensation (V/f), 2-701
- 6490
 - Speed control configuration, 2-702
- 6491
 - Flux controller configuration, 2-703
- 6630
 - Upper/lower torque limit, 2-704
- 6640
 - Current/power/torque limits, 2-705
- 6710
 - Current setpoint filter, 2-706
- 6714
 - Iq and Id controller, 2-707
- 6721
 - Id setpoint (PEM, p0300 = 2), 2-708
- 6722
 - Field weakening characteristic, Id setpoint (ASM, p0300 = 1), 2-709
- 6723
 - Field weakening controller, flux controller (ASM, p0300 = 1), 2-710
- 6724
 - Field weakening controller (PEM, p0300 = 2xx), 2-711
- 6730
 - Interface to the Power Module (ASM, p0300 = 1), 2-712
- 6731
 - Interface to the Power Module (PEM, p0300 = 2xx), 2-713

- 6799
 - Display signals, 2-714
- 7200
 - Sampling times of the runtime groups, 2-716
- 7210
 - AND (AND function blocks with 4 inputs), 2-717
- 7212
 - OR (OR function blocks with 4 inputs), 2-718
- 7214
 - XOR (XOR function blocks with 4 inputs), 2-719
- 7216
 - NOT (inverter), 2-720
- 7220
 - ADD (adder with 4 inputs),
SUB (subtractor), 2-721
- 7222
 - MUL (multiplier with 4 inputs),
DIV (divider), 2-722
- 7224
 - AVA (absolute value generator), 2-723
- 7225
 - NCM (numeric comparator), 2-724
- 7226
 - PLI (polyline scaling), 2-725
- 7230
 - MFP (pulse generator),
PCL (pulse contractor), 2-726
- 7232
 - PDE (ON delay), 2-727
- 7233
 - PDF (OFF delay), 2-728
- 7234
 - PST (pulse stretcher), 2-729
- 7240
 - RSR (RS flip-flop),
DFR (D flip-flop), 2-730
- 7250
 - BSW (binary change-over switch),
NSW (numeric change-over switch), 2-731
- 7260
 - LIM (limiter), 2-732
- 7262
 - PT1 (smoothing element), 2-733
- 7264
 - INT (integrator),
DIF (derivative-action element), 2-734
- 7270
 - LVM (double-sided limit monitor with hysteresis), 2-735
- 7950
 - Fixed values, binary selection (p2216 = 2), 2-740
- 7951
 - Fixed values, direct selection (p2216 = 1), 2-741
- 7954
 - Motorized potentiometer, 2-742
- 7958
 - Control modes, 2-743
- 8005
 - Overview, signals and monitoring functions, 2-745
- 8010
 - Speed messages 1, 2-746
- 8011
 - Speed messages 2, 2-747
- 8012
 - Torque signals, motor locked/stalled, 2-748
- 8013
 - Load monitoring, 2-749
- 8014
 - Thermal monitoring, power unit, 2-750
- 8016
 - Thermal monitoring, motor, 2-751
- 8017
 - Thermal motor models, 2-752
- 8020
 - Monitoring functions 1, 2-753
- 8021
 - Monitoring functions 2, 2-754
- 8050
 - Overview of Faults and Alarms, 2-756
- 8060
 - Fault buffer, 2-757
- 8065
 - Alarm buffer, 2-758
- 8070
 - Fault/alarm trigger word (r2129), 2-759
- 8075
 - Fault/alarm configuration, 2-760
- 8550
 - Data set overview, 2-762
- 8560
 - Command data sets (CDS), 2-763
- 8565
 - Drive data sets (DDS), 2-764

8570

Encoder data sets
(EDS), 2-765**A**

Acknowledgment

Adjustable, 3-773

Default, 3-773

IMMEDIATELY, 3-771

POWER ON, 3-771

PULSE INHIBIT, 3-771

Adjustable parameters, 1-9

Alarm buffer, 2-755

Alarm messages, 3-777

ASCII table, A-892

Axxxx, 3-772

B

Basic positioner (EPOS), 2-666

BI, Binector Input, 1-10

BICO technology, 2-582

Binector

Input (BI), 1-10

Output (BO), 1-10

Bit array (parameter), 1-17

BO, Binector Output, 1-10

Brake control, 2-632

C

Calculated, 1-12

Can be changed (parameters), 1-13

CDS (Command Data Set), 1-14, 2-761,
2-763

CI, Connector Input, 1-10

CO, Connector Output, 1-10

CO/BO, Connector/Binector Output, 1-10

Command data sets, 2-761

Configuring messages, 2-755

Connector

Input (CI), 1-10

Output (CO), 1-10

Control modes

Technology controller, 2-743

Vector, 2-694

Control words, 2-593, 2-596

Converter

Binector-connector, 2-612

Connector-binector, 2-610

Cxxxxx, 3-772

D

Data set, 2-761

Command data set, 1-14

Command data set, CDS, 1-14

Drive data set, 1-14

Drive Data Set, DDS, 1-14

Power unit data set, 1-14

Power unit data set, PDS, 1-14

Data type (parameters), 1-12

DCBRAKE, 3-770

DDS (Drive Data Set), 1-14, 2-761, 2-764

Dependency (parameter), 1-17

Description (parameter), 1-16

Direction of rotation limitation, 2-655

Direction reversal, 2-655

Directory

ASCII table, A-892

Complete table of contents, Inhalt-5

List of abbreviations, B-893

Table of contents, function diagrams,
2-572

Display

Alarms, 3-768

faults, 3-768

Display parameters, 1-9

Drive Data Sets, 2-761

Dynamic index (parameters), 1-14

E

EDS (Encoder Data Set), 2-761

EDS, Encoder Data Set, 2-765

ENCODER, 3-770

Encoder data sets, 2-761

Encoder evaluation, 2-687

F

Factory setting, 1-16

Fault

Acknowledgment, 3-771, 3-773

Cause, 3-774

Display, 3-768

Explanation of list, 3-772

Fault location, 3-773

Fault reaction, 3-769, 3-773

General information, 3-768

How to distinguish a fault from an alarm,
3-768

Name, 3-773

Number, 3-772

Number range, 3-777

Remedy, 3-774

Fault buffer, 2-755

Structure, 2-757

- Fault messages, 3-777
- Fixed speed setpoints, 2-655
- Fixed values, 2-740, 2-741
- Flt val, 3-774
- Free function blocks, 2-715
- Function diagram (parameters), 1-16
- Function diagrams, 2-571
- Function diagrams, basic positioner (EPOS)
 - Control word, block selection / MDI selection, 2-678
 - Direct setpoint specification / MDI, 2-674
 - Direct setpoint specification / MDI mode, dynamic values, 2-673
 - Homing / active homing mode (p2597 = 0-signal), 2-668
 - Interpolator, 2-677
 - Jog mode, 2-667
 - Mode control, 2-675
 - Passive homing mode (p2597 = 1-signal), 2-669
 - Status word 1, 2-679
 - Status word 2, 2-680
 - Status word, active traversing block / MDI active, 2-681
 - Travel to fixed stop, 2-672
 - Traversing block mode, external block change, 2-670
 - Traversing blocks operating mode, 2-671
 - Traversing range limits, 2-676
- Function diagrams, brake control
 - Simple brake control, 2-633
- Function diagrams, data sets
 - Command data sets (CDS), 2-763
 - Drive data sets (DDS), 2-764
 - Encoder data sets (EDS), 2-765
 - Overview, 2-762
- Function diagrams, encoder evaluation
 - Absolute value for incremental encoder, 2-693
 - Encoder interface, receive signals, encoders 1 ... 3, 2-690
 - Encoder interface, send signals, encoders 1 ... 2, 2-691
 - Position sensing, encoders 1 ... 2, 2-688
 - Reference mark search with external zero mark, encoder 1, 2-692
 - Speed actual value and pole position sensing, motor encoder ASM/SM (encoder 1), 2-689
- Function diagrams, faults and alarms
 - Alarm buffer, 2-758
 - Fault buffer, 2-757
 - Fault/alarm configuration, 2-760
 - Fault/alarm trigger word (r2129), 2-759
 - Overview, 2-756
- Function diagrams, free function blocks
 - ADD (adder with 4 inputs), 2-721
 - AND, 2-717
 - AVA (absolute value generator), 2-723
 - BSW (binary switch), 2-731
 - DFR (D flip-flop), 2-730
 - DIF (derivative-action element), 2-734
 - DIV (divider), 2-722
 - INT (integrator), 2-734
 - LIM (limiter), 2-732
 - LVM (double-sided limit monitor with hysteresis), 2-735
 - MFP (pulse generator), 2-726
 - MUL (multiplier with 4 inputs), 2-722
 - NCM (numeric comparator), 2-724
 - NOT (inverter), 2-720
 - NSW (numeric change-over switch), 2-731
 - OR, 2-718
 - PCL (pulse contractor), 2-726
 - PDE (ON delay), 2-727
 - PDF (OFF delay), 2-728
 - PLI (polyline scaling), 2-725
 - PST (pulse stretcher), 2-729
 - PT1 (smoothing element), 2-733
 - RSR (RS flip-flop), 2-730
 - Sampling times of the runtime groups, 2-716
 - SUB (subtractor), 2-721
 - XOR (exclusive OR), 2-719
- Function diagrams, general information
 - Explanation of the symbols (Part 1), 2-579
 - Explanation of the symbols (Part 2), 2-580
 - Explanation of the symbols (Part 3), 2-581
 - Handling BICO technology, 2-582
- Function diagrams, input/output terminals
 - Analog inputs (AI 0 ... AI 1), 2-591
 - Analog inputs as digital inputs (DI 11 ... DI 12), 2-592
 - Connection overview, 2-588
 - Digital inputs (DI 0 ... DI 5), 2-589
 - Digital outputs (DO 0 ... DO 1), 2-590

- Function diagrams, internal control/status words
 - Control word 1 (r0054), 2-620
 - Control word 2 (r0055), 2-621
 - Control word, faults/alarms, 2-629
 - Control word, sequence control, 2-615
 - Control word, setpoint channel, 2-617
 - Control word, speed controller, 2-622
 - Overview, 2-614
 - Sequence control - Missing enables, 2-631
 - Status word 1 (r0052), 2-618
 - Status word 2 (r0053), 2-619
 - Status word, closed-loop control, 2-624
 - Status word, current control, 2-625
 - Status word, faults/alarms 1 and 2, 2-630
 - Status word, monitoring functions 1, 2-626
 - Status word, monitoring functions 2, 2-627
 - Status word, monitoring functions 3, 2-628
 - Status word, sequence control, 2-616
 - Status word, speed controller, 2-623
- Function diagrams, overviews
 - Vector control, current control, 2-586
 - Vector control, speed control and generation of the torque limits, 2-585
 - Vector control, V/f control, 2-584
- Function diagrams, position control
 - Cam controllers, 2-686
 - Dynamic following error monitoring, 2-686
 - Position actual value conditioning, 2-683
 - Position controller, 2-684
 - Zero-speed / positioning monitoring, 2-685
- Function diagrams, PROFIdrive
 - Overview, 2-597
 - POS_STW1 positioning control word 1 interconnection, 2-608
 - POS_STW2 positioning control word 2 interconnection, 2-609
 - PROFIBUS (PB) / PROFINET (PN), addresses and diagnostics, 2-598
 - PZD receive signals interconnection, 2-600
 - PZD send signals interconnection, 2-604
 - Receive telegram, free interconnection via BICO (p0922 = 999), 2-610
 - Send telegram, free interconnection via BICO (p0922 = 999), 2-611
 - Status words, free interconnection, 2-612
 - STW1 control word interconnection (p2038 = 0), 2-602
 - STW1 control word interconnection (p2038 = 2), 2-601
 - STW3 control word interconnection, 2-603
 - Telegrams and process data (PZD), 2-599
 - ZSW1 status word interconnection (p2038 = 0), 2-606
 - ZSW1 status word interconnection (p2038 = 2), 2-605
 - ZSW3 status word interconnection, 2-607
- Function diagrams, Safety Integrated Basic Functions
 - F-DI 0, Fail-safe Digital Input, 2-639
 - Monitoring functions and faults/alarms, 2-636
 - Parameter manager, 2-635
 - Status words, 2-637
 - STO, Safe Torque Off, 2-638
- Function diagrams, Safety Integrated Extended Functions
 - Extended functions via PROFIsafe (9601.2 = 1 and 9601.3 = 1), 2-651, 2-654
 - Fail-safe digital inputs (F-DI 0 ... F-DI 2), 2-646
 - Fail-safe digital output (F-DO 0), 2-647
 - F-DI assignment, 2-648
 - F-DO assignment, 2-650
 - PROFIsafe control and status word, 2-645
 - Safe state selection, 2-649
 - SDI, Safe Direction, 2-644
 - SLS, Safely-Limited Speed, 2-642
 - SS1, Safe Stop 1, internal STOP A, B, F, 2-641
 - SSM, Safe Speed Monitor, 2-643
- Function diagrams, Safety Integrated PRO-FIsafe
 - Standard telegrams, 2-653
- Function diagrams, setpoint channel
 - Direction limitation and direction reversal, 2-661
 - Extended ramp-function generator, 2-664
 - Fixed speed setpoints, binary selection (p1016 = 2), 2-657
 - Fixed speed setpoints, direct selection (p1016 = 1), 2-658
 - Main/supplementary setpoint setpoint scaling, jogging, 2-660
 - Motorized potentiometer, 2-659
 - Overview, 2-656
 - Ramp-function generator selection, -status word, -tracking, 2-665

- Simple ramp-function generator, 2-663
- Skip frequency bands and speed limitations, 2-662
- Function diagrams, signals and monitoring functions
 - Overview, 2-745
- Function diagrams, signals and monitoring functions
 - Load monitoring, 2-749
 - Monitoring functions 1, 2-753
 - Monitoring functions 2, 2-754
 - Speed messages 1, 2-746
 - Speed messages 2, 2-747
 - Thermal monitoring, motor, 2-751
 - Thermal monitoring, power unit, 2-750
 - Thermal motor models, 2-752
 - Torque signals, motor locked/stalled, 2-748
- Function diagrams, technology controller
 - Control modes, 2-743
 - Fixed values, binary selection (p2216 = 2), 2-740
 - Fixed values, direct selection (p2216 = 1), 2-741
 - Motorized potentiometer, 2-742
- Function diagrams, vector control
 - Current setpoint filter, 2-706
 - Current/power/torque limits, 2-705
 - Display signals, 2-714
 - Field weakening characteristic, Id setpoint (ASM, p0300 = 1), 2-709
 - Field weakening controller (PEM, p0300 = 2xx), 2-711
 - Field weakening controller, flux controller (ASM, p0300 = 1), 2-710
 - Flux controller configuration, 2-703
 - Id setpoint (PEM, p0300 = 2), 2-708
 - Interface to the Power Module (ASM, p0300 = 1), 2-712
 - Interface to the Power Module (PEM, p0300 = 2xx), 2-713
 - Iq and Id controller, 2-707
 - Kp_n/Tn_n adaptation, 2-698
 - Pre-control balancing, acceleration model, 2-696
 - Resonance damping and slip-compensation (V/f), 2-701
 - Speed control configuration, 2-702
 - Speed controller, 2-697
 - Speed setpoint, droop, 2-695
 - Torque setpoint, 2-699
 - Upper/lower torque limit, 2-704
 - V/f characteristic and voltage boost, 2-700
 - Fxxxx, 3-772
- G**
 - General information
 - about function diagrams, 2-578
 - about parameters, 1-8
 - on faults and alarms, 3-768
- I**
 - IASC, 3-770
 - Index
 - Parameter, 1-9
 - Index (parameters), 1-17
 - Internal control words, 2-613
 - Internal control/status words, 2-613
- J**
 - Jogging, 2-655, 2-660
- L**
 - Linked parameters, 1-9
 - List
 - Abbreviations, B-893
 - ASCII table, A-892
 - Binector inputs (BI parameters), 1-552
 - Binector outputs (BO parameters), 1-558
 - Command data sets, 1-541
 - Connector inputs (CI parameters), 1-556
 - Connector outputs (CO parameters), 1-560
 - Connector/binector outputs (CO/BO parameters), 1-565
 - Drive Data Sets, 1-544
 - Encoder data sets, 1-551
 - Fault and alarm messages, 3-777
 - Message ranges, 3-777
 - Motor data sets, 1-549
 - Parameter ranges, 1-19
 - Parameters for quick commissioning, 1-569
 - Parameters for write protection and know-how protection, 1-567
 - Parameters, all, 1-22
 - Power unit data sets, 1-551
 - List of abbreviations, B-893
 - Load monitoring, 2-744
- M**
 - Manufacturer-specific telegrams, 2-599
 - Message buffer, 2-755
 - Messages, 2-744
 - Monitoring functions, 2-744
 - Motorized potentiometer, 2-655, 2-742

N

Name

- Fault, 3-773
- Warning, 3-773

Number

- Fault, 3-772
- Parameter, 1-9
- Warning, 3-772

Number range

- Alarms, 3-777
- faults, 3-777
- Parameter, 1-19

O

OFF1, 3-769

OFF1_DELAYED, 3-769

OFF2, 3-769

OFF3, 3-770

P

Parameter

- Access level, 1-11
- Bit array, 1-17
- Calculated, 1-12
- Changeable, 1-13
- Command data sets, 1-541
- CU/PM variants, 1-11
- Data type, 1-12
- Dependency, 1-17
- Description, 1-16
- Drive Data Sets, 1-544
- Dynamic index, 1-14
- Encoder data sets, 1-551
- Function diagram, 1-16
- Index, 1-9, 1-17
- Linked parameters, 1-9
- List for quick commissioning, 1-569
- List of all parameters, 1-22
- List of the binector inputs, 1-552
- List of the binector outputs, 1-558
- List of the connector inputs, 1-556
- List of the connector outputs, 1-560
- List of the connector/binector outputs, 1-565
- Long name, 1-10
- Motor data sets, 1-549
- Number, 1-9
- Number range, 1-19
- Parameter values, 1-16
- Power unit data sets, 1-551
- Recommendation, 1-16

Safety notices, 1-18

Scaling, 1-14

Short name, 1-10

Unit group, 1-15

Unit selection, 1-15

Values, 1-16

Password for access level 4, 1-11

PDS, Power unit Data Set, 1-14

Position control, 2-682

Process data, 2-593, 2-596

PROFIBUS, 2-593, 2-596

PROFIdrive, 2-593, 2-596

PROFInergy function diagrams

- Control commands and interrogation commands, 2-594

- States, 2-595

PROFINET, 2-593, 2-596

pxxxx, 1-9

Q

Quick commissioning (parameters), 1-569

R

Ramp-function generator, 2-655

Reaction to faults, 3-769

Resetting faults, 3-773

rxxxx, 1-9

S

Safety Integrated

- Basic Functions, 2-634, 2-640, 2-652

- Extended Functions, 2-634, 2-640, 2-652

Safety Integrated PROFIsafe, 2-652

Safety notices (parameter), 1-18

Scaling, 1-14

Servo control

- Encoder evaluation, 2-687

Setpoint channel, 2-655

Signals, 2-744

Skip frequency bands, 2-655

Speed control

- Vector, 2-694

Speed messages, 2-744

Standard telegrams, 2-599

Status words

- Free interconnection via BICO, 2-593, 2-596

- Internal, 2-613

STOP1, 3-770

STOP2, 3-770

T

- Technology controller, 2-739
- Technology functions, 2-736
- Telegrams, 2-593, 2-596
- Thermal monitoring, 2-744
- Torque signals, 2-744
- Triggering when messages are issued (r2129), 2-755

U

- Unit (parameter), 1-15

V

- Values (parameter), 1-16
- Vector control
 - Current setpoint filter, 2-706
 - Droop, 2-695
 - Encoder evaluation, 2-687
 - Iq and Id controller, 2-707
 - Kp_n/Tn_n adaptation, 2-698
 - Speed control configuration, 2-702
 - Speed controller, 2-697
 - Table of contents, 2-694
 - Torque setpoint, 2-699

W

- Warn val, 3-774
- Warning
 - Cause, 3-774
 - Display, 3-768
 - Explanation of list, 3-772
 - Fault location, 3-773
 - General information, 3-768
 - How to distinguish an alarm from a fault, 3-768
 - Name, 3-773
 - Number, 3-772
 - Number range, 3-777
 - Remedy, 3-774

Siemens AG
Industry Sector
Drive Technologies
Motion Control Systems
Postfach 3180
91050 ERLANGEN
GERMANY

Subject to change without prior notice
© Siemens AG 2012 - 2013

www.siemens.com/sinamics-g120